ORDER NO. MKE0202600C1
B6

Service Manual

TV/DVD/VCR Combination

PV-DM2792 / PV-DM2792-K

SPECIFICATIONS

ITEM		SPECIFICATION
VCR	Video	Head: 4 rotary heads helical scanning system
		Input Level: VIDEO IN Jack (Phono type) 1.0 Vp-p 75 Ω unbalanced Output Level: VIDEO OUT Jack (Phono type) 1.0 Vp-p 75 Ω unbalanced Signal-to-Noise Ratio: SP: more than 43 dB LP/SLP: more than 41 dB Horizontal Resolution: Color/Monochrome: more: SP: 230 lines LP/SLP: 220 lines
	Audio	Head: Normal Mono: 1 stationary head Hi-Fi Stereo: 2 rotary heads
		Input Level: AUDIO IN Jack (Phono type) -10 dBv 50 kΩ unbalanced Output Level: AUDIO OUT Jack (Phono type) -8 dBv 1 kΩ unbalanced
		Frequency Response: Normal Mono: SP: 100 Hz-8 kHz LP: 100 Hz-6 kHz SLP: 100 Hz-5 kHz Hi-Fi Stereo: SP/LP/SLP: 20 Hz-20 kHz
		Signal-to-Noise Ratio: Normal Mono: SP: more than 42 dB LP/SLP: more than 40 dB Hi-Fi Stereo: SP/LP/SLP: more than 60 dB
		Wow and Flutter: Normal Mono: SP: Less than 0.2 % WRMS LP: Less than 0.3 % WRMS SLP: Less than 0.4 % WRMS Hi-Fi Stereo: Less than 0.015 % WRMS
	Tuner	Broadcast Channels: VHF 2~13, UHF 14~69 CABLE Channels: Midband A through I (14~22) Superband J through W (23~36) Hyperband AA~EEE (37~64) Lowband A-5~A-1 (95~99) Special CABLE channel 5A (01) Ultraband 65~94, 100~125
	Tape Speed	SP: 1-5/16 i.p.s (33.35 mm/s), LP: 21/32 i.p.s (16.67 mm/s), SLP: 7/16 i.p.s (11.12 mm/s) Record/Playback Time: 8 hr. with 160 min. type tape used in SLP mode FF/REW Time: Less than 2-1/2 min. (120 min. type tape) *Note: FF/REW Time may be exceed specification according to tape condition.

ITEM		SPECIFICATION
VCR	Tape Format	Tape width 12.7 mm (1/2 inch) high density tape
FM RADIO	Band Range	87.5 MHz-108.1 MHz
DVD	Discs Played	(1) DVD-VIDEO disc: 12 cm (5 inch) single-sided, single-layer 12 cm (5 inch) single-sided, double-layer 12 cm (5 inch) double-sided, double-layer (one layer per side) 8 cm (3 inch) single-sided, single-layer 8 cm (3 inch) single-sided, double-layer 8 cm (3 inch) double-sided, double-layer (one layer per side) (2) Compact disc(CD-DA, VIDEO CD): 12 cm (5 inch) disc, 8 cm (3 inch) disc
	Digital Audio Output	Optical connector
	Pickup	Wave length: 655 nm (DVD), 790 nm (Video CD/CD) Laser power: CLASS II
DISPLAY	Picture Tube	27 inch measured diagonal 100˚ deflection Picture Tube
GENERAL	Power	Source: 120 V AC±12 V AC, 60 Hz±3 Hz
		Consumption: Approx. 170 W (Power on), Approx. 3.5 W (Power off)
	Television System	EIA Standard (525 lines, 60 fields) NTSC Color Signal
	Operating Condition	5 ˚C-35 ˚C (41 ˚F-95 ˚F) (Temperature) 10 %-75 % (Humidity)
	Dimension (W x H x D)	772 mm x 654 mm x 533 mm (30-3/8 inch x 25-3/4 inch x 21 inch)
	Weight	42 kg (92.4 lbs.)

Weight and dimensions shown are approximate.
Designs and specifications are subject to change without notice.

© 2002 Matsushita Kotobuki Electronics Industries LTD. All rights reserved. Unauthorized copying and distribution is a violation of law.

⚠ **WARNING**

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

1. SAFETY PRECAUTIONS

1.1. GENERAL GUIDELINES

1. **IMPORTANT SAFETY NOTICE**
   There are special components used in this equipment which are important for safety. These parts are marked by ⚠ in the Schematic Diagrams, Circuit Board Layout, Exploded Views and Replacement Parts List. It is essential thatthese critical parts should be replaced with manufacturer's specified parts to prevent X-RADIATION, shock, fire, or other hazards. Do not modify the original design without permission of manufacturer.

2. **An Isolation Transformer should always be used during the servicing of Combination DVD VCR whose chassis is not isolated from the AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resultingin personal injury from electrical shocks. It will also protect Combination DVD VCR from being damaged by accidental shorting that may occur during servicing.**

3. **When servicing, observe the original lead dress, especially the lead dress in the high voltage circuits. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.**

4. **After servicing, see to it that all the protective devices such as insulation barriers, insulation papers, shield, and isolation R-C combinations are properly installed.**

5. **Before turning the receiver on, measure the resistance between B+ line and chassis ground. Connect (-) side of an ohmmeter to the B**

+ lines, and (+) side to chassis ground. Each line should have more resistance than specified,as follows :

B+ Line
Minimum Resistance

130 V
1 kΩ (Cold chassis ground)

27 V
180 Ω (Cold chassis ground)

17 V
110 Ω (Cold chassis ground)

6. **When the TV set is not used for a long period of time, unplug the power cord from the AC outlet.**
7. **Potentials, as high as 34.5 kV are present when this TV set is in operation. Operation of the TV set without the rear cover involves the danger of a shock hazard from the TV set power supply. Servicing should not be attempted by anyone who isnot thoroughly familiar with the precautions necessary when working on high voltage equipment. Always discharge the anode of the picture tube to the CRT ground of receiver before handling the tube.**
8. **After servicing make the following leakage current checks to prevent the customer from being exposed to shock hazards.**

1.2. LEAKAGE CURRENT COLD CHECK

1. **Unplug the AC cord and connect a jumper between the two prongs on the plug.**
2. **For physically operated power switches, turn power on. Otherwise skip step 2.**
3. **Measure the resistance value, with an ohmmeter, between the jumpered AC plug and each exposed metallic cabinet part on the receiver, such as screwheads, connectors, etc. When the exposed metallic part has a return path to the chassis, the readingshould be between 1 MΩ and 12 MΩ. When the exposed metal does not have a return path to the chassis, the reading must be infinity.**

1.3. LEAKAGE CURRENT HOT CHECK

1. Plug the AC cord directly into the AC outlet.
   Do not use a isolation transformer for this check.
2. Connect a 1.5 kΩ, 10 W resistor, in parallel with a 0.15 μF capacitor, between each exposed metallic part on the set and a good earth ground, as shown in Figure 1.
3. Use an AC voltmeter, with 1 kΩ/V or more sensitivity, to measure the potential across the resistor.
4. Check each exposed metallic part, and measure the voltage at each point.
5. Reverse the AC plug in the AC outlet and repeat each of the above measurements.
6. The potential at any point should not exceed 0.75 V RMS.
   A leakage current tester (Simpson Model 229 equivalent) may be used to make the hot checks. Leakage current must not exceed 1/2 mA. In case a measurement is outside of the limits specified, there is a possibility of shock hazard, and thereceiver should be repaired and rechecked before it is returned to the customer.

Figure 1

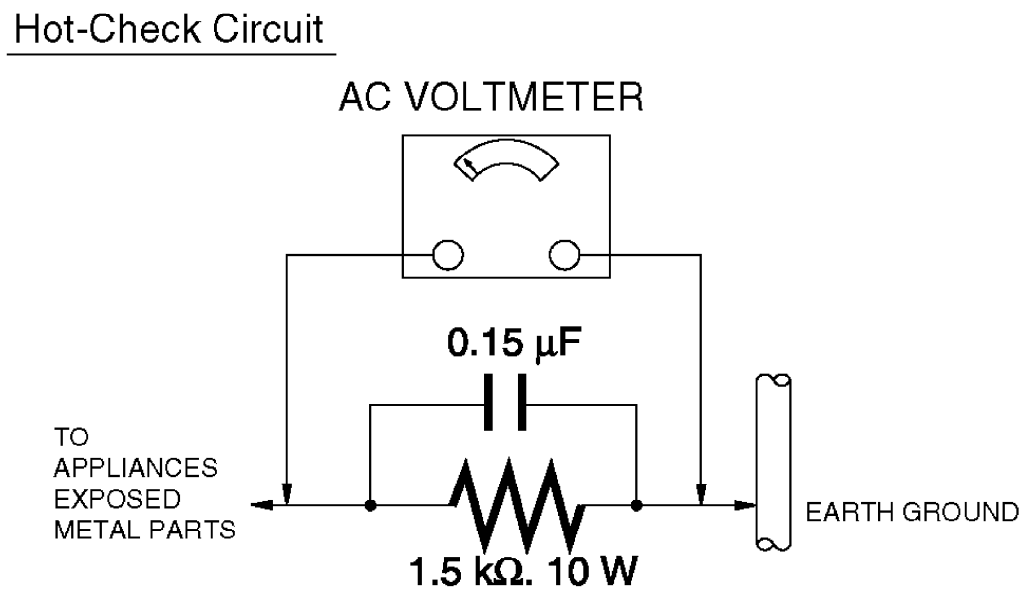

2. X-RADIATION

WARNING :

1. The potential source of X-Radiation in TV sets is the High Voltage section and the picture tube.
2. When using a picture tube test fixture for service, ensure that the fixture is capable of handling 34.5 kV without causing X-Radiation.

NOTE:

It is important to use an accurate periodically calibrated high voltage meter.

1. **Reduce the brightness to minimum.**
2. **Set the SERVICE switch to SERVICE .**
3. **Measure the High Voltage. The meter reading should indicate 32.0 kV±2.5 kV.**
   If the meter indication is out of tolerance, immediate service and correction is required to prevent the possibility of premature component failure.
4. **To prevent an X-Radiation possibly, it is essential to use the specified picture tube.**

2.1. HORIZONTAL OSCILLATOR DISABLE CIRCUIT TEST

SERVICE WARNING :

The test must be made as a final check before set is returned to the customer.

1. **With the rear cover removed, supply about a 120 V AC power source to the set, turn on the set.**
2. **Set the customer controls to normal operating positions.**
3. **Short between TP891 and TP892 on the Main circuit board with a jumper wire. Confirm that the picture goes out of horizontal sync.**
4. **If this does not occur, the horizontal oscillator disable circuit is not operating. Follow the Repair Procedures of horizontal oscillator disable circuit before the set is returned to customer.**

2.2. REPAIR PROCEDURES OF HORIZONTAL OSCILLATOR DISABLE CIRCUIT

1. **Connect a DC voltmeter between capacitor C513 (+) on the Main circuit board and chassis ground.**
2. **If approximately +21.5 V is not present at that point when 120 V AC is applied, find the cause. Check R503, R5505, C5507, C513 and D503.**
3. **Carefully check above specified parts and related circuits and parts. When the circuit is repaired, try the horizontal oscillator disable circuit test again.**

2.3. CIRCUIT EXPLANATION

2.3.1. HORIZONTAL OSCILLATOR DISABLE CIRCUIT

The positive DC voltage, supplied from the D503 cathode for monitoring high voltage, is applied to the IC5301 Pin11 through R503 and R5504. Under normal conditions, the voltage at IC5301 Pin 11 is less than approx. 3 V. If the high voltage at FlybackTransformer Pin 5 exceeds the specified voltage, the positive DC voltage which is supplied from the D503 cathode also increases. The increased voltage is applied to IC5301 Pin11 through R503 and R5504. Due to the increased voltage at IC5301 Pin11,the horizontal oscillator frequency increases, the picture goes out of horizontal sync, the beam current decreases and the picture become dark in order to keep X-radiation under specification.

Figure 2

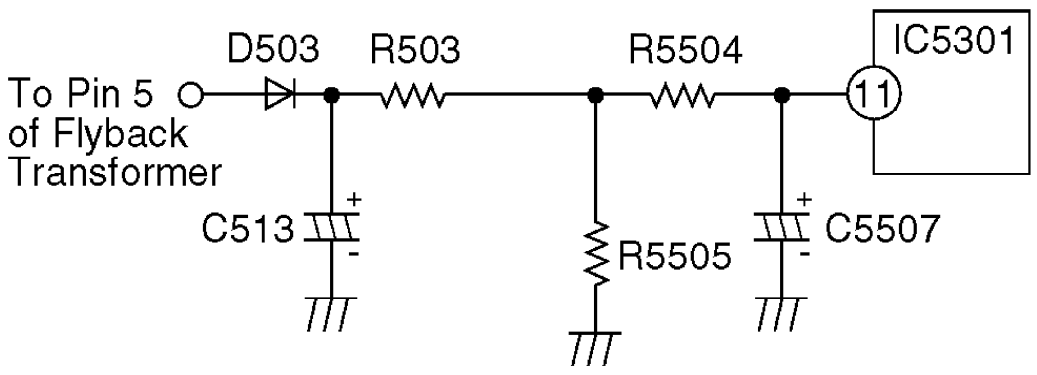

2.4. LASER PRODUCT

CLASS I LASER PRODUCT

- This equipment is certified to comply with DHHS Rules 21 CFR Chapter 1, Subchapter J in effect as of date of manufacture. (Only for U.S.A.)

This equipment is classified as a Class I (Class 1) level LASER Product and there is no hazardous LASER radiation with the safety protection.

Caution:

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Never touch the internal parts in order to avoid EXPOSURE TO VISIBLE LASER RADIATION.
Unplug the AC power cord to the equipment when opening the top cover.
When the power switch is On, do not place your eyes close to the front panel opening door or the other openings to look into the interior unit.
LASER Specification
Class I level A LASER Product (Class 1 level A LASER Product)

Wave Length:

647 - 677 nm (at DVD)
775 - 815 nm (at CD)

Laser Power:

No hazardous radiation is emitted with the safety protection.

2.5. PRECAUTION OF LASER DIODE

CAUTION:

This unit utilizes a class III a laser. Visible laser radiation is emitted from the optical pickup lens when the unit is turned on:

1. Do not look directly into the pickup lens.
2. Do not use optical instruments to look at the pickup lens.
3. Do not adjust the preset variable resistor on the optical pickup.
4. Do not disassemble the optical pickup unit.
5. If the optical pickup is replaced, use the manufactures specified replacement pickup only.
6. Use of control or adjustment or performance of procedures other than those specified herein may result in hazardous radiation exposure.

3. PREVENTION OF ELECTROSTATIC DISCHARGE (ESD) TO ELECTROSTATICALLY SENSITIVE (ES) DEVICES

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistorsare semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by electrostatic discharge (ESD).

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, whichshould be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static solder removal device. Some solder removal devices not classified as "anti-static (ESD protected)" can generate electrical charge sufficient to damage ES devices.

5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparableconductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

   CAUTION:

   Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.
8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity (ESD)sufficient to damage an ES device).

"NOTE to CATV system installer :

This reminder is provided to call the CATV system installer’s attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding systemof the building, as close to the point of cable entry as practical."

4. OPERATION GUIDE

5. SERVICE NOTES (PLEASE READ)

5.1. SERVICE NOTES

5.1.1. SIMPLIFIED FAULT FINDING DATA

Simplified Self-Diagnostic System facilitates finding the cause of the fault. A 4 digit fault code and communication for I2C bus code will be displayed on TV screen.
The Simplified Fault finding data is stored in the Memory IC (IC6004). This data is cleared after it is displayed, and then the POWER button is pressed back on.

1. With power turned off, press FF and REW buttons on unit together for over 3 seconds.

Fig. 1-1

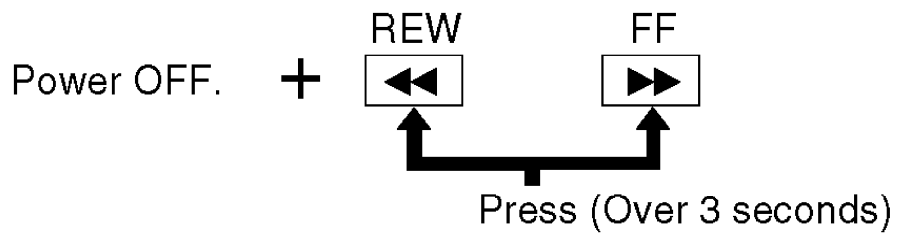
REW
FF
Power OFF.
+
Press (Over 3 seconds)

2. TV power comes on and the unit goes into service mode. 4 digit for fault code and communication for I$_2$C bus code will be displayed.

Fig. 1-2

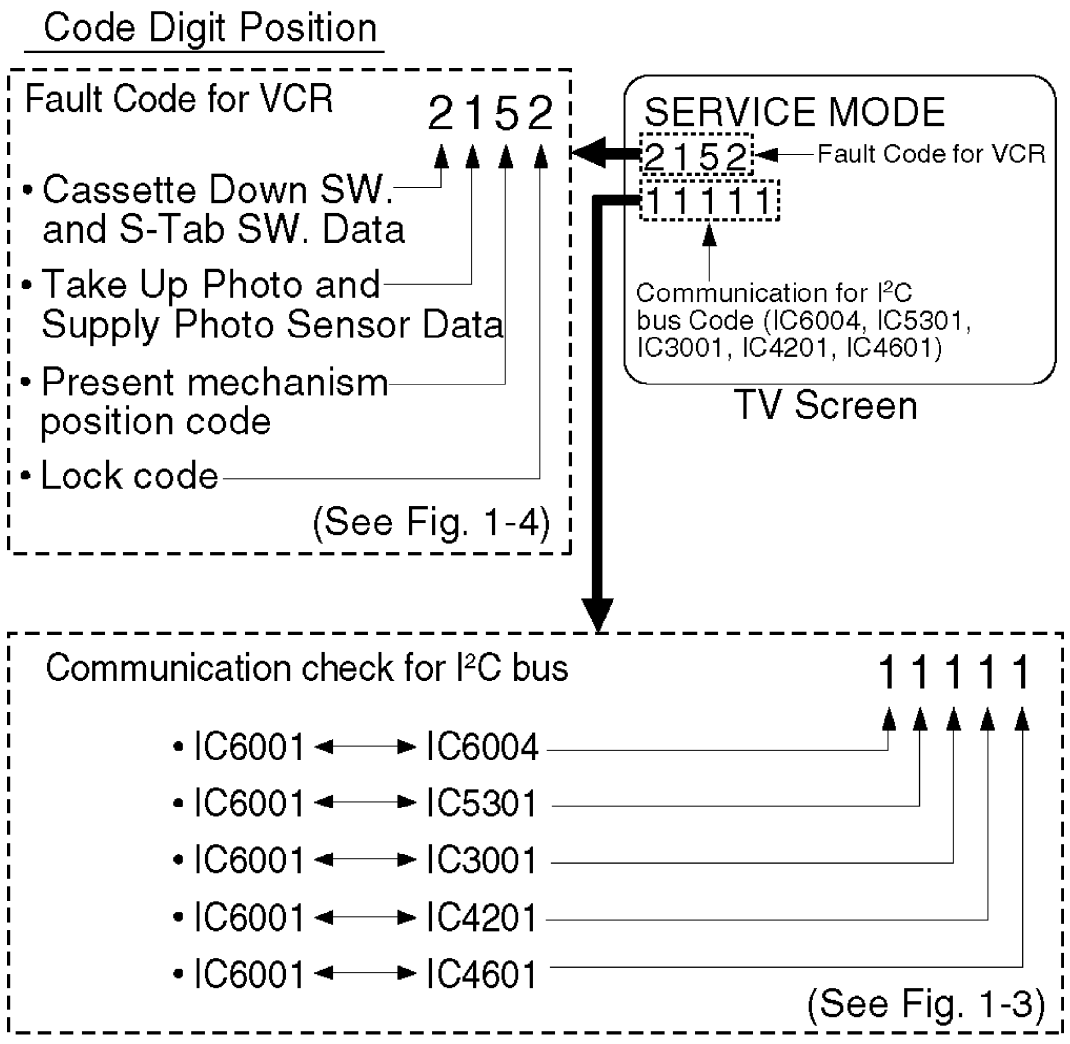
Code Digit Position
Fault Code for VCR
2152
• Cassette Down SW. and S-Tab SW. Data
• Take Up Photo and Supply Photo Sensor Data
• Present mechanism position code
• Lock code
(See Fig. 1-4)
SERVICE MODE
2152
Fault Code for VCR
11111
Communication for I^{2}C bus Code (IC6004, IC5301, IC3001, IC4201, IC4601)
TV Screen
Communication check for I^{2}C bus
11111
• IC6001 ◄► IC6004
• IC6001 ◄► IC5301
• IC6001 ◄► IC3001
• IC6001 ◄► IC4201
• IC6001 ◄► IC4601
(See Fig. 1-3)

Fig. 1-3

(Communication check for I^{2}C bus)

Explanation of Codes	**Code No.**				
Communication check for I^{2}C bus (IC6001◄►IC6004) ----- **NG** **OK**	0 1				
Communication check for I^{2}C bus (IC6001◄►IC5301) ----- **NG** **OK**		0 1			
Communication check for I^{2}C bus (IC6001◄►IC3001) ----- **NG** **OK**			0 1		
Communication check for I^{2}C bus (IC6001◄►IC4201) ----- **NG** **OK**				0 1	
Communication check for I^{2}C bus (IC6001◄►IC4601) ----- **NG** **OK**					0 1

Fig. 1-4

(Fault Code for VCR)

Explanation of Codes	Code No.			
S-Tab SW. Data				
• S-Tab SW. is off.	1			
• S-Tab SW. is on.	2			
Take Up and Supply Photo Sensor Data				
• No light detected at either sensor.		1		
• Take Up Photo Sensor detected at beginning of tape.		2		
• Supply Photo Sensor detected at end of tape.		3		
• Light detected at both sensors.		4		
Present Mechanism Position Code Mechanism Position is indicated. (Refer to Fig. 1-5.)			1 2 3 4 5 6 7 8 9 A B C D	
Lock Code (See Note)				
• VCR is not in shut-off condition.				0
• Reel lock.				1
• Cylinder lock.				2
• Exceeds loading/unloading time. (Mechanism Lock)				3
• Exceeds Cassette loading/unloading time. (Cassette Lock)				
Tape Unloading (direction)			1	4
Tape Loading (direction)			2	4

Fig. 1-5

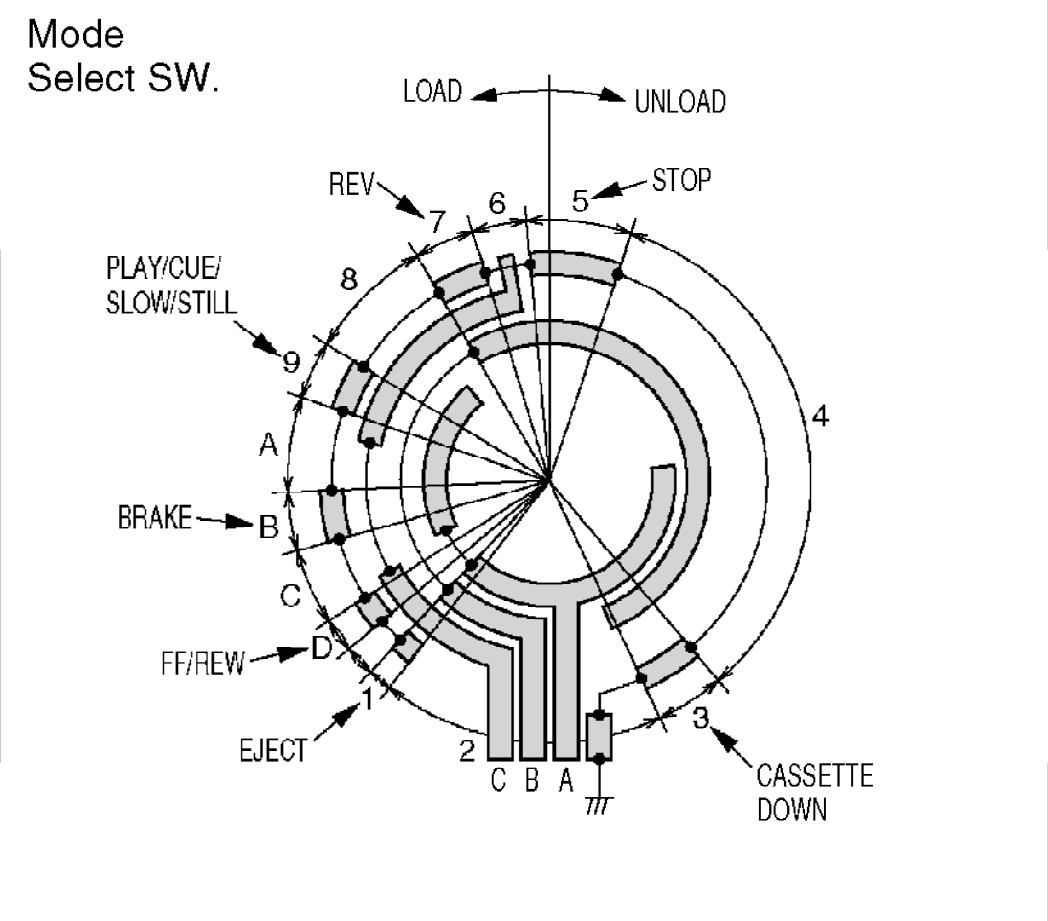
Mode
Select SW.
LOAD
UNLOAD
REV
STOP
PLAY/CUE/
SLOW/STILL
BRAKE
FF/REW
EJECT
CASSETTE
DOWN
1
2
3
4
5
6
7
8
9
A
B
C
D
C B A

Mechanism position	EJECT		CASSETTE DOWN		STOP		REV		PLAY/CUE/ SLOW/STILL		BRAKE		FF/REW
position code	1	2	3	4	5	6	7	8	9	A	B	C	D

3. Press any operation button except for POWER or PLAY (DVD) on either the unit, or the remote to detect that a key has been pressed. The 1st digit changes to "0" only when key is detected.

Fig. 1-6

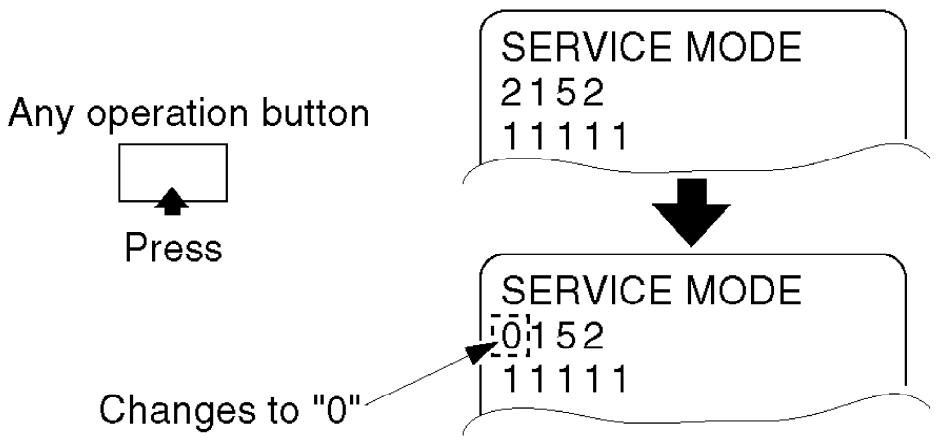

Note:

When 1 to 4 listed in Lock code occurs, the VCR stops and all VCR function buttons except for power become non-operational.

5.1.2. SELF-DIAGNOSTIC TEST FUNCTION FOR DVD

This unit has a Self-Diagnostic function which detects a problem or malfunction within the unit and displays its corresponding Error code on TV Screen.

Note:

If, after approx. 30 seconds, a unit set to DVD mode automatically switches to VCR mode, there is likely a problem with the DVD Decoder C.B.A. (IC8000, IC8100, IC8200, etc.)

5.1.2.1. How to enter DVD Self-Diagnostic mode

1. **Insert a DVD disc into the DVD Unit.**
2. **Set the unit to DVD mode. Then, press STOP button to stop playback.**

   Note:

   Do not let a DVD play during DVD Self-Diagnostic mode.
3. **Press and hold STOP/EJECT, PLAY/REPEAT, and VOL- buttons of VCR operation panel of the unit together for over 5 seconds with no cassette inserted. The adjustment overlay will appear on the TV screen.**

Fig. 2-1

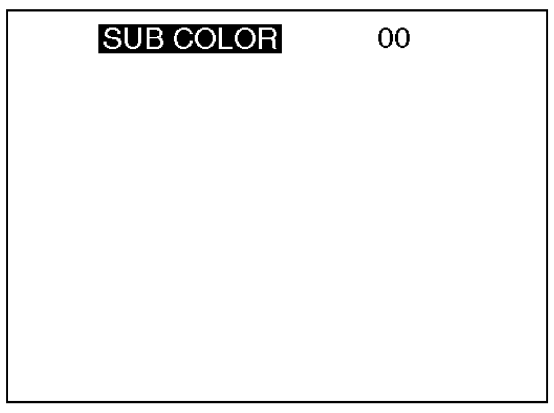

4. **Press DISPLAY key on the remote control to enter DVD Self-Diagnostic mode.**

Fig. 2-2

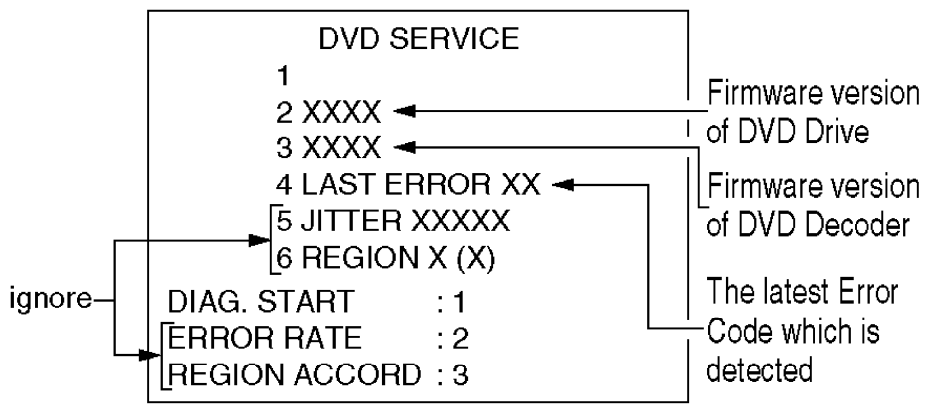
DVD SERVICE
1
2 XXXX
3 XXXX
4 LAST ERROR XX
5 JITTER XXXXX
6 REGION X (X)
DIAG. START : 1
ERROR RATE : 2
REGION ACCORD : 3
ignore
Firmware version of DVD Drive
Firmware version of DVD Decoder
The latest Error Code which is detected

5. **Press ”1” key on the remote control. The DVD Self-Diagnostic Test function will start automatically.**

Fig. 2-3

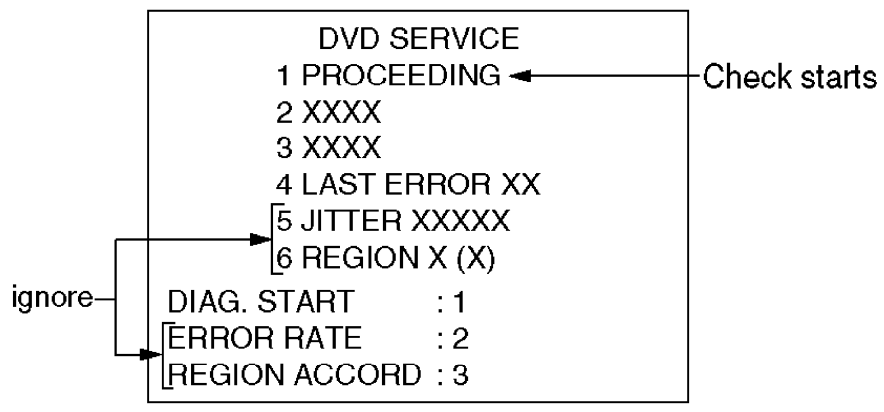
DVD SERVICE
1 PROCEEDING
2 XXXX
3 XXXX
4 LAST ERROR XX
5 JITTER XXXXX
6 REGION X (X)
DIAG. START : 1
ERROR RATE : 2
REGION ACCORD : 3
ignore
Check starts

6. **After a few minutes (approx. 1~5 minutes), the check results will appear on TV screen.**

   - **If no error is detected, "COMPLETED" will appear as shown in Fig. 2-4. Be sure to press Power OFF to end. Then, press Power ON again and remove a DVD from the DVD Unit.**

Fig. 2-4

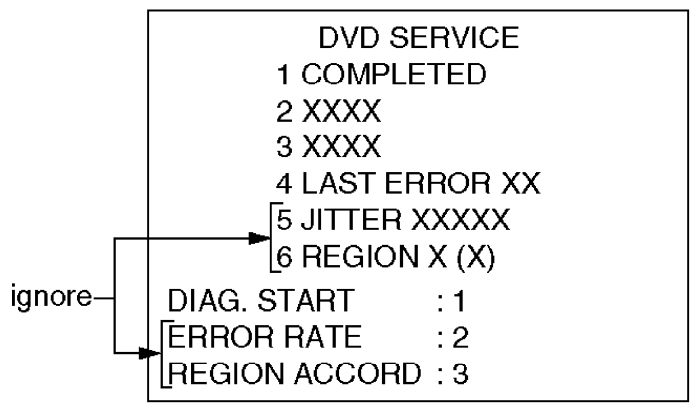
DVD SERVICE
1 COMPLETED
2 XXXX
3 XXXX
4 LAST ERROR XX
5 JITTER XXXXX
6 REGION X (X)
DIAG. START : 1
ERROR RATE : 2
REGION ACCORD : 3
ignore

   - **If some error is detected, 2 digit for Error Code will appear as shown in Fig. 2-5.**

Fig. 2-5

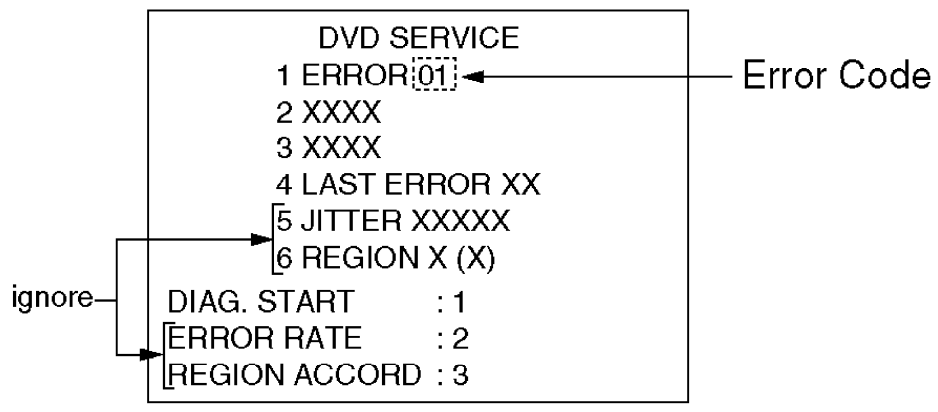
DVD SERVICE
1 ERROR 01
2 XXXX
3 XXXX
4 LAST ERROR XX
5 JITTER XXXXX
6 REGION X (X)
DIAG. START : 1
ERROR RATE : 2
REGION ACCORD : 3
ignore
Error Code

Fig. 2-6

Error Code

Error Code	Explanation of cause
00	No Error
10	Loading Error
30	Ultra DMA (Direct Memory Access) CRC Error
40	Spindle Motor Error
50	Traverse Motor Error
60	Servo Error
70	Recovery Error

5.1.3. HOW TO UPDATE THE FIRMWARE OF DVD

It is possible to update the firmware version of the DVD Drive and the DVD Decoder using each Firmware Disc for DVD Drive and DVD Decoder.

5.1.3.1. How to update the firmware of DVD

1. **Confirm the firmware version of DVD Drive. Refer to "SELF-DIAGNOSTIC TEST FUNCTION FOR DVD."**
2. **Set the unit to DVD mode.**
3. **Press OPEN/CLOSE button to open the tray. Then, place the Firmware Disc for DVD Drive in the tray.**
4. **Close the tray. Updating will begin automatically.**
5. **After approx. 1 minute, the tray will open automatically.**

   Note:

   If the tray has still not opened after 3 minutes or Error Indication appears, updating was unsuccessful. In this case, repeat above steps from step 1.
6. **Remove the Firmware Disc from the tray. Then, disconnect the AC Plug. (The tray will not close.)**
7. **Connect the AC Plug and turn on the power. Then, reset all VCR memory. Refer to "HOW TO RESET ALL COMBINATION DVD VCR MEMORY FUNCTIONS."**

5.1.3.2. How to update the firmware of DVD Decoder:

1. **Confirm the firmware version of DVD Decoder. Refer to "SELF-DIAGNOSTIC TEST FUNCTION FOR DVD."**
2. **Set the unit to DVD mode.**
3. **Press OPEN/CLOSE button to open the tray. Then, place the Firmware Disc for DVD Decoder in the tray.**
4. **Close the tray. Updating will begin automatically.**
5. **After approx. 1 minute, the tray will open automatically.**

Note:

If the tray has still not opened after 3 minutes or Error Indication appears, updating was unsuccessful. In this case, repeat above steps from step 1.

6. Remove the Firmware Disc from the tray. Then, disconnect the AC Plug. (The tray will not close.)
7. Connect the AC Plug and turn on the power. Then, reset all VCR memory. Refer to "HOW TO RESET ALL COMBINATION DVD VCR MEMORY FUNCTIONS."

CAUTION:

1. Do not unplug the AC Cord during updating.
2. Do not press any buttons during updating.

5.1.4. USAGE SCREEN MODE

Function displayed on the TV monitor:

- the total elapsed "Power on" time (in days)
- the total elapsed "Cylinder rotation" time (in hours)
- the total elapsed "DVD play" time (in hours).

1. With power turned and no cassette, press STOP/EJECT button on VCR and 7 key on remote together.
   The USAGE SCREEN will be displayed on the TV Monitor.

Fig. 3

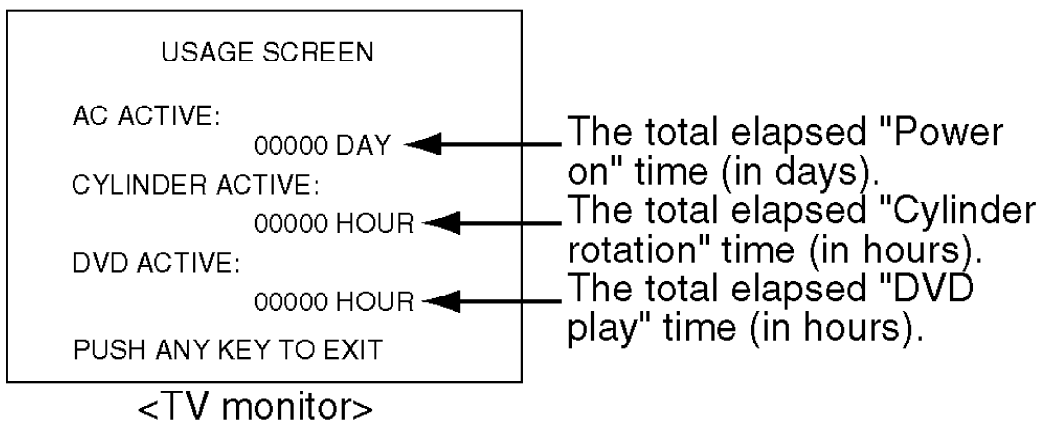
USAGE SCREEN
AC ACTIVE:
00000 DAY
CYLINDER ACTIVE:
00000 HOUR
DVD ACTIVE:
00000 HOUR
PUSH ANY KEY TO EXIT
The total elapsed "Power on" time (in days).
The total elapsed "Cylinder rotation" time (in hours).
The total elapsed "DVD play" time (in hours).
<TV monitor>

Note:

1. After replacing the Cylinder Unit, press COUNTER RESET button on remote in this mode. Only Total elapsed "Cylinder rotation" time (in days) will be cleared to 0.
2. After replacing the DVD Unit, press ADD/DLT button on remote in this mode. Only Total elapsed time "DVD Play" time (in hours) will be cleared to 0.
3. To release from Usage Screen Mode, press any operation button

on VCR or insert a cassette tape in this mode. VCR will return to normal operation mode.

5.1.5. GROUNDING FOR ELECTROSTATIC BREAKDOWN

Prevention

1. Human body grounding
   Use the antistatic wrist strap to discharge the static electricity from your body.
2. Work table grounding
   Put a conductive material (sheet) or steel sheet on the area where the optical pickup is placed and ground the sheet.

Caution:

The static electricity of your clothes will not be grounded through the wrist strap. So take care not to let your clothes touch the optical pickup.

Fig. 4

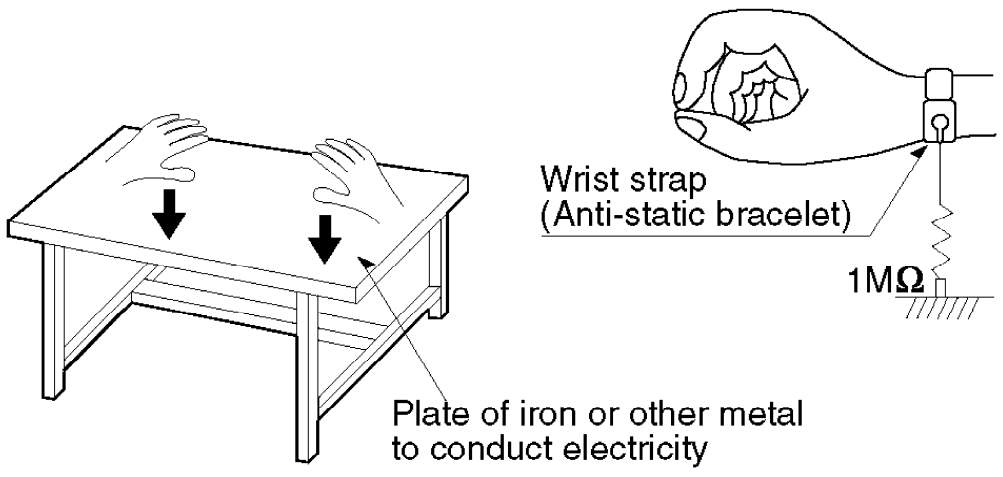

5.1.6. DVD DECODER C.B.A. REPLACEMENT NOTE

After replacing DVD Decoder C.B.A. or EEPROM IC (IC8001), confirm the Firmware version of DVD using Self-Diagnostic function. If the version is different than that indicated on the Firmware Disc, update it using the Firmware Disc. Refer to "HOW TO UPDATE THE FIRMWARE OF DVD."

5.1.7. METHOD FOR EJECTING THE DVD TRAY MANUALLY

1. Insert a Straightened Paper Clip or similar object into the Eject hole.
2. Press it gently, and then pull the Tray fully out.

Fig. 6

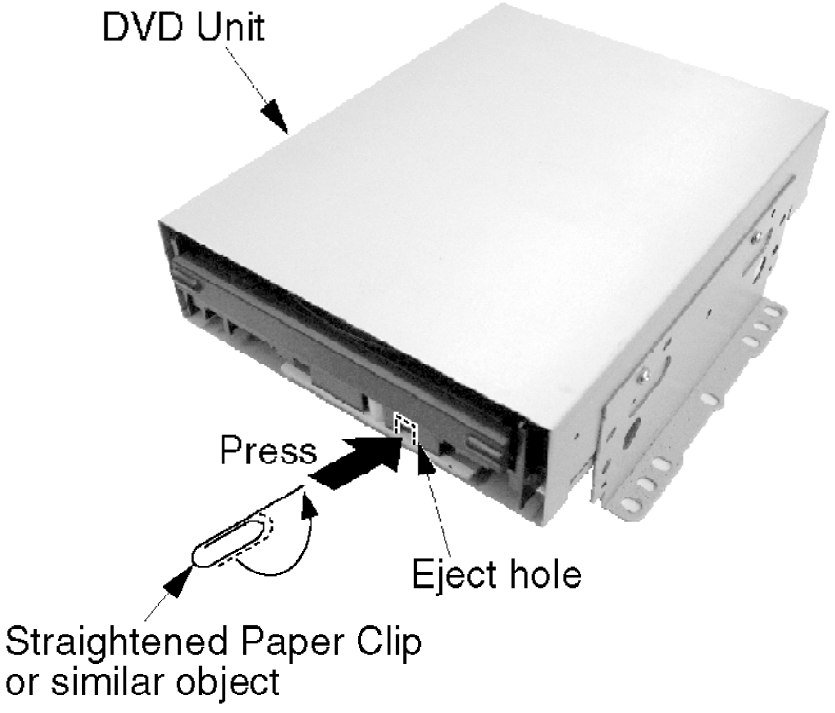
DVD Unit
Press
Eject hole
Straightened Paper Clip
or similar object

5.1.8. SERVICE POSITION

5.1.8.1. Service Position

Service Position	Purpose
Service Position (1)	Mechanism check Mechanical adjustment Electrical adjustment Power Supply C.B.A. check
Service Position (2)	Main C.B.A. check TV Main C.B.A. check
Service Position (3)	DVD Decoder C.B.A. check

CAUTION:

HOT CIRCUIT (Primary circuit) exists on the Power Supply C.B.A., TV Main C.B.A., and Tuner Main C.B.A.

Use extreme care to prevent accidental shock when servicing.

5.1.8.1.1. Service Position (1)

Fig. 6-1

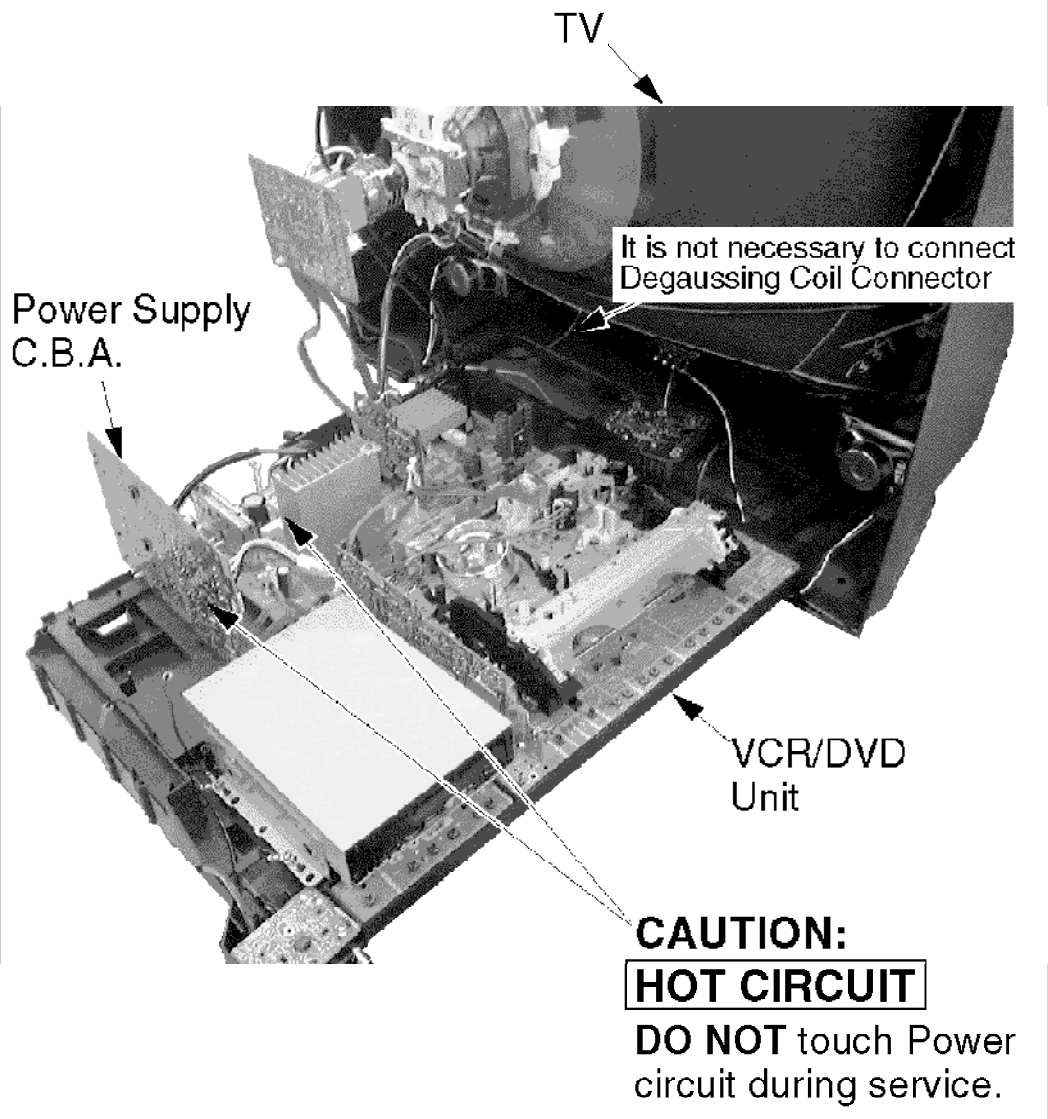
TV
It is not necessary to connect
Degaussing Coil Connector
Power Supply
C.B.A.
VCR/DVD
Unit
CAUTION:
HOT CIRCUIT
DO NOT touch Power
circuit during service.

5.1.8.1.2. Service Position (2)

Fig. 6-2-1

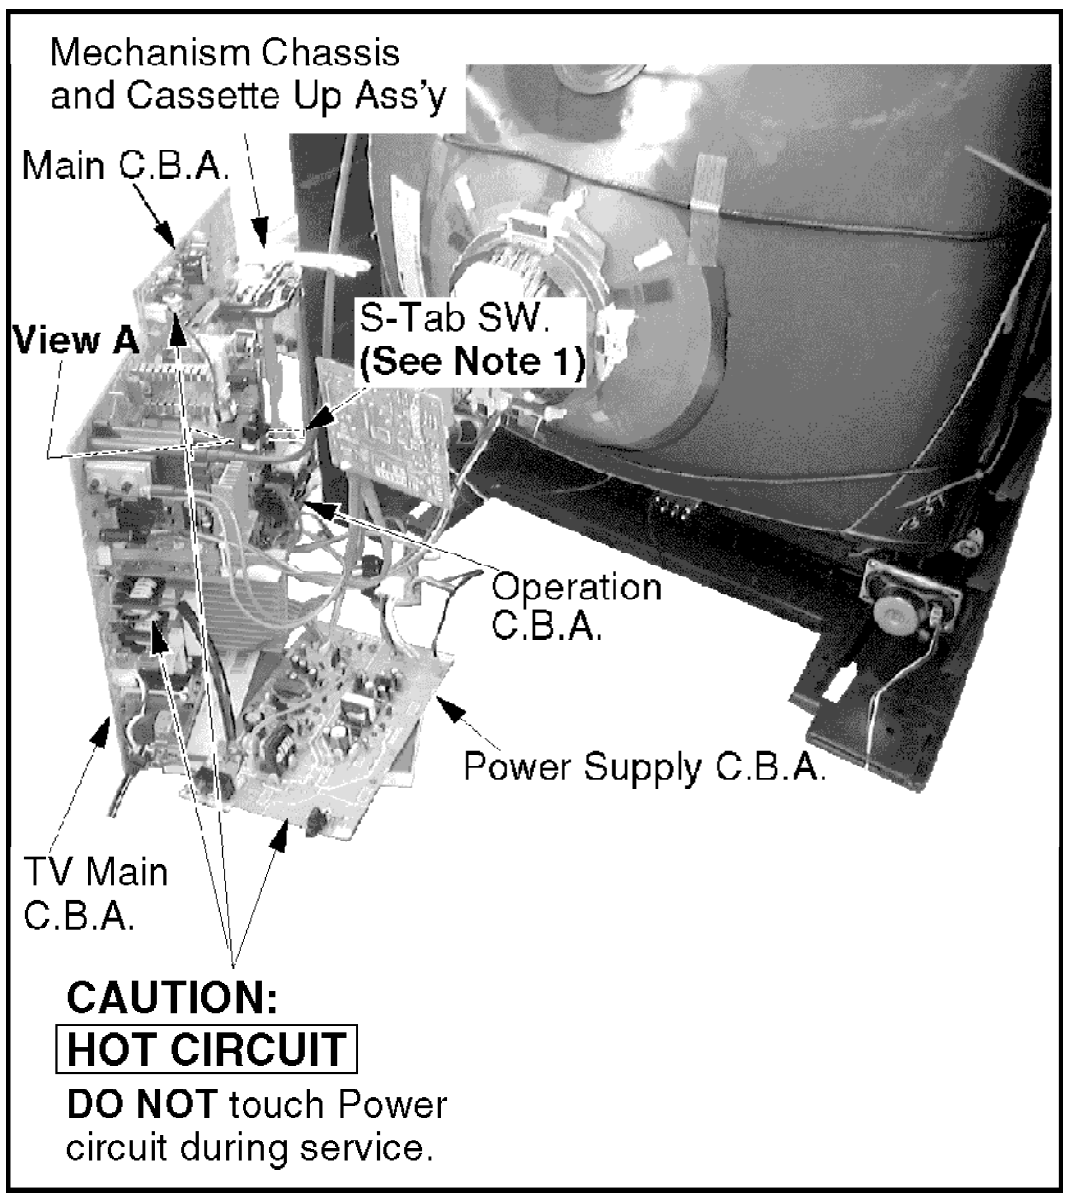
Mechanism Chassis
and Cassette Up Ass'y
Main C.B.A.
View A
S-Tab SW.
(See Note 1)
Operation
C.B.A.
Power Supply C.B.A.
TV Main
C.B.A.
CAUTION:
HOT CIRCUIT
DO NOT touch Power
circuit during service.

Note:

1. **It is possible that the S-Tab SW. may not work correctly in Service Positions(2). (Recording can not be done). In this case, short the S -Tab SW. Pins on the foil side of Main C.B.A. to turn this SW. on.**

Fig. 6-2-2

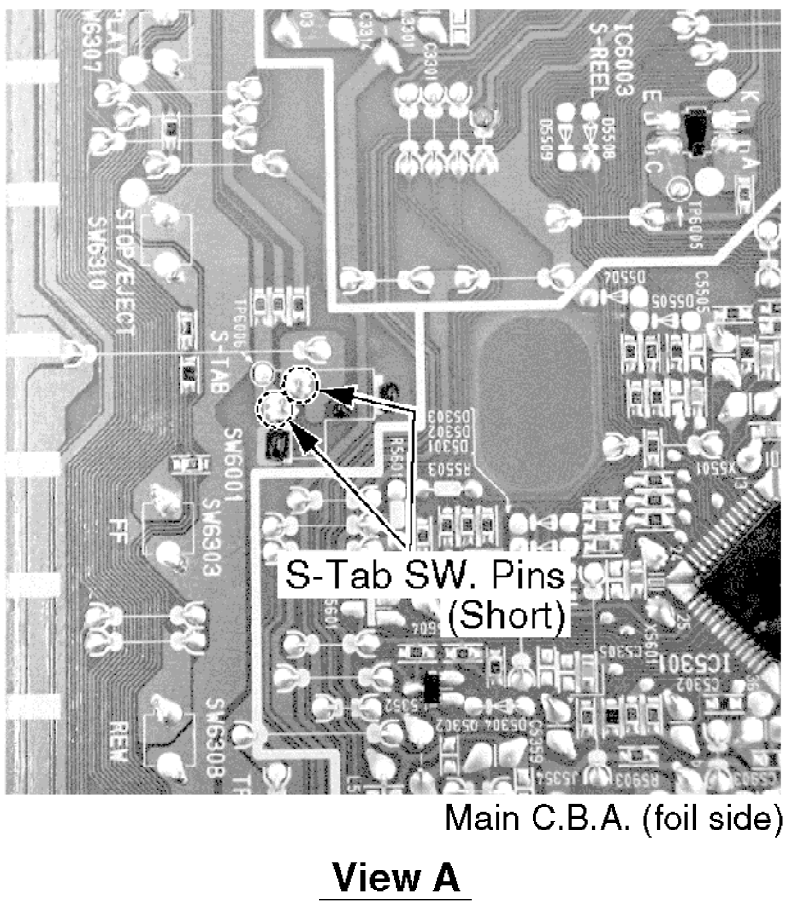
S-Tab SW. Pins
(Short)
Main C.B.A. (foil side)
View A

Alternative method:
Cover the S-Tab SW. with masking tape.

5.1.8.1.3. Service Position (3)

In Service Position (3), the DVD Decoder C.B.A. with Extension Cable (LSUA0034) X3 and Connector Cable (IDE Cable) (Not supplied) can be peformed.

Fig. 6-3-1

Extension Cable (LSUA0034) 3pcs



Connector Cable (IDE Cable)

Not supplied
(Purchase locally)



1. **Remove the DVD Unit and the DVD Decoder C.B.A.**

   Note:

   Remove the original Connector Cable (IDE) from the DVD Unit. (The original Connector Cable (IDE) is not used in this position.)

2. **Conect the Connector Cable (Power) and the Connector Cable (IDE Cable) to the DVD Unit from the DVD Decoder C.B.A.**

3. **Connect the 3 Extension Cables as follows:**

   - **With Extension Cable (LSUA0034): P8001 on the DVD Decoder C.B.A. to P1501 on the Power Supply C.B.A.**

   - **With Extension Cable (LSUA0034): P8002 on the DVD Decoder C.B.A. to P4004 on the Main C.B.A.**

   - **With Extension Cable (LSUA0034): P8003 on the DVD Decoder C.B.A. to P6002 on the Main C.B.A.**

4. **Place the DVD Unit and DVD Decoder C.B.A. as shown.**

Fig. 6-3-2

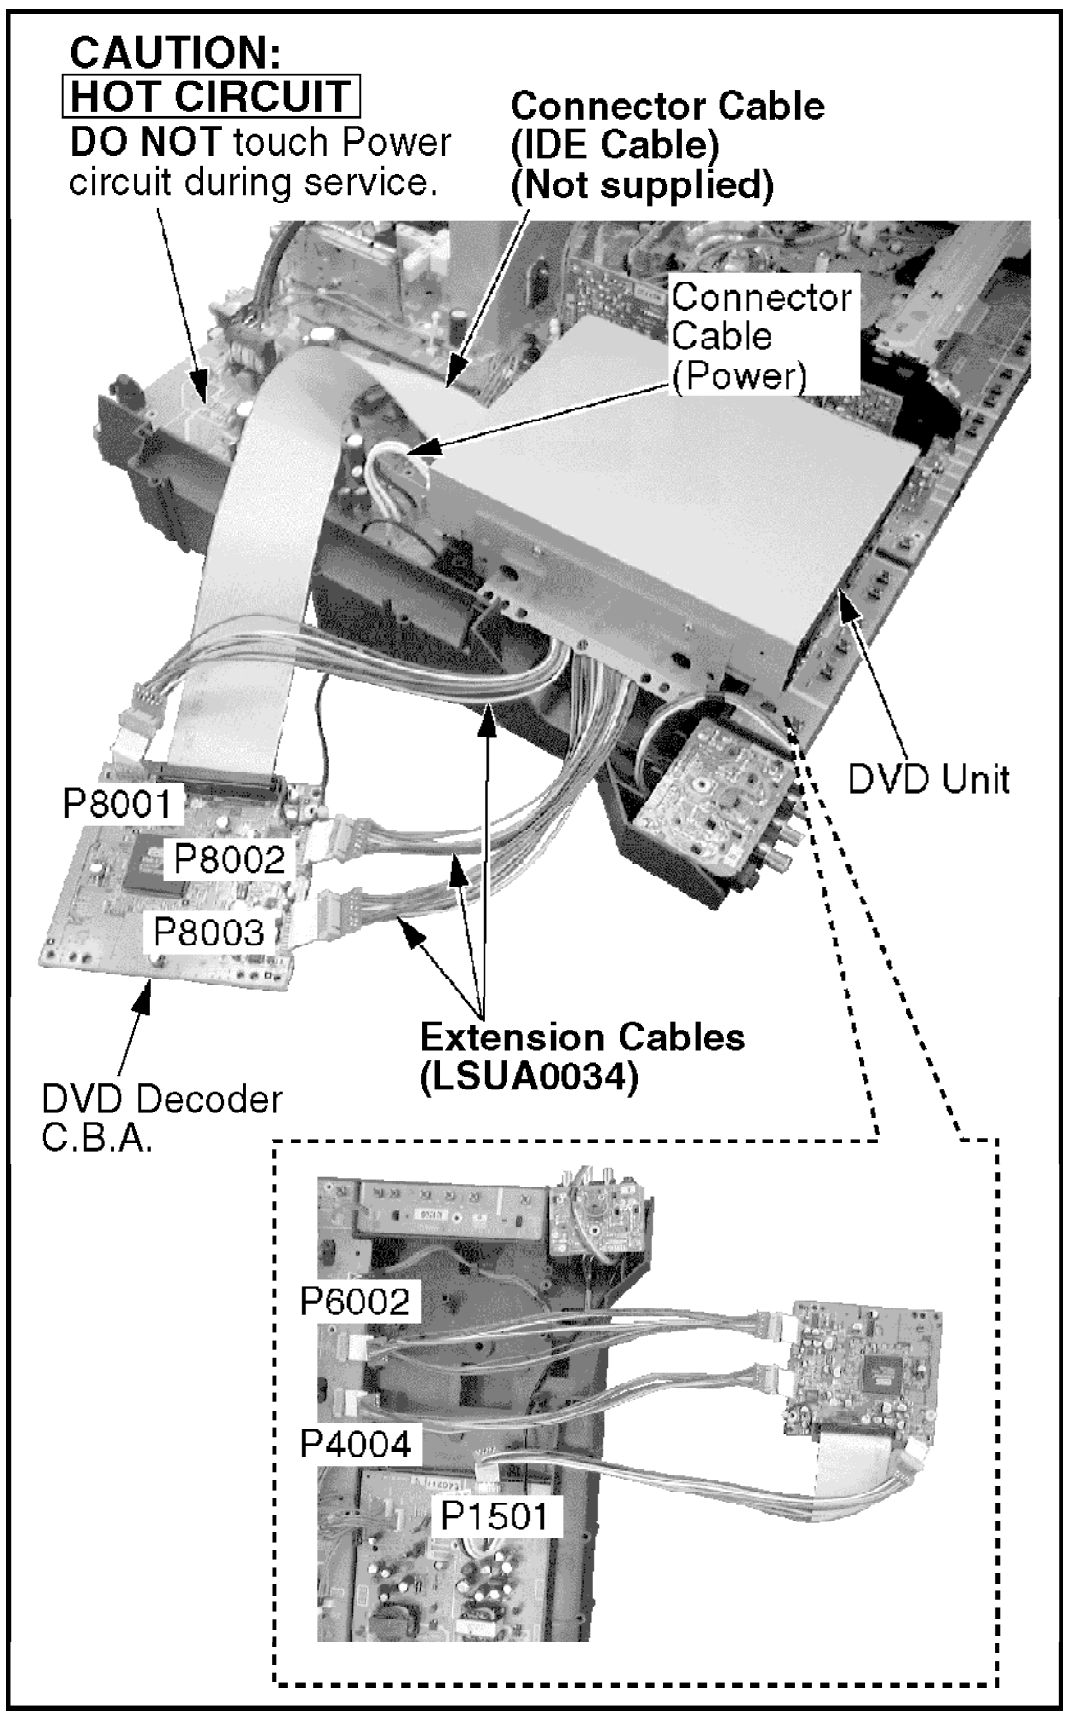
CAUTION:
HOT CIRCUIT
DO NOT touch Power circuit during service.
Connector Cable (IDE Cable) (Not supplied)
Connector Cable (Power)
DVD Unit
P8001
P8002
P8003
DVD Decoder C.B.A.
Extension Cables (LSUA0034)
P6002
P4004
P1501

5.1.9. HOT CIRCUIT

Primary circuit exists on the Power Supply C.B.A., the TV Main C.B.A., and the Main C.B.A. This circuit is identified as " HOT " on the C.B.A. and in the Service Manual. Use extreme care to prevent accidental shock when servicing.

5.1.10. SERVICE MODE

In order to inhibit detection of the Supply & Takeup Photo Transistors, Reel Sensor, and Cylinder Lock, press and hold STOP/EJECT, PLAY/REPEAT, and CH down buttons of VCR operation panel on the unit together over 5 secondsin power on condition.

Fig. 7

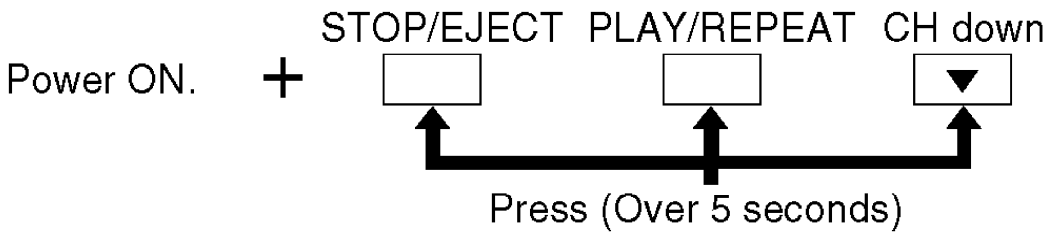
STOP/EJECT
PLAY/REPEAT
CH down
Power ON.
+
▼
Press (Over 5 seconds)

The unit goes into service mode.
In this mode, Mechanism movement can be confirmed. When removing Cassette Up Ass’y, it can be confirmed without a cassette.
To release from this mode, press POWER button off or disconnect AC Plug.

5.1.11. CAUTION FOR INSTALLATION OF VCR/DVD ASS’Y

CAUTION:

Opener Lever may be damaged when VCR/DVD Ass’y is installed, with Cassette Door-Lid and Opener Lever of Cassette Up Ass’y set incorrectly.

Install the VCR/DVD Ass'y as follows:

1. **Swing the Cassette Door-Lid all the way open until the Cassette Door tab clears the Opener Lever.**
2. **Make sure that all guide tabs are aligned properly. Then, press the VCR/DVD Ass'y straight in.**

Fig. 8

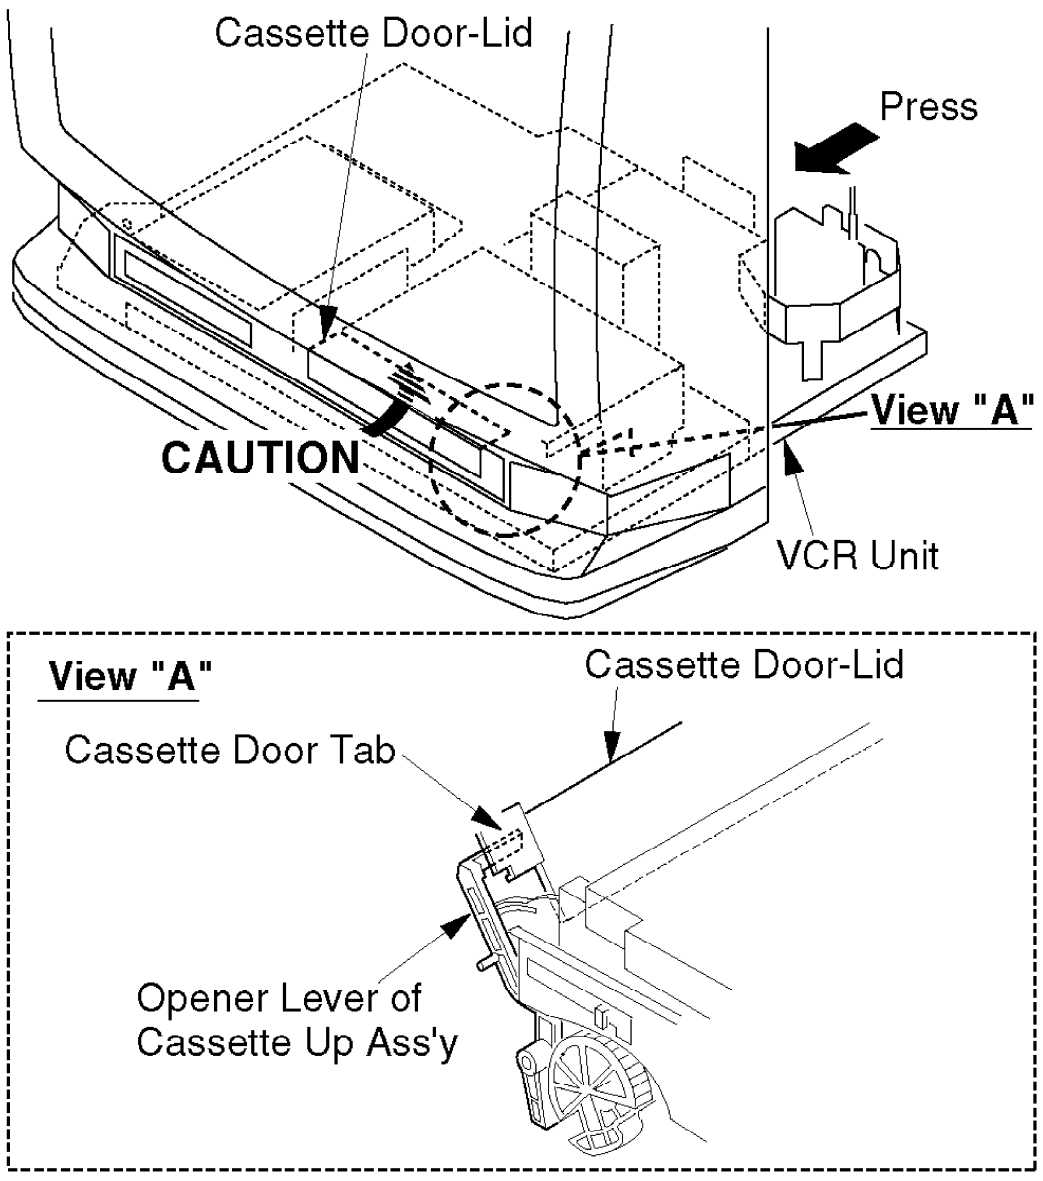
Cassette Door-Lid
Press
CAUTION
View "A"
VCR Unit
View "A"
Cassette Door-Lid
Cassette Door Tab
Opener Lever of
Cassette Up Ass'y

5.1.12. METHOD FOR LOADING/UNLOADING OF MECHANISM

5.1.12.1. (Manual Method)

Turn the Loading Gear clockwise (for loading) or counterclockwise (for unloading) using needlenose pliers etc.

Note:

Do not use this method if Mechanism is jammed or locked.

Fig. 9-1

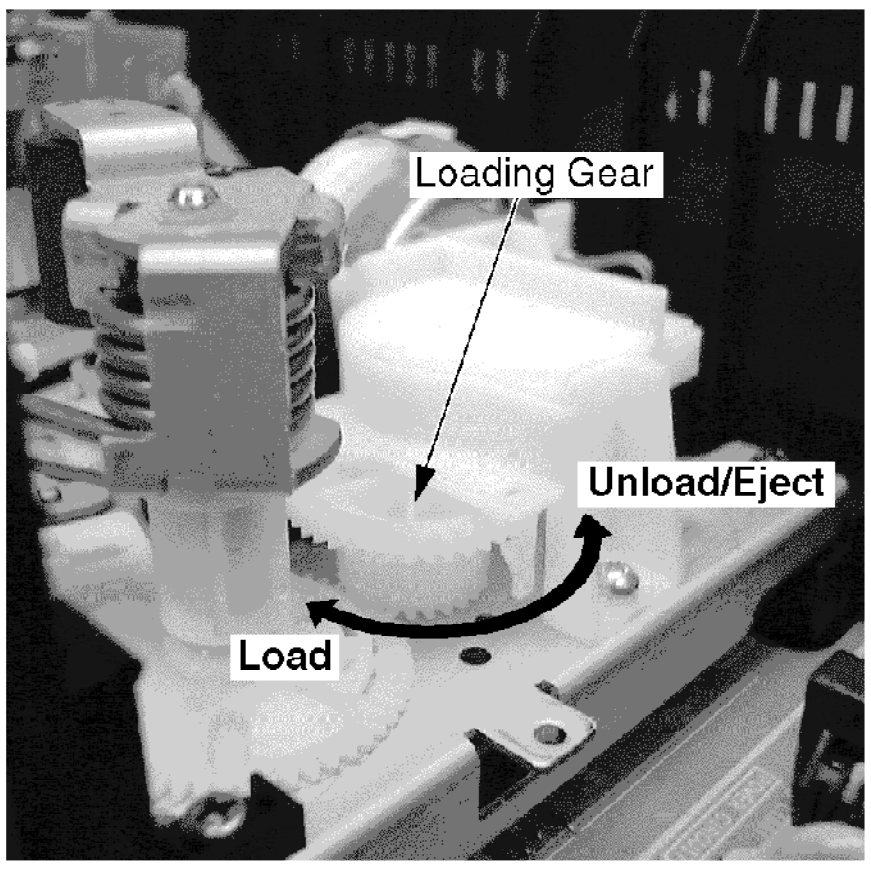
Loading Gear
Unload/Eject
Load

5.1.12.2. (Electrical Method)

Apply +10.0 V DC Power Supply to the Loading Motor terminals.

Loading
DC + to Portion "a," DC - to Portion "b"
Unloading
DC - to Portion "a," DC + to Portion "b"

CAUTION:

Before applying DC Power Supply, be sure to cut the Motor Leads with a cutter, etc.
Otherwise, the Loading Motor Drive IC (IC2501) may be damaged.

Fig. 9-2

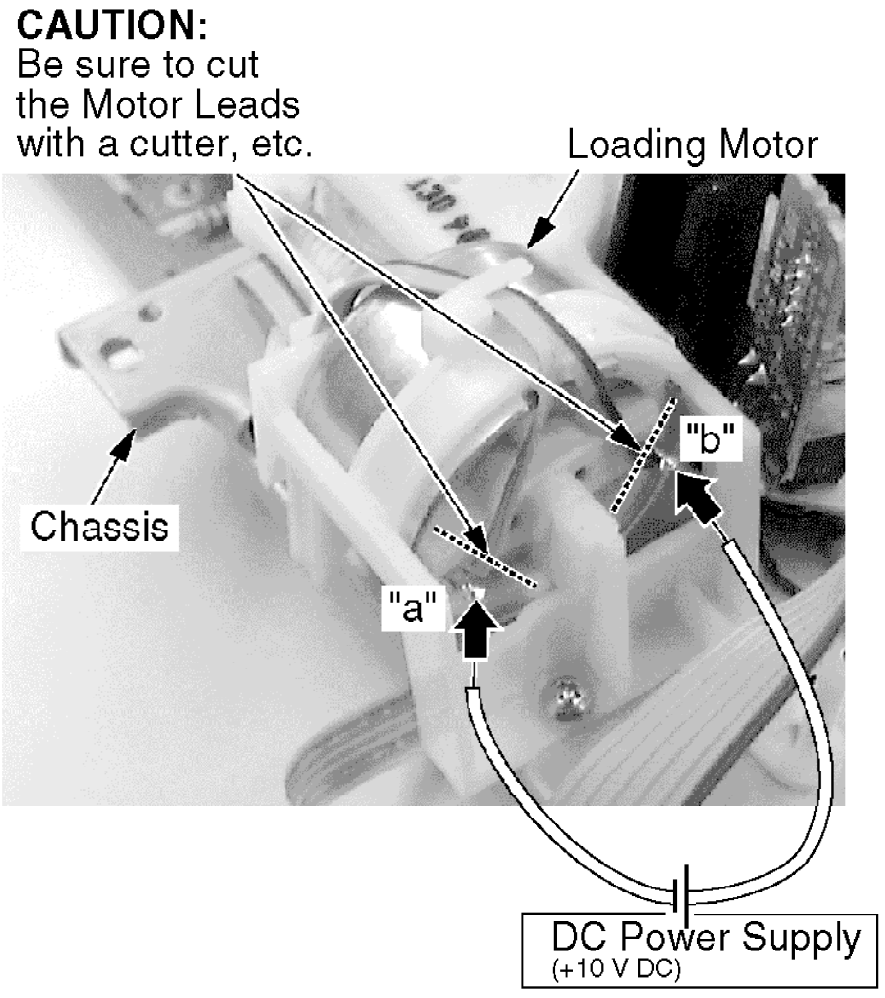
CAUTION:
Be sure to cut
the Motor Leads
with a cutter, etc.
Loading Motor
"b"
Chassis
"a"
DC Power Supply
(+10 V DC)

5.1.12.2.1. WHEN LOADING WITHOUT A CASSETTE

When loading without a cassette, push Portion "a" on the Holder Unit of Cassette Up Ass'y so that the Lever clear the First Tab and Second Tab.

Fig. 9-3

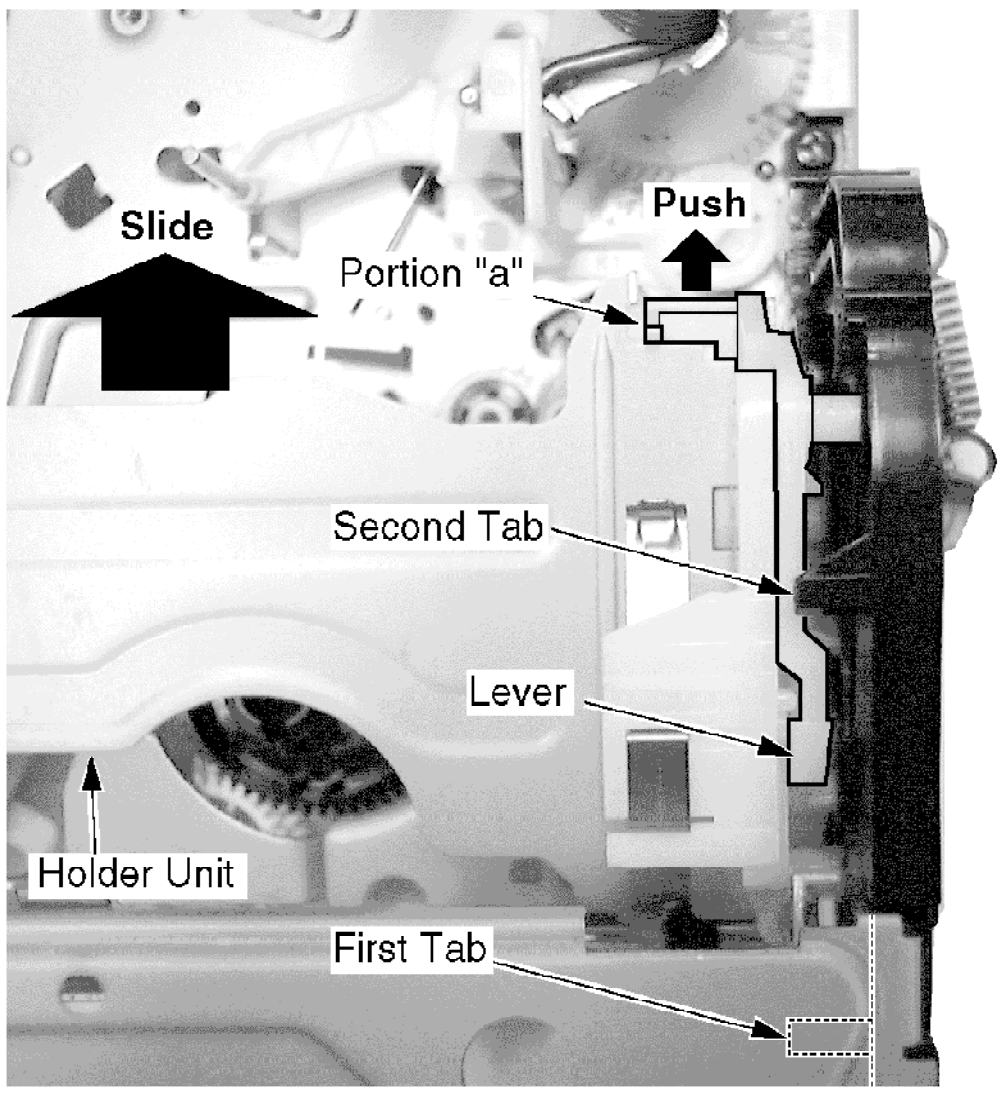
Slide
Push
Portion "a"
Second Tab
Lever
Holder Unit
First Tab

5.1.13. HOW TO REMOVE A JAMMED TAPE

CAUTION:

Wiper Arm Unit may be damaged or its spring may be out of place when the jammed tape is removed by force.

Remove a jammed tape as follows:

5.1.13.1. Manual Method

When a tape jam is encountered, check the tape loading condition and use the following procedure to remove a tape jam.

Fig. 10-1

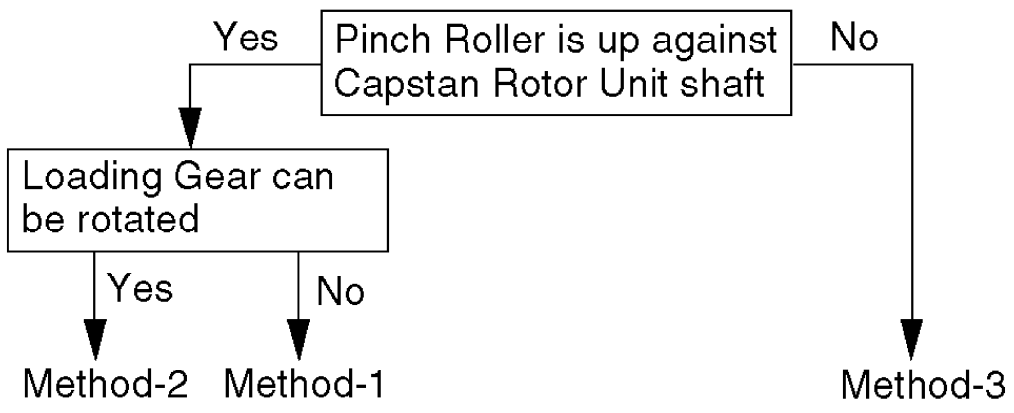
Pinch Roller is up against Capstan Rotor Unit shaft
Yes
No
Loading Gear can be rotated
Yes
No
Method-2
Method-1
Method-3

Method -1:

1. **Move the Pinch Roller Unit out by unhooking the Pin of Pinch Arm Unit so that the Pinch Roller is separated from the Capstan Rotor Unit shaft.**

Fig.10-2

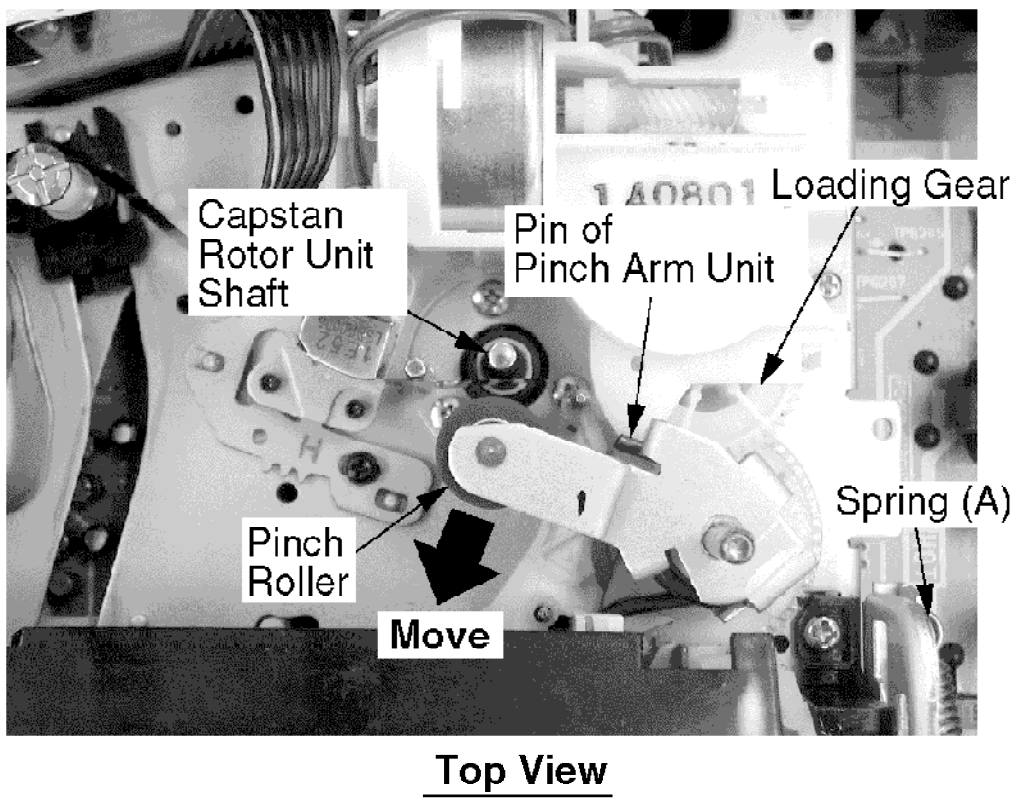
Capstan Rotor Unit Shaft
Pin of Pinch Arm Unit
Loading Gear
Spring (A)
Pinch Roller
Move
Top View

2. **Remove the tape from the tape path.**
3. **Rewind the tape into the cassette by rotating the Center Clutch Unit counterclockwise.**
4. **Unhook Spring (A) of the Drive Rack Arm.**
5. **Remove Screw (A).**
6. **Lift the Cassette Up Ass'y. While pulling the Cassette Up Ass'y out far enough so that it clears the Drive Rack Arm, slide the Drive Rack Unit as indicated by the arrow to remove the cassette tape from the Cassette Up Ass'y.**
7. **Check the cause of mechanical trouble and repair.**

Fig. 10-3

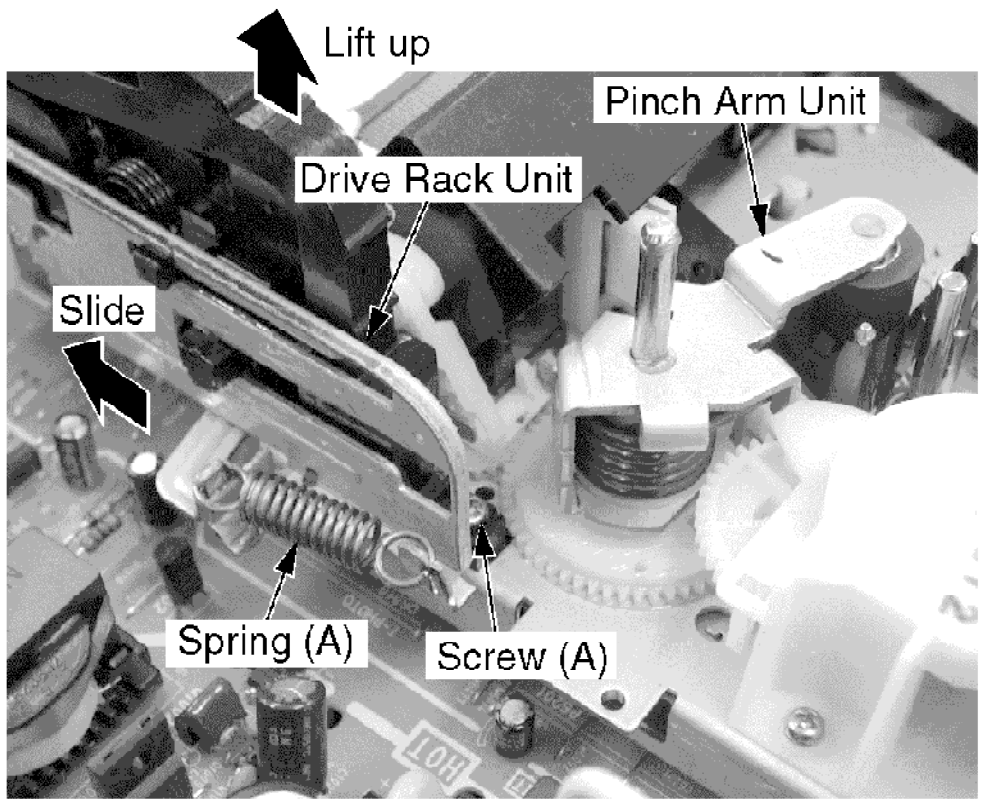

Method -2:

1. Rotate Loading Motor counterclockwise with needlenose pliers, etc. so that the Pinch Roller is separated from the shaft of the Capstan Rotor Unit.
2. Perform Step 2 through Step 7 of Method -1.

Method -3:

1. Perform Step 2 through Step 7 of Method -1.

Note:

After repairing mechanical trouble, make sure that all gear alignments are correct, especially the Wiper Arm Unit and Drive Rack Unit of Cassette Up Ass’y. (Refer to "EJECT Position Confirmation"in Disassembly/Assembly Procedures.)

5.1.13.2. Electrical Method

Electrical method can only be performed when the mechanism is moved by rotating the Loading Gear.

CAUTION:

- Before applying DC Power Supply, be sure to cut the Motor Leads with a cutter, etc.
  Otherwise, the Loading Motor Drive IC (IC2501) may be damaged.
- If loading does not start in approx. 2 seconds after DC Power Supply is applied, DO NOT continue to apply DC Power Supply.
  Instead, perform "Manual Method."

1. Be sure to cut the Motor Leads with a cutter, etc.
2. Apply +10.0 V DC Power Supply to the Loading Motor terminals.
3. When the Loading Posts reach the fully unloaded position, remove the Power Supply.

Fig. 11

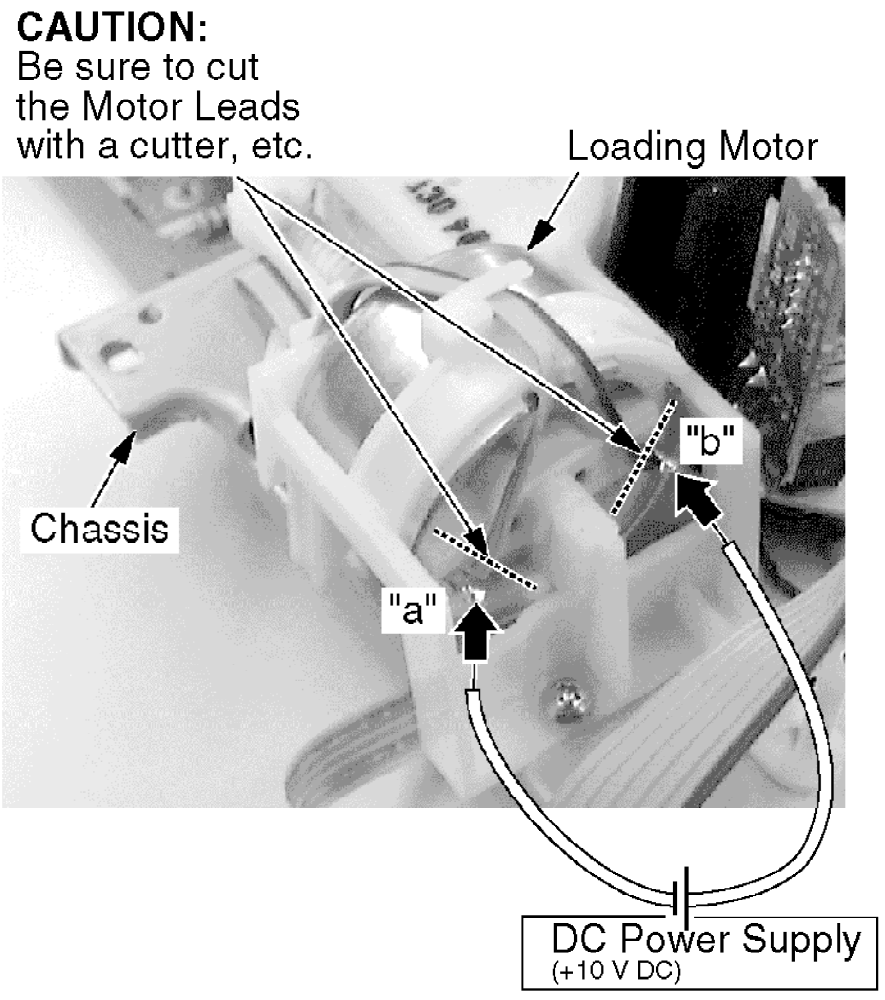
CAUTION:
Be sure to cut
the Motor Leads
with a cutter, etc.
Loading Motor
Chassis
"a"
"b"
DC Power Supply
(+10 V DC)

4. Rewind the tape into the cassette by turning the Center Clutch Unit counterclockwise.

5. Eject the cassette by applying +10.0 V DC Power Supply again.

5.1.14. WIRE AND LEAD POSITION DIAGRAM

Fig.12

After servicing, make sure that all wires, leads, and clampers are placed in their original position. It is important for the best operation of the unit.

Note:
No lead wires or flat cables should touch any heating parts or the Heat Sink Plate.
Use extreme care especially for followings.

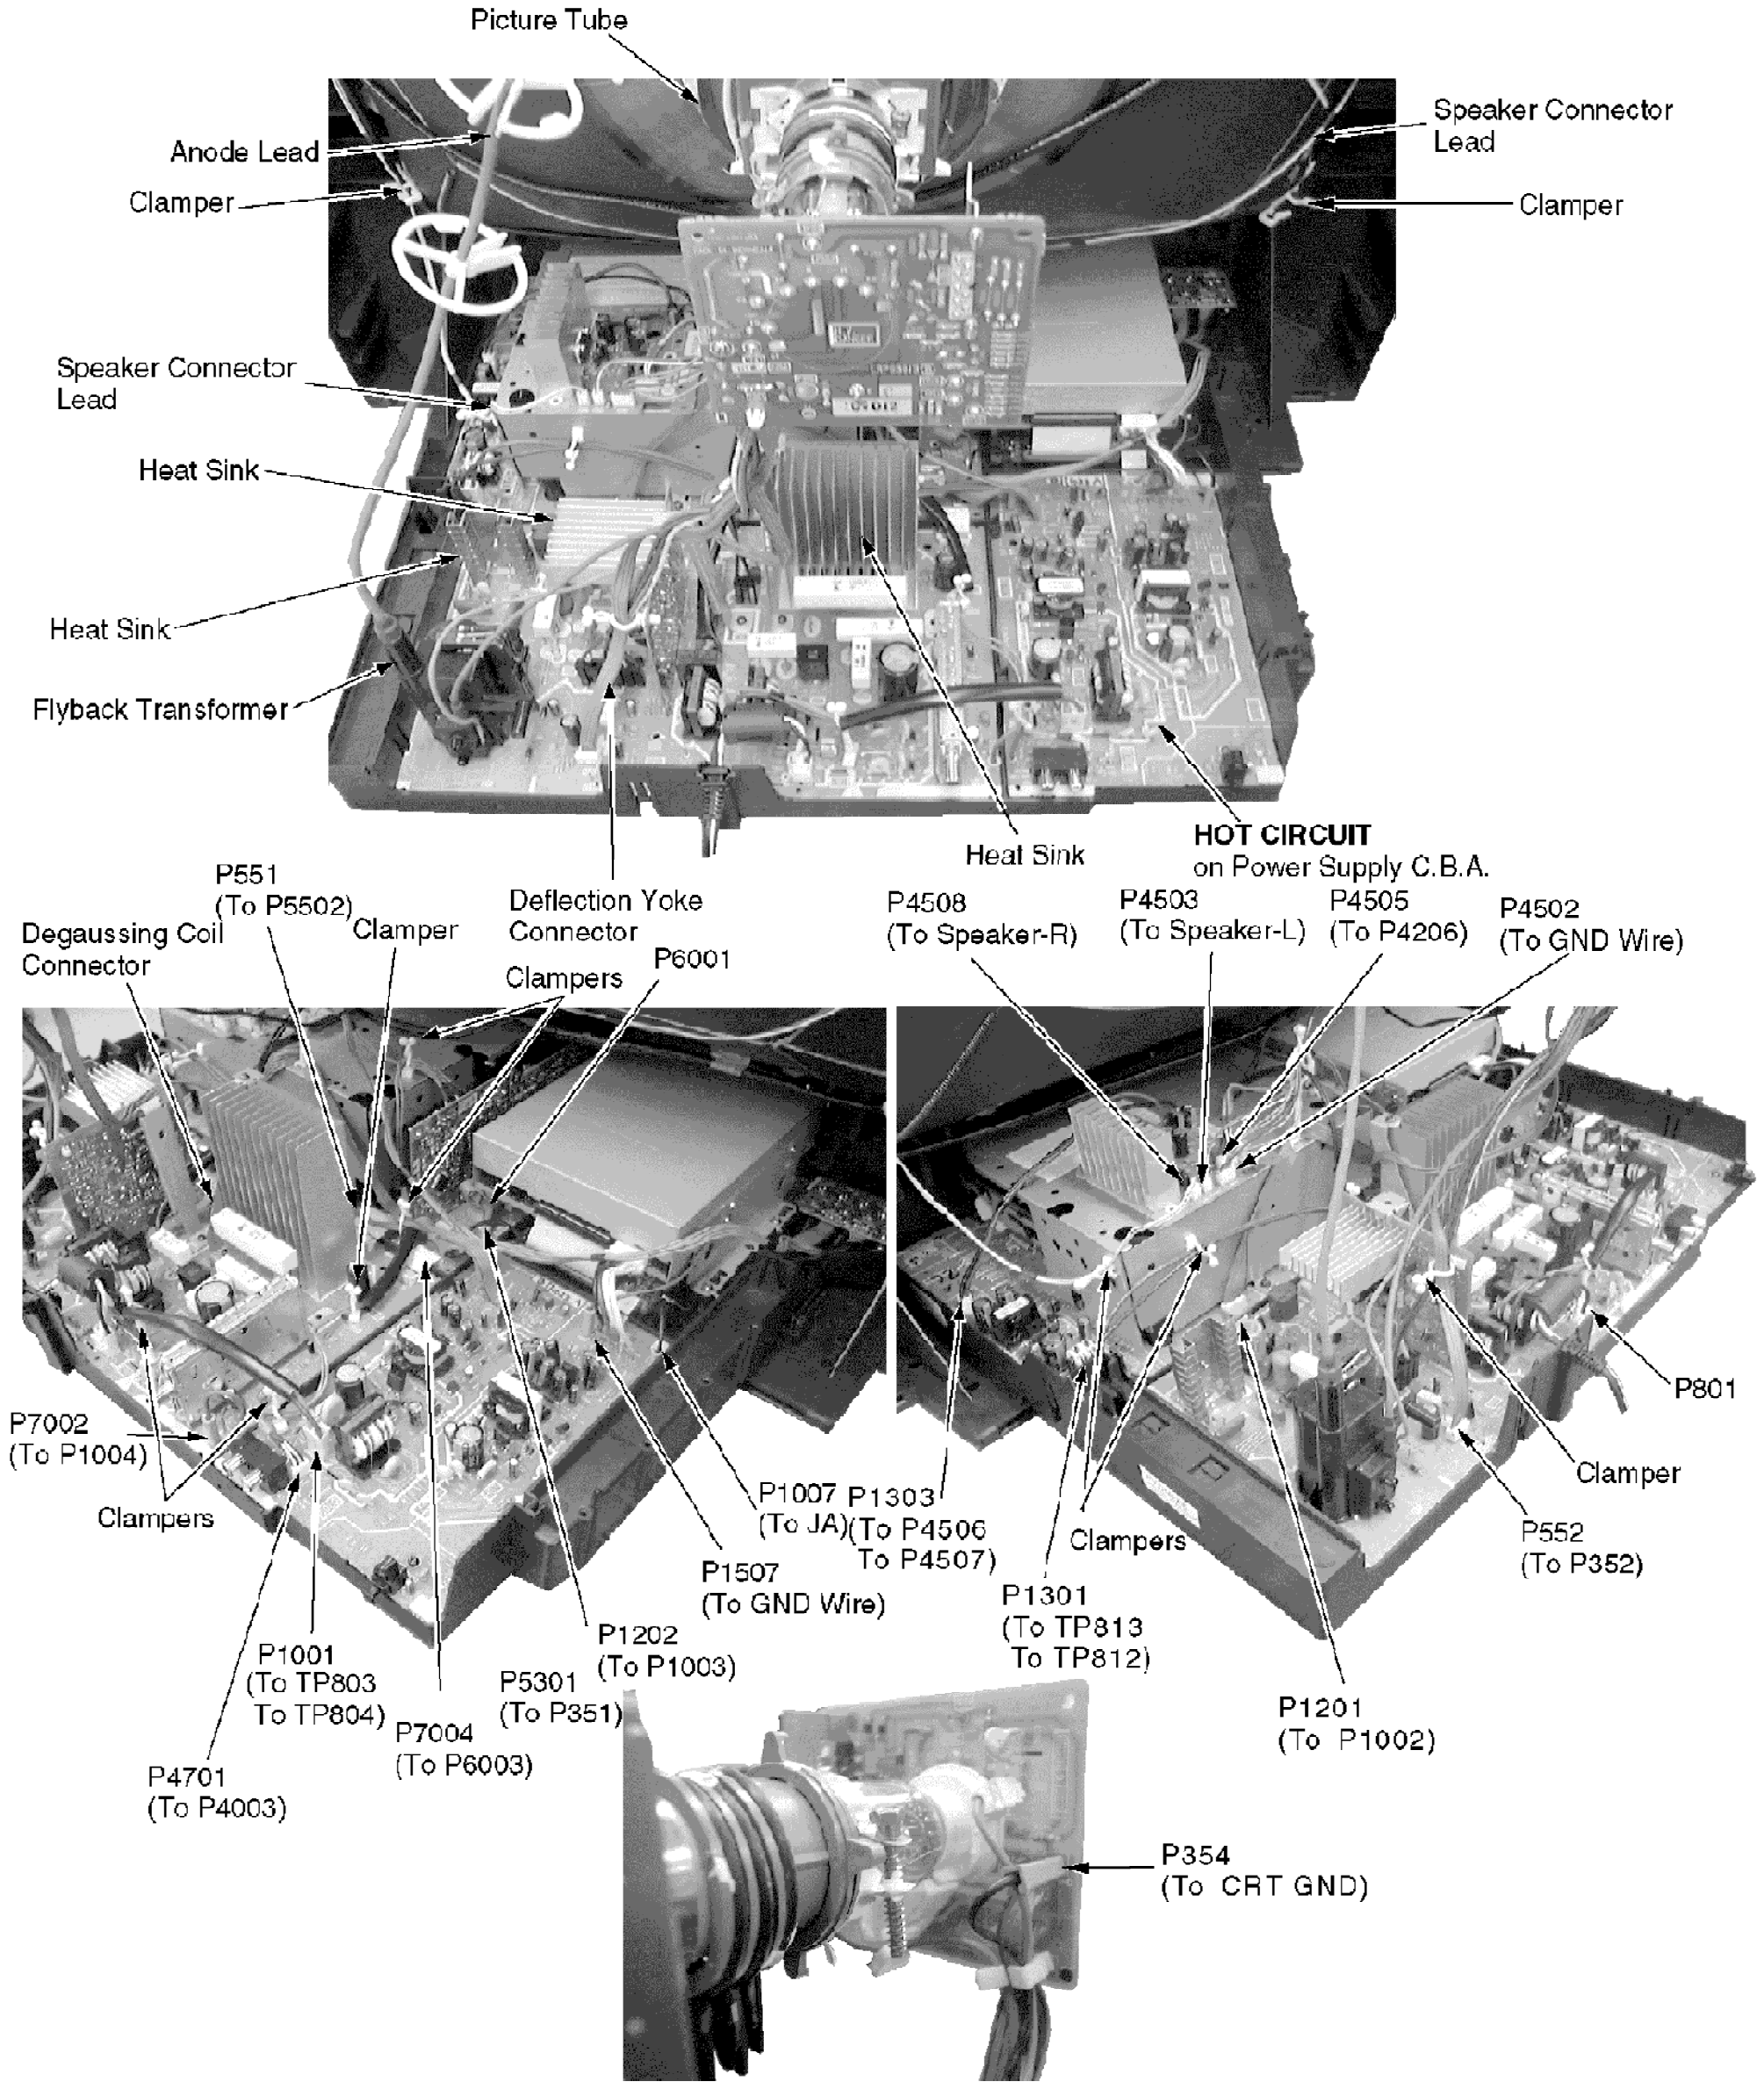
Picture Tube
Anode Lead
Clamper
Speaker Connector Lead
Heat Sink
Heat Sink
Flyback Transformer
Speaker Connector Lead
Clamper
Heat Sink
HOT CIRCUIT on Power Supply C.B.A.
P551 (To P5502)
Degaussing Coil Connector
Clamper
Deflection Yoke Connector
Clampers
P6001
P4508 (To Speaker-R)
P4503 (To Speaker-L)
P4505 (To P4206)
P4502 (To GND Wire)
P801
Clamper
P552 (To P352)
P7002 (To P1004)
Clampers
P1007 (To JA)
P1303 (To P4506 To P4507)
Clampers
P1507 (To GND Wire)
P1301 (To TP813 To TP812)
P1202 (To P1003)
P5301 (To P351)
P1001 (To TP803 To TP804)
P7004 (To P6003)
P4701 (To P4003)
P1201 (To P1002)
P354 (To CRT GND)

5.1.15. DEFEATING THE AUTO TRACKING

To defeat the Auto Tracking Function, place the instrument in the STOP mode and place a jumper between TP6003 and TP6009 on the Main C.B.A. The tracking will be placed in the neutral position.

5.1.16. HOW TO SET TRACKING TO THE NEUTRAL POSITION

Ejecting the cassette tape and then reinserting it will reset the tracking to the Neutral position.

5.1.17. BLACK SCREWS ON THE CHASSIS

Black Screws are used on the Mechanism Chassis to identify screws that require adjustment.

5.1.18. HOW TO RESET ALL COMBINATION DVD VCR MEMORY FUNCTIONS

To reset (clear) the select language, channel auto set and set clock functions to their initial

power on condition (power on, no cassette inserted), hold down the PLAY/REPEAT and FF buttons of VCR operation panel on the unit together formore than 5 seconds.
Power will shut off.

5.1.19. HOW TO CONFIRM AUTO CLOCK SET FEATURE

1. **Connect an RF cable from the output of one unit to the input of the test unit.**
2. **Select corresponding RF channels.**
3. **Playback a recording of P.B.S. channel including clock set data and confirm this feature.**

5.1.20. VARIABLE VOLTAGE ISOLATION TRANSFORMER

An Isolation Transformer should always be used during the servicing of Combination VCR whose chassis is not isolated from the AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personalinjury from electrical shocks. It will also protect Combination VCR from being damaged by accidental shorting that may occur during servicing.
Also, when troubleshooting the above type of Power Supply Circuit, a variable isolation transformer is required in order to increase the input voltage slowly.

5.1.21. SPECIAL NOTE

All integrated circuits and many other semiconductor devices are electrostatically sensitive and therefore require the special handling techniques described under the "ELECTROSTATICALLY SENSITIVE (ES) DEVICES" section of this service manual.

5.1.22. MODEL NO. IDENTIFICATION MARK

Use Marks shown in the chart below to distinguish the different models included in this Service Manual.

MODEL	MARK
PV-DM2792	A
PV-DM2792-K	B
Not Used	PT

Note:
Refer to Item 3 of Schematic Diagram Notes of Schematic Diagram and Circuit Board Layout Notes, for mark "PT."

6. DISASSEMBLY/ASSEMBLY PROCEDURES

6.1. CABINET SECTION

6.1.1. Disassembly Flowchart

Perform all disassembly procedures in the order described in the "Disassembly Flowchart" shown below. When reassembling, use the reverse procedure.

CAUTION:

Disconnect AC plug before disassembly.

Fig. D1

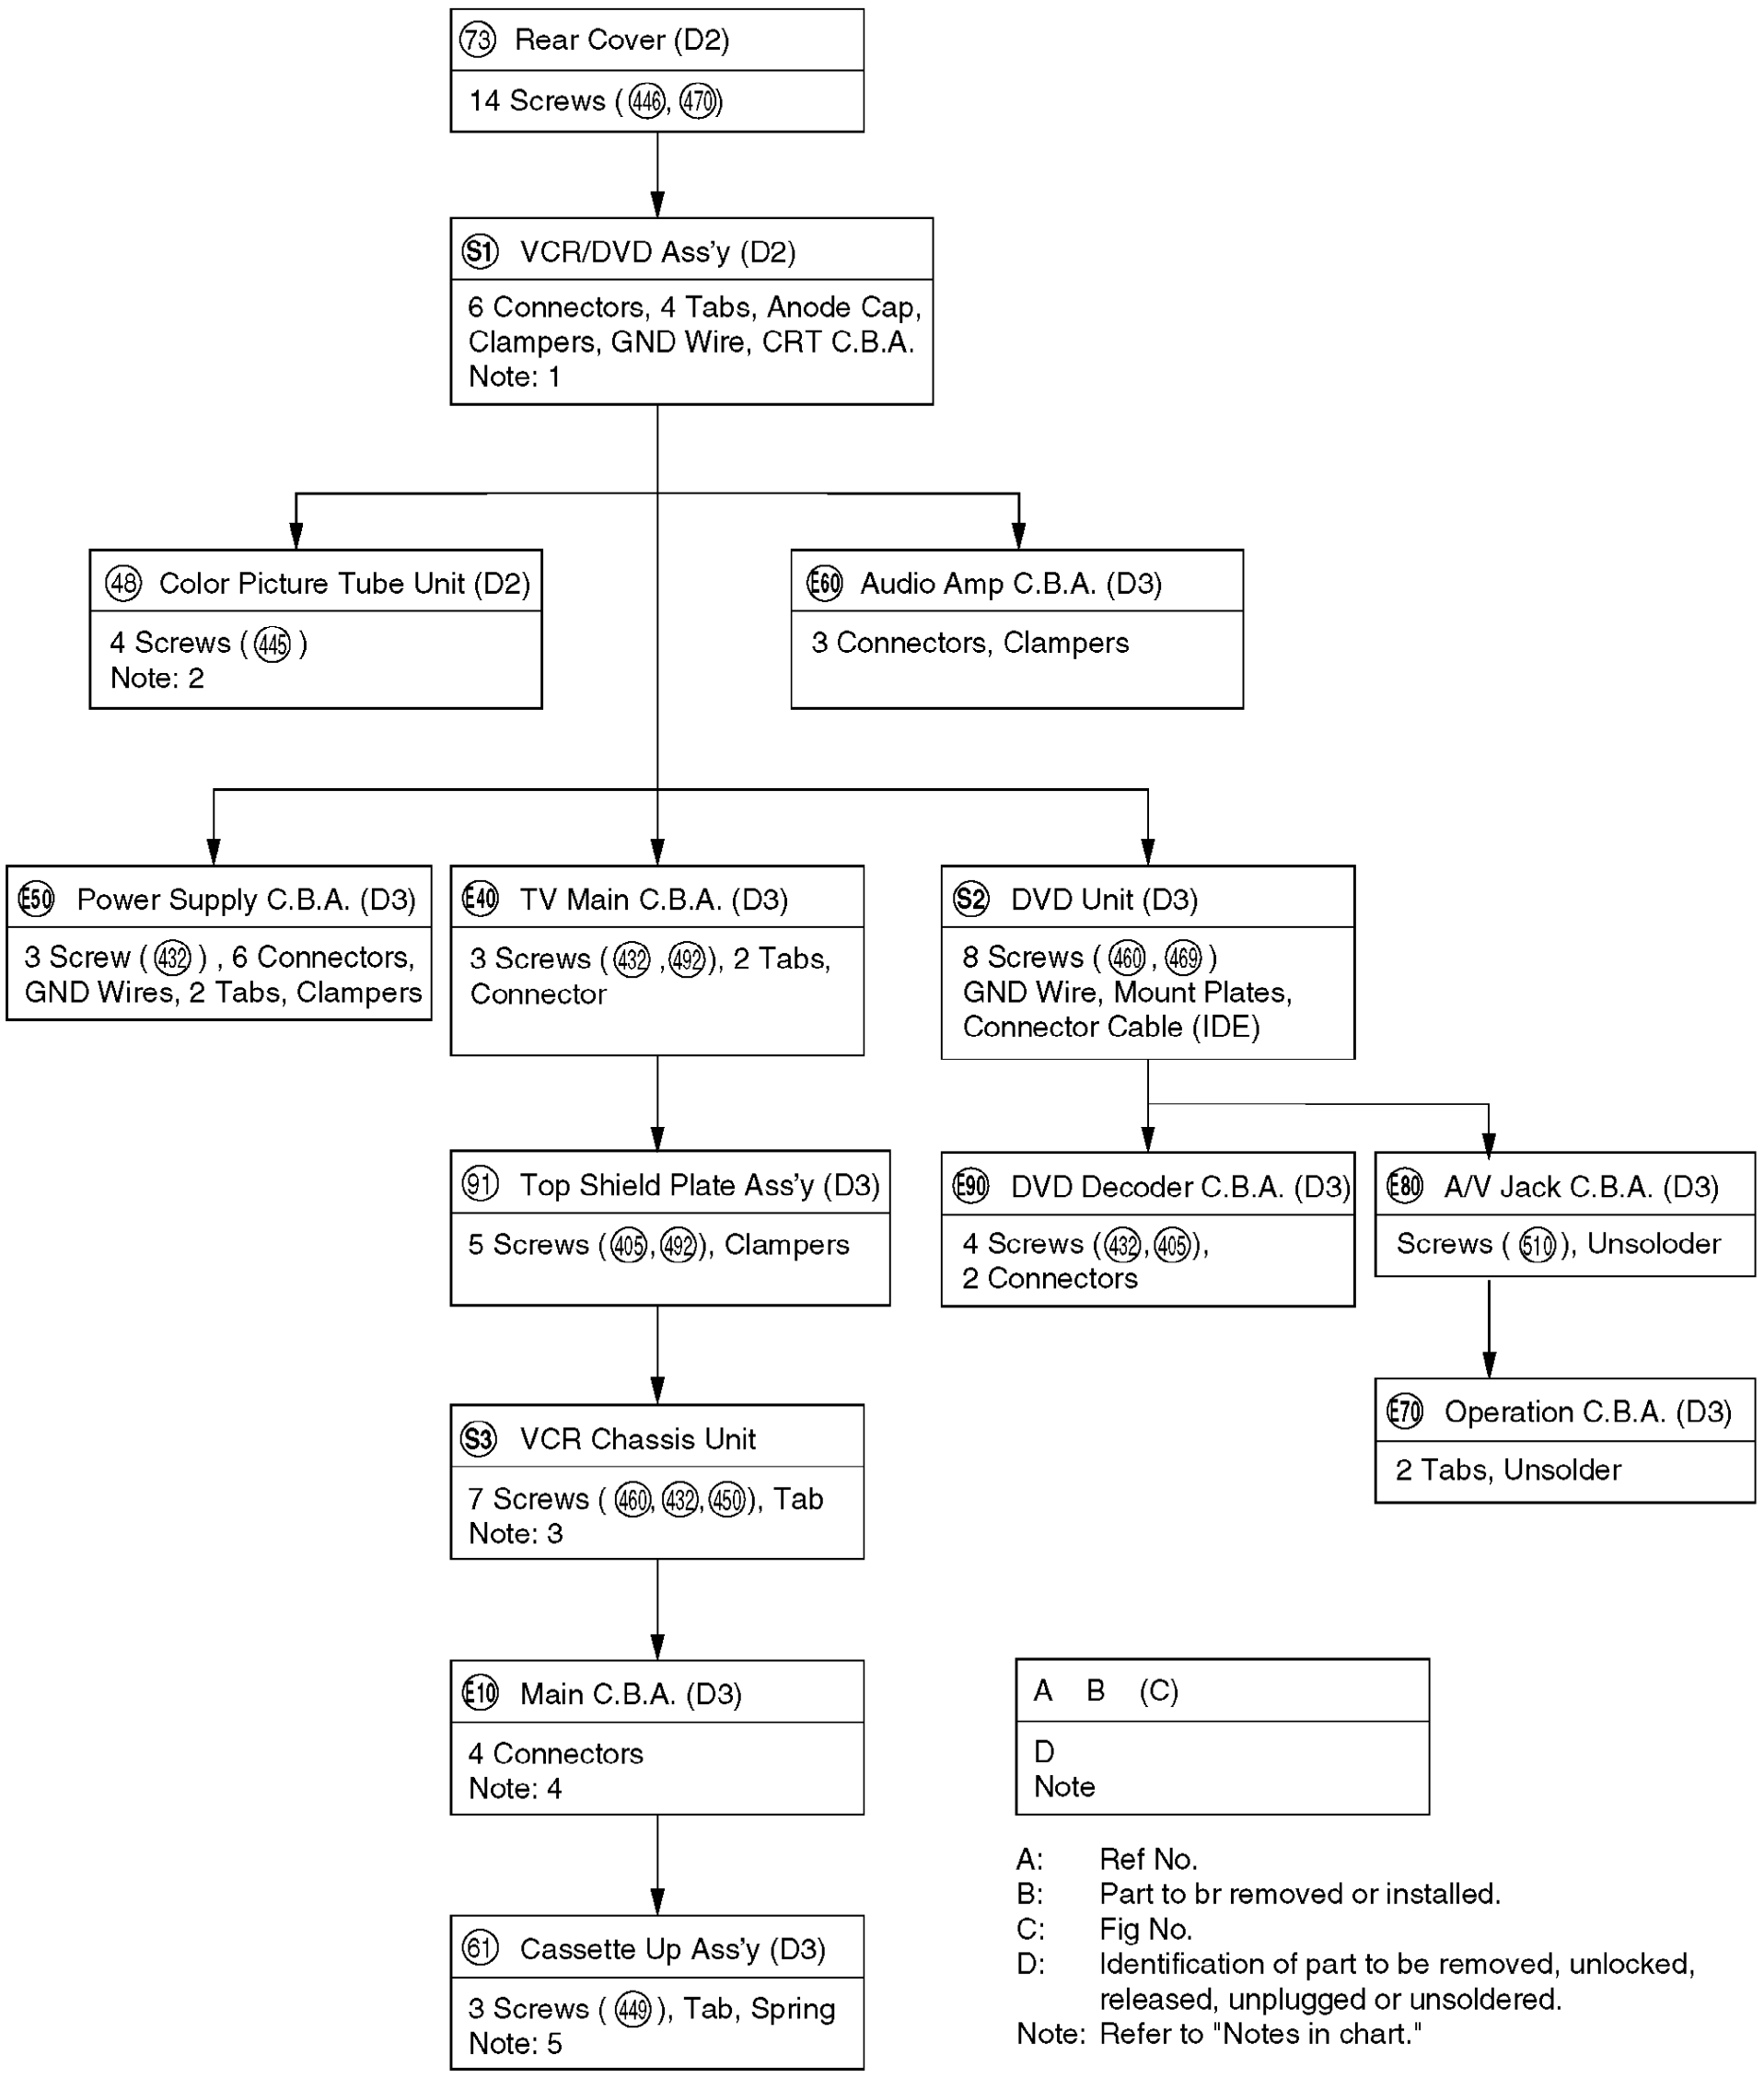
73 Rear Cover (D2)
14 Screws (446, 470)
S1 VCR/DVD Ass'y (D2)
6 Connectors, 4 Tabs, Anode Cap, Clampers, GND Wire, CRT C.B.A.
Note: 1
48 Color Picture Tube Unit (D2)
4 Screws (445)
Note: 2
E60 Audio Amp C.B.A. (D3)
3 Connectors, Clampers
E50 Power Supply C.B.A. (D3)
3 Screw (432), 6 Connectors, GND Wires, 2 Tabs, Clampers
E40 TV Main C.B.A. (D3)
3 Screws (432, 492), 2 Tabs, Connector
S2 DVD Unit (D3)
8 Screws (460, 469)
GND Wire, Mount Plates, Connector Cable (IDE)
91 Top Shield Plate Ass'y (D3)
5 Screws (405, 492), Clampers
E90 DVD Decoder C.B.A. (D3)
4 Screws (432, 405), 2 Connectors
E80 A/V Jack C.B.A. (D3)
Screws (510), Unsoloder
E70 Operation C.B.A. (D3)
2 Tabs, Unsolder
S3 VCR Chassis Unit
7 Screws (460, 432, 450), Tab
Note: 3
E10 Main C.B.A. (D3)
4 Connectors
Note: 4
61 Cassette Up Ass'y (D3)
3 Screws (449), Tab, Spring
Note: 5
A B (C)
D
Note

A: Ref No.
B: Part to br removed or installed.
C: Fig No.
D: Identification of part to be removed, unlocked, released, unplugged or unsoldered.
Note: Refer to "Notes in chart."

Fig. D2

IMPORTANT SAFETY NOTICE
COMPONENTS IDENTIFIED BY THE SIGN ⚠ HAVE SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY. WHEN REPLACING ANY OF THESE COMPONENTS, USE ONLY THE SPECIFIED PARTS.

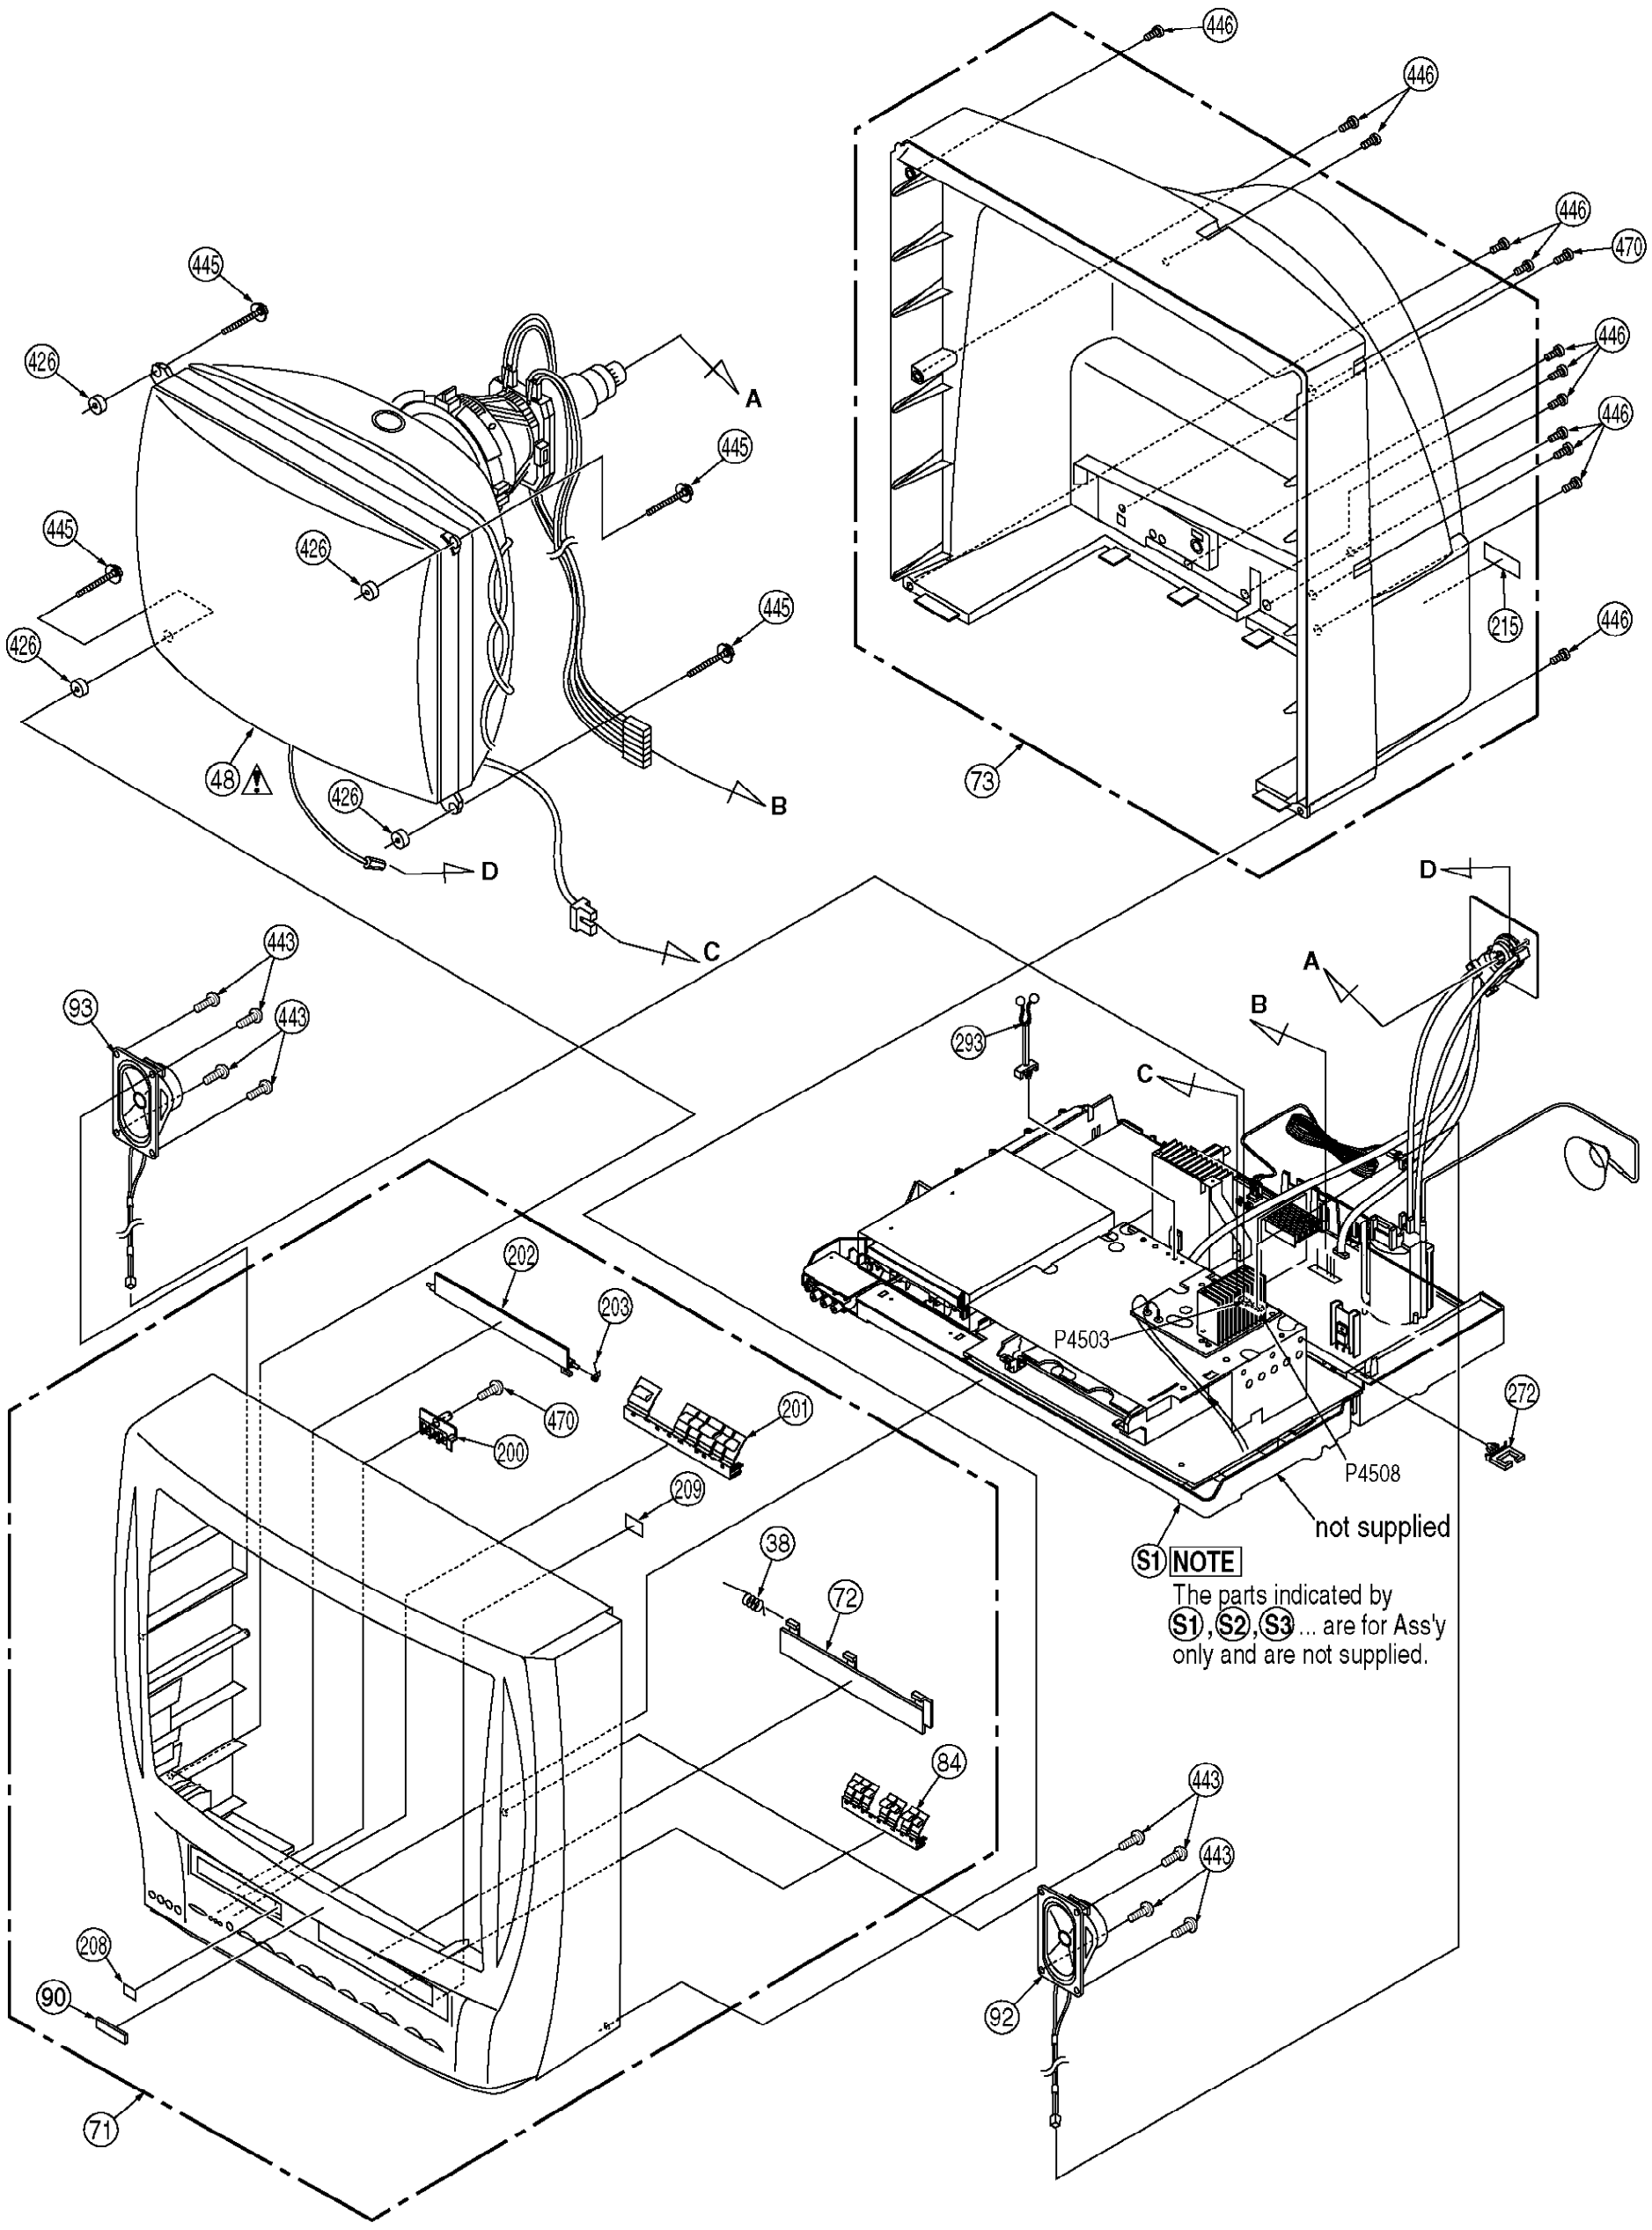
446
446
446
470
446
446
215
446
73
445
426
A
445
426
445
426
445
48 ⚠
426
B
D
C
443
93
443
D
A
B
293
C
P4503
P4508
272
not supplied
202
203
470
201
200
209
38
72
84
443
443
92
208
90
71

S1 **NOTE**
The parts indicated by S1, S2, S3 ... are for Ass'y only and are not supplied.

Fig. D3

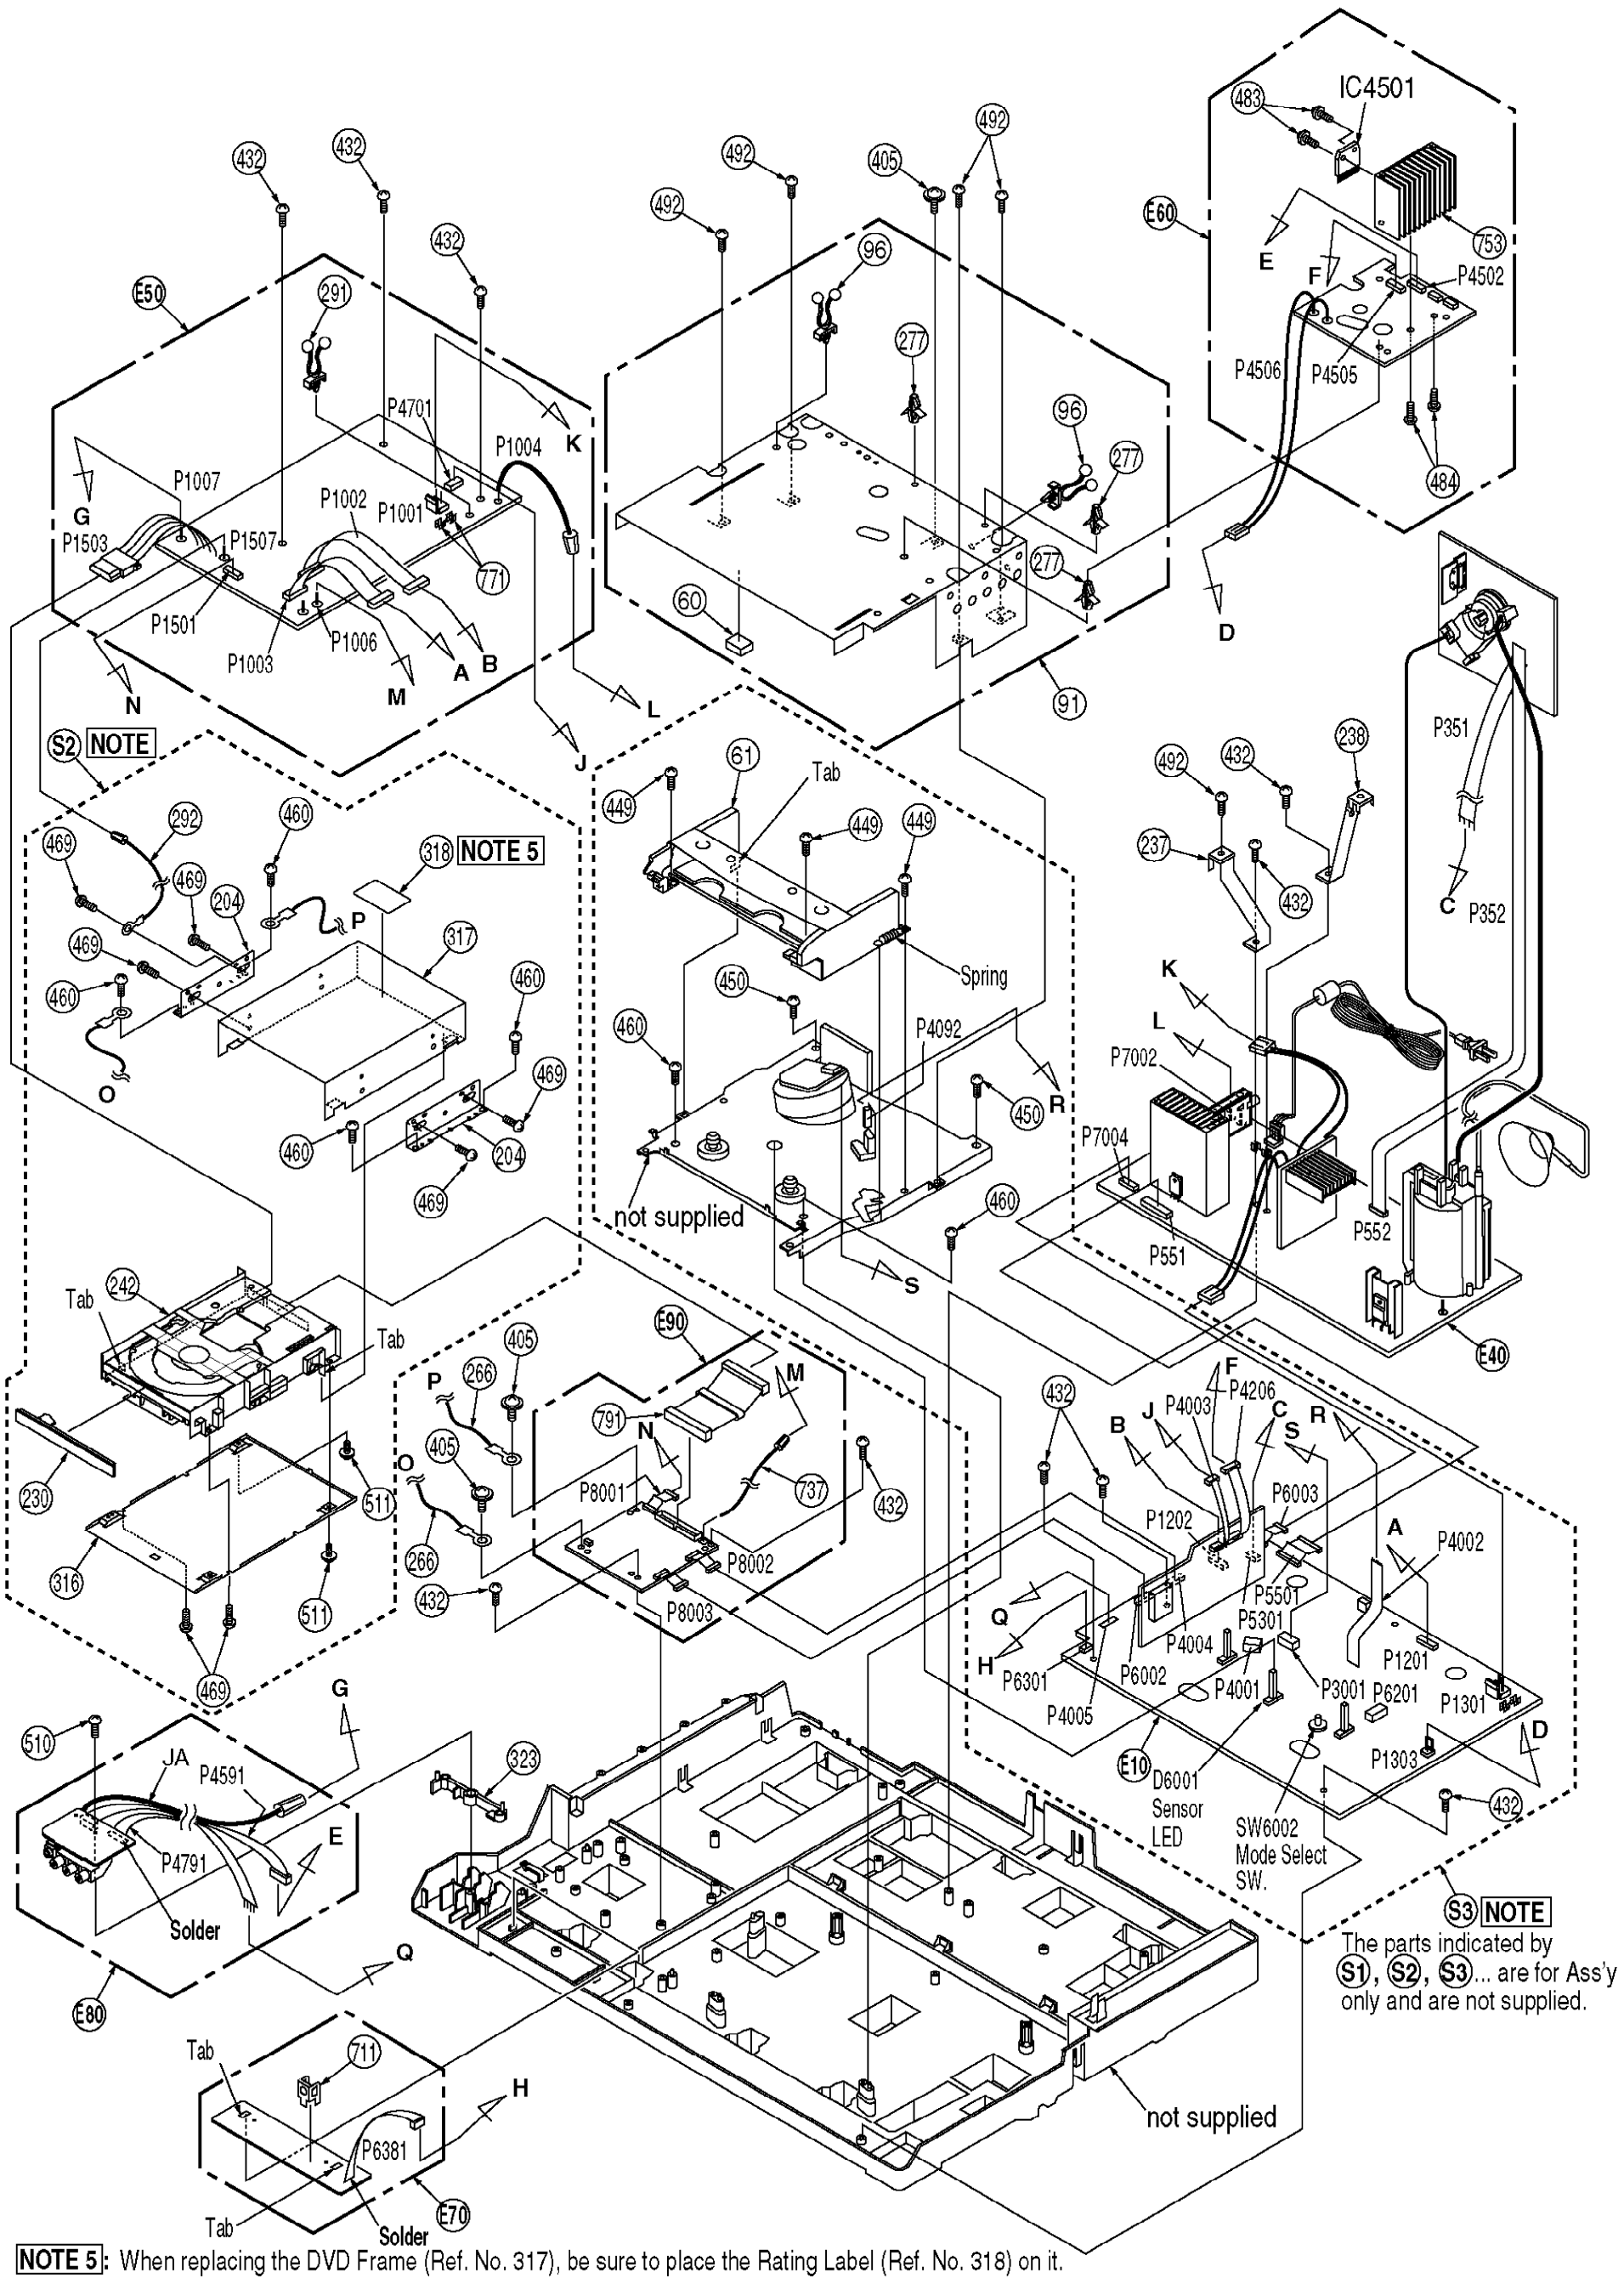
IC4501
483
E60
E
F
753
P4502
P4506
P4505
484
D
432
432
432
E50
291
P4701
K
P1004
P1007
P1002
P1001
G
P1503
P1507
771
P1501
P1003
P1006
M
A
B
N
L
J
492
492
405
492
96
277
96
277
277
60
91
S2 NOTE
292
460
318 NOTE 5
469
469
204
P
317
469
460
460
460
469
O
204
460
469
61
Tab
449
449
449
Spring
450
P4092
460
450
R
not supplied
460
S
492
432
238
237
432
P351
C
P352
K
L
P7002
P7004
P551
P552
E40
Tab
242
Tab
230
511
316
511
469
P
266
405
E90
M
791
N
O
405
P8001
737
432
266
432
P8002
P8003
432
F
B
J
P4003
P4206
C
S
R
P6003
P1202
A
P4002
Q
P5501
P5301
P4004
H
P6301
P6002
P4001
P3001
P6201
P1201
P1301
P4005
D
P1303
E10
D6001
Sensor
LED
SW6002
Mode Select
SW.
432
510
G
JA
P4591
323
E
P4791
Solder
Q
E80
Tab
711
H
P6381
Tab
Solder
E70
not supplied

S3 NOTE The parts indicated by S1, S2, S3... are for Ass'y only and are not supplied.

NOTE 5: When replacing the DVD Frame (Ref. No. 317), be sure to place the Rating Label (Ref. No. 318) on it.

6.1.1.1. Notes in chart

1. Removal of VCR/DVD Ass'y

Fig. D4

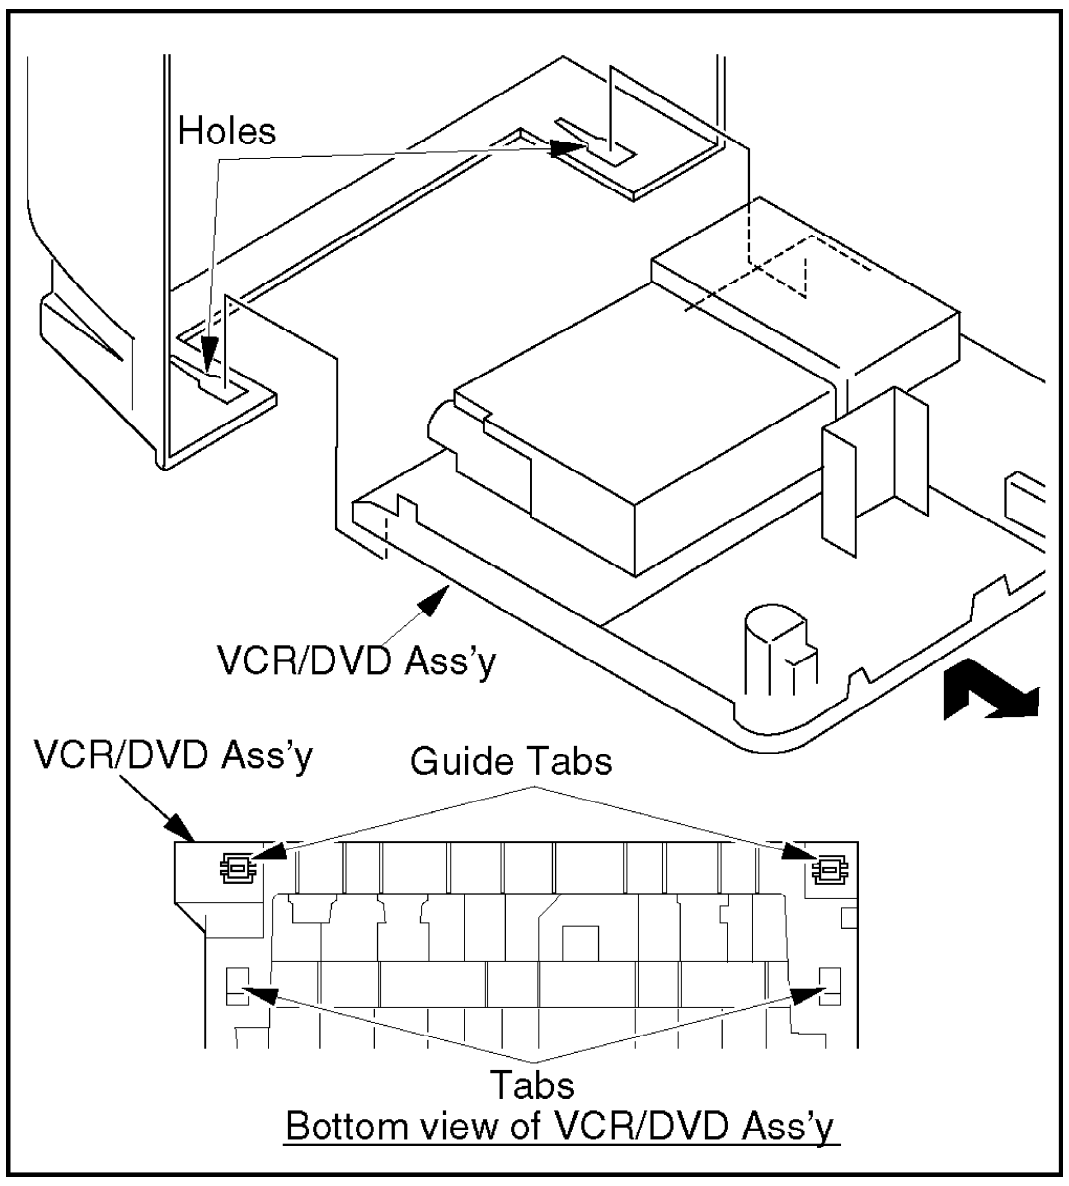
Holes
VCR/DVD Ass'y
VCR/DVD Ass'y
Guide Tabs
Tabs
Bottom view of VCR/DVD Ass'y

Installation of VCR/DVD Ass'y

CAUTION:

Opener Lever may be damaged when VCR/DVD Ass'y is installed, with Cassette Door-Lid and Opener Lever of Cassette Up Ass'y set incorrectly.

1. **When installing the VCR/DVD Ass'y, swing the Cassette Door-Lid all the way open until the Cassette Door tab clears the Opener Lever.**
2. **Make sure that all guide tabs are aligned properly. Then, press the VCR/DVD Ass'y straight in.**

Fig. D5

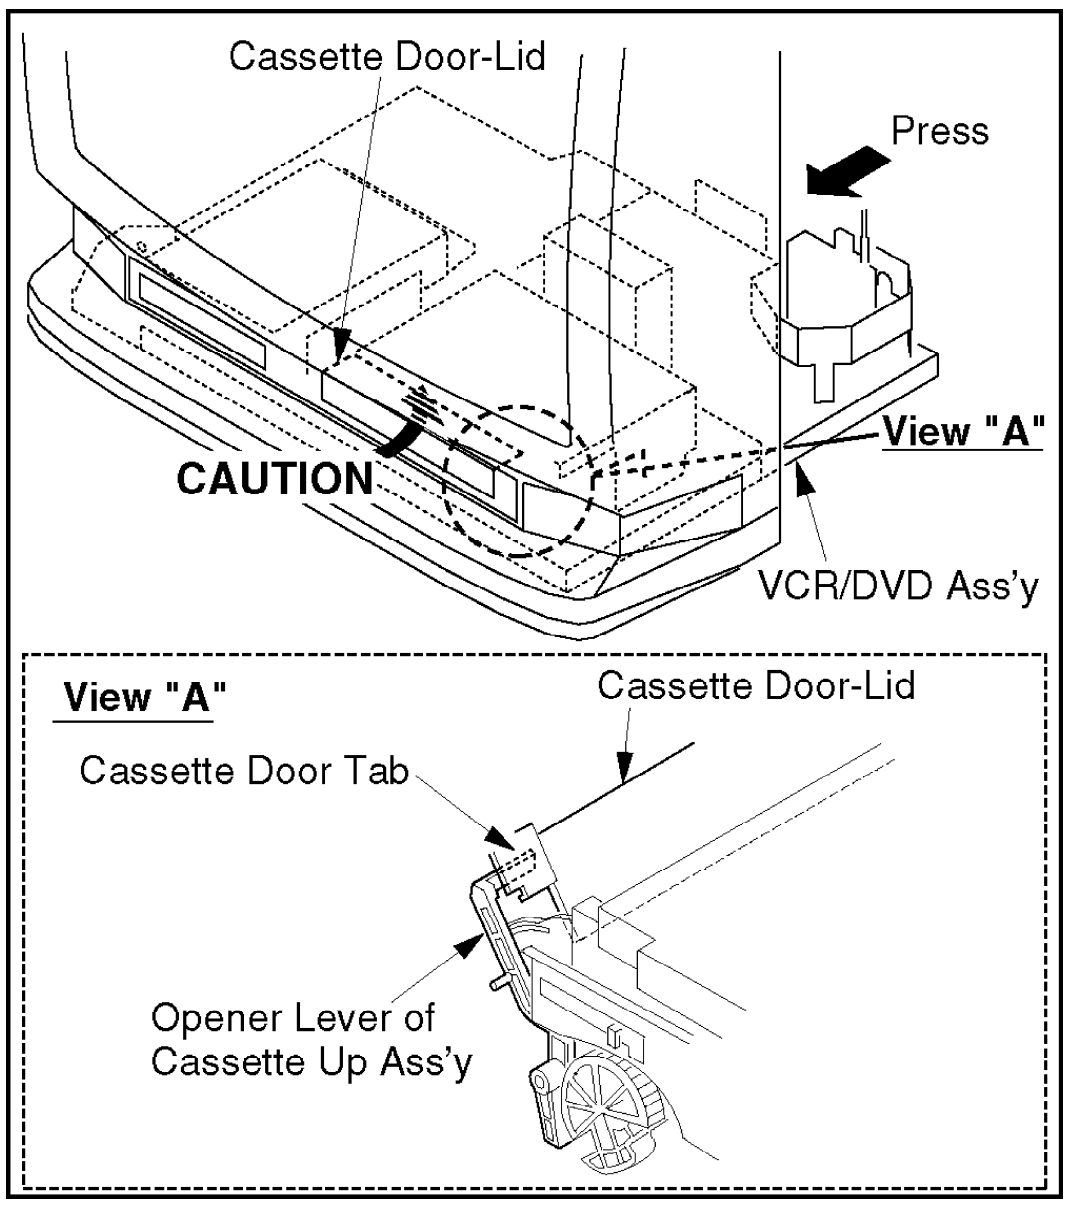
Cassette Door-Lid
Press
View "A"
CAUTION
VCR/DVD Ass'y
View "A"
Cassette Door-Lid
Cassette Door Tab
Opener Lever of
Cassette Up Ass'y

2. Removal of Color Picture Tube Unit
   Place the Unit face down on a soft cloth before removing the Color Picture Tube Unit.

3. Installation of VCR Chassis Unit
   When installing 2 Screws (460), slide the Holder Unit of the Cassette Up Ass'y (Refer to "WHEN LOADING WITHOUT A CASSETTE" in SERVICE NOTES) to tighten screws. Then, slide it back to the EJECT Position.
   Make sure that Mechanism and Cassette Up Ass'y are in the EJECT Position. (Refer to "EJECT Position Confirmation" in Disassembly/Assembly Procedures.)

4. Removal of Main C. B. A.
   Work carefully so as not to break Sensor LED when lifting the Mechanism Chassis and Cassette Up Ass'y.
   Installation of Mechanism Chassis and Cassette Up Ass’y onto Main C.B.A.
   A. Make sure the Mode Select SW. on the Main C.B.A. is in EJECT position. If not, rotate the Mode Select SW. until the alignment projection is in the EJECT Position.
   B. Make sure the Mechanism and Cassette Up Ass’y are in the EJECT Position. (Refer to "EJECT Position Confirmation" in DISASSEMBLY/ASSEMBLY PROCEDURES.)

Fig. D6

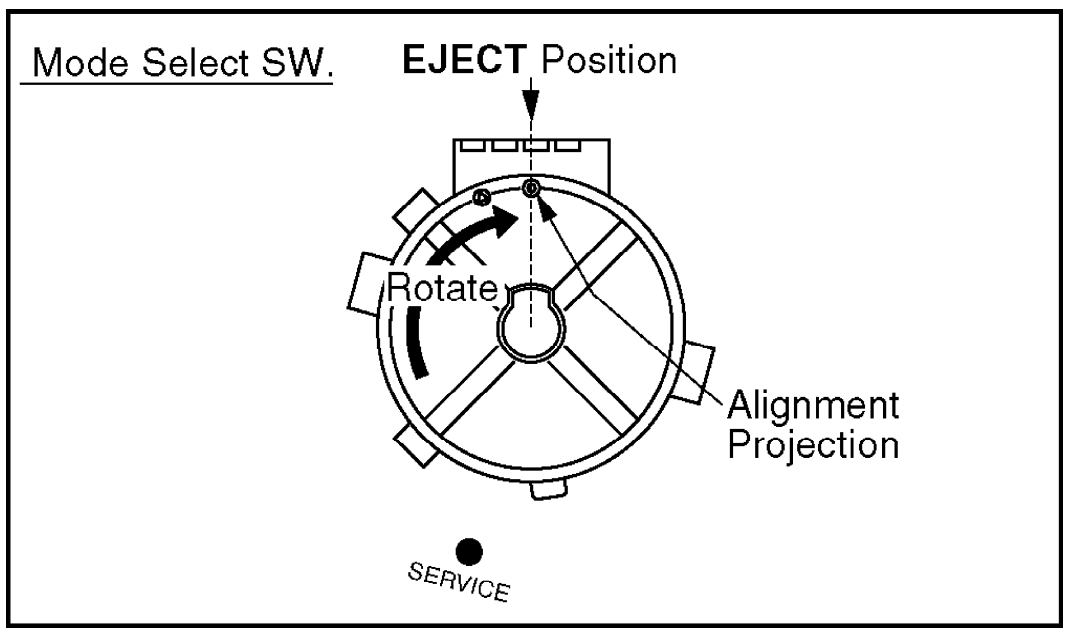

   C. Install the Mechanism Chassis and Cassette Up Ass’y straight onto the Main C.B.A. so that the Sensor LED clears the hole in the Mechanism Chassis and that 3 Connectors (P6201, P3001 and P4001) are aligned and seated securely.

5. Installation of Cassette Up Ass'y
   A. Confirm that the Locking Tab under the Cassette Up Ass'y is in

Hole on the Mechanism Chassis when installing the Cassette Up Ass'y. Then, slide the Cassette Up Ass'y towards the back.

B. When installing 2 Screws (449), slide the Holder Unit (Refer to "WHEN LOADING WITHOUT A CASSETTE" in SERVICE NOTES) to tighten screws. Then, slide it back to the EJECT Position.

C. Hook Spring to the Drive Rack Arm on the Mechanism Chassis.

6.2. MECHANISM SECTION

6.2.1. Disassembly/Reassembly Method

This procedure starts with the condition that the cabinet parts and TV/VCR Main C.B.A. have been removed.
When reassembling, perform the step(s) in the reverse order.
Perform all disassembly/reassembly and alignments procedures in EJECT Position.

Step/Loc. No.	Prior Step(s)	Part	Fig. No.	Remove	Alignment/Adjustment
①	------------	Not used	-	-	
②	------------	Full Erase Head	J2	(L-1)	
③	1	Cylinder Unit	J2	2(S-2), 3(S-3), Flexible Cable, Head Amp C.B.A., Unsolder	TAPE INTERCHANGEABILITY Adjustment
④	------------	Capstan Belt	J3-1	-	
⑤	------------	Support Angle	J3-1	(S-4), (S-5)	
⑥	5	Intermediate Gear B	J3-1	(L-2)	Gear Alignment
⑦	4,5,6	Main Cam Gear	J3-1	Main Cam Push Nut	Gear Alignment
⑧	4	Center Clutch Unit	J4-1	(W-1)	
⑨	4,8	Changing Gear Spring	J4-1	-	
⑩	4,8,9	Changing Gear	J4-1	-	
⑪	4,8,9,10	Idler Arm Unit	J4-1	-	
⑫	------------	Reel Gear	J5-1	2(L-3)	
⑬	4,5,6,7,8,9,10	Main Rod	J5-1	(W-2), (L-4)	Gear Alignment
⑭	------------	Not used	-	-	
⑮	4	Capstan Motor Unit	J6	3(S-6)	
⑯	------------	Not used	-	-	
⑰	------------	Not used	-	-	
⑱	------------	Not used	-	-	
⑲	4,8,9,10,13	T Loading Arm Unit	J7-1	-	Gear Alignment
⑳	4,5,6,7,8,9,10,13,19	S Loading Arm Unit	J7-1	-	Gear Alignment
㉑	------------	T Brake Unit	J8-1	-	
㉒	------------	Tension Control Arm Unit	J8-1	3(L-5)	
㉓	21	T Reel Table	J8-1	-	
㉔	22	S Reel Table	J8-1	-	
㉕	22	Tension Arm Unit	J8-1	2(L-6), (P-1), (P-2)	
㉖	22,25	Loading Post Base-T Unit	J9	-	P2 AND P3 POST HEIGHT, TAPE INTERCHANGEABILITY Adjustment
㉗	22,25	Loading Post Base-S Unit	J9	-	
㉘	------------	Opener Piece	J10-1	2(L-7)	
㉙	4,5,6,7	Drive Rack Arm	J10-1	-	
㉚	28	Pinch Arm Unit	J10-1	-	
㉛	28,30	P5 Arm Unit	J10-1	-	
㉜	5,6,28	Intermediate Gear A	J10-1	-	Gear Alignment
㉝	------------	Motor Block Unit	J11	2(S-9)	
㉞	------------	Audio Control Head Unit	J11	(S-10)	TAPE INTERCHANGEABILITY Adjustment
㉟	5,6,28,30,32,33	Lift Gear	J11	-	
㊱	------------	Not used	-	-	
㊲	22,25	Tension Arm Boss	J11	(L-8)	
㊳	------------	SS Brake Arm Unit	J5-1	(L-9), (P-3)	

6.2.2. Inner Parts Location

Note: BOX indicates alignment (Gear Alignment or Mechanical Adjustment) required when a part is replaced.

Fig. J1-1

TOP VIEW

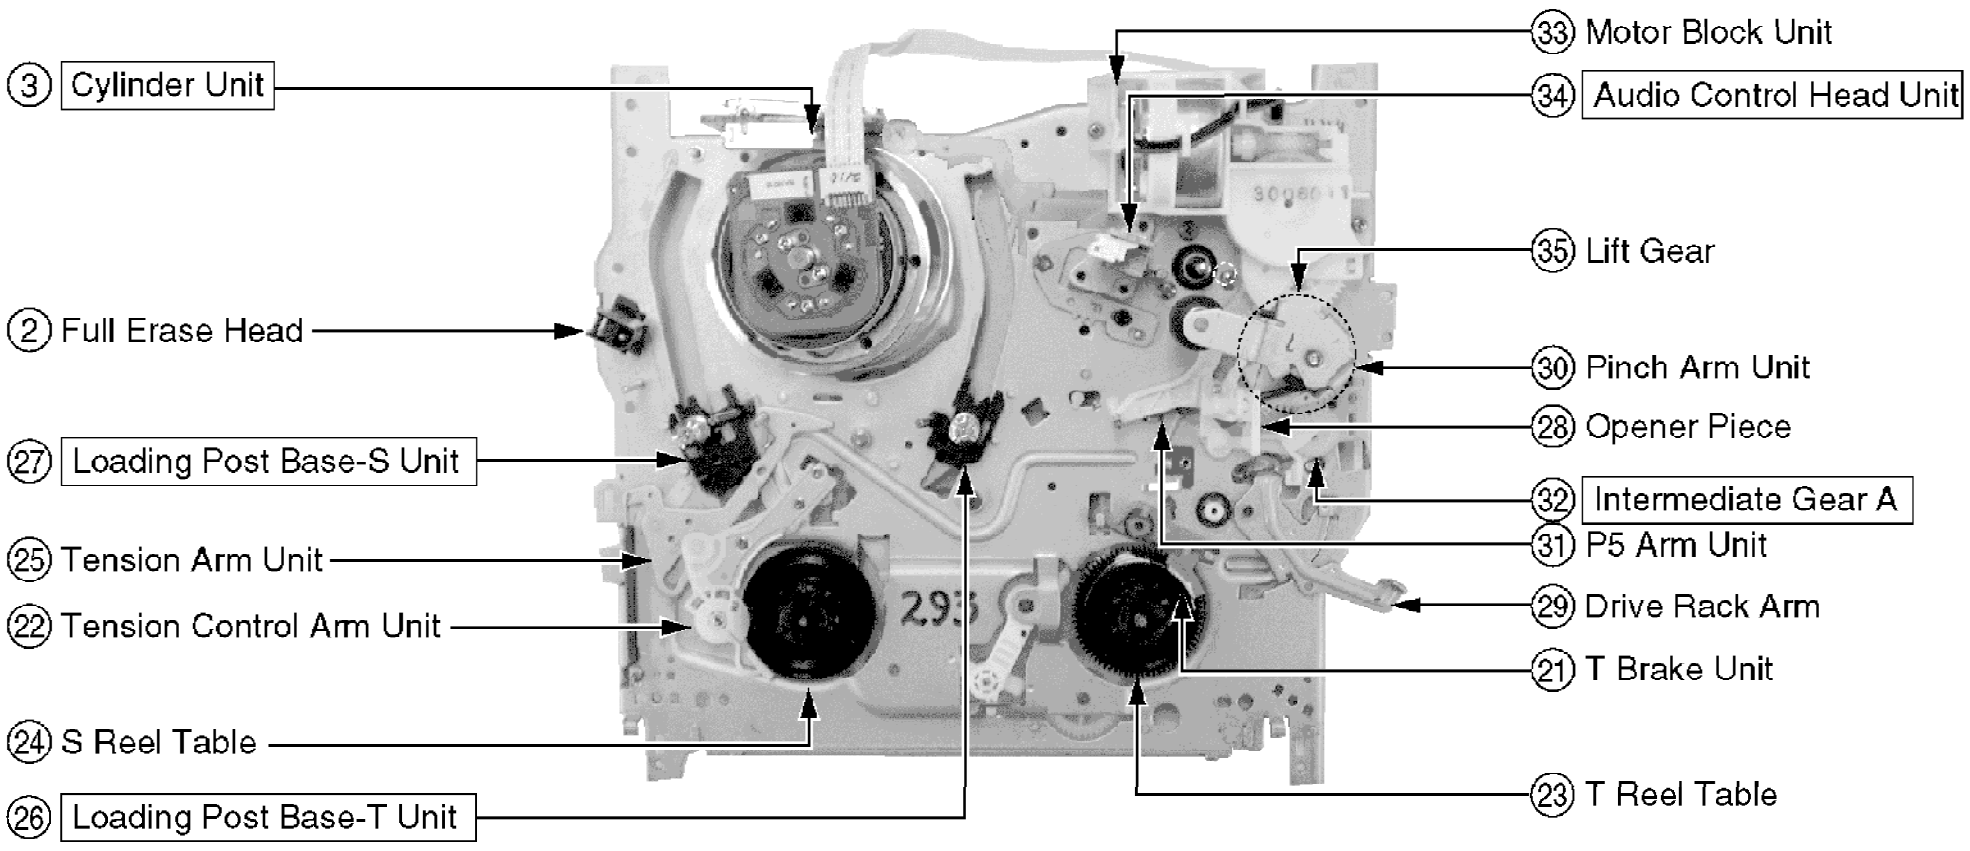
③ Cylinder Unit
② Full Erase Head
㉗ Loading Post Base-S Unit
㉕ Tension Arm Unit
㉒ Tension Control Arm Unit
㉔ S Reel Table
㉖ Loading Post Base-T Unit
㉝ Motor Block Unit
㉞ Audio Control Head Unit
㉟ Lift Gear
㉚ Pinch Arm Unit
㉘ Opener Piece
㉜ Intermediate Gear A
㉛ P5 Arm Unit
㉙ Drive Rack Arm
㉑ T Brake Unit
㉓ T Reel Table
293

BOTTOM VIEW

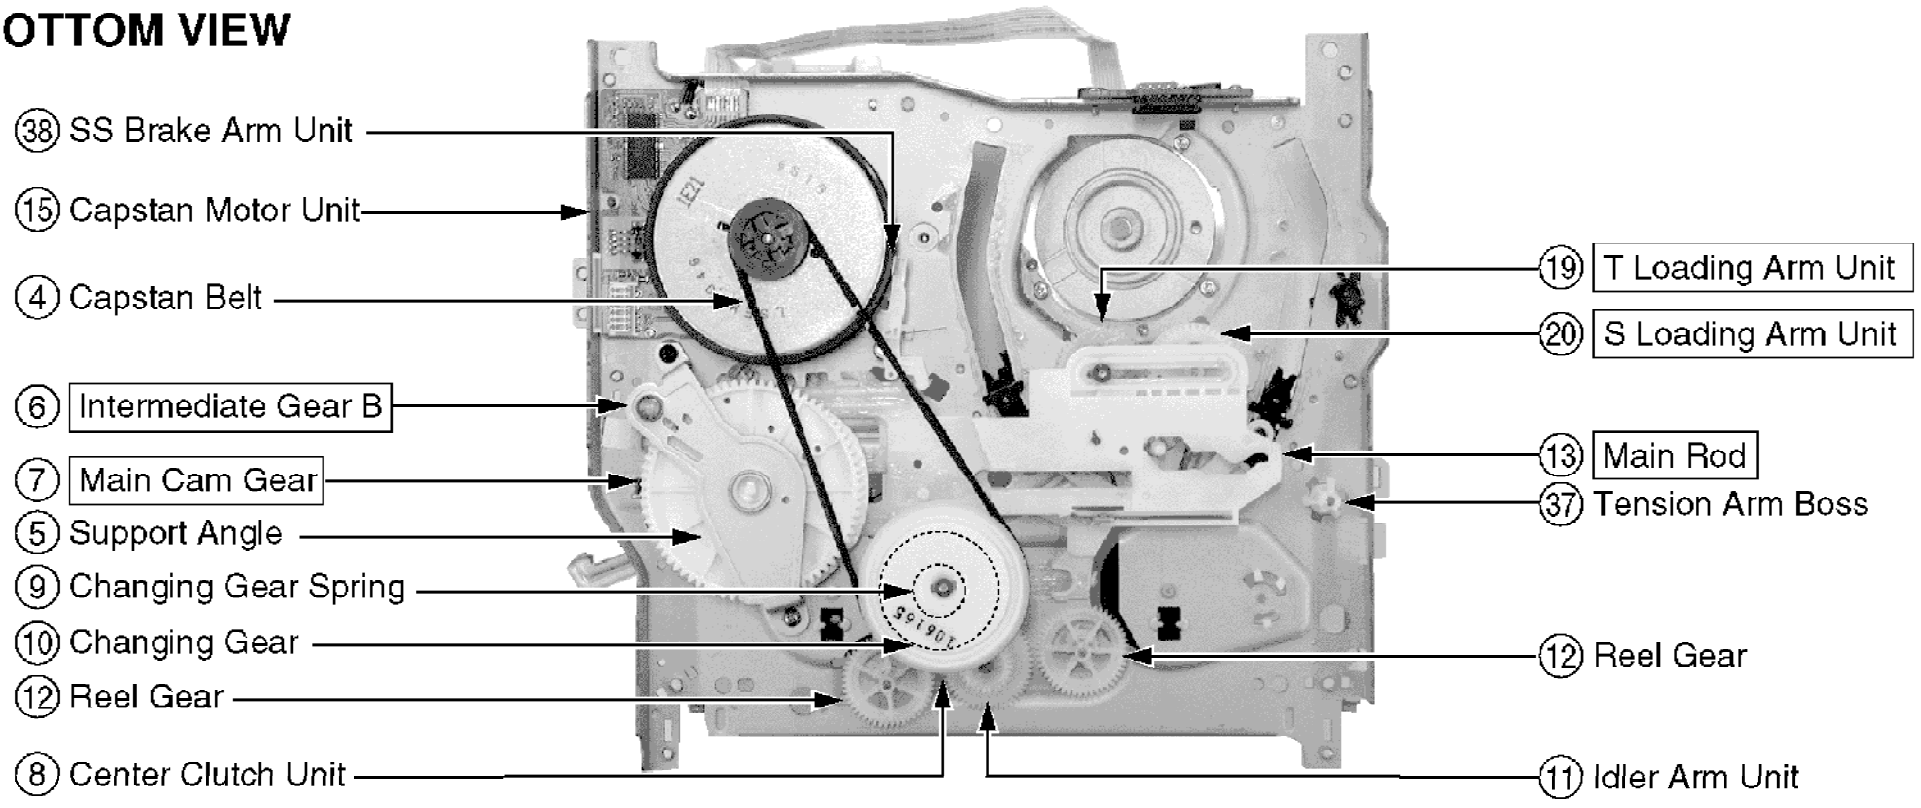
㊳ SS Brake Arm Unit
⑮ Capstan Motor Unit
④ Capstan Belt
⑥ Intermediate Gear B
⑦ Main Cam Gear
⑤ Support Angle
⑨ Changing Gear Spring
⑩ Changing Gear
⑫ Reel Gear
⑧ Center Clutch Unit
⑲ T Loading Arm Unit
⑳ S Loading Arm Unit
⑬ Main Rod
㊲ Tension Arm Boss
⑫ Reel Gear
⑪ Idler Arm Unit

6.2.3. EJECT Position Confirmation

Fig. J1-2

Check the following alignment points to confirm that the Mechanism and Cassette Up Ass'y are in the **EJECT** Position from the top side.

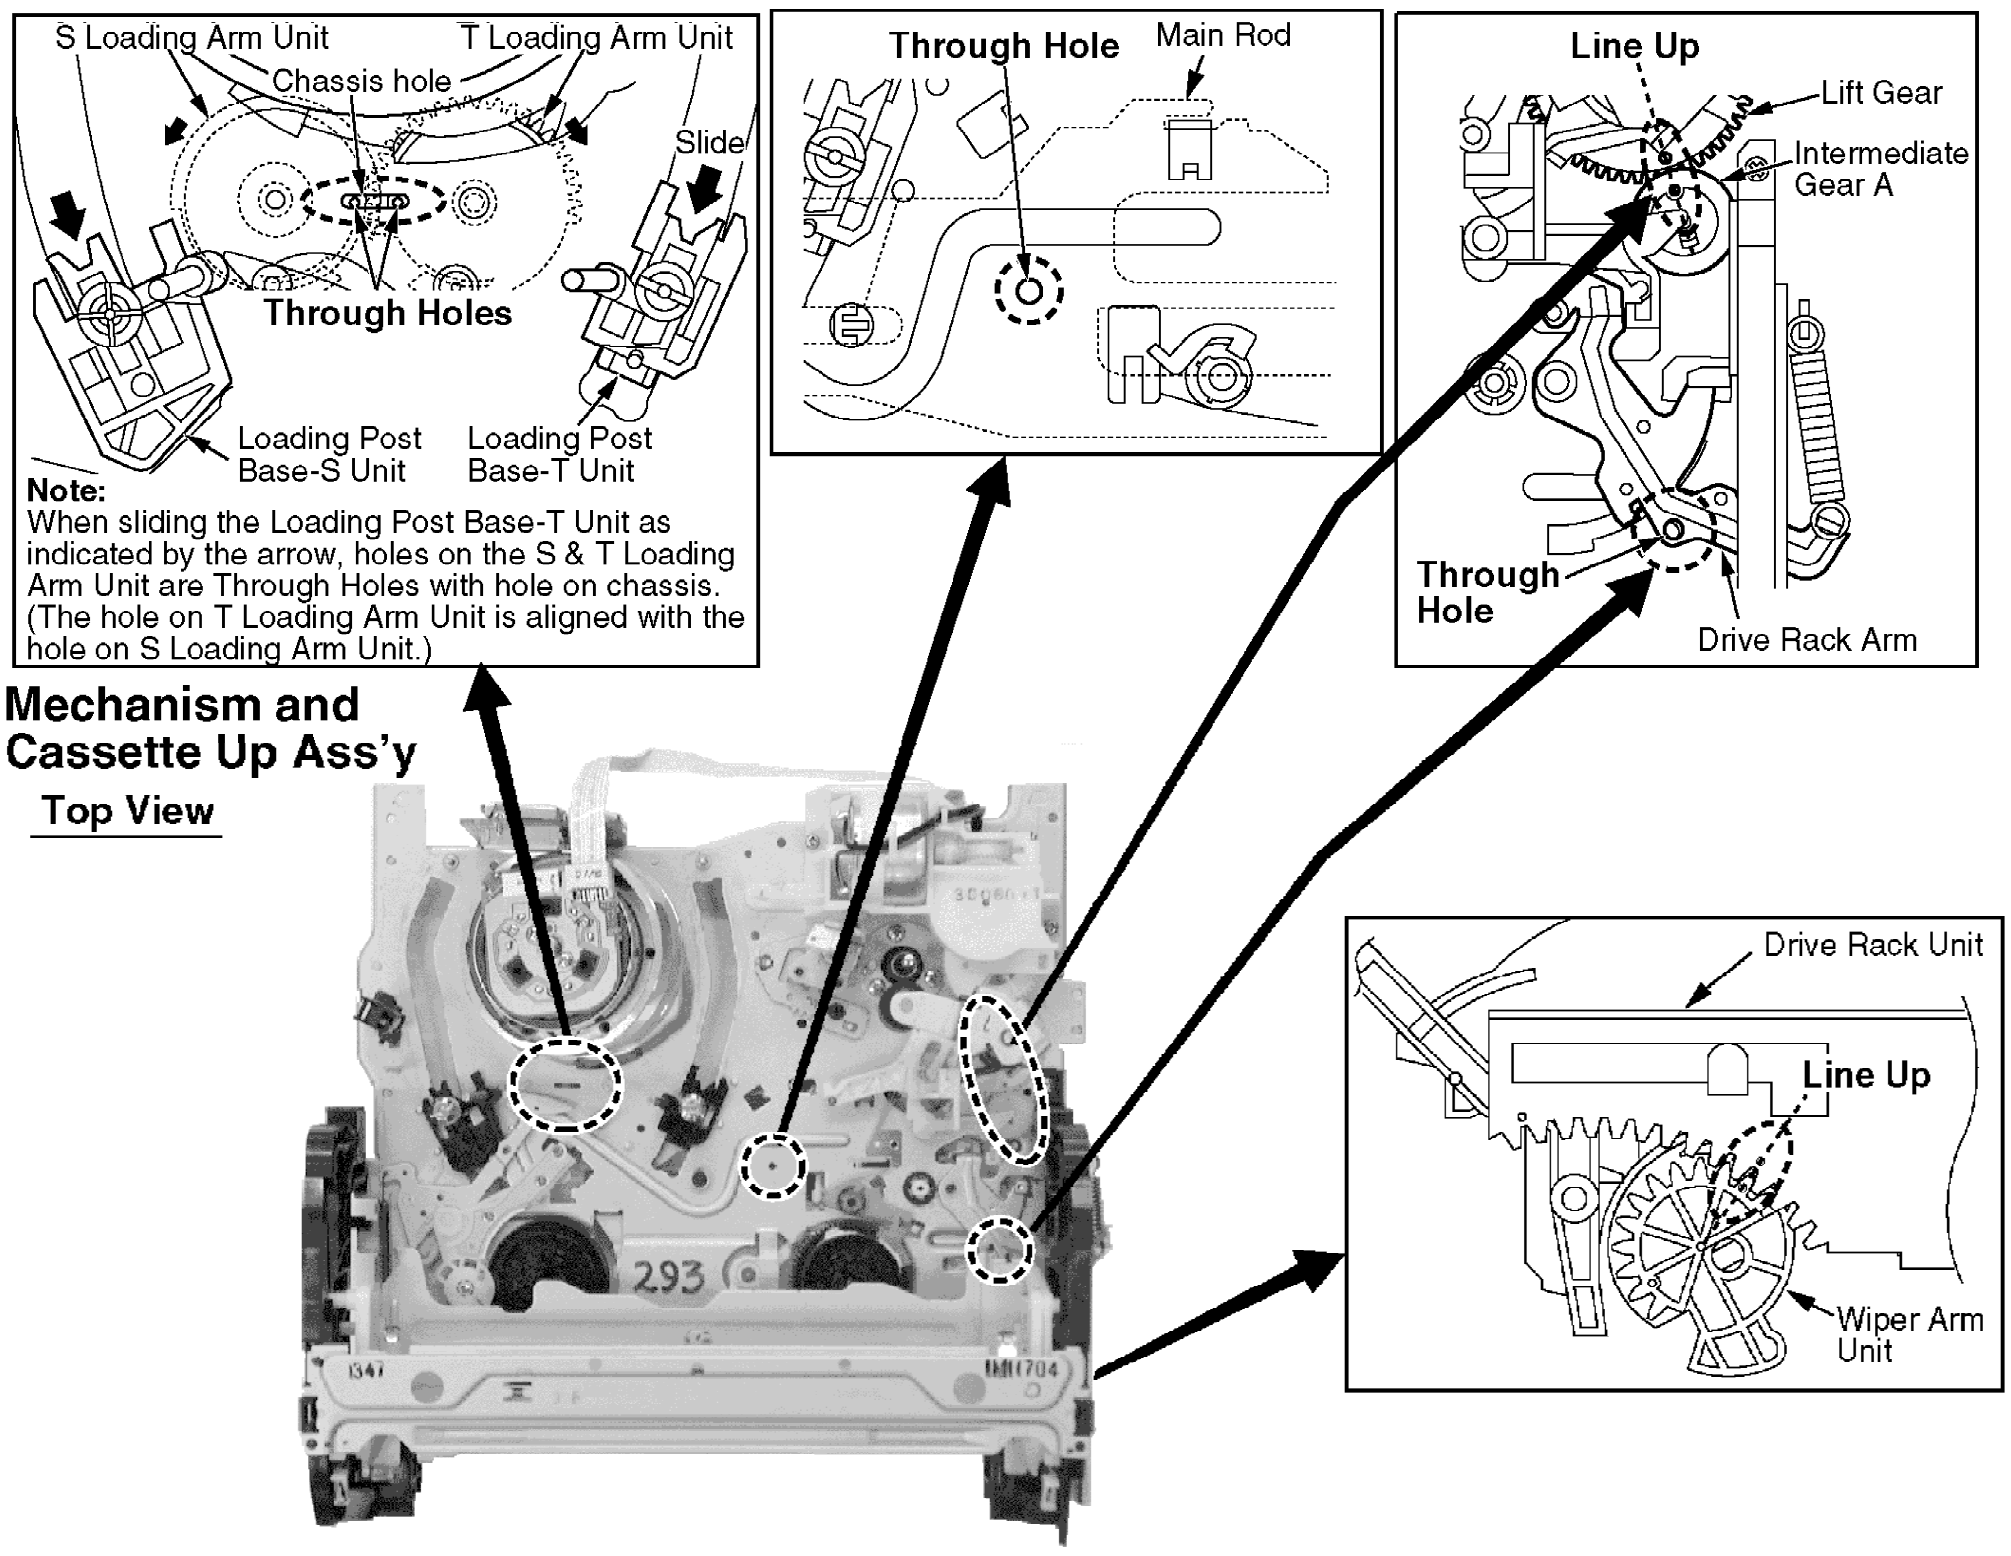
S Loading Arm Unit
T Loading Arm Unit
Chassis hole
Slide
Through Holes
Loading Post Base-S Unit
Loading Post Base-T Unit
Through Hole
Main Rod
Line Up
Lift Gear
Intermediate Gear A
Through Hole
Drive Rack Arm
Mechanism and Cassette Up Ass'y
Top View
Drive Rack Unit
Line Up
Wiper Arm Unit
293

Note:
When sliding the Loading Post Base-T Unit as indicated by the arrow, holes on the S & T Loading Arm Unit are Through Holes with hole on chassis. (The hole on T Loading Arm Unit is aligned with the hole on S Loading Arm Unit.)

6.2.4. Full Erase Head and Cylinder Unit

Fig. J2

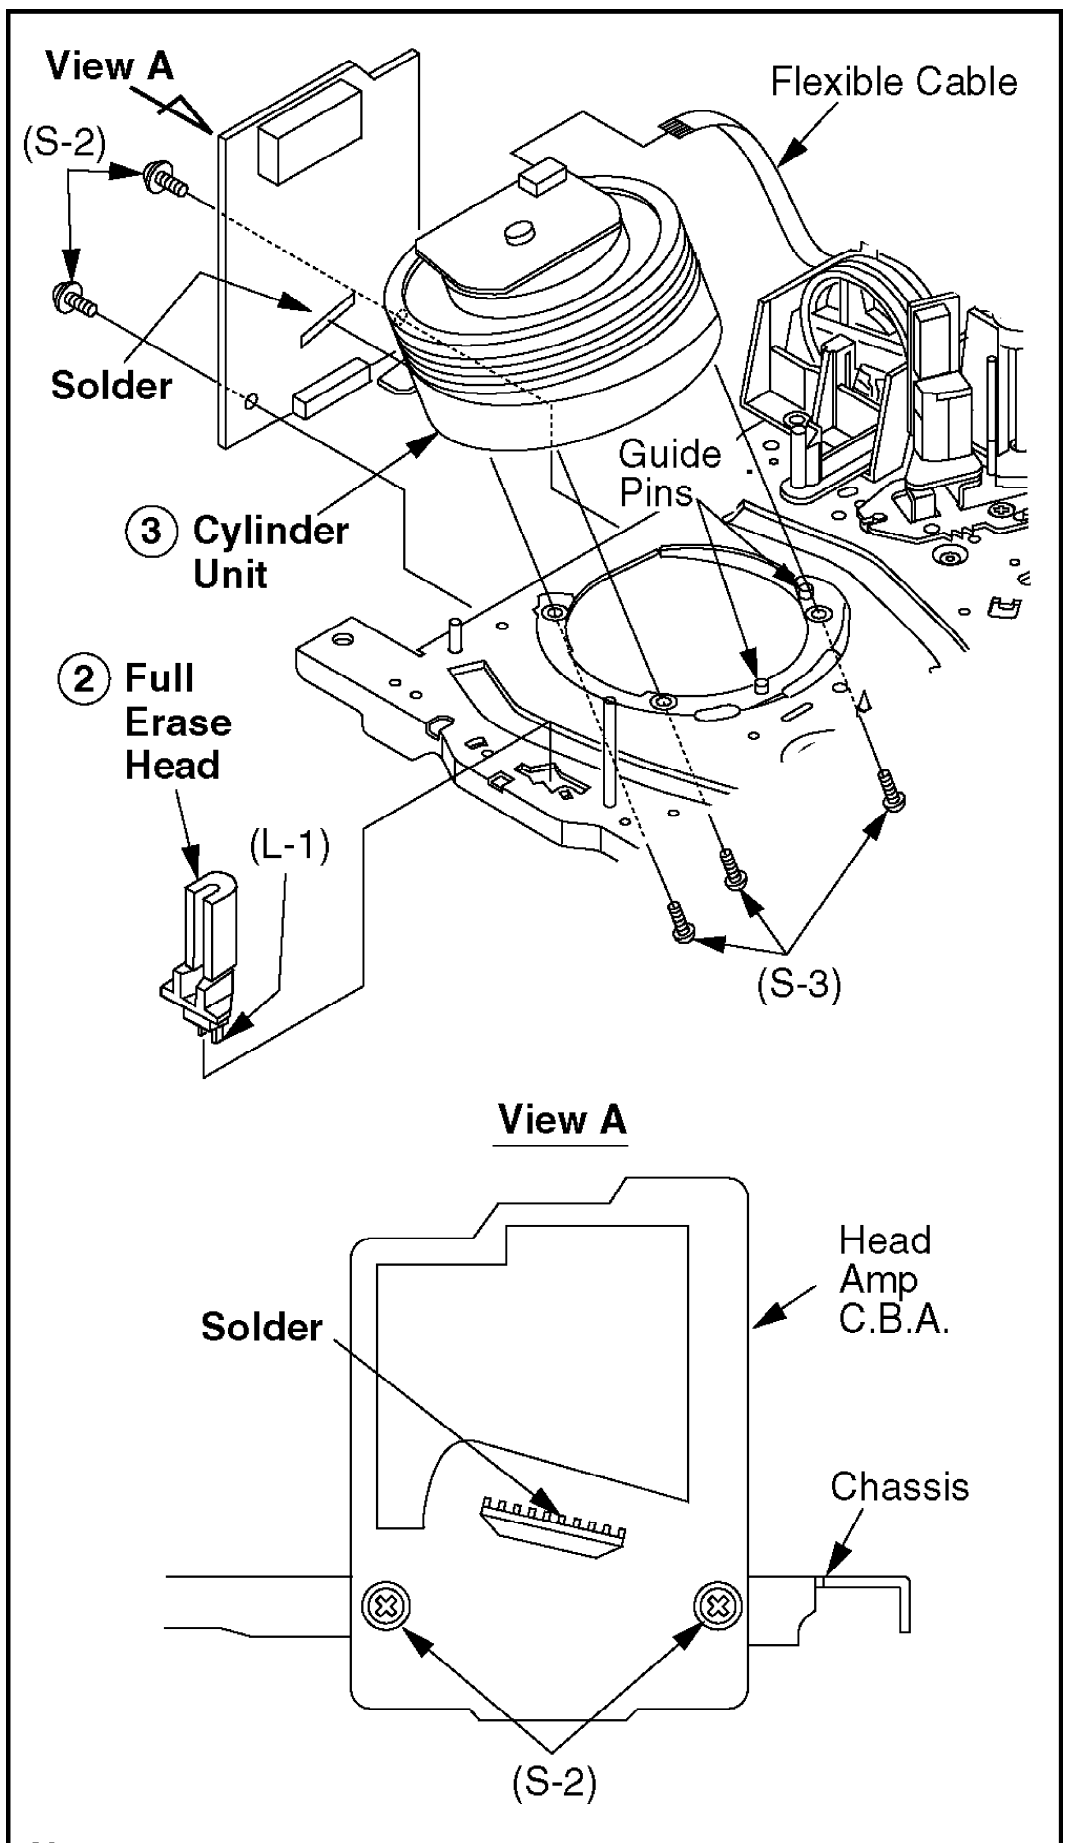
View A
(S-2)
Flexible Cable
Solder
Guide Pins
③ Cylinder Unit
② Full Erase Head
(L-1)
(S-3)
View A
Head Amp C.B.A.
Solder
Chassis
(S-2)

Note:
Use extreme care when removing or replacing the Cylinder Unit. Do not touch the Video Heads during servicing.

6.2.4.1. Reassembly Notes

1. **After replacing the Cylinder Unit, clear the Total elapsed "Cylinder rotation" time (in hours) to 0. Refer to "USAGE SCREEN MODE" in SERVICE NOTES.**

6.2.5. Capstan Belt, Support Angle, Intermediate Gear B, and Main Cam Gear

Fig. J3-1

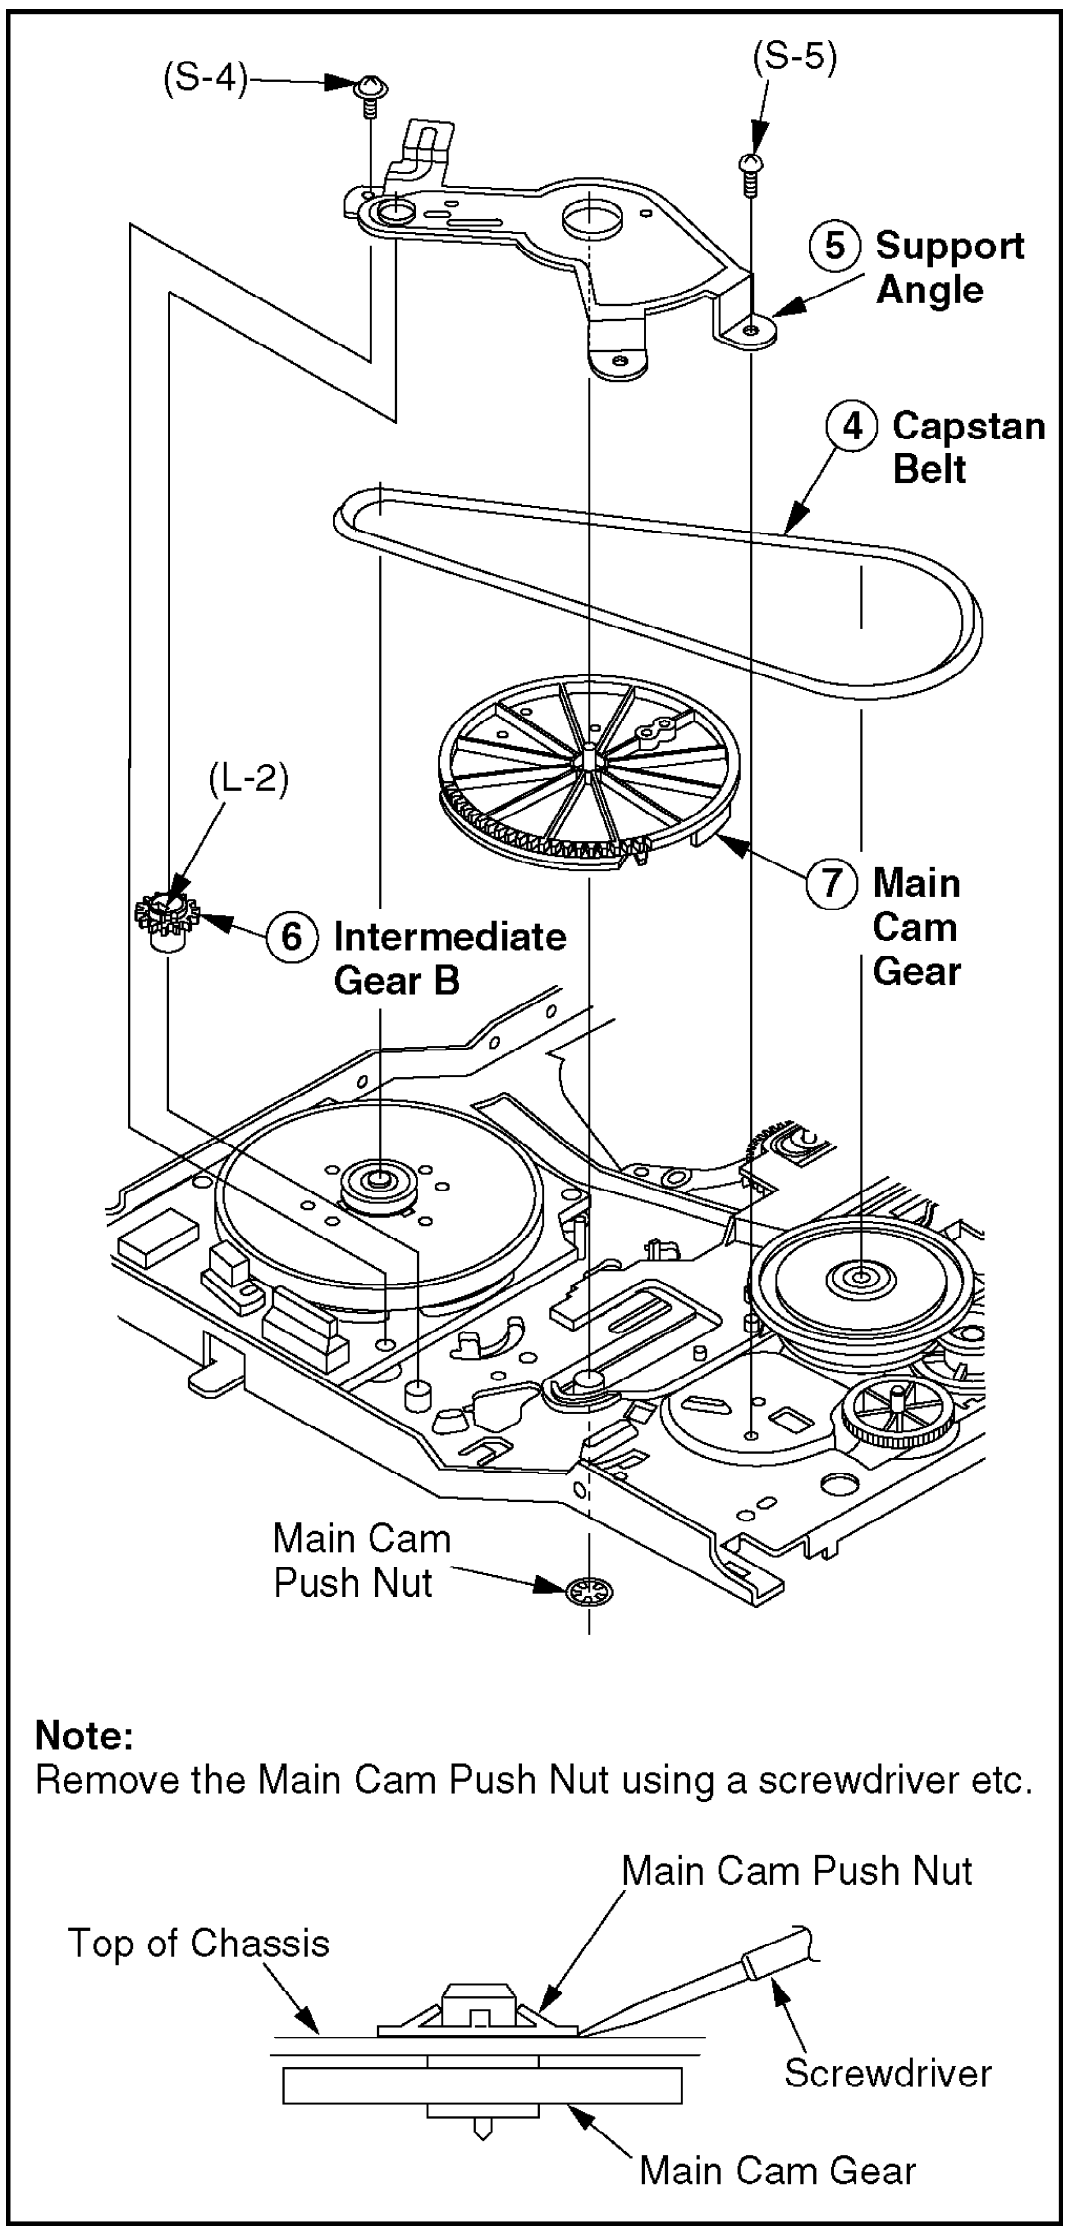
(S-4)
(S-5)
⑤ Support Angle
④ Capstan Belt
(L-2)
⑥ Intermediate Gear B
⑦ Main Cam Gear
Main Cam Push Nut
Main Cam Push Nut
Top of Chassis
Screwdriver
Main Cam Gear

Note:
Remove the Main Cam Push Nut using a screwdriver etc.

6.2.5.1. Reassembly Notes

1. **Alignment of Main Cam Gear, Drive Rack Arm, and Main Rod**
   - **A. Confirm that the hole on Main Rod is a Through Hole with a hole on chassis.**
   - **B. Confirm that the hole on Drive Rack Arm is a Through Hole with a hole on chassis.**
   - **C. Install the Main Cam Gear so that the projection of Main Cam Gear is in the upward position as shown.**

Fig. J3-2

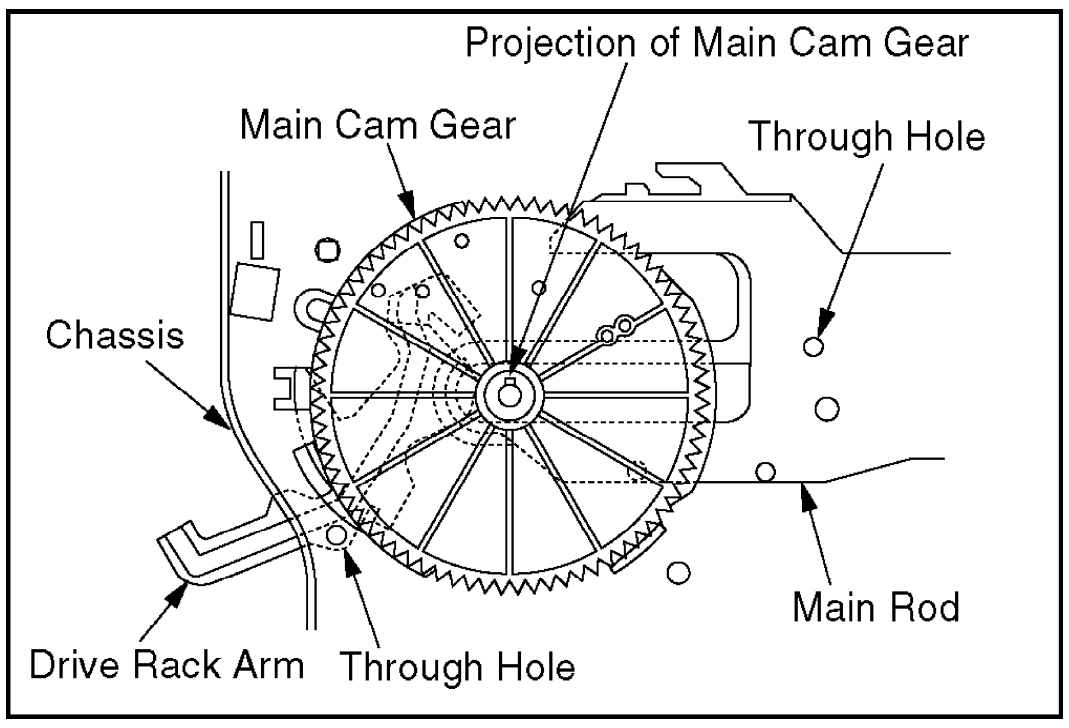
Projection of Main Cam Gear
Main Cam Gear
Through Hole
Chassis
Main Rod
Drive Rack Arm
Through Hole

2. **Confirmation/Alignment of Intermediate Gear B, Main Cam Gear, and Intermediate Gear A**
   - **A. Confirm that the Hole A on Lift Gear is a Through Hole with a hole on chassis.**
   - **B. Confirm that the hole on Intermediate Gear A is aligned with the hole on Lift Gear.**

Fig. J3-3

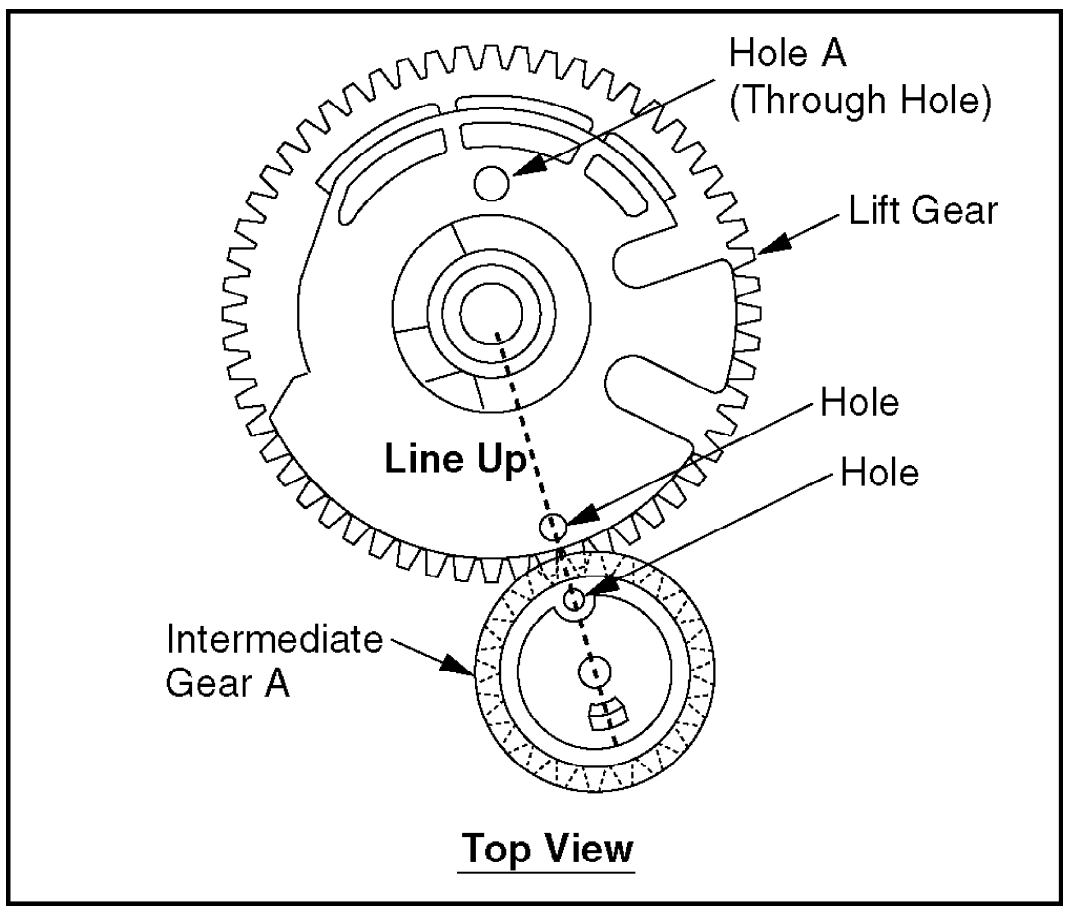
Hole A
(Through Hole)
Lift Gear
Hole
Hole
Line Up
Intermediate Gear A
Top View

   - **C. Install the Intermediate Gear B so that the hole on the Intermediate Gear B is aligned with the hole on the Main Cam Gear.**

Fig. J3-4

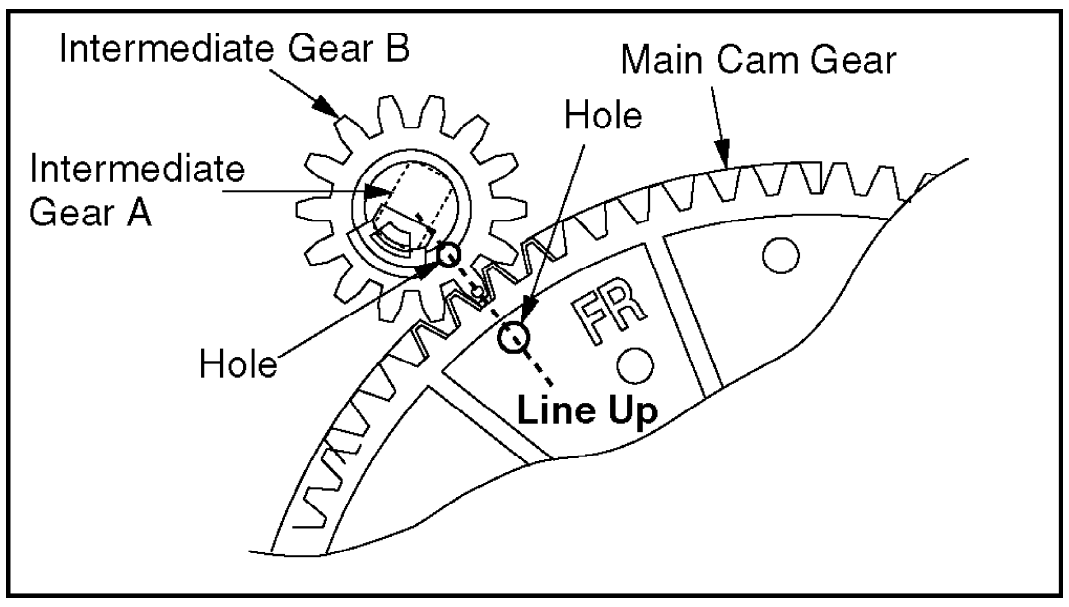
Intermediate Gear B
Main Cam Gear
Hole
Intermediate Gear A
Hole
FR
Line Up

3. **Holes on Main Cam Gear**
   - **A. The EJECT mode Hole on Main Cam Gear should be a Through**

Hole with Hole A on Support Angle in EJECT mode. The each mode Hole on Main Cam Gear should be a Through Hole with Hole B on Support Angle in each mode.

Fig. J3-5

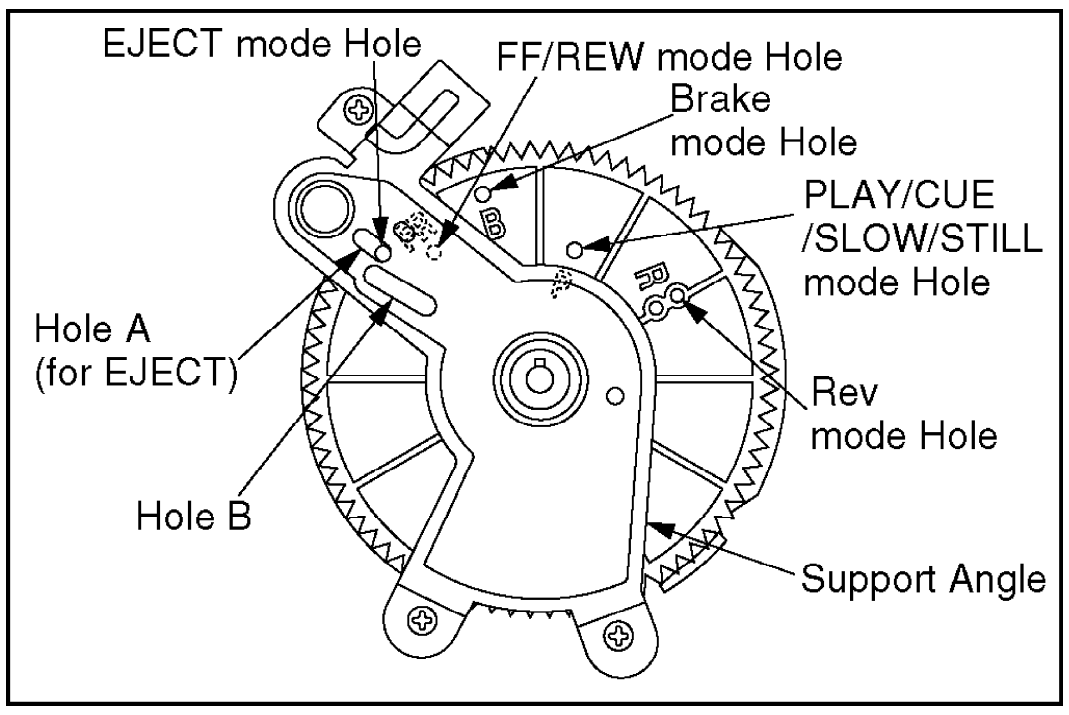
EJECT mode Hole
FF/REW mode Hole
Brake
mode Hole
PLAY/CUE
/SLOW/STILL
mode Hole
Hole A
(for EJECT)
Rev
mode Hole
Hole B
Support Angle

4. Main Cam Gear Kit

A. Main Cam Gear is supplied as a Main Cam Gear Kit only (Kit No. VVGS0009).

Main Cam Gear Kit consists of a Main Cam Gear and a Main Cam Push Nut.

However, Main Cam Push Nut is available separately as a replacement part.

5. Installation of Main Cam Gear and Main Cam Push Nut

A. After installing the Support Angle, install the Main Cam Push Nut with Needlenose Pliers etc. so that it is flush with the chassis.

There may be some slight scratches on the Shaft of Main Cam Gear, when removing the Main Cam Gear. In case that the Main Cam Gear can be installed securely without tottering, it is fine to use the one. If any tottering, install all new parts.

Fig. J3-6

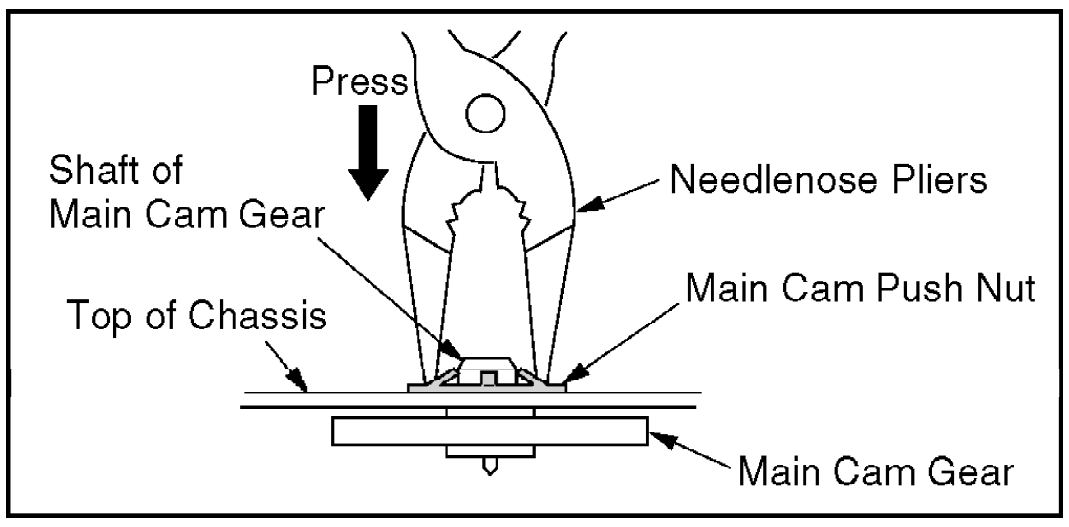
Press
Shaft of
Main Cam Gear
Needlenose Pliers
Top of Chassis
Main Cam Push Nut
Main Cam Gear

6. The Main Cam Push Nut is not reusable. Install a new one.

6.2.6. Center Clutch Unit, Changing Gear Spring, Changing Gear, and Idler Arm Unit

Fig. J4-1

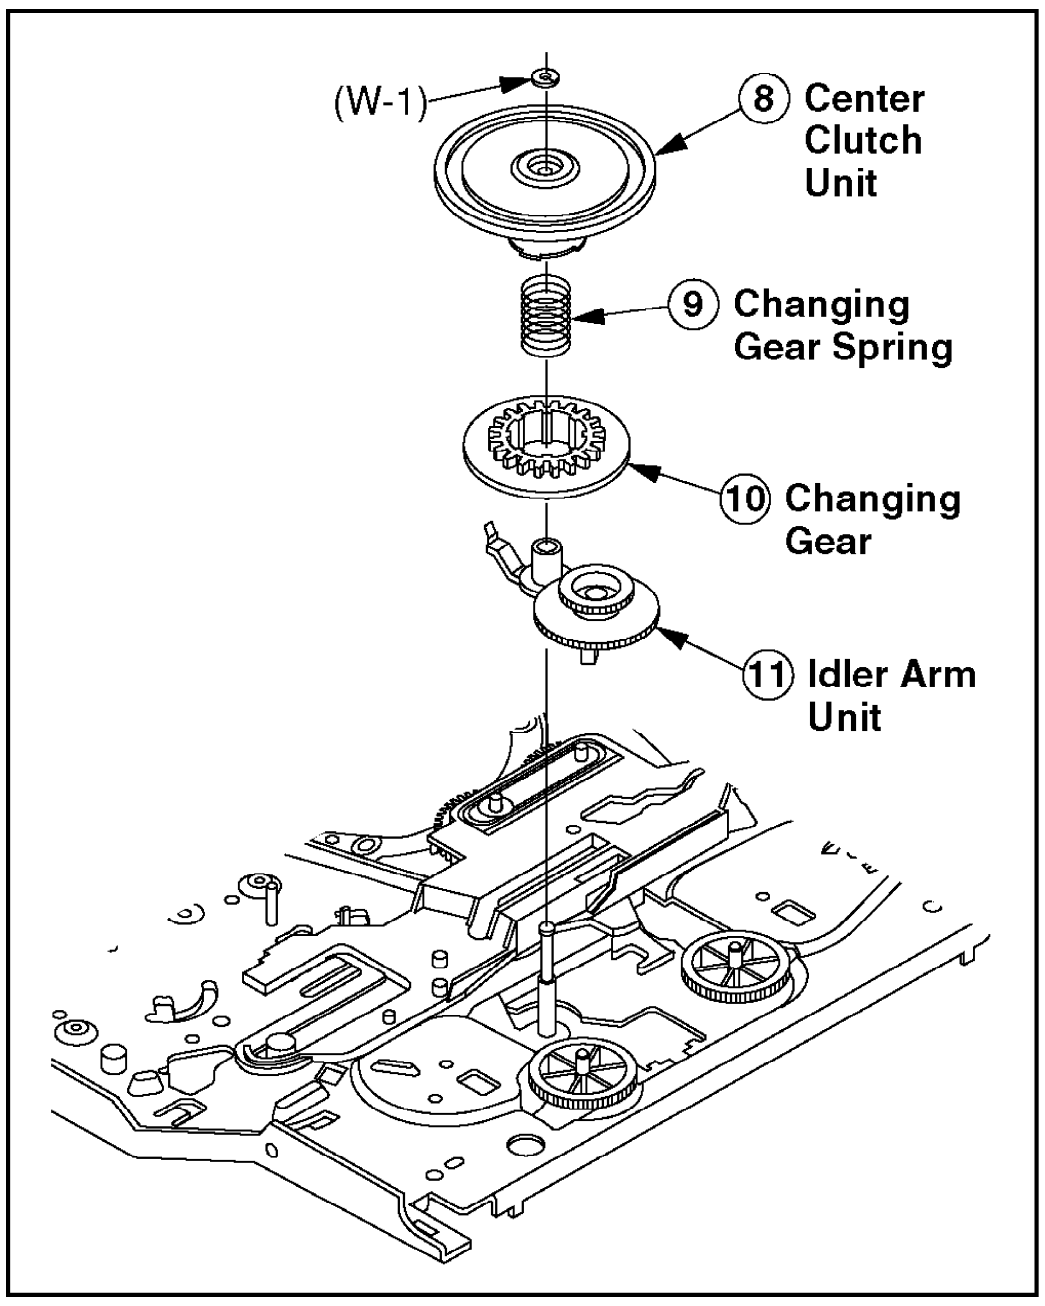
(W-1)
⑧ Center Clutch Unit
⑨ Changing Gear Spring
⑩ Changing Gear
⑪ Idler Arm Unit

6.2.6.1. Reassembly Notes

1. Installation of Center Clutch Unit

A. Fit the Center Clutch Unit into the Changing Gear.

Fig. J4-2

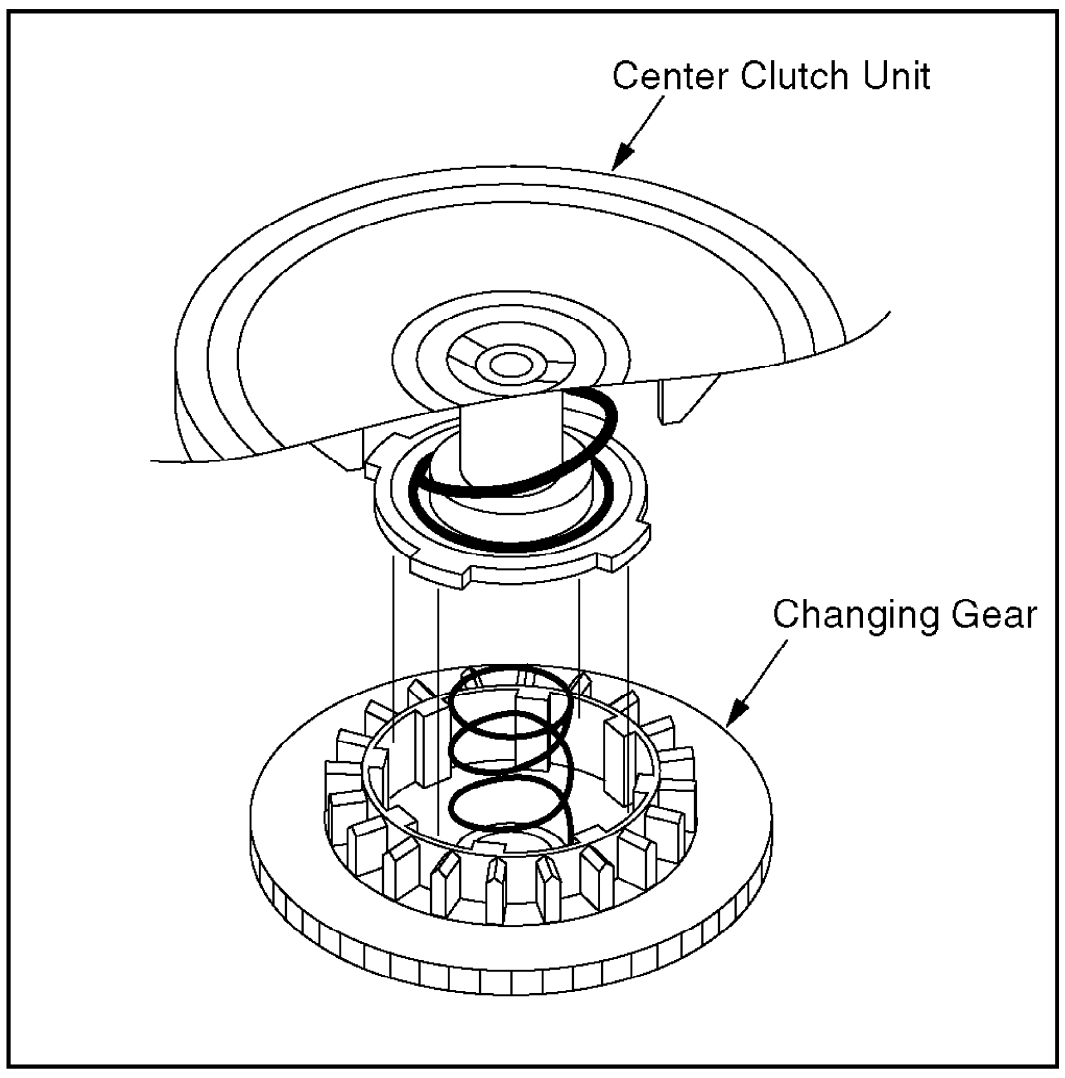
Center Clutch Unit
Changing Gear

6.2.7. Reel Gear, Main Rod, and SS Brake Arm Unit

Fig. J5-1

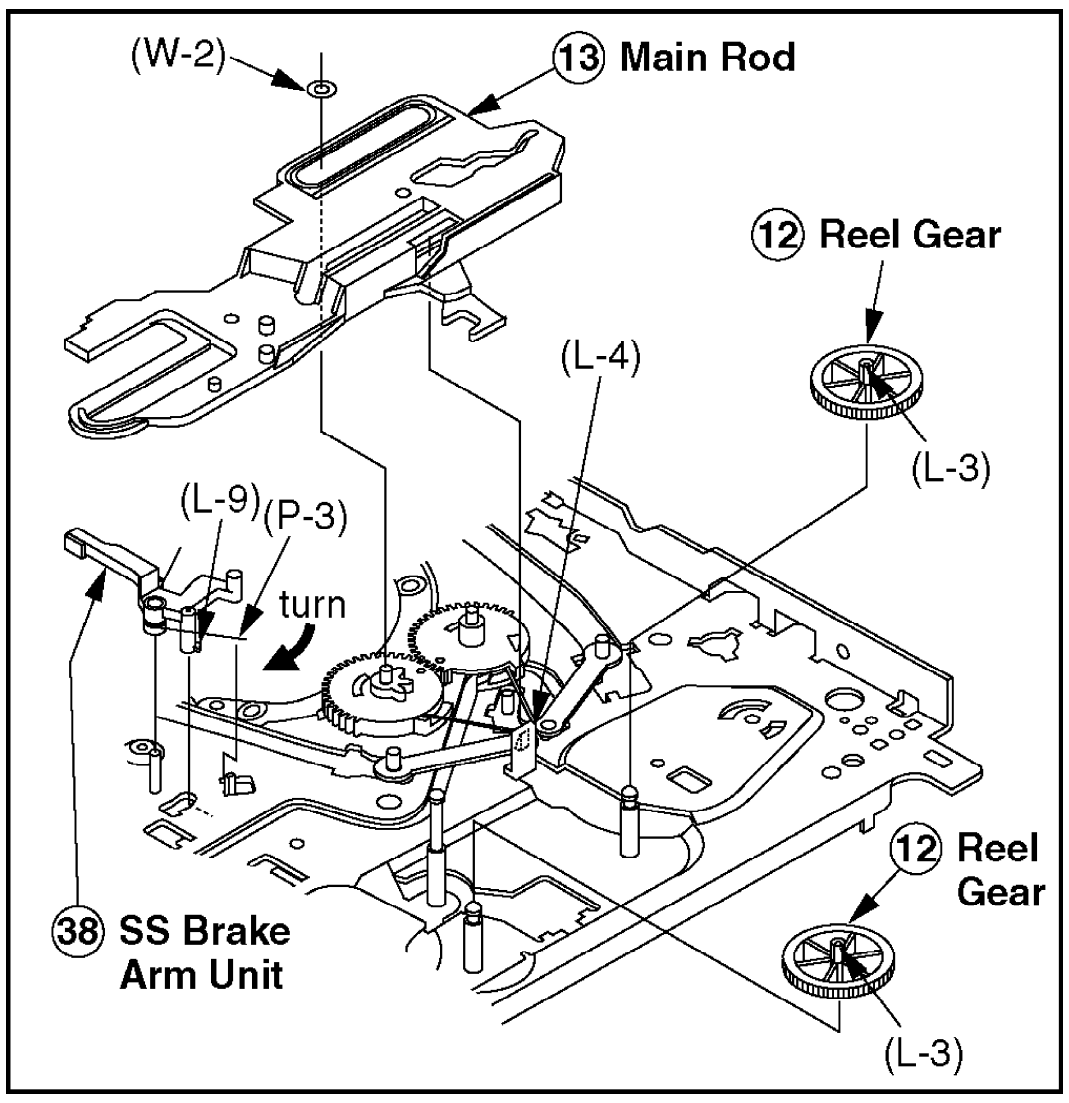
(W-2)
⑬ Main Rod
⑫ Reel Gear
(L-4)
(L-3)
(L-9)
(P-3)
turn
⑫ Reel Gear
㊳ SS Brake Arm Unit
(L-3)

6.2.7.1. Reassembly Notes

1. Alignment of Main Rod and T Loading Arm Unit

A. Align the Gear of T Loading Arm Unit with Gear of Main Rod. Confirm that the Hole on Main Rod is a Through Hole with a hole on chassis.

Fig. J5-2

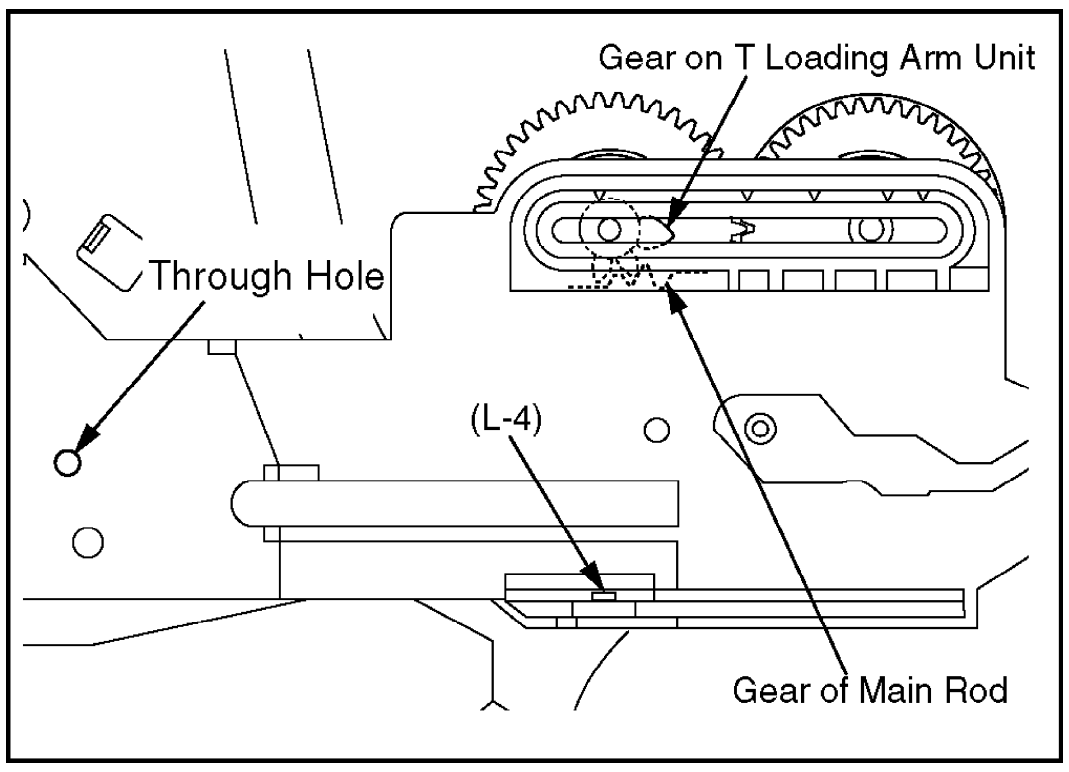
Gear on T Loading Arm Unit
Through Hole
(L-4)
Gear of Main Rod

6.2.8. Capstan Motor Unit

Fig. J6

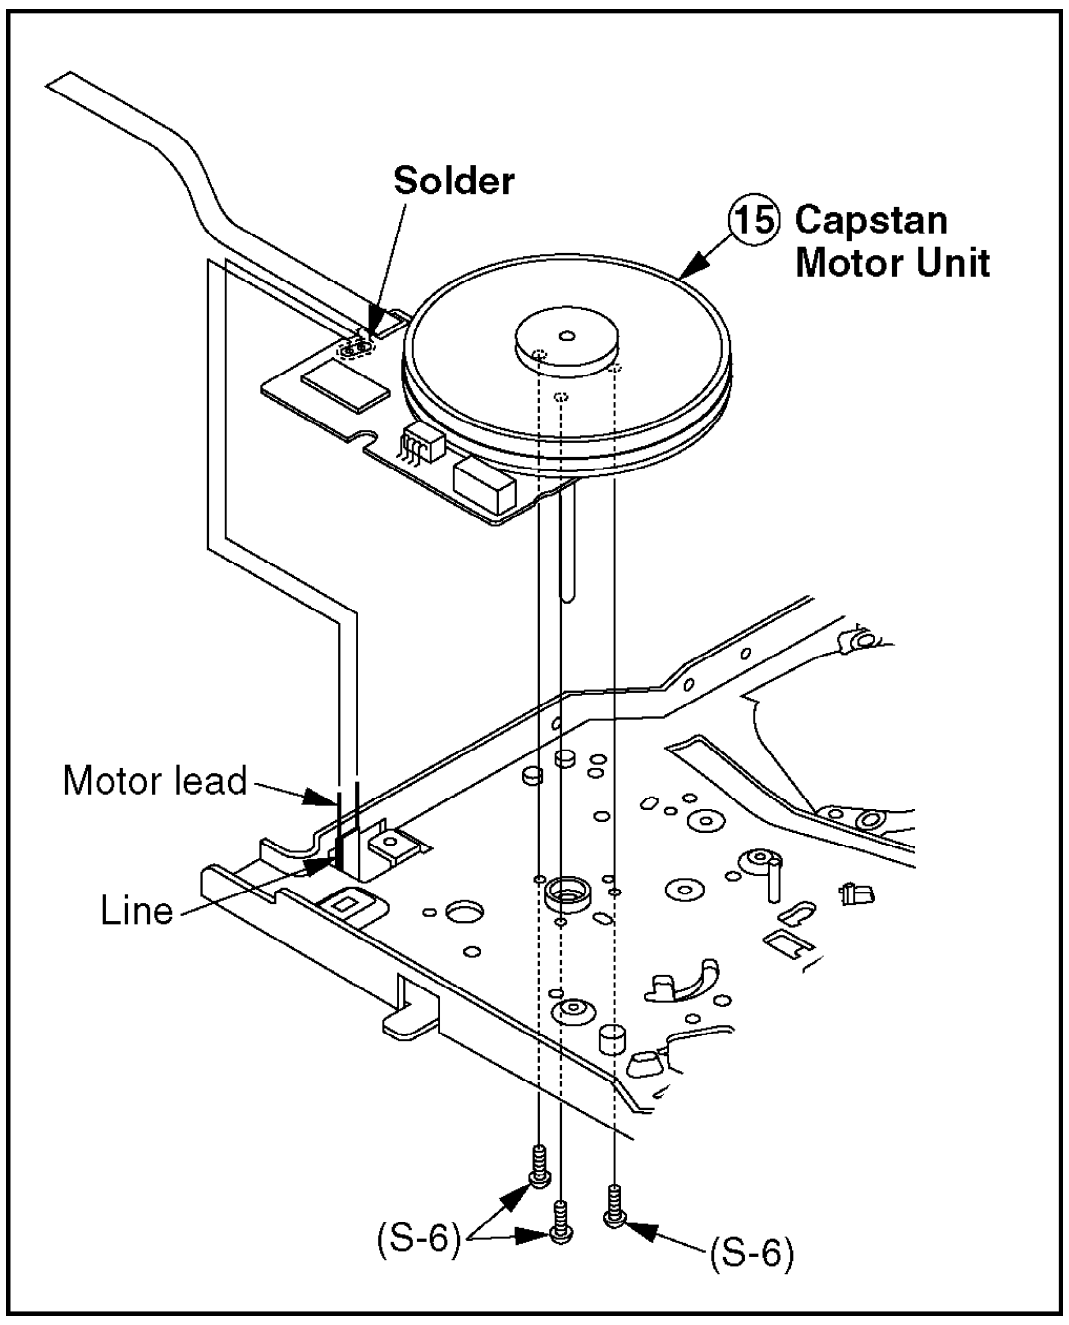
Solder
⑮ Capstan Motor Unit
Motor lead
Line
(S-6)
(S-6)

6.2.9. T Loading Arm Unit and S Loading Arm Unit

Fig. J7-1

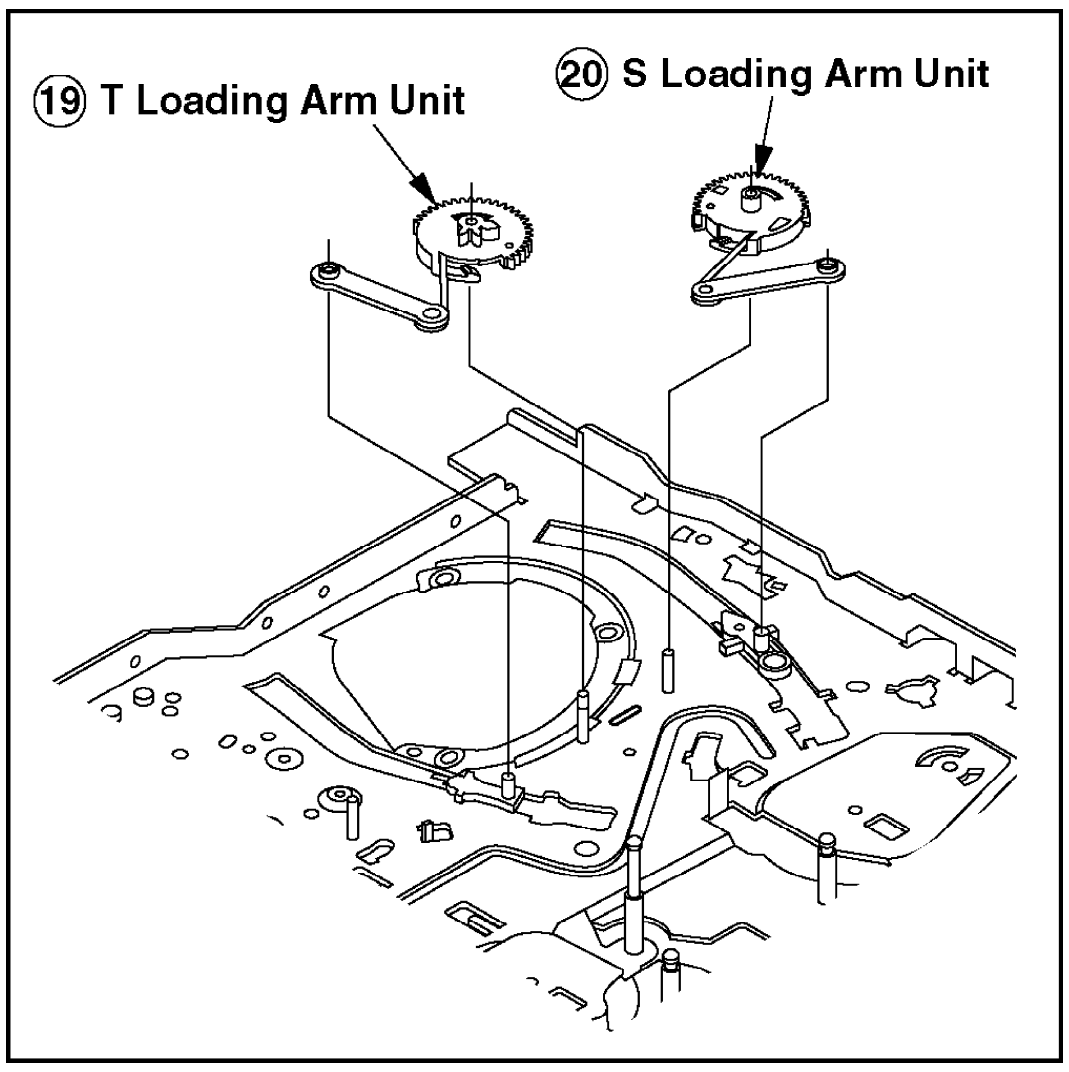
⑲ T Loading Arm Unit
⑳ S Loading Arm Unit

6.2.9.1. Reassembly Notes

1. Alignment of T Loading Arm Unit and S Loading Arm Unit

A. Install the S Loading Arm Unit onto the chassis.

B. Install the T Loading Arm Unit so that the hole on T Loading Arm Unit is aligned with the hole on S Loading Arm Unit.

C. Confirm that the holes on the S & T Loading Arm Unit are Through Holes with hole on chassis.

Fig. J7-2

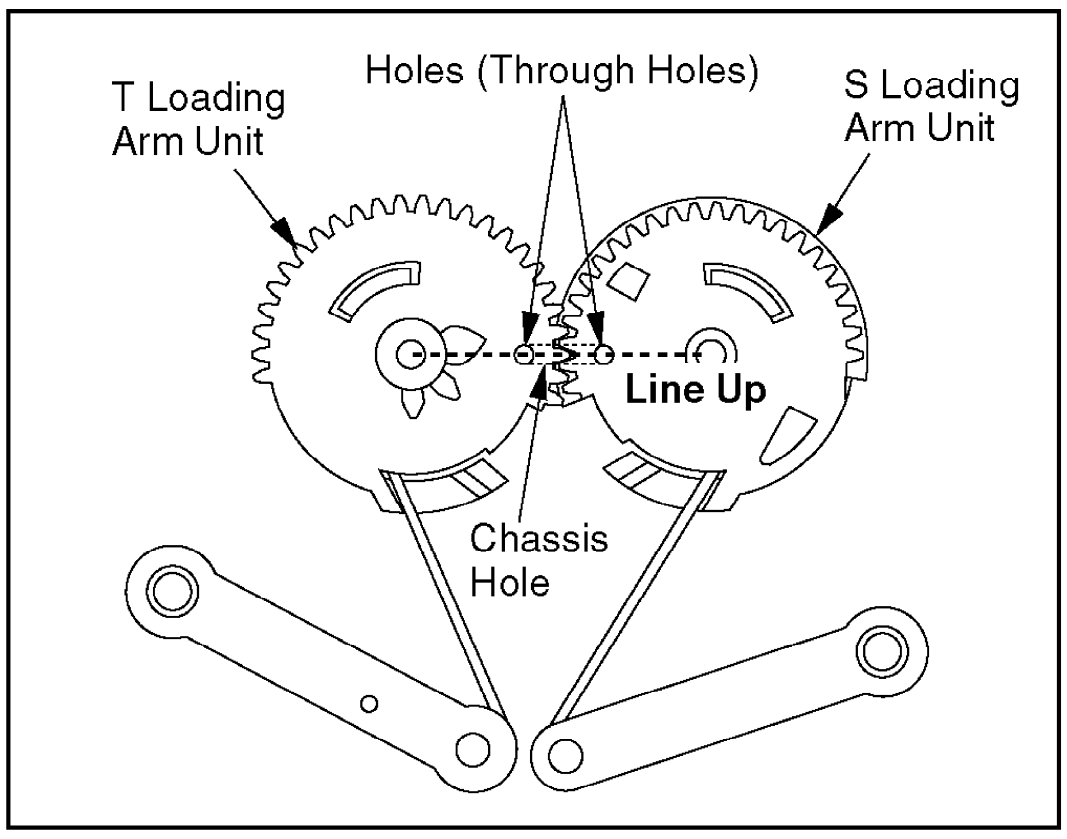
T Loading
Arm Unit
Holes (Through Holes)
S Loading
Arm Unit
Line Up
Chassis
Hole

6.2.10. T Brake Unit, Tension Control Arm Unit, T Reel Table, S Reel Table, and Tension Arm Unit

Fig. J8-1

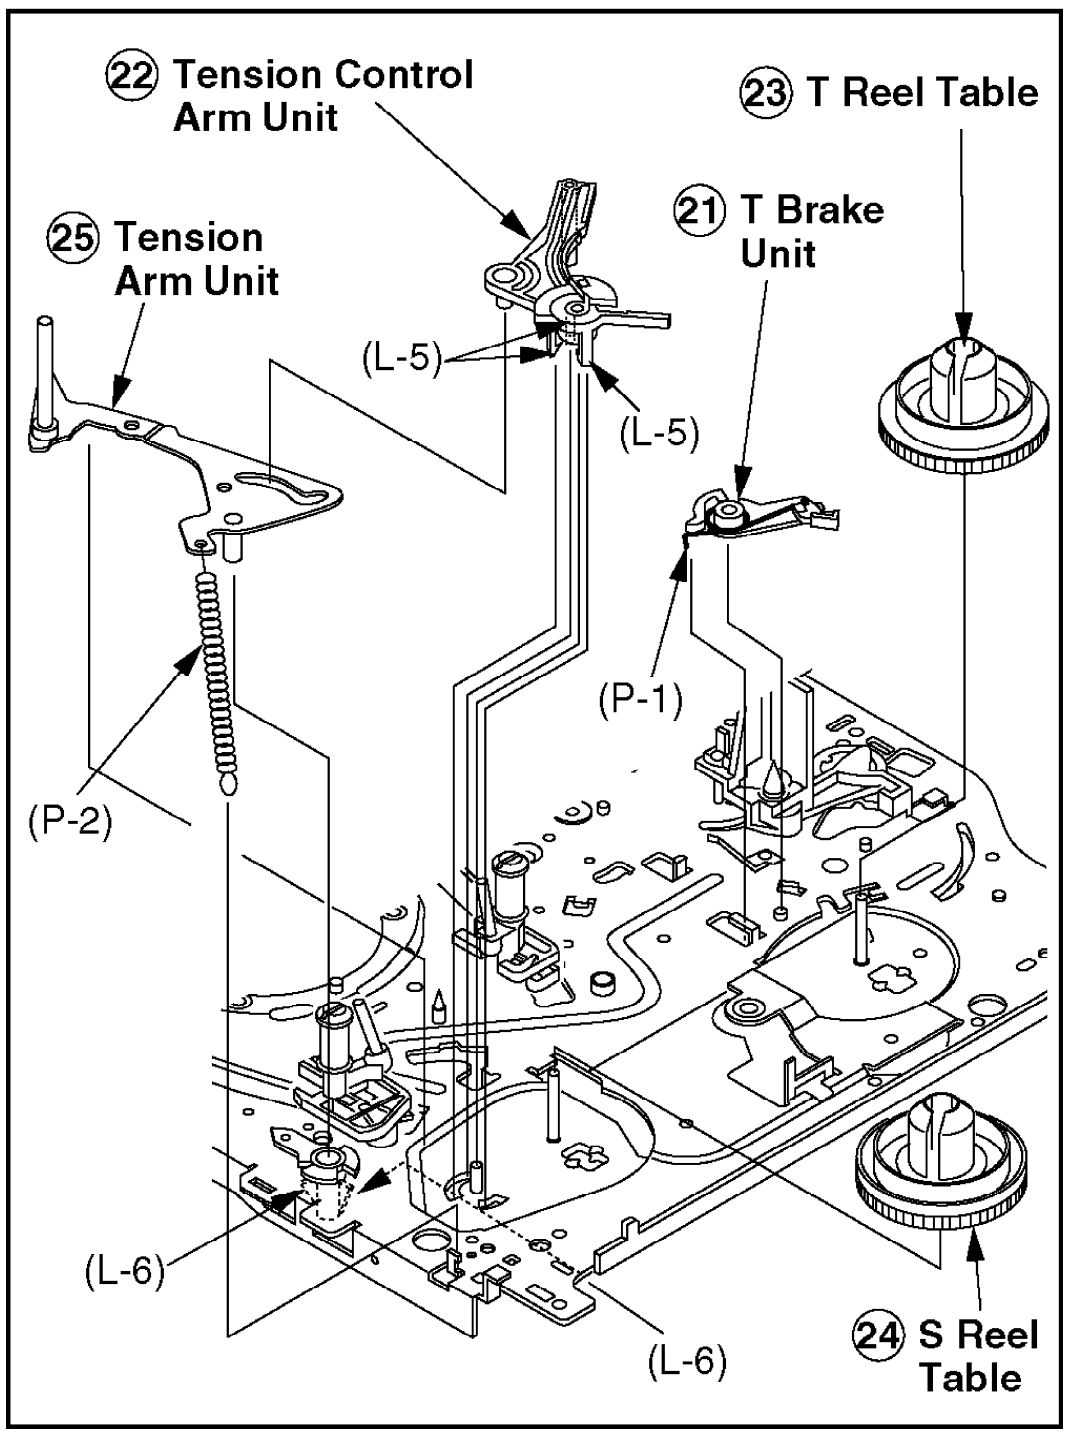
㉒ Tension Control
Arm Unit
㉓ T Reel Table
㉑ T Brake
Unit
㉕ Tension
Arm Unit
(L-5)
(L-5)
(P-1)
(P-2)
(L-6)
(L-6)
㉔ S Reel
Table

6.2.10.1. Reassembly Notes

1. How to distinguish between S Reel Table and T Reel Table

Fig. J8-2

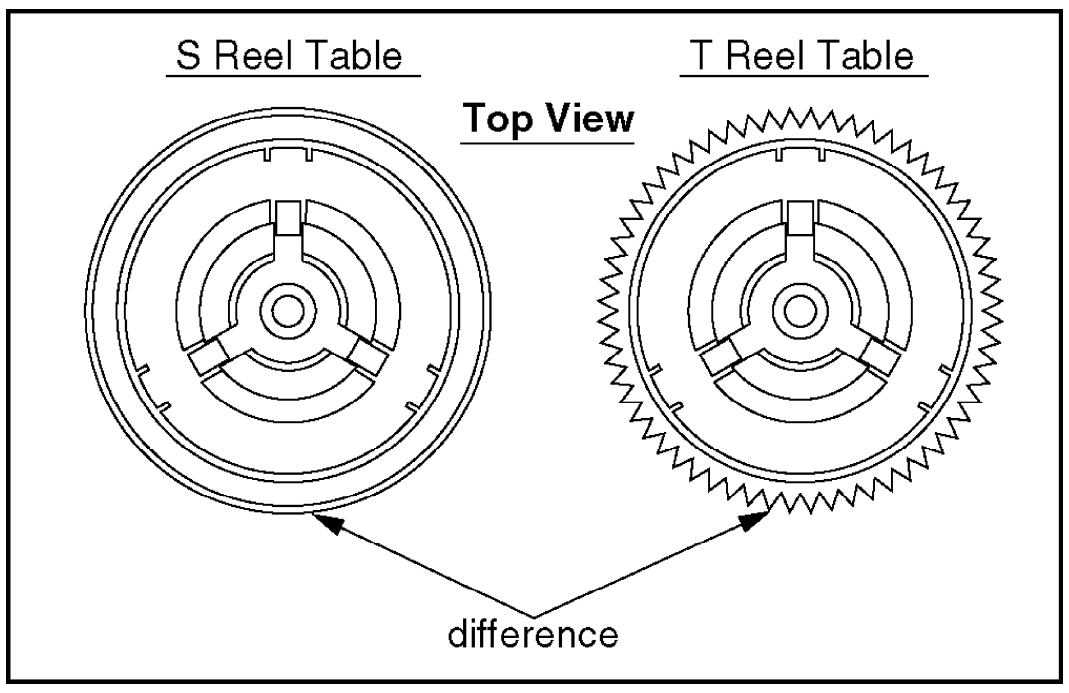
S Reel Table
T Reel Table
Top View
difference

6.2.11. Loading Post Base -T Unit and Loading Post Base -S Unit

Fig. J9

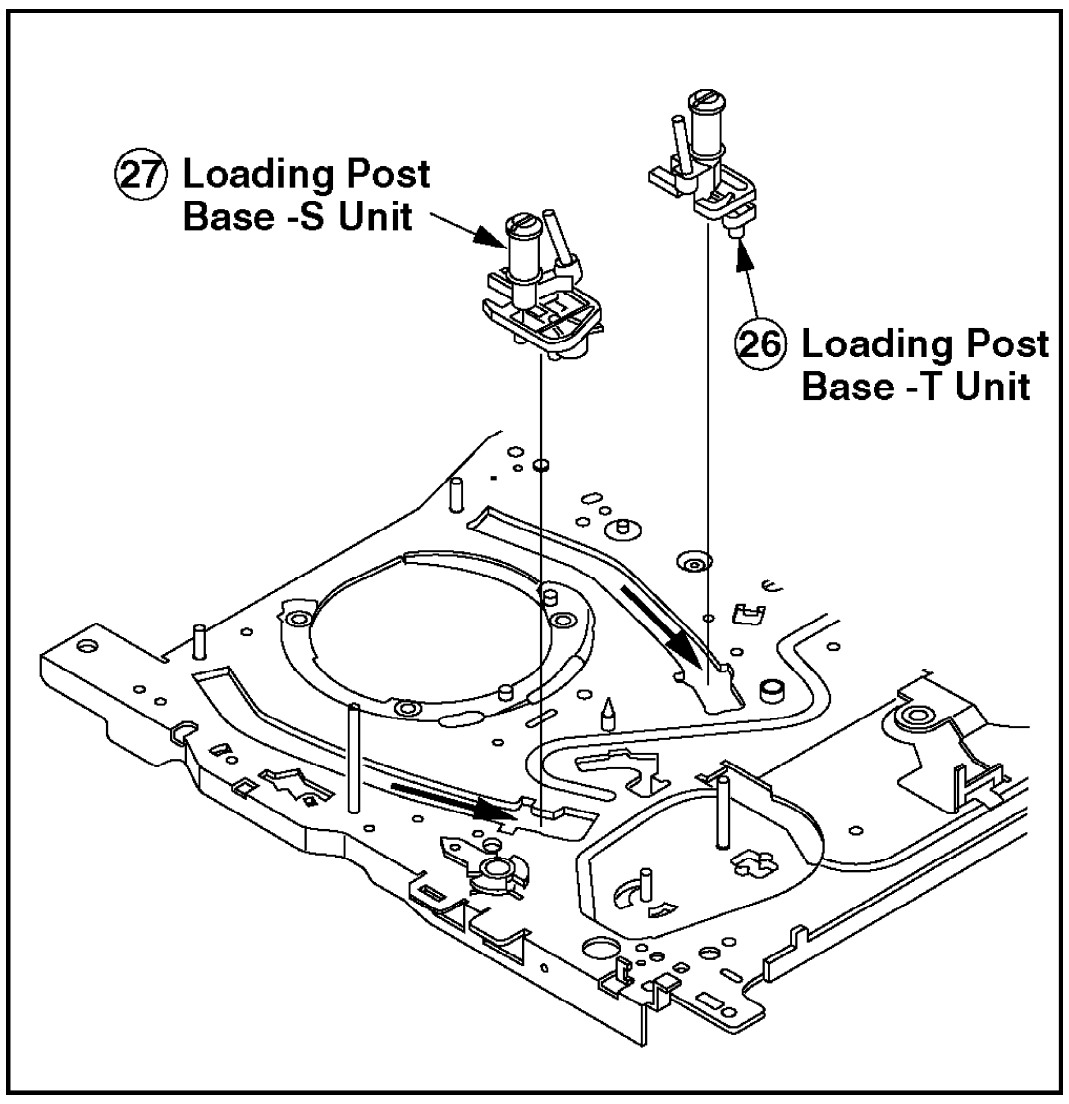
㉗ Loading Post Base -S Unit
㉖ Loading Post Base -T Unit

6.2.12. Opener Piece, Drive Rack Arm, Pinch Arm Unit, P5 Arm Unit, and Intermediate Gear A

Fig. J10-1

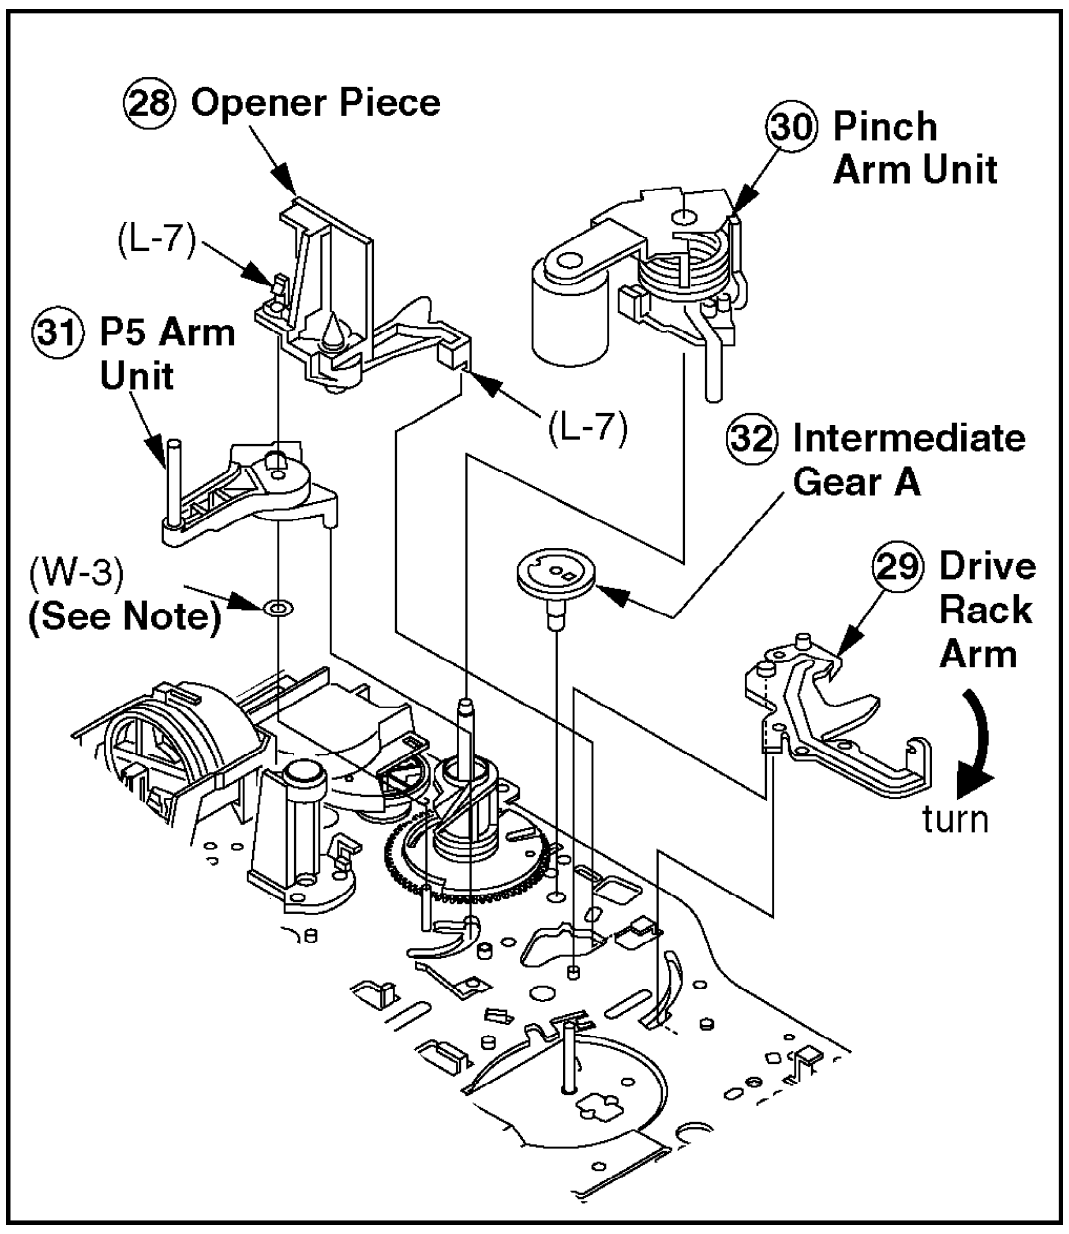
㉘ Opener Piece
(L-7)
㉚ Pinch Arm Unit
㉛ P5 Arm Unit
(L-7)
㉜ Intermediate Gear A
(W-3)
(See Note)
㉙ Drive Rack Arm
turn

Note:

In early units, a washer is used. When servicing the washer or the P5 Arm Unit, replace only the P5 Arm Unit with a new one, and remove the washer.

6.2.12.1. Reassembly Notes

1. **Installation/Alignment of Intermediate Gear A, Lift Gear and P5 Arm Unit**
    - **A. Rotate the Lift Gear so that Hole A on Lift Gear is a Through Hole with a hole on chassis.**
    - **B. Install the Intermediate Gear A so that the hole on Intermediate Gear A is aligned with the hole on Lift Gear.**
    - **C. Install the P5 Arm Unit so that it contacts with the tab of chassis.**

Fig. J10-2

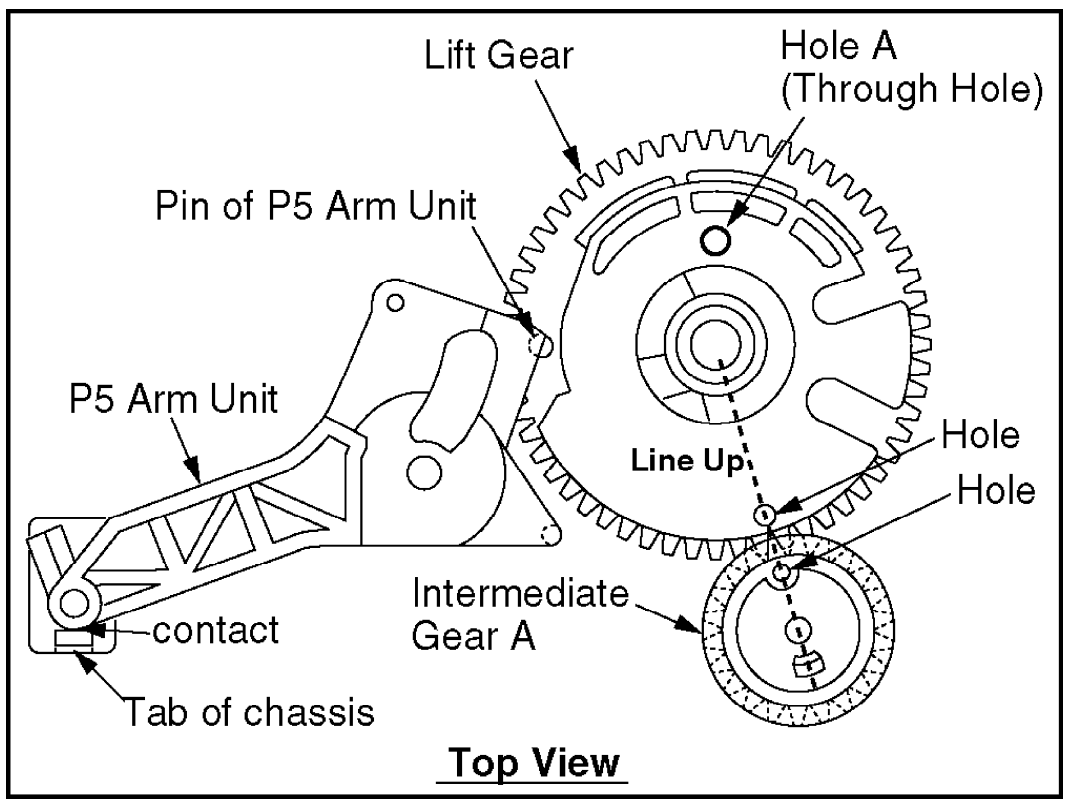
Lift Gear
Hole A
(Through Hole)
Pin of P5 Arm Unit
P5 Arm Unit
Line Up
Hole
Hole
Intermediate
Gear A
contact
Tab of chassis
Top View

2. **Installation of Opener Piece**
    - **A. Install the Opener Piece so that the slot of the Opener Piece is inserted to the Pin of Pinch Arm Unit**

Fig. J10-3

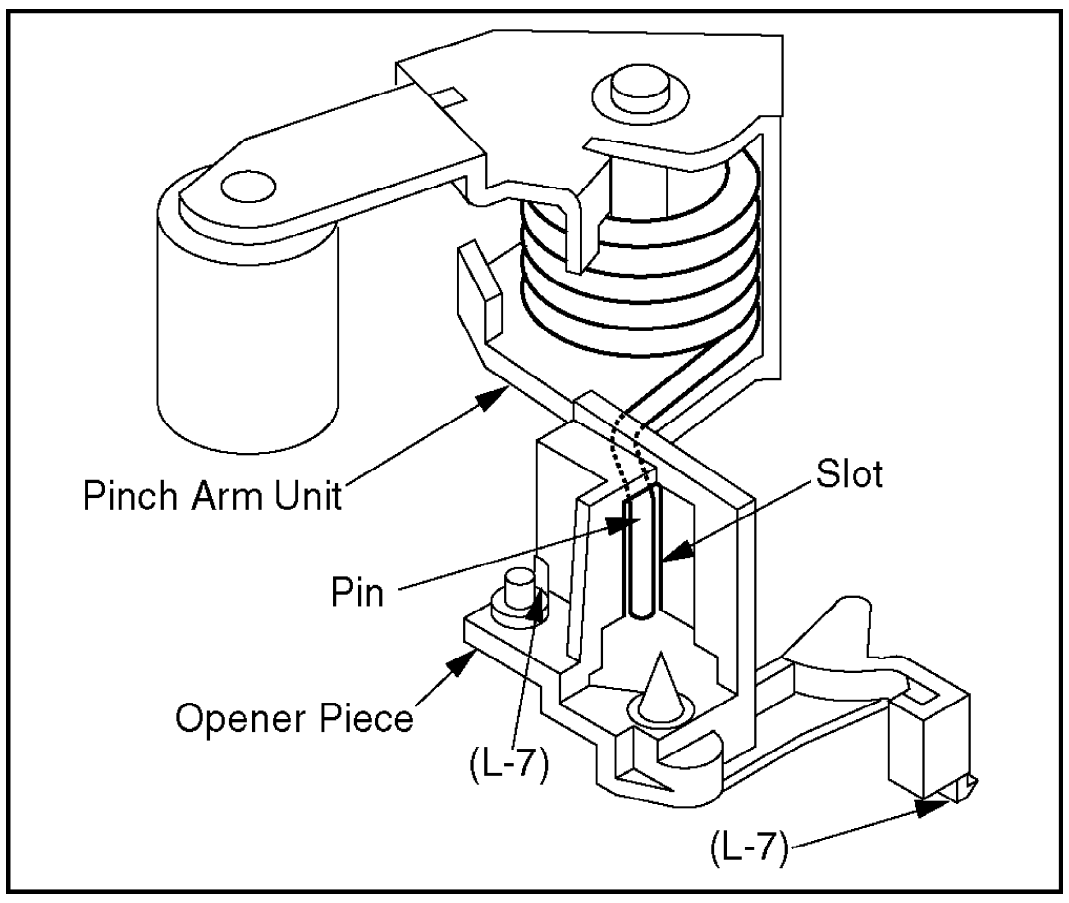
Pinch Arm Unit
Slot
Pin
Opener Piece
(L-7)
(L-7)

6.2.13. Motor Block Unit, Audio Control Head Unit, Lift Gear and Tension Arm Boss

Fig. J11

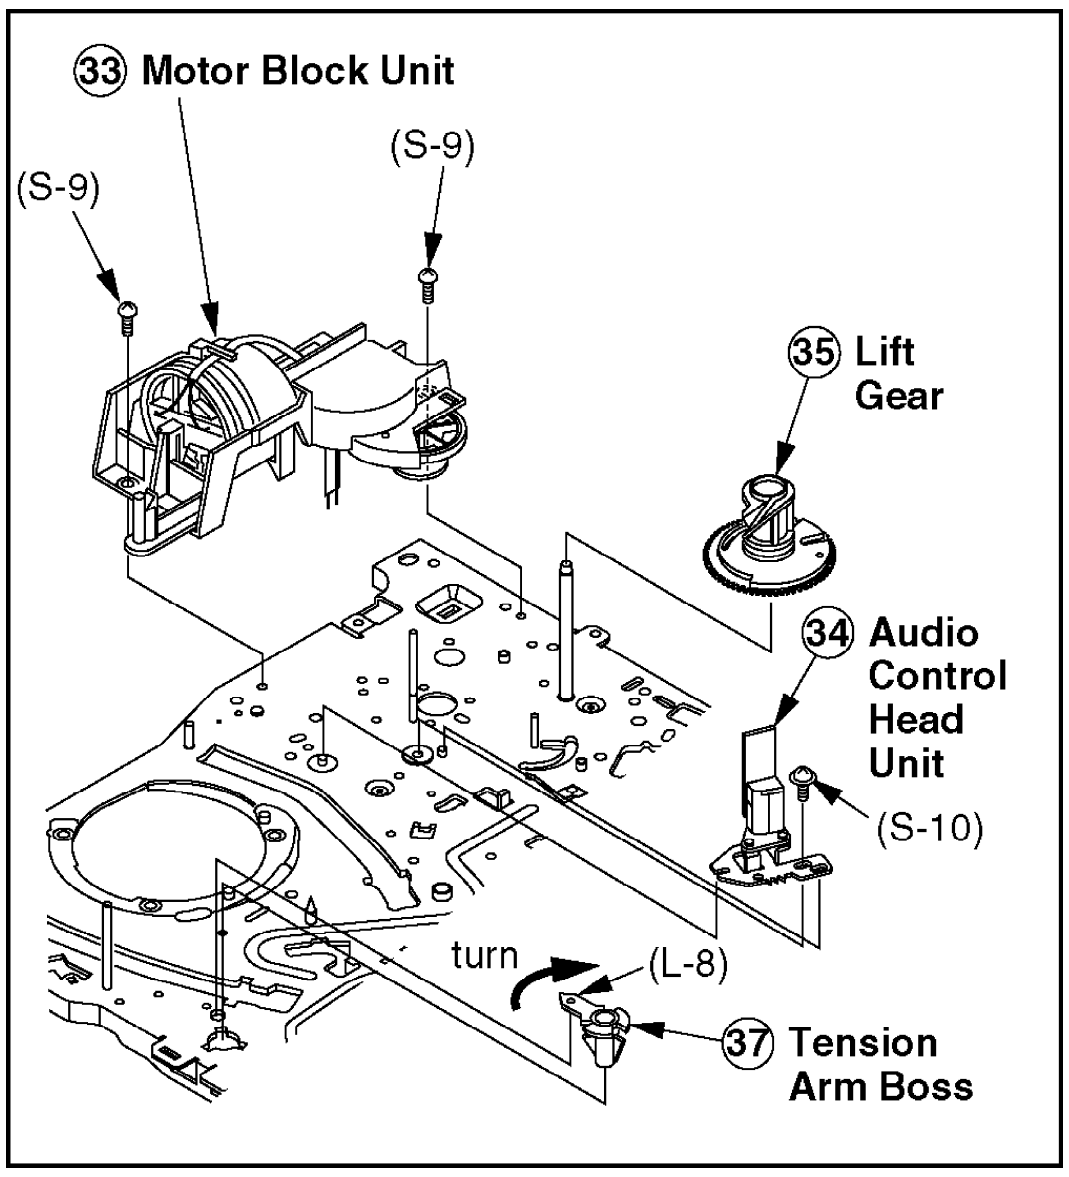

㉝ Motor Block Unit
(S-9)
(S-9)
㉟ Lift Gear
㉞ Audio Control Head Unit
(S-10)
turn
(L-8)
㊲ Tension Arm Boss

6.3. CASSETTE UP ASSEMBLY SECTION

This chart indicates Step/Location No. of Parts to be serviced and prior steps to gain access items to be serviced when disassembling. When reassembling, perform the step(s) in the reverse order.

Step/Loc. No.	Prior Step(s)	Part	Fig. No.	Remove	Alignment/Adjustment
①	------------	Top Plate	K1-1	(L-1), (L-2)	
②	1	Wiper Arm Unit	K1-1	2(L-3)	Gear Alignment
③	1,2	Holder Unit	K1-1	-	
④	------------	Opener Lever	K2	2(L-4)	
⑤	1,2,3,4	Drive Rack Unit	K2	-	

6.3.1. Top Plate, Wiper Arm Unit, and Holder Unit

Fig. K1-1

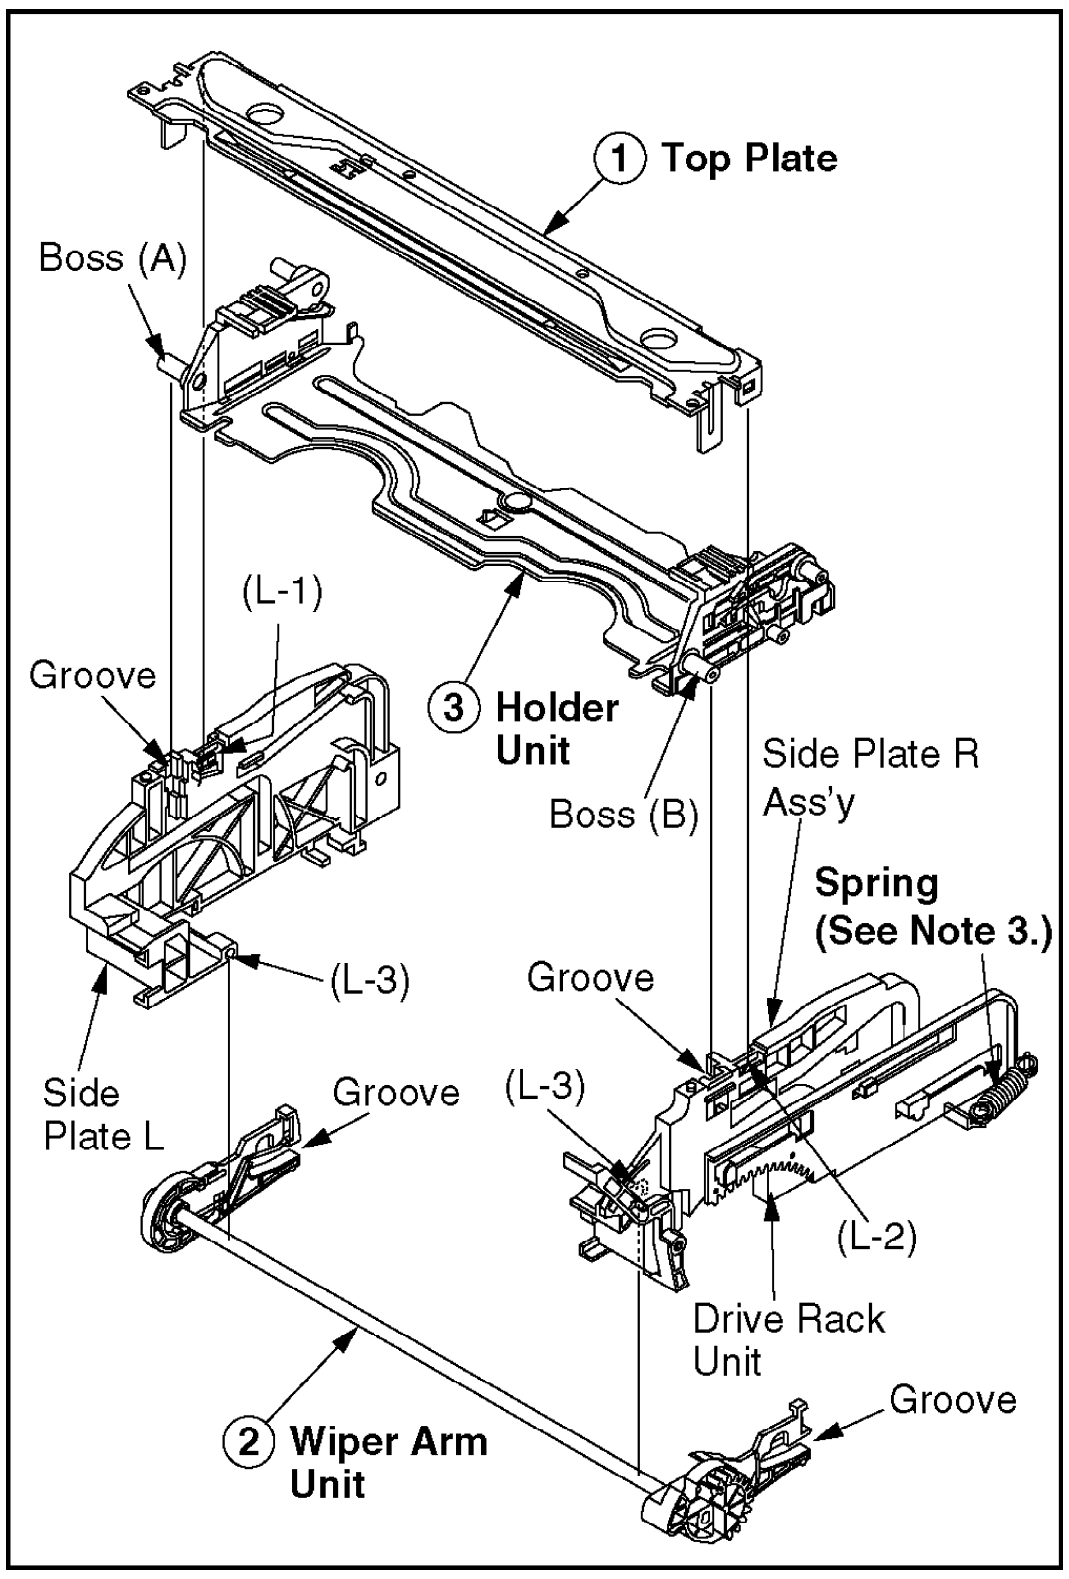
① Top Plate
Boss (A)
(L-1)
Groove
③ Holder Unit
Side Plate R Ass'y
Boss (B)
Spring (See Note 3.)
(L-3)
Groove
Side Plate L
Groove
(L-3)
(L-2)
Drive Rack Unit
Groove
② Wiper Arm Unit

6.3.1.1. Reassembly Notes

1. Alignment of Wiper Arm Unit and Drive Rack Unit

- **A. Slide the Drive Rack Unit to the far right as indicated by the arrow.**
- **B. Install the Wiper Arm Unit so that the hole on the Wiper Arm Unit is aligned with the hole on the Drive Rack Unit.**

Fig. K1-2

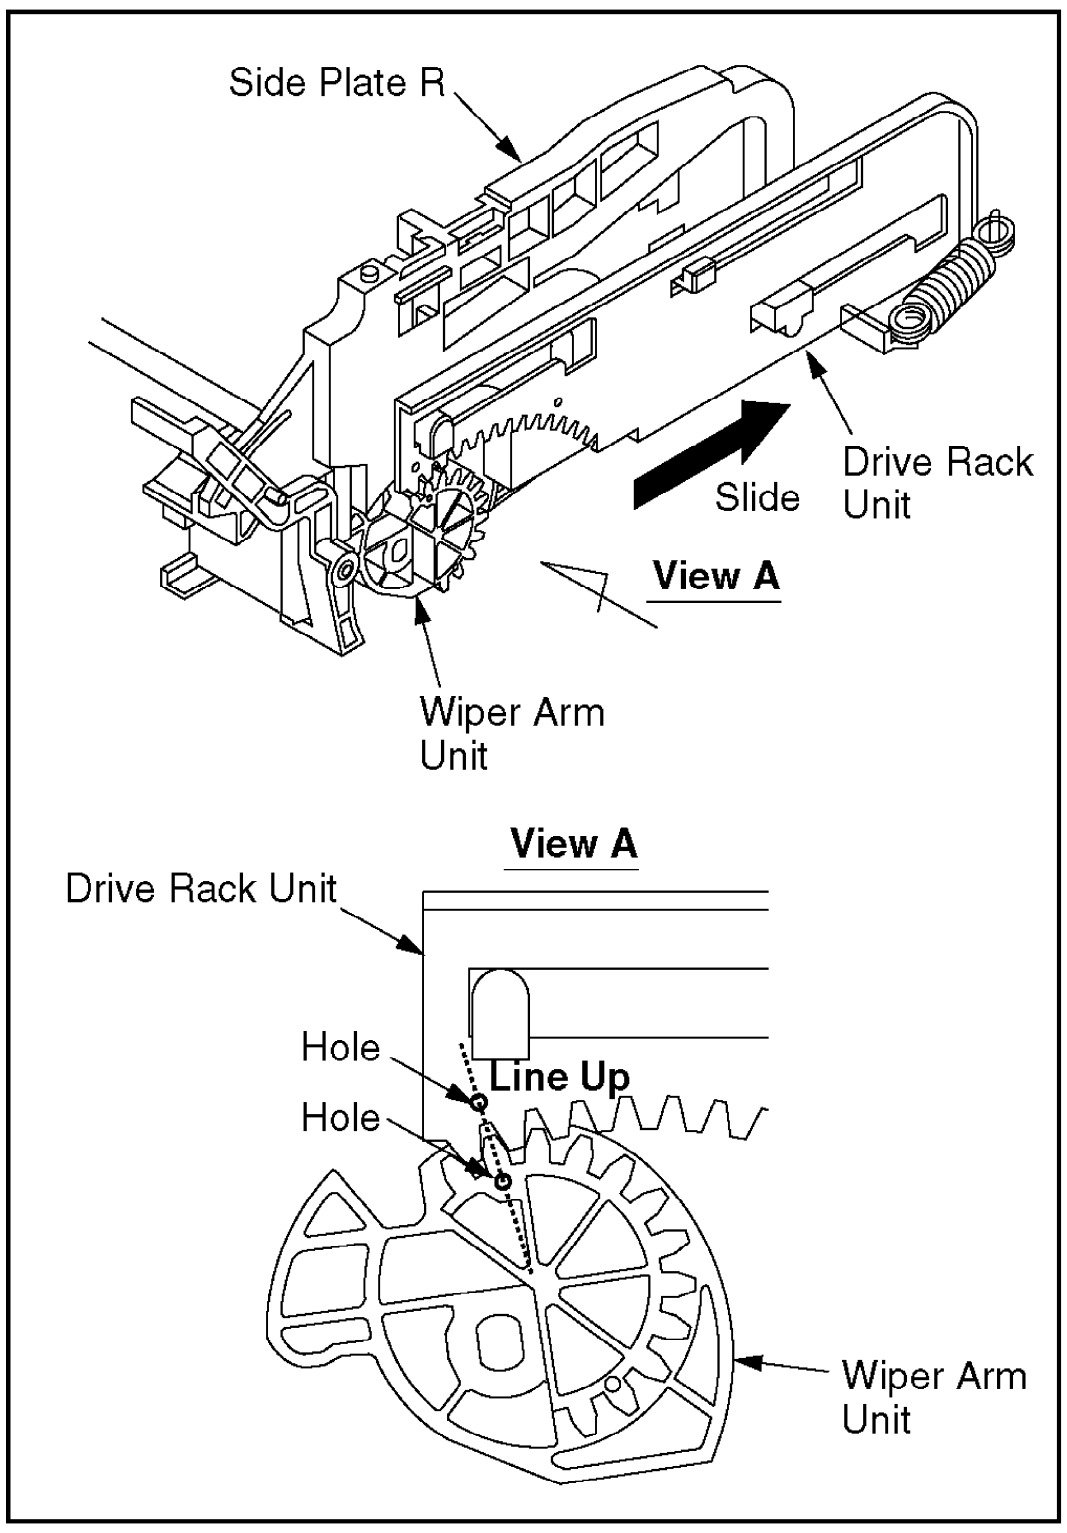
Side Plate R
Drive Rack Unit
Slide
View A
Wiper Arm Unit
View A
Drive Rack Unit
Hole
Hole
Line Up
Wiper Arm Unit

2. Installation of Holder Unit

A. Turn the Wiper Arm Unit so that the grooves on each end are aligned with the each groove on Side Plate L and R.

B. Insert Holder Unit boss (A) and (B) into the grooves as shown in Fig. K1-1.

C. Finally, in the EJECT Position, confirm that the protrudence on the Wiper Arm Unit is aligned with the indentation on the Drive Rack Unit.

Fig. K1-3

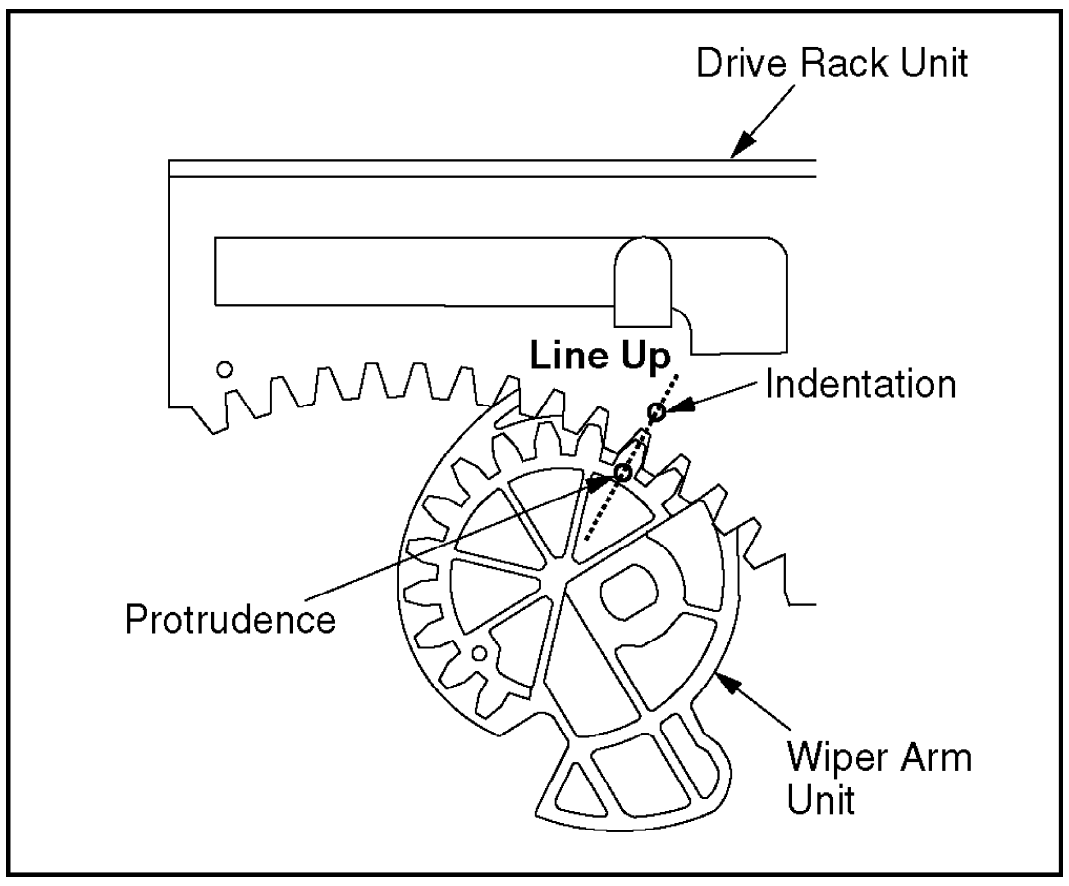
Drive Rack Unit
Line Up
Indentation
Protrudence
Wiper Arm Unit

3. Make sure to hook the spring to the Drive Rack Arm of Mechanism chassis.

6.3.2. Opener Lever and Drive Rack Unit

Fig. K2

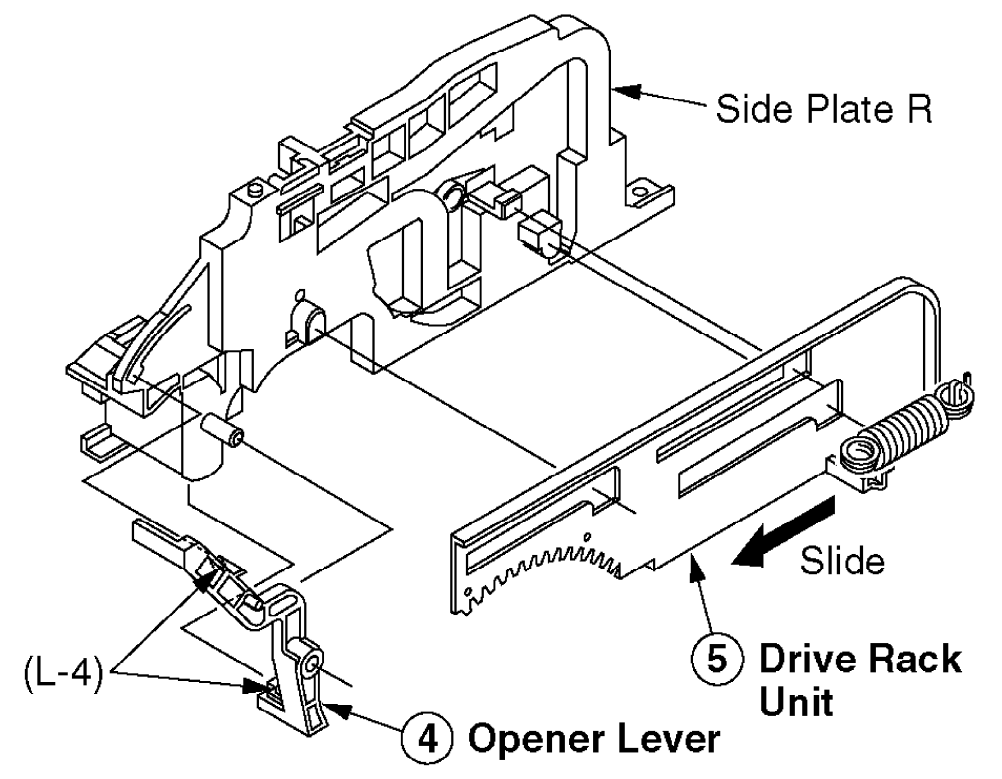

7. ADJUSTMENT PROCEDURES

7.1. SERVICE FIXTURES AND TOOLS

VFMS0003H6 **VHS Alignment Tape** 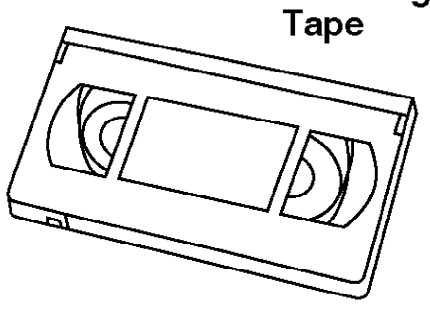 Video: Color Bar & Monoscope Audio: 6kHz(MONO)	**Back Tension Meter (Made in USA., Purchase Locally)** 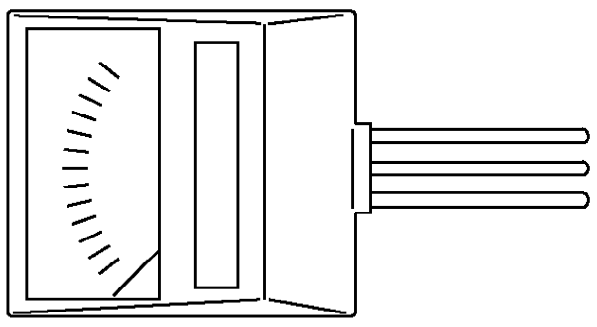	**VFK27** **Head Cleaning Stick** 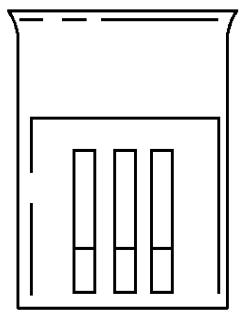
VFK0330 **H-Position Adjustment Driver** 	**VFKS0081** **Grease** 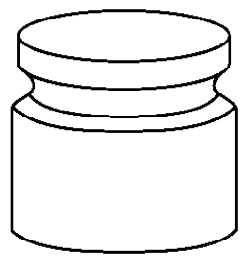	**VFK0329** **Post Adjustment Driver** 
LSUA0034 **Extension Cable (3pcs)** 	**DVDT-S01** **DVD Test Disc** 	**Firmware Disc for DVD Drive** **Firmware Disc for DVD Decoder**  **Not supplied**
Connector Cable (IDE Cable)  **Not supplied (Purchase locally)**		

7.2. MECHANICAL ADJUSTMENT

7.2.1. CLEANING PROCEDURE FOR THE UPPER CYLINDER UNIT

1. **While slowly turning the Upper Cylinder Unit counterclockwise by hand, gently rub the Video Heads with a Head Cleaning Stick (VFK27) moistened with Ethanol.**
   When using a Cleaning Cassette, make sure to use "DRY" type only and be aware that excessive use can shorten head life.

Fig. M1

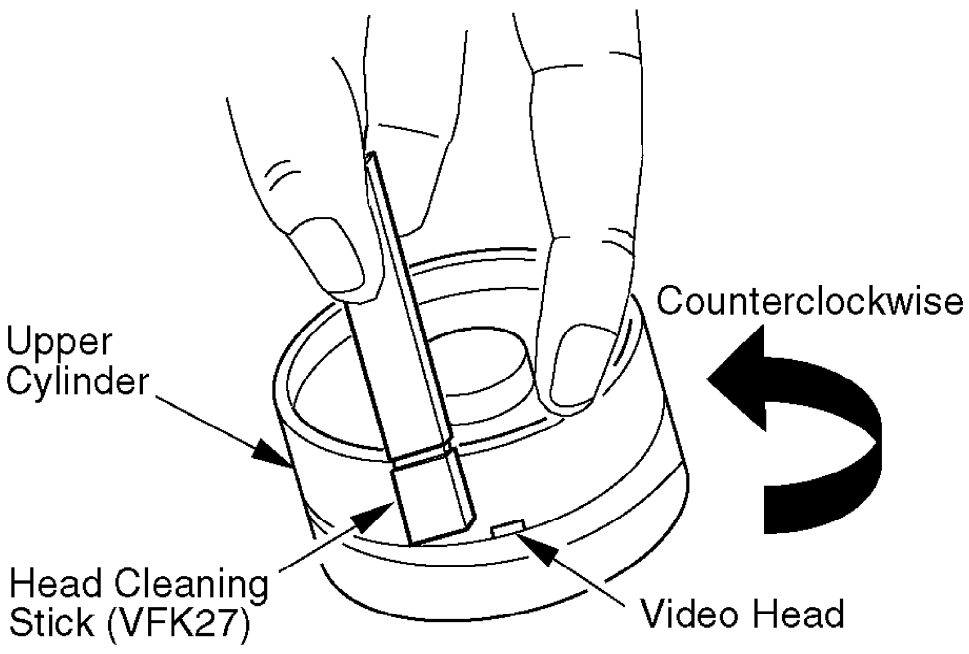

Note:

1. **Do not rub vertically or apply excess pressure to the Video Heads. Do not turn the Upper Cylinder Unit clockwise while cleaning.**
2. **After cleaning, use a Dry Head Cleaning Stick (VFK27) to remove any Ethanol remaining on the cylinder tape path. Otherwise, tape damage will occur.**

7.2.2. ADJUSTMENT PROCEDURES

7.2.2.1. BACK TENSION CONFIRMATION

Purpose:

To fine adjust the Back Tension so that the tape runs smoothly with a constant tension.

Symptom of Misadjustment:

1) If the tape tension is less than the specified value, the tape cannot come into proper contact with the Video Heads, resulting in poor picture playback.
2) If the tape tension is too high, the tape will soon be damaged.

Equipment Required:

Back Tension Meter (Made in U.S.A., Purchase Locally)
VHS Cassette Tape (120-Minute Tape)

Specification:

22.4 gf±2.5 gf

(0.220 N±0.025 N)

1. **Play back a T120 cassette tape from the beginning for approx. 10 to 20 seconds to stabilize tape movement.**
2. **Insert a Tension Meter into tape path and measure the back tension.**

Fig. M2-1

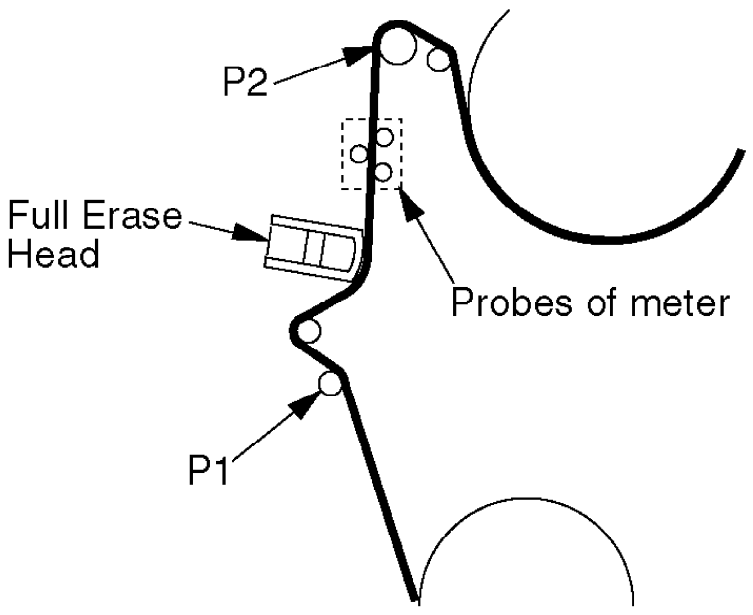
P2
Full Erase Head
Probes of meter
P1

3. **If the reading is out of specification, make sure that there is no dust or foreign material between the Brake Pad of Tension Control Arm Unit and the S Reel Table.**
   After cleaning, the reading of tension measurement is still out of specification, replace the Tension Arm Unit and the Tension Control Arm Unit.

Fig. M2-2

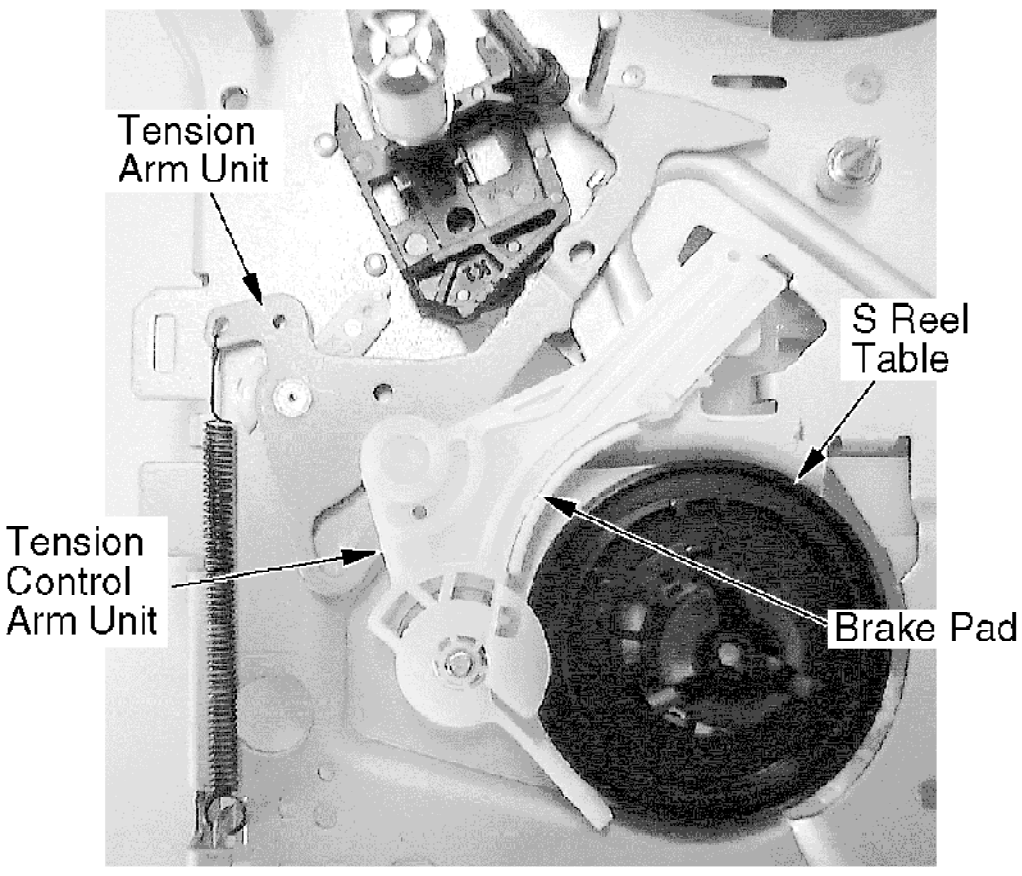
Tension Arm Unit
S Reel Table
Tension Control Arm Unit
Brake Pad

Note:

1. **Be sure that the three probes of the meter are all in solid contact with the tape, but not touching any other parts of the mechanism.**
2. **It is recommended that measurements should be repeated at least three (3) times because the tension meter is very sensitive to external vibrations.**

7.2.2.2. TAPE INTERCHANGEABILITY ADJUSTMENT

Note:

To perform these adjustment/confirmation procedures, set the tracking to the neutral position.

Equipment Required:

Dual Trace Oscilloscope
VHS Alignment Tape (VFMS0003H6)
Post Adjustment Driver (VFK0329)
H-Position Adjustment Driver (VFK0330)

7.2.2.2.1. ENVELOPE OUTPUT ADJUSTMENT

The height of the P2 and P3 Posts replacement part is preadjust at the factory.

Purpose:

To achieve a satisfactory picture and secure precise tracking.

Symptom of Misadjustment:

If the envelope is output poorly, much noise will appear in the picture. Then the tracking will lose precision and the playback picture will be distorted by any slight variation of the tracking control circuit.

Equipment Required:

Post Adjustment Driver (VFK0329)

1. **Place a jumper between TP6003 and +5 V(TP6009) on the TV/VCR Main C.B.A. to defeat Auto Tracking.**
2. **Eject the tape and insert it again to access the Neutral Tracking position.**
3. **Play back the alignment tape.**
4. **Connect the oscilloscope to TP3002 on the Video Signal Process Section of the TV/VCR Main C.B.A. Use TP6205 as a trigger.**
5. **Confirm that the RF envelope is flat enough (V1/V-max. is 0.7 or more). If not, with Post Adjustment Driver, adjust P2 and P3 post height so that the envelope waveform becomes as flat (V1/V-max. is 0.7 or more) as possible (Noenvelope drop). If the envelope drop appears on the left-half of the waveform, adjust P2 post height. If the envelope drop appears on the right-half of the waveform, adjust P3 post height.**

   CAUTION:

Overtightening P2 and P3 posts may cause the threads to strip.

Note:

It will be possible to confirm Step 5 according to following steps.

1. **Press the Tracking Control Up or Down button on remote control. Make sure that the envelope waveform remains flat. If not, readjust P2 and/or P3 post heights.**

Fig. M3-1

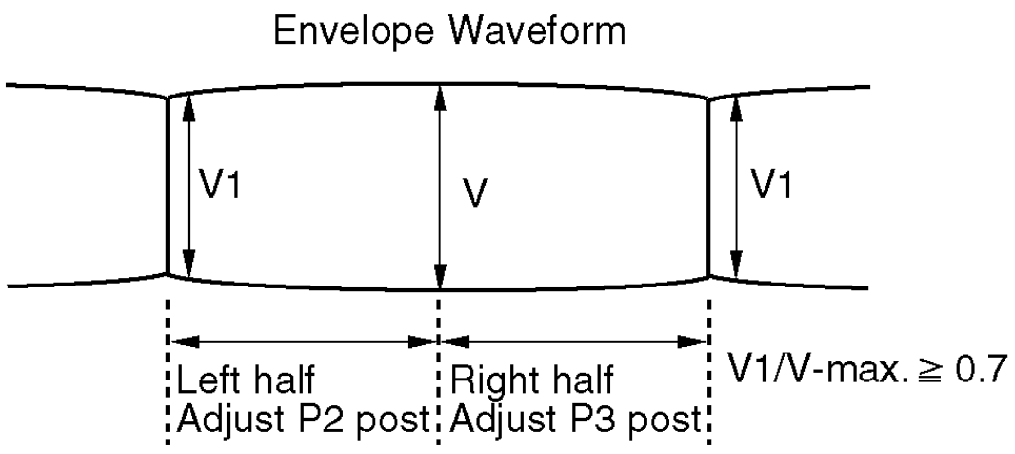
Envelope Waveform
V1
V
V1
Left half
Adjust P2 post
Right half
Adjust P3 post
V1/V-max. ≧ 0.7

Fig. M3-2

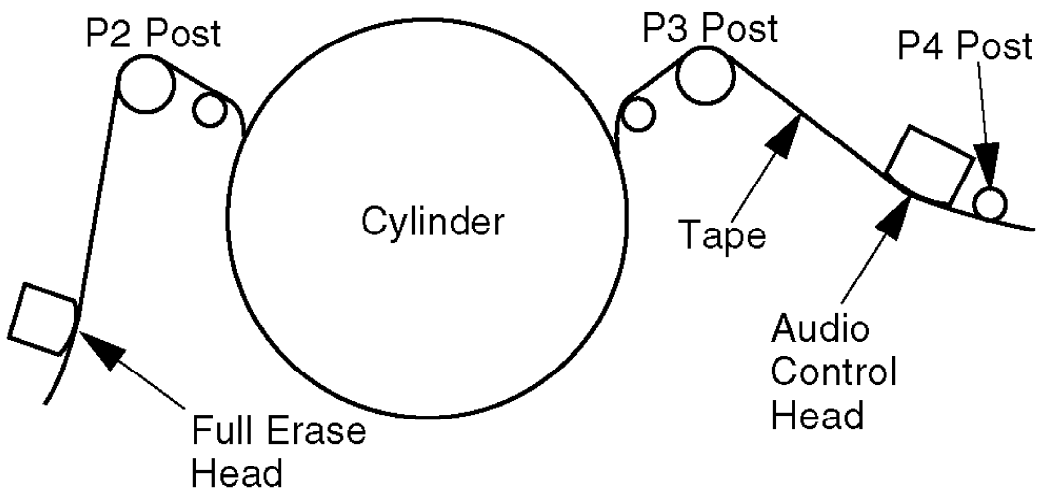
P2 Post
P3 Post
P4 Post
Cylinder
Tape
Audio
Control
Head
Full Erase
Head

6. **After adjustment, confirm that the tape travels without curling at P2 and P3 posts.**

Fig. M3-3

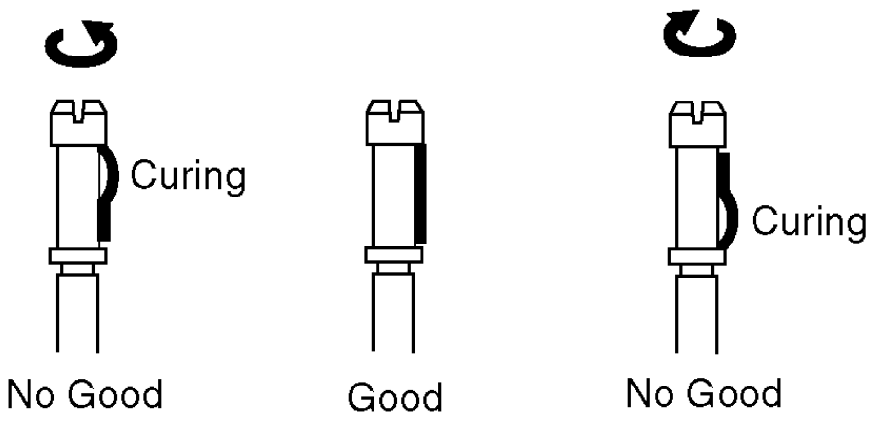
Curing
Curing
No Good
Good
No Good

7. **Remove the jumper after completing the adjustment procedure.**

7.2.2.2.2. AUDIO CONTROL HEAD TILT ADJUSTMENT

Purpose:

To confirm that the tape runs smoothly. In particular, confirm that the tape properly picks up the Audio Signal at the upper part of the head and the Control Signal at the lower part of the head.

Symptom of Misadjustment:

If the tilt of the Audio Control Head is poorly adjusted, the tape

will eventually be damaged. An intermittent Blue screen may be seen in Playback.

1. Play back a T120 cassette tape and check that the tape travels smoothly between the upper and lower guides of the P4 post.
2. If necessary, adjust Black Screw (B) clockwise until the tape begins to curl at the lower edge of the P4 post. Then adjust the screw counterclockwise until the curling is eliminated.

Fig. M4

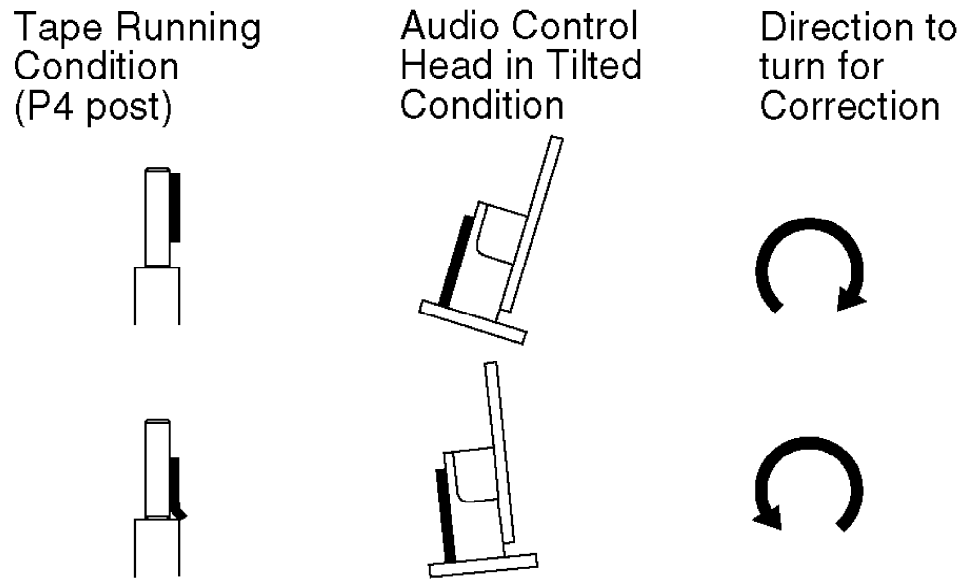
Tape Running Condition (P4 post)
Audio Control Head in Tilted Condition
Direction to turn for Correction

7.2.2.2.3. AUDIO CONTROL HEAD HEIGHT ADJUSTMENT

The height of the Audio Control Head replacement part is preset at the factory.

Purpose:

To be sure the tape runs properly along the Control Head.

Symptom of Misadjustment:

If the control signal is not properly picked up, Servo Operation cannot be achieved. A Blue screen will be seen in Playback.

This confirmation is required when the Audio Control Head is replaced.

1. Play back a T120 cassette tape and check that the lower edge of the tape runs approximately 0.25 mm above the lower edge of the Audio Control Head.
2. If necessary, adjust Black Screws (A) and (B) clockwise to lower the tape or counterclockwise to raise.

Fig. M5

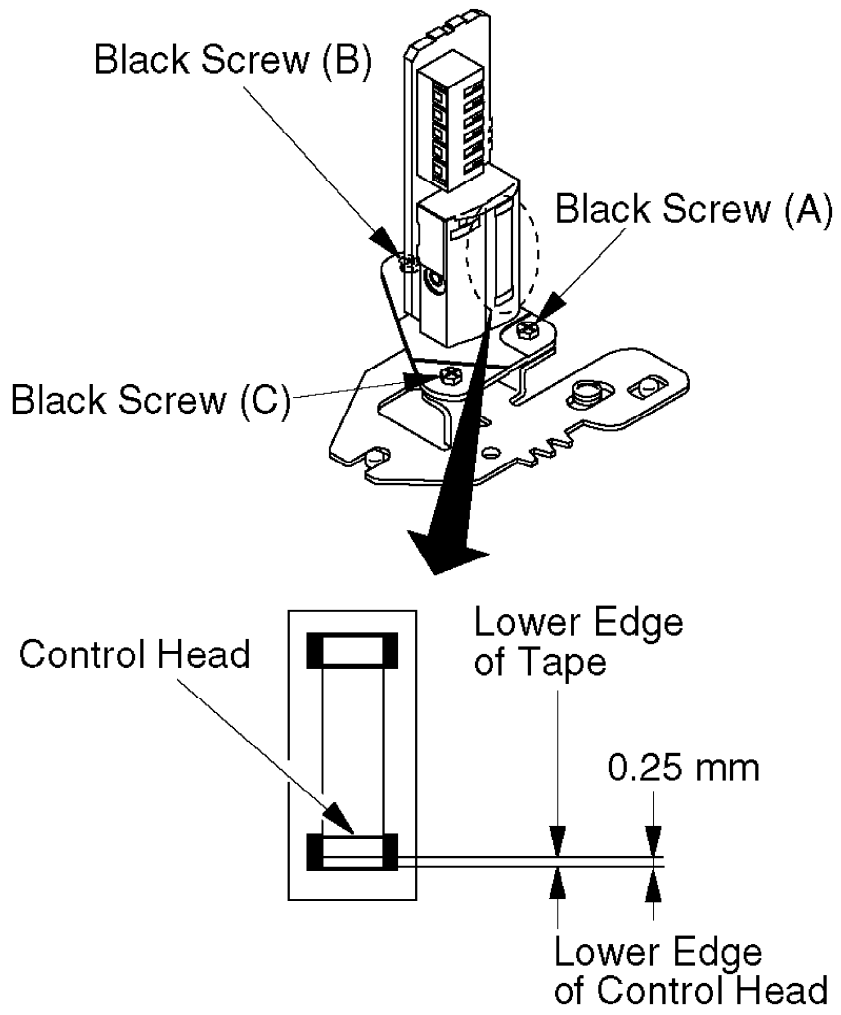
Black Screw (B)
Black Screw (A)
Black Screw (C)
Control Head
Lower Edge of Tape
0.25 mm
Lower Edge of Control Head

7.2.2.2.4. AUDIO CONTROL HEAD AZIMUTH ADJUSTMENT

Purpose:

To adjust the position and height of the Audio Control Head so that it meets the tape tracks properly.

Symptom of Misadjustment:

If the position of the Audio Control Head is not properly adjusted, the Audio S/N Ratio is poor.

1. **Connect the oscilloscope to the TP4002 on the TV/VCR Main C.B.A.**
2. **Play back the 6 kHz Monaural Audio portion of the alignment tape.**
3. **Adjust Black Screw (C) on the Audio Control Head base so that the output level is at maximum.**

Fig. M6

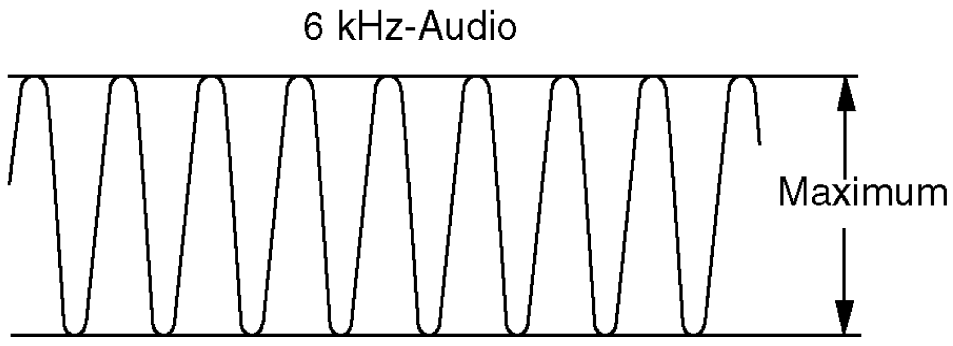
6 kHz-Audio
Maximum

4. **Confirm the height of the Audio Control Head is proper. If not, readjust Black Screws (A) and (B).**

7.2.2.2.5. AUDIO CONTROL HEAD HORIZONTAL POSITION ADJUSTMENT

Purpose:

To adjust the Horizontal Position of the Audio Control Head.

Symptom of Misadjustment:

If the Horizontal Position of the Audio Control Head is not properly adjusted, a maximum envelope cannot be obtained at the Neutral Position of the Tracking Control Circuit.

1. Place a jumper between TP6003 and +5 V(TP6009) on the TV/VCR Main C.B.A. to defeat Auto Tracking.
2. Eject the tape and insert it again to access the Neutral Tracking position.
3. Play back the alignment tape.
4. Connect the oscilloscope to TP3002 on the Video Signal Process Section of the TV/VCR Main C.B.A. Use TP6205 as a trigger.
5. Loosen the Black Screw (D) and tighten it slightly. Set the H-Position Adjustment Driver into the Hole (A). Then slowly turn the fixture either clockwise or counterclockwise so that the envelope is at maximum.

Fig. M7

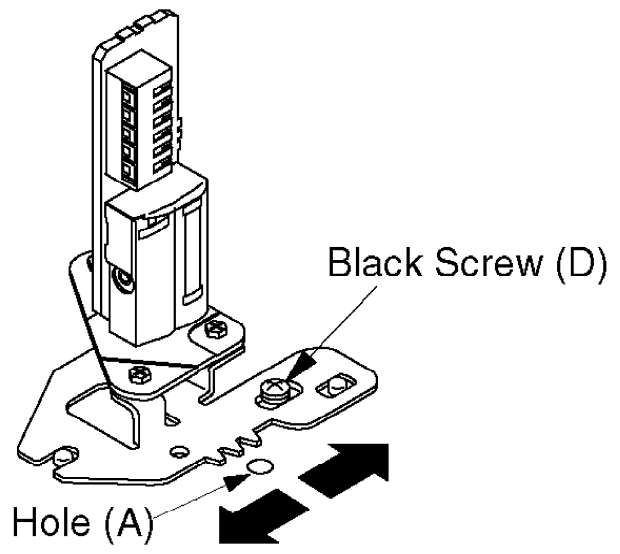

6. Tighten Black Screw (D).
7. Remove the jumper between TP6003 and +5 V(TP6009).

Note:

Old type of H-Position Adjustment Driver (VFK0136) can be used for this adjustment.

7.3. ELECTRICAL ADJUSTMENT

NOTE:

Following Adjustments have been preadjusted at factory and are not required.

- Purity Adjustment
- Static Central Convergence Adjustment
- Dynamic Convergence Adjustment

7.3.1. TEST EQUIPMENT

To do all of these electrical adjustments, the following equipment is required.

1. **Dual-Trace Oscilloscope**
   Voltage Range: 0.001 V to 50 V/Div.
   Frequency Range: DC to 50 MHz
   Probes: 10:1, 1:1
2. **NTSC Video Pattern Generator**
3. **DVM (Digital Volt Meter)**
4. **MTS/SAP Signal Generator**
   (TV Multi-Channel Sound Modulator (U.S.A.))
5. **Plastic Tip Driver and Non-Metal Driver**
6. **Isolation Transformer (Variable)**
7. **VHS Alignment Tape (VFMS0003H6)**
8. **Degaussing Coil**
9. **White Pattern Generator**
10. **Audio Generator**
11. **DVD Test Disc**

7.3.2. HOW TO READ THE ADJUSTMENT PROCEDURES

Fig. E1

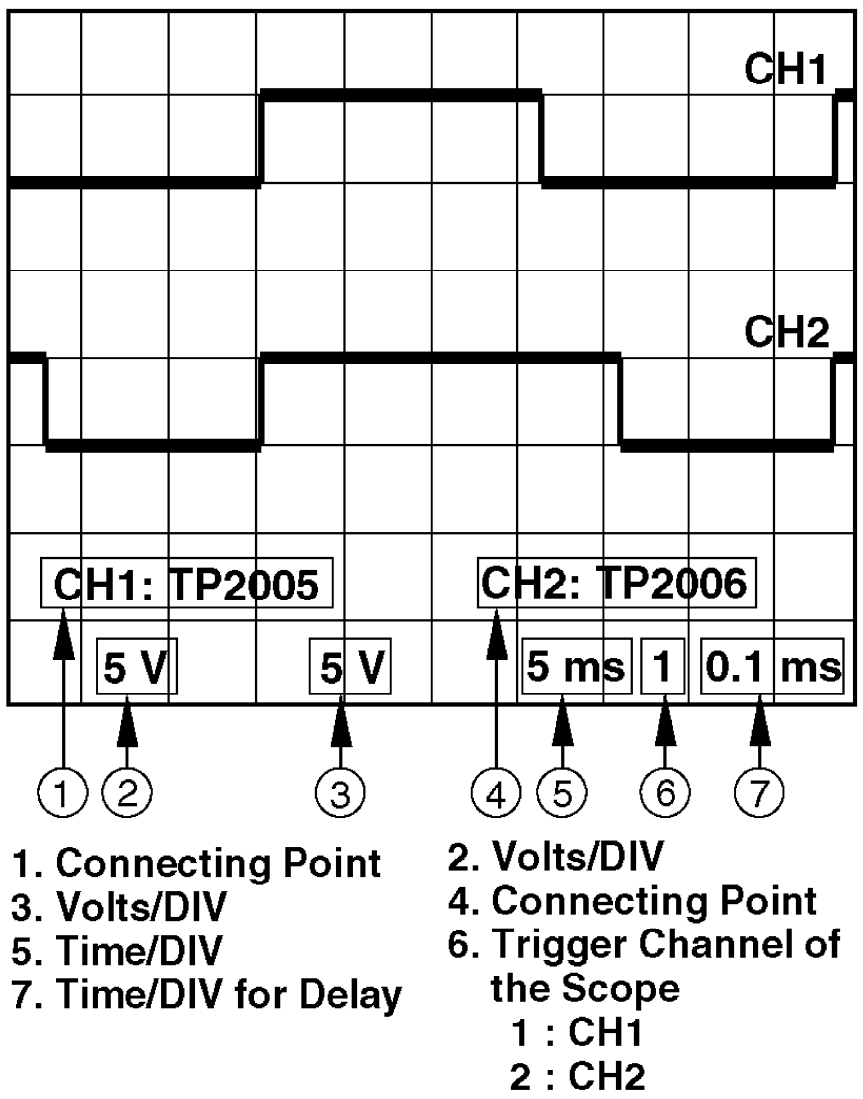
CH1
CH2
CH1: TP2005
CH2: TP2006
5 V
5 V
5 ms
1
0.1 ms
①
②
③
④
⑤
⑥
⑦
1. Connecting Point
3. Volts/DIV
5. Time/DIV
7. Time/DIV for Delay
2. Volts/DIV
4. Connecting Point
6. Trigger Channel of the Scope
1 : CH1
2 : CH2

7.3.3. STEREO/SAP SEPARATION ADJUSTMENT

Note:

Remove the DVD unit before performing this adjustment.

Purpose:

To separate the L and R Channels of Stereo Signal.

Symptom of Misadjustment:

The L and R Channels of Stereo Signal will not be separated properly resulting in no stereophonic effect.

Test Point :

TP9001 (Audio C.B.A.)

Adjustment :

R9001, R9008 (Audio C.B.A.)

Specification :

minimum level

INPUT :

Antenna Input Terminal
MTS (ONLY L CH)
300 Hz±5 Hz, 3 kHz±5 Hz
14 % or 7 % Modulating

Mode :

STEREO audio (TV)

Equipment :

Oscilloscope,
MTS/SAP Signal Generator

1. **Set to TV mode, and then set to STEREO audio.**
2. **Connect the RF OUTPUT of the MTS/SAP Signal Generator to the Antenna Input Terminal.**
   Then, set the MTS/SAP Signal Generator as follows.
   MTS (ONLY L CH)
   300 Hz±5 Hz
   14 % or 7 % Modulating
3. **Connect the Oscilloscope to TP9001 on the Audio C.B.A.**
4. **Adjust R9001 (SEP (L)) on the Audio C.B.A. so that the signal level of TP9001 is minimum.**
5. **Set the MTS/SAP Signal Generator as follows.**

MTS (ONLY L CH)
3 kHz±5 Hz
14 % or 7 % Modulating

6. Adjust R9008 (SEP (H)) on the Audio C.B.A. so that the signal level of TP9001 is minimum.

Fig. E2

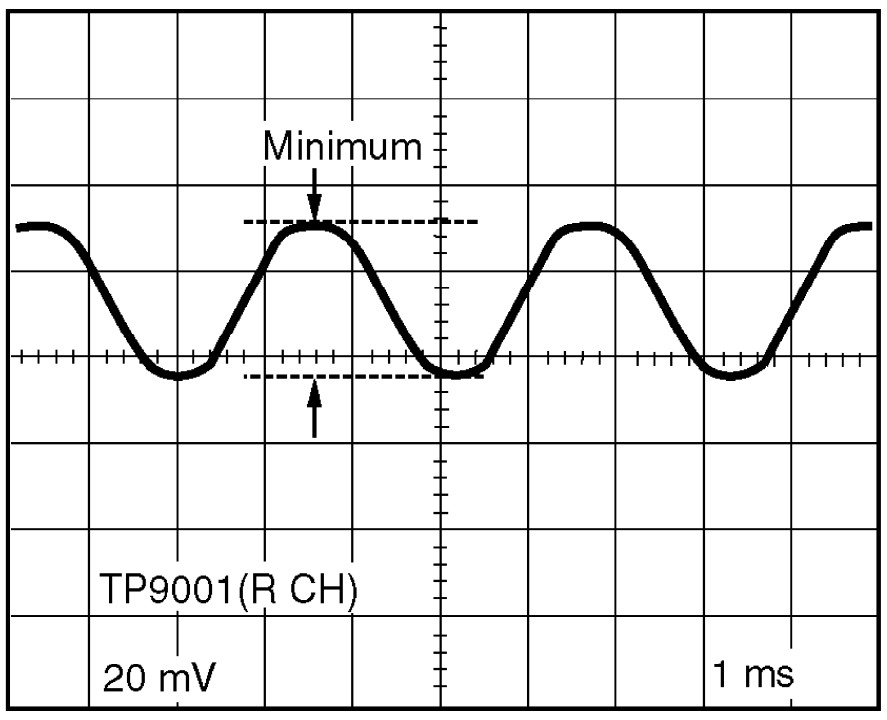

7.3.4. SEPARATION ADJUSTMENT

Note:

Be sure to perform this adjustment after STEREO/SAP SEPARATION ADJUSTMENT are completed.

Purpose:

To separate the L and R Channels of Stereo Signal.

Symptom of Misadjustment:

The L and R Channels of Stereo Signal will not be separated properly resulting in no stereophonic effect.

Test Point :

Pin 19 of P4203 or TP4202 (Audio C.B.A.)

Adjustment :

R9003 (Audio C.B.A.)

Specification :

minimum level

INPUT :

Antenna Input Terminal
MTS (ONLY L CH)
300 Hz±5 Hz
14 % or 7 % Modulating

Mode :

STEREO audio (TV)

Equipment :

Oscilloscope, MTS/SAP Signal Generator

1. **Connect the RF OUTPUT of the MTS/SAP Signal Generator to the Antenna Input Terminal.**
2. **Connect the Oscilloscope to Pin 19 of P4203 or TP4202 on the Audio C.B.A**
3. **Set to TV mode, and then set to STEREO audio.**
4. **Adjust R9003 on the Audio C.B.A. so that the signal level is minimum.**

Fig. E3

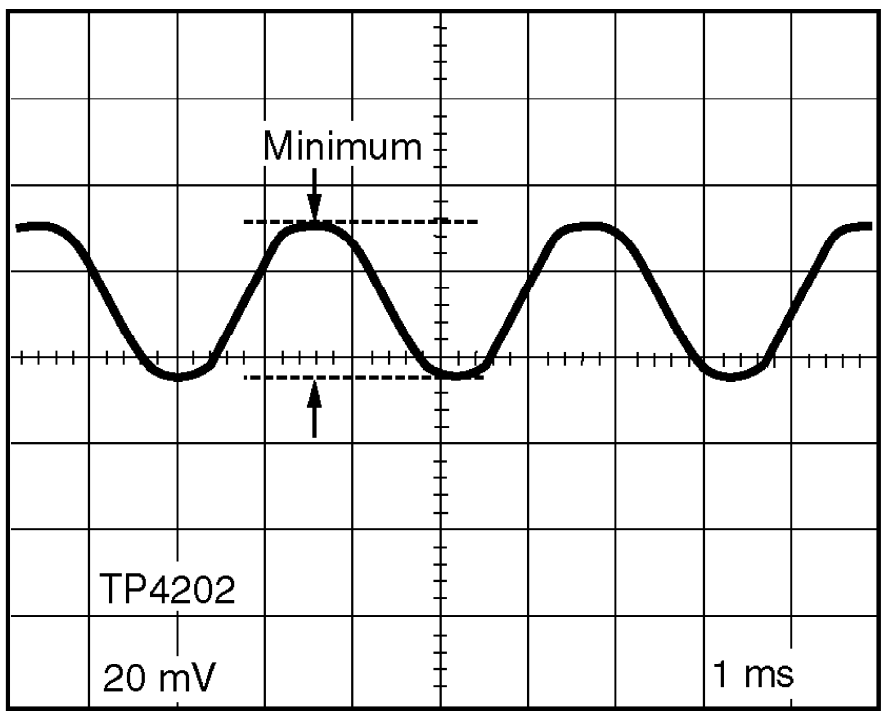

7.3.5. FM VCO ADJUSTMENT

Note:

Remove the DVD unit before performing this adjustment.

Purpose:

To set VCO free run frequency.

Symptom of Misadjustment:

Even when stereophony is received, only monaural sound will be output.

Test Point :

Pin 36 of P4204, TP9201 (Audio C.B.A.)

Adjustment :

R9206 (Audio C.B.A.)

Specification :

38.0 kHz±50 Hz

INPUT :

Mode :

STEREO audio (FM Radio)

Equipment :

Frequency Counter

1. Connect Pin 36 of P4204 on Audio C.B.A. to GND.

Fig. E4-1



2. Connect TP9201 on Audio C.B.A. to GND through a resistor (3.3 k Ω). Then, connect Frequency Counter to TP9201.

Fig. E4-2

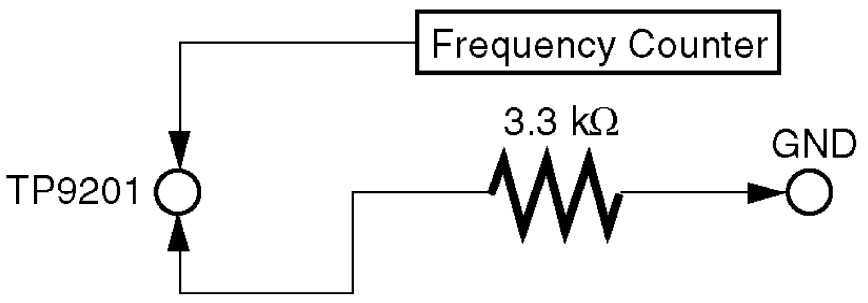

3. Adjust R9206 (FM VCO) so that the frequency is 38.0 kHz ±50 Hz.

7.3.6. DVD LUMINANCE LEVEL ADJUSTMENT

Purpose:

To set the optimum luminance level for DVD.

Symptom of Misadjustment:

The picture is too bright or too dark.

Test Point :

TP8201 (DVD DECODER C.B.A.)

Adjustment :

R8299 (DVD DECODER C.B.A.)

Specification :

1.0 V[P-P]±50 mV[P-P]

INPUT :

Mode :

DVD PLAY

Equipment :

Oscilloscope, DVD Test Disc

1. **Playback 100% Flat Field on the DVD Test Disc in DVD PLAY Mode.**
2. **Connect the Oscilloscope to TP8201 on the DVD DECODER C.B.A. and GND (TP8203 on the DVD DECODER C.B.A.).**
3. **Adjust R8299 on the DVD DECODER C.B.A. so that the level A becomes 1.0 V[P-P]±50 mV[P-P].**

Fig. E5

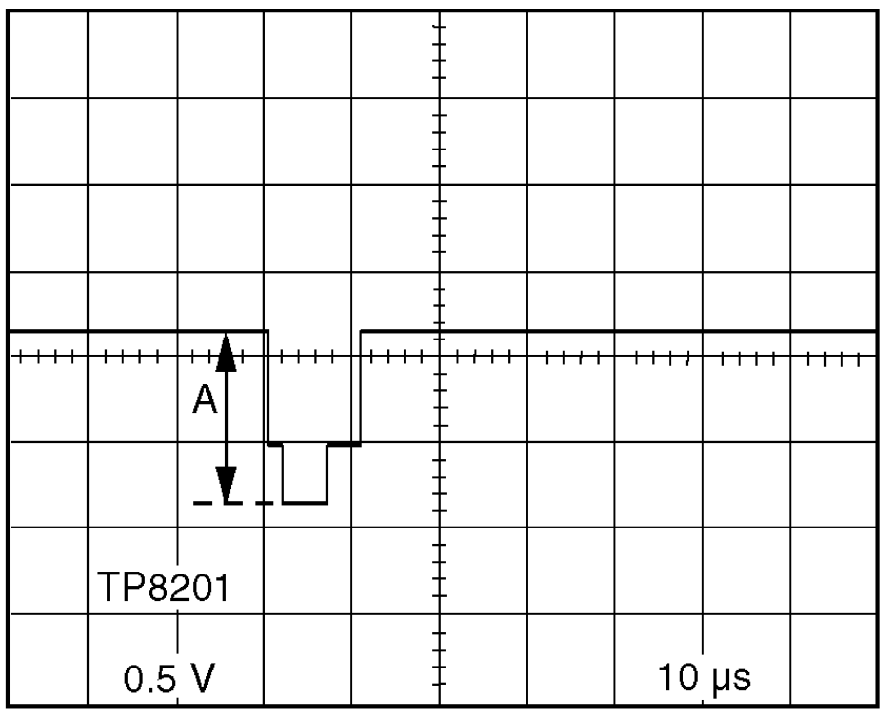

7.3.7. EVR (Electronic Variable Register) ADJUSTMENT WITH THE REMOTE CONTROL

This unit has electronic technology using I2C Bus concept.The following control functions are adjusted by using "On Screen Displays" and the remote control instead of adjusting mechanical controls (VR).

Control functions	※1 Address	Range	Default
SUB COLOR	00	C0 - FF, 00 - 3F	00
SUB TINT	01	E0 - FF, 00 - 1F	00
SUB BRIGHT	02	C0 - FF, 00 - 3F	F0
CONTRAST	03	C1 - FF, 00	00
SUB SHARPNESS	04	E0 - FF, 00 - 1F	E8
R CUT -OFF	05	00 - 7F	1E
G CUT -OFF	06	00 - FD	3C
B CUT -OFF	07	00 - FD	3C
G DRIVE	08	00 - 7F	40
B DRIVE	09	00 - 7F	40
SUB CONTRAST	0A	00 - 0F	06
H-CENTER	0B	00 - 0F	08
V SIZE	0D	00 - 7F	40
V POSITION	0E	00 - 7F	40
PG SHIFTER	15	00 - FD	80

Bold-faced letters → Control functions which need to be adjusted.

Note:

※1 Address is not displayed on the TV screen.
Other Addresses except above are not used.

7.3.7.1. EVR ADJUSTMENT ITEM

The following Items need to be adjusted for EVR adjustment.

- PG SHIFTER ADJUSTMENT

- SUB CONTRAST ADJUSTMENT
- CUT OFF, DRIVE ADJUSTMENT
- SUB COLOR/SUB TINT ADJUSTMENT
- V. HEIGHT/H. POSITION ADJUSTMENT
- WHITE BALANCE ADJUSTMENT
- SUB BRIGHTNESS ADJUSTMENT

7.3.7.2. How to enter EVR adjustment mode

Press and hold STOP/EJECT, PLAY/REPEAT and VOL- buttons of VCR operation panel on the unit together over 5 seconds with no cassette inserted.
The adjustment overlay will appear to Enter EVR adjustment mode.

Fig. E6-1

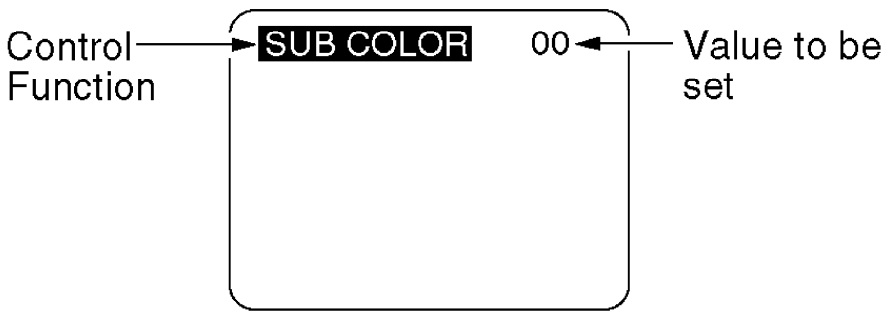
Control Function
SUB COLOR
00
Value to be set

7.3.7.2.1. How to adjust:

1. Press UP/DOWN ▲ ▼ key on the remote control to select control function to be adjusted.

Important Note:

Make a note of the original value of the controls before modifying in case the wrong control is adjusted.

2. Press RIGHT/LEFT ◀ ▶ key on the remote control so that the shaded area moves to the value.

Fig. E6-2

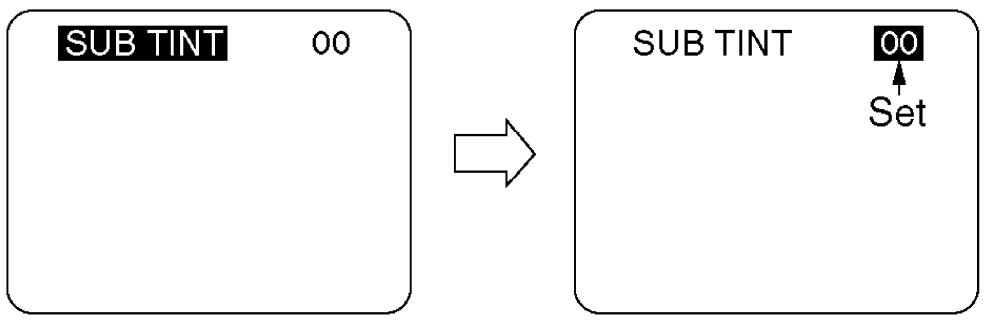
SUB TINT
00
SUB TINT
00
Set

3. Press UP/DOWN ▲ ▼ key on the remote control to adjust the value of the selected control.

Fig. E6-3

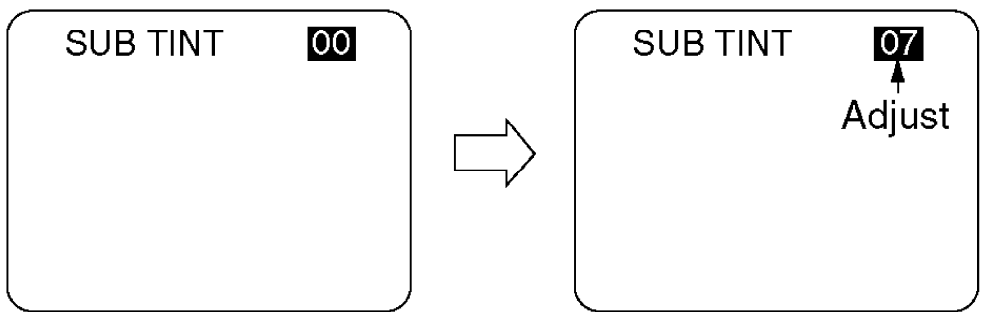
SUB TINT
00
SUB TINT
07
Adjust

Note:

You can select a desired channel by using the numbered keys on

the remote control in EVR adjustment mode.

4. **Press RIGHT/LEFT◀ ▶ key on the remote control so that the shaded area moves to the control function.**

Fig. E6-4

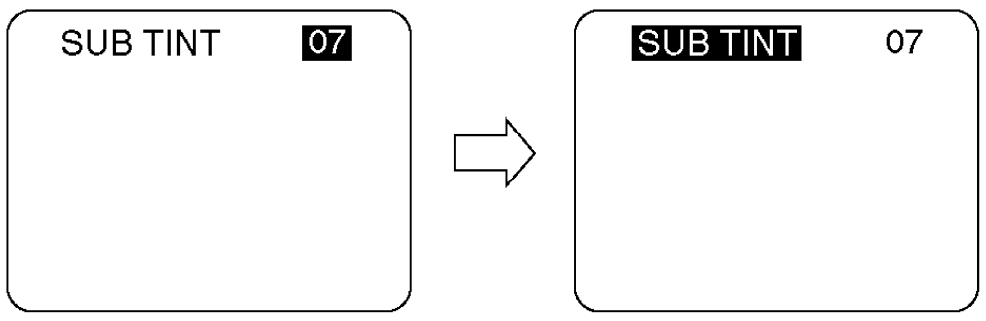
SUB TINT
07
SUB TINT
07

5. **Press UP/DOWN▲ ▼ key on the remote control to select a control function for the next adjustment if necessary.**

Fig. E6-5

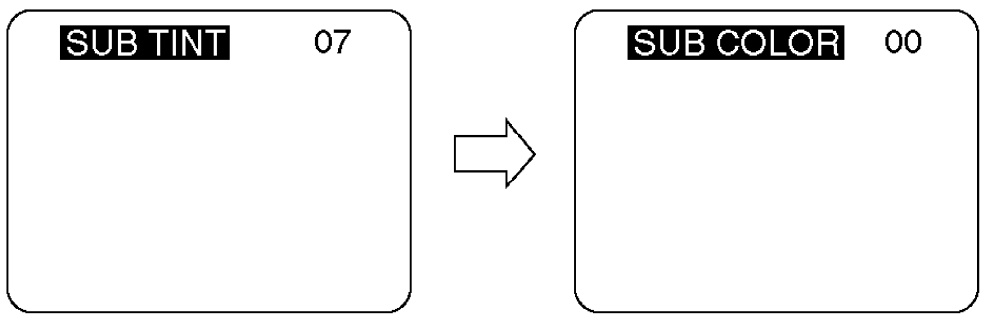
SUB TINT
07
SUB COLOR
00

7.3.7.2.2. How to release from EVR Adjustment Mode:

Press and hold STOP/EJECT, PLAY/REPEAT and VOL- buttons of VCR operation panel on the unit together over 5 seconds again or press the POWER button OFF to release EVR adjustment mode. The adjusted value will be written to Memory IC(IC6004).

7.3.7.3. HOW TO ENTER EVR PG SHIFTER ADJUSTMENT MODE

1. **Enter EVR adjustment mode.**
2. **Insert the VHS Alignment Tape and playback in SP mode. The adjustment overlay will appear.**

Fig. E6-6

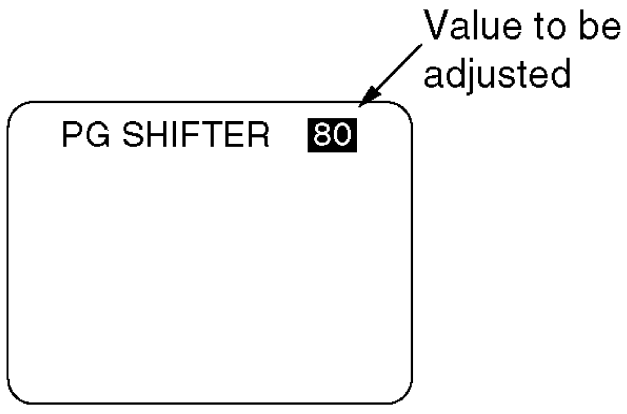
Value to be adjusted
PG SHIFTER
80

7.3.7.3.1. How to adjust:

Press UP/DOWN▲ ▼ key on the remote control to adjust the value.

Fig. E6-7

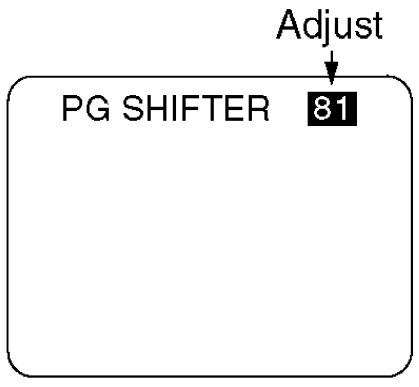
Adjust
PG SHIFTER
81

7.3.7.4. HOW TO ENTER SERVICE MODE

1. Set the unit to TV Mode.
2. Enter EVR adjustment mode.
3. Press DISPLAY key on the remote control for collapse scan.

Note:

Before pressing DISPLAY key on the remote control for collapse scan, select the desired control function and move the shaded area to the value for adjustments you will proceed.

Fig. E6-8

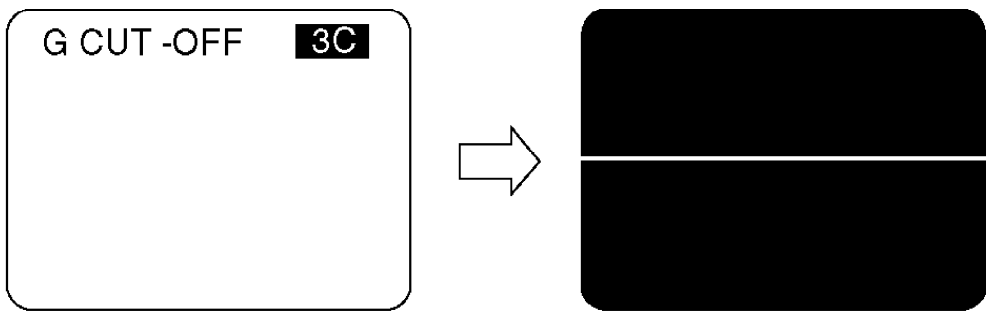

7.3.7.4.1. How to release from Service Mode:
Press DISPLAY key again on the remote control.

7.3.8. PG SHIFTER ADJUSTMENT

Purpose:

Determine the Video Head Switching Point during Playback.

Symptom of Misadjustment:

May cause Head Switching Noise and/or Vertical Jitter.

Test Point :

TP3001 (Main C.B.A.),
TP6205 (Main C.B.A.)

Adjustment :

PG SHIFTER (EVR)

Specification :

6 H±1 H (0.38 ms±0.06 ms)

INPUT :

Mode :

SP Playback

Equipment :

Oscilloscope,
VHS Alignment Tape (VFMS0003H6)

1. Insert the VHS Alignment Tape and playback in SP mode.

2. **Connect the channel-1 scope probe to TP3001 and the channel-2 scope probe to TP6205. Used TP6205 as a trigger.**
3. **Select PG SHIFTER in EVR adjustment mode and adjust value so that the trailing edge of the head switching pulse is placed 6 H±1 H (0.38 ms±0.06 ms) before the start of the vertical sync pulse.**

Fig. E7

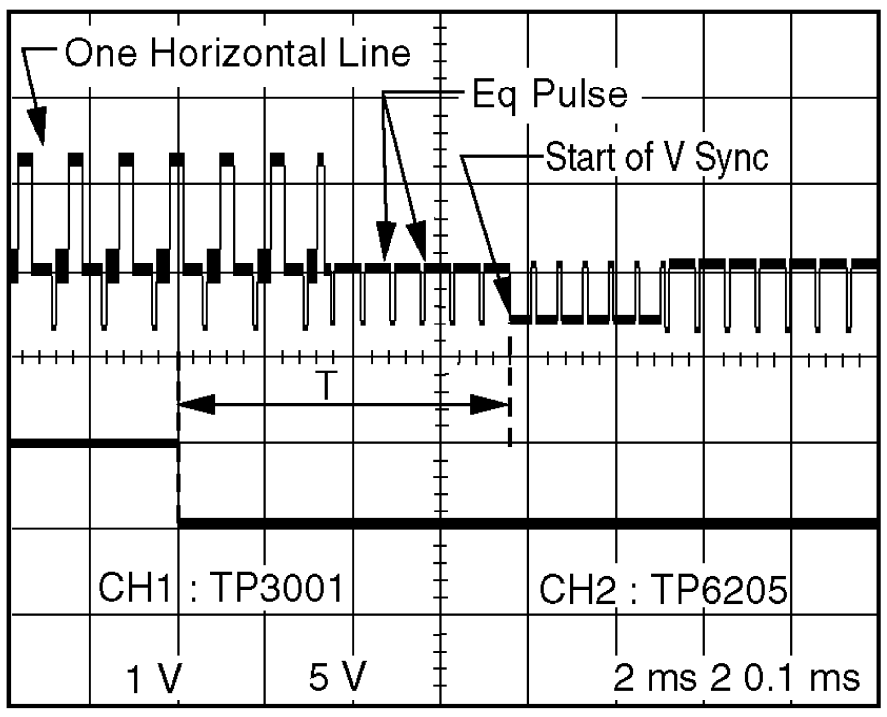

One Horizontal Line
Eq Pulse
Start of V Sync
T
CH1 : TP3001
CH2 : TP6205
1 V
5 V
2 ms 2 0.1 ms

7.3.9. SUB CONTRAST ADJUSTMENT

Purpose:

To set the optimum sub contrast level.

Symptom of Misadjustment:

The picture is too dark or too light.

Test Point :

Pin 5 of P6001 (Main C.B.A.)
or TP49 (CRT C.B.A.)

Adjustment :

SUB CONTRAST (EVR),

Specification :

2.6 V[p-p]±0.1 V[p-p]

INPUT :

Video Input Jack,
Crosshatch Pattern Signal 1 V[p-p]
(75 Ω terminated)

Mode :

STOP

Equipment :

Oscilloscope,
NTSC Video Pattern Generator

1. Supply a Crosshatch Pattern Signal to the Video Input Jack.
2. Connect the Oscilloscope to Pin 5 of P6001 on the Main C.B.A. or TP49 on the CRT C.B.A.
3. Select SUB BRIGHT in EVR adjustment mode. Then, after making a note of the original value, adjust to the (D0).
4. Select SUB CONTRAST in EVR adjustment mode and adjust so that the level A is 2.6 V[p-p]±0.1 V[p-p].
5. Select SUB BRIGHT in EVR adjustment mode and reset to the original value.

Fig. E8

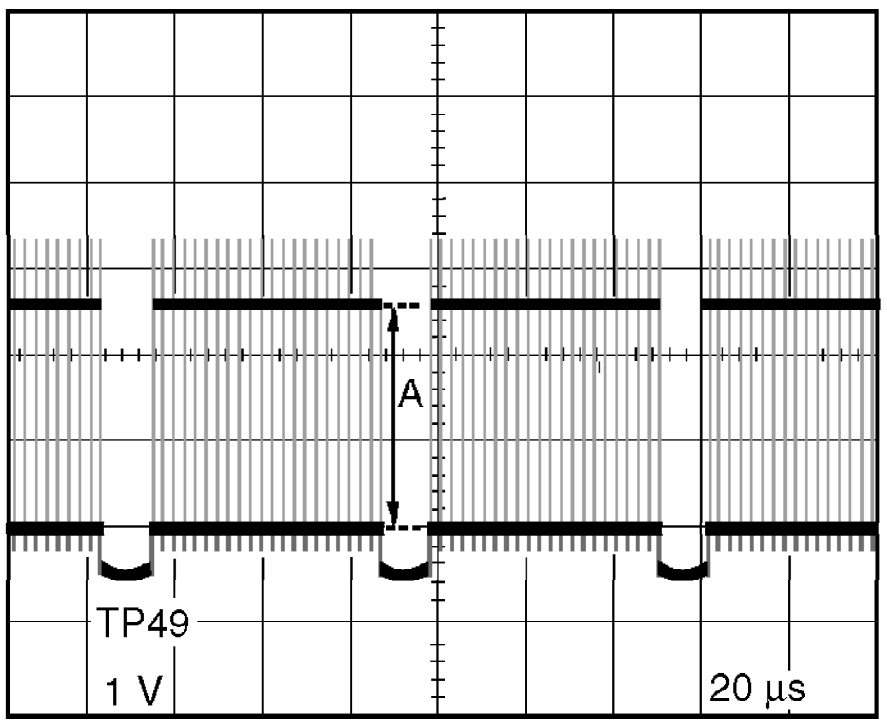

7.3.10. FOCUS, SCREEN, CUT OFF, DRIVE ADJUSTMENT

Purpose:

To set the optimum Focus and Screen.

Symptom of Misadjustment:

The picture is out of Focus and there will be an improper screen color mix.

Test Point :

TP50 (CRT C.B.A.)

Adjustment :

FOCUS CONTROL (Flyback Transformer),
SCREEN CONTROL (Flyback Transformer),
SUB BRIGHT (EVR),
B DRIVE (EVR),
G DRIVE (EVR),

B CUT -OFF (EVR),
G CUT -OFF (EVR),
R CUT -OFF (EVR)

Specification :

Refer to descriptions below.

INPUT :

Video Input Jack,
Monoscope Pattern Signal

Mode :

STOP

Equipment :

Oscilloscope,
NTSC Video Pattern Generator

1. Supply a Monoscope Pattern Signal to the Video Input Jack.
2. Connect the Oscilloscope to TP50 on the CRT C.B.A. (Use TP47 for GND.)
3. Select SUB BRIGHT and move the shaded area to the value in EVR adjustment mode.
4. Adjust the FOCUS CONTROL on the Flyback Transformer so that the center of picture is the sharpest.
5. Turn the SCREEN CONTROL on the Flyback Transformer fully counterclockwise.
6. Select SUB BRIGHT and move the shaded area to the data in EVR adjustment mode.
7. Press DISPLAY key on the remote control for collapse scan. (Refer to "HOW TO ENTER SERVICE MODE.")
8. Adjust SUB BRIGHT in EVR adjustment mode so that the level A is 185 VDC±5 VDC.

Fig. E9

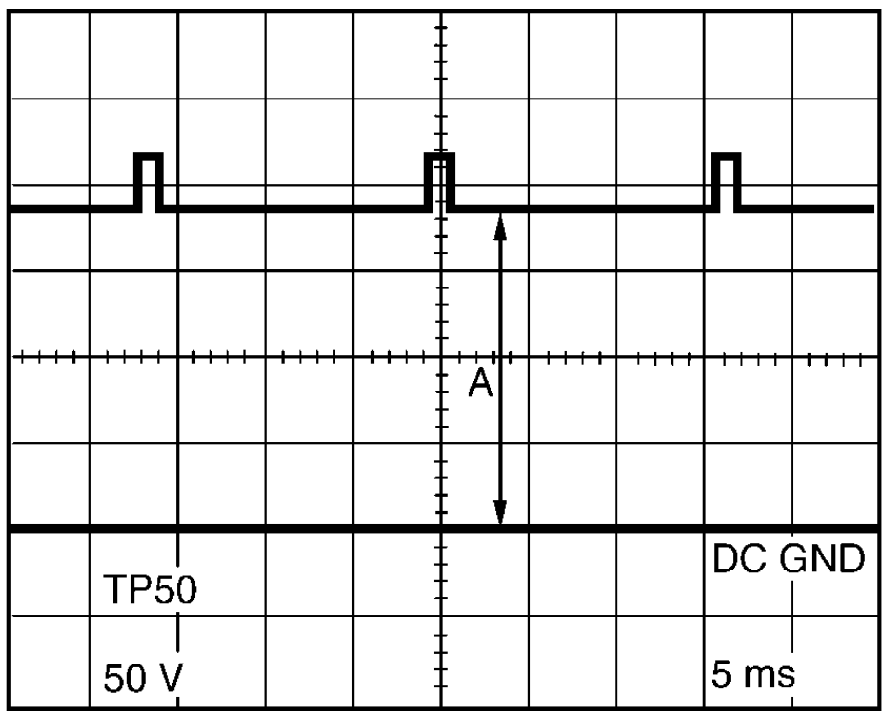

9. Turn the SCREEN CONTROL on the Flyback Transformer clockwise carefully and stop at the point where any color is first observed.
10. In EVR adjustment mode, select the two colors not observed in step 9 from the following control functions (B CUT-OFF, G CUT-OFF or R CUT-OFF) and adjust so that the horizontal line becomes white.
    For example, if the horizontal line appeared red in step 9, select and adjust the B CUT-OFF and G CUT-OFF.
    (See NOTE)
11. Press DISPLAY key on the remote control again to return for full frame scan.
12. Select SUB BRIGHT in EVR adjustment mode and adjust so that the picture has adequate brightness.
13. Select G DRIVE and B DRIVE in EVR adjustment mode and adjust so that the entire screen is white.

Note:

Before pressing DISPLAY key on the remote control for collapse scan, select the desired control function and move the shaded area to the value.

7.3.11. SUB COLOR/SUB TINT ADJUSTMENT

Purpose :

To set the standard color phase.

Symptom of Misadjustment :

Color phase will be shifted.

Test Point :

Pin 5 of P6001 (Main C.B.A.)

or TP49 (CRT C.B.A.)

Adjustment :

SUB COLOR (EVR), SUB TINT (EVR)

Specification :

C = 1.30 V[p-p]±0.15 V[p-p]

INPUT :

Video Input Jack, Rainbow Color Bar

Mode :

STOP

Equipment :

Oscilloscope, NTSC Video Pattern Generator

1. **Supply the Rainbow Color Bar signal to Video Input Jack.**
2. **Select SUB BRIGHT in EVR adjustment mode. Then, after making a note of the original value, adjust to the minimum (C0).**
3. **Connect the Oscilloscope to Pin 5 of P6001 on the Main C.B.A. or TP49 on the CRT C.B.A.**
4. **Select SUB TINT in EVR adjustment mode and adjust so that level A and B should be equal in amplitude.**

Fig. E10-1

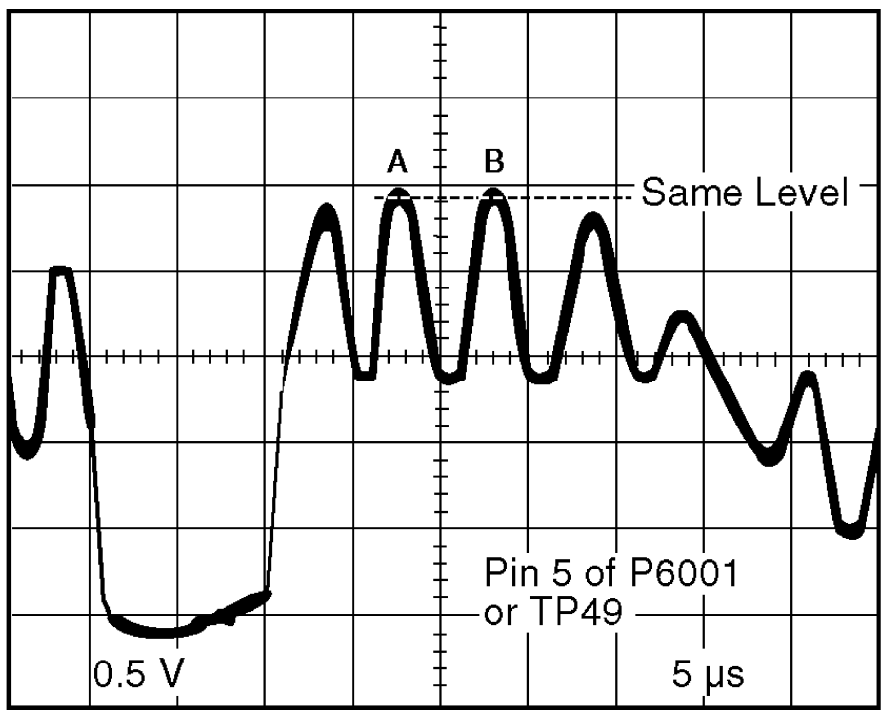

5. **Select SUB COLOR in EVR adjustment mode and adjust so that the level C is 1.30 V[p-p]±0.15 V[p-p].**

Fig. E10-2

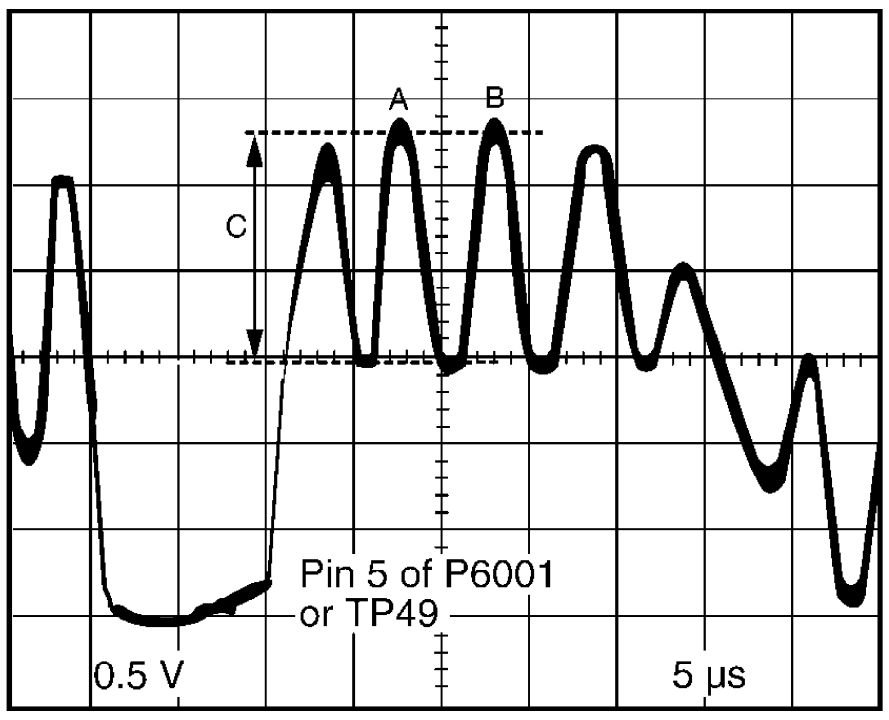

6. Select SUB BRIGHT in EVR adjustment mode and reset to the original value.

7.3.12. V. HEIGHT/H. POSITION ADJUSTMENT

Purpose :

To set the standard vertical and horizontal picture size.

Symptom of Misadjustment :

The picture size is on the vertical and horizontal axis is abnormal.

Test Point :

Adjustment :

V SIZE (EVR),
H-CENTER (EVR)
V POSITION (EVR)

Specification :

Refer to descriptions below.

INPUT :

Video Input Jack,
Monoscope Pattern Signal

Mode :

STOP

Equipment :

NTSC Video Pattern Generator

1. Supply a Monoscope Pattern Signal to the Video Input Jack.
2. Select H-CENTER in EVR adjustment mode and adjust so that A is approximately equal to width B.

3. **Select V SIZE in EVR adjustment mode and adjust so that the top 4th line is just in view.**
4. **Confirm that the bottom 3rd line is in view and that the bottom 4th line is out of view.**
5. **If the line are not positioned correctly, select V POSITION in adjustment mode and adjust correctly.**

Fig. E11

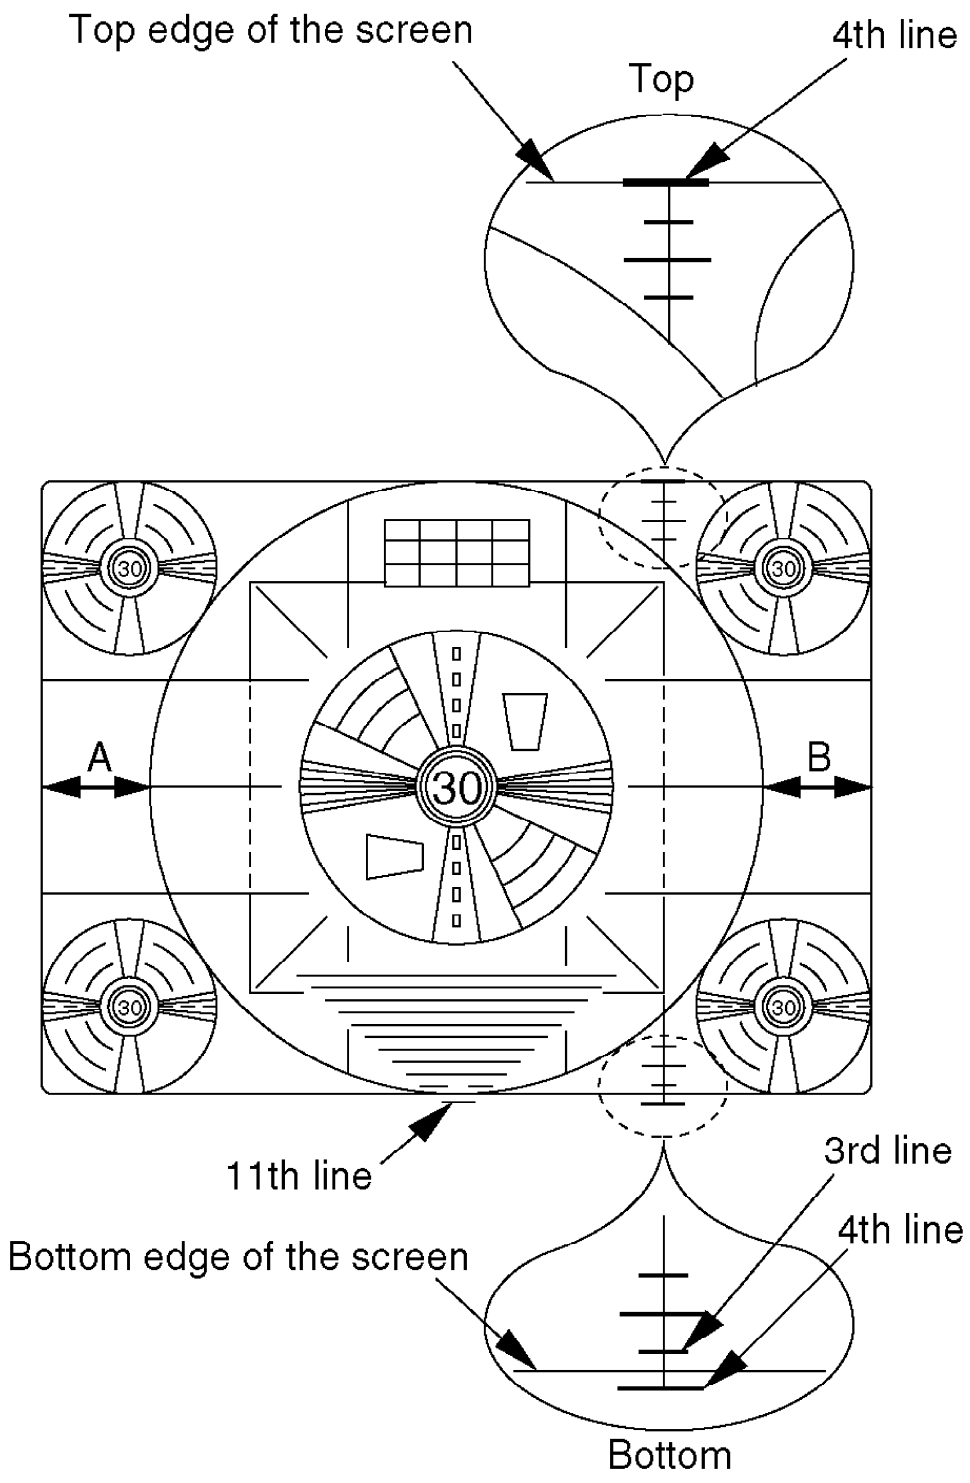
Top edge of the screen
4th line
Top
30
A
B
11th line
3rd line
4th line
Bottom edge of the screen
Bottom

7.3.13. WHITE BALANCE ADJUSTMENT

Purpose:

To set the standard white level for each color temperature.

Symptom of Misadjustment :

White becomes bluish or reddish.

Test Point :

TP50 (CRT C.B.A)

Adjustment :

FOCUS CONTROL (Flyback Transformer),
SCREEN CONTROL (Flyback Transformer),
SUB BRIGHT (EVR)

G DRIVE (EVR),
B DRIVE (EVR),
R CUT -OFF (EVR),
G CUT -OFF (EVR),
B CUT -OFF (EVR),

Specification :

Refer to descriptions below.

INPUT :

Video Input Jack,
Monoscope Pattern Signal,
White Pattern Signal

Mode :

STOP

Equipment :

NTSC Video Pattern Generator,
White Pattern Generator,
Oscilloscope

1. **Supply a Monoscope Pattern Signal to the Video Input Jack.**
2. **Connect the Oscilloscope to TP50 on the CRT C.B.A. (Use TP47 for GND.)**
3. **Select SUB BRIGHT and move the shaded area to the value in EVR adjustment mode.**
4. **Adjust the FOCUS CONTROL on the Flyback Transformer so that the center of picture is the sharpest.**
5. **Press DISPLAY key on the remote control for collapse scan. (Refer to "HOW TO ENTER SERVICE MODE.")**
6. **Turn the SCREEN CONTROL on Flyback Transformer fully counterclockwise.**
7. **Adjust SUB BRIGHT in EVR adjustment mode so that the level A is 185 VDC±5 VDC.**

Fig. E12

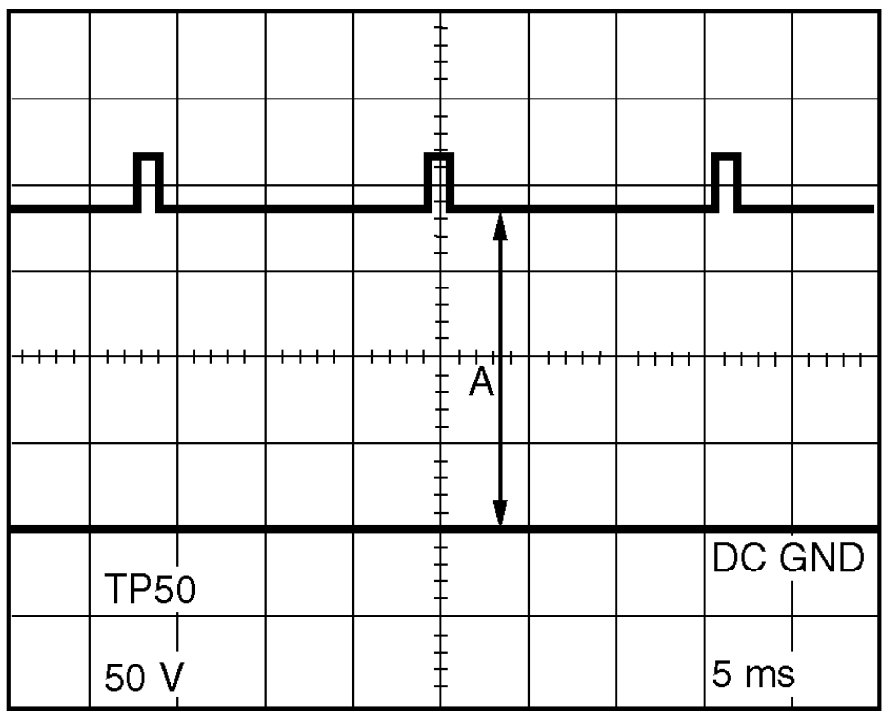

8. Turn the SCREEN CONTROL on the Flyback Transformer clockwise carefully and stop at the point where any color is first observed.
9. In EVR adjustment mode, select the two colors not observed in step 8 from the following control functions (B CUT -OFF, G CUT -OFF, or R CUT -OFF) and adjust so that the horizontal line becomes white.
   For example, if the horizontal line appeared red in step 8, select and adjust the B CUT -OFF and G CUT -OFF.
10. Supply a White Pattern Signal to the Video Input Jack.
11. Press DISPLAY key on the remote control again to return for full frame scan.
12. Select G DRIVE and B DRIVE in EVR adjustment mode and adjust so that the entire screen is white.
13. Select SUB BRIGHT in EVR adjustment mode. Then, after making a note of the original value, adjust to the minimum (C0) and while turning SUB BRIGHT value from minimum (C0) up to maximum (3F), confirm that the screen is tracking the White Patternproperly. Repeat the above steps 5, 9, 11, and 12 until the screen is properly tracking the White Pattern.

Note:

Before pressing DISPLAY key on the remote control for collapse scan, select the desired control function and move the shaded area to the value.

7.3.14. SUB BRIGHTNESS ADJUSTMENT

Note:

Perform this adjustment in a darkened room.

Purpose :

To set the optimum brightness level.

Symptom of Misadjustment :

The picture is too white or too black.

Test Point :

Adjustment :

SUB BRIGHT (EVR)

Specification :

Refer to descriptions below.

INPUT :

Mode :

STOP

1. Do not input any signal to the unit.
2. Set INPUT SELECT item to LINE in SET UP TV menu to display black screen.
3. Select SUB BRIGHT in EVR adjustment mode, and adjust so that the black screen starts to turn gray (lighting only).

7.4. TEST POINTS AND CONTROL LOCATION

Main C.B.A.

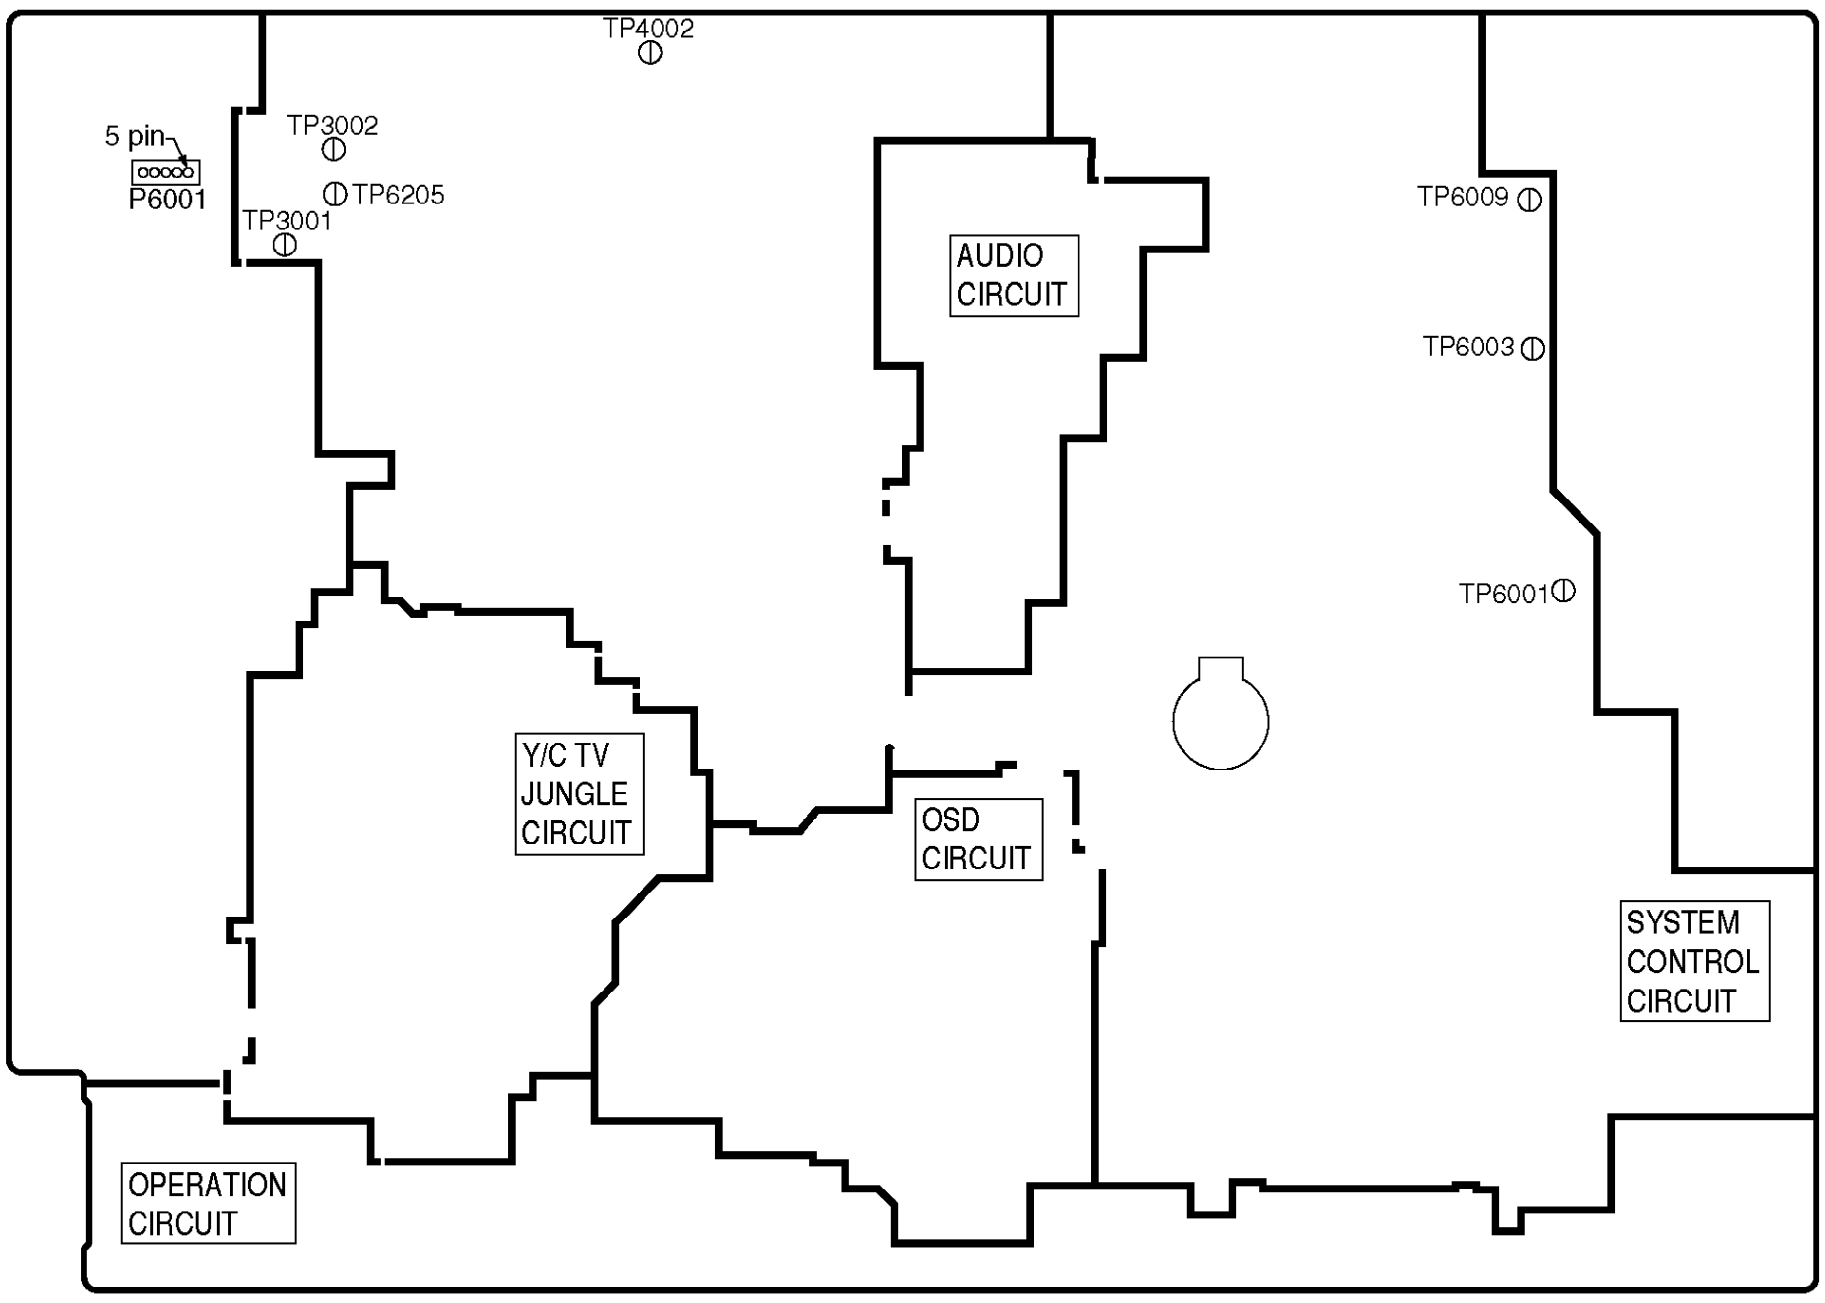
TP4002
5 pin
P6001
TP3002
TP6205
TP3001
AUDIO CIRCUIT
TP6009
TP6003
TP6001
Y/C TV JUNGLE CIRCUIT
OSD CIRCUIT
SYSTEM CONTROL CIRCUIT
OPERATION CIRCUIT

(Component Side)

FUNCTION OF IMPORTANT TEST POINTS	
TP3001	Video Signal
TP3002	REC/PB Video envelope signal
TP4002	Normal Audio signal
TP6001	Service Test Point (inhibit sensors)
TP6003	Defeat Auto tracking function (connect to +5V(TP6009))
TP6009	+5V
TP6205	Head SW.

Test Point Information

● Test Point with a Test Pin.

⌽ Test Point with a jumper wire across a hole in the P.C.B.

○ Test Point with no Test Pin.

Audio C.B.A.

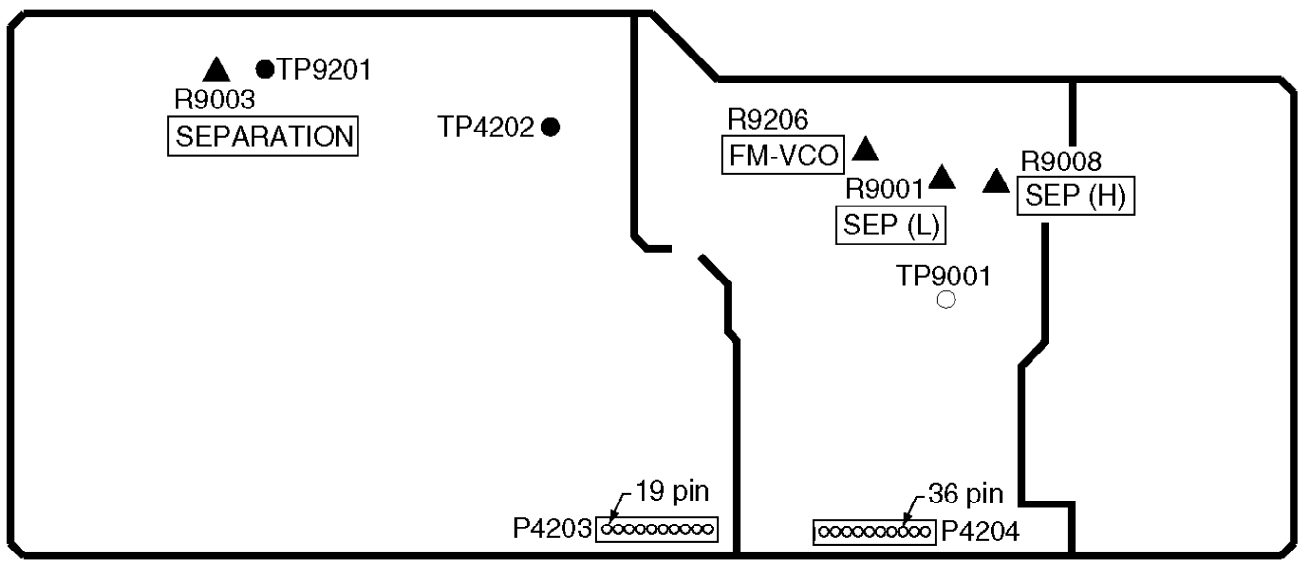
TP9201
R9003
SEPARATION
TP4202
R9206
FM-VCO
R9001
SEP (L)
R9008
SEP (H)
TP9001
19 pin
P4203
36 pin
P4204

(Foil Side)

CRT C.B.A.

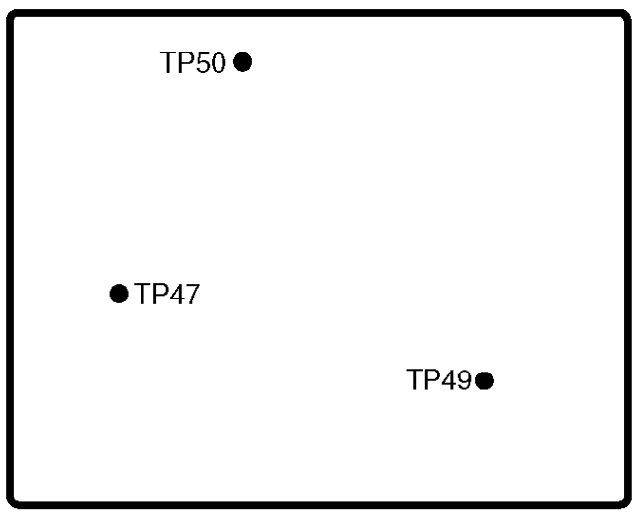
TP50
TP47
TP49

(Foil Side)

DVD DECODER C.B.A.

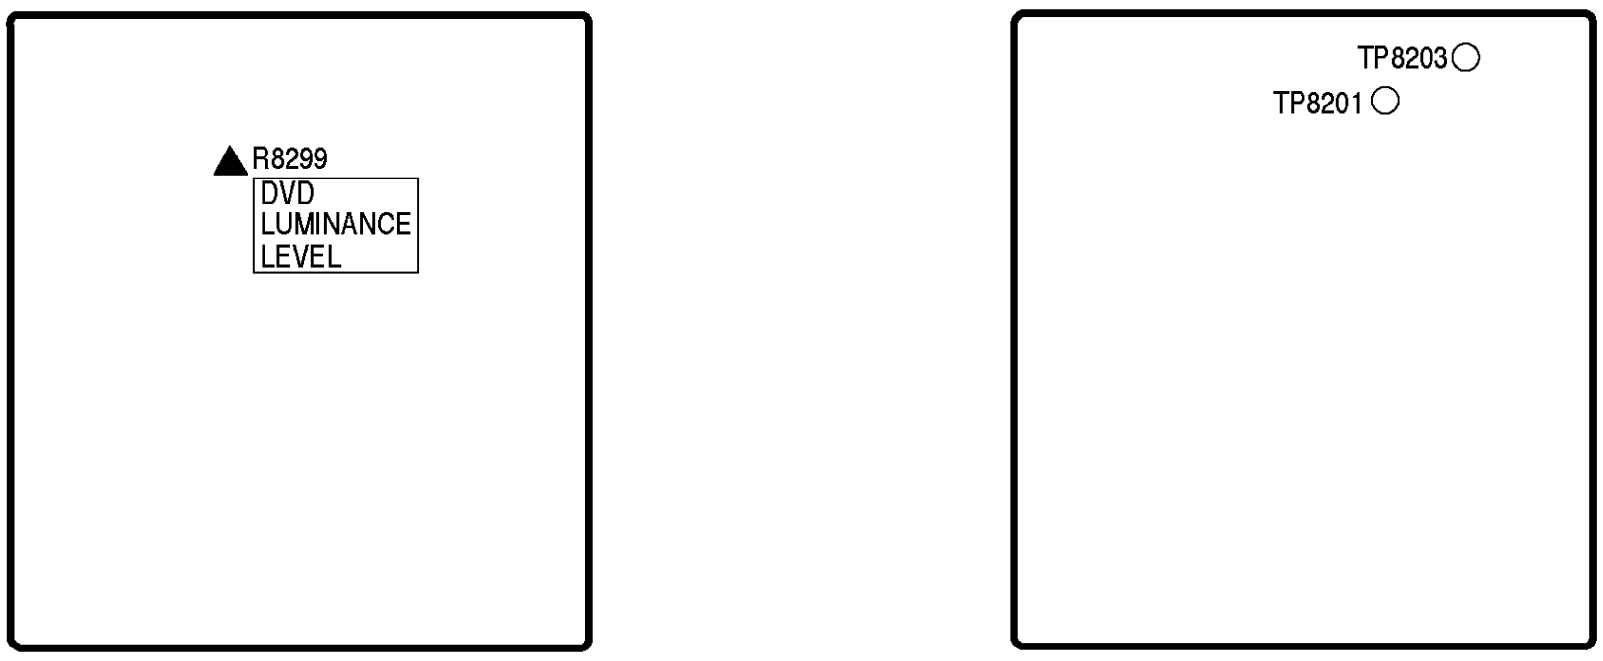
R8299
DVD
LUMINANCE
LEVEL
TP8203
TP8201

(Component Side)

(Foil Side)

8. SCHEMATIC DIAGRAMS

8.1. SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES

8.2. MAIN SCHEMATIC DIAGRAMS

8.3. AUDIO SCHEMATIC DIAGRAMS

8.4. AUDIO AMP SCHEMATIC DIAGRAM

8.5. POWER SUPPLY SCHEMATIC DIAGRAM

8.6. TV MAIN SCHEMATIC DIAGRAMS

8.7. CRT SCHEMATIC DIAGRAM

8.8. VERTICAL SCHEMATIC DIAGRAM

8.9. OPERATION SCHEMATIC DIAGRAM

8.10. AUDIO/VIDEO JACK SCHEMATIC DIAGRAM

8.11. Hi-Fi AUDIO/VIDEO HEAD AMP SCHEMATIC DIAGRAM

8.12. DVD DECODER SCHEMATIC DIAGRAMS

8.13. INTERCONNECTION SCHEMATIC DIAGRAM

8.14. VOLTAGE CHART

9. CIRCUIT BOARD LAYOUT

9.1. MAIN C.B.A.

9.2. AUDIO C.B.A.

9.3. TV MAIN C.B.A.

9.4. POWER SUPPLY C.B.A.

9.5. DVD DECODER C.B.A.

9.6. Hi-Fi AUDIO/VIDEO HEAD AMP C.B.A.

9.7. VERTICAL C.B.A.

9.8. CRT C.B.A.

9.9. AUDIO AMP C.B.A.

9.10. OPERATION C.B.A.

9.11. AUDIO/VIDEO JACK C.B.A.

10. BLOCK DIAGRAMS

11. EXPLODED VIEWS

11.1. MECHANISM (TOP) SECTION

❶ MECHANISM (TOP) SECTION

LUBRICATION POINTS
When the marked parts are replaced, apply the recommended lubricants or adhesive for better maintenance of the unit.

Mark	Kind of Lubricant	Availability	Part Number
△△△	Grease	Available from Factory	VFKS0081

Note: Parts with no Ref. No. in "EXPLODED VIEWS" are not supplied.
And some Ref. No. will be skipped. Be sure to make your orders of replacement parts according to the parts list.

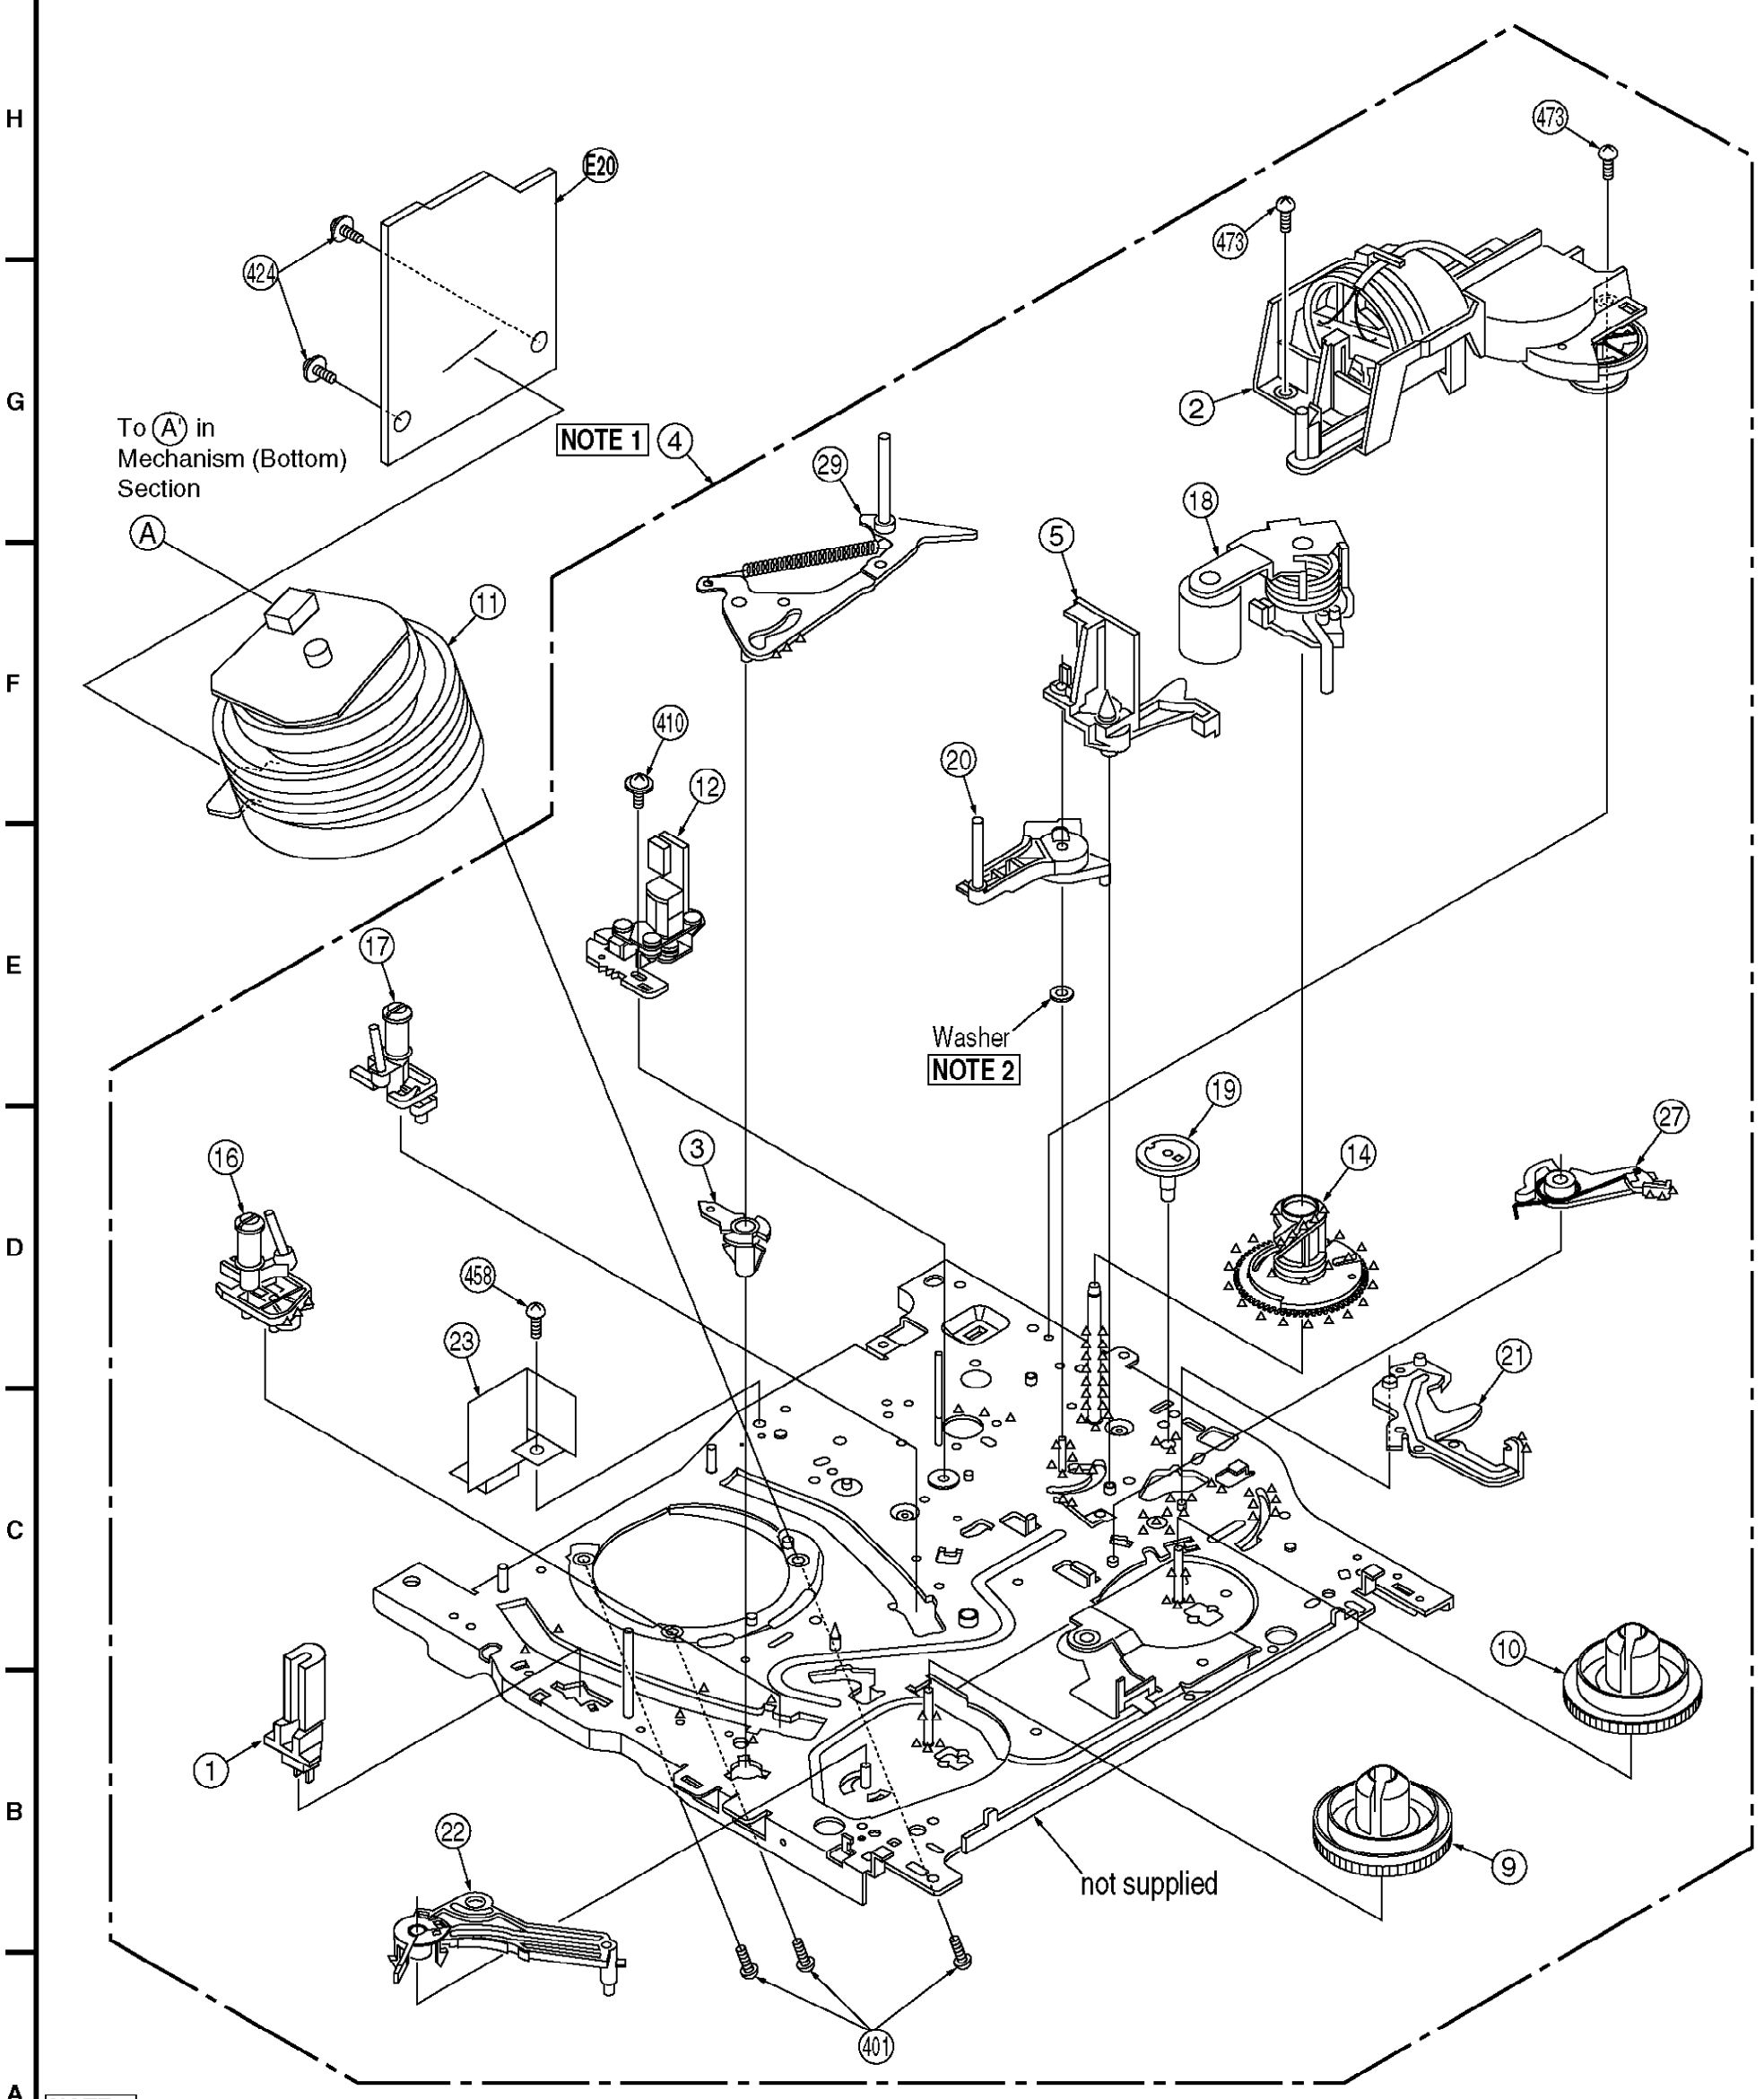
H
G
F
E
D
C
B
A
E20
424
To Ⓐ in Mechanism (Bottom) Section
Ⓐ
NOTE 1 ④
⑪
㉙
473
473
②
⑱
⑤
410
⑫
⑳
⑰
Washer
NOTE 2
⑲
⑭
㉗
⑯
③
458
㉓
㉑
⑩
①
㉒
⑨
not supplied
401
1
2
3
4
5
6

NOTE 1: The Mechanical Chassis Sub Ass'y (Ref. No. 4) consists of all the mechanical parts except the Cylinder Unit (Ref. No. 11) and the Cassette Up Ass'y (Ref. No. 61).
After replacing the Mechanical Chassis Sub Ass'y, be sure to perform "TAPE INTERCHANGEABILITY ADJUSTMENT" in MECHANICAL ADJUSTMENT procedures.

NOTE 2: In early units, a washer is used.
When servicing the washer or the P5 Arm Unit, replace only the P5 Arm Unit with a new one, and remove the washer.

11.2. MECHANISM (BOTTOM) SECTION

❷ MECHANISM (BOTTOM) SECTION

LUBRICATION POINTS
When the marked parts are replaced, apply the recommended lubricants or adhesive for better maintenance of the unit.

Mark	Kind of Lubricant	Availability	Part Number
△△△	Grease	Available from Factory	VFKS0081

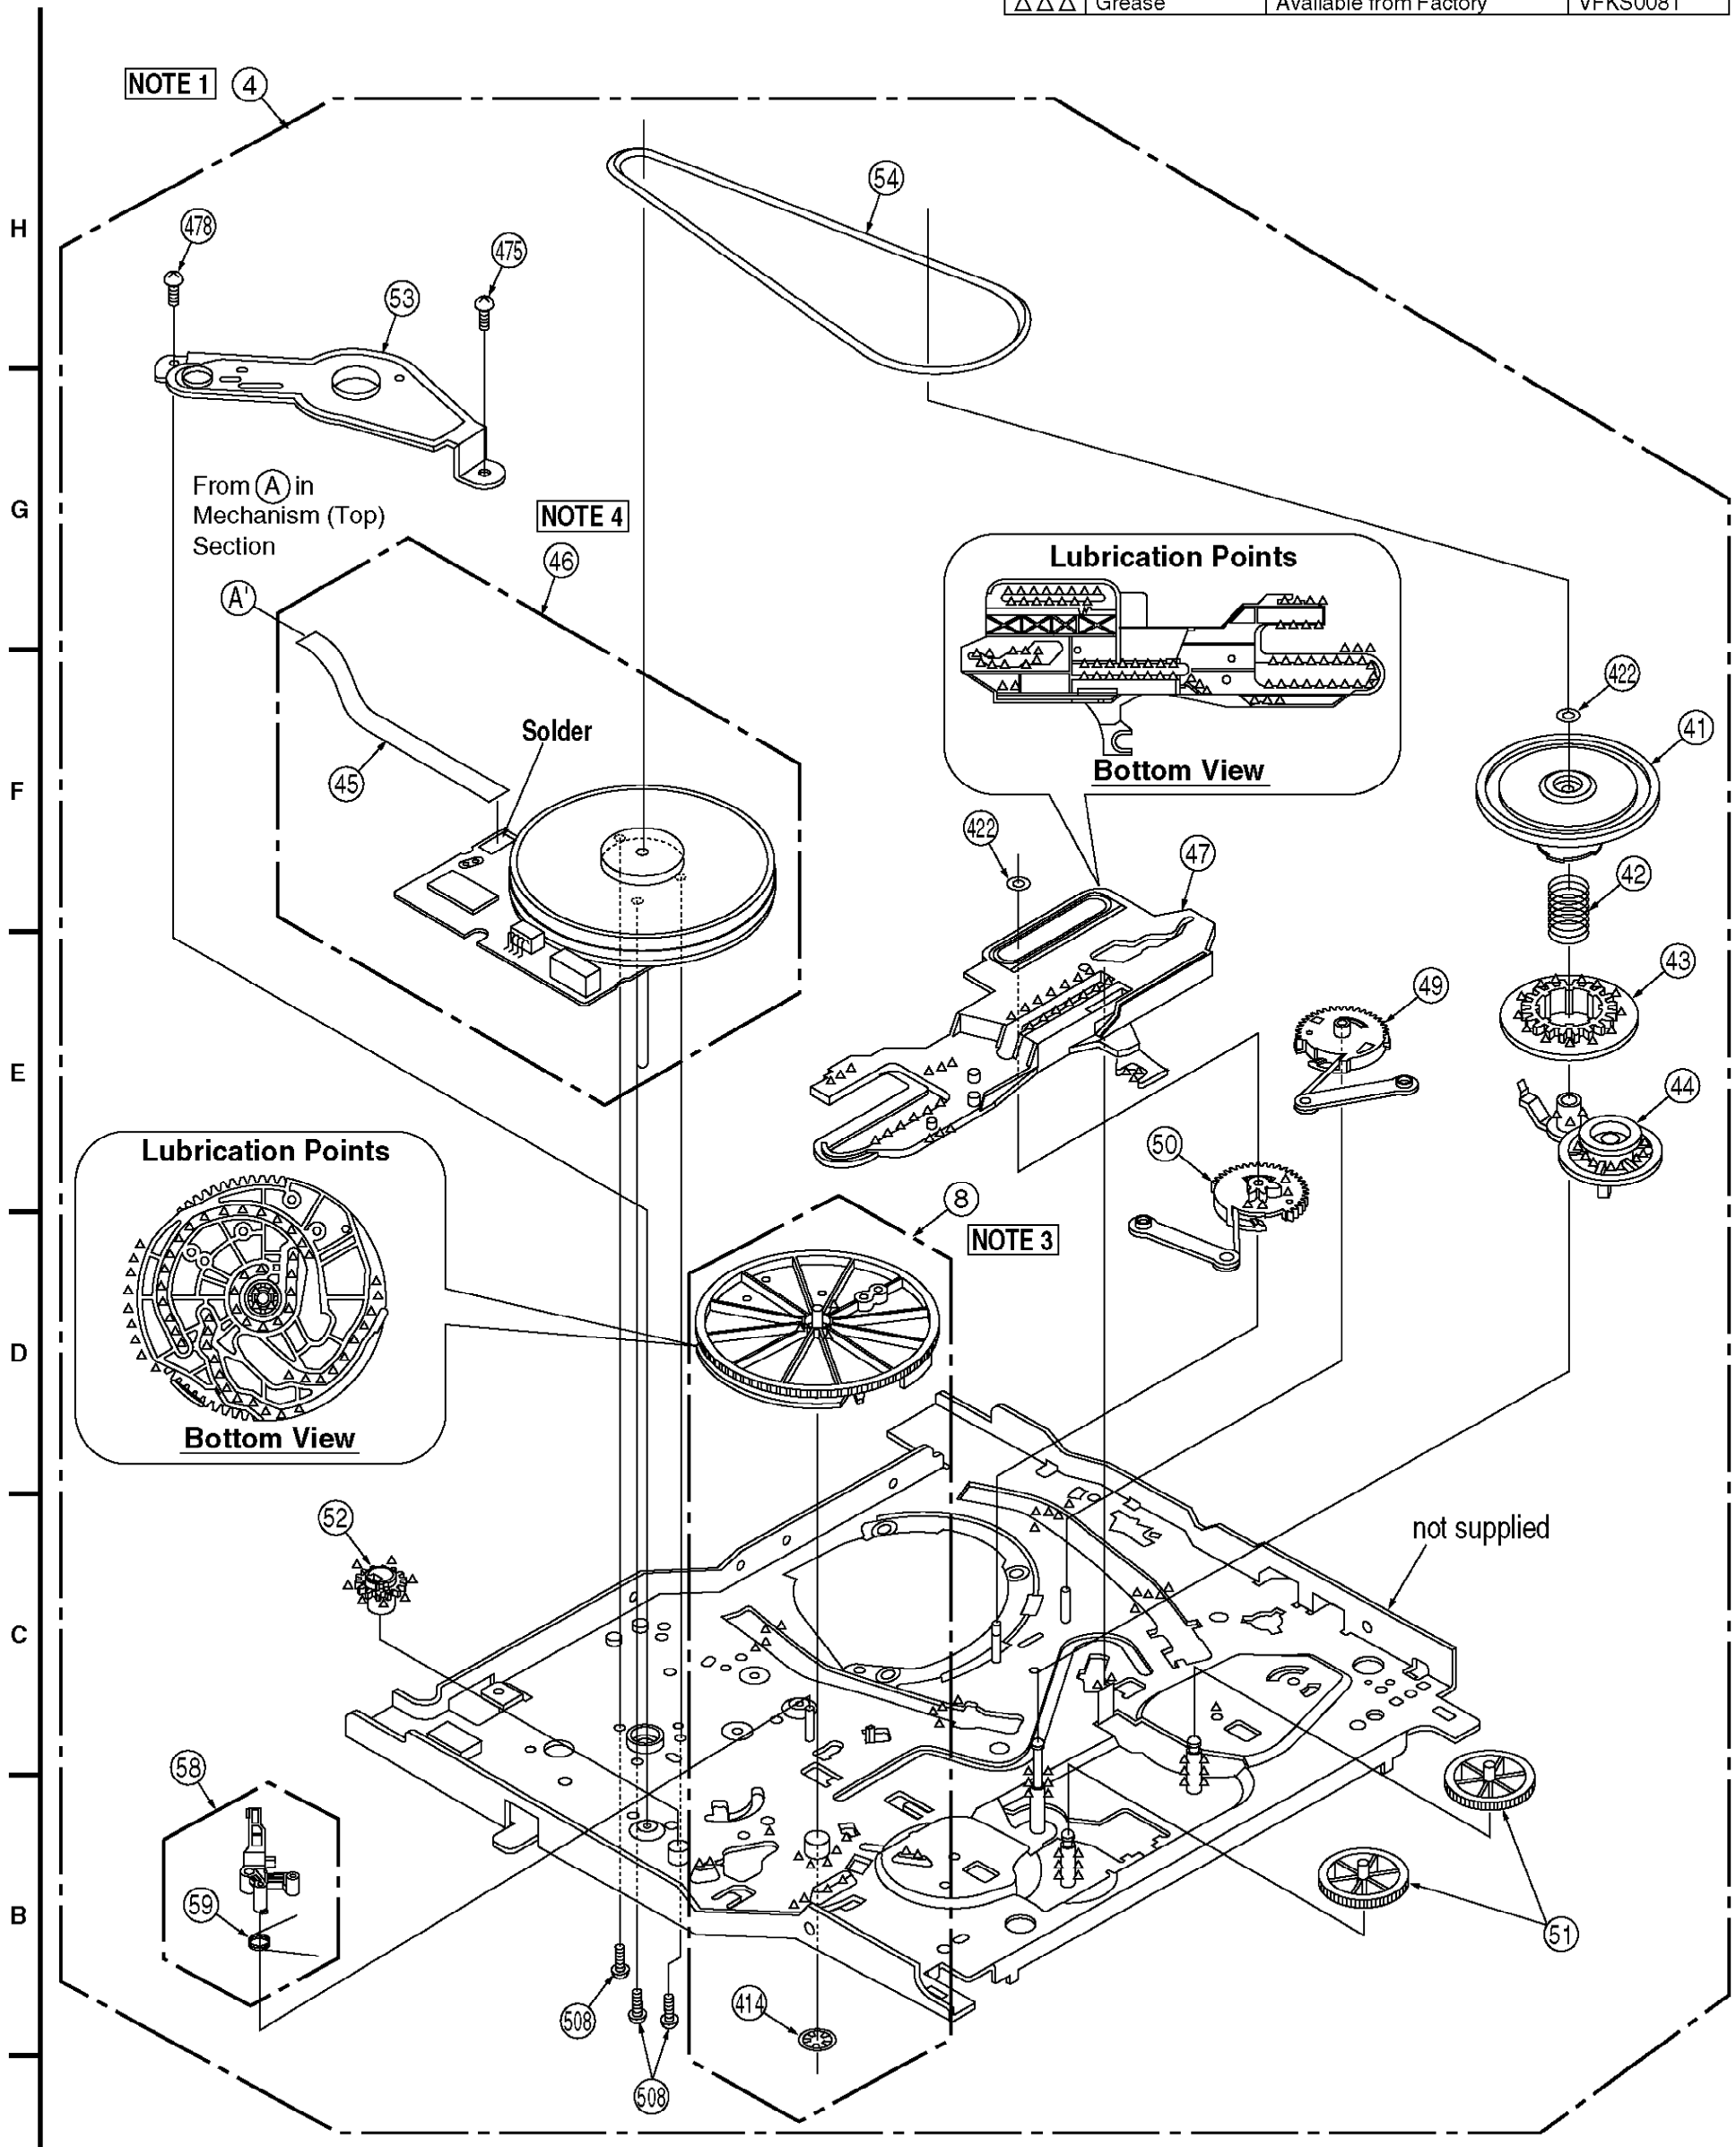
NOTE 1
④
478
475
53
54
From Ⓐ in
Mechanism (Top)
Section
NOTE 4
46
A'
Solder
45
Lubrication Points
Bottom View
422
47
422
41
42
43
49
44
50
8
NOTE 3
Lubrication Points
Bottom View
52
not supplied
58
59
508
414
508
51
H
G
F
E
D
C
B
A
1
2
3
4
5
6

NOTE 1: The Mechanical Chassis Sub Ass'y (Ref. No. 4) consists of all the mechanical parts except the Cylinder Unit (Ref. No. 11) and the Cassette Up Ass'y (Ref. No. 61). After replacing the Mechanical Chassis Sub Ass'y, be sure to perform "TAPE INTERCHANGEABILITY ADJUSTMENT" in MECHANICAL ADJUSTMENT procedures.

NOTE 3: Main Cam Gear is supplied as a Main Cam Gear Kit only. Main Cam Gear Kit consists of a Main Cam Gear and a Main Cam Push Nut. However, Main Cam Push Nut is available separately as a replacement part.

NOTE 4: The Capstan Motor Ass'y (Ref. No. 46) is supplied as a unit only. However, the Flat Flexible Cable (Ref. No. 45) is available separately as a replacement part.

11.3. CASSETTE UP COMPARTMENT SECTION

❸ CASSETTE UP COMPARTMENT SECTION

LUBRICATION POINTS
When the marked parts are replaced, apply the recommended lubricants or adhesive for better maintenance of the unit.

Mark	Kind of Lubricant	Availability	Part Number
△△△	Grease	Available from Factory	VFKS0081

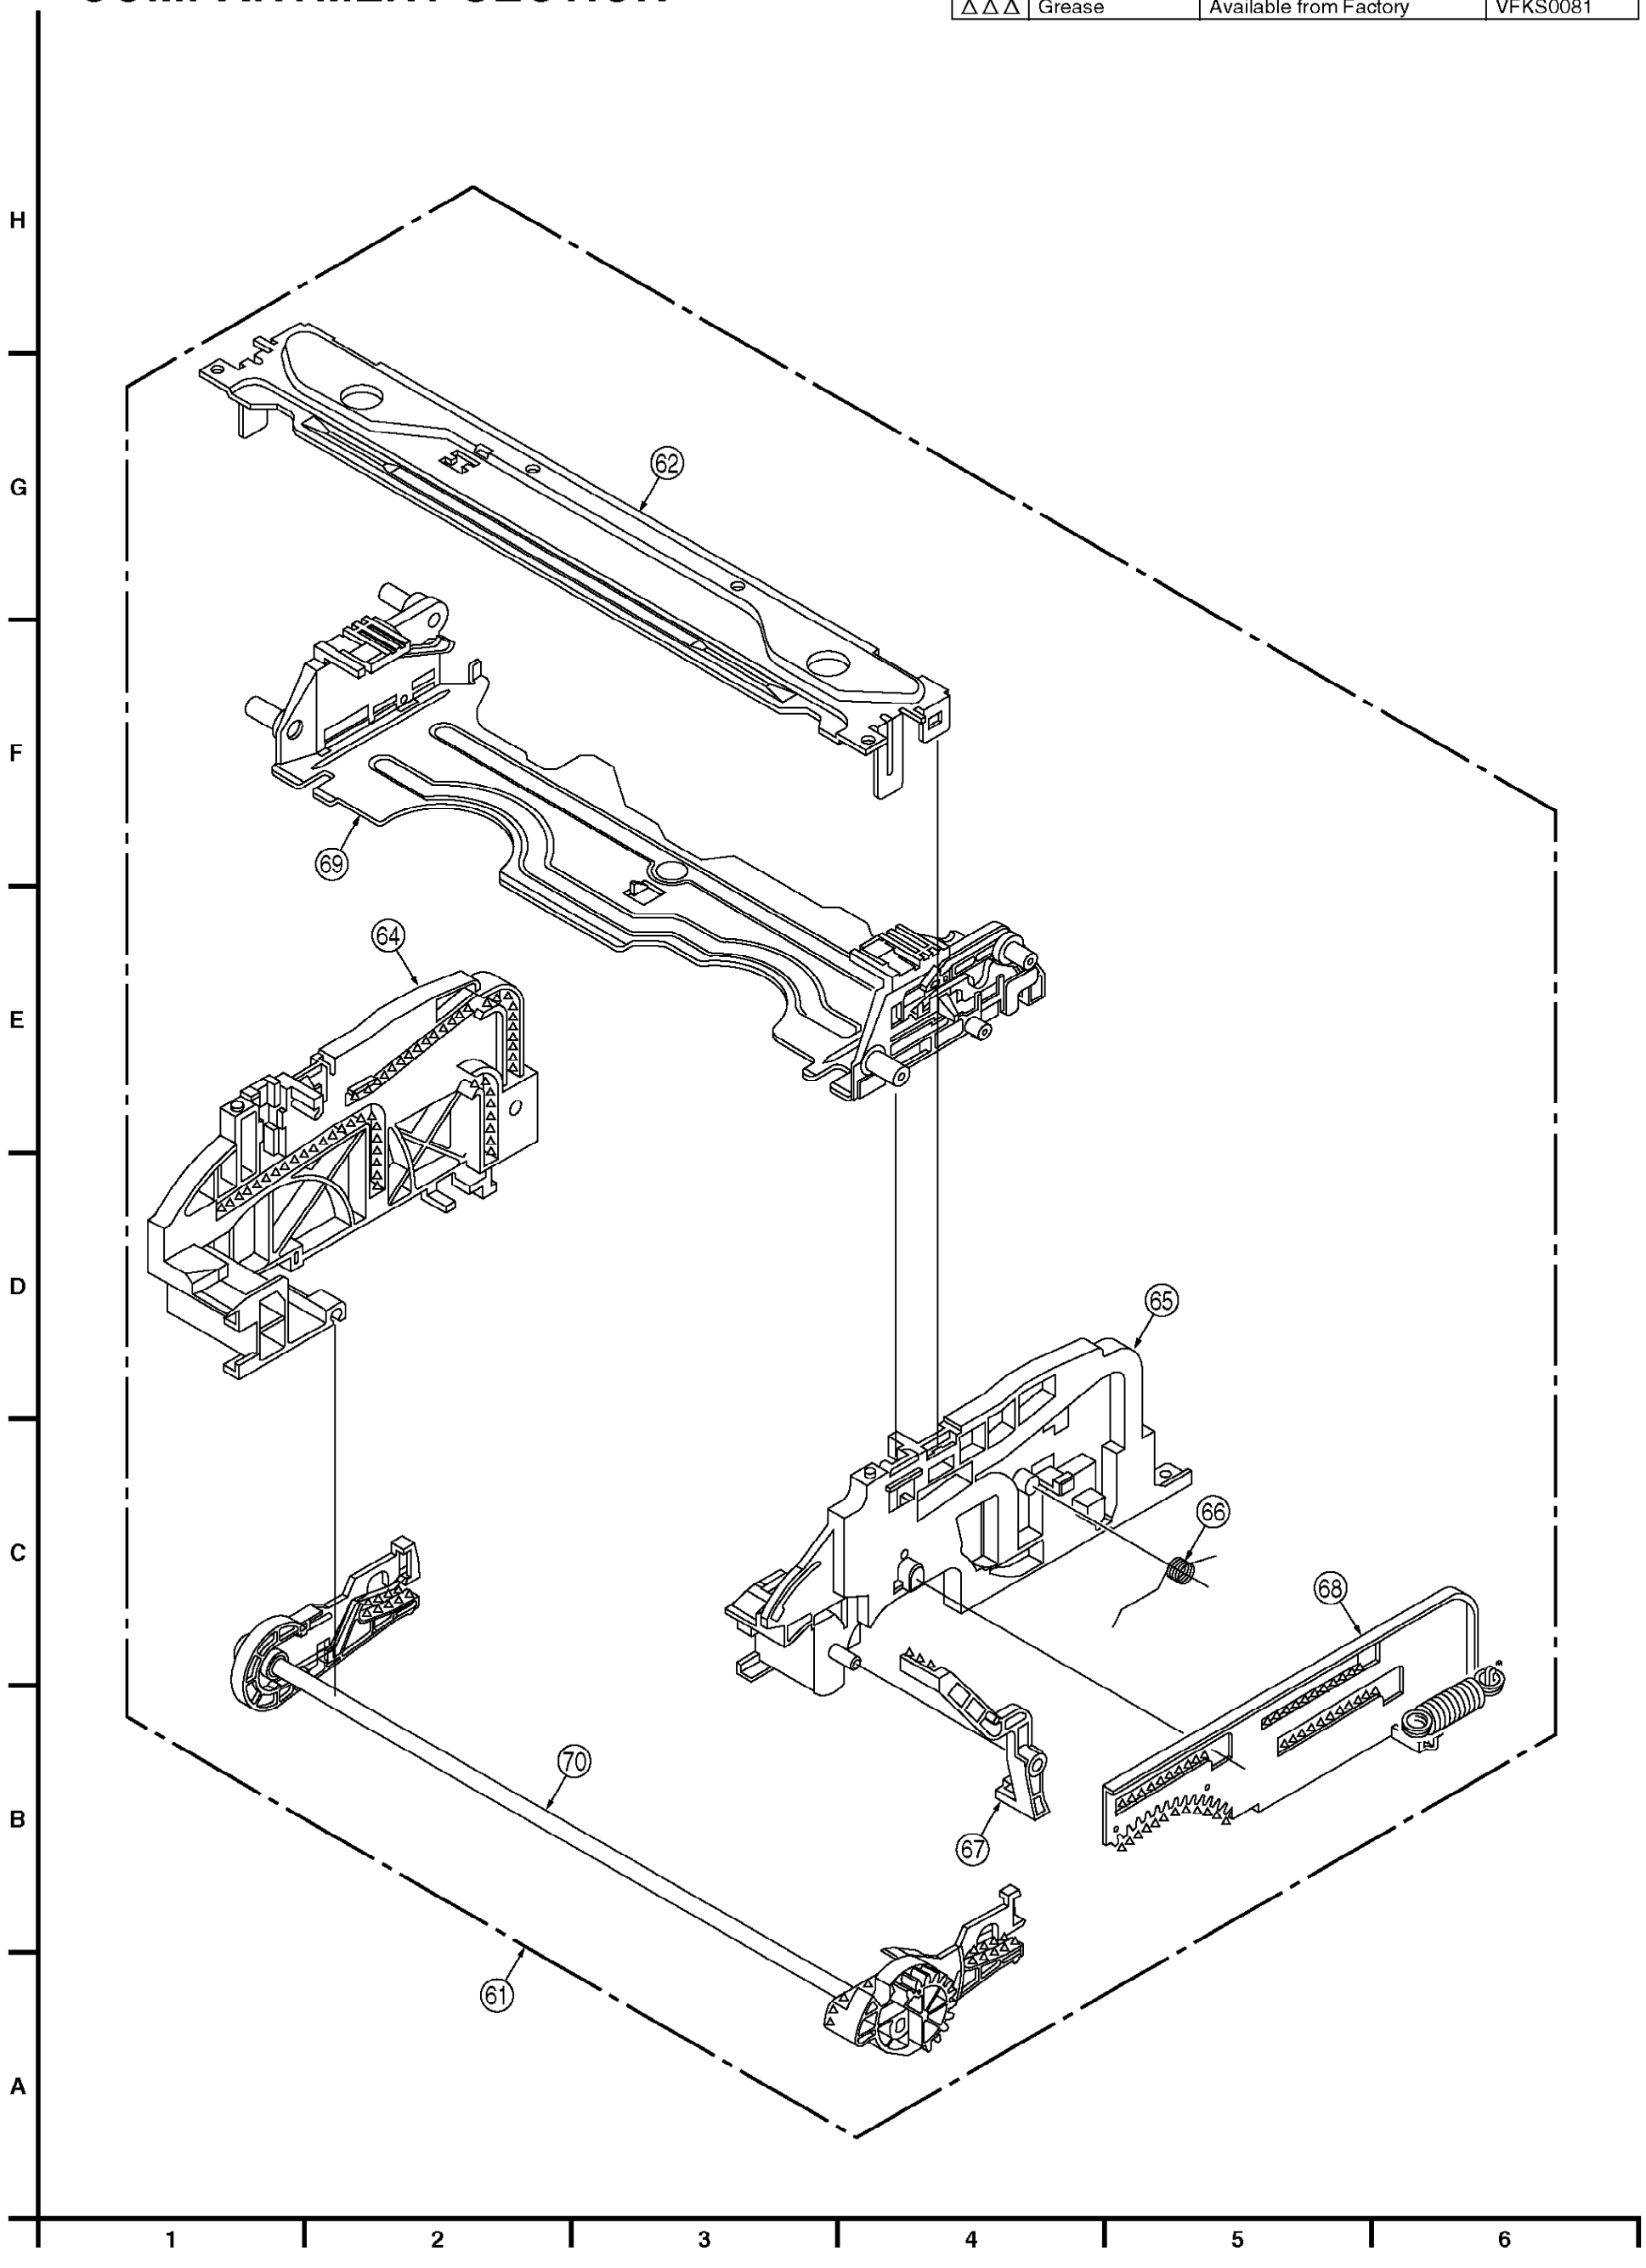
H
G
F
E
D
C
B
A
62
69
64
65
66
68
67
70
61
1
2
3
4
5
6

11.4. CHASSIS FRAME SECTION (1)

❹ CHASSIS FRAME SECTION (1)

IMPORTANT SAFETY NOTICE
COMPONENTS IDENTIFIED BY THE SIGN ⚠ HAVE SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY. WHEN REPLACING ANY OF THESE COMPONENTS, USE ONLY THE SPECIFIED PARTS.

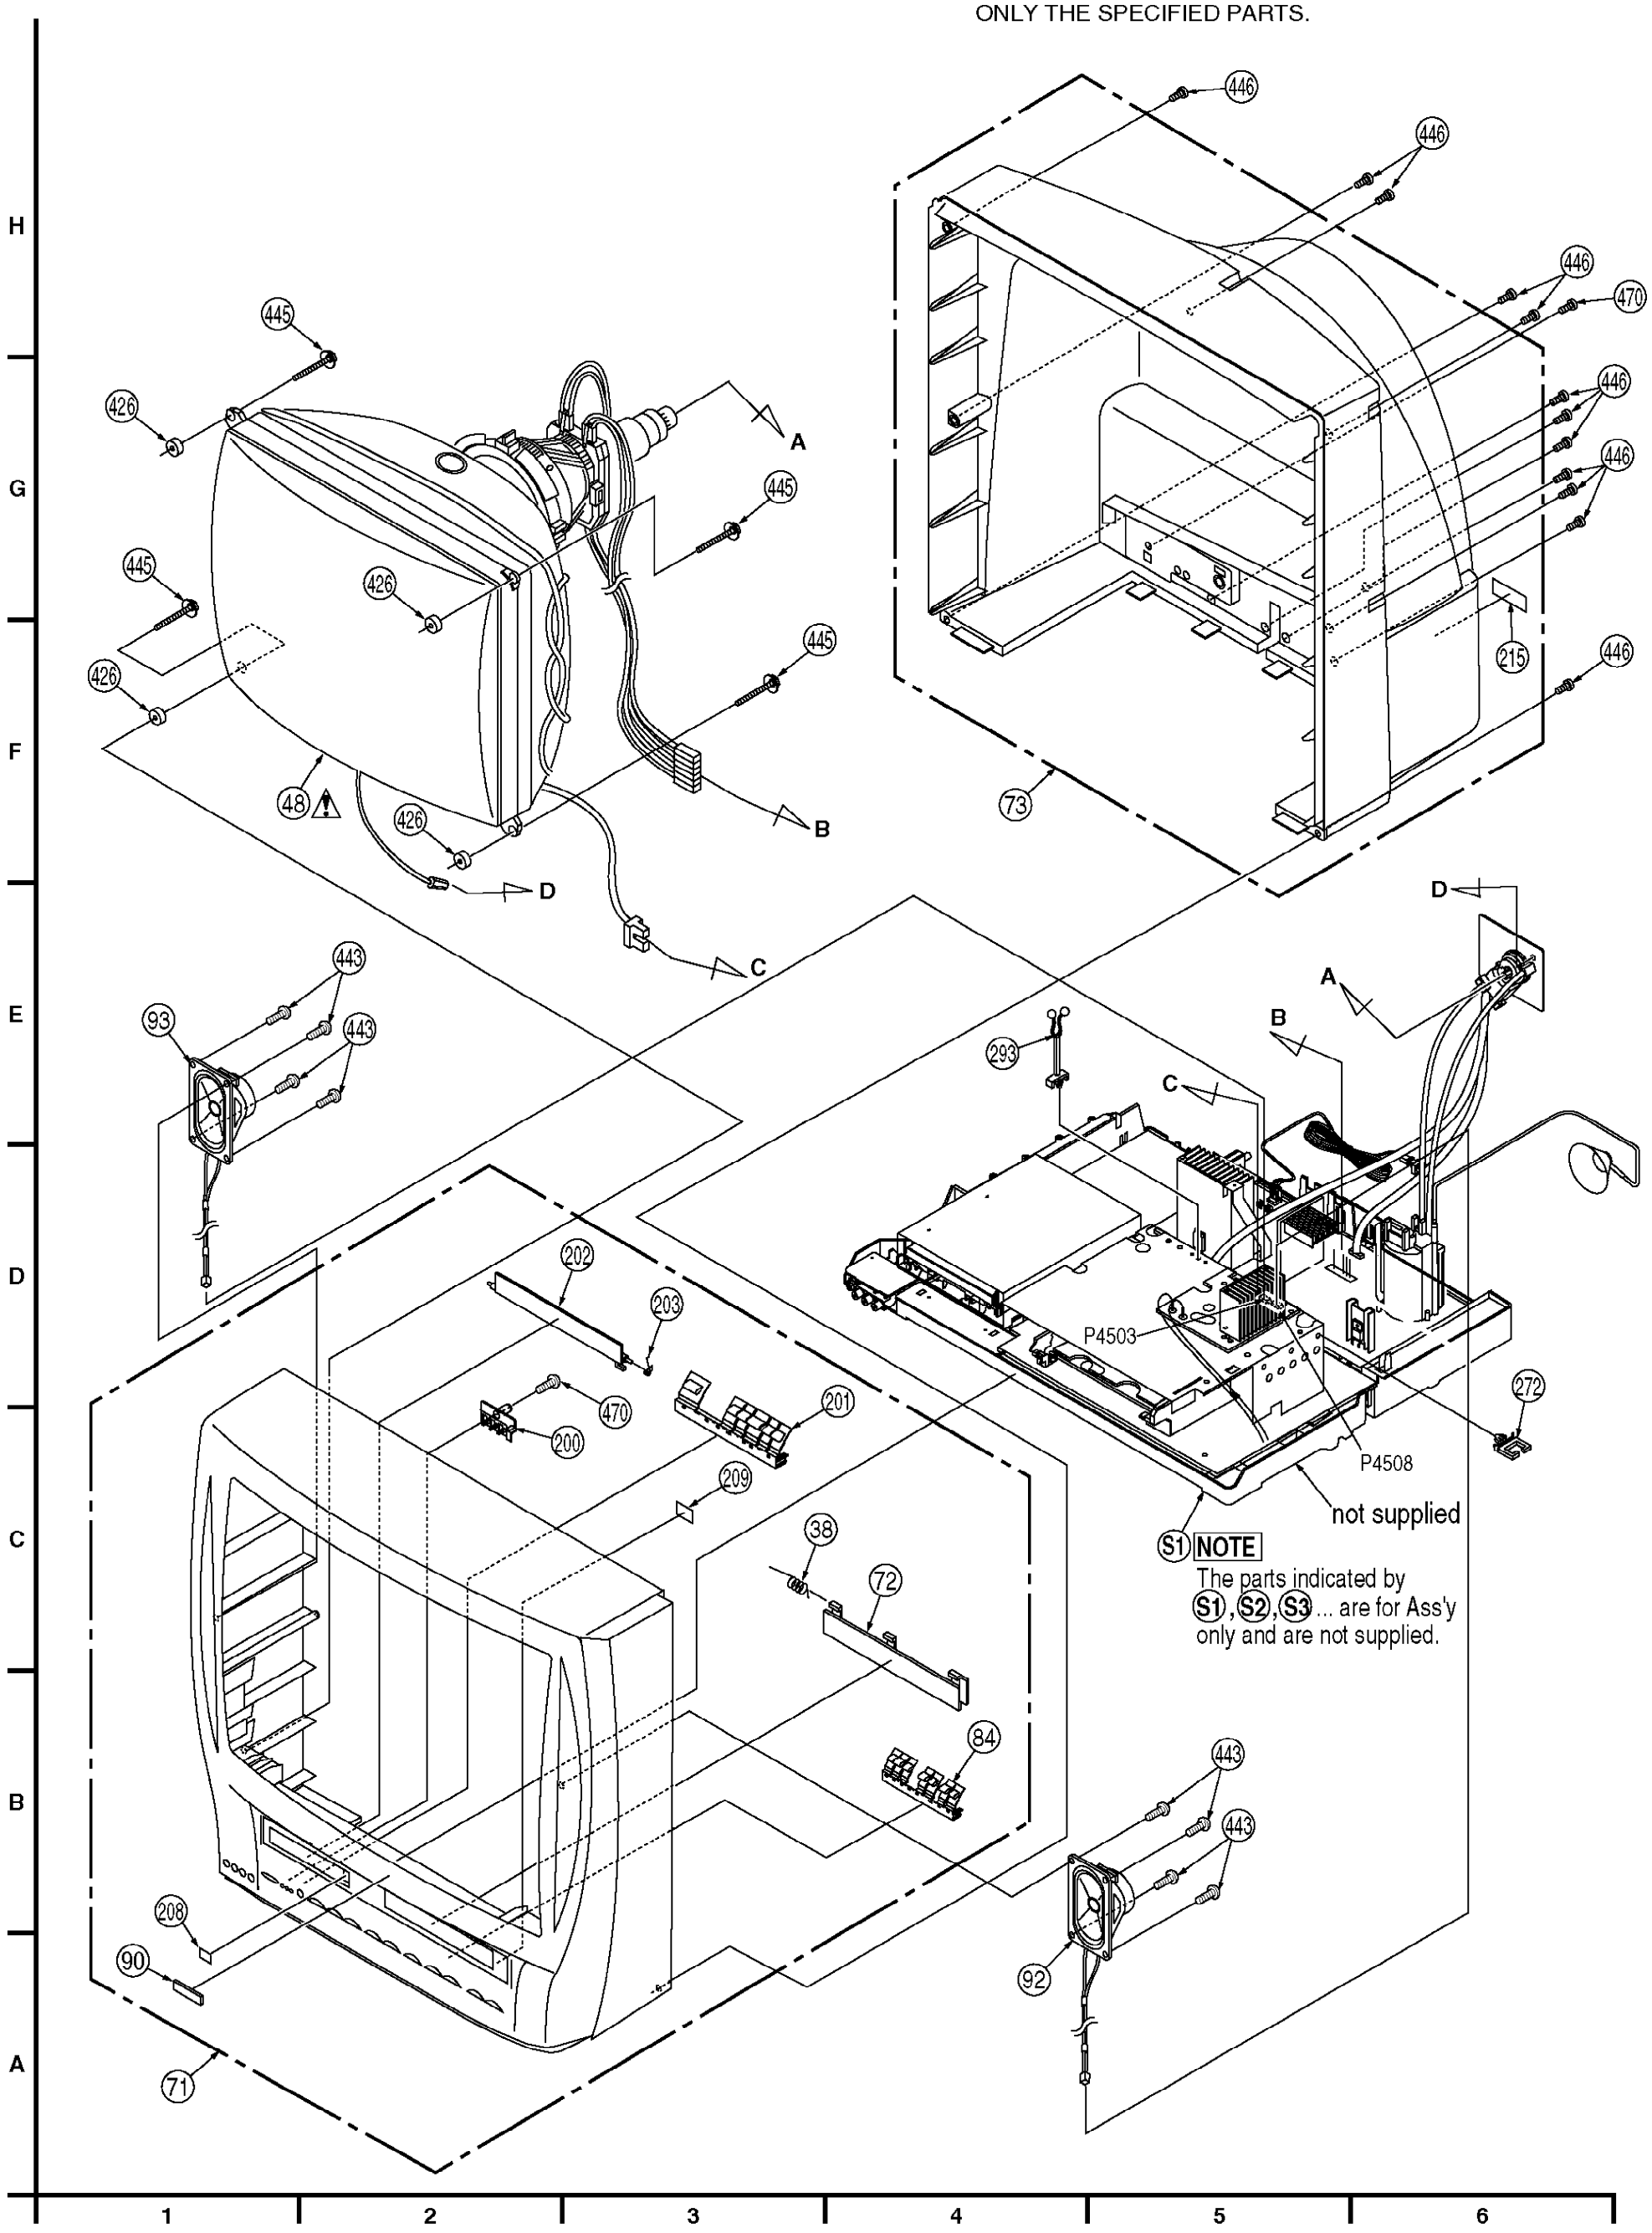
H
G
F
E
D
C
B
A
1
2
3
4
5
6
446
446
446
470
446
446
215
446
73
445
426
A
445
445
426
445
426
48⚠
426
B
D
C
D
A
B
C
93
443
443
293
P4503
P4508
272
202
203
470
200
201
209
38
72
84
208
90
71
443
443
92
not supplied

S1 NOTE
The parts indicated by S1, S2, S3 ... are for Ass'y only and are not supplied.

11.5. CHASSIS FRAME SECTION (2)

❺ CHASSIS FRAME SECTION (2)

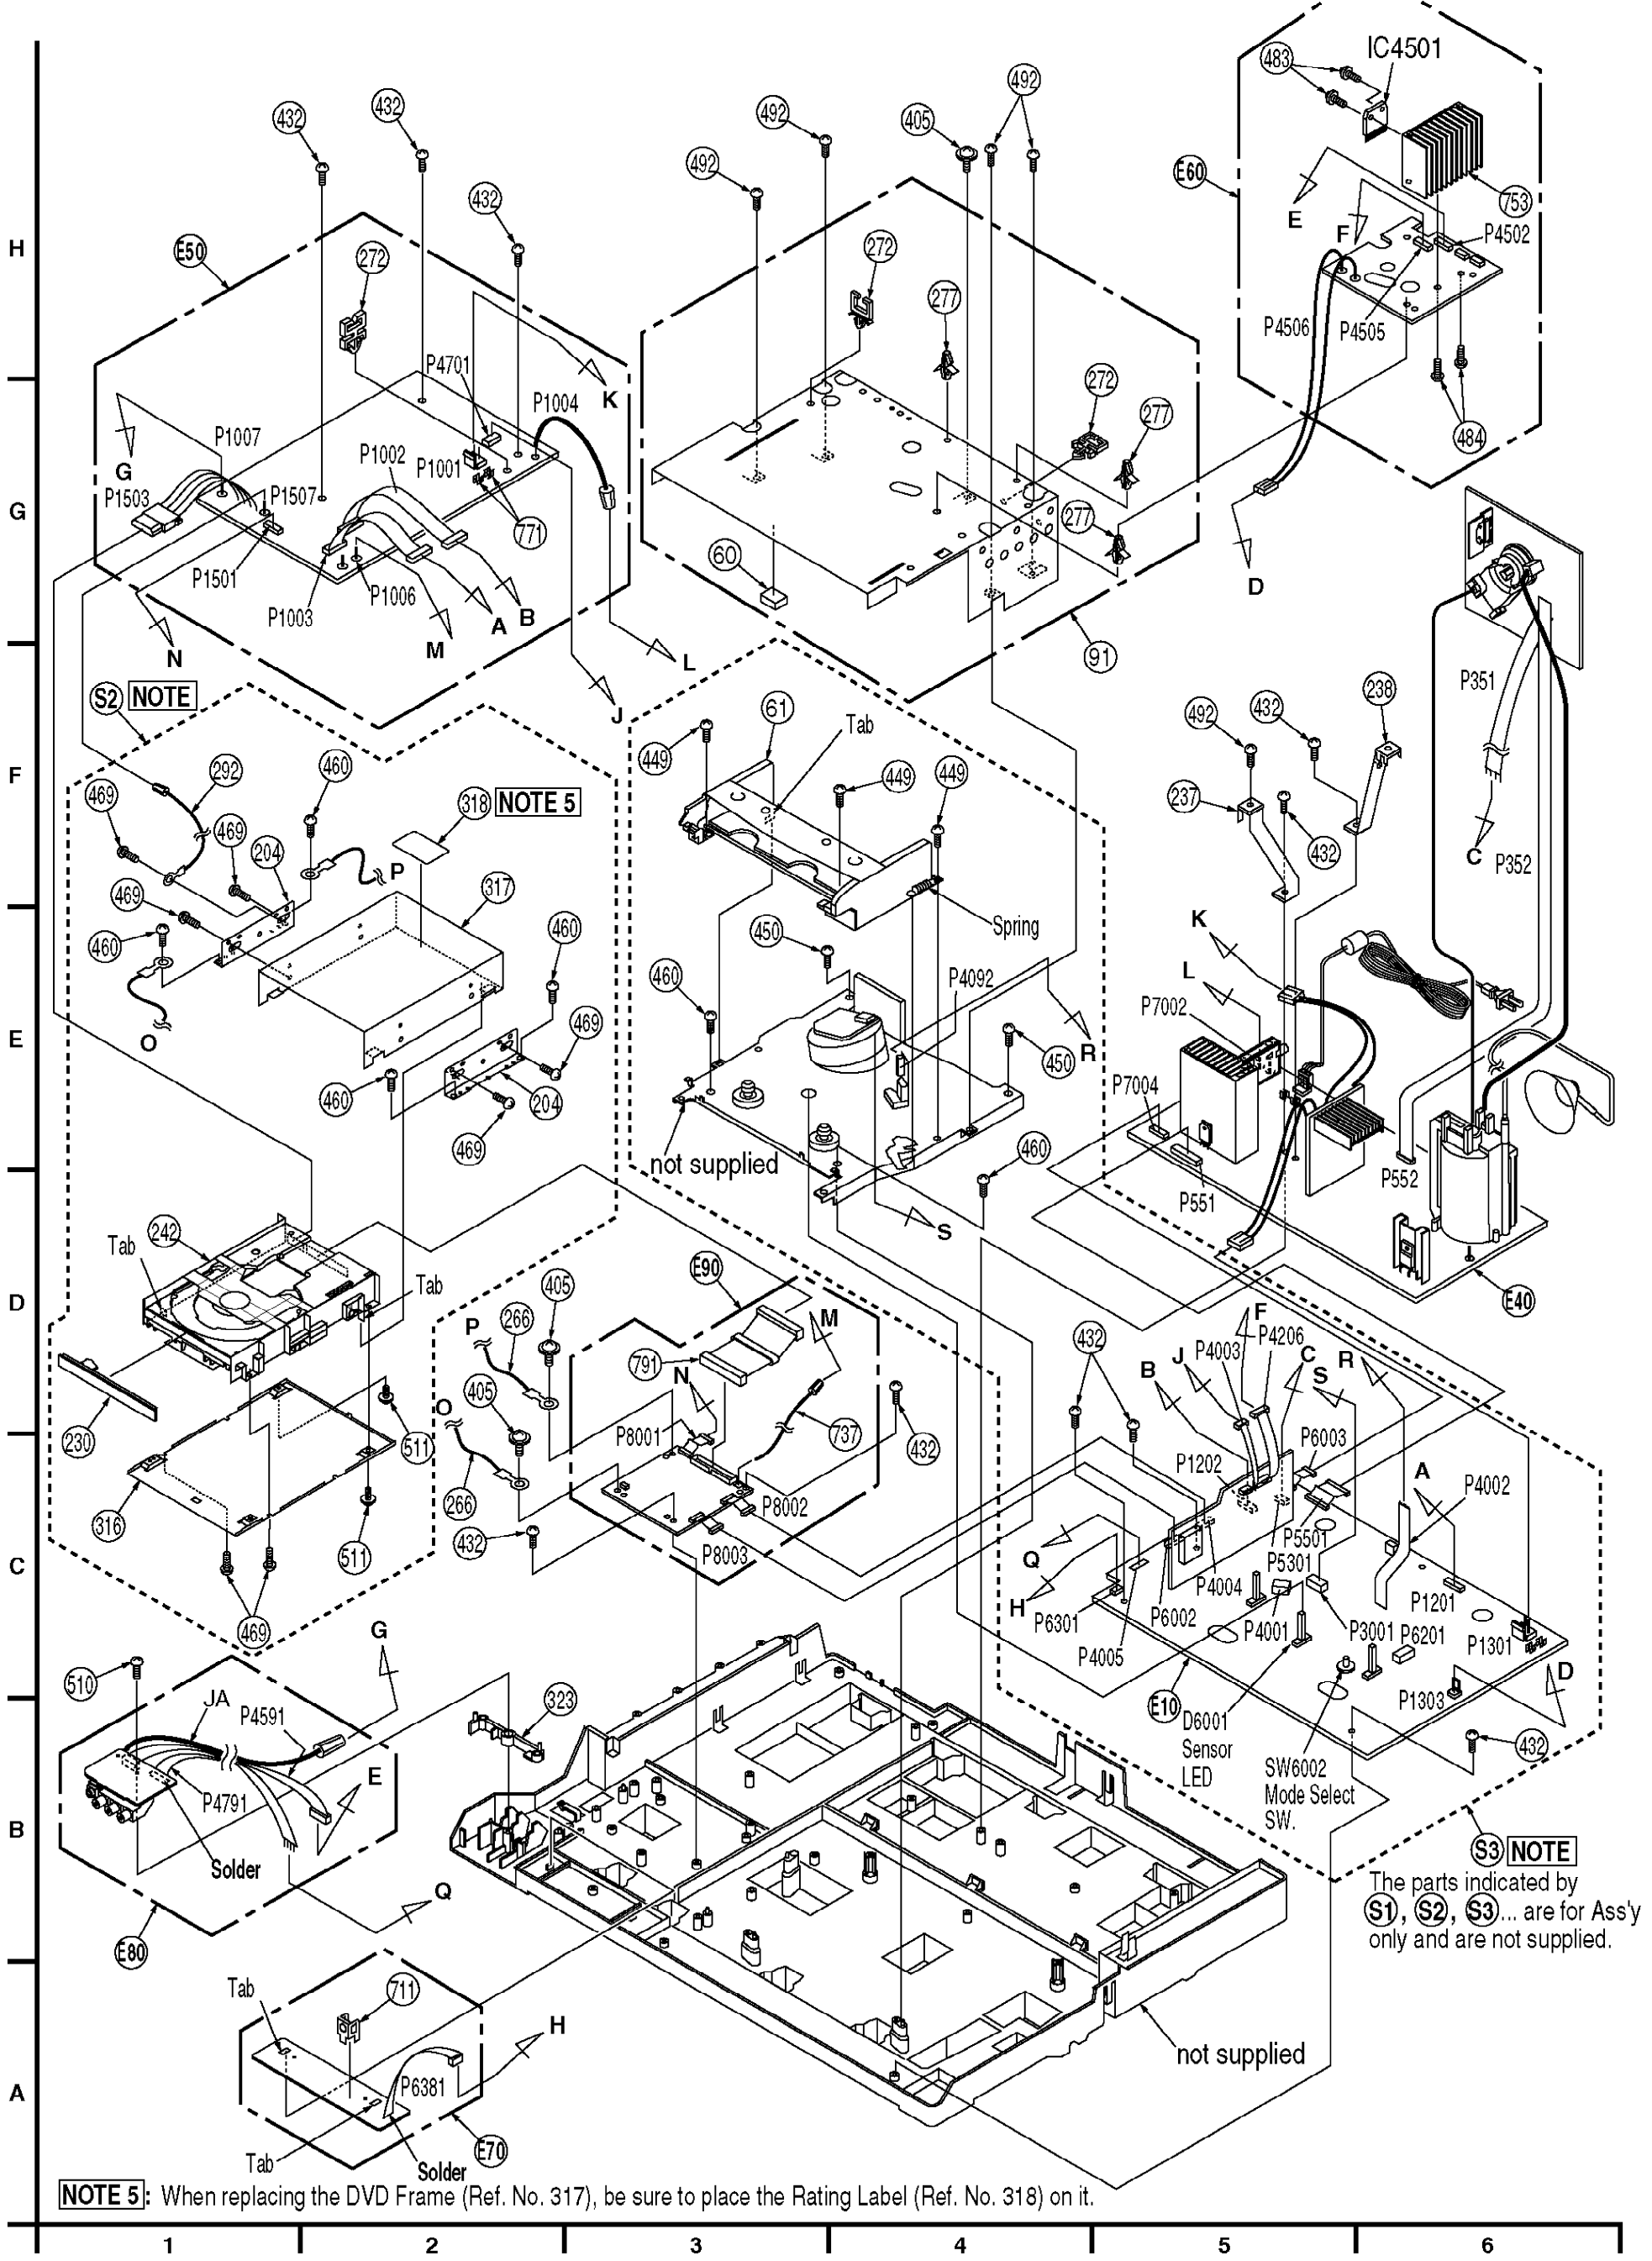
H
G
F
E
D
C
B
A
1
2
3
4
5
6
E50
E60
E40
E80
E70
E90
E10
IC4501
483
753
P4502
P4506
P4505
484
432
272
P4701
P1004
K
P1007
P1002
P1001
771
P1503
P1507
P1501
P1003
P1006
N
M
A
B
L
J
492
405
277
60
91
D
S2 NOTE
292
460
469
204
318 NOTE 5
317
P
O
61
Tab
449
450
Spring
P4092
R
S
not supplied
237
238
P351
P352
C
P7002
P7004
P551
P552
242
230
316
511
510
405
266
791
P8001
737
P8002
P8003
P4003
P4206
P6003
P1202
P4002
P5501
P5301
P4004
P4001
P3001
P6201
P1201
P1301
P1303
P6301
P6002
P4005
D6001
Sensor
LED
SW6002
Mode Select
SW.
JA
P4591
P4791
Solder
323
Q
E
711
P6381
H

S3 NOTE
The parts indicated by S1, S2, S3... are for Ass'y only and are not supplied.

NOTE 5: When replacing the DVD Frame (Ref. No. 317), be sure to place the Rating Label (Ref. No. 318) on it.

11.6. CHASSIS FRAME SECTION (3)

❻ CHASSIS FRAME SECTION (3)

IMPORTANT SAFETY NOTICE
COMPONENTS IDENTIFIED BY THE SIGN ⚠ HAVE SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY. WHEN REPLACING ANY OF THESE COMPONENTS, USE ONLY THE SPECIFIED PARTS.

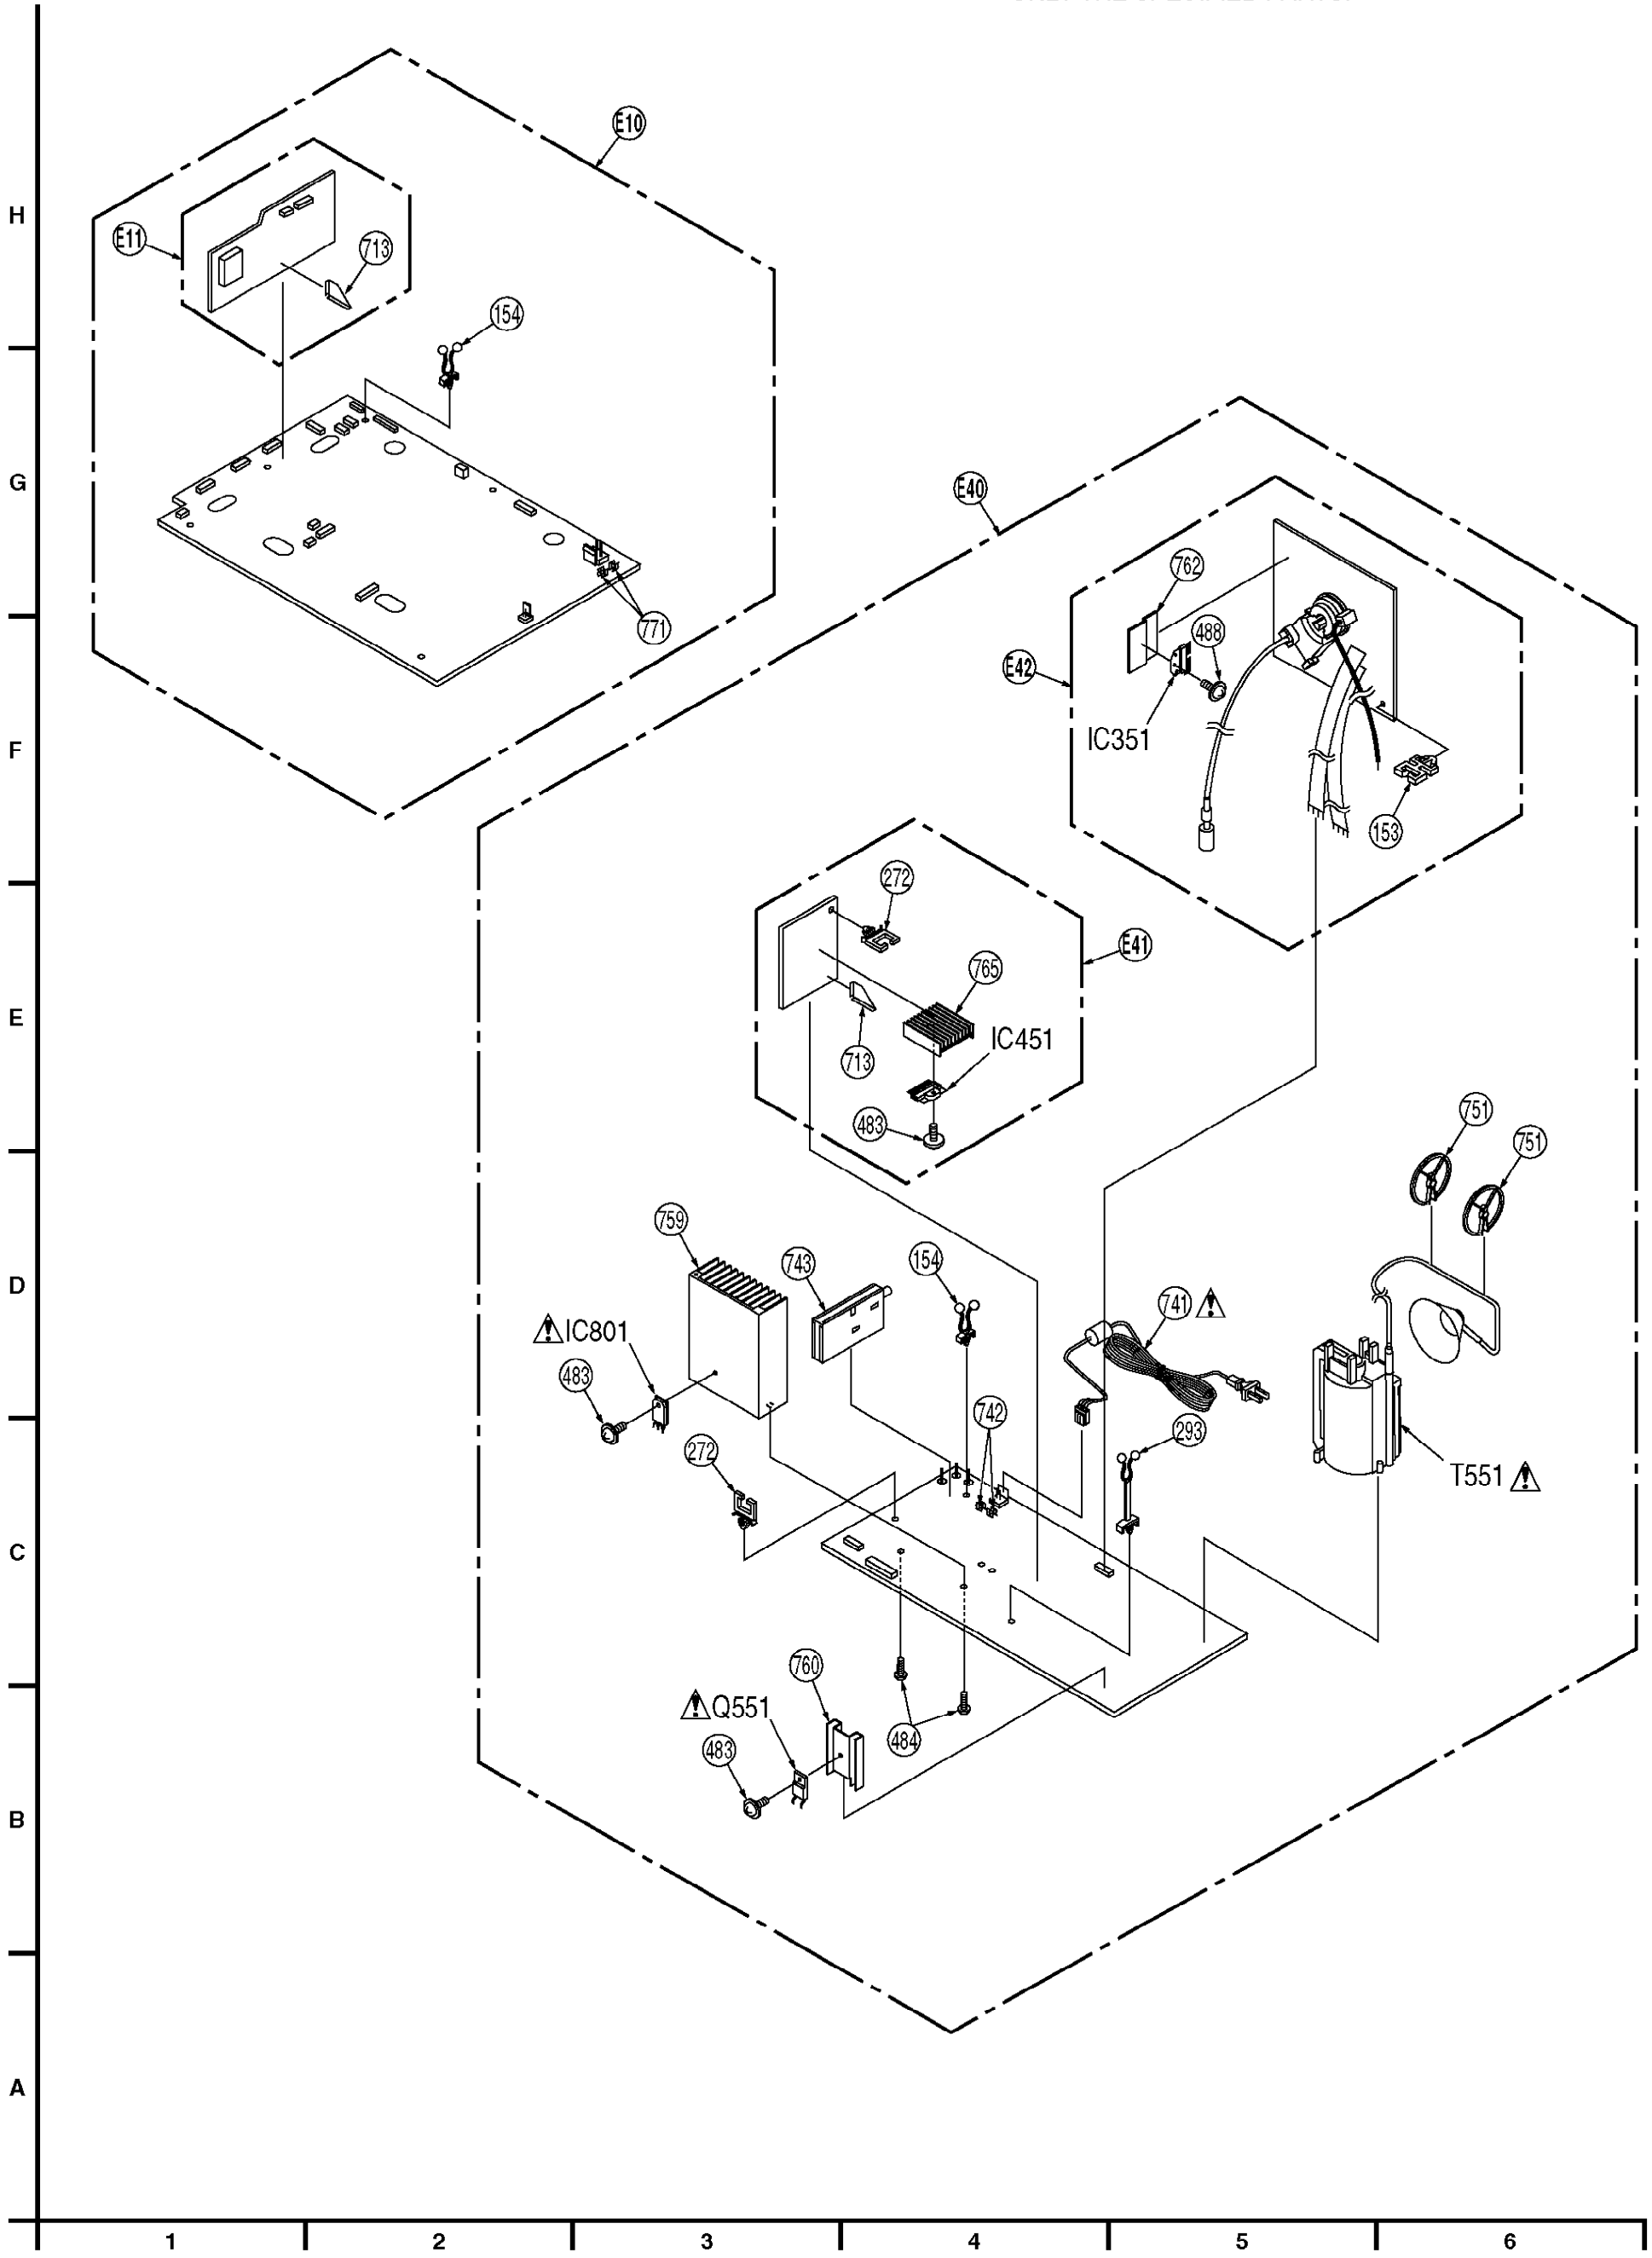

H
G
F
E
D
C
B
A
1
2
3
4
5
6
E10
E11
713
154
771
E40
762
488
E42
IC351
153
272
765
E41
713
IC451
483
751
751
759
743
154
741 ⚠
⚠IC801
483
742
293
T551 ⚠
272
760
⚠Q551
483
484

11.7. CHASSIS FRAME SECTION (4)

❼ PACKING PARTS AND ACCESSORIES SECTION

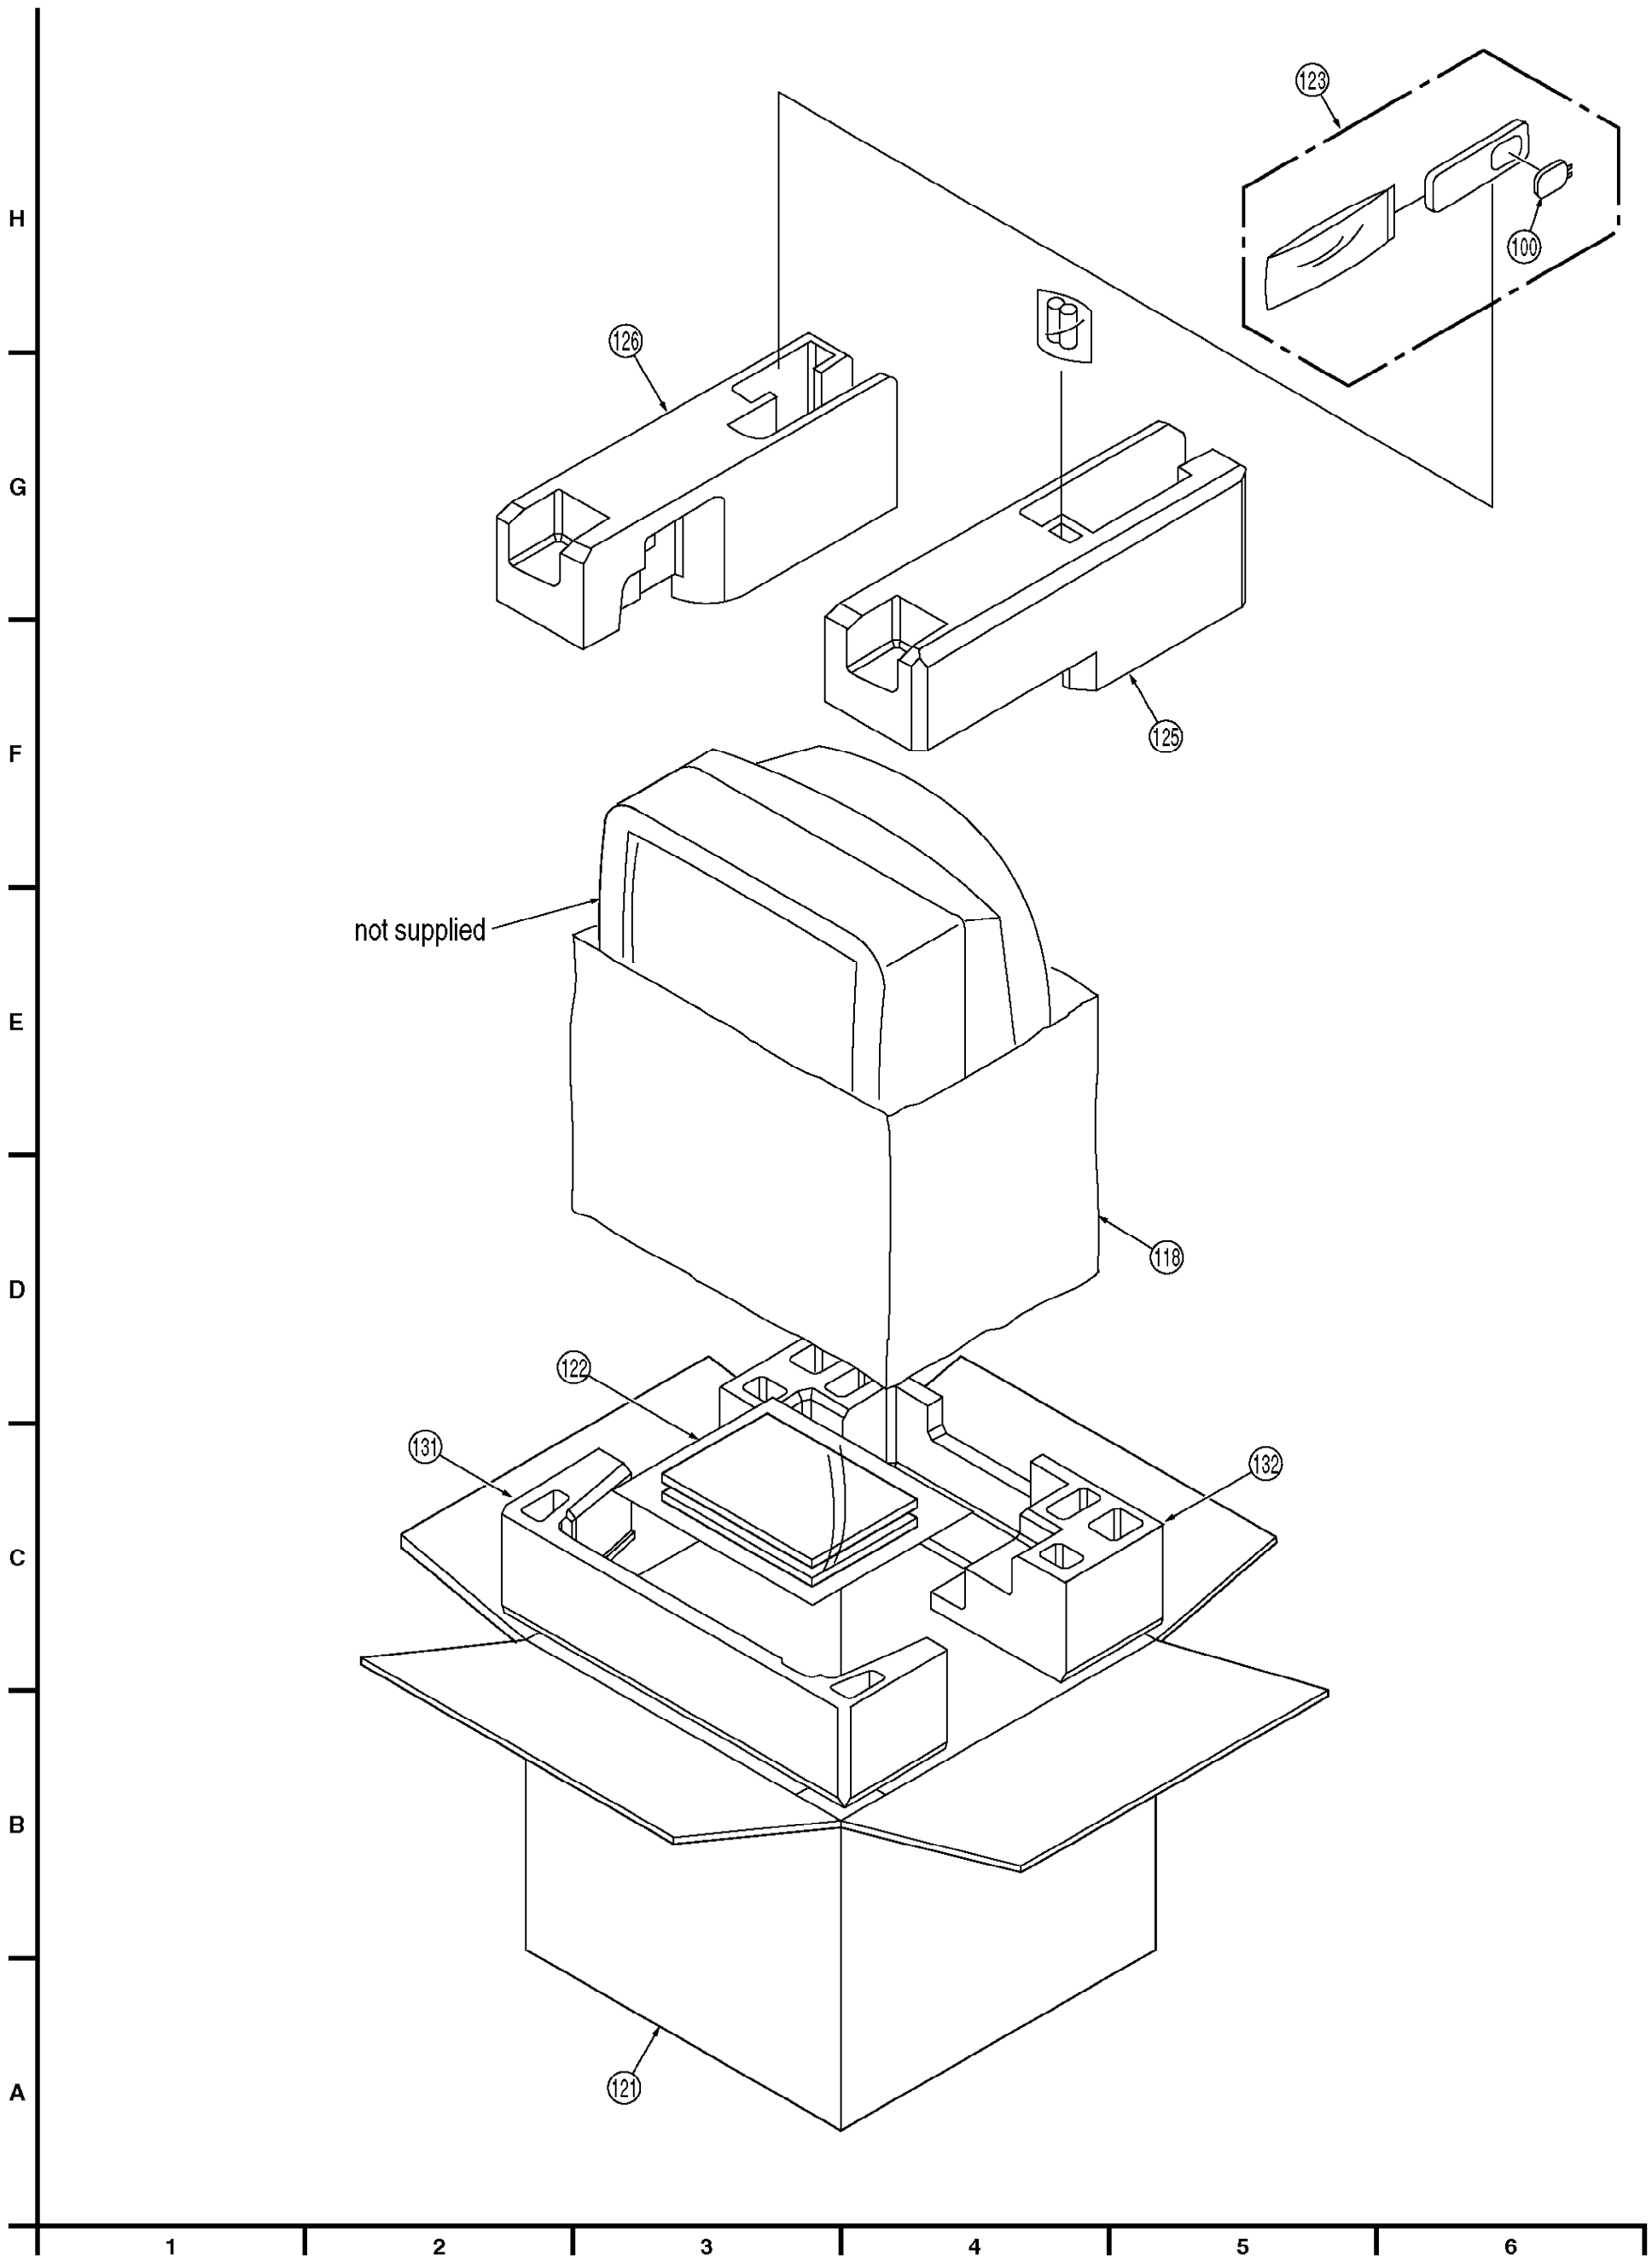
(123)
(100)
(126)
(125)
not supplied
(118)
(122)
(131)
(132)
(121)
H
G
F
E
D
C
B
A
1
2
3
4
5
6

12. REPLACEMENT PARTS LISTS

BEFORE REPLACING PARTS, READ THE FOLLOWING:

12.1. REPLACEMENT NOTES

12.1.1. General Notes

1. Use only original replacement parts:
To maintain original function and reliability of repaired units, use

only original replacement parts which are listed with their part numbers in the parts list.

2. IMPORTANT SAFETY NOTICE
   Components identified by the sign ⚠ have special characteristics important for safety. When replacing any of these components, use only the specified parts.
3. SPECIAL NOTE
   All integrated circuits and many other semiconductor devices are electrostatically sensitive and therefore require the special handling techniques described under the "ELECTROSTATICALLY SENSITIVE (ES) DEVICES" section of this service manual.
4. Parts with no Ref. No. in "EXPLODED VIEWS" are not supplied. And some Ref. No. will be skipped. Be sure to make your orders of replacement parts according to the parts list.
5. Parts different in shape or size may be used. However, only interchangeable parts will be supplied as service replacement parts.
6. Parts with mark “AVC” in Remarks column are supplied from AVC. Others are supplied from MKA.
7. Item numbers with capital letter E (Example: E10, E20,...) in the Ref. No. column are shown in the exploded views.
8. Parts whose Ref. Nos. are the same are interchangeable as replacement parts. Any of these parts may be ordered and used as a replacement part.

12.1.2. Mechanical Replacement Notes

1. Section No. of parts shown in Exploded Views are indicated in the Remarks column.
2. The Mechanical Chassis Sub Ass'y (Ref. No. 4) consists of all the mechanical parts except the Cylinder Unit (Ref. No. 11) and the Cassette Up Ass'y (Ref. No. 61).
   After replacing the Mechanical Chassis Sub Ass'y, be sure to perform "TAPE INTERCHANGEABILITY ADJUSTMENT" in MECHANICAL ADJUSTMENT procedures.

3. In early units, a washer is used.
When servicing the washer or the P5 Arm Unit, replace only the P5 Arm Unit with a new one, and remove the washer.

4. Main Cam Gear is supplied as a Main Cam Gear Kit (Ref. No. 8) only. Main Cam Gear Kit consists of a Main Cam Gear and a Main Cam Push Nut. However, Main Cam Push Nut is available separately as a replacement part.

5. The Capstan Motor Ass'y (Ref. No. 46) is supplied as a unit only. However, the Flat Flexible Cable (Ref. No. 45) is available separately as a replacement part.

6. The Infrared Remote Control Unit (Ref. No. 123) replacement part is available as a complete assembly unit only. Do not try to disassemble the Infrared Remote Control Unit. However, the battery cover is available separately as a replacement part.

7. Main Cam Push Nut (Ref. No. 414) is not reusable.
If removed, install a new one.

8. When replacing the DVD Frame (Ref. No. 317), be sure to place the Rating Label (Ref. No. 318) on it.

12.1.3. Electrical Replacement Notes

1. Unless otherwise specified;
All resistors are in Ω, K = 1,000 Ω, M = 1,000 kΩ.

2. Abbreviation

RTL:

Retention Time Limited
This indicates that the retention time is limited for this item. After the discontinuation of this item in production, it will no longer be available.

NR:

Non Repairable Board Ass'y

MGF CHIP:

Metal Glaze Film Chip

C CHIP:

Ceramic Chip

COMPLX CMP:

Complex Component

W FLMPRF:

Wirewound Flameproof

C.B.A.:

Circuit Board Assembly

P.C.B.:

Printed Circuit Board

E.S.D.:

Electrostatically Sensitive Devices

3. When replacing 0 Ω resistor, a wire can be substituted for it.

4. Since the UHF/VHF TUNER/TV DEMODULATOR UNIT (Ref. No. 743) has already been pre-adjusted at the factory, do not try to adjust the UHF/VHF TUNER/TV DEMODULATOR UNIT. The UHF/ VHF TUNER/TV DEMODULATORUNIT replacement part is available as a complete assembly unit only.

5. EEP ROM IC (IC8001), DVD Decoder C.B.A. replacement note: After replacing EEP ROM IC (IC8001) or DVD Decoder C.B.A., confirm the Firmware version of DVD using Self-Diagnostic function. If the version is different than that indicated on the Firmware Disc, update it using the Firmware Disc. Refer to “HOWTO UPDATE THE FIRMWARE OF DVD.“

COMPARISON CHART OF MODELS & MARKS

MODEL	MARK
PV-DM2792	A
PV-DM2792-K	B

12.2. MECHANICAL REPLACEMENT PARTS LIST

COMPARISON CHART OF MODELS & MARKS

MODEL	MARK
PV-DM2792	A
PV-DM2792-K	B

MECHANICAL REPLACEMENT PARTS

Ref. No.	Part No.	Part Name & Description	Remarks
1	VBSS0033	FULL ERASE HEAD	1
2	LSXK0094	MOTOR BLOCK UNIT	1
3	LSDB0045	TENSION ARM BOSS	1
4	LSXY0281	MECHANICAL CHASSIS SUB ASS'Y	1,2
5	LSMD0209	OPENER PIECE	1
8	VVGS0009	MAIN CAM GEAR KIT	2
9	LSDR0004	S REEL TABLE	1
10	LSDR0005	T REEL TABLE	1
11	LSEG0030	CYLINDER UNIT	1
12	VEHS0587	AUDIO CONTROL/ERASE HEAD UNIT	1
14	LSDG0112	LIFT GEAR	1
16	VXDS0213	LOADING POST BASE-S UNIT	1
17	VXDS0214	LOADING POST BASE-T UNIT	1
18	LSXL0079	PINCH ARM UNIT	1
19	LSDG0110	INTERMEDIATE GEAR A	1
20	LSXL0078	P5 ARM UNIT	1
21	LSML0131	DRIVE RACK ARM	1
22	LSXL0077	TENSION CONTROL ARM UNIT	1
23	LSSC0518	A/C SHIELD PLATE	1
27	VXLS1130	T BRAKE UNIT	1
29	VXLS1129	TENSION ARM UNIT	1
38	LSMB0221	CASSETTE DOOR SPRING	4
41	VXPS0389	CENTER CLUTCH UNIT	2
42	VMBS1151	CHANGING GEAR SPRING	2
43	LSDG0114	CHANGING GEAR	2
44	VXLS1091	IDLER ARM UNIT	2
45	LSJW0027	FLAT FLEXIBLE CABLE W/OUT PLUG,12V DC	2
46	LSEM0056	CAPSTAN MOTOR ASS'Y	2
47	LSMM0003	MAIN ROD	2
48	LXQVB01279	COLOR PICTURE TUBE UNIT	4 ⚠
49	VXLS1099	S LOADING ARM UNIT	2
50	VXLS1098	T LOADING ARM UNIT	2
51	LSDG0116	REEL GEAR	2
52	LSDG0111	INTERMEDIATE GEAR B	2
53	LSMA0532	SUPPORT ANGLE	2
54	LSDV0009	CAPSTAN BELT SQUARE,ELASTOMER 2MM	2
58	LSXL0081	SS BRAKE ARM UNIT	2
59	LSMB0196	SS BRAKE SPRING	2
60	VMFS0311	CUSHION	5
61	VXYS1450	CASSETTE UP ASS'Y	3,5
62	LSMA0352	TOP PLATE	3
64	LSMD0174	SIDE PLATE L	3
65	LSMD0173	SIDE PLATE R	3
66	LSMB0218	SUPPORT SPRING	3
67	LSML0144	OPENER LEVER	3
68	VXLS1111	DRIVE RACK UNIT	3
69	VXAS4423	HOLDER UNIT	3
70	VXLS1110	WIPER ARM UNIT	3
71	LXQKY01272	FRONT CABINET ASS'Y (A)	4
71	LXQKY01272K	FRONT CABINET ASS'Y (B)	4
72	LXQKF01272	CASSETTE DOOR-LID UNIT	4
73	LXQKV01272	REAR COVER UNIT (A)	4
73	LXQKV01272K	REAR COVER UNIT (B)	4
84	LSGU0232	OPERATION BUTTON A	4

Ref. No.	Part No.	Part Name & Description	Remarks
90	TBMA008	BADGE,ABS RESIN	4
91	LXQUS01271K	TOP SHIELD PLATE ASS'Y	5
92	LXQAS3270F	SPEAKER UNIT R	4
93	LXQAS4270F	SPEAKER UNIT L	4
100	VKFS2235	BATTERY COVER	7
118	LPE64005A	BAG,POLYETHYLENE	7
121	LSPG1234	PACKING CASE,PAPER (A)	7
121	LSPG1318	PACKING CASE,PAPER (B)	7
122	LSQT0520A	INSTRUCTION BOOK (A)	7
122	LSQF0585	FAN BAG (B)	7
123	LSSQ0302	INFRARED REMOTE CONTROL UNIT	7
125	LSPN0253	TOP CUSHION RIGHT,STRYROFOAM	7
126	LSPN0252	TOP CUSHION LEFT,STRYROFOAM	7
131	LSPN0254	BOTTOM CUSHION FRONT,STYROFOAM	7
132	LSPN0255	BOTTOM CUSHION REAR,STYROFOAM	7
153	TMM7443-1	CLAMPER	6
154	TMM5439-1	CLAMPER	6
200	LSGL0362	PANEL LIGHT	4
201	LSGU0233	OPERATION BUTTON B	4
202	LXQKF02272	DVD DISK DOOR-LID UNIT	4
203	LSMB0170	DVD CASSETTE DOOR SPRING	4
204	LSMA0548	DVD MOUNT ANGLE	5
208	TMK77708	CUSHION,RUBBER	4
209	VMFS0213	SHEET,NYLON-RAYON	4
215	LSQL1180	DOLBY DIGITAL CAUTION LABEL	4
230	LSKF0325	TRAY COVER	5
237	LSMA0452	HEAT SINK SUPPORT ANGLE	5
238	LSMA0451	HC SUPPORT ANGLE	5
242	LSXK0089	DVD UNIT	5
266	VEKS5811	GROUNDING WIRE	5
272	TMM77412	CLAMPER	4,5,6
277	KGLS-3S	CLAMPER	5
292	VEKS5830	GROUNDING WIRE	5
293	TMM76455	PURSE LOCK CLAMPER	4
293	TMM76455	PURSE LOCK CLAMPER	6
316	LSXA0415	LOWER SHIELD ASS'Y	5
317	LMMK0201	DVD FRAME	5
318	LSQL1260	RATING LABEL	5
323	LSMX0153	PCB SPACER	5
401	VHDS0475	SCREW,STEEL	1
405	VHDS0496	SCREW W/WASHER,STEEL	5
410	VHDS0498	SCREW W/WASHER,STEEL	1
414	VHNS0070	MAIN CAM PUSH NUT,STEEL	2
422	XWGV2D5G	WASHER,NYLON	2
424	XYC26+SF6J	SCREW W/WASHER,STEEL	1
426	TMM77532	CUSHION,RUBBER	4
432	XTV3+8JR	TAPPING SCREW,STEEL	5
443	XTV4+12A	TAPPING SCREW,STEEL	4
445	LHT60001Y	SCREW W/WASHER,STEEL	4
446	XTV4+16A	TAPPING SCREW,STEEL	4
449	VHDS0493	TAPPING SCREW,STEEL	5
450	VHDS0309	SCREW,STEEL	5
458	XTV3+8J	TAPPING SCREW,STEEL	1
460	XTN4+12A	TAPPING SCREW,STEEL	5

Ref. No.	Part No.	Part Name & Description	Remarks
469	XSN3+6	SCREW,STEEL	5
470	XTV3+10G	TAPPING SCREW,STEEL	4
473	XYN26+C6	SCREW W/WASHER,STEEL	1
475	XTV26+5FJ	TAPPING SCREW,STEEL	2
478	VHDS0495	SCREW,STEEL	2
483	XYN3+F10S	SCREW W/WASHER,STEEL	5,6
484	XTW3+10J	TAPPING SCREW,STEEL	5,6
488	XYN3+F6S	SCREW W/WASHER,STEEL	6
492	VHDS0274	TAPPING SCREW,STEEL	5
508	XTB26+6J	TAPPING SCREW,STEEL	2
510	XTV3+14JR	TAPPING SCREW,STEEL	5
511	XYC26+CF8	SCREW W/WASHER,STEEL	5
711	LSSZ0004	INFRARED RECEIVER UNIT	5
713	VMAS1912	P.C.B. SUPPORT ANGLE	6
737	VEKS5836	CONNECTOR CABLE W/PLUG,0V	5
741	LSJA0349-FE	AC CORD W/PLUG,120V	6 ⚠
742	K3GE1ZB00003	FUSE HOLDER	6
743	ENG36709G	TUNER,UHF/VHF NR	6
751	LML69001A	ANODE LEAD CLAMPER	6
753	LSSC0256	HEAT SINK	5
759	TUC77627	HEAT SINK	6
760	TUC77628	HEAT SINK	6
762	TUC76649-4	HEAT SINK	6
765	LSSC0254	HEAT SINK	6
771	EYF52BC	FUSE HOLDER	5,6
791	VEKS5773	CONNECTOR CABLE W/PLUG,DC 5V	5
JA	VEKS5824	GROUNDING WIRE	5
E10	LSEP2021A	MAIN C.B.A.	5,6 RTL
E11	VEPS4038A	AUDIO C.B.A.	6 RTL
E20	LSEP2010A	Hi-Fi AUDIO/VIDEO HEAD AMP C.B.A.	1 RTL
E40	LRP61012C	TV MAIN C.B.A.	5,6 RTL
E41	LRP63019D	VERTICAL C.B.A.	6 RTL
E42	LRP63013C	CRT C.B.A.	6 RTL
E50	VEPS1029B	POWER SUPPLY C.B.A.	5 RTL
E60	VEPS4039A	AUDIO AMP C.B.A.	5 RTL
E70	LSEP2022A	OPERATION C.B.A.	5 RTL
E80	LSEP2023A	AUDIO/VIDEO JACK C.B.A.	5 RTL
E90	LSEP2007B	DVD DECODER C.B.A.	5 RTL

SERVICE FIXTURES AND TOOLS

Ref. No.	Part No.	Part Name & Description	Remarks
	VFMS0003H6	VHS ALIGNMENT TAPE	
	VFKS0081	GREASE	
	VFK0329	POST ADJUSTMENT DRIVER	
	VFK27	HEAD CLEANING STICK	
	VFK0330	H-POSITION ADJUSTMENT DRIVER	
	DVDT-S01	DVD TEST DISC	AVC
	LSUA0034	EXTENSION CABLE	

12.3. ELECTRICAL REPLACEMENT PARTS LIST

PRINTED CIRCUIT BOARD ASSEMBLY

Ref. No.	Part No.	Part Name & Description	Remarks
E10	LSEP2021A	MAIN C.B.A.	E.S.D. RTL
E11	VEPS4038A	AUDIO C.B.A.	E.S.D. RTL
E20	LSEP2010A	Hi-Fi AUDIO/VIDEO HEAD AMP C.B.A.	RTL
E40	LRP61012C	TV MAIN C.B.A.	RTL
E41	LRP63019D	VERTICAL C.B.A.	RTL
E42	LRP63013C	CRT C.B.A.	RTL
E50	VEPS1029B	POWER SUPPLY C.B.A.	E.S.D. RTL
E60	VEPS4039A	AUDIO AMP C.B.A.	RTL
E70	LSEP2022A	OPERATION C.B.A.	RTL
E80	LSEP2023A	AUDIO/VIDEO JACK C.B.A.	RTL
E90	LSEP2007B	DVD DECODER C.B.A.	E.S.D. RTL

12.3.1. MAIN C.B.A.

INTEGRATED CIRCUITS

Ref. No.	Part No.	Part Name & Description	Remarks
IC1301	0N3131-R.KT	IC, LINEAR	⚠
IC1301	0N3131-S.KT	IC, LINEAR	⚠
IC1302	TA76431ASTP6	IC, LINEAR	
IC1302	C0DAEMZ00001	IC, LINEAR	
IC1302	B1AZKD000001	IC, LINEAR	
IC3001	AN3479FBP-A	IC, LINEAR	
IC3201	MN3885S	IC, CCD 1H DELAY	E.S.D.
IC3301	LC8632165S53	IC, 8BIT MICROCONTROLLER	E.S.D.
IC3302	C1AB00000402	IC, LINEAR	
IC5301	AN5368FB	IC, LINEAR	
IC5351	C1AB00000408	IC, LINEAR	
IC5361	C1AB00000402	IC, LINEAR	
IC6001	MN101D06GCG	IC, 8BIT MICROCONTROLLER	E.S.D.
IC6002	B3NAA0000049	PHOTO INTERRUPUTER	
IC6003	B3NAA0000049	PHOTO INTERRUPUTER	
IC6004	LSSK0004	IC, 1K EEP ROM	E.S.D.
IC6005	C0EBJ0000080	IC, CMOS STANDARD LOGIC	E.S.D.
IC6005	C0EBJ0000099	IC, CMOS STADNARD LOGIC	E.S.D.
IC6005	RN5VS47CA-TR	IC, CMOS STANDARD LOGIC	E.S.D.

TRANSISTORS

Ref. No.	Part No.	Part Name & Description	Remarks
Q1301	2SD1458	TRANSISTOR SI NPN	
Q1301	2SD225900A	TRANSISTOR SI NPN	
Q1302	2SC4559LP.KT	TRANSISTOR SI NPN	⚠
Q1302	2SC4130LF608	TRANSISTOR SI NPN	⚠
Q3001	2SB1218A0L	TRANSISTOR SI PNP CHIP	
Q3001	B1ADCF000063	TRANSISTOR SI PNP CHIP	
Q3002	2SD1819A0L	TRANSISTOR SI NPN CHIP	
Q3002	B1ABCF000020	TRANSISTOR SI NPN CHIP	
Q3004	2SB1218A0L	TRANSISTOR SI PNP CHIP	
Q3004	B1ADCF000063	TRANSISTOR SI PNP CHIP	
Q3301	2SB1218A0L	TRANSISTOR SI PNP CHIP	
Q3301	B1ADCF000063	TRANSISTOR SI PNP CHIP	
Q3305	2SD1819A0L	TRANSISTOR SI NPN CHIP	
Q3305	B1ABCF000020	TRANSISTOR SI NPN CHIP	
Q4001	2SB1218A0L	TRANSISTOR SI PNP CHIP	
Q4001	B1ADCF000063	TRANSISTOR SI PNP CHIP	
Q4002	2SD1819A-RS	TRANSISTOR SI NPN CHIP	
Q4003	2SD1819A-RS	TRANSISTOR SI NPN CHIP	
Q4101	2SD0601A0L	TRANSISTOR SI NPN CHIP	
Q4101	B1ABCF000011	TRANSISTOR SI NPN CHIP	
Q4171	2SD1819A0L	TRANSISTOR SI NPN CHIP	
Q4171	B1ABCF000020	TRANSISTOR SI NPN CHIP	
Q5301	2SD0601A0L	TRANSISTOR SI NPN CHIP	
Q5301	B1ABCF000011	TRANSISTOR SI NPN CHIP	
Q5302	2SD0601A0L	TRANSISTOR SI NPN CHIP	
Q5302	B1ABCF000011	TRANSISTOR SI NPN CHIP	
Q5901	2SD225900A	TRANSISTOR SI NPN	
Q5901	2SD1858-RTV2	TRANSISTOR SI NPN	
Q6001	2SB0709A0L	TRANSISTOR SI PNP CHIP	
Q6001	B1ADCF000001	TRANSISTOR SI PNP CHIP	
Q6002	2SD0601A0L	TRANSISTOR SI NPN CHIP	
Q6002	B1ABCF000011	TRANSISTOR SI NPN CHIP	
Q6003	2SD0601A0L	TRANSISTOR SI NPN CHIP	
Q6003	B1ABCF000011	TRANSISTOR SI NPN CHIP	
Q6004	2SB0709A0L	TRANSISTOR SI PNP CHIP	
Q6004	B1ADCF000001	TRANSISTOR SI PNP CHIP	
Q6005	2SB0709A0L	TRANSISTOR SI PNP CHIP	
Q6005	B1ADCF000001	TRANSISTOR SI PNP CHIP	
Q6006	2SD0601A0L	TRANSISTOR SI NPN CHIP	
Q6006	B1ABCF000011	TRANSISTOR SI NPN CHIP	
Q6009	VEKS5707	PHOTO SENSOR UNIT	
Q6010	VEKS5707	PHOTO SENSOR UNIT	

DIODES

Ref. No.	Part No.	Part Name & Description	Remarks
D1301	DB105G	DIODE SI	⚠
D1301	B0EBKR000003	DIODE SI	⚠
D1301	B0EBKR000020	DIODE SI	⚠
D1302	B0HAHP000014	DIODE SI	
D1302	B0HAJP000007	DIODE SI	
D1302	B0HAMP000061	DIODE SI	
D1303	MA2C165001VT	DIODE SI	
D1303	B0AACK000004	DIODE SI	
D1303	1SS119	DIODE SI	
D1304	B0HAHP000014	DIODE SI	
D1304	B0HAJP000007	DIODE SI	
D1304	B0HAMP000061	DIODE SI	
D1305	ERB32-01L3	DIODE SI	
D1305	B0HAML000013	DIODE SI	
D1305	B0HAML000014	DIODE SI	
D1305	RGP15GL-5008	DIODE SI	
D1306	MA2270LA	DIODE ZENER 27V	⚠
D4171	MA2C165001VT	DIODE SI	
D4171	B0AACK000004	DIODE SI	
D4171	1SS119	DIODE SI	
D5304	MA2C165001VT	DIODE SI	
D5304	B0AACK000004	DIODE SI	
D5304	1SS119	DIODE SI	
D5501	MA4062-L	DIODE ZENER 6.2V	⚠
D6001	VEKS5708	SENSOR LED UNIT	
D6003	MA2C165001VT	DIODE SI	
D6003	B0AACK000004	DIODE SI	
D6003	1SS119	DIODE SI	
D6005	MA2C165001VT	DIODE SI	
D6005	B0AACK000004	DIODE SI	
D6005	1SS119	DIODE SI	

RESISTORS

Ref. No.	Part No.	Part Name & Description	Remarks
R1301	ERDS2TJ332	CARBON 1/4W 3.3K	
R1302	D0AF334JA038	CARBON 1/2W 330K	
R1303	ERG1SJ560P	METAL OXIDE 1W 56	
R1304	ERG2SJ333H	METAL OXIDE 2W 33K	
R1305	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R1306	D0AF150JA038	CARBON 1/2W 15	
R1307	ERDS2TJ101	CARBON 1/4W 100	
R1308	ERJ6GEYJ821V	MGF CHIP 1/10W 820	
R1309	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R1310	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R1311	ERJ6ENF1542V	MGF CHIP 1/10W 15.4K	
R1312	ERJ6ENF2001V	MGF CHIP 1/10W 2K	
R3001	ERJ6GEYJ101V	MGF CHIP 1/10W 100	
R3006	ERJ6GEYJ101V	MGF CHIP 1/10W 100	
R3010	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R3016	ERJ6GEYJ121V	MGF CHIP 1/10W 120	
R3017	ERJ6GEYJ331V	MGF CHIP 1/10W 330	
R3024	ERJ6GEYJ391V	MGF CHIP 1/10W 390	
R3025	ERJ6GEYJ125V	MGF CHIP 1/10W 1.2M	
R3026	ERJ6GEYJ474V	MGF CHIP 1/10W 470K	
R3028	ERJ6GEYJ272V	MGF CHIP 1/10W 2.7K	
R3029	ERJ6GEYJ151V	MGF CHIP 1/10W 150	
R3032	ERJ6GEYJ122V	MGF CHIP 1/10W 1.2K	
R3035	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R3036	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R3037	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R3038	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R3077	ERJ6GEYJ101V	MGF CHIP 1/10W 100	
R3078	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R3079	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R3080	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R3083	ERJ6GEYJ221V	MGF CHIP 1/10W 220	
R3084	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R3301	ERJ6GEYJ181V	MGF CHIP 1/10W 180	
R3302	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R3303	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R3304	ERJ6GEYJ101V	MGF CHIP 1/10W 100	
R3305	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R3308	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R3309	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R3310	ERJ6GEYJ394V	MGF CHIP 1/10W 390K	
R3312	ERJ6GEYJ223V	MGF CHIP 1/10W 22K	
R3313	ERJ6GEYJ105V	MGF CHIP 1/10W 1M	
R3314	ERJ6GEYJ182V	MGF CHIP 1/10W 1.8K	
R3315	ERJ6GEYJ221V	MGF CHIP 1/10W 220	
R3316	ERJ6GEYJ331V	MGF CHIP 1/10W 330	
R3318	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R3319	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R3320	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R3321	ERJ6GEYJ101V	MGF CHIP 1/10W 100	
R3324	ERJ6GEYJ471V	MGF CHIP 1/10W 470	
R3325	ERJ6GEYJ471V	MGF CHIP 1/10W 470	
R3327	ERJ6GEYJ471V	MGF CHIP 1/10W 470	
R3331	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	

Ref. No.	Part No.	Part Name & Description	Remarks
R3332	J0JBC0000022	BEAD INDUCTOR CHIP	
R3333	J0JBC0000022	BEAD INDUCTOR CHIP	
R3334	J0JBC0000022	BEAD INDUCTOR CHIP	
R3341	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R3343	ERJ6GEYJ562V	MGF CHIP 1/10W 5.6K	
R3344	ERJ6GEY0R00V	MGF CHIP 1/10W 0	
R3345	ERJ6GEY0R00V	MGF CHIP 1/10W 0	
R3346	ERJ6GEY0R00V	MGF CHIP 1/10W 0	
R3347	ERJ6GEYJ153V	MGF CHIP 1/10W 15K	
R3349	ERJ6GEYJ563V	MGF CHIP 1/10W 56K	
R4001	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R4002	ERJ6GEYJ334V	MGF CHIP 1/10W 330K	
R4003	ERJ6GEYJ221V	MGF CHIP 1/10W 220	
R4004	ERJ6GEYJ333V	MGF CHIP 1/10W 33K	
R4005	ERJ6GEYJ225V	MGF CHIP 1/10W 2.2M	
R4006	ERJ6GEYJ681V	MGF CHIP 1/10W 680	
R4007	ERJ6GEYJ821V	MGF CHIP 1/10W 820	
R4008	ERJ6GEYJ273V	MGF CHIP 1/10W 27K	
R4009	ERJ6GEYJ473V	MGF CHIP 1/10W 47K	
R4010	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R4011	ERJ6GEYJ682V	MGF CHIP 1/10W 6.8K	
R4012	ERJ6GEYJ682V	MGF CHIP 1/10W 6.8K	
R4014	ERJ6GEYJ472V	MGF CHIP 1/10W 4.7K	
R4015	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R4031	ERJ6GEYJ333V	MGF CHIP 1/10W 33K	
R4032	ERJ6GEYJ223V	MGF CHIP 1/10W 22K	
R4051	ERJ6GEYJ393V	MGF CHIP 1/10W 39K	
R4052	ERJ6GEYJ561V	MGF CHIP 1/10W 560	
R4101	ERJ6GEYJ563V	MGF CHIP 1/10W 56K	
R4102	ERJ6GEYJ184V	MGF CHIP 1/10W 180K	
R4103	ERJ6GEYJ153V	MGF CHIP 1/10W 15K	
R4172	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R4175	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R5301	ERJ6GEYJ221V	MGF CHIP 1/10W 220	
R5302	ERJ6GEYJ223V	MGF CHIP 1/10W 22K	
R5303	ERJ6GEYJ472V	MGF CHIP 1/10W 4.7K	
R5304	ERJ6GEYJ393V	MGF CHIP 1/10W 39K	
R5305	ERJ6GEYJ224V	MGF CHIP 1/10W 220K	
R5306	ERJ6GEYJ223V	MGF CHIP 1/10W 22K	
R5307	ERJ6GEY0R00V	MGF CHIP 1/10W 0	
R5308	ERJ6GEYJ393V	MGF CHIP 1/10W 39K	
R5309	ERJ6GEYJ184V	MGF CHIP 1/10W 180K	
R5311	ERJ6GEYJ331V	MGF CHIP 1/10W 330	
R5312	ERJ6GEYJ331V	MGF CHIP 1/10W 330	
R5313	ERJ6GEYJ331V	MGF CHIP 1/10W 330	
R5314	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R5315	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R5316	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R5317	ERJ6GEYJ101V	MGF CHIP 1/10W 100	
R5318	ERJ6GEY0R00V	MGF CHIP 1/10W 0	
R5322	ERJ6GEY0R00V	MGF CHIP 1/10W 0	
R5324	ERJ6GEYJ101V	MGF CHIP 1/10W 100	
R5326	ERJ6GEY0R00V	MGF CHIP 1/10W 0	
R5351	ERJ6GEYJ101V	MGF CHIP 1/10W 100	

Ref. No.	Part No.	Part Name & Description	Remarks
R5361	**ERJ6GEYJ101V**	**MGF CHIP 1/10W 100**	
R5401	**ERJ6GEYJ561V**	**MGF CHIP 1/10W 560**	
R5402	**ERJ6GEYJ394V**	**MGF CHIP 1/10W 390K**	
R5403	**ERJ6GEYJ221V**	**MGF CHIP 1/10W 220**	
R5405	**ERJ6GEYJ822V**	**MGF CHIP 1/10W 8.2K**	
R5406	**ERJ6GEYJ101V**	**MGF CHIP 1/10W 100**	
R5407	**ERJ6GEYJ101V**	**MGF CHIP 1/10W 100**	
R5501	**ERJ6GEYJ471V**	**MGF CHIP 1/10W 470**	
R5502	**ERJ6GEYJ394V**	**MGF CHIP 1/10W 390K**	
R5503	**ERDS2TJ471**	**CARBON 1/4W 470**	
R5504	**ERJ6GEYJ101V**	**MGF CHIP 1/10W 100**	
R5505	**ERJ6ENF3241V**	**MGF CHIP 1/10W 3.24K**	⚠
R5506	**ERJ6GEYJ473V**	**MGF CHIP 1/10W 47K**	
R5508	**ERJ6GEYJ561V**	**MGF CHIP 1/10W 560**	
R5510	**ERJ6GEYJ101V**	**MGF CHIP 1/10W 100**	
R5511	**ERJ6GEYJ222V**	**MGF CHIP 1/10W 2.2K**	
R5512	**ERJ6GEYJ151V**	**MGF CHIP 1/10W 150**	
R5513	**ERJ6GEYJ101V**	**MGF CHIP 1/10W 100**	
R5515	**ERJ6GEYJ272V**	**MGF CHIP 1/10W 2.7K**	
R5604	**ERJ6GEYJ332V**	**MGF CHIP 1/10W 3.3K**	
R5902	**ERJ6GEYJ102V**	**MGF CHIP 1/10W 1K**	
R5932	**ERJ6GEYJ101V**	**MGF CHIP 1/10W 100**	
R5933	**ERJ6GEYJ101V**	**MGF CHIP 1/10W 100**	
R6001	**ERJ6GEYJ103V**	**MGF CHIP 1/10W 10K**	
R6002	**ERJ6GEYJ103V**	**MGF CHIP 1/10W 10K**	
R6003	**ERJ6GEYJ102V**	**MGF CHIP 1/10W 1K**	
R6004	**ERJ6GEYJ102V**	**MGF CHIP 1/10W 1K**	
R6005	**ERJ6GEYJ103V**	**MGF CHIP 1/10W 10K**	
R6006	**ERJ6GEYJ222V**	**MGF CHIP 1/10W 2.2K**	
R6007	**ERJ6GEYJ221V**	**MGF CHIP 1/10W 220**	
R6008	**ERJ6GEYJ102V**	**MGF CHIP 1/10W 1K**	
R6009	**ERJ6GEYJ102V**	**MGF CHIP 1/10W 1K**	
R6011	**ERJ6GEYJ561V**	**MGF CHIP 1/10W 560**	
R6012	**ERJ6GEYJ561V**	**MGF CHIP 1/10W 560**	
R6013	**ERJ6GEYJ102V**	**MGF CHIP 1/10W 1K**	
R6014	**ERJ6GEYJ102V**	**MGF CHIP 1/10W 1K**	
R6015	**ERJ6GEYJ101V**	**MGF CHIP 1/10W 100**	
R6016	**ERJ6GEYJ101V**	**MGF CHIP 1/10W 100**	
R6017	**ERJ6GEYJ101V**	**MGF CHIP 1/10W 100**	
R6018	**ERJ6GEYJ101V**	**MGF CHIP 1/10W 100**	
R6019	**ERJ6GEYJ153V**	**MGF CHIP 1/10W 15K**	
R6021	**ERJ6GEYJ102V**	**MGF CHIP 1/10W 1K**	
R6022	**ERJ6GEYJ332V**	**MGF CHIP 1/10W 3.3K**	
R6023	**ERJ6GEYJ221V**	**MGF CHIP 1/10W 220**	
R6024	**ERJ6GEYJ101V**	**MGF CHIP 1/10W 100**	
R6025	**ERJ6GEY0R00V**	**MGF CHIP 1/10W 0**	
R6027	**ERJ6GEYJ221V**	**MGF CHIP 1/10W 220**	
R6028	**ERJ6GEYJ472V**	**MGF CHIP 1/10W 4.7K**	
R6029	**ERJ6GEYJ102V**	**MGF CHIP 1/10W 1K**	
R6030	**ERJ6GEYJ102V**	**MGF CHIP 1/10W 1K**	
R6035	**ERJ6GEYJ102V**	**MGF CHIP 1/10W 1K**	
R6040	**ERJ6GEYJ101V**	**MGF CHIP 1/10W 100**	
R6041	**ERJ6GEYJ102V**	**MGF CHIP 1/10W 1K**	
R6042	**ERJ6GEYJ103V**	**MGF CHIP 1/10W 10K**	

Ref. No.	Part No.	Part Name & Description	Remarks
R6043	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R6044	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R6045	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R6046	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R6049	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R6050	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R6052	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R6053	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R6054	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R6055	ERJ6GEYJ101V	MGF CHIP 1/10W 100	
R6056	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R6057	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R6058	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R6059	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R6060	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R6061	ERJ6GEYJ101V	MGF CHIP 1/10W 100	
R6062	ERJ6GEYJ101V	MGF CHIP 1/10W 100	
R6063	ERJ6GEYJ101V	MGF CHIP 1/10W 100	
R6064	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R6066	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R6067	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R6077	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R6078	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R6080	ERJ6GEYJ122V	MGF CHIP 1/10W 1.2K	
R6081	ERJ6GEYJ122V	MGF CHIP 1/10W 1.2K	
R6082	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R6090	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R6093	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R6094	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R6098	ERJ6GEYJ153V	MGF CHIP 1/10W 15K	
R6099	ERJ6GEYJ153V	MGF CHIP 1/10W 15K	
R6100	ERJ6GEYJ153V	MGF CHIP 1/10W 15K	
R6113	ERJ6GEYJ472V	MGF CHIP 1/10W 4.7K	
R6114	ERJ6GEYJ272V	MGF CHIP 1/10W 2.7K	
R6115	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R6116	ERDS2TJ101	CARBON 1/4W 100	
R6118	ERJ6GEYJ104V	MGF CHIP 1/10W 100K	
R6119	ERJ6GEYJ223V	MGF CHIP 1/10W 22K	
R6120	ERJ6GEYJ104V	MGF CHIP 1/10W 100K	
R6121	ERJ6GEYJ473V	MGF CHIP 1/10W 47K	
R6122	ERJ6GEYJ181V	MGF CHIP 1/10W 180	
R6123	ERJ6GEYJ473V	MGF CHIP 1/10W 47K	
R6124	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R6126	ERJ6GEYJ221V	MGF CHIP 1/10W 220	
R6127	ERJ6GEYJ221V	MGF CHIP 1/10W 220	
R6130	ERJ6GEYJ223V	MGF CHIP 1/10W 22K	
R6131	ERJ6GEYJ183V	MGF CHIP 1/10W 18K	
R6132	ERJ6GEYJ391V	MGF CHIP 1/10W 390	
R6133	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R6134	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R6135	ERJ6GEYJ475V	MGF CHIP 1/10W 4.7M	
R6136	ERJ6GEYJ332V	MGF CHIP 1/10W 3.3K	
R6137	ERJ6GEYJ182V	MGF CHIP 1/10W 1.8K	
R6138	ERDS2TJ560T	CARBON 1/4W 56	

Ref. No.	Part No.	Part Name & Description	Remarks
R6143	ERJ6GEYJ223V	MGF CHIP 1/10W 22K	
R6144	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R6160	ERJ6GEYJ562V	MGF CHIP 1/10W 5.6K	
R6161	ERJ6GEYJ562V	MGF CHIP 1/10W 5.6K	
R6162	ERJ6GEYJ562V	MGF CHIP 1/10W 5.6K	
R6163	ERJ6GEYJ562V	MGF CHIP 1/10W 5.6K	
R6164	ERJ6GEYJ472V	MGF CHIP 1/10W 4.7K	
R6165	ERJ6GEYJ472V	MGF CHIP 1/10W 4.7K	
R6166	ERJ6GEYJ223V	MGF CHIP 1/10W 22K	
R6167	ERJ6GEYJ562V	MGF CHIP 1/10W 5.6K	
R6170	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R6171	ERJ6GEYJ562V	MGF CHIP 1/10W 5.6K	
R6201	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R6202	ERJ6GEYJ473V	MGF CHIP 1/10W 47K	
R6203	ERJ6GEYJ274V	MGF CHIP 1/10W 270K	
R6204	ERJ6GEYJ184V	MGF CHIP 1/10W 180K	
R6205	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R6207	ERJ6GEYJ101V	MGF CHIP 1/10W 100	
R6208	ERJ6GEYJ152V	MGF CHIP 1/10W 1.5K	
R6209	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R6210	ERJ6GEYJ563V	MGF CHIP 1/10W 56K	
R6211	ERJ6GEYJ153V	MGF CHIP 1/10W 15K	
R6212	ERJ6GEYJ682V	MGF CHIP 1/10W 6.8K	
R6301	ERJ6GEYJ182V	MGF CHIP 1/10W 1.8K	
R6302	ERJ6GEYJ392V	MGF CHIP 1/10W 3.9K	
R6303	ERJ6GEYJ182V	MGF CHIP 1/10W 1.8K	
R6305	ERJ6GEYJ182V	MGF CHIP 1/10W 1.8K	
R6306	ERJ6GEYJ392V	MGF CHIP 1/10W 3.9K	
R6307	ERJ6GEYJ182V	MGF CHIP 1/10W 1.8K	
R6308	ERJ6GEYJ392V	MGF CHIP 1/10W 3.9K	
R6309	ERJ6GEYJ123V	MGF CHIP 1/10W 12K	

CAPACITORS

Ref. No.	Part No.	Part Name & Description	Remarks
C1301	F1B2E101A009	CERAMIC 250V 100PF	⚠
C1301	F1B2E101A008	CERAMIC 250V 100PF	⚠
C1301	F1B2E101A032	CERAMIC 250V 100PF	⚠
C1301	F1B2E101A037	CERAMIC 250V 100PF	⚠
C1302	F1B2E102A012	CERAMIC 250V 1000PF	⚠
C1302	F1B2E102A011	CERAMIC 250V 1000PF	⚠
C1302	F1B2E102A044	CERAMIC 250V 1000PF	⚠
C1302	F1B2E102A045	CERAMIC 250V 1000PF	⚠
C1302	F1B2E1020005	CERAMIC 250V 1000PF	⚠
C1302	F1B2E1020006	CERAMIC 250V 1000PF	⚠
C1307	VCYSBRE183KX	CERAMIC 25V 0.018UF	
C1308	ECEA2DU820YE	ELECTROLYTIC 200V 82UF	⚠
C1308	F2A2D8200001	ELECTROLYTIC 200V 82UF	⚠
C1308	F2A2D8200003	ELECTROLYTIC 200V 82	⚠
C1308	VCESR2D820XE	ELECTROLYTIC 200V 82UF	⚠
C1309	ECKR2H221KB5	CERAMIC 500V 220PF	
C1310	ECJ2VB1E104K	C CHIP 25V 0.1UF	
C1311	VCYSBRE183KX	CERAMIC 25V 0.018UF	
C1312	ECA2DHG4R7B	ELECTROLYTIC 200V 4.7UF	
C1313	ECJ2VB1H102K	C CHIP 50V 1000PFF	
C1314	ECA1VM102	ELECTROLYTIC 35V 100UF0UF	
C1315	ECJ2VB1E104K	C CHIP 25V 0.1UF	
C1316	ECA1VM102	ELECTROLYTIC 35V 100UF0UF	
C3002	ECJ2VC1H020C	C CHIP 50V 2P	
C3003	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3004	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C3006	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3007	ECEA0JKA101	ELECTROLYTIC 6.3V 100UF	
C3008	ECJ2VC1H181J	C CHIP 50V 180PF	
C3009	ECEA1EKA4R7	ELECTROLYTIC 25V 4.7UF	
C3010	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C3013	ECJ2VF1C224Z	C CHIP 16V 0.22UF	
C3015	ECEA0JKA470	ELECTROLYTIC 6.3V 47UF	
C3016	ECEA1CKS100	ELECTROLYTIC 16V 10UF	
C3018	ECEA0JKS101	ELECTROLYTIC 6.3V 100UF	
C3019	ECEA1HKA2R2	ELECTROLYTIC 50V 2.2UF	
C3020	ECEA1CKA220	ELECTROLYTIC 16V 22UF	
C3022	ECJ2VF1C224Z	C CHIP 16V 0.22UF	
C3023	ECJ2VC1H680J	C CHIP 50V 68PF	
C3024	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3025	ECJ2VB1C104K	C CHIP 16V 0.1UF	
C3026	ECJ2VB1H822K	C CHIP 50V 8200PF	
C3027	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C3028	ECEA1HKA2R2	ELECTROLYTIC 50V 2.2UF	
C3030	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C3031	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3032	ECJ2VF1C474Z	C CHIP 16V 0.47UF	
C3034	ECJ2VC1H181J	C CHIP 50V 180PF	
C3035	ECJ2VC1H330J	C CHIP 50V 33PFF	
C3036	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3037	ECEA0JKA101	ELECTROLYTIC 6.3V 100UF	
C3038	ECEA1CKA100	ELECTROLYTIC 16V 10UF	

Ref. No.	Part No.	Part Name & Description	Remarks
C3041	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C3043	ECJ2VB1H392K	C CHIP 50V 3900PF	
C3044	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C3045	ECEA1HKAR47	ELECTROLYTIC 50V 0.47UF	
C3046	ECEA1HKA2R2	ELECTROLYTIC 50V 2.2UF	
C3047	ECEA0JKA101	ELECTROLYTIC 6.3V 100UF	
C3048	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3050	ECEA1HKA2R2	ELECTROLYTIC 50V 2.2UF	
C3055	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3056	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3057	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3058	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C3083	ECJ2VB1H152K	C CHIP 50V 1500PF	
C3084	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C3231	ECEA1HKA010	ELECTROLYTIC 50V 1UF	
C3232	ECJ2VB1H102K	C CHIP 50V 1000PFF	
C3234	ECEA0JKA470	ELECTROLYTIC 6.3V 47UF	
C3235	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C3236	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3237	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C3303	ECJ2VC1H220J	C CHIP 50V 22PF	
C3304	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C3305	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C3306	ECEA0JKA221	ELECTROLYTIC 6.3V 220UF	
C3307	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C3308	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3309	ECJ2VC1H220J	C CHIP 50V 22PF	
C3310	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3311	ECJ2VC1H180J	C CHIP 50V 18PF	
C3313	ECEA1HKA2R2	ELECTROLYTIC 50V 2.2UF	
C3315	ECJ2VB1H102K	C CHIP 50V 1000PFF	
C3316	ECJ2VB1H333K	C CHIP 50V 0.033UF	
C3317	ECEA1HKS010	ELECTROLYTIC 50V 1UF	
C4001	ECJ2VF1C224Z	C CHIP 16V 0.22UF	
C4002	ECEA1HKS010	ELECTROLYTIC 50V 1UF	
C4003	ECJ2VB1H272K	C CHIP 50V 2700PF	
C4004	ECJ2VB1H103K	C CHIP 50V 0.01UF	
C4005	ECEA0JKS220	ELECTROLYTIC 6.3V 22UF	
C4006	ECJ2VB1H102K	C CHIP 50V 1000PFF	
C4007	ECEA0JKA220	ELECTROLYTIC 6.3V 22UF	
C4008	ECEA0JKA470	ELECTROLYTIC 6.3V 47UF	
C4009	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C4010	ECJ2VB1E333K	C CHIP 25V 0.033UF	
C4011	ECJ2VB1H103K	C CHIP 50V 0.01UF	
C4012	ECEA1HKA010	ELECTROLYTIC 50V 1UF	
C4013	ECEA0JKA470	ELECTROLYTIC 6.3V 47UF	
C4014	ECEA1HKA010	ELECTROLYTIC 50V 1UF	
C4051	ECJ2VB1E333K	C CHIP 25V 0.033UF	
C4102	ECQB1562JF3	POLYESTER 100V 5600PF	
C4103	ECJ2VB1H103K	C CHIP 50V 0.01UF	
C4104	ECJ2VB1H103K	C CHIP 50V 0.01UF	
C4105	ECEA1CKA220	ELECTROLYTIC 16V 22UF	
C4171	ECEA1HKA010	ELECTROLYTIC 50V 1UF	
C5301	ECEA1CKN100	ELECTROLYTIC 16V 10UF	

Ref. No.	Part No.	Part Name & Description	Remarks
C5302	ECEA1EKA4R7	ELECTROLYTIC 25V 4.7UF	
C5303	ECEA1HKAR47	ELECTROLYTIC 50V 0.47UF	
C5305	ECEA1HKAR471	ELECTROLYTIC 50V 470UF	
C5306	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C5307	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C5308	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C5351	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C5352	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C5353	ECJ2VC1H220J	C CHIP 50V 22PF	
C5354	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C5361	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C5362	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C5363	ECJ2VC1H220J	C CHIP 50V 22PF	
C5364	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C5401	VCUSTBC224KB	C CHIP 16V 0.22UF	
C5402	ECJ2VB1H222K	C CHIP 50V 2200PF	
C5403	ECEA1HKA2R2	ELECTROLYTIC 50V 2.2UF	
C5501	ECJ2VB1E183K	C CHIP 25V 0.018UF	
C5502	ECJ2VB1H681K	C CHIP 50V 680PF	
C5505	ECEA1CKA470	ELECTROLYTIC 16V 47UF	
C5506	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C5507	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C5508	ECUV1H221JSN	C CHIP 50V 220PF	
C5510	ECEA1HKA010	ELECTROLYTIC 50V 1UF	
C5511	ECJ2VB1E333K	C CHIP 25V 0.033UF	
C5516	ECJ2VB1E333K	C CHIP 25V 0.033UF	
C5601	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C5602	ECJ2VB1E104K	C CHIP 25V 0.1UF	
C5603	ECJ2VC1H150J	C CHIP 50V 15PF	
C5604	ECEA1HKA010	ELECTROLYTIC 50V 1UF	
C5605	ECJ2VB1E153K	C CHIP 25V 0.015UF	
C5902	ECEA1CKA470	ELECTROLYTIC 16V 47UF	
C5903	ECEA1CKA470	ELECTROLYTIC 16V 47UF	
C5904	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C5905	ECEA0JKA101	ELECTROLYTIC 6.3V 100UF	
C5906	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C5932	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C6001	ECEA0JKA331	ELECTROLYTIC 6.3V 330UF	
C6002	ECJ2VC1H080C	C CHIP 50V 8PF	
C6003	ECJ2VC1H100C	C CHIP 50V 10PF	
C6004	ECJ2VB1E104K	C CHIP 25V 0.1UF	
C6006	ECEA0JKA101	ELECTROLYTIC 6.3V 100UF	
C6009	ECEA1CKS100	ELECTROLYTIC 16V 10UF	
C6013	ECJ2VC1H101J	C CHIP 50V 100PFF	
C6017	ECJ2VC1H101J	C CHIP 50V 100PFF	
C6018	ECJ2VC1H101J	C CHIP 50V 100PFF	
C6020	ECJ2VF1H104Z	C CHIP 50V 0.1UF	
C6021	ECEA0JKA101	ELECTROLYTIC 6.3V 100UF	
C6029	ECJ2VF1H104Z	C CHIP 50V 0.1UF	
C6040	ECJ2VB1H102K	C CHIP 50V 1000PFF	
C6041	ECJ2VB1H102K	C CHIP 50V 1000PFF	
C6044	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C6201	ECJ2VB1H102K	C CHIP 50V 1000PFF	
C6202	ECJ2VB1H103K	C CHIP 50V 0.01UF	

Ref. No.	Part No.	Part Name & Description	Remarks
C6203	ECJ2VB1H332K	C CHIP 50V 3300PF	
C6204	ECJ2VB1H103K	C CHIP 50V 0.01UF	
C6207	ECJ2VF1H104Z	C CHIP 50V 0.1UF	
C6208	ECEA1CKS100	ELECTROLYTIC 16V 10UF	
C6209	ECJ2VB1H102K	C CHIP 50V 1000PFF	
C6212	ECJ2VF1H104Z	C CHIP 50V 0.1UF	
C6213	ECEA0JKS331I	ELECTROLYTIC 6.3V 330UF	
C6214	ECEA0JKS220	ELECTROLYTIC 6.3V 22UF	
C6215	ECJ2VB1H272K	C CHIP 50V 2700PF	
C6216	ECJ2VB1H103K	C CHIP 50V 0.01UF	
C6220	ECEA1CKA470	ELECTROLYTIC 16V 47UF	
C6221	ECEA0JKA221	ELECTROLYTIC 6.3V 220UF	
C6401	ECJ2VF1H104Z	C CHIP 50V 0.1UF	
C6402	ECEA0JKA101	ELECTROLYTIC 6.3V 100UF	
C6403	ECEA1HKS010	ELECTROLYTIC 50V 1UF	
C6404	ECJ2VC1H121J	C CHIP 50V 120PF	

FILTERS

Ref. No.	Part No.	Part Name & Description	Remarks
FL4051	VLFS0014	FILTER	

COILS

Ref. No.	Part No.	Part Name & Description	Remarks
L1301	ELF15N005A	LINE FILTER 0.5A 18MH	⚠
L1301	ELF18D290A	LINE FILTER 0.5A 18MH	⚠
L1301	G0B183D00001	LINE FILTER 0.5A 18MH	⚠
L1301	J0HBLD000001	LINE FILTER 0.5A 18MH	⚠
L1301	VLQS0167	LINE FILTER 0.5A 18MH	⚠
L1301	VLQS0170	LINE FILTER 0.6A 18MH	⚠
L1302	J0JHB0000021	FILTER	
L1303	VLQSAB7D220K	COIL 22UH	
L3001	G0C390KA0045	COIL 39UH	
L3002	VLQSAB7D101K	COIL 100UH	
L3005	G0C330KA0045	COIL 33UH	
L3010	VLQSAB7D470K	COIL 47UH	
L3231	ELESN221KA	COIL 220UH	
L4001	ELELN153KA	COIL 15MH	
L4002	ELESN101KA	COIL 100UH	
L4004	G0C100KA0045	COIL 10UH	
L4101	ELESN471KA	COIL 470UH	
L5301	ERJ6GEY0R00V	MGF CHIP 1/10W 0	
L5302	ERJ6GEY0R00V	MGF CHIP 1/10W 0	
L5303	ERJ6GEY0R00V	MGF CHIP 1/10W 0	
L5901	ELESN101KA	COIL 100UH	
L6201	ELEXT101KE04	COIL 100UH	
L6401	ELEXT101KE04	COIL 100UH	

CRYSTAL OSCILLATOR

Ref. No.	Part No.	Part Name & Description	Remarks
X3001	VSXS0195	CRYSTAL OSCILLATOR	
X3301	VSXS0238	CRYSTAL OSCILLATOR	
X5501	H2A503300012	CRYSTAL OSCILLATOR	
X5601	VSXS0208-A	CRYSTAL OSCILLATOR	
X6001	VSXS0784	CRYSTAL OSCILLATOR	

PIN HEADERS

Ref. No.	Part No.	Part Name & Description	Remarks
P1201	K1MP07A00005	7PIN WIRE TRAP	
P1202	K1MP08A00010	8PIN WIRE TRAP	
P1301	LSJP0814	CONNECTOR 2P	
P1303	K1KA02A00009	PIN HEADER 2P	
P3001	K1KA15A00104	CONNECTOR 15P	
P4001	VJSS0888	FE CONNECTOR 2P	
P4002	LSJWM6N120CL	PARALLEL CONNECTOR	
P4004	VJSS0875	CONNECTOR RECEPTACLE 13P	
P5301	K1MP04A00006	WIRE TRAP	
P5501	VJPS0772	CONNECTOR PLUG 19P	
P6001	K1KA05A00177	CONNECTOR 5P	
P6002	VJSS0875	CONNECTOR RECEPTACLE 13P	
P6003	VJPS0771	CONNECTOR PLUG 13P	
P6201	K1KA12A00234	PIN HEADER	
P6301	K1KA07A00056	CONNECTOR 7P	

SWITCHES

Ref. No.	Part No.	Part Name & Description	Remarks
SW6001	LSSH0002	LEAF SWITCH-SAFETY TAB	
SW6002	LSSS0008	MODE SWITCH	
SW6301	EVQ21405R	PUSH SWITCH	
SW6302	EVQ21405R	PUSH SWITCH	
SW6303	EVQ21405R	PUSH SWITCH	
SW6304	EVQ21405R	PUSH SWITCH	
SW6305	EVQ21405R	PUSH SWITCH	
SW6307	EVQ21405R	PUSH SWITCH	
SW6308	EVQ21405R	PUSH SWITCH	
SW6309	EVQ21405R	PUSH SWITCH	
SW6310	EVQ21405R	PUSH SWITCH	
SW6312	EVQ21405R	PUSH SWITCH	
SW6313	EVQ21405R	PUSH SWITCH	

FUSE& PROTECTOR

Ref. No.	Part No.	Part Name & Description	Remarks
F1301	VSFS0003A16	FUSE 125V 1.6A	⚠
F1301	K5D162AB0003	FUSE 125V 1.6A	⚠
F1301	K5D162AQ0004	FUSE 125V 1.6A	⚠
PR1301	UNH000600A	IC PROTECTOR 1.5A	⚠
PR1301	B1ZAZ0000040	IC PROTECTOR 1.5A	⚠
PR1301	LSSF009A25E	IC PROTECTOR 1.5A	⚠

TRANSFORMER

Ref. No.	Part No.	Part Name & Description	Remarks
T1301	LSTP0114	TRANSFORMER	⚠
T4101	VLTS0304	TRANSFORMER	

PRINTED CIRCUIT BOARD ASSEMBLY

Ref. No.	Part No.	Part Name & Description	Remarks
E11	VEPS4038A	AUDIO C.B.A.	

MISCELLANEOUS

Ref. No.	Part No.	Part Name & Description	Remarks
154	TMM5439-1	CLAMPER	
771	EYF52BC	FUSE HOLDER	

12.3.2. AUDIO C.B.A.

INTEGRATED CIRCUITS

Ref. No.	Part No.	Part Name & Description	Remarks
IC4201	AN3962FB-V	IC, LINEAR	
IC4301	C0JBAR000292	IC, CMOS STANDARD LOGIC	E.S.D.
IC4301	CD4053BCM	IC, CMOS STANDARD LOGIC	E.S.D.
IC4302	C1BB00000177	IC, LINEAR	
IC4302	C0ABBB000017	IC, LINEAR	
IC4601	BD3867S	IC, LOGIC(OTHER)	E.S.D.
IC5651	C1AB00001288	IC, LOGIC	E.S.D.
IC9001	CXA2064M	IC, LINEAR	
IC9201	AN7420-NT	IC, LINEAR	

TRANSISTORS

Ref. No.	Part No.	Part Name & Description	Remarks
Q4301	2SD0601A0L	TRANSISTOR SI NPN CHIP	
Q4301	B1ABCF000011	TRANSISTOR SI NPN CHIP	
Q4302	2SD0601A0L	TRANSISTOR SI NPN CHIP	
Q4302	B1ABCF000011	TRANSISTOR SI NPN CHIP	
Q4303	UNR221200L	TRANSISTOR SI NPN CHIP	
Q4303	B1GBCFLL0002	TRANSISTOR SI NPN CHIP	
Q4304	UNR211L00L	TRANSISTOR SI PNP CHIP	
Q4305	UNR221L00L	TRANSISTOR SI PNP CHIP	
Q5651	2SB0709A0L	TRANSISTOR SI PNP CHIP	
Q5651	B1ADCF000001	TRANSISTOR SI PNP CHIP	
Q5652	2SD0601A0L	TRANSISTOR SI NPN CHIP	
Q5652	B1ABCF000011	TRANSISTOR SI NPN CHIP	
Q5653	2SB0709A0L	TRANSISTOR SI PNP CHIP	
Q5653	B1ADCF000001	TRANSISTOR SI PNP CHIP	
Q5654	2SB0709A0L	TRANSISTOR SI PNP CHIP	
Q5654	B1ADCF000001	TRANSISTOR SI PNP CHIP	
Q5655	2SD0601A0L	TRANSISTOR SI NPN CHIP	
Q5655	B1ABCF000011	TRANSISTOR SI NPN CHIP	
Q5656	2SD0601A0L	TRANSISTOR SI NPN CHIP	
Q5656	B1ABCF000011	TRANSISTOR SI NPN CHIP	
Q9001	2SD0601A0L	TRANSISTOR SI NPN CHIP	
Q9001	B1ABCF000011	TRANSISTOR SI NPN CHIP	
Q9002	2SD0601A0L	TRANSISTOR SI NPN CHIP	
Q9002	B1ABCF000011	TRANSISTOR SI NPN CHIP	

DIODES

Ref. No.	Part No.	Part Name & Description	Remarks
D4301	MA2C165001VT	DIODE SI	
D4301	B0AACK000004	DIODE SI	
D4301	1SS119	DIODE SI	
D4302	MA4120N-M	DIODE ZENER 12V	
D4303	MA2C165001VT	DIODE SI	
D4303	B0AACK000004	DIODE SI	
D4303	1SS119	DIODE SI	
D9001	MA2C165001VT	DIODE SI	
D9001	B0AACK000004	DIODE SI	
D9001	1SS119	DIODE SI	

RESISTORS

Ref. No.	Part No.	Part Name & Description	Remarks
R4201	ERJ6GEYJ472V	MGF CHIP 1/10W 4.7K	
R4202	ERJ6GEYJ472V	MGF CHIP 1/10W 4.7K	
R4203	ERJ6GEYJ511V	MGF CHIP 1/10W 510	
R4204	ERJ6GEYJ511V	MGF CHIP 1/10W 510	
R4205	ERJ6GEYJ393V	MGF CHIP 1/10W 39K	
R4206	ERJ6GEYJ393V	MGF CHIP 1/10W 39K	
R4207	ERJ6GEYJ183V	MGF CHIP 1/10W 18K	
R4208	ERJ6GEYJ183V	MGF CHIP 1/10W 18K	
R4209	ERJ6GEY0R00V	MGF CHIP 1/10W 0	
R4210	ERA6YEB153V	MGF CHIP 1/10W 15K	
R4211	ERJ6GEYJ152V	MGF CHIP 1/10W 1.5K	
R4212	ERJ6GEYJ152V	MGF CHIP 1/10W 1.5K	
R4213	ERJ6GEYJ123V	MGF CHIP 1/10W 12K	
R4214	ERJ6GEYJ273V	MGF CHIP 1/10W 27K	
R4215	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R4216	ERJ6GEYJ101V	MGF CHIP 1/10W 100	
R4217	ERJ6GEYJ101V	MGF CHIP 1/10W 100	
R4218	ERJ6GEYJ473V	MGF CHIP 1/10W 47K	
R4219	ERJ6GEYJ473V	MGF CHIP 1/10W 47K	
R4220	ERJ6GEYJ333V	MGF CHIP 1/10W 33K	
R4221	ERJ6GEYJ333V	MGF CHIP 1/10W 33K	
R4222	ERJ6GEYJ153V	MGF CHIP 1/10W 15K	
R4223	ERJ6GEYJ153V	MGF CHIP 1/10W 15K	
R4228	ERJ6GEYJ101V	MGF CHIP 1/10W 100	
R4229	ERJ6GEYJ101V	MGF CHIP 1/10W 100	
R4230	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R4231	ERJ6GEYJ273V	MGF CHIP 1/10W 27K	
R4232	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R4233	ERJ6GEYJ273V	MGF CHIP 1/10W 27K	
R4301	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R4302	ERJ6GEYJ562V	MGF CHIP 1/10W 5.6K	
R4303	ERJ6GEYJ472V	MGF CHIP 1/10W 4.7K	
R4304	ERJ6GEYJ472V	MGF CHIP 1/10W 4.7K	
R4305	ERJ6GEYJ473V	MGF CHIP 1/10W 47K	
R4306	ERDS2TJ101	CARBON 1/4W 100	
R4307	ERDS2TJ101	CARBON 1/4W 100	
R4308	ERJ6GEYJ473V	MGF CHIP 1/10W 47K	
R4309	ERJ6GEYJ104V	MGF CHIP 1/10W 100K	
R4310	ERJ6GEYJ104V	MGF CHIP 1/10W 100K	
R4311	ERJ6GEYJ473V	MGF CHIP 1/10W 47K	
R4312	ERJ6GEYJ473V	MGF CHIP 1/10W 47K	
R4313	ERJ6GEYJ473V	MGF CHIP 1/10W 47K	
R4314	ERJ6GEYJ473V	MGF CHIP 1/10W 47K	
R4315	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R4316	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R4317	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R4318	ERJ6GEYJ473V	MGF CHIP 1/10W 47K	
R4319	ERJ6GEYJ101V	MGF CHIP 1/10W 100	
R4320	ERJ6GEYJ473V	MGF CHIP 1/10W 47K	
R4321	ERJ6GEYJ101V	MGF CHIP 1/10W 100	
R4601	ERJ6GEYJ105V	MGF CHIP 1/10W 1M	
R4602	ERJ6GEYJ394V	MGF CHIP 1/10W 390K	
R4603	ERDS2TJ472	CARBON 1/4W 4.7K	
R4604	ERJ6GEYJ472V	MGF CHIP 1/10W 4.7K	

Ref. No.	Part No.	Part Name & Description	Remarks
R4605	ERJ6GEYJ472V	MGF CHIP 1/10W 4.7K	
R4606	ERJ6GEYJ472V	MGF CHIP 1/10W 4.7K	
R4607	ERDS2TJ101	CARBON 1/4W 100	
R4608	ERDS2TJ101	CARBON 1/4W 100	
R4611	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R4612	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R4613	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R4614	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R5651	ERJ6GEYJ331V	MGF CHIP 1/10W 330	
R5652	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R5653	ERJ6GEYJ682V	MGF CHIP 1/10W 6.8K	
R5654	ERJ6GEYJ152V	MGF CHIP 1/10W 1.5K	
R5655	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R5656	ERJ6GEYJ153V	MGF CHIP 1/10W 15K	
R5657	ERJ6GEYJ333V	MGF CHIP 1/10W 33K	
R5659	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R5660	ERJ6GEYJ821V	MGF CHIP 1/10W 820	
R5661	ERJ6GEYJ391V	MGF CHIP 1/10W 390	
R5662	ERJ6GEYJ391V	MGF CHIP 1/10W 390	
R5663	ERJ6GEYJ471V	MGF CHIP 1/10W 470	
R5664	ERJ6GEYJ561V	MGF CHIP 1/10W 560	
R5665	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R5666	ERJ6GEYJ561V	MGF CHIP 1/10W 560	
R5668	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R5670	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R9001	EVNCYAA03B14	VARIABLE 10K	
R9002	ERJ6GEYG683V	MGF CHIP 1/10W 68K	
R9003	EVNDCAA03B14	VARIABLE 10K	
R9004	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R9005	ERJ6GEYJ105V	MGF CHIP 1/10W 1M	
R9006	ERJ6GEYJ104V	MGF CHIP 1/10W 100K	
R9007	ERJ6GEYJ392V	MGF CHIP 1/10W 3.9K	
R9008	EVMAASA00B53	VARIABLE 5K	
R9009	ERJ6GEYJ332V	MGF CHIP 1/10W 3.3K	
R9010	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R9011	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R9012	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R9017	ERJ6GEYJ821V	MGF CHIP 1/10W 820	
R9018	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R9201	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R9202	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R9203	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R9204	ERJ6GEYJ224V	MGF CHIP 1/10W 220K	
R9205	ERJ6GEYJ332V	MGF CHIP 1/10W 3.3K	
R9206	EVMAASA00B53	VARIABLE 5K	
R9207	ERJ6GEYJ332V	MGF CHIP 1/10W 3.3K	
R9208	ERDS2TJ392	CARBON 1/4W 3.9K	
R9209	ERJ6GEYJ272V	MGF CHIP 1/10W 2.7K	

CAPACITORS

Ref. No.	Part No.	Part Name & Description	Remarks
C4201	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C4202	ECEA1HKA010	ELECTROLYTIC 50V 1UF	
C4203	ECEA1HKA010	ELECTROLYTIC 50V 1UF	
C4204	ECEA1HKA010	ELECTROLYTIC 50V 1UF	
C4205	ECEA1HKA010	ELECTROLYTIC 50V 1UF	
C4206	ECEA1HKA010	ELECTROLYTIC 50V 1UF	
C4207	ECEA1HKA010	ELECTROLYTIC 50V 1UF	
C4208	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C4209	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C4210	ECEA0JKA330I	ELECTROLYTIC 6.3V 33UF	
C4211	ECEA0JKA330I	ELECTROLYTIC 6.3V 33UF	
C4212	ECJ2VB1H473K	C CHIP 50V 0.047UF	
C4213	ECJ2VB1H473K	C CHIP 50V 0.047UF	
C4214	ECEA1HKA2R2	ELECTROLYTIC 50V 2.2UF	
C4215	ECEA1HKA2R2	ELECTROLYTIC 50V 2.2UF	
C4216	ECEA0JKA101	ELECTROLYTIC 6.3V 100UF	
C4217	ECEA0JKA101	ELECTROLYTIC 6.3V 100UF	
C4218	ECJ2VB1H153K	C CHIP 50V 0.015UF	
C4219	ECJ2VB1H153K	C CHIP 50V 0.015UF	
C4220	ECJ2VB1H103K	C CHIP 50V 0.01UF	
C4221	ECJ2VB1H103K	C CHIP 50V 0.01UF	
C4223	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C4224	ECJ2VF1C224Z	C CHIP 16V 0.22UF	
C4225	ECEA1HKA010	ELECTROLYTIC 50V 1UF	
C4226	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C4227	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C4228	ECEA0JKA470	ELECTROLYTIC 6.3V 47UF	
C4229	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C4230	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C4301	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C4302	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C4303	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C4304	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C4305	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C4306	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C4307	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C4308	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C4309	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C4310	ECEA1CKN100	ELECTROLYTIC 16V 10UF	
C4311	ECEA1CKN100	ELECTROLYTIC 16V 10UF	
C4312	ECEA1CKN100	ELECTROLYTIC 16V 10UF	
C4313	ECEA1CKN100	ELECTROLYTIC 16V 10UF	
C4601	ECEA1EKA4R7	ELECTROLYTIC 25V 4.7UF	
C4602	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C4603	ECJ2VB1E683K	C CHIP 25V 0.068UF	
C4604	ECJ2VB1H102K	C CHIP 50V 1000PFF	
C4605	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C4606	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C4612	ECEA1EKA4R7	ELECTROLYTIC 25V 4.7UF	
C4613	ECEA1EKA4R7	ELECTROLYTIC 25V 4.7UF	
C4614	ECEA1EKA4R7	ELECTROLYTIC 25V 4.7UF	
C4615	ECEA1EKA4R7	ELECTROLYTIC 25V 4.7UF	
C4616	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C4617	ECJ2VF1E104Z	C CHIP 25V 0.1UF	

Ref. No.	Part No.	Part Name & Description	Remarks
C4618	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C4619	ECJ2VB1H102K	C CHIP 50V 1000PFF	
C4620	ECJ2VB1E683K	C CHIP 25V 0.068UF	
C4621	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C4622	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C4623	ECA1CM471B	ELECTROLYTIC 16V 470UF	
C5652	ECJ2VC1H100C	C CHIP 50V 10PF	
C5653	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C5654	ECEA1HKA010	ELECTROLYTIC 50V 1UF	
C5655	ECJ2VC1H270J	C CHIP 50V 27PF	
C5656	ECEA0JKA470	ELECTROLYTIC 6.3V 47UF	
C5657	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C5658	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C5659	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C5660	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C5661	ECJ2VF1H104Z	C CHIP 50V 0.1UF	
C5662	ECEA0JKA470	ELECTROLYTIC 6.3V 47UF	
C5663	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C5664	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C5665	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C5666	ECEA0JKA220	ELECTROLYTIC 6.3V 22UF	
C5668	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C5669	ECJ2VC1H181J	C CHIP 50V 180PF	
C5670	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C5671	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C5672	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C5673	ECJ2VC1H560J	C CHIP 50V 56PF	
C5674	ECJ2VC1H390J	C CHIP 50V 39PFF	
C5675	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C5676	ECEA1CKA220	ELECTROLYTIC 16V 22UF	
C5677	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C5678	ECEA1CKS220	ELECTROLYTIC 16V 22UF	
C5680	ECJ2VC1H270J	C CHIP 50V 27PF	
C9001	ECEA1EKA4R7	ELECTROLYTIC 25V 4.7UF	
C9002	ECEA1EKA4R7	ELECTROLYTIC 25V 4.7UF	
C9003	ECEA1EKA4R7	ELECTROLYTIC 25V 4.7UF	
C9004	ECEA1EKA4R7	ELECTROLYTIC 25V 4.7UF	
C9005	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C9006	ECEA1HKA010	ELECTROLYTIC 50V 1UF	
C9007	ECJ2VB1H562K	C CHIP 50V 5600PF	
C9008	ECJ2VB1E123K	C CHIP 25V 0.012UF	
C9009	ECEA1EKN4R7I	ELECTROLYTIC 25V 4.7UF	
C9010	ECEA1HKA010	ELECTROLYTIC 50V 1UF	
C9011	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C9012	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C9013	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C9014	ECEA1EKN4R7I	ELECTROLYTIC 25V 4.7UF	
C9015	ECEA1HKA3R3I	ELECTROLYTIC 50V 3.3UF	
C9016	ECEA1EKN4R7I	ELECTROLYTIC 25V 4.7UF	
C9017	ECJ2VB1E473K	C CHIP 25V 0.047UF	
C9018	ECJ2VB1H272K	C CHIP 50V 2700PF	
C9019	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C9020	ECEA1CKA220	ELECTROLYTIC 16V 22UF	
C9201	ECJ2VF1H103Z	C CHIP 50V 0.01UF	

Ref. No.	Part No.	Part Name & Description	Remarks
C9202	ECEA0JKA470	ELECTROLYTIC 6.3V 47UF	
C9203	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C9204	ECQP1H102JZ3	POLYESTER 50V 1000PF	
C9205	ECEA1HKA010	ELECTROLYTIC 50V 1UF	
C9206	ECEA1HKA3R3I	ELECTROLYTIC 50V 3.3UF	
C9207	ECEA1HKA010	ELECTROLYTIC 50V 1UF	
C9208	ECJ2VB1H223K	C CHIP 50V 0.022UF	
C9209	ECJ2VB1H223K	C CHIP 50V 0.022UF	
C9210	ECEA1HKA010	ELECTROLYTIC 50V 1UF	
C9211	ECEA1HKA010	ELECTROLYTIC 50V 1UF	

FILTERS

Ref. No.	Part No.	Part Name & Description	Remarks
FL5651	LSLF0053	EMI FILTER	

COILS

Ref. No.	Part No.	Part Name & Description	Remarks
L4601	ELEXT101KE04	COIL 100UH	
L5652	ELESN150KA	COIL 15UH	
L5653	LSLQF06R101K	COIL 100UH	
L5654	ELESN4R7KA	COIL 4.7UH	
L5656	ELESN101KA	COIL 100UH	
L5657	ELESN101KA	COIL 100UH	
L5658	ELESN101KA	COIL 100UH	
L9001	ELESN101KA	COIL 100UH	
L9201	ELESN101KA	COIL 100UH	

PIN HEADERS

Ref. No.	Part No.	Part Name & Description	Remarks
P4003	VEKS5831	CONNECTOR CABLE W/PLUG.5V	
P4201	VJHS0293	PACK PIN 3P	
P4202	VJHS0299	PACK PIN 9P	
P4203	VJHS0290	PACK PIN 10P	
P4204	VJHS0290	PACK PIN 10P	
P4205	VJHS0295	PACK PIN 5P	
P4206	VEKS5820	CONNECTOR CABLE W/PLUG,5V	
P4207	VJHS0296	PIN HEADER 6P	
P5651	VJHS0296	PIN HEADER 6P	
P5652	VJHS0295	PACK PIN 5P	

MISCELLANEOUS

Ref. No.	Part No.	Part Name & Description	Remarks
713	VMAS1912	P.C.B. SUPPORT ANGLE	

12.3.3. Hi-Fi AUDIO/VIDEO HEAD AMP C.B.A.

INTEGRATED CIRCUITS

Ref. No.	Part No.	Part Name & Description	Remarks
IC3501	AN3361SB	IC, LINEAR	
IC4401	AN3328S	IC, LINEAR	

RESISTORS

Ref. No.	Part No.	Part Name & Description	Remarks
R3501	ERJ6GEYJ473V	MGF CHIP 1/10W 47K	
R3502	ERJ6GEYJ560V	MGF CHIP 1/10W 56	
R3503	ERJ6GEYJ560V	MGF CHIP 1/10W 56	
R3504	ERJ6GEYJ560V	MGF CHIP 1/10W 56	
R3505	ERJ6GEYJ560V	MGF CHIP 1/10W 56	
R3506	ERJ6GEYJ561V	MGF CHIP 1/10W 560	
R3507	ERJ6GEYJ561V	MGF CHIP 1/10W 560	
R4405	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R4406	ERJ6GEYJ180V	MGF CHIP 1/10W 18	
R4407	ERJ6GEYJ561V	MGF CHIP 1/10W 560	
R4408	ERJ6GEY0R00V	MGF CHIP 1/10W 0	
R4410	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R4411	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	

CAPACITORS

Ref. No.	Part No.	Part Name & Description	Remarks
C3504	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C3505	ECEA1CKA470	ELECTROLYTIC 16V 47UF	
C3506	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3507	ECJ2VB1H102K	C CHIP 50V 1000PFF	
C3508	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3511	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3512	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3513	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3519	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3520	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3523	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3524	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3528	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3529	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C3532	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3533	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C4401	ECJ2VB1H102K	C CHIP 50V 1000PFF	
C4402	ECJ2VB1H102K	C CHIP 50V 1000PFF	
C4405	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C4406	ECJ2VB1H472K	C CHIP 50V 4700PF	
C4408	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C4409	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C4411	ERJ6GEY0R00V	MGF CHIP 1/10W 0	
C4412	ECJ2VF1H104Z	C CHIP 50V 0.1UF	
C4413	ECJ2VF1H104Z	C CHIP 50V 0.1UF	
C4414	ECEA0JKA470	ELECTROLYTIC 6.3V 47UF	

COILS

Ref. No.	Part No.	Part Name & Description	Remarks
L3501	G0C101KA0045	COIL 100UH	
L4401	G0C101KA0045	COIL 100UH	

PIN HEADERS

Ref. No.	Part No.	Part Name & Description	Remarks
P3501	K1KB15B00019	CONNECTOR 15P	

12.3.4. TV MAIN C.B.A.

INTEGRATED CIRCUITS

Ref. No.	Part No.	Part Name & Description	Remarks
IC501	B3PAA0000242	IC, LINEAR	⚠
IC801	C5HABZZ00051	IC, LINEAR	⚠

TRANSISTORS

Ref. No.	Part No.	Part Name & Description	Remarks
Q501	B1AACN000013	TRANSISTOR SI NPN	
Q551	B1BAER000007	TRANSISTOR SI NPN	⚠
Q571	2SC945A-TQ	TRANSISTOR SI NPN	
Q571	2SC2785-TH	TRANSISTOR SI NPN	
Q571	2SC2785-TJ	TRANSISTOR SI NPN	
Q581	B1ACBM000001	TRANSISTOR SI NPN	
Q581	2SA1767-Q	TRANSISTOR SI NPN	
Q581	2SB1221-Q	TRANSISTOR SI NPN	
Q801	2SC945A-TQ	TRANSISTOR SI NPN	
Q801	2SC2785-TH	TRANSISTOR SI NPN	
Q801	2SC2785-TJ	TRANSISTOR SI NPN	
Q7001	2SA1309ARA	TRANSISTOR SI PNP	
Q7001	B1ACCF000006	TRANSISTOR SI PNP	
Q7001	MSA1048BTPE4	TRANSISTOR SI PNP	

DIODES

Ref. No.	Part No.	Part Name & Description	Remarks
D503	ERB43-04V	DIODE SI	
D503	B0HAJP000012	DIODE SI	
D505	MA2C165001VT	DIODE SI	
D505	B0AACK000004	DIODE SI	
D505	1SS119	DIODE SI	
D553	ERB43-04V	DIODE SI	
D553	B0HAJP000012	DIODE SI	
D554	4148-TA	DIODE SI	
D554	MA2C16700E	DIODE SI	
D558	ERB43-04V	DIODE SI	
D558	B0HAJP000012	DIODE SI	
D582	B0HAPV000005	DIODE SI	
D591	D4DDF5R00005	THERMISTOR	⚠
D806	MA2C16700E	DIODE SI	
D806	4148-TA	DIODE SI	
D807	B0AAKT000010	DIODE SI	⚠
D807	B0EAKT000007	DIODE SI	⚠
D808	B0AAKT000010	DIODE SI	⚠
D808	B0EAKT000007	DIODE SI	⚠
D809	B0AAKT000010	DIODE SI	⚠
D809	B0EAKT000007	DIODE SI	⚠
D810	B0AAKT000010	DIODE SI	⚠
D810	B0EAKT000007	DIODE SI	⚠
D811	ERZV10V361CS	SURGE ABSORBER	⚠
D882	ERZV10V361CS	SURGE ABSORBER	⚠

RESISTORS

Ref. No.	Part No.	Part Name & Description	Remarks
R501	ERDS2TJ681	CARBON 1/4W 680	
R502	ERDS2TJ332	CARBON 1/4W 3.3K	
R505	ERDS2TJ561	CARBON 1/4W 560	
R511	ERG3FJ272H	METAL OXIDE 3W 2.7K	
R513	ERG12SJ560P	METAL OXIDE 1/2W 56	
R516	LAR05222J09	W FLMPRF 5W 2.2K	
R552	ERDS2TJ472	CARBON 1/4W 4.7K	
R553	ERDS2TJ102	CARBON 1/4W 1K	
R554	ERDS2TJ822	CARBON 1/4W 8.2K	
R555	ERDS2TJ683	CARBON 1/4W 68K	
R556	ERDS2TJ623T	CARBON 1/4W 62K	
R558	ERG2ANJ102H	METAL OXIDE 2W 1K	
R559	ERDS2TJ103	CARBON 1/4W 10K	
R561	ERQ2CKPR82S	FUSE 2W 0.82	⚠
R562	ERF5ZK2R2	W FLMPRF 5W 2.2	
R571	ERDS2TJ101	CARBON 1/4W 100	
R572	ERDS2TJ331	CARBON 1/4W 330	
R573	ERDS2TJ221	CARBON 1/4W 220	
R574	ERDS2TJ273	CARBON 1/4W 27K	
R581	ERDS1FJ1R5P	CARBON 1/2W 1.5	⚠
R582	ERDS1FJ1R5P	CARBON 1/2W 1.5	⚠
R583	ERDS1FJ1R2P	CARBON 1/2W 1.2	⚠

Ref. No.	Part No.	Part Name & Description	Remarks
R584	**ERDS2TJ562**	**CARBON 1/4W 5.6K**	
R585	**ERDS2TJ473**	**CARBON 1/4W 47K**	
R586	**ERDS2TJ393**	**CARBON 1/4W 39K**	
R591	**ERF5ZJ121**	**W FLMPRF 5W 120**	
R801	**ERF5ZKR82**	**W FLMPRF 5W 0.82**	⚠
R802	**ERDS1FPJ103V**	**CARBON 1/2W 10K**	⚠
R802	**ERDS1FJ103P**	**CARBON 1/2W 10K**	⚠
R803	**ERF10ZK8R2S**	**W FLMPRF 10W 8.2**	
R804	**ERF20ZJ131**	**W FLMPRF 20W 130**	
R805	**ERDS2TJ104**	**CARBON 1/4W 100K**	
R806	**ERQ14AJ470P**	**FUSE 1/4W 47**	⚠
R809	**ERDS2TJ222**	**CARBON 1/4W 2.2K**	
R810	**ERDS2TJ101**	**CARBON 1/4W 100**	
R811	**ERDS2TJ103**	**CARBON 1/4W 10K**	
R812	**VRESC2TK825T**	**CARBON 1/2W 8.2M**	⚠
R813	**ERDS2TJ124**	**CARBON 1/4W 120K**	
R815	**ERDS2TJ223**	**CARBON 1/4W 22K**	
R7001	**ERDS2TJ102**	**CARBON 1/4W 1K**	
R7002	**ERDS2TJ102**	**CARBON 1/4W 1K**	
R7003	**ERDS2TJ102**	**CARBON 1/4W 1K**	
R7004	**ERDS2TJ102**	**CARBON 1/4W 1K**	
R7005	**ERDS2T0T**	**CARBON 1/4W 0**	
R7006	**ERDS2TJ271**	**CARBON 1/4W 270**	
R7007	**ERDS2TJ102**	**CARBON 1/4W 1K**	
R7008	**ERDS2TJ102**	**CARBON 1/4W 1K**	

CAPACITORS

Ref. No.	Part No.	Part Name & Description	Remarks
C501	ECQB1H473KM3	POLYESTER 50V 0.047UF	
C510	ECKR2H681KB5	CERAMIC 500V 680PF	
C513	ECA1HM100B	ELECTROLYTIC 50V 10UF	
C524	ECKC3D561KBP	CERAMIC 2KV 560PF	⚠
C531	ECA1HM3R3B	ELECTROLYTIC 50V 3.3UF	
C553	ECKR2H221KB5	CERAMIC 500V 220PF	
C554	ECWH12H682JS	POLYESTER 120V 6800PF	⚠
C554	ECWH16682JVB	POLYESTER 1250V 6800PF	⚠
C556	ECWF2564JBP	POLYESTER 250V 0.56UF	⚠
C556	ECWF2564JSB	POLYESTER 250V 0.56UF	⚠
C558	ECA1VM101B	ELECTROLYTIC 35V 100UF	
C560	ECA2EM100E	ELECTROLYTIC 250V 10UF	⚠
C560	ECA2EM100B	ELECTROLYTIC 250V 10UF	⚠
C560	ECEA2EU100	ELECTROLYTIC 250V 10UF	⚠
C561	ECA1HM4R7B	ELECTROLYTIC 50V 4.7UF	
C563	ECEA180V33WE	ELECTROLYTIC 180V 33UF	
C571	ECA1HM3R3B	ELECTROLYTIC 50V 3.3UF	
C573	ECKR2H122KB5	CERAMIC 50V 1200PF	
C581	ECWH12H682JS	POLYESTER 120V 6800PF	⚠
C801	VCKSRNG472ZX	CERAMIC 250V 4700PF	
C802	VCKSRNG472ZX	CERAMIC 250V 4700PF	
C803	VCKSRNG472ZX	CERAMIC 250V 4700PF	
C804	VCKSRNG472ZX	CERAMIC 250V 4700PF	

Ref. No.	Part No.	Part Name & Description	Remarks
C805	ECOS2DP681BB	ELECTROLYTIC 220V 680UF	⚠
C806	ECA2EM330E	ELECTROLYTIC 250V 33UF	
C807	ECKATS103MF	CERAMIC 250V 0.01UF	⚠
C807	ECKETS103MF	CERAMIC 125V 0.01UF	⚠
C807	VCKST3G103ZY	CERAMIC 125V 0.01UF	⚠
C807	VCKSU3D103MY	CERAMIC 125V 0.01UF	⚠
C808	ECQU2A823MLA	POLYESTER 250V 0.082UF	⚠
C808	LSCFQ2A823MC	POLYESTER 250V 0.082UF	⚠
C809	J0LE00000023	ARRESTER	⚠
C812	ECKATS222ME	CERAMIC 250V 2200PF	⚠
C812	ECKETS222ME	CERAMIC 250V 2200PF	⚠
C812	VCKST4D222MX	CERAMIC 250V 2200PF	⚠
C812	VCKST5D222MX	CERAMIC 250V 2200PF	⚠
C812	VCKSU4D222MX	CERAMIC 125V 2200PF	⚠
C812	VCKSU5D222MX	CERAMIC 125V 2200PF	⚠
C813	ECKATS222ME	CERAMIC 250V 2200PF	⚠
C813	ECKETS222ME	CERAMIC 250V 2200PF	⚠
C813	VCKST4D222MX	CERAMIC 250V 2200PF	⚠
C813	VCKST5D222MX	CERAMIC 250V 2200PF	⚠
C813	VCKSU4D222MX	CERAMIC 125V 2200PF	⚠
C813	VCKSU5D222MX	CERAMIC 125V 2200PF	⚠
C7002	ECKR1H102KB	CERAMIC 50V 0.001UF	
C7006	ECA0JM102B	ELECTROLYTIC 6.3V 1000UF	
C7008	ECKR1H103ZF5	CERAMIC 50V 0.01UF	
C7010	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C7012	ECJ2VB1H102K	C CHIP 50V 1000PFF	

COILS

Ref. No.	Part No.	Part Name & Description	Remarks
L501	LLH6602T	COIL	⚠
L801	ELF21V020A	LINE FILTER	⚠
L802	G0A220G00023	COIL 22UH	
L803	ELF21V020A	LINE FILTER	⚠
L7002	VLQSAB7D100K	COIL 10UH	

PIN HEADERS

Ref. No.	Part No.	Part Name & Description	Remarks
P551	K1KB19A00007	CONNECTOR 19P	
P552	K1MP04A00007	4P WIRE TRAP	
P801	LSJP0814	CONNECTOR 2P	
P7004	VJSS0875	CONNECTOR RECEPTACLE 13P	

FUSE& PROTECTOR

Ref. No.	Part No.	Part Name & Description	Remarks
F801	K5D402AD0001	FUSE 125V 4A	⚠

RELAY

Ref. No.	Part No.	Part Name & Description	Remarks
RL801	LSSY0004	RELAY	⚠
RL801	K6B1AGA00042	RELAY,120V	⚠
RL801	TSEH0013	RELAY	⚠
RL801	TSEH1860-1	RELAY	⚠
RL801	TSEH8007	RELAY,120V	⚠

TRANSFORMER

Ref. No.	Part No.	Part Name & Description	Remarks
T501	ETH19Y70AY	TRANSFORMER	
T502	ETE16Z37AY	TRANSFORMER	⚠
T551	KFT4AB408F	FLYBACK TRANSFORMER	⚠

PRINTED CIRCUIT BOARD ASSEMBLY

Ref. No.	Part No.	Part Name & Description	Remarks
E41	LRP63019D	VERTICAL C.B.A.	
E42	LRP63013C	CRT C.B.A.	

MISCELLANEOUS

Ref. No.	Part No.	Part Name & Description	Remarks
154	TMM5439-1	CLAMPER	
272	TMM77412	CLAMPER	
293	TMM76455	PURSE LOCK CLAMPER	
483	XYN3+F10S	SCREW W/WASHER,STEEL	
484	XTW3+10J	TAPPING SCREW,STEEL	
741	LSJA0349-FE	AC CORD W/PLUG,120V	⚠
742	K3GE1ZB00003	FUSE HOLDER	
743	ENG36709G	TUNER,UHF/VHF NR	
751	LML69001A	ANODE LEAD CLAMPER	
759	TUC77627	HEAT SINK	
760	TUC77628	HEAT SINK	

12.3.5. VERTICAL C.B.A.

INTEGRATED CIRCUITS

Ref. No.	Part No.	Part Name & Description	Remarks
IC451	C1AA00000024	IC, LINEAR	

TRANSISTORS

Ref. No.	Part No.	Part Name & Description	Remarks
Q431	**2SA733-TQ**	**TRANSISTOR SI PNP**	
Q431	**2SA1175**	**TRANSISTOR SI PNP**	
Q431	**2SA1175-TH**	**TRANSISTOR SI PNP**	
Q432	**2SC3311ARA**	**TRANSISTOR SI NPN**	
Q433	**2SB1322ARA**	**TRANSISTOR SI PNP**	
Q433	**2SB1322ASA**	**TRANSISTOR SI PNP**	
Q434	**2SC3311ARA**	**TRANSISTOR SI NPN**	
Q502	**2SC945A-TQ**	**TRANSISTOR SI NPN**	
Q502	**2SC2785-TH**	**TRANSISTOR SI NPN**	
Q502	**2SC2785-TJ**	**TRANSISTOR SI NPN**	
Q541	**2SA733-TQ**	**TRANSISTOR SI PNP**	
Q541	**2SA1175**	**TRANSISTOR SI PNP**	
Q541	**2SA1175-TH**	**TRANSISTOR SI PNP**	
Q542	**2SC945A-TQ**	**TRANSISTOR SI NPN**	
Q542	**2SC2785-TH**	**TRANSISTOR SI NPN**	
Q542	**2SC2785-TJ**	**TRANSISTOR SI NPN**	

DIODES

Ref. No.	Part No.	Part Name & Description	Remarks
D401	**B0EAKL000049**	**DIODE SI**	
D401	**B0EAKL000044**	**DIODE SI**	
D401	**B0EAKL000045**	**DIODE SI**	
D502	**MA2C165001VT**	**DIODE SI**	
D502	**B0AACK000004**	**DIODE SI**	
D502	**1SS119**	**DIODE SI**	
D504	**MAZ40470MF**	**DIODE ZENER 4.7V**	
D504	**MAZ40470HF**	**DIODE ZENER 4.7V**	
D504	**RD4.7ESAB**	**DIODE ZENER 4.7V**	
D504	**RD4.7ESAB2**	**DIODE ZENER 4.7V**	
D504	**04AZ4.7ZTPA7**	**DIODE ZENER 4.7V**	
D506	**MA2C165001VT**	**DIODE SI**	
D506	**B0AACK000004**	**DIODE SI**	
D506	**1SS119**	**DIODE SI**	
D541	**MA2C165001VT**	**DIODE SI**	
D541	**B0AACK000004**	**DIODE SI**	
D541	**1SS119**	**DIODE SI**	
D542	**MAZ41500MF**	**DIODE ZENER 15V**	
D543	**MA2C165001VT**	**DIODE SI**	
D543	**B0AACK000004**	**DIODE SI**	
D543	**1SS119**	**DIODE SI**	
D544	**ERB43-04V**	**DIODE SI**	
D544	**B0HAJP000012**	**DIODE SI**	

RESISTORS

Ref. No.	Part No.	Part Name & Description	Remarks
R401	**ERDS2TJ561**	**CARBON 1/4W 560**	
R402	**ERDS2TJ103**	**CARBON 1/4W 10K**	
R405	**ERG2SJ561H**	**METAL OXIDE 2W 560**	
R406	**ERDS2TJ334**	**CARBON 1/4W 330K**	
R409	**ERJ6GEYJ273V**	**MGF CHIP 1/10W 27K**	
R410	**ERDS2TJ272**	**CARBON 1/4W 2.7K**	
R411	**ERDS2TJ104**	**CARBON 1/4W 100K**	
R413	**ERJ6GEYJ333V**	**MGF CHIP 1/10W 33K**	
R414	**ERX1SJ1R2P**	**METAL OXIDE 1W 1.2**	⚠
R422	**ERD25FJ101P**	**CARBON 1/4W 100**	⚠
R427	**ERQ14AJ5R6P**	**FUSE 1/4W 5.6**	⚠
R431	**ERDS2TJ103**	**CARBON 1/4W 10K**	
R432	**ERJ6GEYJ563V**	**MGF CHIP 1/10W 56K**	
R433	**ERJ6GEYJ472V**	**MGF CHIP 1/10W 4.7K**	
R434	**ERDS2TJ103**	**CARBON 1/4W 10K**	
R435	**ERDS2TJ102**	**CARBON 1/4W 1K**	
R436	**ERJ6GEYJ104V**	**MGF CHIP 1/10W 100K**	
R466	**ERJ6GEYJ683V**	**MGF CHIP 1/10W 68K**	
R468	**ERDS2TJ102**	**CARBON 1/4W 1K**	
R469	**ERDS2TJ222**	**CARBON 1/4W 2.2K**	
R470	**ERDS2TJ222**	**CARBON 1/4W 2.2K**	
R471	**ERDS2TJ561**	**CARBON 1/4W 560**	
R472	**ERDS2TJ561**	**CARBON 1/4W 560**	
R473	**ERDS2TJ101**	**CARBON 1/4W 100**	
R474	**ERDS1TJ102**	**CARBON 1/2W 1K**	
R475	**ERDS1TJ102**	**CARBON 1/2W 1K**	
R476	**ERDS2TJ561**	**CARBON 1/4W 560**	
R477	**ERDS2TJ102**	**CARBON 1/4W 1K**	
R478	**ERDS2TJ332**	**CARBON 1/4W 3.3K**	
R480	**ERDS1TJ391**	**CARBON 1/2W 390**	
R481	**ERDS1TJ122**	**CARBON 1/2W 1.2K**	
R482	**ERDS2TJ150**	**CARBON 1/4W 15**	
R486	**ERDS2TJ561**	**CARBON 1/4W 560**	
R487	**ERDS1TJ122**	**CARBON 1/2W 1.2K**	
R503	**ER0S2THF8251**	**PRECISION METAL FILM 1/4W 8.25K**	⚠
R509	**ERDS2TJ101**	**CARBON 1/4W 100**	
R510	**ERDS2TJ472**	**CARBON 1/4W 4.7K**	
R515	**ERJ6GEYJ563V**	**MGF CHIP 1/10W 56K**	
R519	**ERDS2TJ123**	**CARBON 1/4W 12K**	
R520	**ERDS2TJ562**	**CARBON 1/4W 5.6K**	
R523	**ERJ6GEYJ103V**	**MGF CHIP 1/10W 10K**	
R524	**ERDS2TJ223**	**CARBON 1/4W 22K**	
R525	**ERDS2TJ222**	**CARBON 1/4W 2.2K**	
R541	**ERDS2TJ473**	**CARBON 1/4W 47K**	
R542	**ERDS2TJ103**	**CARBON 1/4W 10K**	
R543	**ERDS2TJ472**	**CARBON 1/4W 4.7K**	
R545	**ERDS2TJ331**	**CARBON 1/4W 330**	
R546	**ERDS2TJ103**	**CARBON 1/4W 10K**	
R547	**ERJ6GEYJ153V**	**MGF CHIP 1/10W 15K**	
R548	**ERDS2TJ104**	**CARBON 1/4W 100K**	

CAPACITORS

Ref. No.	Part No.	Part Name & Description	Remarks
C401	ECEA1HGE2R2	ELECTROLYTIC 50V 2.2UF	
C402	ECA1CM471B	ELECTROLYTIC 16V 470UF	
C408	ECA1HGE010KB	ELECTROLYTIC 50V 1UF	
C409	ECA1VM101B	ELECTROLYTIC 35V 100UF	
C413	ECQB1H104KF	POLYESTER 50V 0.1UF	
C414	ECA1CM222E	ELECTROLYTIC 16V 2200UF	
C418	ECA1VM221B	ELECTROLYTIC 35V 220UF	
C458	ECQB1H103KM	POLYESTER 50V 0.01UF	
C541	ECA1HM100B	ELECTROLYTIC 50V 10UF	
C543	ECA1HM100B	ELECTROLYTIC 50V 10UF	

PIN HEADERS

Ref. No.	Part No.	Part Name & Description	Remarks
P451	VJHS0291	PIN HEADER 11P	
P452	VJHS0299	PACK PIN 9P	

MISCELLANEOUS

Ref. No.	Part No.	Part Name & Description	Remarks
272	TMM77412	CLAMPER	
483	XYN3+F10S	SCREW W/WASHER,STEEL	
713	VMAS1912	P.C.B. SUPPORT ANGLE	
765	LSSC0254	HEAT SINK	

12.3.6. CRT C.B.A.

INTEGRATED CIRCUITS

Ref. No.	Part No.	Part Name & Description	Remarks
IC351	TDA6103Q	IC, LINEAR	

DIODES

Ref. No.	Part No.	Part Name & Description	Remarks
D352	B0AAGP000004	DIODE SI	
D353	B0AAGP000004	DIODE SI	
D354	B0AAGP000004	DIODE SI	

RESISTORS

Ref. No.	Part No.	Part Name & Description	Remarks
R354	ERD25TJ272	CARBON 1/4W 2.7K	
R355	ERD25TJ272	CARBON 1/4W 2.7K	
R356	ERD25TJ272	CARBON 1/4W 2.7K	
R357	ERG1SJ104P	METAL OXIDE 1W 100K	
R359	ERG1SJ104P	METAL OXIDE 1W 100K	
R361	ERG1SJ104P	METAL OXIDE 1W 100K	
R363	ERDS2TJ471	CARBON 1/4W 470	
R364	ERDS2TJ222	CARBON 1/4W 2.2K	
R365	ERDS2TJ471	CARBON 1/4W 470	
R366	ERDS2TJ222	CARBON 1/4W 2.2K	
R367	ERDS2TJ471	CARBON 1/4W 470	
R368	ERDS2TJ222	CARBON 1/4W 2.2K	
R369	ERDS2TJ222	CARBON 1/4W 2.2K	
R370	ERDS2TJ222	CARBON 1/4W 2.2K	
R371	ERDS2TJ222	CARBON 1/4W 2.2K	
R372	ERDS2TJ222	CARBON 1/4W 2.2K	
R373	ERDS2TJ222	CARBON 1/4W 2.2K	
R374	ERDS2TJ222	CARBON 1/4W 2.2K	
R375	ERDS2TJ102	CARBON 1/4W 1K	
R376	ERDS2TJ473	CARBON 1/4W 47K	
R377	ERDS2TJ103	CARBON 1/4W 10K	
R378	ERDS2TJ104	CARBON 1/4W 100K	
R379	ERDS2TJ124	CARBON 1/4W 120K	
R380	ERDS2TJ472	CARBON 1/4W 4.7K	

CAPACITORS

Ref. No.	Part No.	Part Name & Description	Remarks
C354	F1B3D1020008	CERAMIC 2KV 1000PF	
C361	F1D1H100A015	CERAMIC 50V 10PF	
C363	F1D1H100A015	CERAMIC 50V 10PF	
C364	ECEA1HKAR22	ELECTROLYTIC 50V 0.22UF	
C365	ECEA1CKN100	ELECTROLYTIC 16V 10UF	
C366	ECA2EM4R7B	ELECTROLYTIC 250V 4.7UF	

PIN HEADERS

Ref. No.	Part No.	Part Name & Description	Remarks
P351	VJWS4MS520IC	CONNECTOR 4P	
P352	VJWS4NS400IC	PARALLEL CONNECTOR 4P	
P353	K3B10CA00040	CRT SOCKET	

MISCELLANEOUS

Ref. No.	Part No.	Part Name & Description	Remarks
153	TMM7443-1	CLAMPER	
488	XYN3+F6S	SCREW W/WASHER,STEEL	
762	TUC76649-4	HEAT SINK	

12.3.7. POWER SUPPLY C.B.A.

INTEGRATED CIRCUITS

Ref. No.	Part No.	Part Name & Description	Remarks
IC1001	0N3131-R.KT	IC, LINEAR	⚠
IC1001	0N3131-S.KT	IC, LINEAR	⚠
IC1002	TA76431ASTP6	IC, LINEAR	
IC1002	C0DAEMZ00001	IC, LINEAR	
IC1002	B1AZKD000001	IC, LINEAR	
IC1501	C5HABZZ00101	IC, LINEAR	⚠
IC1502	0N3131-R.KT	IC, LINEAR	⚠
IC1502	0N3131-S.KT	IC, LINEAR	⚠
IC1503	TA76431ASTP6	IC, LINEAR	
IC1503	C0DAEMZ00001	IC, LINEAR	
IC1503	B1AZKD000001	IC, LINEAR	
IC1504	C0DAZJG00019	IC, LINEAR	
IC4751	T0TX178A	IC, CMOS STANDARD LOGIC	E.S.D.

TRANSISTORS

Ref. No.	Part No.	Part Name & Description	Remarks
Q1001	2SC4533LP.KT	TRANSISTOR SI NPN	⚠
Q1001	2SC5130LF608	TRANSISTOR SI NPN	⚠
Q1002	2SD1458	TRANSISTOR SI NPN	
Q1002	2SD225900A	TRANSISTOR SI NPN	
Q1051	2SD2375-PQ	TRANSISTOR SI NPN	
Q1051	B1BACG000020	TRANSISTOR SI NPN	
Q1051	2SD2396-K	TRANSISTOR SI NPN	
Q1052	2SD601-RS	TRANSISTOR SI NPN CHIP	
Q1052	B1ABCF000011	TRANSISTOR SI NPN CHIP	
Q1053	2SD235800A	TRANSISTOR SI NPN CHIP	
Q1053	B1AAQB000002	TRANSISTOR SI NPN CHIP	
Q1501	2SD0601A0L	TRANSISTOR SI NPN CHIP	
Q1501	B1ABCF000011	TRANSISTOR SI NPN CHIP	
Q1502	XP132A1275SR	TRANSISTOR FET	

DIODES

Ref. No.	Part No.	Part Name & Description	Remarks
D1001	B0EDKR000004	DIODE SI	⚠
D1002	B0AAGP000001	DIODE SI	
D1002	B0HAJP000007	DIODE SI	
D1003	B0AAGP000001	DIODE SI	
D1005	B0AAGP000001	DIODE SI	
D1005	B0HAJP000007	DIODE SI	
D1006	ERC30-01L3	DIODE SI	
D1006	B0HANL000012	DIODE SI	
D1008	ERB81-004V1	DIODE SI	
D1008	B0JAME000049	DIODE SI	
D1015	MA2180LA	DIODE ZENER 18V	⚠
D1015	1N4746A-T	DIODE ZENER 18V	⚠
D1015	1N4746ARL	DIODE ZENER 18V	⚠
D1016	MA2C165001VT	DIODE SI	
D1016	B0AACK000004	DIODE SI	
D1016	1SS119	DIODE SI	
D1052	MA4100N	DIODE ZENER 10V	
D1052	RD10JSAB3	DIODE ZENER 10V	
D1053	MA2C165001VT	DIODE SI	
D1053	B0AACK000004	DIODE SI	
D1053	1SS119	DIODE SI	
D1054	MA2C165001VT	DIODE SI	
D1054	B0AACK000004	DIODE SI	
D1054	1SS119	DIODE SI	
D1501	B0EDKR000004	DIODE SI	⚠
D1502	B0JAMD000012	DIODE SI	
D1502	1GWJ43TPA3	DIODE SI	
D1503	B0HAJL000001	DIODE SI	
D1503	B0HAGP000004	DIODE SI	
D1504	B0HAJL000001	DIODE SI	
D1504	B0HAGP000004	DIODE SI	
D1505	B0HAJL000001	DIODE SI	
D1505	B0HAGP000004	DIODE SI	
D1506	B0HAJL000001	DIODE SI	
D1506	B0HAGP000004	DIODE SI	
D1507	B0AAGP000001	DIODE SI	
D1507	B0HAJP000007	DIODE SI	
D1508	ERB32-01L3	DIODE SI	
D1508	B0HAML000014	DIODE SI	
D1508	RGP15GL-5008	DIODE SI	
D1509	ERC81-006L7	DIODE SI	
D1509	B0JAPG000021	DIODE SI	
D1509	RK46LF015302	DIODE SI	
D4703	MA2C165001VT	DIODE SI	
D4703	B0AACK000004	DIODE SI	
D4703	1SS119	DIODE SI	
D4704	MA2C165001VT	DIODE SI	
D4704	B0AACK000004	DIODE SI	
D4704	1SS119	DIODE SI	

RESISTORS

Ref. No.	Part No.	Part Name & Description	Remarks
R1001	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R1002	ERJ6GEYJ221V	MGF CHIP 1/10W 220	
R1003	D0AF334JA038	CARBON 1/2W 330K	
R1004	ERG2SJ333H	METAL OXIDE 2W 33K	
R1005	ERG1SJ560P	METAL OXIDE 1W 56	
R1006	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R1007	ERJ6GEYJ101V	MGF CHIP 1/10W 100	
R1008	ERJ6GEYJ392V	MGF CHIP 1/10W 3.9K	
R1009	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R1010	ERD25FJ100P	CARBON 1/4W 10	⚠
R1010	ERD25FPJ100P	CARBON 1/4W 10	⚠
R1010	VRESF4FJ100P	CARBON 1/4W 10	⚠
R1012	D1BD2431A016	MGF CHIP 1/10W 2.43K	
R1013	D0HD222ZA002	MGF CHIP 1/10W 2.2K	
R1025	D0AF150JA038	CARBON 1/2W 15	
R1051	ERDS2TJ331	CARBON 1/4W 330	
R1053	ERDS2TJ153	CARBON 1/4W 15K	
R1054	ERDS2TJ153	CARBON 1/4W 15K	
R1055	ERJ6GEYJ104V	MGF CHIP 1/10W 100K	
R1057	ERJ6GEYJ472V	MGF CHIP 1/10W 4.7K	
R1501	D0AF473JA038	CARBON 1/2W 47K	
R1502	ERD2FCG681V	FUSE 1/4W 680	⚠
R1504	ERX2SJR22P	METAL FILM 2W 0.22	
R1505	ERJ6GEYJ332V	MGF CHIP 1/10W 3.3K	
R1507	ERJ6GEYJ182V	MGF CHIP 1/10W 1.8K	
R1508	ERG2SJ104P	METAL OXIDE 2W 100K	
R1510	ERDS2TJ100	CARBON 1/4W 10	
R1511	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R1512	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R1513	ERJ6GEYJ221V	MGF CHIP 1/10W 220	
R1514	D1BD2431A016	MGF CHIP 1/10W 2.43K	
R1515	D0HD222ZA002	MGF CHIP 1/10W 2.2K	
R1516	ERJ6GEY0R00V	MGF CHIP 1/10W 0	
R1518	ERJ6GEYJ104V	MGF CHIP 1/10W 100K	
R1519	ERJ6GEYJ473V	MGF CHIP 1/10W 47K	
R1520	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R1521	ERJ6GEYJ473V	MGF CHIP 1/10W 47K	
R1526	ERJ14YJ181H	MGF CHIP 1/4W 180	
R1527	ERJ14YJ181H	MGF CHIP 1/4W 180	
R1605	ERJ6GEYJ331V	MGF CHIP 1/10W 330	

CAPACITORS

Ref. No.	Part No.	Part Name & Description	Remarks
C1002	ECKATS332ME8	CERAMIC 250V 3300PF	⚠
C1002	ECKDNB332ME8	CERAMIC 125V 3300PF	⚠
C1002	ECKETS332ME8	CERAMIC 125V 3300PF	⚠
C1002	VCKST3G332MX	CERAMIC 250V 3300PF	⚠
C1002	VCKSU3D332MX	CERAMIC 125V 3300PF	⚠
C1003	ECKETS222ME	CERAMIC 250V 2200PF	⚠
C1003	ECKATS222ME	CERAMIC 250V 2200PF	⚠
C1003	VCKSTJG222MX	CERAMIC 250V 2200PF	⚠
C1003	VCKSTLG222MX	CERAMIC 250V 2200PF	⚠
C1003	VCKSU4D222MX	CERAMIC 125V 2200PF	⚠
C1003	VCKSU5D222MX	CERAMIC 125V 2200PF	⚠
C1004	ECEA2DU121YE	ELECTROLYTIC 200V 120UF	⚠
C1004	F2A2D1210003	ELECTROLYTIC 200V 120UF	⚠
C1004	VCESR2D121XE	ELECTROLYTIC 200V 120UF	⚠
C1005	ECA2DHG4R7B	ELECTROLYTIC 200V 4.7UF	
C1006	ECKR2H221KB5	CERAMIC 500V 220PF	
C1007	ECJ2VB1C224K	CERAMIC 16V 0.22UF	
C1009	VCYSBRE183KX	CERAMIC 25V 0.018UF	
C1010	ECJ2VB1H102K	C CHIP 50V 1000PFF	
C1011	ECA1HHG470B	ELECTROLYTIC 50V 47UF	
C1012	ECEA1PEE331	ELECTROLYTIC 18V 330UF	
C1013	ECA1EM331B	ELECTROLYTIC 25V 330UF	
C1016	ECEA1PEE331	ELECTROLYTIC 18V 330UF	
C1017	ECA0JM102B	ELECTROLYTIC 6.3V 1000UF	
C1020	ECKETS222ME	CERAMIC 250V 2200PF	⚠
C1020	ECKATS222ME	CERAMIC 250V 2200PF	⚠
C1020	VCKSTJG222MX	CERAMIC 250V 2200PF	⚠
C1020	VCKSTLG222MX	CERAMIC 250V 2200PF	⚠
C1020	VCKSU4D222MX	CERAMIC 125V 2200PF	⚠
C1020	VCKSU5D222MX	CERAMIC 125V 2200PF	⚠
C1021	ECJ2VB1E104K	C CHIP 25V 0.1UF	
C1024	ECKDRS101MBY	CERAMIC 125V 100PF	⚠
C1024	ECKATS101MB	CERAMIC 250V 100PF	⚠
C1024	ECKETS101MB	CERAMIC 125V 100PF	⚠
C1024	ECKMRS101MBY	CERAMIC 125V 100PF	⚠
C1024	VCKSTJG101KW	CERAMIC 125V 100PF	⚠
C1024	VCKSTLG101KW	CERAMIC 125V 100PF	⚠
C1024	VCKSUJD101KW	CERAMIC 125V 100PF	⚠
C1024	VCKSULD101KW	CERAMIC 125V 100PF	⚠
C1025	ECKDRS101MBY	CERAMIC 125V 100PF	⚠
C1025	ECKATS101MB	CERAMIC 250V 100PF	⚠
C1025	ECKETS101MB	CERAMIC 125V 100PF	⚠
C1025	ECKMRS101MBY	CERAMIC 125V 100PF	⚠
C1025	VCKSTJG101KW	CERAMIC 125V 100PF	⚠
C1025	VCKSTLG101KW	CERAMIC 125V 100PF	⚠
C1025	VCKSUJD101KW	CERAMIC 125V 100PF	⚠
C1025	VCKSULD101KW	CERAMIC 125V 100PF	⚠
C1027	ECKATS103MF	CERAMIC 250V 0.01UF	⚠

Ref. No.	Part No.	Part Name & Description	Remarks
C1027	ECKETS103MF	CERAMIC 125V 0.01UF	⚠
C1027	VCKST3G103MY	CERAMIC 250V 0.01UF	⚠
C1027	VCKSU3D103MY	CERAMIC 125V 0.01UF	⚠
C1029	ECJ2VC1H101J	C CHIP 50V 100PFF	
C1030	VCYSBRE183KX	CERAMIC 25V 0.018UF	
C1032	ECA0JM221B	ELECTROLYTIC 6.3V 220UF	
C1051	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C1055	ECEA1CKA470	ELECTROLYTIC 16V 47UF	
C1059	ECEA0JEE101B	ELECTROLYTIC 6.3V 100UF	
C1061	ECEA1HKAR47	ELECTROLYTIC 50V 0.47UF	
C1063	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C1501	ECKATS152ME	CERAMIC 250V 1500PF	⚠
C1501	ECKETS152ME	CERAMIC 250V 1500PF	⚠
C1501	VCKST4D152MX	CERAMIC 250V 1500PF	⚠
C1501	VCKST5D152MX	CERAMIC 250V 1500PF	⚠
C1502	ECA1HHG220B	ELECTROLYTIC 50V 22UF	
C1503	ECJ2VC1H471J	C CHIP 50V 470PF	
C1504	ECEA2DU820YE	ELECTROLYTIC 200V 82UF	⚠
C1504	F2A2D8200003	ELECTROLYTIC 200V 82UF	⚠
C1504	VCESR2D820XE	ELECTROLYTIC 200V 82UF	⚠
C1505	F1B3D471A011	CERAMIC 2KV 470PF	
C1506	ECKR2H221KB5	CERAMIC 500V 220PF	
C1507	ECJ2VB1E104K	C CHIP 25V 0.1UF	
C1508	ECA2DHG4R7B	ELECTROLYTIC 200V 4.7UF	
C1509	ECJ2VB1H821K	C CHIP 50V 820PF	
C1510	ECEA1PEE331	ELECTROLYTIC 18V 330UF	
C1511	F2A0J2220018	ELECTROLYTIC 6.3V 2200UF	
C1512	ECJ2VB1E104K	C CHIP 25V 0.1UF	
C1513	ECA1CHG470B	ELECTROLYTIC 16V 47UF	
C1514	ECJ2YB1C334K	C CHIP 16V 0.33UF	
C1515	ECA0JFE102XE	ELECTROLYTIC 6.3V 1000UF	
C1516	ECEA1PEE331	ELECTROLYTIC 18V 330UF	
C1517	ECJ2VB1E104K	C CHIP 25V 0.1UF	
C1518	ECA1CM331B	ELECTROLYTIC 16V 330UF	
C1519	ECA0JFE102XE	ELECTROLYTIC 6.3V 1000UF	
C1520	ECJ2VB1H332K	C CHIP 50V 3300PF	
C1528	ECKATS152ME	CERAMIC 250V 1500PF	⚠
C1528	ECKETS152ME	CERAMIC 250V 1500PF	⚠
C1528	VCKST4D152MX	CERAMIC 250V 1500PF	⚠
C1528	VCKST5D152MX	CERAMIC 250V 1500PF	⚠
C1528	VCKSU4D152MX	CERAMIC 250V 1500PF	⚠
C1528	VCKSU5D152MX	CERAMIC 250V 1500PF	⚠
C1605	ECJ2VC1H270J	C CHIP 50V 27PF	
C1606	ECJ2VB1E104K	C CHIP 25V 0.1UF	
C1607	ECEA1EKA4R7	ELECTROLYTIC 25V 4.7UF	

COILS

Ref. No.	Part No.	Part Name & Description	Remarks
L1001	ELF21V018A	LINE NOISE FILTER	⚠
L1001	LLN63055A	COIL	⚠
L1002	VLQSAB7D220K	COIL 22UH	
L1003	VLQSAB7D100K	COIL 10UH	
L1006	VLPS0005A	COIL BEAD INDUCTOR	
L1009	ELEXT101KE04	COIL 100UH	
L1501	J0JHB0000021	FILTER	
L1502	J0JHB0000021	FILTER	
L1503	VLQS0165	COIL 22UH	
L1504	VLQSAB7D100K	COIL 10UH	
L1601	ERJ6GEY0R00V	MGF CHIP 1/10W 0	
L1603	ERJ6GEY0R00V	MGF CHIP 1/10W 0	
L1604	ELESN220KA	COIL 22UH	

PIN HEADERS

Ref. No.	Part No.	Part Name & Description	Remarks
P1001	K1KA02A00110	CONNECTOR 2P	
P1002	LSJWR7N370AC	CONNECTOR CABLE W/PLUG,DC 17V	
P1003	LSJWR8N180AC	CONNECTOR CABLE W/PLUG,DC 35V	
P1004	VEKS5825	CONNECTOR CABLE W/PLUG,0V	
P1501	VJSS0874	CONNECTOR 11P	
P1503	VEKS5801	CONNECTOR CABLE W/PLUG,DC12V	
P4701	K1KA04A00242	CONNECTOR 4P	

FUSE& PROTECTOR

Ref. No.	Part No.	Part Name & Description	Remarks
F1001	K5D302AQ0003	FUSE 125V 3A	⚠
F1001	K5D302ADA002	FUSE 125V 3A	⚠
F1001	K5D302AD0002	FUSE 125V 3A	⚠
PR1001	UNH000600A	IC PROTECTOR 1.5A	⚠
PR1001	B1ZAZ0000040	IC PROTECTOR 1.5A	⚠
PR1001	LSSF009A25E	IC PROTECTOR 1.5A	⚠
PR1002	UNH000600A	IC PROTECTOR 1.5A	⚠
PR1002	B1ZAZ0000040	IC PROTECTOR 1.5A	⚠
PR1002	LSSF009A25E	IC PROTECTOR 1.5A	⚠
PR1501	LSSF009A35E	IC PROTECTOR	⚠
PR1502	UNH000600A	IC PROTECTOR 1.5A	⚠
PR1502	B1ZAZ0000040	IC PROTECTOR 1.5A	⚠
PR1502	LSSF009A25E	IC PROTECTOR 1.5A	⚠

TRANSFORMER

Ref. No.	Part No.	Part Name & Description	Remarks
T1001	ETS28AD2J3AC	TRANSFORMER	⚠
T1001	LSTP0105-2	TRANSFORMER	⚠
T1001	VTPS0042	SW TRANSFORMER	⚠
T1501	LSTP0113	TRANSFORMER	⚠

JACKS

Ref. No.	Part No.	Part Name & Description	Remarks
JK4702	K2HA204B0102	AUDIO JACK SOCKET	

MISCELLANEOUS

Ref. No.	Part No.	Part Name & Description	Remarks
272	TMM77412	CLAMPER	
771	EYF52BC	FUSE HOLDER	

12.3.8. AUDIO AMP C.B.A.

INTEGRATED CIRCUITS

Ref. No.	Part No.	Part Name & Description	Remarks
IC4501	C1BA00000217	IC, LINEAR	

TRANSISTORS

Ref. No.	Part No.	Part Name & Description	Remarks
Q4501	2SD13280TL	TRANSISTOR SI NPN CHIP	
Q4502	2SD13280TL	TRANSISTOR SI NPN CHIP	
Q4503	2SD2159-T	TRANSISTOR SI NPN	
Q4503	2SD1581-T	TRANSISTOR SI NPN	

DIODES

Ref. No.	Part No.	Part Name & Description	Remarks
D4501	MA2C165001VT	DIODE SI	
D4501	B0AACK000004	DIODE SI	
D4501	1SS119	DIODE SI	
D4502	MA2C165001VT	DIODE SI	
D4502	B0AACK000004	DIODE SI	
D4502	1SS119	DIODE SI	

RESISTORS

Ref. No.	Part No.	Part Name & Description	Remarks
R4501	ERJ6GEYJ683V	MGF CHIP 1/10W 68K	
R4502	ERJ6GEYJ683V	MGF CHIP 1/10W 68K	
R4503	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R4504	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R4505	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R4506	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R4507	ERJ6GEYJ104V	MGF CHIP 1/10W 100K	
R4508	ERJ6GEYJ104V	MGF CHIP 1/10W 100K	
R4509	ERJ6GEY0R00V	MGF CHIP 1/10W 0	
R4510	ERJ6GEY0R00V	MGF CHIP 1/10W 0	
R4513	ERJ6GEYJ151V	MGF CHIP 1/10W 150	
R4514	ERJ6GEYJ151V	MGF CHIP 1/10W 150	
R4515	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R4516	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R4519	ERDS2TJ4R7	CARBON 1/4W 4.7	
R4520	ERDS2TJ4R7	CARBON 1/4W 4.7	
R4521	ERDS2TJ4R7	CARBON 1/4W 4.7	
R4522	ERDS2TJ4R7	CARBON 1/4W 4.7	
R4523	ERJ6GEYJ561V	MGF CHIP 1/10W 560	

CAPACITORS

Ref. No.	Part No.	Part Name & Description	Remarks
C4501	ECA1CM101B	ELECTROLYTIC 16V 100UF	
C4502	ECA1CM101B	ELECTROLYTIC 16V 100UF	
C4503	ECJ2VB1H222K	C CHIP 50V 2200PF	
C4504	ECJ2VB1H222K	C CHIP 50V 2200PF	
C4505	ECJ2VB1H222K	C CHIP 50V 2200PF	
C4506	ECJ2VB1H222K	C CHIP 50V 2200PF	
C4507	ECA1HM4R7B	ELECTROLYTIC 50V 4.7UF	
C4508	ECA1HM4R7B	ELECTROLYTIC 50V 4.7UF	
C4509	ECA1EM470B	ELECTROLYTIC 25V 47	
C4510	ECA1EM470B	ELECTROLYTIC 25V 47	
C4511	ECQB1H104KF	POLYESTER 50V 0.1UF	
C4512	ECQB1H104KF	POLYESTER 50V 0.1UF	
C4513	ECA1CM102B	ELECTROLYTIC 16V 1000UF	
C4514	ECA1CM102B	ELECTROLYTIC 16V 1000UF	
C4515	ECA1EM101B	ELECTROLYTIC 25V 100UF	
C4516	ECA1EM102B	ELECTROLYTIC 25V 1000UF	
C4518	ECA1EM471B	ELECTROLYTIC 25V 470	
C4519	ECA1EM101B	ELECTROLYTIC 25V 100UF	
C4525	ECJ2VF1H103Z	C CHIP 50V 0.01UF	

COILS

Ref. No.	Part No.	Part Name & Description	Remarks
L4501	VLQSAB7D680K	COIL 68UH	

PIN HEADERS

Ref. No.	Part No.	Part Name & Description	Remarks
P4502	K1KA05A00177	CONNECTOR 5P	
P4503	K1KA02A00229	CONNECTOR 2P	
P4505	K1KA06A00220	CONNECTOR 6P	
P4506	VEKS5833	CONNECTOR CABLE W/PLUG,22V	
P4508	K1KA02A00229	CONNECTOR 2P	

MISCELLANEOUS

Ref. No.	Part No.	Part Name & Description	Remarks
483	XYN3+F10S	SCREW W/WASHER,STEEL	
484	XTW3+10J	TAPPING SCREW,STEEL	
753	LSSC0256	HEAT SINK	

12.3.9. OPERATION C.B.A.

DIODES

Ref. No.	Part No.	Part Name & Description	Remarks
D6381	B3AAA0000538	LIGHT EMITTING DIODE RED	
D6382	B3ABA0000400	LIGHT EMITTING DIODE GREEN	
D6383	B3ACA0000192	LIGHT EMITTING DIODE ORANGE	

RESISTORS

Ref. No.	Part No.	Part Name & Description	Remarks
R6381	ERDS2TJ123	CARBON 1/4W 12K	

CAPACITORS

Ref. No.	Part No.	Part Name & Description	Remarks
C6381	ECQB1H104KF	POLYESTER 50V 0.1UF	

PIN HEADERS

Ref. No.	Part No.	Part Name & Description	Remarks
P6381	VEKS5863	CONNECTOR CABLE W/PLUG	

SWITCHES

Ref. No.	Part No.	Part Name & Description	Remarks
SW6381	EVQ21405R	PUSH SWITCH	
SW6382	EVQ21405R	PUSH SWITCH	

MISCELLANEOUS

Ref. No.	Part No.	Part Name & Description	Remarks
711	LSSZ0004	INFRARED RECEIVER UNIT	

12.3.10. AUDIO/VIDEO JACK C.B.A.

DIODES

Ref. No.	Part No.	Part Name & Description	Remarks
D4591	RD9.1EW	DIODE ZENER 9.1V	
D4592	MA2C165001VT	DIODE SI	
D4593	MA2C165001VT	DIODE SI	
D4789	MA2C165001VT	DIODE SI	
D4790	MA2C165001VT	DIODE SI	
D4797	MA2C165001VT	DIODE SI	
D4798	MA2C165001VT	DIODE SI	

RESISTORS

Ref. No.	Part No.	Part Name & Description	Remarks
R4591	ERDS2TJ681	CARBON 1/4W 680	
R4592	ERDS2TJ681	CARBON 1/4W 680	
R4593	ERDS2TJ681	CARBON 1/4W 680	
R4594	ERDS2TJ681	CARBON 1/4W 680	
R4791	ERDS2TJ750	CARBON 1/4W 75	
R4792	ERDS2TJ561	CARBON 1/4W 560	
R4793	ERDS2TJ561	CARBON 1/4W 560	

PIN HEADERS

Ref. No.	Part No.	Part Name & Description	Remarks
P4591	VEKS5834	CONNECTOR CABLE W/PLUG,10V	
P4791	LSJWR6N220AA	CONNECTOR CABLE W/PLUG,AC 6V	

JACKS

Ref. No.	Part No.	Part Name & Description	Remarks
JK4591	K2HC103B0129	FRONT AUDIO/VIDEO JACK SOCKET	
JK4791	K2HA306B0058	AUDIO/VIDEO JACK SOCKET	

MISCELLANEOUS

Ref. No.	Part No.	Part Name & Description	Remarks
JA	VEKS5824	GROUNDING WIRE	

12.3.11. DVD DECODER C.B.A.

INTEGRATED CIRCUITS

Ref. No.	Part No.	Part Name & Description	Remarks
IC8000	ES4318F	IC, 32BIT MICROCONTROLLER	E.S.D.
IC8001	AT24C04N10SI	IC, 4K EEP ROM	E.S.D.
IC8001	C3EBEC000031	IC, 4K EEP ROM	E.S.D.
IC8001	S-24C04A	IC, 4K EEP ROM	E.S.D.
IC8002	C0JBAF000480	IC, CMOS STANDARD LOGIC	E.S.D.
IC8002	SN74AHCT374N	IC, CMOS STANDARD LOGIC	E.S.D.
IC8003	C0DBZGG00002	IC, LINEAR	
IC8100	C3ABPG000078	IC, 64MBIT SD RAM	E.S.D.
IC8100	C3ABPG000067	IC, 64MBIT SD RAM	E.S.D.
IC8200	ADV7170KSU	IC, LINEAR	
IC8201	C0CBABD00016	IC, LINEAR	
IC8301	C3FBLD000084	IC, 8MBIT FLASH MEMORY	E.S.D.
IC8301	C3FBLG000012	IC, 8MBIT FLASH MEMORY	E.S.D.
IC8401	AN6552S-E1	IC, LINEAR	
IC8403	PCM1723E-2K	IC, LINEAR	
IC8502	C0JBAB000196	IC, CMOS STANDARD LOGIC	E.S.D.

TRANSISTORS

Ref. No.	Part No.	Part Name & Description	Remarks
Q8000	2SB09560RL	TRANSISTOR SI PNP CHIP	
Q8200	2SB1218ARL	TRANSISTOR SI PNP CHIP	
Q8201	2SB1218ARL	TRANSISTOR SI PNP CHIP	
Q8202	2SB1218ARL	TRANSISTOR SI PNP CHIP	
Q8204	2SB1218ARL	TRANSISTOR SI PNP CHIP	
Q8205	2SB1218ARL	TRANSISTOR SI PNP CHIP	
Q8206	2SB1218ARL	TRANSISTOR SI PNP CHIP	

DIODES

Ref. No.	Part No.	Part Name & Description	Remarks
D8000	MAZ30510ML	DIODE ZENER 5.1V	
D8001	MAZ30510ML	DIODE ZENER 5.1V	
D8002	MAZ30510ML	DIODE ZENER 5.1V	
D8003	MAZ30510ML	DIODE ZENER 5.1V	

RESISTORS

Ref. No.	Part No.	Part Name & Description	Remarks
R8004	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R8010	ERJ3GEYJ472V	MGF CHIP 1/16W 4.7K	
R8011	ERJ3GEYJ472V	MGF CHIP 1/16W 4.7K	
R8012	ERJ3GEYJ472V	MGF CHIP 1/16W 4.7K	
R8013	ERJ3GEYJ472V	MGF CHIP 1/16W 4.7K	
R8014	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R8015	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R8016	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R8017	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R8018	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R8019	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R8020	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R8021	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R8022	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R8023	ERJ3GEYJ470V	MGF CHIP 1/16W 47	
R8024	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R8025	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R8026	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R8027	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8028	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8029	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8030	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8031	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8032	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8033	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8034	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8035	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8036	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8037	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8038	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8039	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8040	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8041	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8042	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8043	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8045	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8047	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8048	ERJ3GEYJ470V	MGF CHIP 1/16W 47	
R8049	ERJ1WYJ1R0U	MGF CHIP 1W 1	
R8050	ERJ3GEYJ820V	MGF CHIP 1/16W 82	
R8051	ERJ3GEYJ820V	MGF CHIP 1/16W 82	
R8052	ERJ3GEYJ820V	MGF CHIP 1/16W 82	
R8053	ERJ3GEYJ820V	MGF CHIP 1/16W 82	
R8054	ERJ3GEYJ820V	MGF CHIP 1/16W 82	
R8055	ERJ3GEYJ820V	MGF CHIP 1/16W 82	
R8056	ERJ3GEYJ820V	MGF CHIP 1/16W 82	
R8057	ERJ3GEYJ820V	MGF CHIP 1/16W 82	
R8058	ERJ3GEYJ470V	MGF CHIP 1/16W 47	
R8059	ERJ3GEYJ470V	MGF CHIP 1/16W 47	
R8060	ERJ3GEYJ470V	MGF CHIP 1/16W 47	
R8061	ERJ3GEYJ103V	MGF CHIP 1/16W 10K	
R8062	ERJ3GEYJ470V	MGF CHIP 1/16W 47	
R8063	ERJ3GEYJ470V	MGF CHIP 1/16W 47	
R8064	ERJ3GEYJ472V	MGF CHIP 1/16W 4.7K	

Ref. No.	Part No.	Part Name & Description	Remarks
R8065	ERJ3GEYJ472V	MGF CHIP 1/16W 4.7K	
R8066	ERJ3GEYJ103V	MGF CHIP 1/16W 10K	
R8067	ERJ3GEYJ470V	MGF CHIP 1/16W 47	
R8068	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8069	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8074	ERJ3GEYJ470V	MGF CHIP 1/16W 47	
R8076	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R8077	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R8082	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8083	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8084	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8085	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8086	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8087	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8088	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8089	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8090	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8091	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8092	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8093	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8094	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8095	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8096	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8097	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8098	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8099	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8101	ERJ3GEYJ100V	MGF CHIP 1/16W 10	
R8102	ERJ3GEYJ100V	MGF CHIP 1/16W 10	
R8103	ERJ3GEYJ100V	MGF CHIP 1/16W 10	
R8104	ERJ3GEYJ100V	MGF CHIP 1/16W 10	
R8105	ERJ3GEYJ100V	MGF CHIP 1/16W 10	
R8106	ERJ3GEYJ100V	MGF CHIP 1/16W 10	
R8107	ERJ3GEYJ100V	MGF CHIP 1/16W 10	
R8108	ERJ3GEYJ100V	MGF CHIP 1/16W 10	
R8109	ERJ3GEYJ100V	MGF CHIP 1/16W 10	
R8110	ERJ3GEYJ100V	MGF CHIP 1/16W 10	
R8111	ERJ3GEYJ100V	MGF CHIP 1/16W 10	
R8113	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8115	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8116	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8117	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8118	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8119	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R8120	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R8123	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R8124	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R8125	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R8137	ERJ3GEYJ100V	MGF CHIP 1/16W 10	
R8143	ERJ3GEYJ100V	MGF CHIP 1/16W 10	
R8144	ERJ3GEYJ100V	MGF CHIP 1/16W 10	
R8145	ERJ3GEYJ100V	MGF CHIP 1/16W 10	
R8146	ERJ3GEYJ100V	MGF CHIP 1/16W 10	
R8147	ERJ3GEYJ100V	MGF CHIP 1/16W 10	
R8148	ERJ3GEYJ100V	MGF CHIP 1/16W 10	

Ref. No.	Part No.	Part Name & Description	Remarks
R8149	ERJ3GEYJ100V	MGF CHIP 1/16W 10	
R8150	ERJ3GEYJ100V	MGF CHIP 1/16W 10	
R8151	ERJ3GEYJ100V	MGF CHIP 1/16W 10	
R8152	ERJ3GEYJ100V	MGF CHIP 1/16W 10	
R8153	ERJ3GEYJ100V	MGF CHIP 1/16W 10	
R8154	ERJ3GEYJ100V	MGF CHIP 1/16W 10	
R8155	ERJ3GEYJ100V	MGF CHIP 1/16W 10	
R8156	ERJ3GEYJ100V	MGF CHIP 1/16W 10	
R8157	ERJ3GEYJ100V	MGF CHIP 1/16W 10	
R8158	ERJ3GEYJ100V	MGF CHIP 1/16W 10	
R8203	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R8204	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R8205	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R8206	ERJ3GEYJ104V	MGF CHIP 1/16W 100K	
R8207	ERJ3GEYJ104V	MGF CHIP 1/16W 100K	
R8208	ERJ3GEYJ152V	MGF CHIP 1/16W 1.5K	
R8215	ERJ3GEYJ101V	MGF CHIP 1/16W 100	
R8216	ERJ3GEYJ101V	MGF CHIP 1/16W 100	
R8217	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R8218	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R8220	ERJ3GEYJ151V	MGF CHIP 1/16W 150	
R8221	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R8222	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R8223	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R8224	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R8225	ERJ3GEYJ473V	MGF CHIP 1/16W 47K	
R8230	ERJ3GEYJ302V	MGF CHIP 1/16W 3K	
R8231	ERJ3GEYJ151V	MGF CHIP 1/16W 150	
R8232	ERJ3GEYJ302V	MGF CHIP 1/16W 3K	
R8233	ERJ3GEYJ151V	MGF CHIP 1/16W 150	
R8234	ERJ3GEYJ302V	MGF CHIP 1/16W 3K	
R8238	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R8239	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R8240	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R8241	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R8292	ERJ8GEYJ1R0V	MGF CHIP 1/8W 1	
R8293	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8294	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8299	EVM3YSX50B23	VARIABLE 2K	
R8300	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8301	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8302	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8304	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R8309	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8310	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8311	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8312	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8313	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8314	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8315	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8316	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8317	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8318	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8319	ERJ3GEYJ330V	MGF CHIP 1/16W 33	

Ref. No.	Part No.	Part Name & Description	Remarks
R8320	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8321	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8322	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8323	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8324	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8326	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8327	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8328	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8329	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8330	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8331	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8332	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8333	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8334	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8335	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8336	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8337	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8338	ERJ3GEYJ621V	MGF CHIP 1/16W 620	
R8339	ERJ3GEYJ333V	MGF CHIP 1/16W 33K	
R8340	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8341	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8342	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8343	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8344	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8345	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8346	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8347	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8348	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8349	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8350	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8351	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8352	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8353	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8354	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8355	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8356	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8357	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8358	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8359	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8360	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8361	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8362	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8363	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8364	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8365	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8366	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8367	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8368	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8369	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8370	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8371	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8372	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8373	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8374	ERJ3GEYJ220V	MGF CHIP 1/16W 22	

Ref. No.	Part No.	Part Name & Description	Remarks
R8375	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8376	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8377	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8378	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8379	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8380	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8381	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8382	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8383	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8384	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8385	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8386	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8387	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8388	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8389	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8390	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8391	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8392	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8393	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8394	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8395	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8396	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8397	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8398	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R8403	ERJ3GEYJ223V	MGF CHIP 1/16W 22K	
R8404	ERJ3GEYJ223V	MGF CHIP 1/16W 22K	
R8405	ERJ3GEYJ223V	MGF CHIP 1/16W 22K	
R8406	ERJ3GEYJ223V	MGF CHIP 1/16W 22K	
R8407	ERJ3GEYJ822V	MGF CHIP 1/16W 8.2K	
R8408	ERJ3GEYJ822V	MGF CHIP 1/16W 8.2K	
R8409	ERJ3GEYJ622V	MGF CHIP 1/16W 6.2K	
R8410	ERJ3GEYJ622V	MGF CHIP 1/16W 6.2K	
R8411	ERJ3EKF1502V	MGF CHIP 1/16W 15K	
R8412	ERJ3EKF1502V	MGF CHIP 1/16W 15K	
R8413	ERJ3GEYJ471V	MGF CHIP 1/16W 470	
R8414	ERJ3GEYJ471V	MGF CHIP 1/16W 470	
R8427	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8429	ERJ3GEYJ101V	MGF CHIP 1/16W 100	
R8430	ERJ3GEYJ101V	MGF CHIP 1/16W 100	
R8431	ERJ3GEYJ473V	MGF CHIP 1/16W 47K	
R8432	ERJ3GEYJ473V	MGF CHIP 1/16W 47K	
R8433	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8434	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8435	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8447	ERJ3GEYJ330V	MGF CHIP 1/16W 33	
R8500	ERJ3GEYJ473V	MGF CHIP 1/16W 47K	
R8501	ERJ3GEYJ331V	MGF CHIP 1/16W 330	
R8502	ERJ3GEYJ331V	MGF CHIP 1/16W 330	
R8503	ERJ3GEYJ331V	MGF CHIP 1/16W 330	
R8504	ERJ3GEYJ331V	MGF CHIP 1/16W 330	
R8505	ERJ3GEYJ151V	MGF CHIP 1/16W 150	
R8506	ERJ3GEYJ473V	MGF CHIP 1/16W 47K	
R8507	ERJ3GEYJ473V	MGF CHIP 1/16W 47K	
R8508	ERJ3GEYJ473V	MGF CHIP 1/16W 47K	

Ref. No.	Part No.	Part Name & Description	Remarks
R8509	ERJ3GEYJ473V	MGF CHIP 1/16W 47K	
R8510	ERJ3GEYJ103V	MGF CHIP 1/16W 10K	
R8511	ERJ3GEYJ103V	MGF CHIP 1/16W 10K	
R8512	ERJ3GEYJ103V	MGF CHIP 1/16W 10K	
R8513	ERJ3GEYJ103V	MGF CHIP 1/16W 10K	
R8514	ERJ3GEYJ103V	MGF CHIP 1/16W 10K	

CAPACITORS

Ref. No.	Part No.	Part Name & Description	Remarks
C8000	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8001	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8002	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8003	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8004	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8005	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8006	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8007	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8008	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8009	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8010	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8011	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8012	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8013	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8014	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8015	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8016	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8017	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8018	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8019	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8020	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8021	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8022	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8023	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8025	ECJ2VC1H151J	C CHIP 50V 150PF	
C8026	ECEV1CS100S	ELECTROLYTIC CHIP 16V 10UF	
C8027	ECEV0JA101S	ELECTROLYTIC CHIP 6.3V 100UF	
C8030	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8031	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8034	ECEV0JA331	ELECTROLYTIC CHIP 6.3V 330UF	
C8041	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8042	ECEV1AA470WR	ELECTROLYTIC CHIP 10V 47UF	
C8043	ECEV1AA101SP	ELECTROLYTIC CHIP 10V 1UF00UF	
C8044	ECEV1AA101SP	ELECTROLYTIC CHIP 10V 1UF00UF	
C8045	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8047	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8048	ECEV1CS100S	ELECTROLYTIC CHIP 16V 10UF	
C8049	ECEV1AA470WR	ELECTROLYTIC CHIP 10V 47UF	
C8050	ECEV0JA101S	ELECTROLYTIC CHIP 6.3V 100UF	
C8054	ECEV1AA101SP	ELECTROLYTIC CHIP 10V 1UF00UF	
C8056	ECEV0JA470S	ELECTROLYTIC CHIP 6.3V 47UF	
C8058	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8102	ECUE1C104ZFV	C CHIP 16V 0.1UF	
C8106	ECJ1VF1C104Z	C CHIP 16V 0.1UF	

Ref. No.	Part No.	Part Name & Description	Remarks
C8107	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8109	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8110	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8111	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8112	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8201	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8202	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8203	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8206	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8207	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8208	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8209	ECEV1CS100S	ELECTROLYTIC CHIP 16V 10UF	
C8210	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8211	ECEV0JA101S	ELECTROLYTIC CHIP 6.3V 100UF	
C8215	ECEV0JA470S	ELECTROLYTIC CHIP 6.3V 47UF	
C8219	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8220	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8221	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8222	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8223	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8224	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8225	ECEV1CS100S	ELECTROLYTIC CHIP 16V 10UF	
C8226	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8227	ECEV1AA470WR	ELECTROLYTIC CHIP 10V 47UF	
C8228	ECJ1VC1H390J	C CHIP 50V 39PF	
C8229	ECJ1VC1H390J	C CHIP 50V 39PF	
C8230	ECJ1VC1H220J	C CHIP 50V 22PF	
C8231	ECJ1VC1H390J	C CHIP 50V 39PF	
C8232	ECJ1VC1H390J	C CHIP 50V 39PF	
C8233	ECJ1VC1H220J	C CHIP 50V 22PF	
C8234	ECJ1VC1H390J	C CHIP 50V 39PF	
C8235	ECJ1VC1H390J	C CHIP 50V 39PF	
C8236	ECJ1VC1H220J	C CHIP 50V 22PF	
C8238	ECJ1VC1H220J	C CHIP 50V 22PF	
C8239	ECJ1VC1H220J	C CHIP 50V 22PF	
C8240	ECJ1VC1H220J	C CHIP 50V 22PF	
C8241	ECEV0JA470S	ELECTROLYTIC CHIP 6.3V 47UF	
C8243	ECUE1H103ZFV	C CHIP 50V 0.01UF	
C8244	ECUE1H103ZFV	C CHIP 50V 0.01UF	
C8245	ECUE1H103ZFV	C CHIP 50V 0.01UF	
C8246	ECUE1H103ZFV	C CHIP 50V 0.01UF	
C8247	ECUE1H103ZFV	C CHIP 50V 0.01UF	
C8248	ECUE1H103ZFV	C CHIP 50V 0.01UF	
C8249	ECUE1H103ZFV	C CHIP 50V 0.01UF	
C8250	ECUE1H103ZFV	C CHIP 50V 0.01UF	
C8251	ECUE1H103ZFV	C CHIP 50V 0.01UF	
C8252	ECUE1H103ZFV	C CHIP 50V 0.01UF	
C8253	ECUE1H103ZFV	C CHIP 50V 0.01UF	
C8301	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8302	ECJ1VF1A105Z	C CHIP 10V 1UF	
C8303	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8403	ECEV1CS100S	ELECTROLYTIC CHIP 16V 10UF	
C8404	ECEV1CA101	ELECTROLYTIC CHIP 16V 100UF	
C8405	ECEV1CS100S	ELECTROLYTIC CHIP 16V 10UF	

Ref. No.	Part No.	Part Name & Description	Remarks
C8406	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8407	ECEV1EA330SP	ELECTROLYTIC CHIP 25V 33UF	
C8408	ECEV1EA330SP	ELECTROLYTIC CHIP 25V 33UF	
C8409	ECJ1VC1H101J	C CHIP 50V 100PF	
C8410	ECJ1VC1H101J	C CHIP 50V 100PF	
C8411	ECJ1VB1H102K	C CHIP 50V 1000PF	
C8412	ECJ1VB1H102K	C CHIP 50V 1000PF	
C8414	ECJ1VB1H472K	C CHIP 50V 4700PF	
C8416	ECJ1VB1H472K	C CHIP 50V 4700PF	
C8421	ECJ1VC1H330J	C CHIP 50V 33PF	
C8425	ECEV1CA100S	ELECTROLYTIC CHIP 16V 10UF	
C8426	ECEV1CA100S	ELECTROLYTIC CHIP 16V 10UF	
C8429	ECEV1CS100S	ELECTROLYTIC CHIP 16V 10UF	
C8430	ECEV1CS100S	ELECTROLYTIC CHIP 16V 10UF	
C8431	ECEV1CS100S	ELECTROLYTIC CHIP 16V 10UF	
C8432	ECEV1CS100S	ELECTROLYTIC CHIP 16V 10UF	
C8438	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8439	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8440	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8442	ECEV1AA470WR	ELECTROLYTIC CHIP 10V 47UF	
C8443	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8507	ECJ1VC1H330J	C CHIP 50V 33PF	
C8508	ECJ1VC1H330J	C CHIP 50V 33PF	
C8509	ECJ1VC1H330J	C CHIP 50V 33PF	
C8510	ECJ1VC1H330J	C CHIP 50V 33PF	
C8511	ECJ1VC1H330J	C CHIP 50V 33PF	
C8513	ECJ1VF1C104Z	C CHIP 16V 0.1UF	
C8514	ECJ1VF1C104Z	C CHIP 16V 0.1UF	

FILTERS

Ref. No.	Part No.	Part Name & Description	Remarks
FL8000	LSLF0014	EMI FILTER CHIP	
FL8001	LSLF0014	EMI FILTER CHIP	
FL8002	LSLF0014	EMI FILTER CHIP	
FL8003	LSLF0014	EMI FILTER CHIP	
FL8200	LSLF0014	EMI FILTER CHIP	

COILS

Ref. No.	Part No.	Part Name & Description	Remarks
L8000	J0JHC0000027	EMI FILTER CHIP	
L8002	J0JBC0000010	EMI FILTER CHIP	
L8003	J0JBC0000010	EMI FILTER CHIP	
L8004	J0JBC0000010	EMI FILTER CHIP	
L8005	J0JBC0000010	EMI FILTER CHIP	
L8006	J0JBC0000010	EMI FILTER CHIP	
L8007	J0JBC0000010	EMI FILTER CHIP	
L8009	LSLF0008	LOW PASS FILTER	
L8010	LSLF0008	LOW PASS FILTER	
L8011	J0JGC0000017	EMI FILTER CHIP	
L8012	J0JGC0000017	EMI FILTER CHIP	
L8013	J0JGC0000017	EMI FILTER CHIP	
L8017	LSLF0006	LOW PASS FILTER	
L8018	J0JBC0000010	EMI FILTER CHIP	
L8020	J0JBC0000010	EMI FILTER CHIP	
L8021	J0JCC0000117	EMI FILTER CHIP	
L8022	J0JHC0000027	EMI FILTER CHIP	
L8023	LSLF0015	EMI FILTER CHIP	
L8102	LSLF0015	EMI FILTER CHIP	
L8200	LSLF0015	EMI FILTER CHIP	
L8204	J0JBC0000010	EMI FILTER CHIP	
L8205	J0JBC0000010	EMI FILTER CHIP	
L8206	J0JBC0000010	EMI FILTER CHIP	
L8207	J0JHC0000027	EMI FILTER CHIP	
L8210	LSLF0006	LOW PASS FILTER	
L8212	G1C270MA0021	INDUCTOR CHIP	
L8213	G1C330MA0021	INDUCTOR CHIP	
L8214	G1C270MA0021	INDUCTOR CHIP	
L8215	G1C270MA0021	INDUCTOR CHIP	
L8216	G1C330MA0021	INDUCTOR CHIP	
L8217	G1C270MA0021	INDUCTOR CHIP	
L8218	G1C270MA0021	INDUCTOR CHIP	
L8219	G1C330MA0021	INDUCTOR CHIP	
L8220	G1C270MA0021	INDUCTOR CHIP	
L8222	LSLF0015	EMI FILTER CHIP	
L8223	LSLF0015	EMI FILTER CHIP	
L8301	LSLF0006	LOW PASS FILTER	
L8400	J0JBC0000010	EMI FILTER CHIP	
L8401	J0JBC0000010	EMI FILTER CHIP	
L8402	LSLF0032	EMI FILTER CHIP	
L8410	J0JBC0000010	EMI FILTER CHIP	
L8411	J0JBC0000010	EMI FILTER CHIP	
L8416	LSLF0006	LOW PASS FILTER	
L8501	LSLF0006	LOW PASS FILTER	
L8506	G1C1R0K00005	INDUCTOR CHIP	
L8507	G1C1R0K00005	INDUCTOR CHIP	
L8508	G1C1R0K00005	INDUCTOR CHIP	
L8511	LSLF0015	EMI FILTER CHIP	
L8512	G1C1R0K00005	INDUCTOR CHIP	
L8513	G1C1R0K00005	INDUCTOR CHIP	

CRYSTAL OSCILLATOR

Ref. No.	Part No.	Part Name & Description	Remarks
X8501	VSXS0240	CRYSTAL OSCILLATOR	

PIN HEADERS

Ref. No.	Part No.	Part Name & Description	Remarks
P8001	VJPS0770	CONNECTOR 11P	
P8002	VJPS0771	CONNECTOR PLUG 13P	
P8003	VJPS0771	CONNECTOR PLUG 13P	
P8004	LSJS0040	CONNECTOR 40P	

MISCELLANEOUS

Ref. No.	Part No.	Part Name & Description	Remarks
737	VEKS5836	CONNECTOR CABLE W/PLUG,0V	
791	VEKS5773	CONNECTOR CABLE W/PLUG,DC 5V	

13. SCHEMATIC DIAGRAMS FOR PRINTING WITH LETTER SIZE

AUDIO AMP C.B.A. VEPS4039A

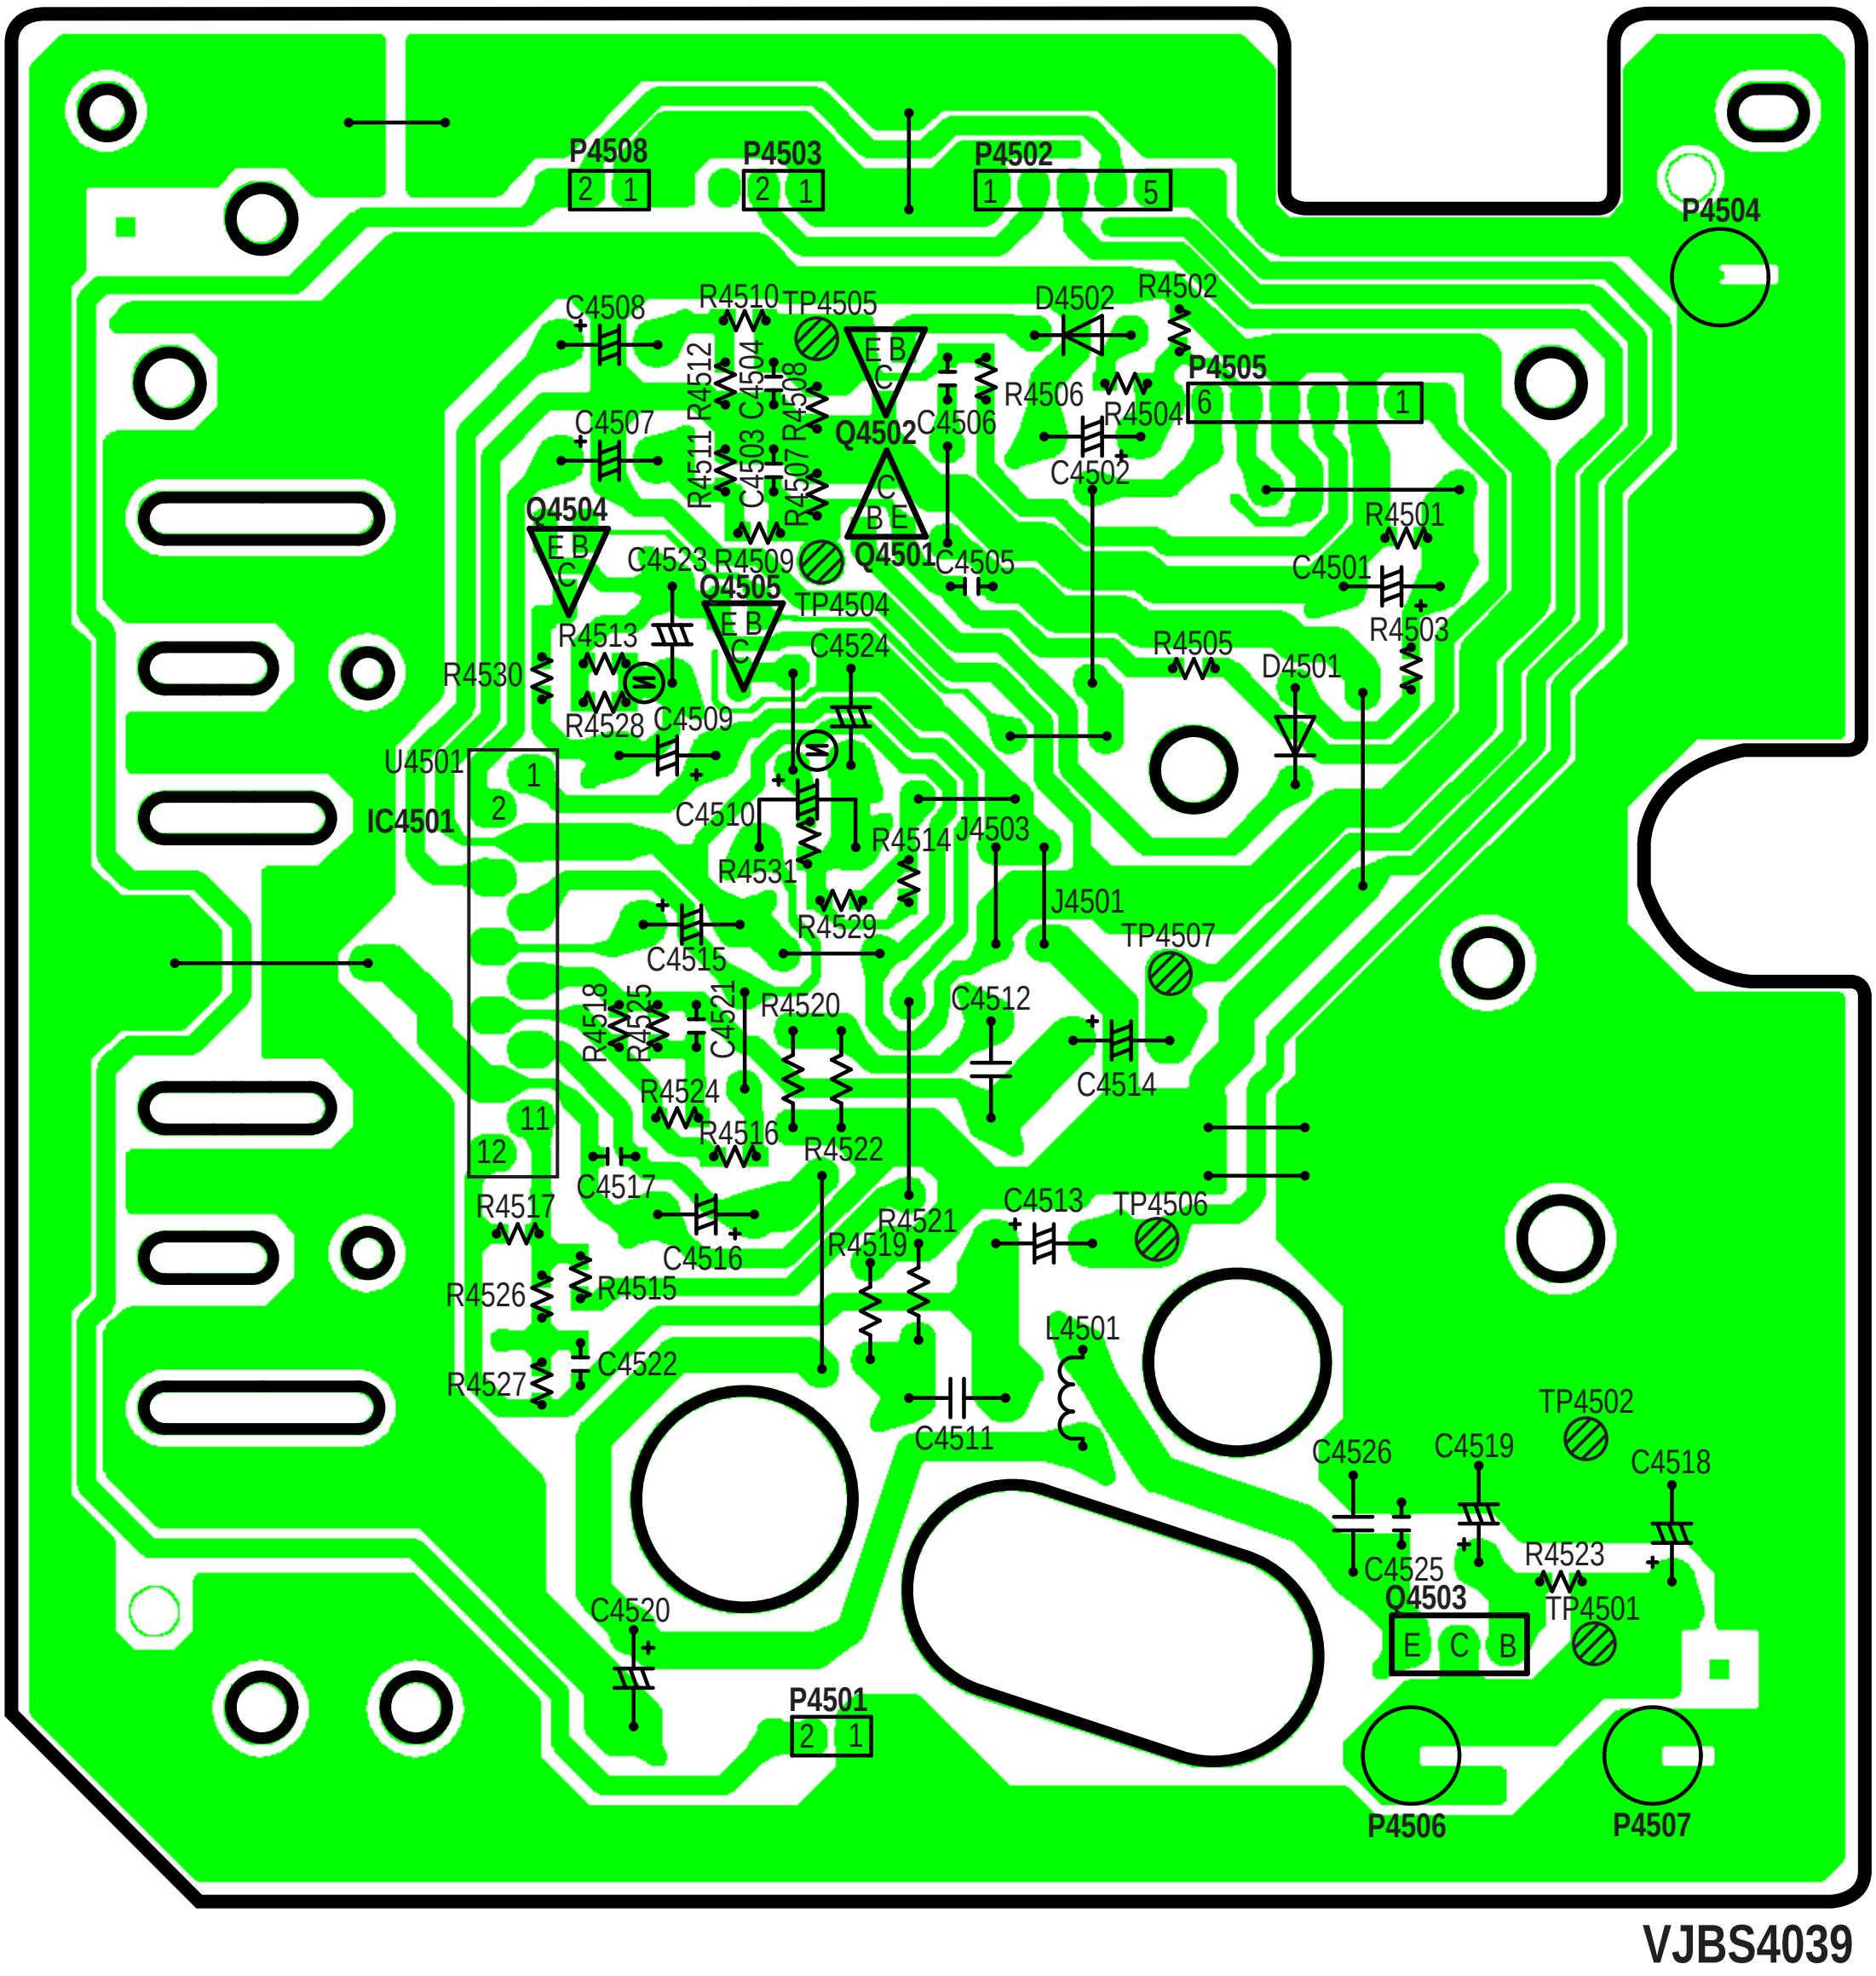

P4508
P4503
P4502
P4504
C4508
R4510
TP4505
D4502
R4502
R4512
C4504
R4508
Q4502
R4506
P4505
R4504
C4506
C4507
R4511
C4503
R4507
C4502
Q4504
R4501
C4523
R4509
Q4501
C4505
C4501
Q4505
TP4504
R4513
C4524
R4505
R4503
D4501
R4530
R4528
C4509
U4501
IC4501
C4510
R4514
J4503
R4531
J4501
R4529
TP4507
C4515
R4518
R4525
C4521
R4520
C4512
C4514
R4524
R4516
R4522
C4517
R4517
C4513
TP4506
R4521
C4516
R4519
R4526
R4515
L4501
R4527
C4522
C4511
TP4502
C4526
C4519
C4518
R4523
C4525
Q4503
TP4501
C4520
P4501
P4506
P4507
VJBS4039

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE:
CIRCUIT BOARD LAYOUT INCLUDES COMPONENTS WHICH ARE NOT USED.
PLEASE REFER TO THE SCHEMATIC DIAGRAM AND PARTS LIST FOR PROPER PARTS CONTENT.

OPERATION C.B.A. LSEP2022A

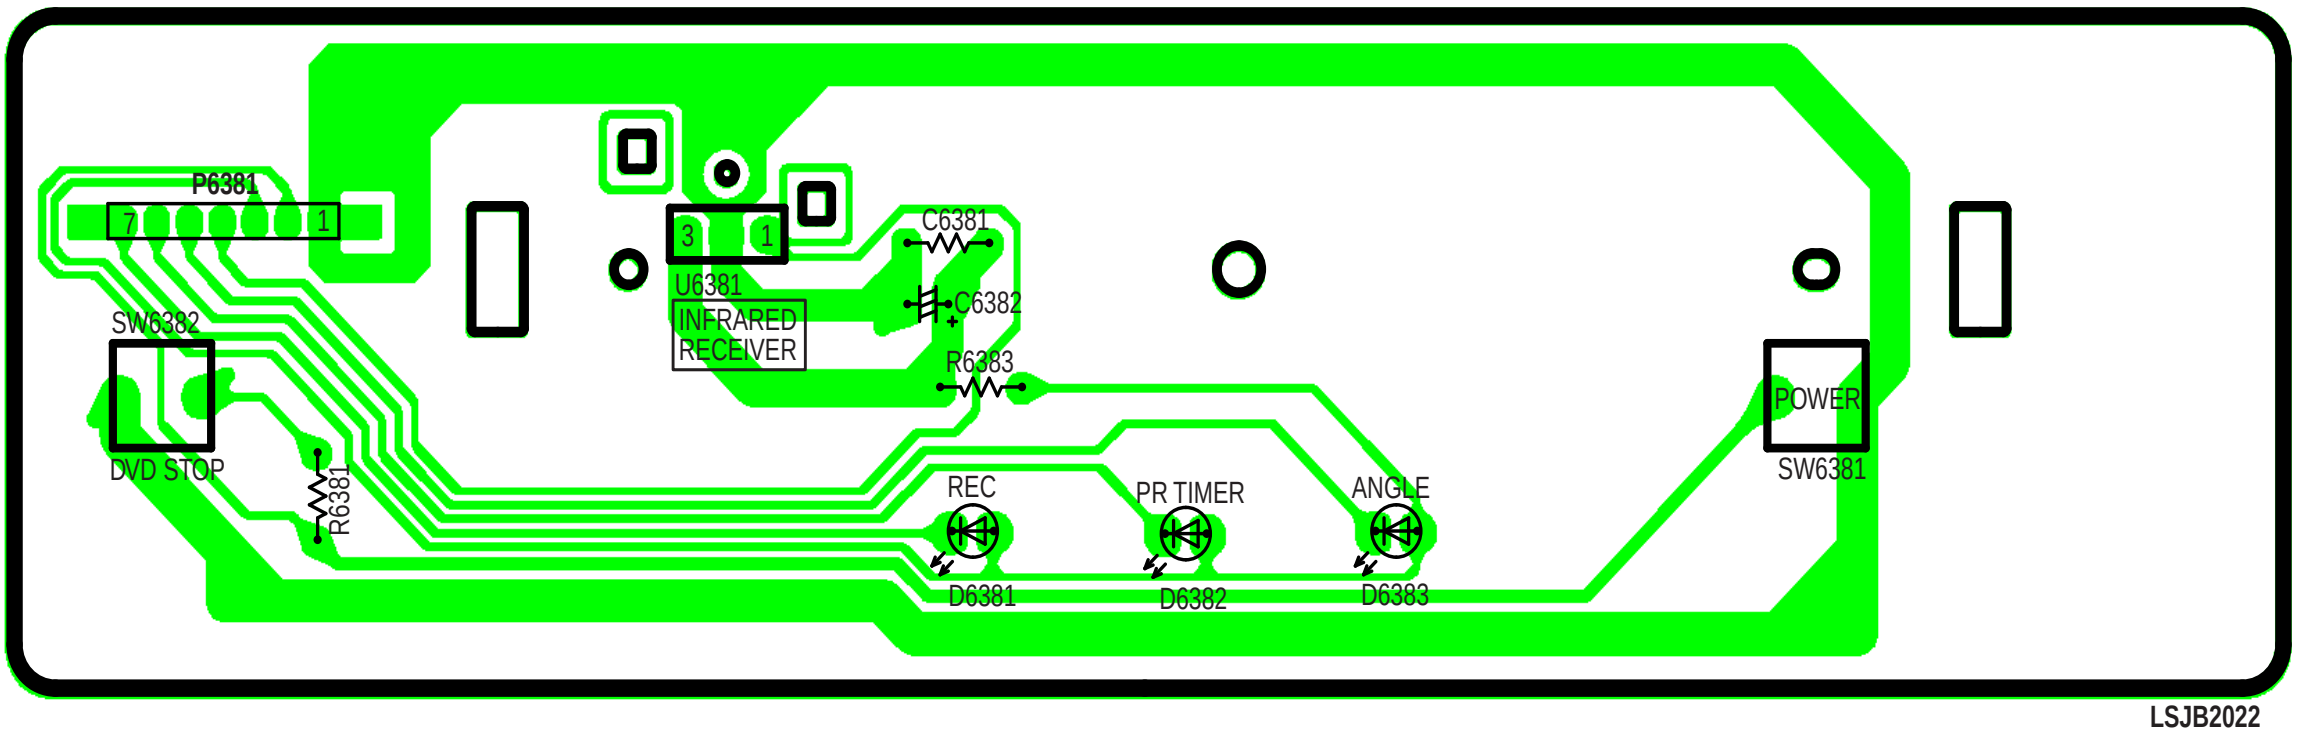
P6381
7
1
SW6382
DVD STOP
R6381
U6381
INFRARED RECEIVER
3
1
C6381
C6382
R6383
REC
D6381
PR TIMER
D6382
ANGLE
D6383
POWER
SW6381
LSJB2022

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE:
CIRCUIT BOARD LAYOUT INCLUDES COMPONENTS WHICH ARE NOT USED.
PLEASE REFER TO THE SCHEMATIC DIAGRAM AND PARTS LIST FOR PROPER PARTS CONTENT.

AUDIO/VIDEO JACK C.B.A.
LSEP2023A

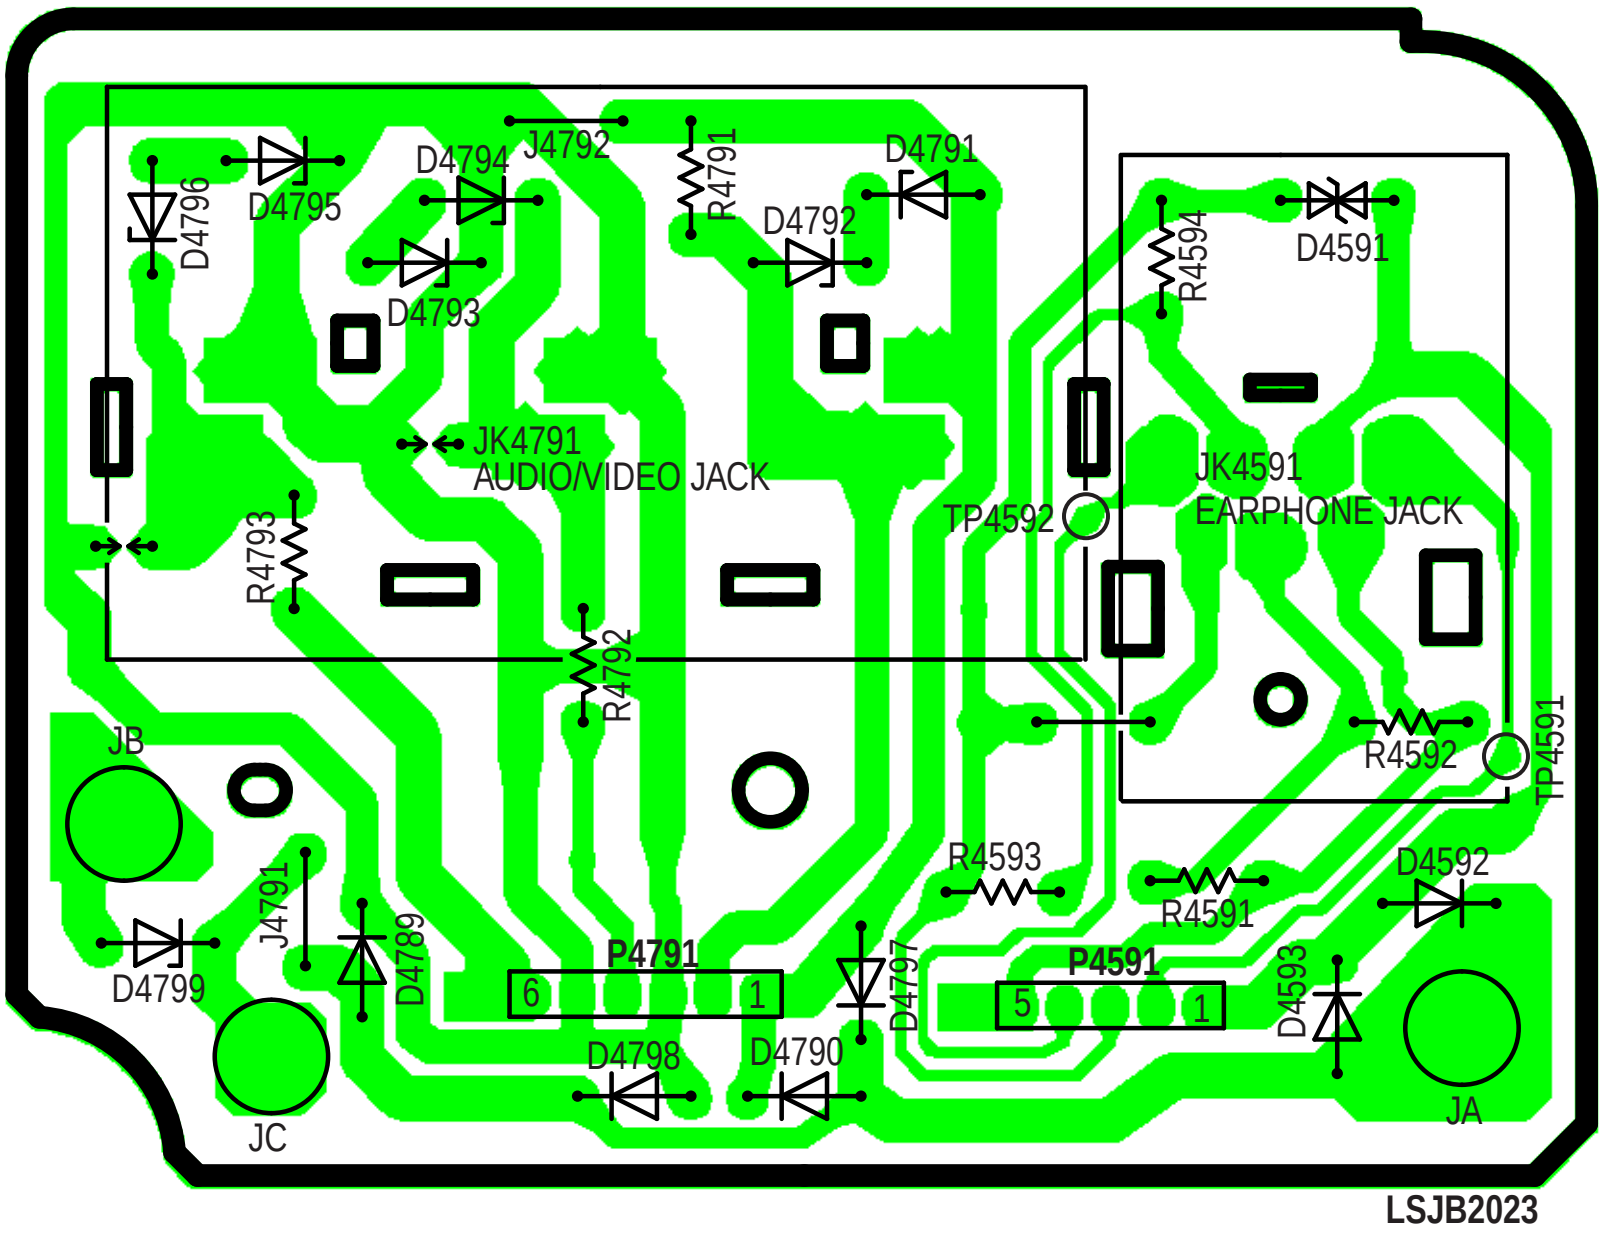
D4796
D4795
D4794
J4792
R4791
D4791
D4792
D4793
JK4791
AUDIO/VIDEO JACK
R4793
R4792
TP4592
R4594
D4591
JK4591
EARPHONE JACK
R4592
TP4591
JB
J4791
D4789
D4799
JC
P4791
6
1
D4798
D4790
D4797
R4593
R4591
D4592
P4591
5
1
D4593
JA
LSJB2023

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE:
CIRCUIT BOARD LAYOUT INCLUDES COMPONENTS WHICH ARE NOT USED.
PLEASE REFER TO THE SCHEMATIC DIAGRAM AND PARTS LIST FOR PROPER PARTS CONTENT.

Omnivision VHS

Panasonic®

TV/DVD/VCR Combination

Operating Instructions

Model No. PV-DM2792

- Initial Setup and Connection Procedures are on pages 14 to 17.

DOLBY DIGITAL dts® DIGITAL OUT DVD VIDEO™ COMPACT disc DIGITAL VIDEO COMPACT disc DIGITAL AUDIO READY TO PLAY!

As an ENERGY STAR® Partner, Matsushita Electric Corporation of America has determined that this product or product model meets the ENERGY STAR® guidelines for energy efficiency.

Please read these instructions carefully before attempting to connect, operate, or adjust this product. Please save this manual.
Spanish Quick Use Guide is included.
(Guía para rápida consulta en español está incluida.)

LSQT0520A

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Initial Setup
Basic Operation
TV Operation
Timer Operation
Advanced Operation
For Your Information

Important Safeguards and Precautions

READ AND RETAIN ALL SAFETY AND OPERATING INSTRUCTIONS. HEED ALL WARNINGS IN THE MANUAL AND ON UNIT

INSTALLATION

1 POWER SOURCE CAUTION

Operate only from power source indicated on unit or in this manual. If uncertain, have your Electric Utility Service Company or Video Products Dealer verify your home power source.

2 POWER CORD PLUG

For safety, this unit has a polarized type plug (one wide blade), or a three-wire grounding type plug. Always hold the plug firmly and make sure your hands are dry when plugging in or unplugging the AC power cord. Regularly remove dust, dirt, etc. on the plug.

POLARIZED PLUG CAUTION:

The plug fits into outlet one way. If it cannot be fully inserted, try reversing it. If it still will not fit, have an electrician install the proper wall outlet. Do not tamper with the plug.

GROUNDING PLUG CAUTION:

The plug requires a three-hole grounding outlet. If necessary, have an electrician install the proper outlet. Do not tamper with the plug.

3 POWER CORD

To avoid unit malfunction, and to protect against electrical shock, fire or personal injury:

- Keep power cord away from heating appliances and walking traffic. Do not rest heavy objects on, or roll such objects over the power cord.
- Do not tamper with the cord in any way.
- An extension cord should have the same type plug (polarized or grounding) and must be securely connected.
- Overloaded wall outlets or extension cords is a fire hazard.
- Frayed cords, damaged plugs, and damaged or cracked wire insulation are hazardous and should be replaced by a qualified electrician.

4 DO NOT BLOCK VENTILATION HOLES

Ventilation openings in the cabinet release heat generated during operation. If blocked, heat build-up may result in a fire hazard or heat damage to cassettes or discs.

For your protection:

a. Never cover ventilation slots while unit is ON, or operate unit while placed on a bed, sofa, rug, or other soft surface.
b. Avoid built-in installation, such as a book case or rack, unless properly ventilated.

5 AVOID EXTREMELY HOT LOCATIONS OR SUDDEN TEMPERATURE CHANGES

Do not place unit over or near a heater or radiator, in direct sunlight, inside closed vehicles, in high temperature [over 95˚F (35˚C)], or in over 75% humidity. If unit is suddenly moved from a cold place to a warm one, moisture may condense in unit and on the tape causing damage. Never subject unit to vibration, impact, or place it so that the surface is tilted as internal parts may be seriously damaged.

6 TO AVOID PERSONAL INJURY

- Never place unit on support or stand that is not firm, level, and adequately strong. The unit could fall causing serious injury to a child or adult and damage to the unit.
- Move any appliance and cart combination with care. Quick stops, excessive force, and uneven surfaces may cause objects to overturn.
- Carefully follow all operating instructions.



OUTDOOR ANTENNA INSTALLATION

1 SAFE ANTENNA AND CABLE CONNECTION

An outside antenna or cable system must be properly grounded to provide some protection against built up static charges and voltage. Section 810 of the National Electrical Code, ANSI/NFPA 70 (in Canada, part 1 of the Canadian Electrical Code) provides information regarding proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

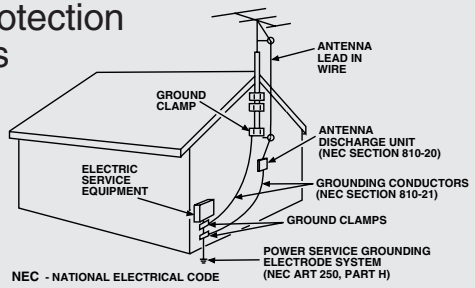
ANTENNA LEAD IN WIRE
GROUND CLAMP
ANTENNA DISCHARGE UNIT (NEC SECTION 810-20)
ELECTRIC SERVICE EQUIPMENT
GROUNDING CONDUCTORS (NEC SECTION 810-21)
GROUND CLAMPS
POWER SERVICE GROUNDING ELECTRODE SYSTEM (NEC ART 250, PART H)
NEC - NATIONAL ELECTRICAL CODE

2 KEEP ANTENNA CLEAR OF HIGH VOLTAGE POWER LINES OR CIRCUITS

Locate an outside antenna system well away from power lines and electric light or power circuits so it will never touch these power sources should it ever fall. When installing antenna, absolutely never touch power lines, circuits or other power sources as this could be fatal.

USING THE UNIT

Before unit is brought out of storage or moved to a new location, refer again to the INSTALLATION section of these safeguards.

1 KEEP UNIT WELL AWAY FROM WATER OR MOISTURE, such as vases, sinks, tubs, etc.

2 IF EXPOSED TO RAIN, MOISTURE, OR STRONG IMPACT, unplug unit and have it inspected by a qualified service technician before use.

3 ELECTRICAL STORMS

During a lightning storm, or before leaving unit unused for extended periods of time, disconnect all equipment from the power source as well as the antenna and cable system.

4 WHEN UNIT IS PLUGGED IN

- DO NOT OPERATE IF:
  - liquid has spilled into unit.
  - unit was dropped or otherwise damaged.
  - unit emits smoke, malodors, or noises.

  Immediately unplug unit, and have it inspected by a service technician to avoid potential fire and shock hazards.
- Never drop or push any object through openings in unit. Touching internal parts may cause electric shock or fire hazard. Do not put any foreign object on the tray.
- Keep magnetic objects, such as speakers, away from unit to avoid electrical interference.

5 USING ACCESSORIES

Use only accessories recommended by the manufacturer to avoid risk of fire, shock, or other hazards.

6 CLEANING UNIT

Unplug unit. Use a clean, dry, chemically untreated cloth to gently remove dust or debris. DO NOT USE cleaning fluids, aerosols, or forced air that could over-spray, or seep into unit and cause electrical shock. Any substance, such as wax, adhesive tape, etc. may mar the cabinet surface. Exposure to greasy, humid, or dusty areas may adversely affect internal parts.

SERVICE

1 DO NOT SERVICE PRODUCT YOURSELF

If, after carefully following detailed operating instructions, the unit does not operate properly, do not attempt to open or remove covers, or make any adjustments not described in the manual. Unplug unit and contact a qualified service technician.

2 REPLACEMENT OF PARTS

Make sure the service technician uses only parts specified by the manufacturer, or have equal safety characteristics as original parts. The use of unauthorized substitutes may result in fire, electric shock, or other hazards.

3 SAFETY CHECK AFTER SERVICING

After unit is serviced or repaired, request that a thorough safety check be done as described in the manufacturer’s service literature to insure video unit is in safe operating condition.

Safety Precautions/Mesures de sécurité

Warning : **To prevent fire or shock hazard, do not expose this equipment to rain or moisture.**

Caution : **To prevent electric shock, match wide blade of plug to wide slot, fully insert.**

Avertissement : **Afin de prévenir tout risque d'incendie ou de chocs électriques, ne pas exposer cet appareil à la pluie ou à une humidité excessive.**

Attention : **Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.**

FCC WARNING : Any unauthorized changes or modifications to this equipment would void the user's authority to operate.

CAUTION:
UNIT IS A CLASS I LASER PRODUCT.
HOWEVER THIS UNIT USES A VISIBLE LASER BEAM WHICH COULD CAUSE HAZARDOUS RADIATION EXPOSURE IF DIRECTED. BE SURE TO OPERATE THE UNIT CORRECTLY AS INSTRUCTED.

WHEN THIS UNIT IS PLUGGED TO THE WALL OUTLET, DO NOT PLACE YOUR EYES CLOSE TO THE OPENING OF THE DISC TRAY AND OTHER OPENINGS TO LOOK INTO THE INSIDE OF THIS UNIT.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

DO NOT OPEN COVERS AND DO NOT ATTEMPT TO REPAIR THE UNIT YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

CAUTION:
LASER RADIATION
WHEN OPEN. DO NOT
STARE INTO BEAM.

ATTENTION:
RAYONNEMENT LASER
EN CAS D'OUVERTURE.
NE PAS REGARDER
DANS LE FAISCEAU.

(Inside of product)

FCC NOTICE:
This equipment has been tested and found to comply with part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when operated in a residential environment. If this eqiupment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, use the equipment in another location and/or utilize an electrical outlet different from that used by the receiver. If necessary, consult the dealer or an experienced radio/TV technician for help. You may find the booklet, 'Something About Interference' available from FCC local regional offices helpful.

This product utilizes both a Cathode Ray Tube (CRT) and other components that contain lead. Disposal of these materials may be regulated in your community due to environmental considerations. For disposal or recycling information please contact your local authorities, or the Electronics Industries Alliance: <http://www.eiae.org.>

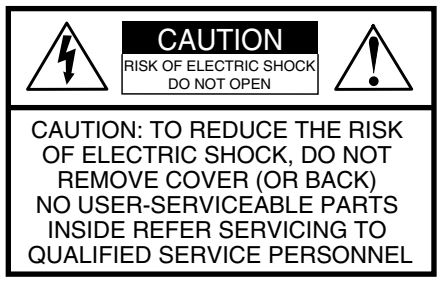

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK
OF ELECTRIC SHOCK, DO NOT
REMOVE COVER (OR BACK)
NO USER-SERVICEABLE PARTS
INSIDE REFER SERVICING TO
QUALIFIED SERVICE PERSONNEL



This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this unit.



This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

Region Management Information

Region Management Information: This unit is designed and manufactured to respond to the Region Management Information that is recorded on a DVD disc. If the Region number described on the DVD disc does not correspond to the Region number of this unit, this unit cannot play this disc.

The Region number for this unit is 1.

Before Using

Congratulations

on your purchase of one of the most sophisticated and reliable products on the market today. Used properly, it will bring you and your family years of enjoyment. Please fill in the information below. The serial number is on the tag located on the back of your unit.

Date of Purchase ______________
Dealer Purchased From ______________
Dealer Address ______________
Dealer Phone No. ______________
Model No. PV-DM2792
Serial No. ______________

Accessories


POWER
EJECT OPEN/CLOSE
LIGHT
TV VCR
DVD
CABLE
MUTE
CH
VOL
TRACKING
ADD/DLT
AUDIO
ANGLE
SUB TITLE
DISPLAY
TITLE
MENU
SET
ACTION
PROG
REW/SLOW
PLAY
FF/SLOW
STILL/PAUSE
STOP
ZOOM
SKIP
RETURN
REC
SEARCH
CM/ZERO
SPEED

☐ Remote Control
LSSQ0302

☐ Batteries
2 “AA”



To order accessories,
call toll free 1-800-332-5368.

Loading the Batteries

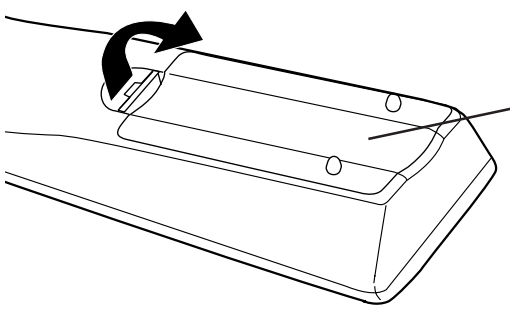

1) Open the cover.

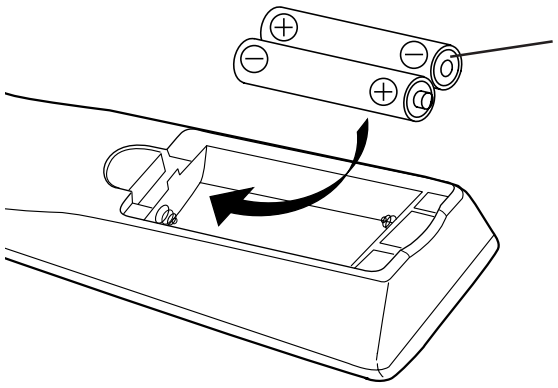

2) Insert batteries as marked.

3) Close the cover.

☐ Battery replacement caution

- Do not mix old and new batteries.
- Do not mix alkaline with manganese batteries.

Prevent Accidental Tape Erasure

Break off the tab to protect.

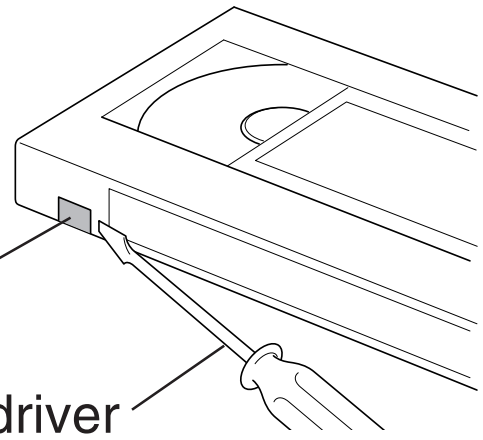
Record Tab
Screw driver

To record again.

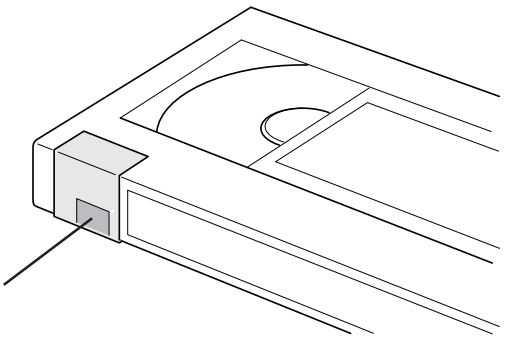
Cover the hole with cellophane tape.

Record/Playback Time

Only use tapes with the VHS mark in this unit.

Tape Speed Setting	Type of Video Cassette		
	T60	T120	T160
SP (Standard Play)	1 Hour	2 Hours	2 Hours 40 Minutes
LP (Long Play)	2 Hours	4 Hours	5 Hours 20 Minutes
SLP (Super Long Play)	3 Hours	6 Hours	8 Hours

Table of Contents

Initial Setup

TV / VCR

Important Safeguards and Precautions / Safety Precautions .... 2 - 3
Before Using 4
Information (Unit, Cassette, Disc) .... 6 - 7
Location of Controls .... 8 - 10
Connections .... 11 - 13
Initial Setup 14, 15
Reset Language, Channels, Clock, Time Zone Adjust 16, 17

Basic Operation

TV / VCR

Playback a Tape 18
Record On a Tape 18
Copy Your Tapes (Dubbing) 19

DVD

Basic DVD Operation 20, 21

TV Operation

TV / VCR

TV Operation 22
MTS Broadcast / TV Stereo System 23
Closed Caption System 24, 25
TV Timer Features 26
On-Screen Display (OSD) 27
FM Radio 28, 29

Timer Operation

TV / VCR

Timer Recording 30, 31

Advanced Operation

TV / VCR

Cable Box Universal Remote Control Feature 32, 33
Tape Operation .... 34 - 37
Special VCR Features 38, 39
V-Chip Control Feature .... 40 - 43
Audio Features 44, 45
Video / Audio Menu 46
Video / Audio Adjustment 47

DVD

Disc Operation .... 48 - 51
MP3 Playback Operation 52
DVD Operation using On-Screen Displays .... 53 - 55
DVD Lock Feature 56

For Your Information

TV / VCR

Before Requesting Service 60, 61
Warning and Instruction Displays 62
Spanish Quick Use Guide / Guía para rápida consulta .... 65 - 71
Index 72, 73
Limited Warranty 74
Customer Services Directory 75

DVD

Settings for DVD Operation .... 57 - 59
Language Code List 63

Information (Unit, Cassette, Disc)

Head Cleaning

Playing older or damaged tapes may eventually cause video heads to become clogged.

Head Clog Sensor

During playback this screen appears if clogging is detected. To remove screen, press PLAY on the remote or unit.

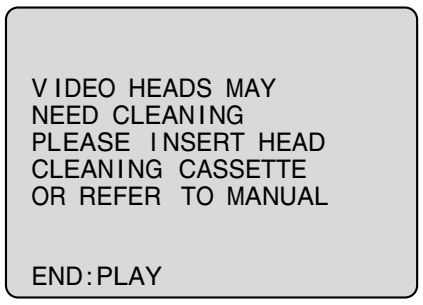

```
VIDEO HEADS MAY
NEED CLEANING
PLEASE INSERT HEAD
CLEANING CASSETTE
OR REFER TO MANUAL

END:PLAY
```

- **Use "dry" type head cleaning cassette only.** (Part No. NV-TCL30PT is recommended.)
- Follow cleaning tape directions carefully. Excessive use of head cleaning tape can shorten the video head life.
- If head clog symptoms persist, contact your nearest Factory Service Center or authorized Service Center. (See Page 64.)

DST (Daylight Saving Time)

Unit auto adjusts clock for DST (Daylight Saving Time.)

■ Spring (First Sunday in April)

DST : ON ➔ Sets clock ahead one hour.

■ Autumn (Last Sunday in October)

DST : ON ➔ Turns clock back one hour.

- If your area does not observe Daylight Saving Time, select DST : OFF (see "Clock" on pages 16 and 17).
- Keep these time changes in mind when programming the unit for timer recordings.

Features for a Quality Picture

Digital Auto Tracking

Continuously analyzes the signal and adjusts for optimum picture quality.

Manual Tracking Control (to reduce picture noise)

Use during Playback and Slow Motion mode to reduce picture noise. Press the 3 or 6 number key on the remote control or CH ▲▼ on the unit until the picture clears up. To return to Auto Tracking, press POWER off, then on again a few seconds later.

V-Lock Control

In Still mode, the 3 or 6 number key on the remote control or CH ▲▼ on the unit operate as a V-Lock control to reduce jitter.

PanaBlack™ Picture Tube

This unit uses a PanaBlack™ picture tube for better color reproduction and picture contrast.

Specifications

Display	
Picture Tube:	27 inch measured diagonal 100° deflection Picture Tube
VCR	
Video Recording System:	4 rotary heads helical scanning system
Audio Track:	1 track (Normal) 2 channel (Hi-Fi Audio Sound)
Tuner	
Broadcast Channels:	VHF 2 ~ 13, UHF 14 ~ 69
CABLE Channels:	Midband A through I (14 ~ 22) Superband J through W (23 ~ 36) Hyperband AA ~ EEE (37 ~ 64) Lowband A-5 ~ A-1 (95 ~ 99) Special CABLE channel 5A (01) Ultraband 65 ~ 94, 100 ~ 125
FM Radio	
Band range:	87.5 ~ 108.1 MHz
General	
Power Source:	120V AC, 60 Hz
Power Consumption:	Power On Approx. 170 watts Power Off Approx. 3.5 watts
Television System:	EIA Standard NTSC color
Speaker:	2 pieces
Operating Temperature:	5° C ~ 35° C (41° F ~ 95° F)
Operating Humidity:	10 % ~ 75%
Weight:	42 kg (92.4 lbs.)
Dimensions:	772 (W) x 654 (H) x 533 (D) mm 30-3/8" (W) x 25-3/4" (H) x 21" (D)
Discs played	
(1) DVD-VIDEO disc	5" (12 cm) single-sided, single-layer 5" (12 cm) single-sided, double-layer 5" (12 cm) double-sided, double-layer (one layer per side) 3" (8 cm) single-sided, single-layer 3" (8 cm) single-sided, double-layer 3" (8 cm) double-sided, double-layer (one layer per side)
(2) Compact disc (CD-DA, CD-RW, VIDEO CD)	5" (12 cm) disc 3" (8 cm) disc
Digital audio output:	
Optical digital output:	Optical connector
Pickup:	Wave length: 655 nm (DVD) 790 nm (Video CD/CD) Laser power: CLASS II

Note : Designs and specifications are subject to change without notice.

Disc formats supported by this unit

The unit can play back discs bearing any of the following marks:

DVD
3” (8 cm) disc / 5” (12 cm) disc

Video CD
3” (8 cm) disc / 5” (12 cm) disc

CD
3” (8 cm) disc / 5” (12 cm) disc

Discs which cannot be played with this unit

- DVD with Region No. other than “1” or “ALL”
- DVD of PAL system
- DVD-ROM
- DVD-R/DVD-RAM
- CD-ROM
- CDV
- CD-G

- **Do not try to play a Photo CD.**

DVD VIDEO is a registered trademark.

Definition of Terms

Angle
Some DVD discs feature scenes simultaneously shot from different angles. The ANGLE button can be used to view the scene from different angles. (ANGLE Indicator lights up on the unit when a scene recorded at different angles is detected.)

Chapter Number
Titles are subdivided into numbered sections. You can quickly search for a favorite scene using these numbers.

DVD
A high-density optical disc on which high-quality pictures and sound have been digitally recorded. DVD incorporates new video compression technology (MPEG II) and high-density recording technology which allow entire movies to be recorded with incredible playback quality.

Playback Control
With Video CD (version 2.0), scenes or information may be selected for viewing or listening from an interactive menu that appears on the TV screen.

Subtitles
Written dialogue which appears at the bottom of the screen.

Time Number
The elapsed play time from the start of a disc or title. Use to quickly find scenes. (May not work with some discs.)

Title Number
For DVD discs with two or more titles, the title is numbered as title 1, title 2, etc.

Track Number
Numbers assigned to tracks on Video CDs and CDs to allow specific tracks to be quickly located.

Video CD
CD containing picture and sound with same quality level as video tape. This unit also supports Video CDs with playback control (version 2.0).

Disc Handling

Handling precautions

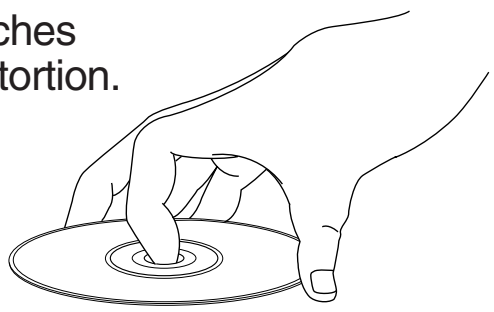

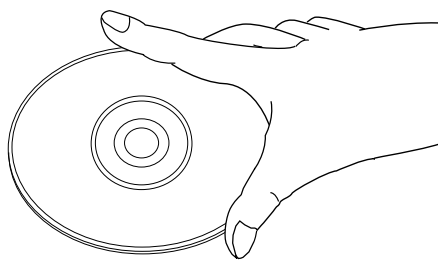

- Only hold disc by edges as shown. Fingerprints, dirt, and scratches can cause skipping and distortion.
- Do not write on label side of disc.
- Never use record cleaning sprays, benzine, thinner, static electricity prevention liquids, or any other solvent.
- Be careful not to drop or bend disc.
- Do not place more than 1 disc on disc tray.
- Do not try to close disc tray when disc is not properly placed.
- Always store discs in their proper cases when not in use.

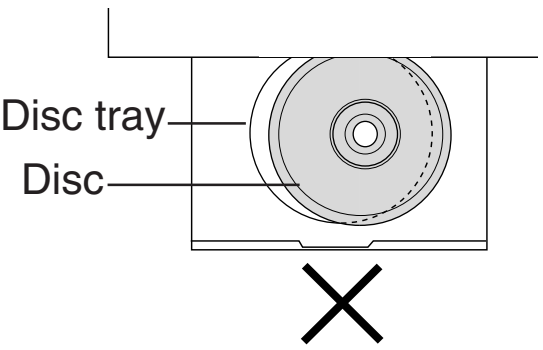

To clean disc surface

With a soft, damp (water only) cloth, gently wipe from the center hole to the outer edge as shown below. (Wiping in a circular pattern will scratch the surface.)

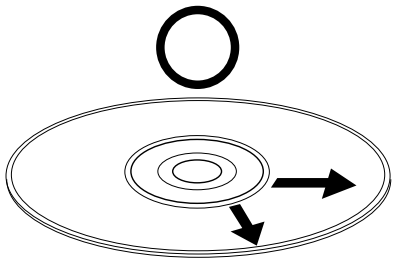

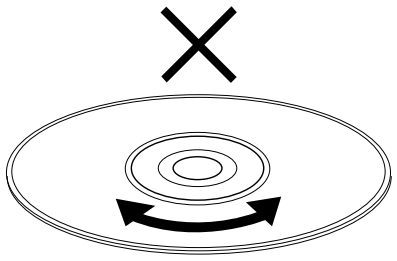

If disc is brought from a cold to a warm environment, moisture may form on the disc

Wipe away moisture with a soft, dry, lint-free cloth before using disc. (See above.)

Improper disc storage

Discs could be damaged if stored or left in areas:
- exposed to direct sunlight.
- that are humid or dusty.
- near heat (i.e. heater, radiator, etc.).

Apparatus Claims of U.S. Patent Nos. 4,631,603, 4,577,216, and 4,819,098, licensed for limited viewing uses only.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. Patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Location of Controls

Remote Control Buttons

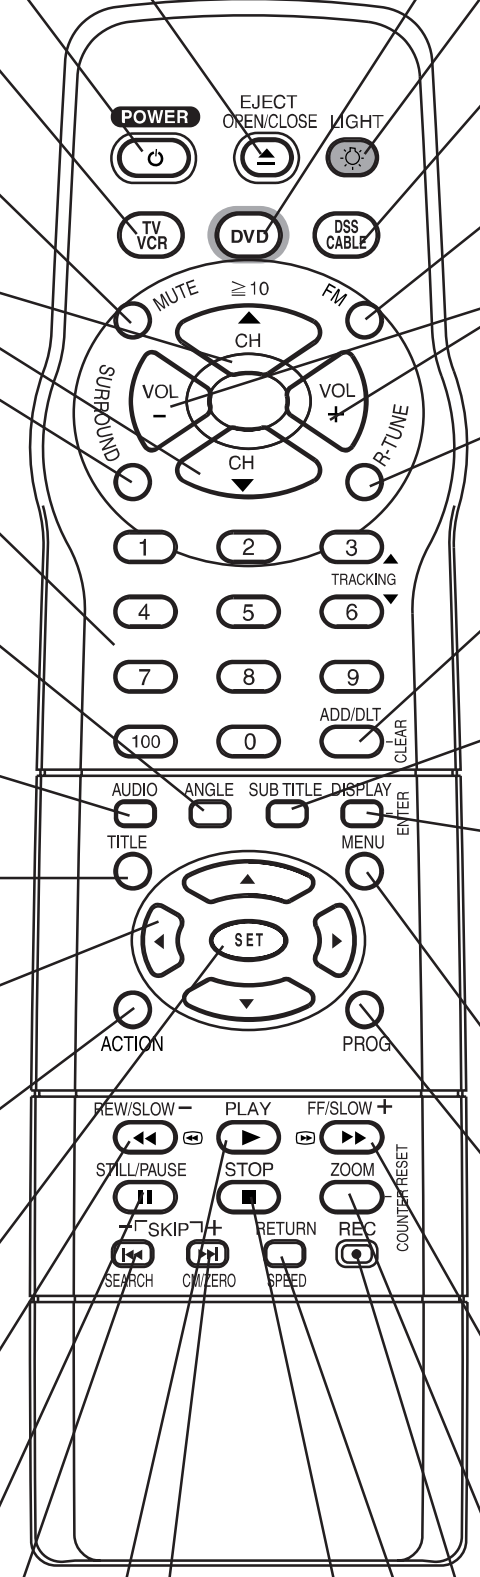
POWER
EJECT
OPEN/CLOSE
LIGHT
TV VCR
DVD
DSS CABLE
MUTE
≧10
FM
CH
VOL
−
VOL
+
SURROUND
CH
R-TUNE
1
2
3
TRACKING
4
5
6
7
8
9
ADD/DLT
100
0
CLEAR
AUDIO
ANGLE
SUB TITLE
DISPLAY
ENTER
TITLE
MENU
SET
ACTION
PROG
REW/SLOW −
PLAY
FF/SLOW +
STILL/PAUSE
STOP
ZOOM
COUNTER RESET
− SKIP +
RETURN
REC
SEARCH
CM/ZERO
SPEED

EJECT/OPEN/CLOSE
See next page.

POWER
Turn the unit on or off.

TV/VCR
Sets to TV/VCR mode.

MUTE
Mutes the sound instantly.

CHANNEL UP/DOWN
Selects a channel.

SURROUND
Hears a deeper, 3-D sound effect.

NUMBER Keys
Selects a channel directly.

ANGLE
Selects the desired angle in DVD mode.

AUDIO
Selects the desired audio mode.

TITLE
Selects the desired title by number on some DVDs.

SELECT ▲▼◀▶
Control navigation around on-screen menu.

ACTION
Displays Main Menu.

SET
Sets a selected menu.

REW/SLOW-
Rewinds tape and searches reverse scene. Decreases slow motion speed in Still mode.

STILL/PAUSE
Pauses picture in Play mode and frame advance picture in Still mode.

SKIP ⏮/SEARCH
Skips back one chapter or track. Goes to previous menu screen. Goes directly to the desired recording. Locates end point of recording.

PLAY
Begins playback.

SKIP ⏭/CM SKIP/ZERO SEARCH
Skips one chapter or track. Goes to next screen. In Stop mode, goes to the counter "0:00:00". In Play mode, skips over 1 to 3 minutes of tape.

DVD
Sets to DVD mode.

LIGHT
See next page.

DSS/CABLE
Sets the remote to control some basic DDS or Cable box functions.

FM
Receives FM radio signal.

VOLUME UP/DOWN
Adjusts volume.

RAPID TUNE
Displays the last channel you were watching.

ADD/DELETE/CLEAR
Adds or deletes a channel. Cancels an item on the screen.

SUB TITLE
Selects a different subtitle language.

DISPLAY/ENTER
Displays the TV status and clock. In DVD mode, displays disc and unit information. In DSS or CABLE mode, it may be necessary after channel selection.

MENU
Displays DVD menu.

PROGRAM
Displays SET PROGRAM screen. You can set Timer Program and On-Timer.

FF/SLOW+
Fast forwards tape and searches forward scene. Increases slow motion speed in Still mode.

ZOOM/COUNTER RESET
Enlarges specific portions of DVD picture. Resets to "0:00:00" at desired portion of tape.

REC
Records a program.

RETURN/SPEED
Returns to DVD menu screen. Selects recording speed of tape.

STOP
Stops playback.

Location of Controls (continued)

Universal Light Tower® Illuminated Remote Control

LIGHT button:
When LIGHT is pressed, (DVD, TV/VCR, DSS/CABLE, CH UP/DOWN, VOL UP/DOWN) buttons will light for 5 seconds for easy button location.
If no button is pressed in 5 seconds, the light goes out to conserve the battery.

EJECT/OPEN/CLOSE button:
When this button is pressed in TV-VCR mode, the tape is ejected.
This button is inoperative if pressed during recording.
If pressed in DVD mode, the disc tray opens or closes.

Indicators on the Front Panel

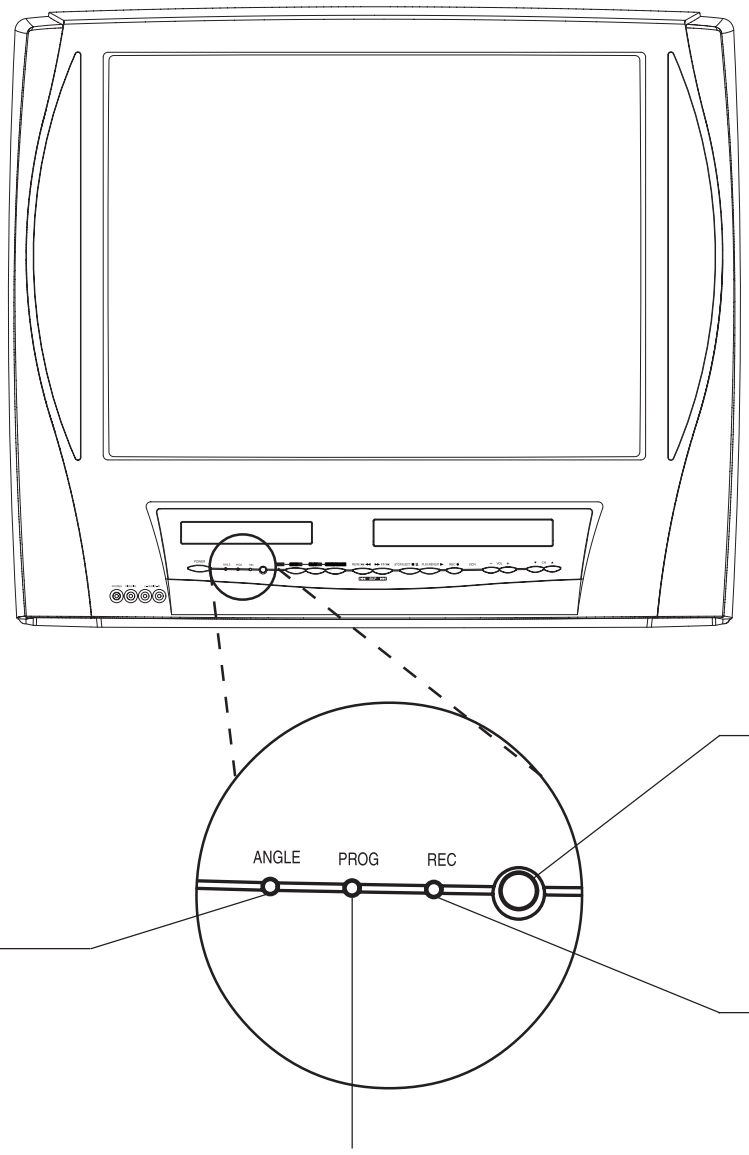

Remote Sensor

ANGLE Indicator
Lights up when a scene recorded at different angles is detected. (DVD only).
Pg. 49

PROG TIMER Indicator
Lights up when the unit is set for Timer Recording. It flashes when a Timer Recording has been set with no tape inserted, the clock is not set, or the tape is in motion.
Pg. 30
Lights up when the On Timer is set.
Pg. 26

REC Indicator
Lights up during recording. In Rec Pause or OTR Pause mode, the Indicator flashes.
Pg. 18

Front View of the unit

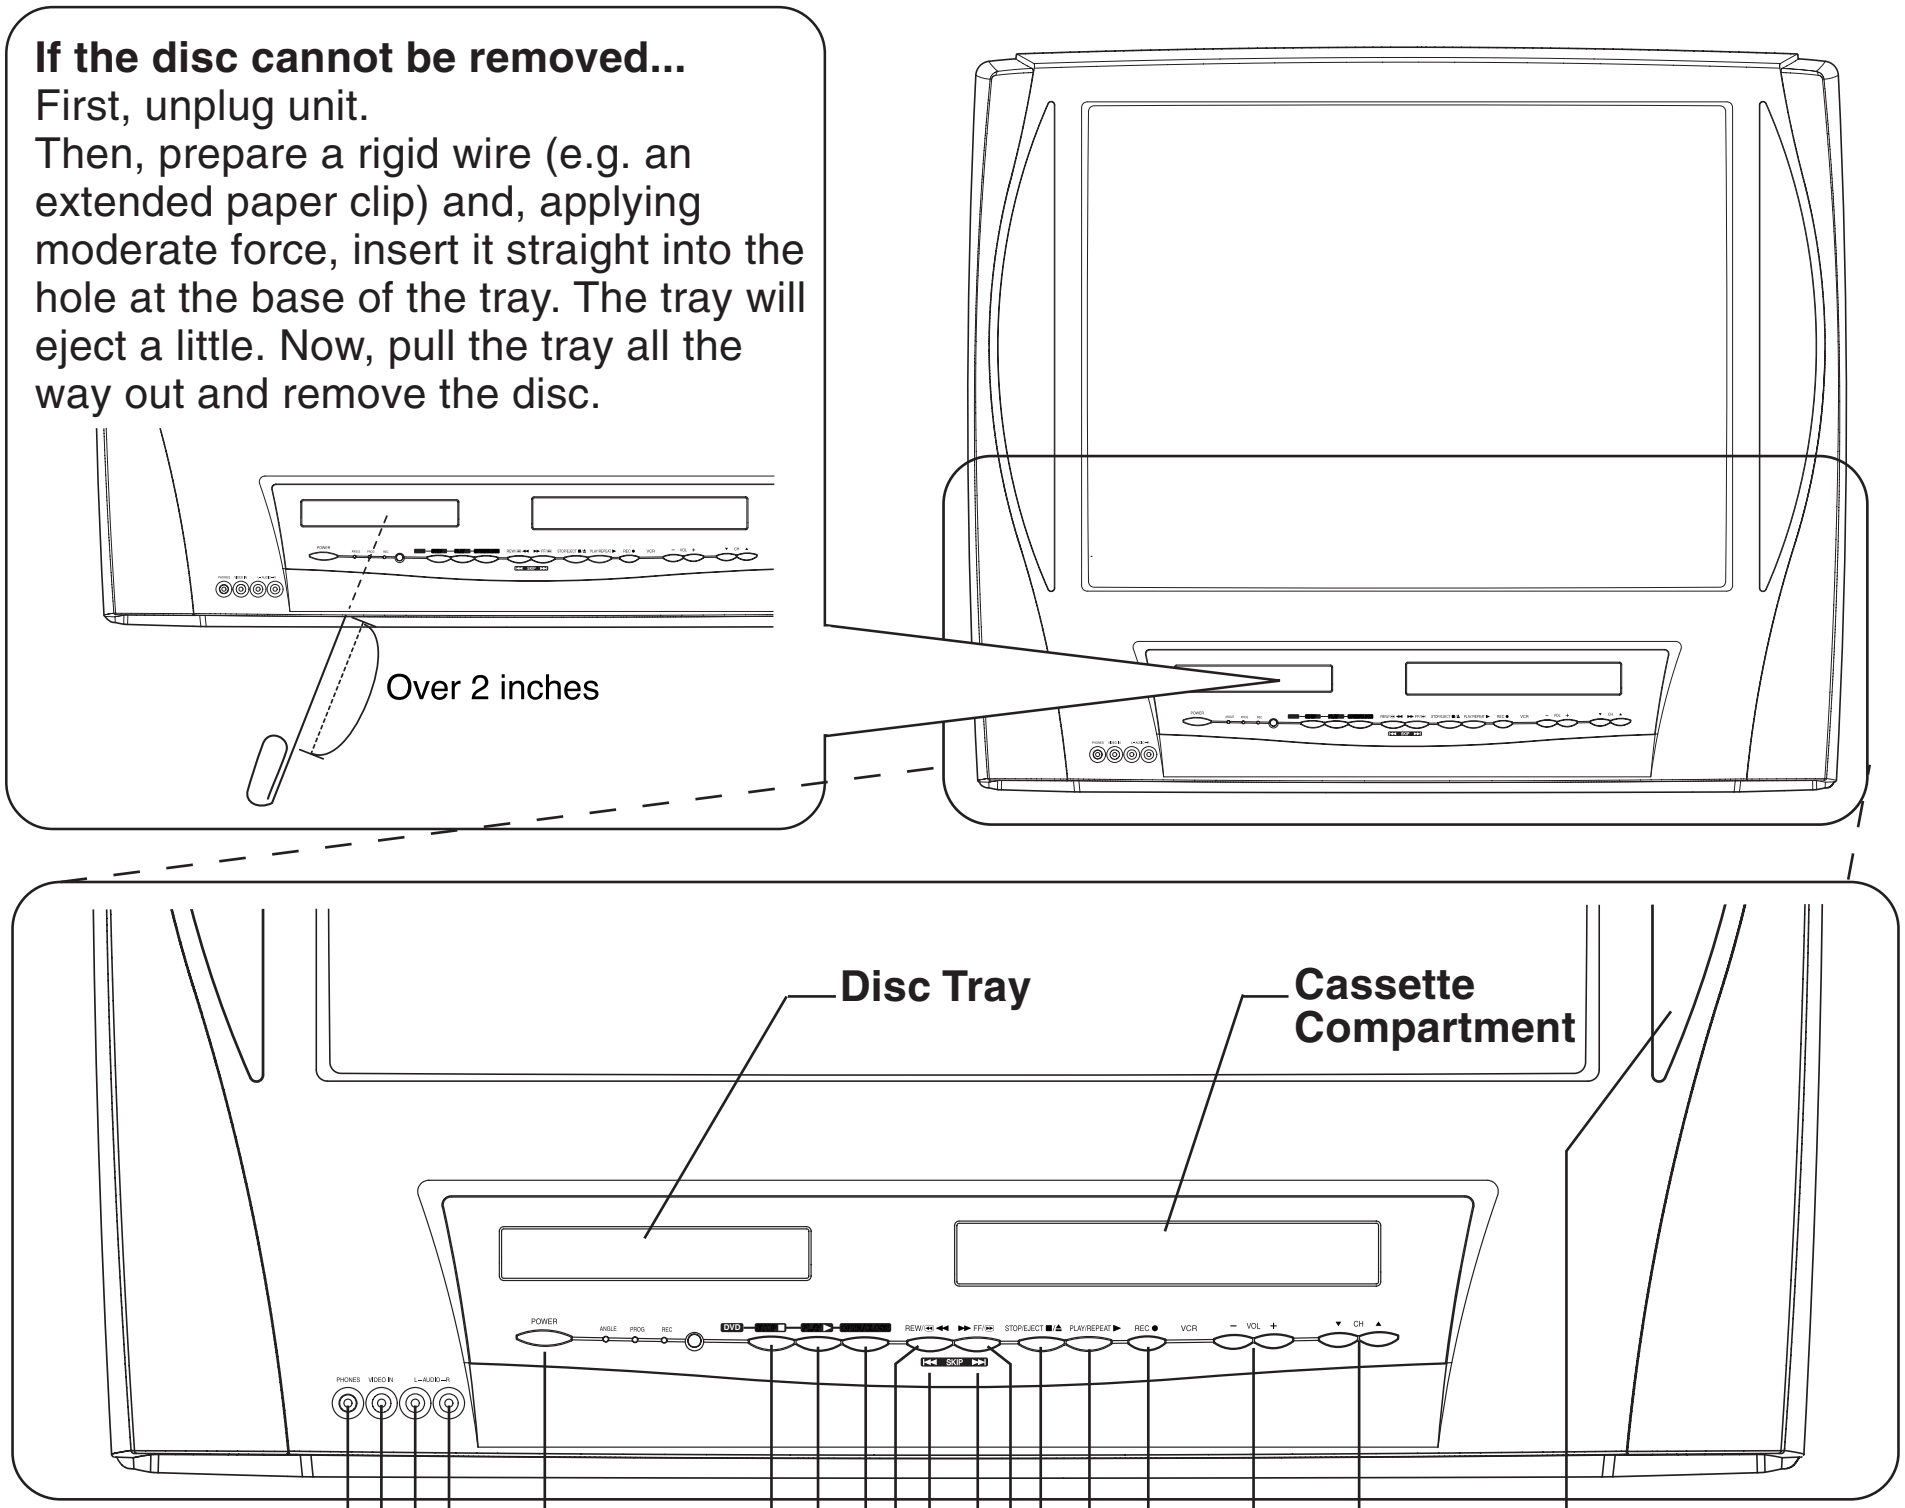
Over 2 inches
Disc Tray
Cassette Compartment
POWER
ANGLE
PROG
REC
DVD
REW/◀◀
▶▶FF/
STOP/EJECT ■/⏏
PLAY/REPEAT ▶
REC ●
VCR
− VOL +
▼ CH ▲
SKIP
PHONES
VIDEO IN
L-e-AUDIO-R

If the disc cannot be removed...
First, unplug unit.
Then, prepare a rigid wire (e.g. an extended paper clip) and, applying moderate force, insert it straight into the hole at the base of the tray. The tray will eject a little. Now, pull the tray all the way out and remove the disc.

PHONES
Connect an earphone or headphones.

AUDIO/VIDEO IN Connector
Connect from other component.

POWER (See page 8.)

STOP (See page 8.)

PLAY (See page 8.)

OPEN/CLOSE (See page 8.)

REWIND/SEARCH (See page 8.)

SKIP⏮ (See page 8.)

SKIP⏭ (See page 8.)

Built-In SpeakerX2

CHANNEL UP/DOWN
(See page 8.)
TRACKING UP/DOWN
(See page 8.)

VOLUME UP/DOWN
(See page 8.)

REC
(See page 8.)

PLAY/REPEAT
(See page 8.)

STOP/EJECT
(See page 8.)

FAST FORWARD/ SEARCH
(See page 8.)

Location of Controls (continued)

Rear View of the unit

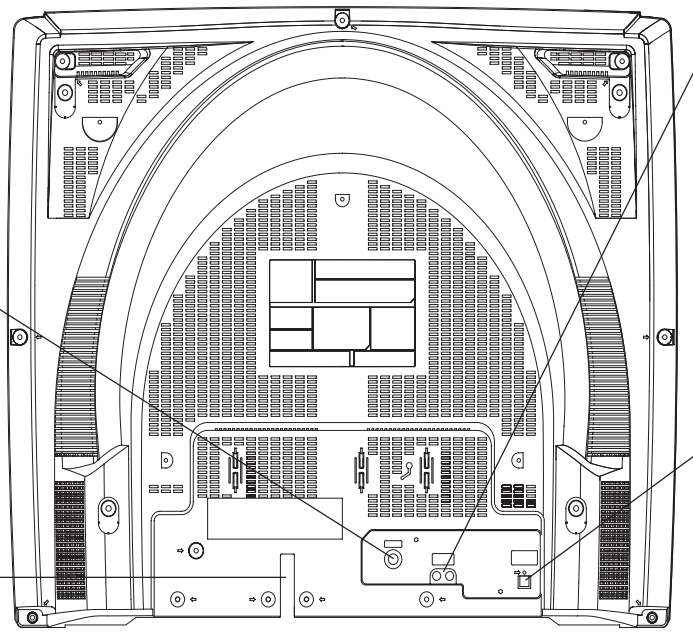

Audio Output Connector (L/R)
Pg. 12

VHF/UHF Antenna Input Terminal
See below.

Optical digital audio output connector
Pg. 13

AC Power Plug
When plugged into an AC outlet, this unit consumes 3.5 W of electric power in OFF condition.

Connections

For ANT./Cable

Connect the cable from Antenna/Cable to the VHF/UHF terminal on the unit.

For DSS/Cable Box

Connect the OUT jack on your cable box to the VHF/UHF terminal on the unit with a RF cable.

WARNING:
Overtightening “Nut type” RF coaxial cables may damage jacks. Finger tighten only.

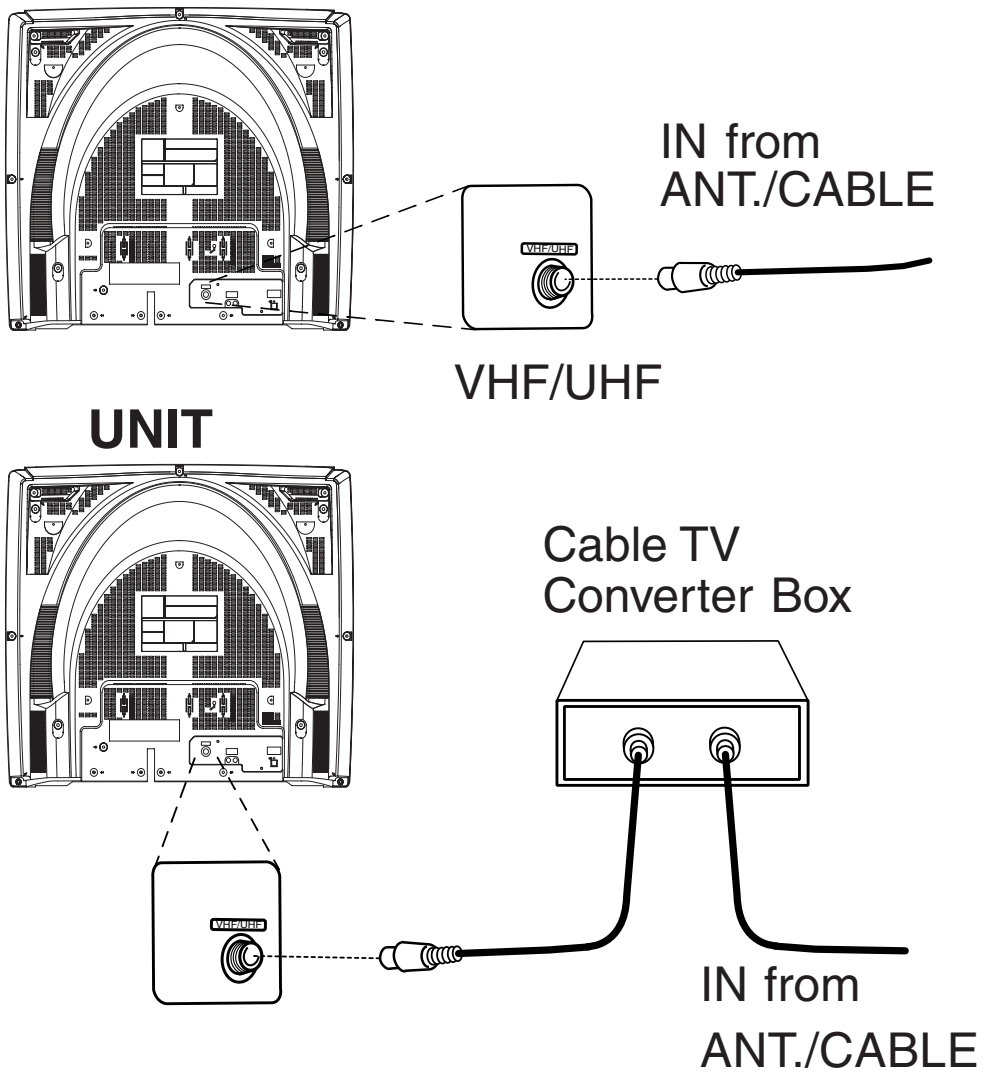
IN from
ANT./CABLE
VHF/UHF
VHF/UHF
UNIT
Cable TV
Converter Box
VHF/UHF
IN from
ANT./CABLE

Audio connections

■ Unit ➔ Amplifier ➔ Speaker

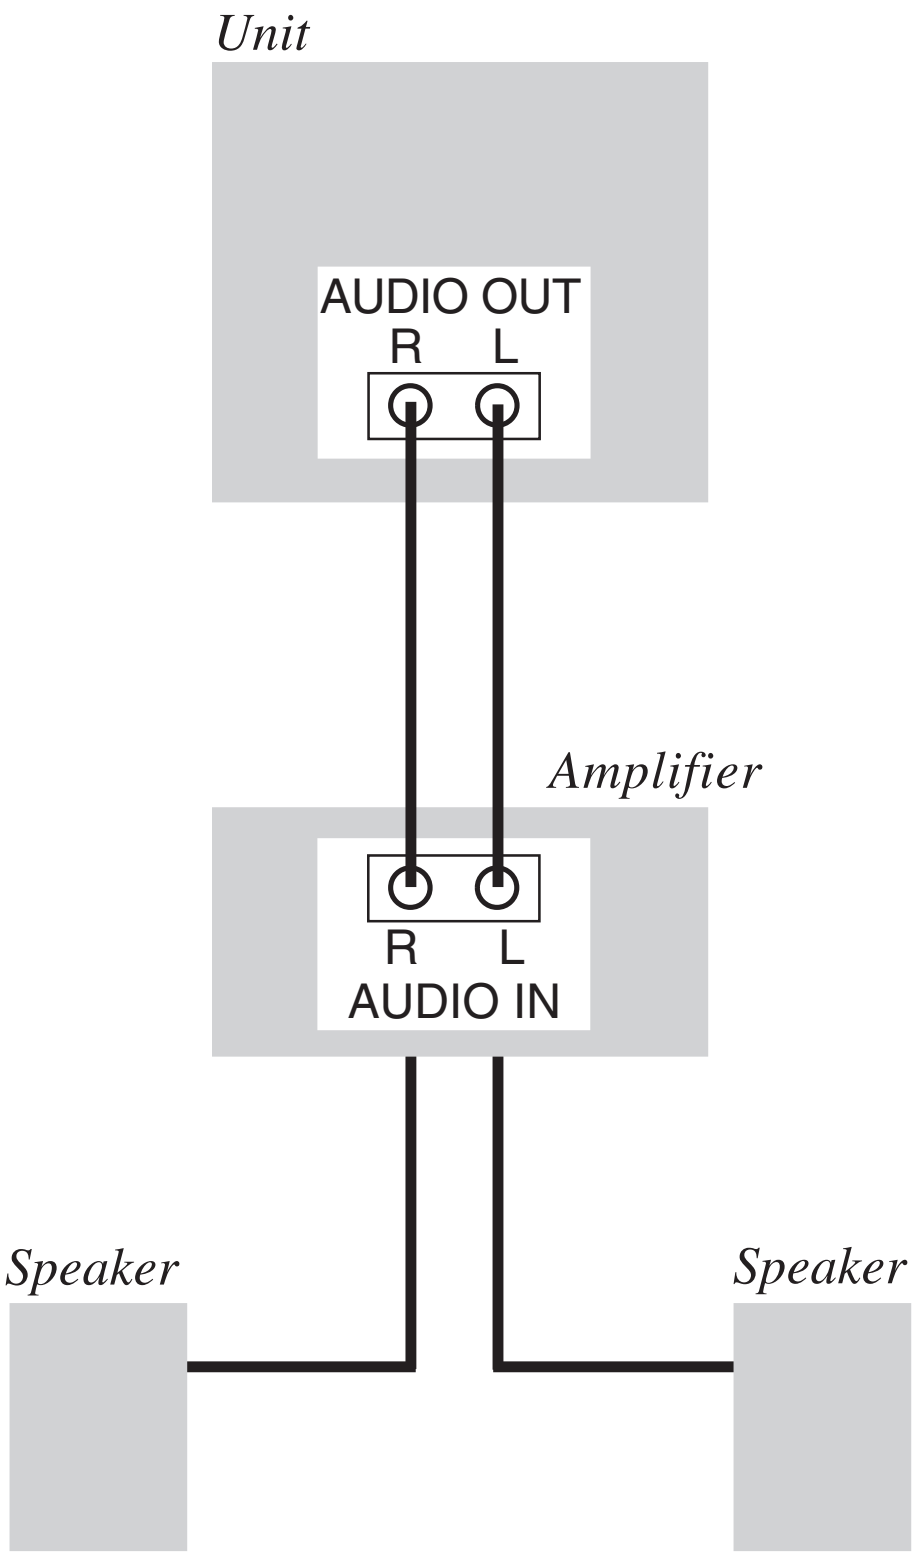

Ready Checklist

☐ Turn down the volume, then turn this unit, as well as other equipment to be connected, off before proceeding with connection.
☐ Do not block ventilation holes of any of the equipment and arrange them so that air can circulate freely.
☐ Read through the instructions before connecting other equipment.
☐ Ensure that you observe the color coding when connecting audio and video cables.

Enjoying digital audio output from the digital audio output connector

Notes on audio output from the optical digital audio output connector

Disc	Sound recording format	Optical digital audio output from connector
DVD	Dolby Digital	Dolby Digital bitstream (1-5.1 ch) or OFF (no output)*1
	Linear PCM (48/96 kHz 16/20/24 bit)	Linear PCM (2ch) (48 kHz sampling/16 bit only)*2 or no output*1
	dts	Bitstream or no output*1
Video CD	MPEG 1	PCM (44.1 kHz sampling)
CD	Linear PCM	Linear PCM (44.1 kHz sampling)

*1 The type of audio output from the connector can be selected by the Settings for DVD Operation. (See page 60.)

*2 Sound having 96 kHz sampling is converted into 48 kHz sampling when it is output from the unit's optical digital audio output connector.

For your reference:

- Dolby Digital is a digital sound compression technique developed by the Dolby Laboratories Licensing Corporation. Supporting 5.1-channel surround sound, as well as stereo (2-channel) sound, this technique enables a large quantity of sound data to be efficiently recorded on a disc.
- Linear PCM is a signal recording format used in CDs. While CDs are recorded in 44.1 kHz/16 bit, DVDs are recorded in 48 kHz/16 bit up to 96 kHz/24 bit.
- If you have a Dolby Pro Logic Surround decoder, you will obtain the full benefit of Pro Logic from the same DVD movies that provide full 5.1 channel Dolby Digital soundtracks, as well as from titles with the Dolby Surround mark. For information on Panasonic or Technics Dolby Pro Logic Surround Sound Decoders please contact your local dealer.

Manufactured under license from Dolby Laboratories. "Dolby", and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works. © 1992-1997 Dolby Laboratories, Inc. All rights reserved.

■ Unit ➔ Decoder with Dolby Digital ➔ Amplifier ➔ Speaker
or
dts (digital theater systems)

When DVDs recorded in Dolby Digital or dts are played, Dolby Digital bitstream or dts bitstream is output from the unit Optical digital audio output connector. When the unit is connected to a Dolby Digital decoder or dts decoder, you can enjoy theater-quality audio in your home.
[An optical digital audio cable (optional) is required when an optional Dolby Digital decoder or dts decoder is used.]

Notes on connecting an Optical digital audio cable (optional)

- Firmly connect the cable to the connector.

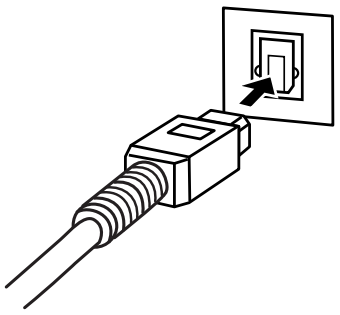

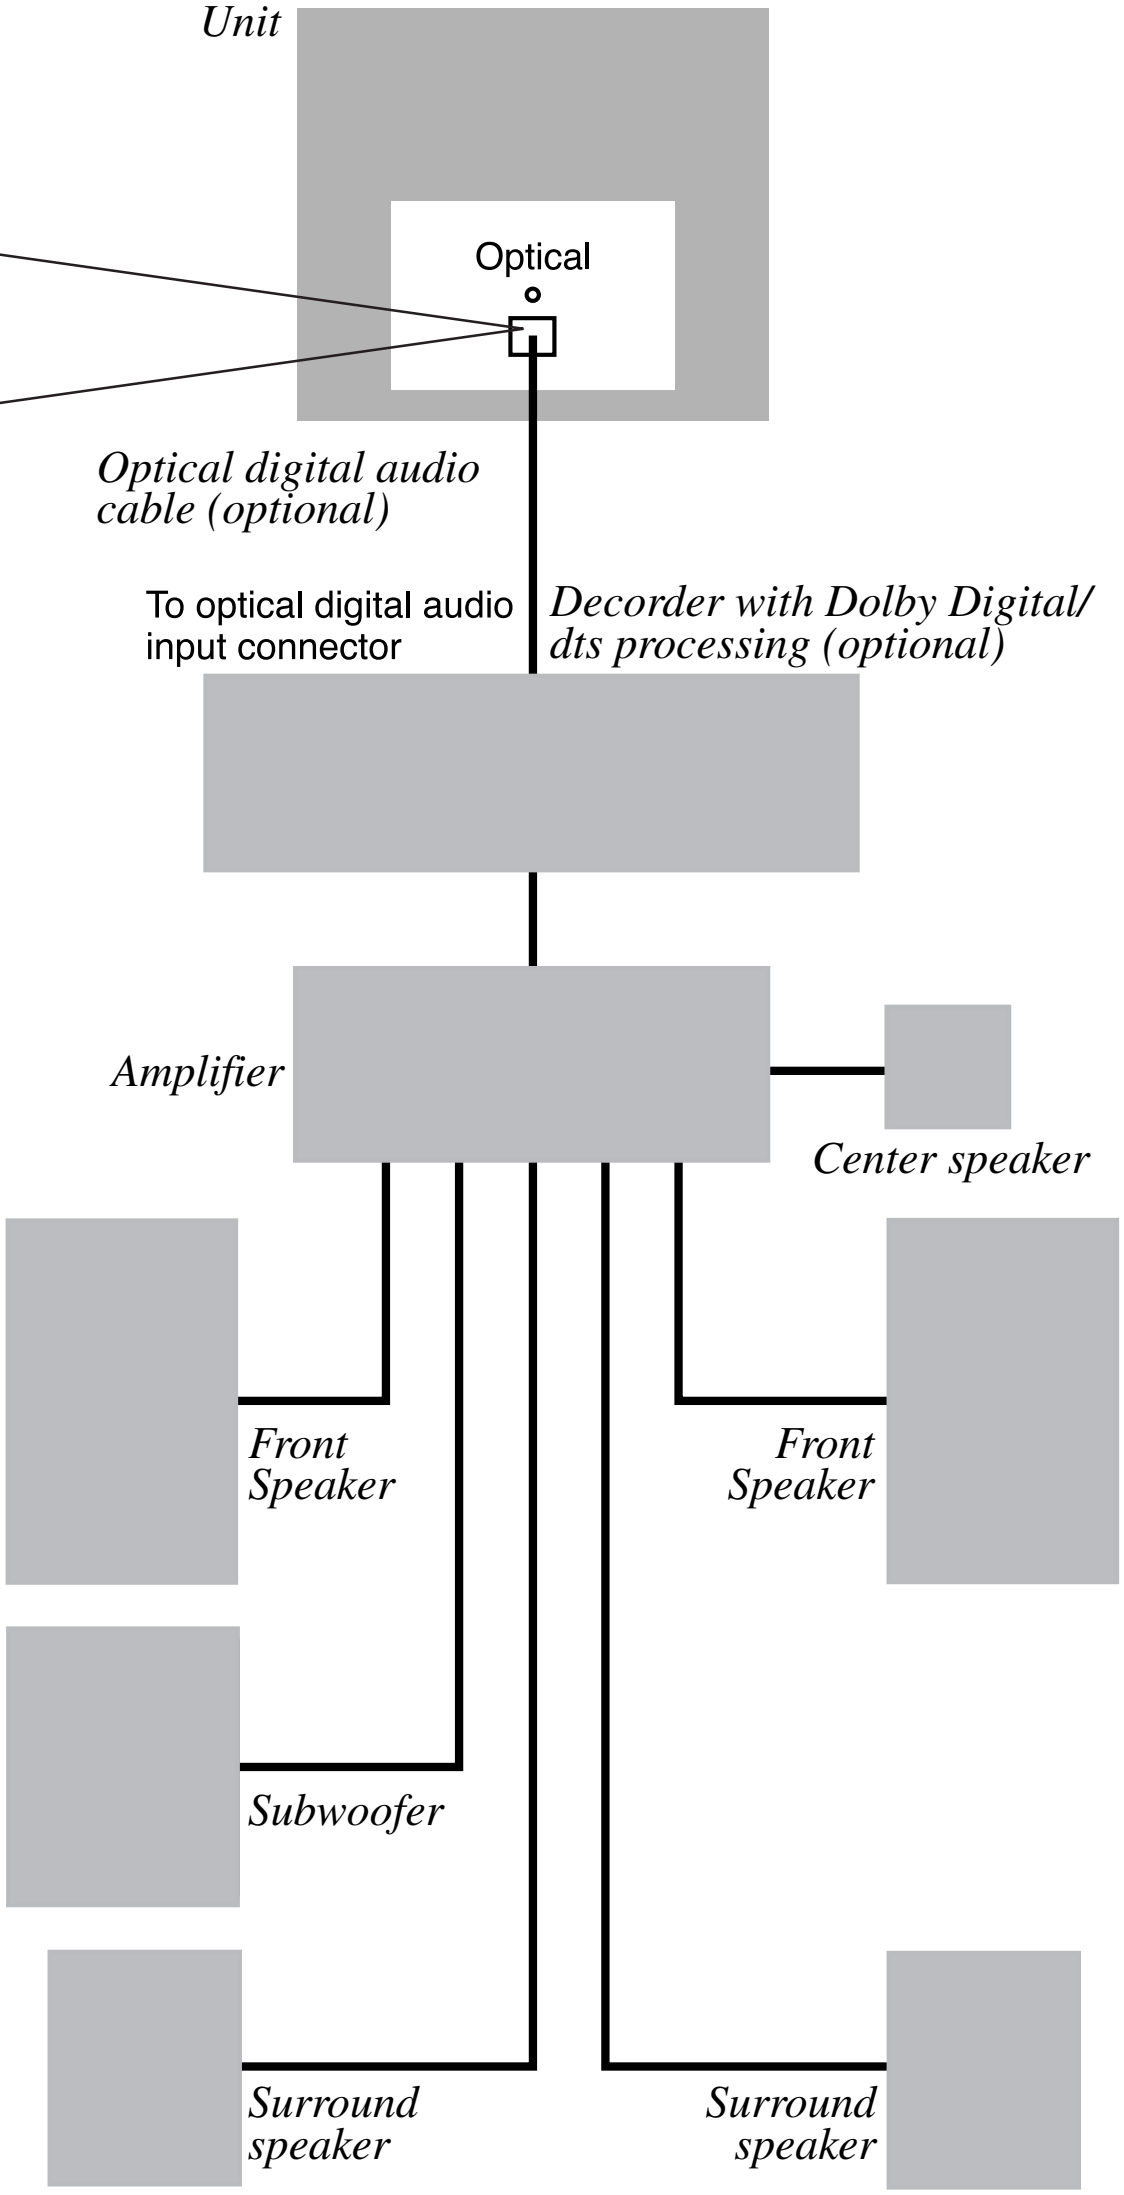
Unit
Optical
Optical digital audio cable (optional)
To optical digital audio input connector
Decorder with Dolby Digital/ dts processing (optional)
Amplifier
Center speaker
Front Speaker
Front Speaker
Subwoofer
Surround speaker
Surround speaker

Caution for optical digital audio output connector:

- When connecting an amplifier (with an Optical digital input connector) which does not contain the Dolby Digital or dts decoder, be sure to select “OFF” at “Dolby Digital” and “OFF” at “dts” of the Settings for DVD Operation “AUDIO OUTPUT” (see page 58). Otherwise, any attempt to play DVDs may cause such a high level of noise that it may be harmful to your ears and damage your speakers.
- When a dts decoder is connected, please select “Bitstream” at “dts” of the Settings for DVD Operation “AUDIO OUTPUT”. If “OFF” is selected, there will be no sound. (See page 58).
- Video CDs and CDs can be played as normal.

Note:

- Some dts decoders which do not support DVD-dts interface may not work properly with the unit.

Initial Setup (Ready to Play)

Please make all cable or antenna connections before powering on.

Initial Setup (Ready to Play)

Press TV VCR on the remote for TV-VCR mode.

1 **Plug the unit power cord into an AC wall outlet.**

2 **Press Power* on the remote or unit. The unit comes on and auto channel and clock set starts.**

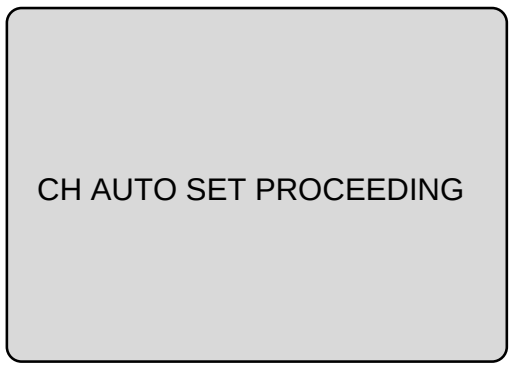

CH AUTO SET PROCEEDING

- If you use a cable box, turn it on and set it to the Public Broadcasting Service (PBS) channel in your time zone. If you use a DSS receiver, it must be turned off.

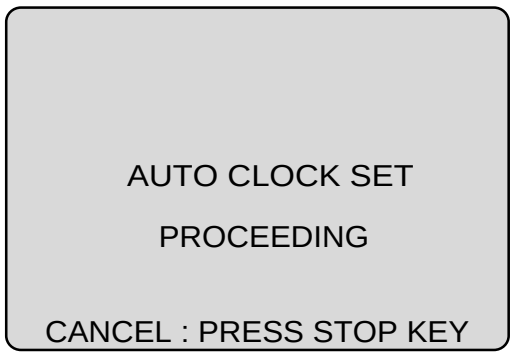

AUTO CLOCK SET
PROCEEDING

CANCEL : PRESS STOP KEY

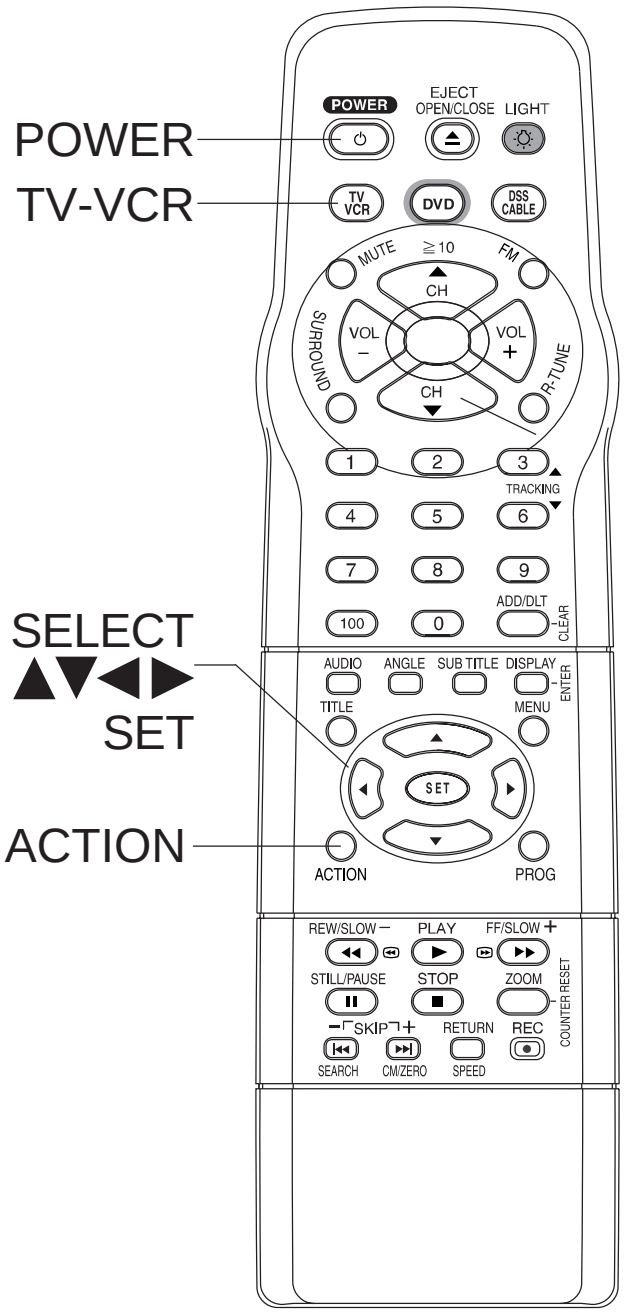

POWER
TV-VCR
SELECT
▲▼◀▶
SET
ACTION
POWER
EJECT OPEN/CLOSE
LIGHT
TV VCR
DVD
DSS CABLE
MUTE
≧10
FM
CH
SURROUND
VOL −
VOL +
R-TUNE
CH
1
2
3
TRACKING
4
5
6
7
8
9
ADD/DLT
100
0
CLEAR
AUDIO
ANGLE
SUB TITLE
DISPLAY
ENTER
TITLE
MENU
SET
ACTION
PROG
REW/SLOW −
PLAY
FF/SLOW +
STILL/PAUSE
STOP
ZOOM
COUNTER RESET
− SKIP +
RETURN
REC
SEARCH
CM/ZERO
SPEED

3 **Settings are made automatically. When setup is done, this screen appears.**

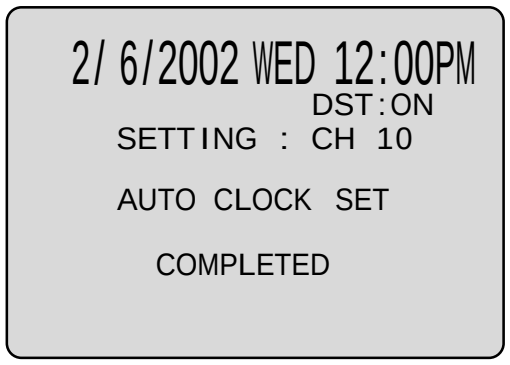

2/ 6/2002 WED 12:00PM
DST : ON
SETTING : CH 10
AUTO CLOCK SET
COMPLETED

If AUTO CLOCK SET IS INCOMPLETE screen appears, set the clock using MANUAL CLOCK SET procedure on next page.

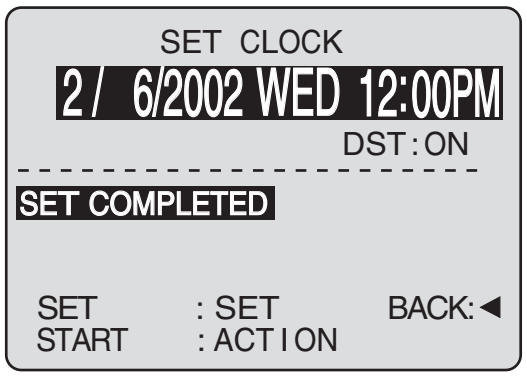

SET CLOCK
2/ 6/2002 WED 12:00PM
DST : ON

SET COMPLETED

SET : SET
START : ACTION
BACK: ◀

ortant: If a remote control button does not work when pressed, press the TV VCR button on the remote and try the button again.

anual Clock Set

UTO CLOCK SET was incomplete, manually he clock as follows.

Press ACTION on the Remote to display SET CLOCK Menu screen.

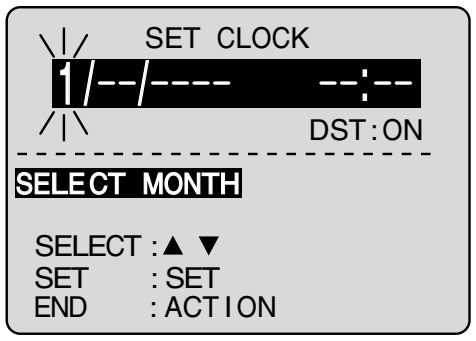

SET CLOCK
1/--/---- --:--
DST:ON
SELECT MONTH
SELECT : ▲ ▼
SET : SET
END : ACTION

Press ▲ ▼ to select the month and **press SET** to set. In the same manner, select and set the date, year, time, and DST. (Daylight Saving Time)

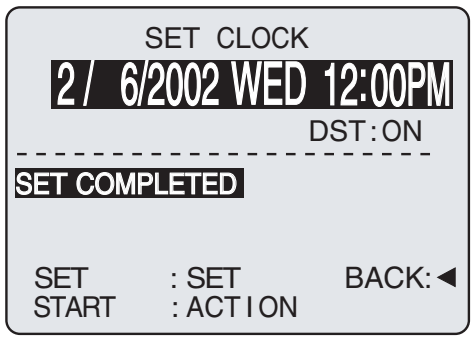

SET CLOCK
2/ 6/2002 WED 12:00PM
DST:ON
SET COMPLETED
SET : SET BACK: ◀
START : ACTION

Press ACTION twice to start CLOCK and exit.

Reset all unit Memory Functions

When moving unit to a new location, or if a mistake was made in the Initial Setup section.

- Make sure a tape is not inserted in the unit.

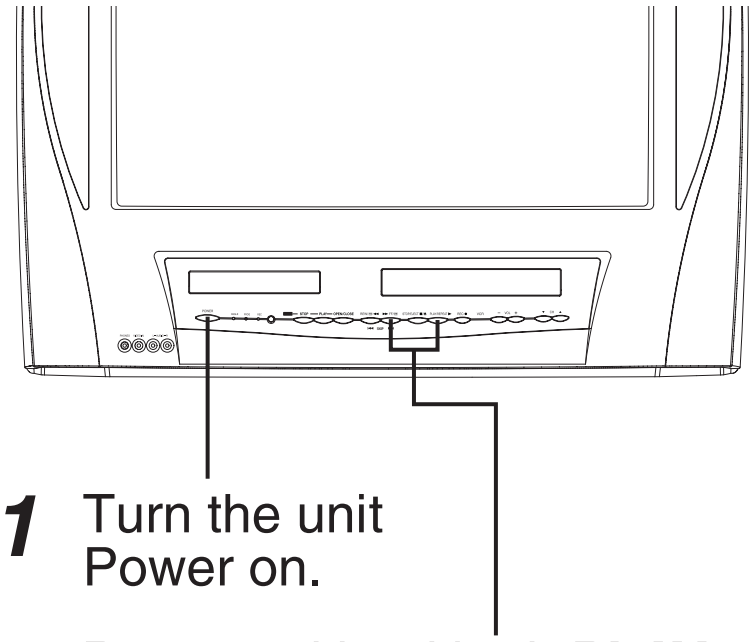

1 Turn the unit Power on.

2 Press and hold both **PLAY** and **FF** on the unit for more than 5 seconds.
   - The power will shut off.
   - Please ignore "NO CASSETTE" warning.

3 Do "Initial Setup" on page 14.

Note to CABLE System Installer
This reminder is provided to call the CABLE (Cable TV) System Installers attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Reset Language, Channels, Clock,

1

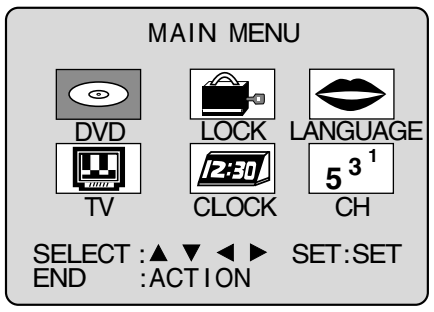
MAIN MENU
DVD
LOCK
LANGUAGE
TV
CLOCK
CH
SELECT : ▲ ▼ ◀ ▶ SET:SET
END :ACTION

Press ACTION*
to display MAIN MENU.

2

Language

1) **Press ▲▼◀ ▶** to select language icon.

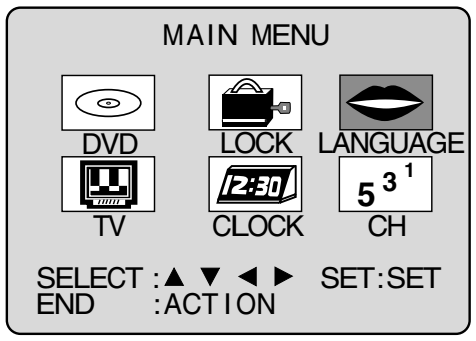
MAIN MENU
DVD
LOCK
LANGUAGE
TV
CLOCK
CH
SELECT : ▲ ▼ ◀ ▶ SET:SET
END :ACTION

2) **Press SET** repeatedly.

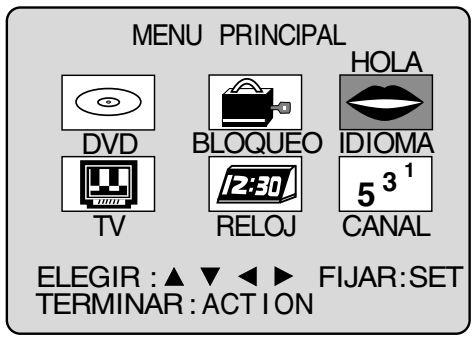
MENU PRINCIPAL
HOLA
DVD
BLOQUEO
IDIOMA
TV
RELOJ
CANAL
ELEGIR : ▲ ▼ ◀ ▶ FIJAR:SET
TERMINAR : ACTION

For Spanish

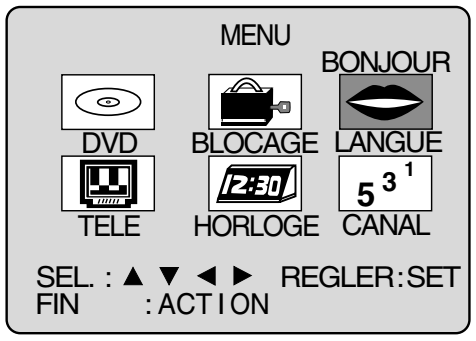
MENU
BONJOUR
DVD
BLOCAGE
LANGUE
TELE
HORLOGE
CANAL
SEL. : ▲ ▼ ◀ ▶ REGLER:SET
FIN :ACTION

For French

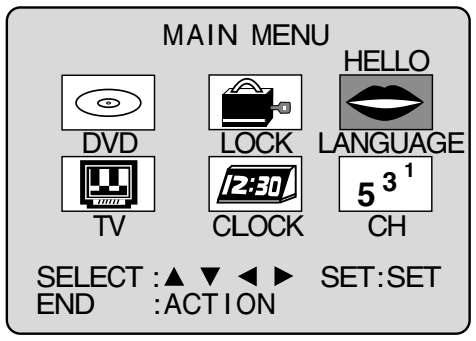
MAIN MENU
HELLO
DVD
LOCK
LANGUAGE
TV
CLOCK
CH
SELECT : ▲ ▼ ◀ ▶ SET:SET
END :ACTION

For English

3) **Press ACTION** to exit.

Channels

1) **Press ▲▼◀ ▶** to select “CH.”

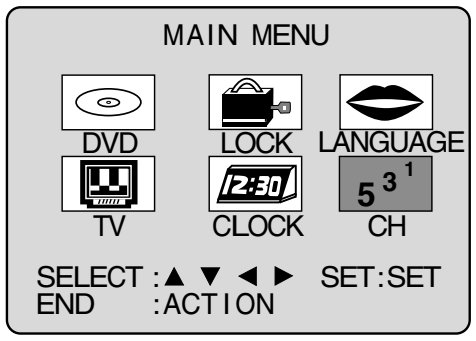
MAIN MENU
DVD
LOCK
LANGUAGE
TV
CLOCK
CH
SELECT : ▲ ▼ ◀ ▶ SET:SET
END :ACTION

2) **Press SET.**

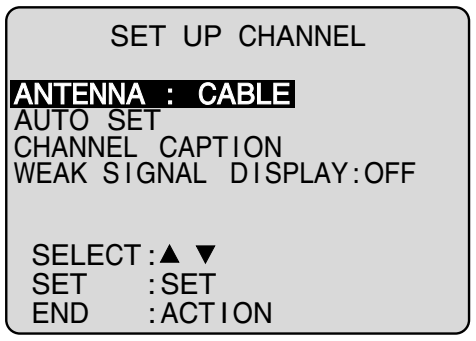
SET UP CHANNEL
ANTENNA : CABLE
AUTO SET
CHANNEL CAPTION
WEAK SIGNAL DISPLAY:OFF
SELECT:▲ ▼
SET :SET
END :ACTION

3) **Press ▲▼** to select “ANTENNA,” then **press SET** to set your antenna system (“TV” or “CABLE”).

4) **Press ▲▼** to select “AUTO SET,” then **press SET**.

- After Channel Auto Set is finished, Clock Auto Set will be performed.

(If clock is set manually, Clock Auto Set will not be performed.)

Clock

1) **Press ▲▼◀ ▶** to select “CLOCK.”

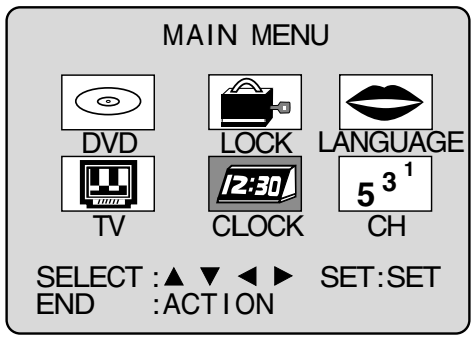
MAIN MENU
DVD
LOCK
LANGUAGE
TV
CLOCK
CH
SELECT : ▲ ▼ ◀ ▶ SET:SET
END :ACTION

2) **Press SET**.

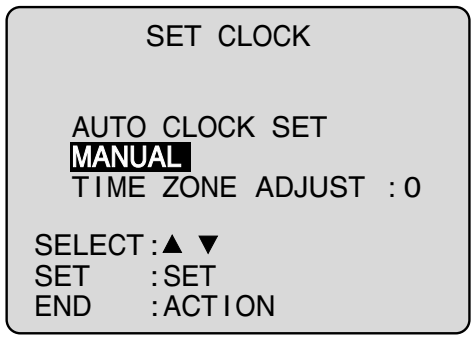
SET CLOCK
AUTO CLOCK SET
MANUAL
TIME ZONE ADJUST : 0
SELECT:▲ ▼
SET :SET
END :ACTION

(“TIME ZONE ADJUST” appears only when auto clock is set.)

3) **Press ▲▼** to select “MANUAL,” then **press SET**.

(For Auto Clock Set, select “AUTO CLOCK SET,” and **press SET**.)

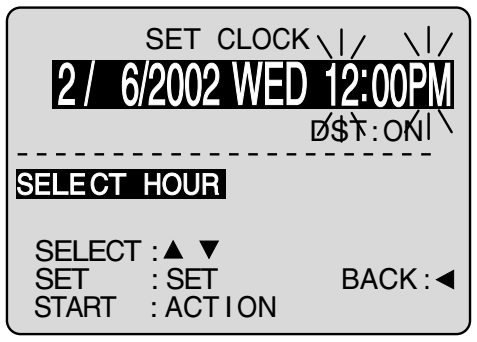
SET CLOCK
2/ 6/2002 WED 12:00PM
DST:ON
SELECT HOUR
SELECT : ▲ ▼
SET : SET
START : ACTION
BACK : ◀

<Example MANUAL CLOCK SET screen>

Continued on the next page.

Time Zone Adjust

4) **Press ▲▼** and **press SET** to select and set the month, date, year, time, and DST (Daylight Saving Time).

To Make Corrections, repeatedly press ◀▶ to move to error, then correct.

5) **Press ACTION** twice to start the clock and exit this mode.

Time Zone Adjust

(Only when Auto Clock is set.)

1) **Press ▲▼◀▶** to select "CLOCK."

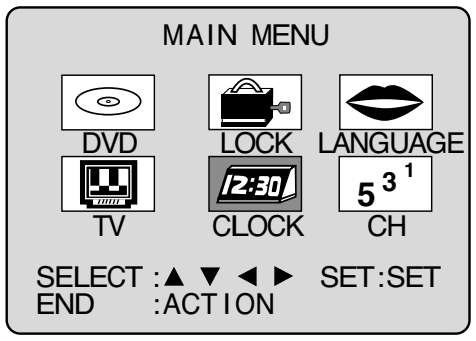

MAIN MENU

DVD LOCK LANGUAGE

TV CLOCK CH

SELECT : ▲ ▼ ◀ ▶ SET : SET
END : ACTION

2) **Press SET.**

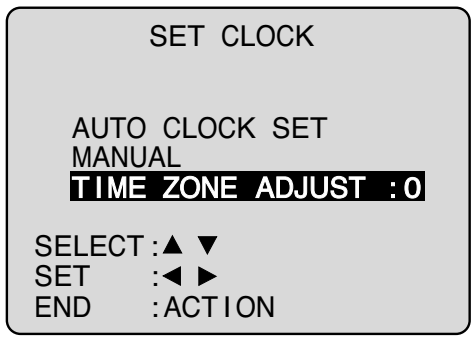

SET CLOCK

AUTO CLOCK SET
MANUAL
TIME ZONE ADJUST : 0

SELECT : ▲ ▼
SET : ◀ ▶
END : ACTION

3) **Press ▲▼** to select "TIME ZONE ADJUST" and **press ◀** or **▶** to subtract or add hour(s) as necessary.

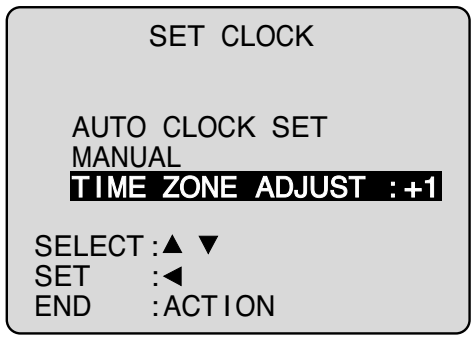

SET CLOCK

AUTO CLOCK SET
MANUAL
TIME ZONE ADJUST : +1

SELECT : ▲ ▼
SET : ◀
END : ACTION

4) **Press ACTION** twice to exit.

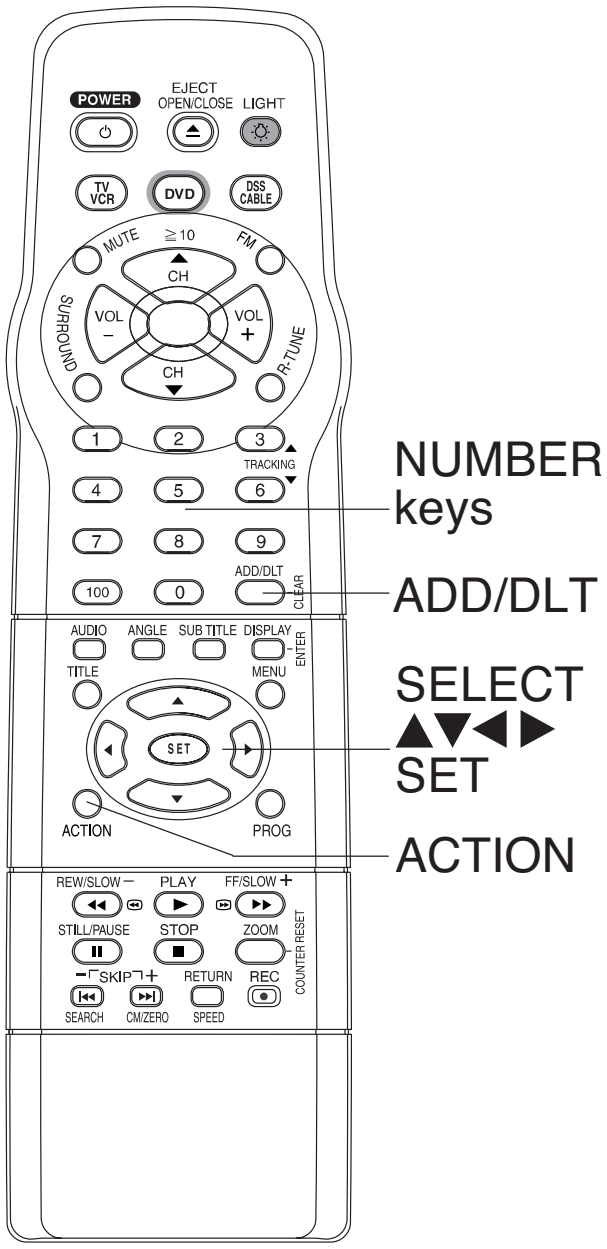
POWER
EJECT OPEN/CLOSE
LIGHT
TV VCR
DVD
DSS CABLE
MUTE
≧10
FM
CH
VOL –
VOL +
SURROUND
R-TUNE
CH
1
2
3
TRACKING
4
5
6
7
8
9
100
0
ADD/DLT
CLEAR
AUDIO
ANGLE
SUB TITLE
DISPLAY
ENTER
TITLE
MENU
SET
ACTION
PROG
REW/SLOW –
PLAY
FF/SLOW +
STILL/PAUSE
STOP
ZOOM
COUNTER RESET
– SKIP +
RETURN
REC
SEARCH
CM/ZERO
SPEED
NUMBER keys
ADD/DLT
SELECT ▲▼◀▶
SET
ACTION

Add or Delete a Channel

To add channel:
Select channel with **number keys** and **press ADD/DLT**.

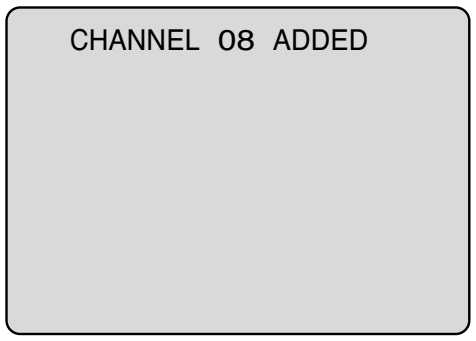

CHANNEL 08 ADDED

To delete channel:
Select channel with CH▲▼ or **number keys** and **press ADD/DLT**.

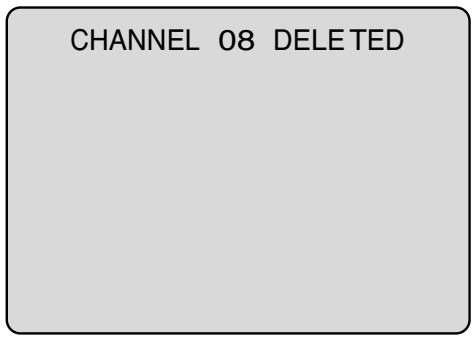

CHANNEL 08 DELETED

Playback a Tape

☑ Ready Checklist

☐ All connections are made.
☐ Your unit is plugged in.

1

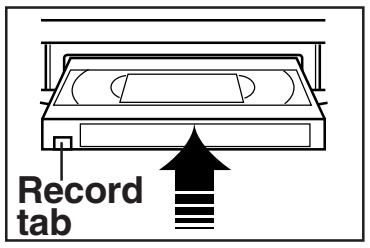

Insert a tape.

- The unit power comes on automatically.

To prevent tape jam, remove loose or peeling labels from tapes.



---

2 **Press PLAY*** to play a tape.

- If tape has no record tab (see page 4), auto play begins.

■ **Forward/Reverse scene search**
➔ **Press FF/SLOW+** or **REW/SLOW-**.
➔ **Press** again **or PLAY** to release.

■ **Still (Freeze) picture**
➔ **Press STILL/PAUSE**.
➔ **Press PLAY** to release.

■ **Slow Motion picture**
➔ **Press FF/SLOW+** (increases speed) or **REW/SLOW-** (decreases speed) in Still mode.
➔ **Press PLAY** to release.

■ **Frame by Frame picture**
➔ **Press STILL/PAUSE** in Still mode.
➔ **Press PLAY** to release.

Notes

- These features work best in SP or SLP mode.
- After the unit is in Still or Slow mode for 3 minutes, it will switch to Stop mode automatically to protect the tape and the video head.

■ **Stop ➔ Press STOP**
■ **Rewind tape ➔ Press REW/SLOW-** in Stop mode
■ **Fast forward tape ➔ Press FF/SLOW+** in Stop mode
■ **Eject tape ➔ Press EJECT** on the remote or **STOP/EJECT** on the unit

Operation using unit buttons

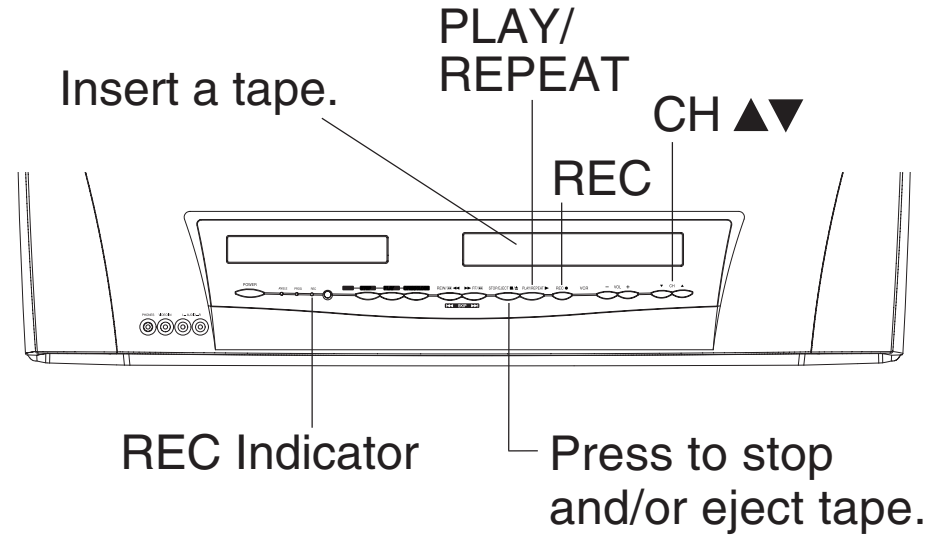

Record On a Tape

1 **Insert a tape with record tab.**

- The unit power comes on automatically.

---

2 **Press CH ▲▼** or **number keys** to Select Channel.

- For “LINE” input, see bottom of next page.

---

3 **Press SPEED** to select recording speed (see page 4).

SP = Standard Play
LP = Long Play
SLP = Super Long Play

- Selected speed is displayed.

---

4 **Press REC** to start recording.

- To edit out unwanted portions, **press STILL/PAUSE** to pause and resume recording.
- You cannot view another channel during recording.

■ **Stop ➔ Press STOP**
■ **One Touch Recording (OTR)**
Press REC repeatedly to set the recording length (30 min - 4 hours.)



- The unit stops recording at a preset time.
- PROG TIMER Indicator lights on the unit.

Notes

- **It is not possible to record from DVD/ Video CD/CD to VHS tape using this unit.**
- After the unit has been in Rec Pause mode for 5 minutes, it will stop automatically to protect the tape and the video head.
- The remaining recording time of an OTR can be displayed by pressing DISPLAY.

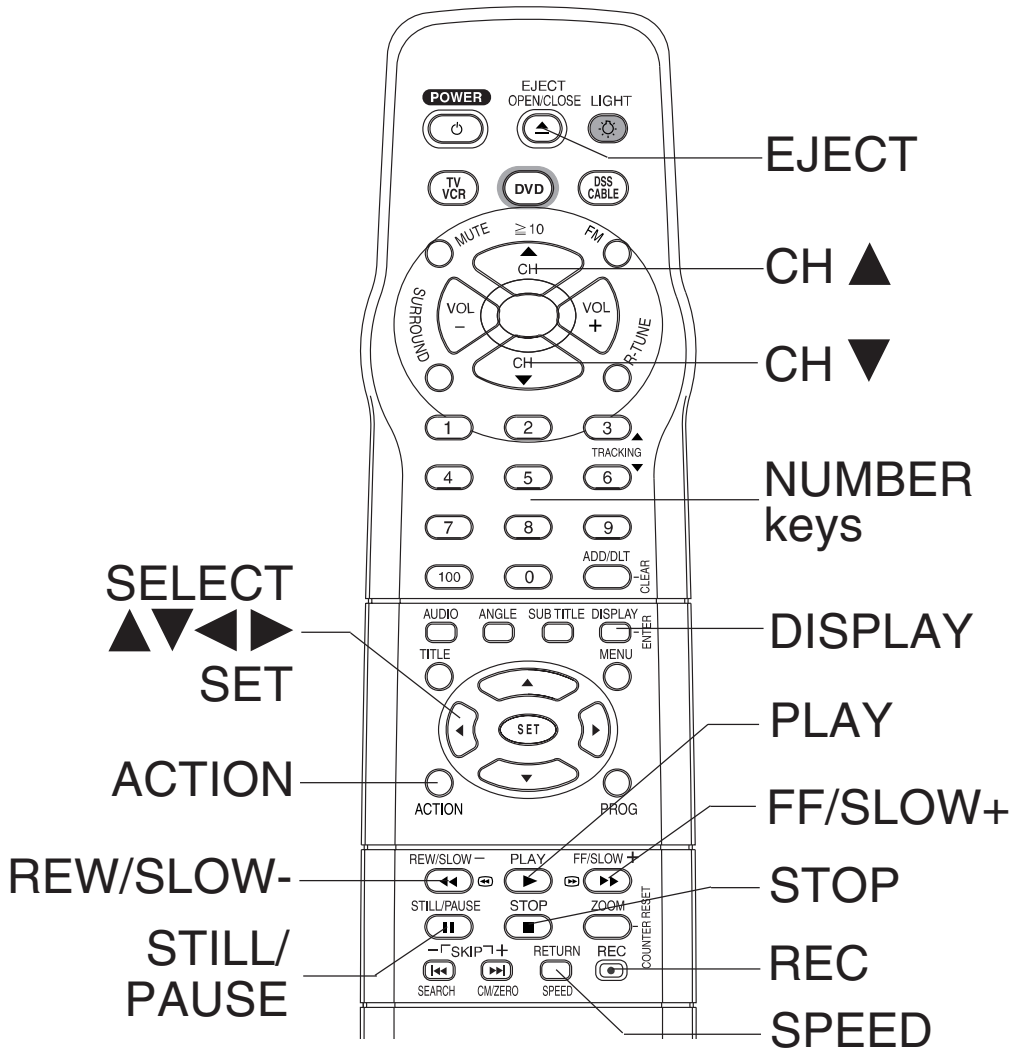

Copy Your Tapes (Dubbing)

***Important:** If a remote control button does not work when pressed, press the TV VCR button on the remote and try the button again.

Connections you'll need to make

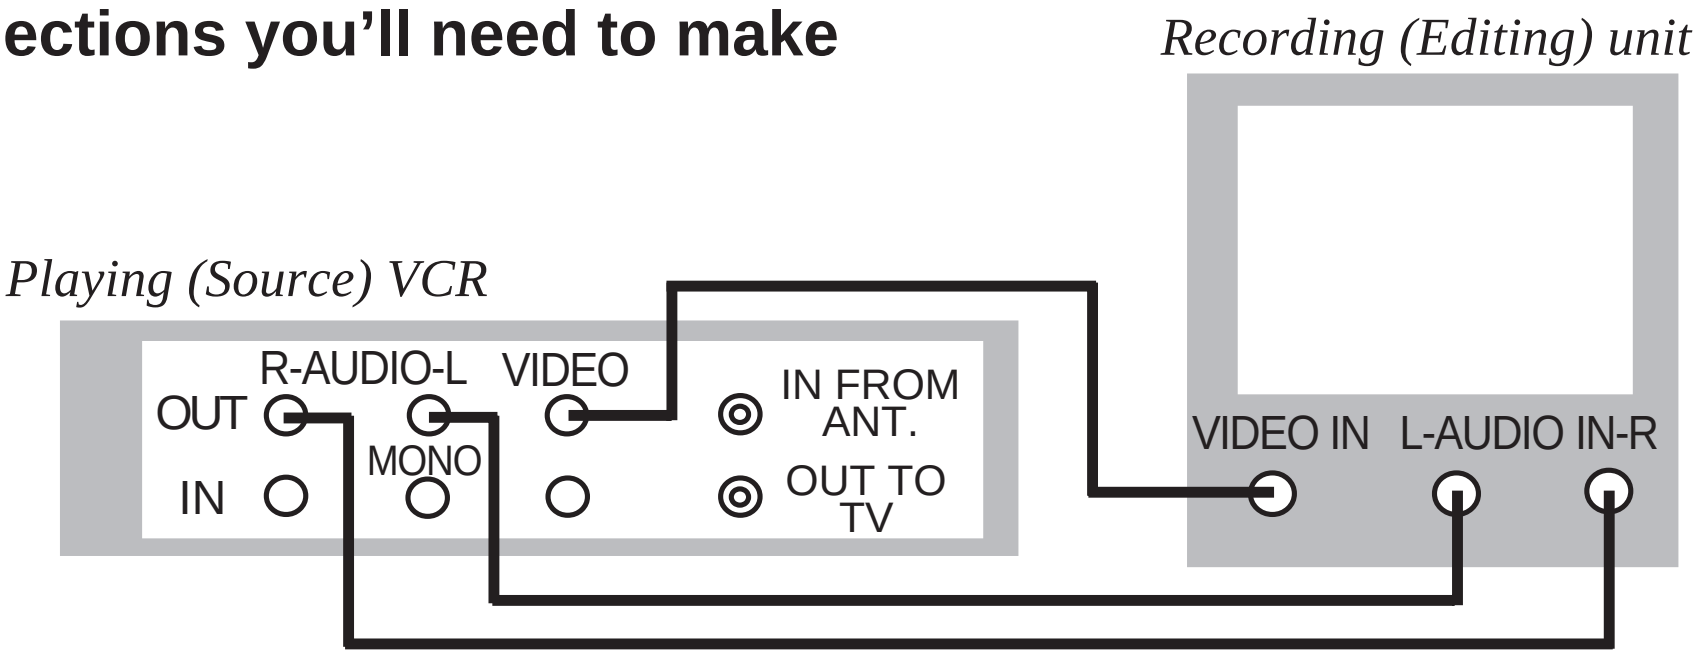
Recording (Editing) unit
Playing (Source) VCR
OUT
IN
R-AUDIO-L
MONO
VIDEO
IN FROM ANT.
OUT TO TV
VIDEO IN
L-AUDIO IN-R

	Playback (Source)	Recording (Editing) unit
1	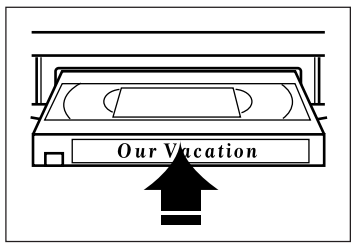 Our Vacation **Insert pre-recorded tape.**	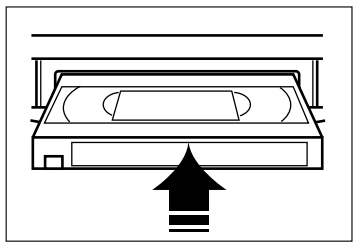 **Insert blank tape with record tab.** • Dubbing tapes protected with Copy Guard will have poor quality results.
2	————	**Select "LINE" mode.** See "Selecting Input Mode" below.
3	 **Press PLAY** then **PAUSE** at starting point to put in Standby mode.	 REC STILL/PAUSE **Press REC**, then **Press STILL/PAUSE** immediately to put in Standby mode.

— (Perform operation of steps 4 and 5 on both units at same time.) —

	Playback (Source)	Recording (Editing) unit
4	 **Press PLAY** to start dubbing.	STILL/PAUSE **Press STILL/PAUSE** to start dubbing.
5	 **Press STOP** to stop dubbing.	 **Press STOP** to stop dubbing.

Caution

- Unauthorized exchanging and/or copying of copyrighted recordings may be copyright infringement.
- Please note that some tapes cannot be dubbed on this unit. Also, it is not possible to dub DVD/Video CD/CD to VHS tape using this unit.

Selecting Input Mode

Method 1:
Press CH ▲▼. The display will change as follows.


1
2
3
LINE
(CABLE)
125
or
(TV)
69

Method 2:
a **Press ACTION** for MAIN MENU.
b **Press ▲▼◀ ▶** to select "TV", then **press SET** for SET UP TV screen.
c **Press ▲▼** to select "INPUT SELECT," and then **press SET** to select "TUNER" or "LINE"
d **Press ACTION** twice to exit this mode.

Basic DVD Operation

☑ Ready Checklist

- ☐ All connections are made. (See page 11.)
- ☐ Your unit is plugged in.
- ☐ If unit is connected to an audio amplifier, turn the stereo system's power on.

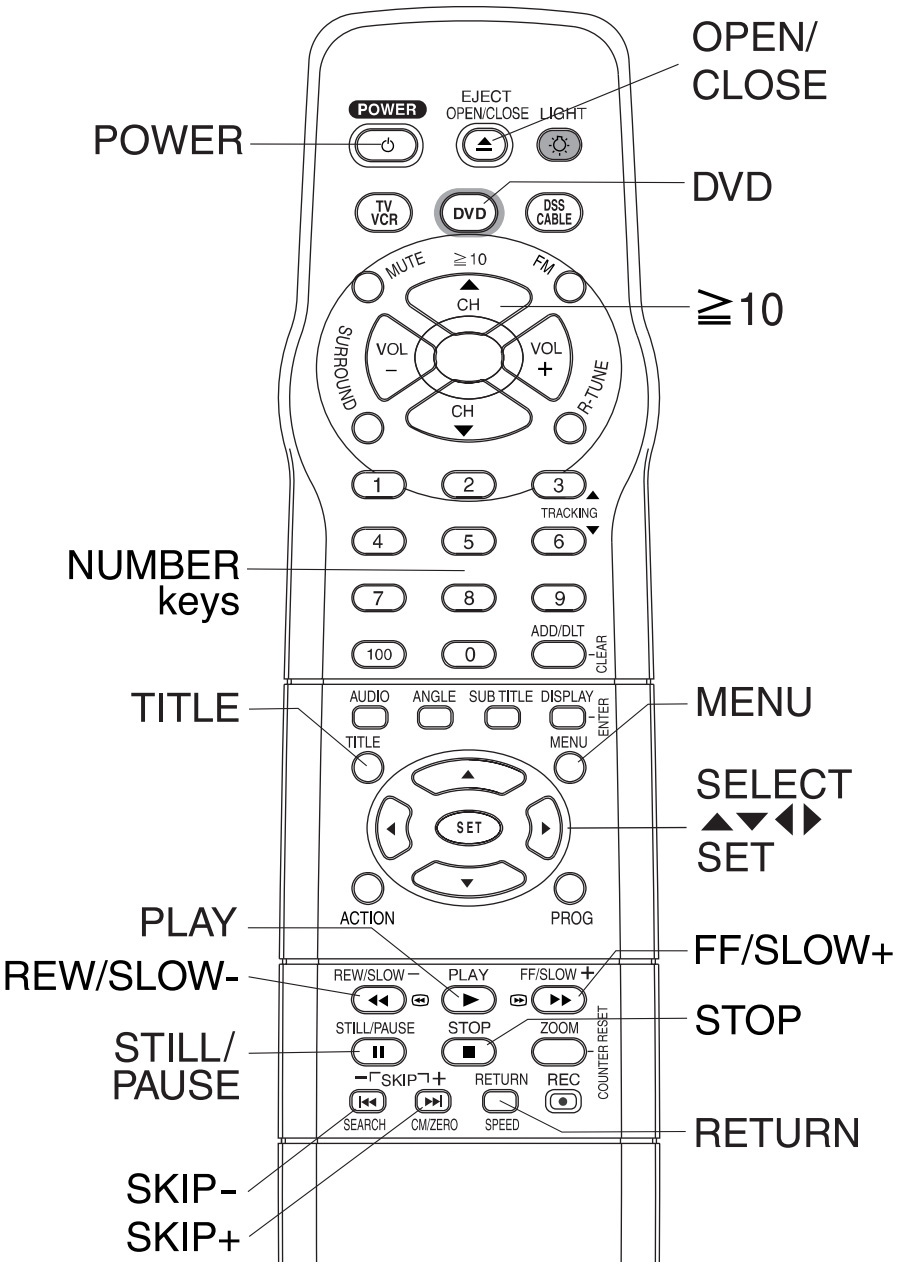
OPEN/CLOSE
POWER
DVD
≧10
NUMBER keys
TITLE
MENU
SELECT ▲▼◀▶
SET
PLAY
REW/SLOW-
FF/SLOW+
STILL/PAUSE
STOP
RETURN
SKIP-
SKIP+

Operation using unit buttons

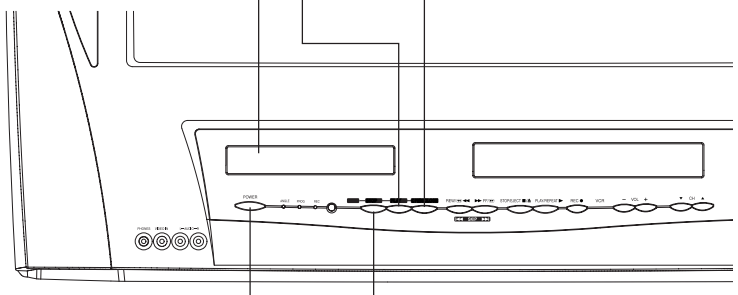

4 Press PLAY.

3 Insert disc.

3•7 Press OPEN/CLOSE.

1 Press POWER

6 Press STOP.

[*1] Interactive DVD...
May include multiple camera angles, stories, etc.

[*2] Video CD with playback control...
Particular scenes or information can be interactively selected from a menu that appears on the screen.

1 Press POWER* on the remote or unit.

2 **Press DVD** to select DVD mode.

- If a disc is already inserted, go to step 4. (Depending on the disc, playback may start automatically.)

3 Insert a disc.

1) **Press OPEN/CLOSE**.
2) Place disc into disc tray.

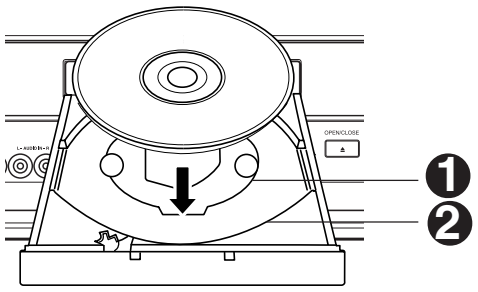

- Hold disc by its edges only (page 7) with printed side up and use guides to place into tray. Use ❶ 3"(8 cm) or ❷ 5" (12 cm) disc.

4 **Press PLAY** to start play.

Disc tray closes automatically.

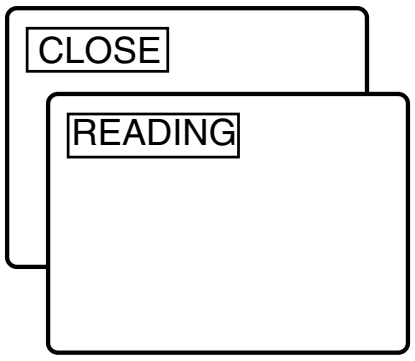
CLOSE
READING

- You may also close the tray by **pressing OPEN/CLOSE**.
- Data reading time differs with each disc.

If an interactive DVD*1 or a Video CD with playback control*2 is used and a TITLE MENU appears, go to step 5.

<Example>

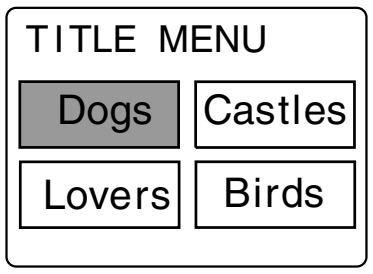
TITLE MENU
Dogs
Castles
Lovers
Birds

5

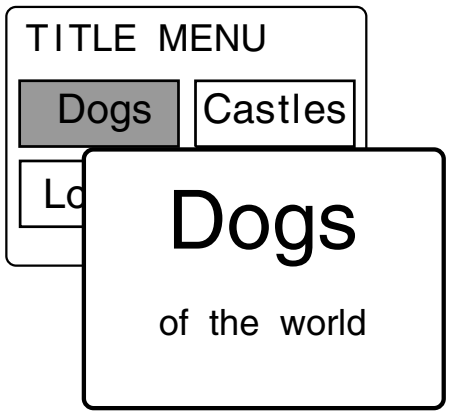
TITLE MENU
Dogs
Castles
Lo
Dogs
of the world

<Example>

Press ▲▼◀ ▶ or **number key(s)** (see below) to select title and **press SET** to play.

Using number key(s) starts play automatically.

<Example>	1 digit number	1 ••• 1
	2 digit number	12 ••• ≧10 1 2
	3 digit number	123 •••100 1 2 3

Press SKIP ▶▶| or |◀◀ to go to next or previous menu screen.

- SKIP function not available with all discs. Please refer to disc jacket for operation information.

To return to MENU (play stops)
Press TITLE, **MENU**, or **RETURN**. (DVD)
Press RETURN. (Video CD)

6 **Press STOP** to stop play.

7 **Press OPEN/CLOSE** to eject the disc.

■ Forward/Reverse rapid scene search

➔ **Press FF/SLOW+** or **REW/SLOW-** during play.

➔ **Press PLAY** to release.

- Starting forward/reverse search during play started from menu on Video CDs may recall menu.
- Search speed, slow at first, increases with each additional press of the button up to 5 levels.

■ Forward/Reverse Chapter/Track Skip

➔ **Press SKIP ▶▶|** or **|◀◀** during play.

Each **press skips** a chapter (DVD) or track (Video CD/CD).

Pressing |◀◀ SKIP once midway through a chapter/track returns to start of that chapter/track. Each additional press skips back one chapter/track.

- **Pressing SKIP ▶▶|** or **|◀◀** during play started from menu on Video CDs may recall menu.



■ Still (Pause) Picture

➔ **Press STILL/PAUSE** during play.

➔ **Press PLAY** to release.

- **DVD/Video CD :** The unit will enter Still picture mode.
- **CD :** The unit will enter Pause mode.

■ Frame by Frame picture (DVD/Video CD)

➔ **Press STILL/PAUSE** in Still mode.

➔ **Press PLAY** to release.

- Each press advances picture one frame.
- Hold down for consecutive frame advance.
- Whether pictures are advanced by “FRAME” or “FIELD” is selected automatically (see page 61).

■ Slow Motion picture (DVD/Video CD)

➔ **Press FF/SLOW+** or **REW/SLOW-** (DVD only) in Still mode.

➔ **Press PLAY** to release.

- Slow motion speed, slow at first, is increased with each additional press of the button up to 5 levels.
- Reverse slow motion is not available for video CDs.
- When ⊘ appears on the screen while a button is being operated, it means that the corresponding operation is prohibited by the unit or the disc.

RESUME function

The unit memorizes the point where STOP is pressed (▶ flashes on screen).
Press PLAY to resume play from this point.
Pressing STOP again or opening the tray cancels RESUME, however, RESUME is not canceled when power is turned off and on.

- RESUME works only with discs for which elapsed play time is displayed during play.

Auto-Power Off function

Power turns off after unit has been in Stop mode (DVD) for about 5 minutes.

Enjoy Video CDs featuring playback control without using menus (Video CDs only)

1. Do steps 1-4 (previous page).
   When menu appears, **press STOP**.
2. **Press number key(s)** to select desired track (play begins).
   - Check disc for track numbers.
   - Press “1” to start at beginning of disc.

To Resume Menu use,
Press STOP, and **press PLAY**, the menu screen will be displayed.
Now, go to step 5 (previous page).

Notes

- Please read the disc jacket for operation information.
- If a single sided disc is placed in upside down, “PLEASE CHECK THE DISC, AND FOR STAINS OR SCRATCHES ON DISC” is displayed.
- Remove disc and press unit POWER off when not in use.
- Disc continues to rotate with menu displayed even after play is done. Press STOP to clear menu display when finished with menu.

TV Operation

***Important:** If a remote control button does not work when pressed, press the TV/VCR button on the remote and try the button again.

1 **Press POWER* on the remote or unit.**

☑ Ready Checklist

☐ All connections are made. (See page 11).

☐ Your unit is plugged in.

2 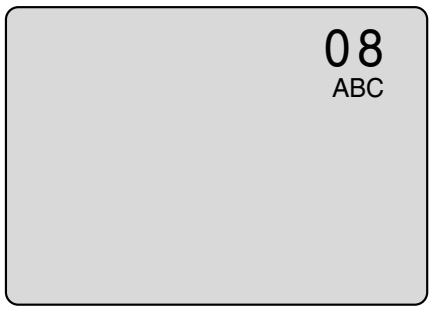

Use CH ▲▼ or **number keys** to select a channel.

3 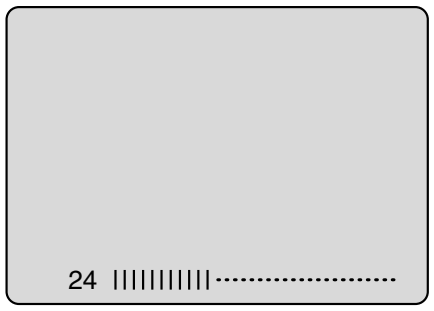

Press VOL + or **VOL -** to adjust volume.

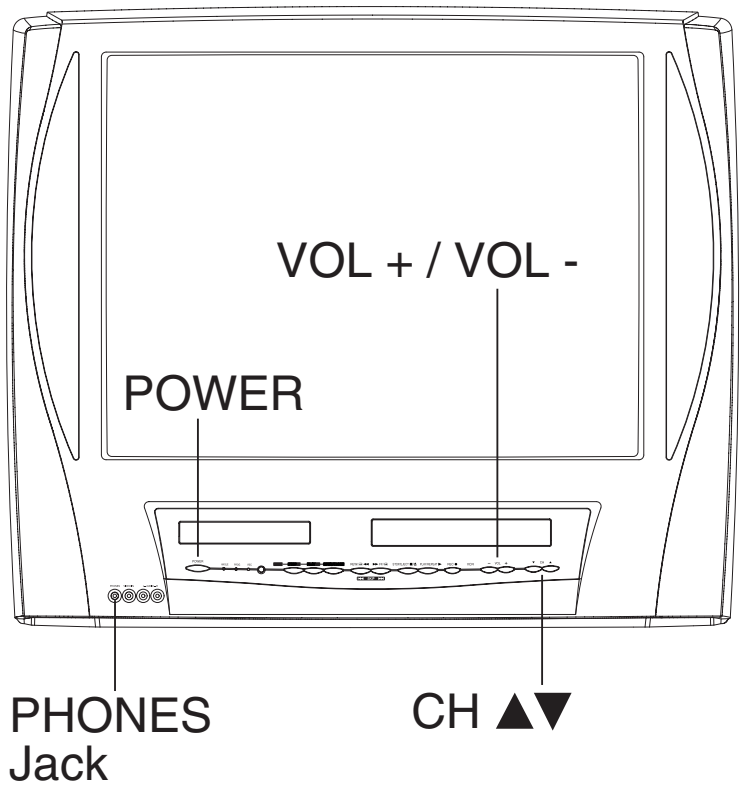

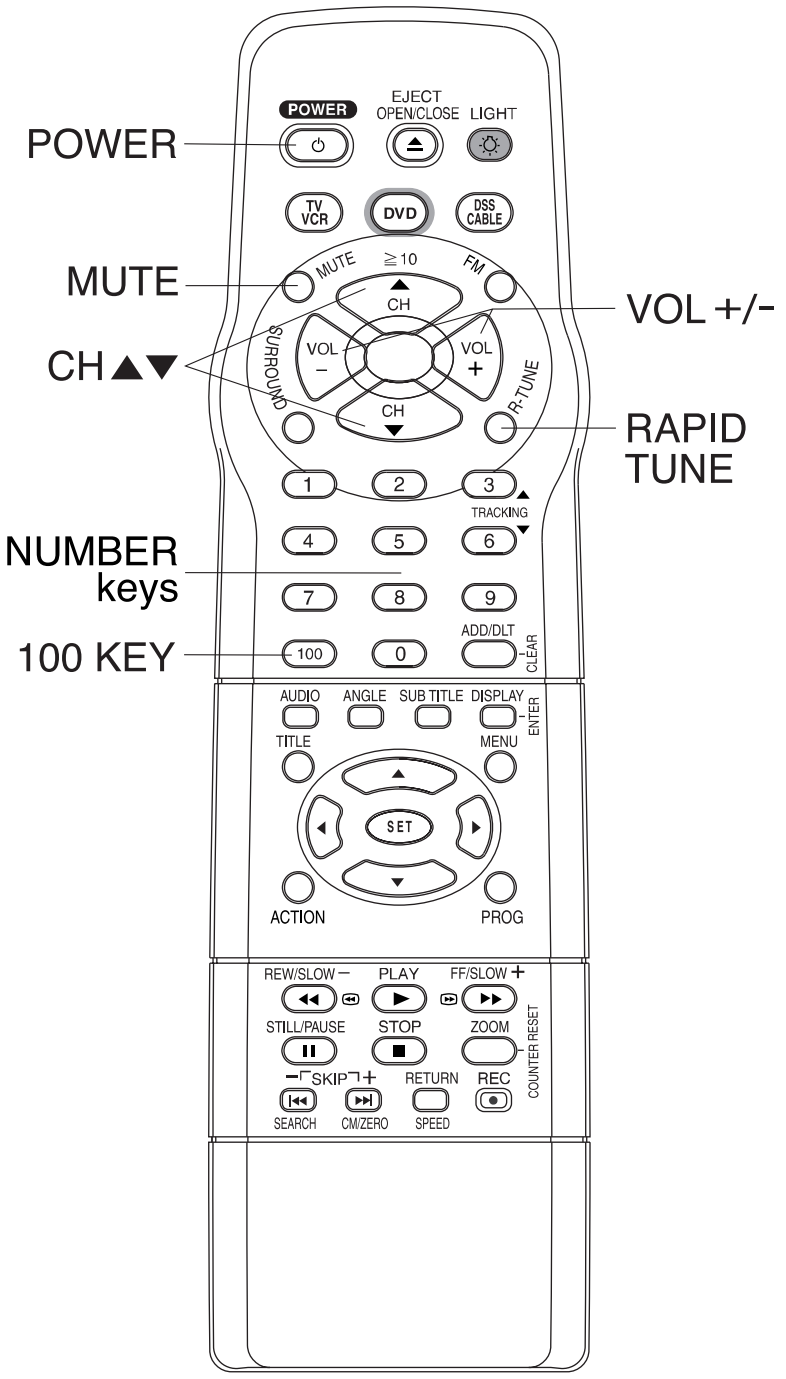

Using the 100 key

When selecting CABLE channels 100 to 125 with the number keys, first press the 100 key, and then enter the remaining two digits.

Rapid Tune

Press R-TUNE to display the last channel you were watching.

Audio Mute

Press MUTE to instantly mute the sound.
Press again to restore the previous sound level.

Phones

Connect an earphone (not supplied) or headphones (not supplied) to the Phones Jack.

MTS Broadcast/TV Stereo System

Equipped with dbx® -TV Noise Reduction for true MTS reproduction. dbx® -TV Noise Reduction is required for good stereo separation and audio fidelity. dbx® is a registered trademark, and is licensed by dbx® Technology Licensing.

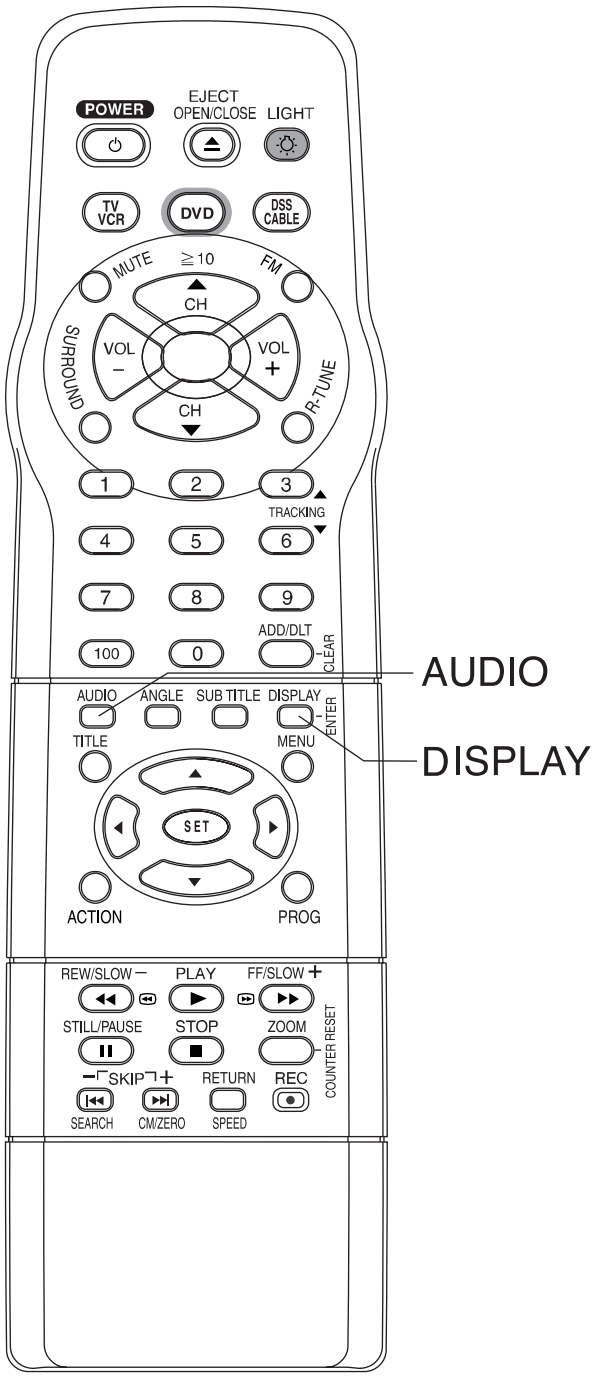
POWER
EJECT OPEN/CLOSE
LIGHT
TV VCR
DVD
DSS CABLE
MUTE
≧10
FM
CH
VOL
SURROUND
R-TUNE
1
2
3
4
5
6
7
8
9
TRACKING
ADD/DLT
100
0
CLEAR
AUDIO
ANGLE
SUB TITLE
DISPLAY
ENTER
TITLE
MENU
SET
ACTION
PROG
REW/SLOW −
PLAY
FF/SLOW +
STILL/PAUSE
STOP
ZOOM
COUNTER RESET
−SKIP+
RETURN
REC
SEARCH
CM/ZERO
SPEED
AUDIO
DISPLAY

Receivable Broadcast Types

The following are possible audio broadcast types and on-screen displays. The signal being received is indicated with an “ ((” mark while the selected audio mode is indicated with an arrow. To change the audio mode for these broadcasts, see the “Select Audio Mode for TV Viewing” section (below.)

Press DISPLAY to display the broadcast signal being received.

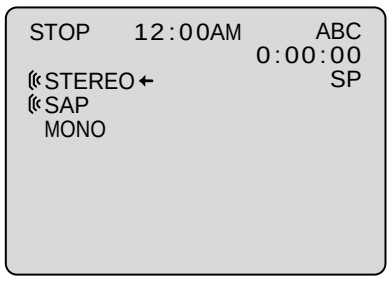

```
STOP    12:00AM        ABC
                   0:00:00
((STEREO ←              SP
((SAP
  MONO
```

MTS Stereo and SAP broadcast

Multi-channel Television Sound Stereo (main language) and Secondary Audio Program (sub language) broadcasts are being received simultaneously.
Select the STEREO or SAP audio mode.

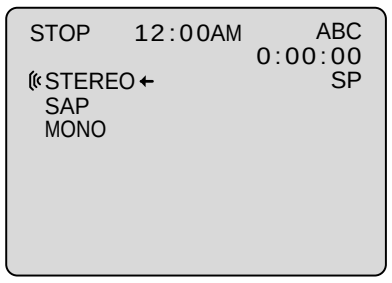

```
STOP    12:00AM        ABC
                   0:00:00
((STEREO ←              SP
  SAP
  MONO
```

MTS Stereo broadcast

Multi-channel Television Sound Stereo broadcast. Select STEREO audio mode.

- If stereo broadcast is weak and the display flickers, select MONO audio mode for possibly better results.

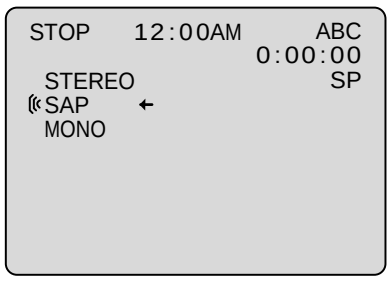

```
STOP    12:00AM        ABC
                   0:00:00
  STEREO                SP
((SAP      ←
  MONO
```

SAP broadcast

Secondary Audio Program (sub language).
Select SAP audio mode for the sub language.

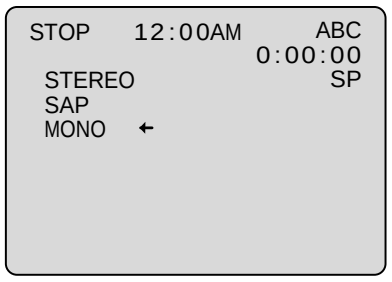

```
STOP    12:00AM        ABC
                   0:00:00
  STEREO                SP
  SAP
  MONO     ←
```

MONO broadcast

Normal monaural sound broadcast.

Audio Mode for TV Viewing

Press AUDIO to select the desired audio mode as described above.
(Arrow shows selection.)

- Each press of AUDIO will change the audio mode as shown below.
- “SAP” is selected with first press of AUDIO.

< Example >

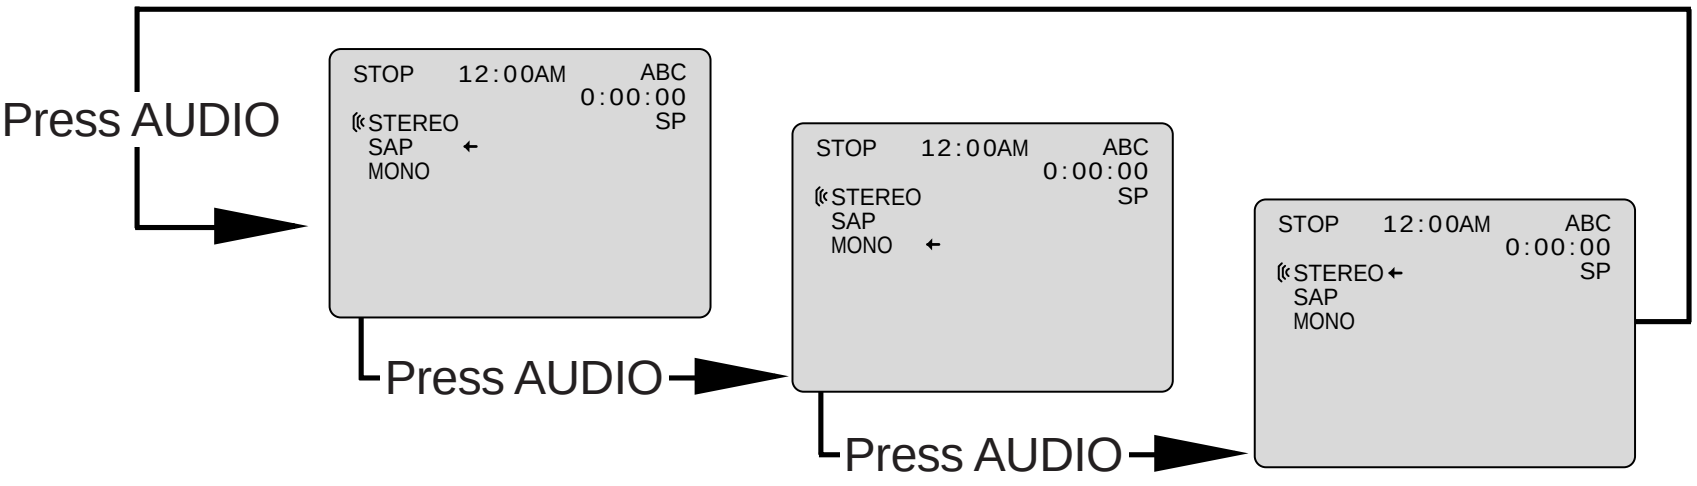
Press AUDIO
STOP 12:00AM ABC
0:00:00
((STEREO SP
SAP ←
MONO
Press AUDIO
STOP 12:00AM ABC
0:00:00
((STEREO SP
SAP
MONO ←
Press AUDIO
STOP 12:00AM ABC
0:00:00
((STEREO ← SP
SAP
MONO

Closed Caption System

Closed Caption is ...

This multi-use system not only allows the hearing impaired to enjoy selected programs, but also makes useful information from TV stations available to everyone.

Closed Caption Mode Feature

1 **Press ACTION*** to display MAIN MENU.

2

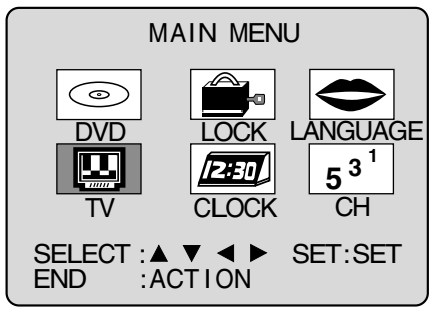
MAIN MENU
DVD LOCK LANGUAGE
TV CLOCK CH
SELECT : ▲ ▼ ◄ ► SET : SET
END : ACTION

1) **Press ▲▼◄►** to select “TV.”
2) **Press SET** to display SET UP TV screen.

3

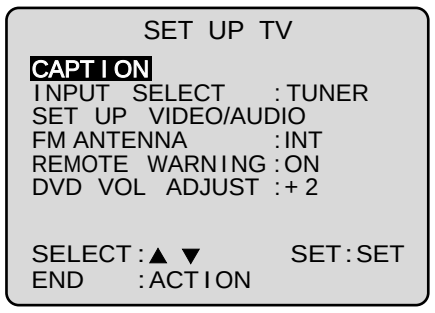
SET UP TV
CAPTION
INPUT SELECT : TUNER
SET UP VIDEO/AUDIO
FM ANTENNA : INT
REMOTE WARNING : ON
DVD VOL ADJUST : + 2
SELECT : ▲ ▼ SET : SET
END : ACTION

1) **Press ▲▼** to select “CAPTION”.
2) **Press SET** to display CAPTION screen.

4

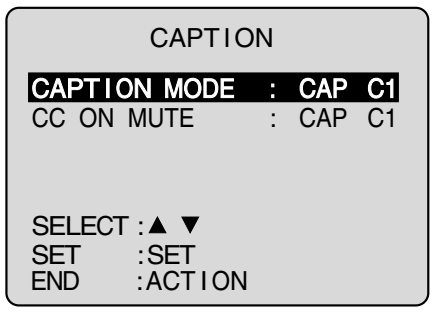
CAPTION
CAPTION MODE : CAP C1
CC ON MUTE : CAP C1
SELECT : ▲ ▼
SET : SET
END : ACTION

1) **Press ▲▼** to select CAPTION MODE.
2) **Press SET** repeatedly to select mode. (See left.)



---

5 **Press ACTION** three times to return to the normal screen.

Recording and Playing Back a Closed Caption/ Text Program

Record : Record normally. Closed Caption/Text signal, if present, is recorded automatically.

Playback : Start playback. Do above steps to select desired caption mode.

Closed Caption Mode Selections

Caption Mode: CAP C1 or C2
A narration of selected TV programs is displayed.
Check TV program listings for CC (Closed Caption) broadcasts.

Caption Mode: TEXT C1 or C2
The lower half of the screen will be blocked out. When the TV station broadcasts information, such as program listings, it will appear in this space.

Caption Mode: OFF
Closed Caption /Text narration will not be displayed.

NOTE :
The closed caption or text signal may be broadcast over C1, C2, or both.
Also, text contents can vary so you may wish to try different settings.

*Important: If a remote control button does not work when pressed, press the TV/VCR button on the remote and try the button again.

Caption On Mute Feature

Closed Caption narration, if available, is displayed when MUTE button is pressed for silence.

1 **Press ACTION**
to display MAIN MENU.

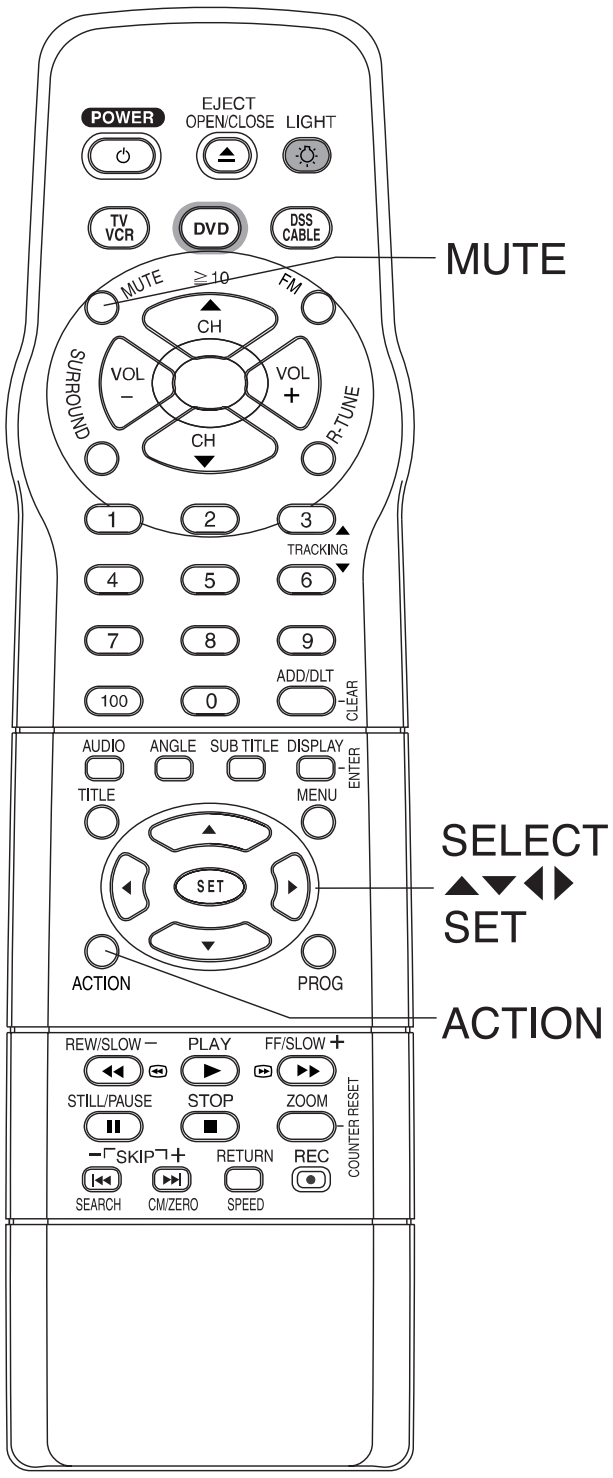
POWER
EJECT OPEN/CLOSE
LIGHT
TV VCR
DVD
DSS CABLE
MUTE
≥10
FM
CH
SURROUND
VOL –
VOL +
R-TUNE
1
2
3
TRACKING
4
5
6
7
8
9
100
0
ADD/DLT
CLEAR
AUDIO
ANGLE
SUB TITLE
DISPLAY
ENTER
TITLE
MENU
SET
ACTION
PROG
REW/SLOW –
PLAY
FF/SLOW +
STILL/PAUSE
STOP
ZOOM
COUNTER RESET
–SKIP+
RETURN
REC
SEARCH
CM/ZERO
SPEED
MUTE
SELECT ▲▼◀▶
SET
ACTION

2

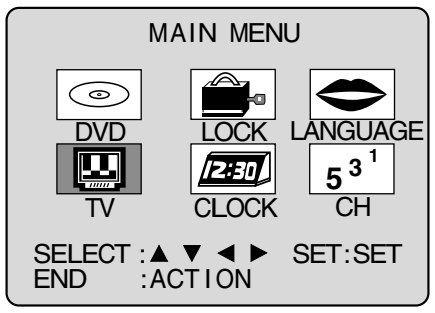
```
MAIN MENU
DVD    LOCK    LANGUAGE
TV     CLOCK   CH
SELECT :▲ ▼ ◀ ▶   SET:SET
END    :ACTION
```

1) **Press ▲▼◀ ▶** to select "TV."
2) **Press SET** to display SET UP TV screen.

3

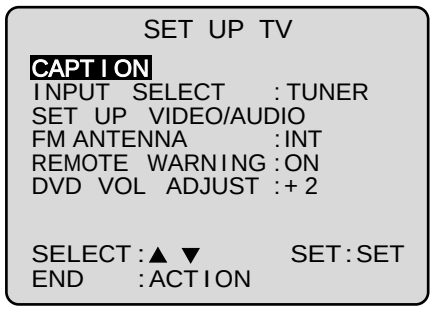
```
SET UP TV
CAPTION
INPUT SELECT      :TUNER
SET UP VIDEO/AUDIO
FM ANTENNA        :INT
REMOTE WARNING    :ON
DVD VOL ADJUST    :+2

SELECT :▲ ▼         SET:SET
END    :ACTION
```

1) **Press ▲▼** to select "CAPTION".
2) **Press SET** to display CAPTION screen.

4

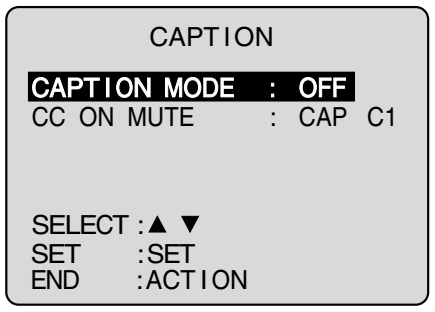
```
CAPTION
CAPTION MODE   :  OFF
CC ON MUTE     :  CAP C1

SELECT :▲ ▼
SET    :SET
END    :ACTION
```

1) **Press ▲▼** to select CAPTION MODE.
2) **Press SET** repeatedly to select "OFF."

5

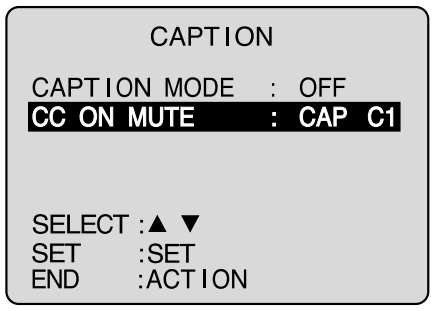
```
CAPTION
CAPTION MODE   :  OFF
CC ON MUTE     :  CAP C1

SELECT :▲ ▼
SET    :SET
END    :ACTION
```

1) **Press ▲▼** to select CC ON MUTE.
2) **Press SET** repeatedly to select desired mode.

- Each press of **SET** will change the display as shown left.
- The caption may be broadcast over CAP C1 or C2.


NO
CAP C1
CAP C2

6 **Press ACTION** three times
to return to the normal screen.

7 **Press MUTE** to mute the sound and display closed captioning.
- To cancel, press MUTE again.

Note

- When a disc supporting closed caption is used, the subtitle and the closed caption may overlap. In this case, turn the subtitle or caption on mute mode off. (See page 48.)

TV Timer Features

ON-TIMER with Alarm

This unit can be set to automatically power on in one of 4 modes (TV, VCR Playback, FM radio, or DVD/Video CD/CD.) You can also combine the On-Timer with a one minute alarm that gradually increases in volume.

1 **Press PROG*** to display SET PROGRAM screen.

2

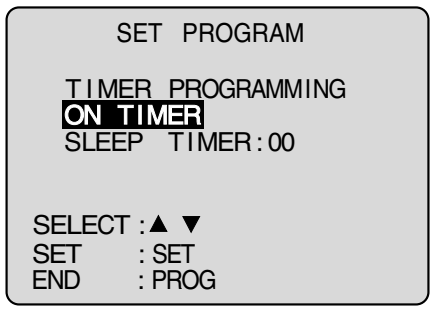

```
SET PROGRAM

TIMER PROGRAMMING
ON TIMER
SLEEP TIMER:00

SELECT :▲ ▼
SET    : SET
END    : PROG
```

1) **Press ▲▼** to select "ON TIMER."
2) **Press SET** to display ON TIMER screen.

3

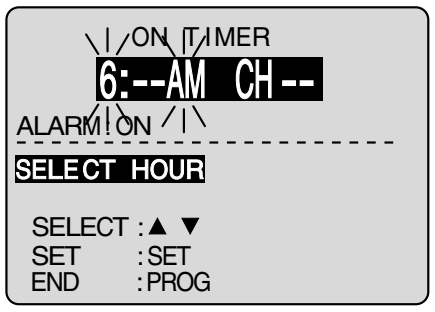

```
ON TIMER
6:--AM CH--
ALARM:ON
SELECT HOUR
SELECT :▲ ▼
SET    :SET
END    :PROG
```

- ON-TIMER mode selection order



1) **Press ▲▼** to select desired settings.
2) **Press SET** to set the ON-TIMER TIME or ON-TIMER mode.

- Make sure a tape is inserted if Playback mode is selected.
- Make sure a disc is inserted if DVD (DVD/Video CD/CD) mode is selected.
- See "FM Radio" on pages 28 and 29 for instructions on how to preset FM stations.

4

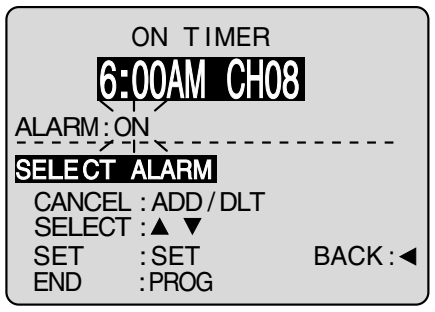

```
ON TIMER
6:00AM CH08
ALARM:ON
SELECT ALARM
CANCEL :ADD/DLT
SELECT :▲ ▼
SET    :SET          BACK:◀
END    :PROG
```

Press ▲▼ to select ALARM "ON" or "OFF."

When "ON" is selected,
an alarm will gradually increase in volume for one minute or until canceled by pressing any button (including VOL + -).

To Make Corrections,
use **▲▼** and **◀ ▶** to move back and correct.

---

5 **Press PROG** to set ON TIMER.
- "ON TIMER SET" is displayed.
- PROG-TIMER Indicator lights up on the unit.

To Cancel ON-TIMER set,
Repeat steps **1** and **2**. Then, **press ADD/DLT** to clear the time in step **3**. Now, **press PROG** to end.
"ON TIMER END" briefly appears on-screen.

Ready Checklist

☐ The clock is set to correct time.

Sleep Timer

This unit can be set for auto power off.

1 **Press PROG** to display SET PROGRAM screen.

2

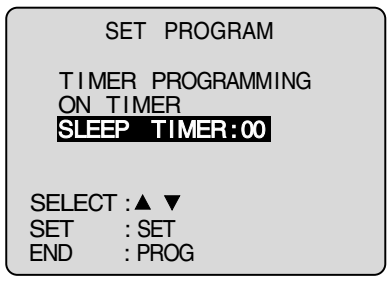

```
SET PROGRAM

TIMER PROGRAMMING
ON TIMER
SLEEP TIMER:00

SELECT :▲ ▼
SET    : SET
END    : PROG
```



1) **Press ▲▼** to select SLEEP TIMER.
2) **Press SET** repeatedly to select the desired time.

To cancel,
press SET repeatedly until 00 appears.

---

3 **Press PROG** to return to the normal screen.
- **Pressing DISPLAY** with sleep timer set displays remaining time.

Note

If no button on the remote or unit (including a button used to turn off the alarm) is pressed within 60 minutes after unit turns itself on, it will turn itself back off.

On-Screen Display (OSD)

***Important:** If a remote control button does not work when pressed, press the TV/VCR button on the remote and try the button again.

TV/VCR Status & Clock Display

Press DISPLAY
to display or remove the overlay.

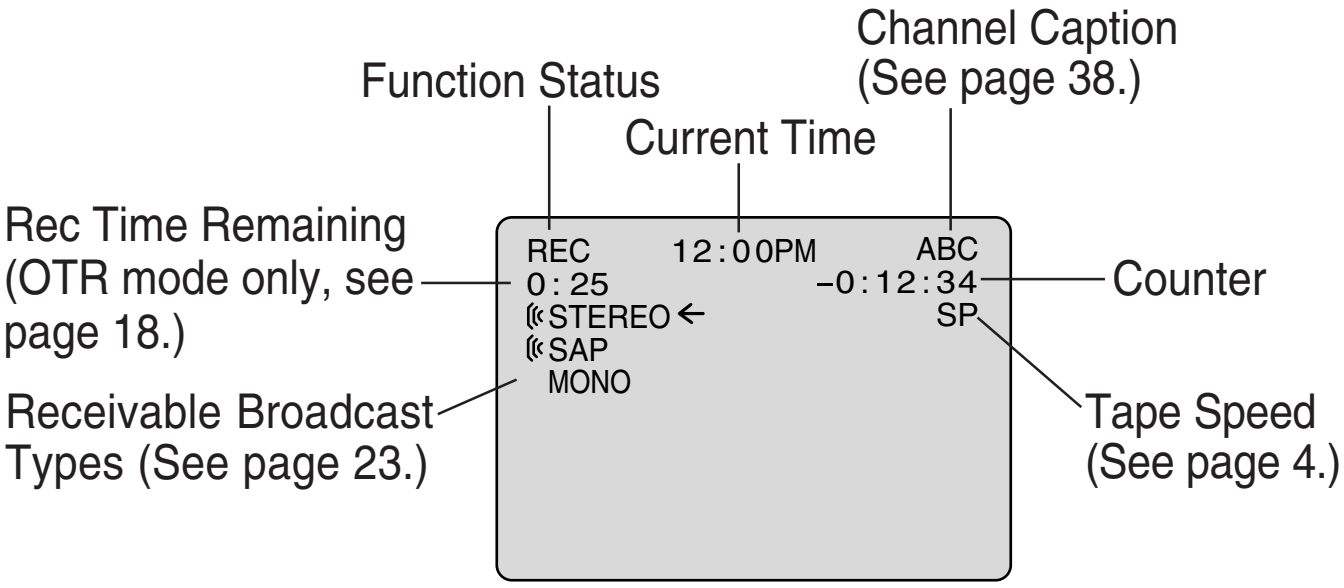
Function Status
Current Time
Channel Caption (See page 38.)
Rec Time Remaining (OTR mode only, see page 18.)
Receivable Broadcast Types (See page 23.)
Counter
Tape Speed (See page 4.)
REC
12:00PM
ABC
0:25
-0:12:34
SP
STEREO
SAP
MONO

Blue Screen Display

Whenever a blank section of a tape comes up in Play mode, or when the selected channel has no broadcast signal with the Weak Signal Display Feature set to “OFF” (see page 39), the screen will turn solid blue.

Channel & Function Display

When a function button is pressed (PLAY, FF, etc.) or you change channels, the unit mode or channel number will be displayed. (Some station names may also appear if Channel Caption is set. See page 38.)

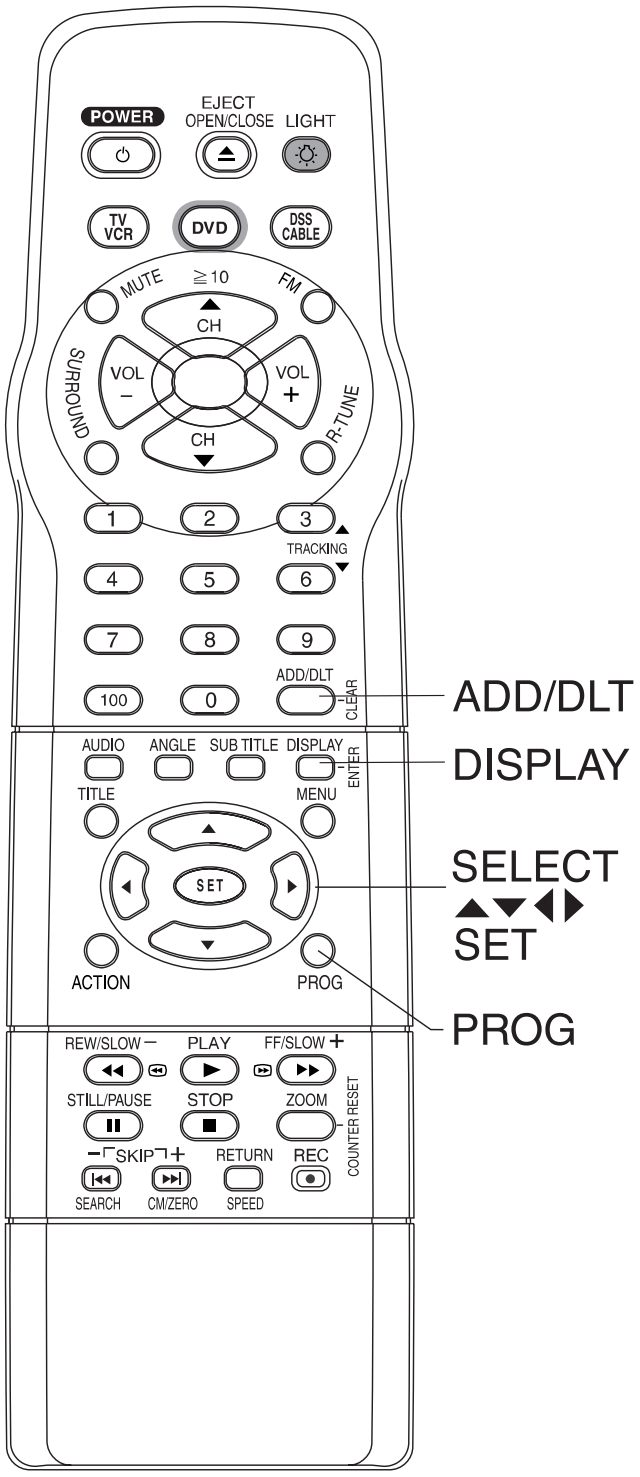
POWER
EJECT OPEN/CLOSE
LIGHT
TV VCR
DVD
DSS CABLE
MUTE
≧10
FM
CH
VOL −
VOL +
SURROUND
R-TUNE
1
2
3
TRACKING
4
5
6
7
8
9
ADD/DLT
CLEAR
100
0
AUDIO
ANGLE
SUB TITLE
DISPLAY
ENTER
TITLE
MENU
SET
ACTION
PROG
REW/SLOW −
PLAY
FF/SLOW +
STILL/PAUSE
STOP
ZOOM
COUNTER RESET
− SKIP +
RETURN
REC
SEARCH
CM/ZERO
SPEED
ADD/DLT
DISPLAY
SELECT
▲▼◀▶
SET
PROG

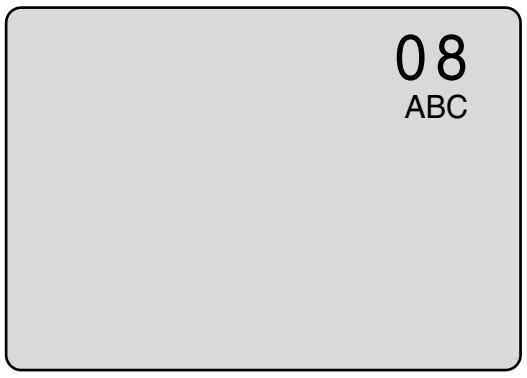

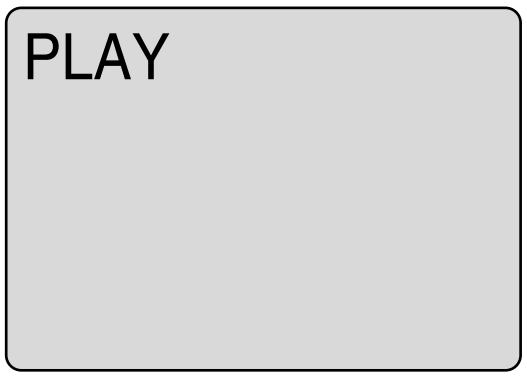

FM Radio

FM Radio is ...

This unit has an FM radio with built-in antenna, 9 station preset, and a band range of 87.5 ~ 108.1 MHz. You can even set the On-Timer (page 26) to wake up to your favorite radio station.

FM Radio Setup

1 **Press FM** on the remote to display FM radio mode.

2 **Press a number key* (1~9)** to select the FM preset number.

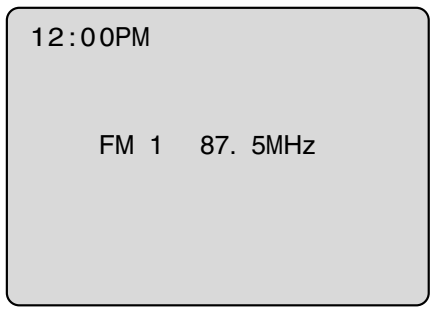

12:00PM

FM 1 87. 5MHz

3 1) **Press CH ▲▼** to select the desired radio station. (Each press changes frequency 200 KHz.)

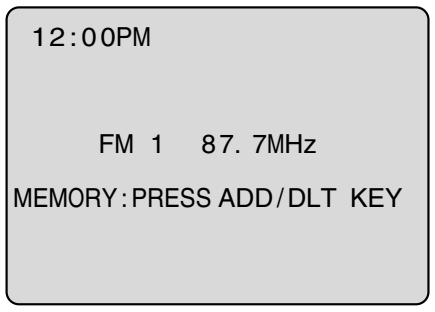

12:00PM

FM 1 87. 7MHz

MEMORY:PRESS ADD/DLT KEY

2) **Press ADD/DLT** to set the radio station.

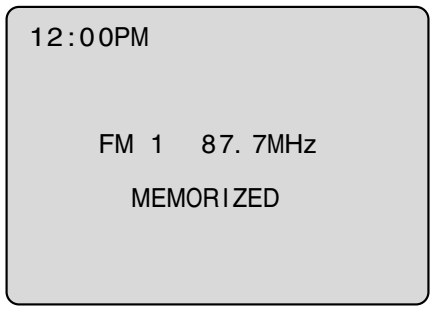

12:00PM

FM 1 87. 7MHz

MEMORIZED

To Make Corrections, select station with a number key, then do step **3** again.

To exit FM mode, press TV/VCR or **DVD** on the remote.

Hold down CH ▲ or **▼** for a few seconds, then release to quickly scan for FM stations in your area.

- To cancel, **press CH ▲** or **▼** while in search mode.

FM Antenna Setup

Make sure FM tuning is done correctly (see FM Radio Setup).

1 **Press ACTION** to display MAIN MENU.

2 1) **Press ▲▼◀ ▶** to select “TV.”

2) **Press SET** to display SET UP TV screen.

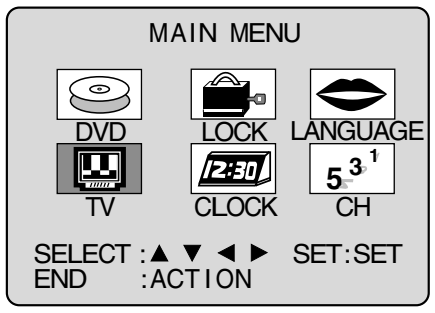

Continued on next page.

*Important: If a remote control button does not work when pressed, press the FM button on the remote and try the button again.

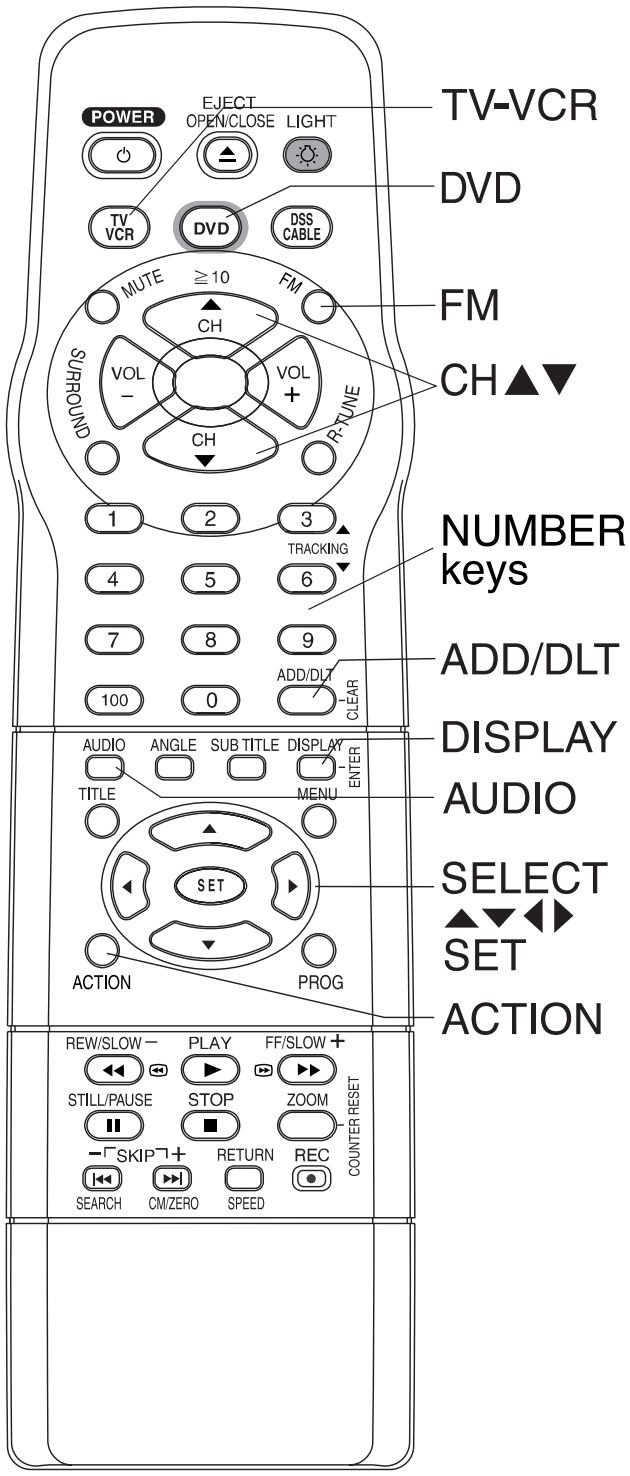
TV-VCR
DVD
FM
CH▲▼
NUMBER keys
ADD/DLT
DISPLAY
AUDIO
SELECT ▲▼◀▶
SET
ACTION
POWER
EJECT OPEN/CLOSE
LIGHT
TV VCR
DVD
DSS CABLE
MUTE
≧10
FM
CH
VOL −
VOL +
SURROUND
R-TUNE
CH
1
2
3
TRACKING
4
5
6
7
8
9
ADD/DLT
100
0
CLEAR
AUDIO
ANGLE
SUB TITLE
DISPLAY
ENTER
TITLE
MENU
SET
ACTION
PROG
REW/SLOW −
PLAY
FF/SLOW +
STILL/PAUSE
STOP
ZOOM
COUNTER RESET
− SKIP +
RETURN
REC
SEARCH
CM/ZERO
SPEED

3

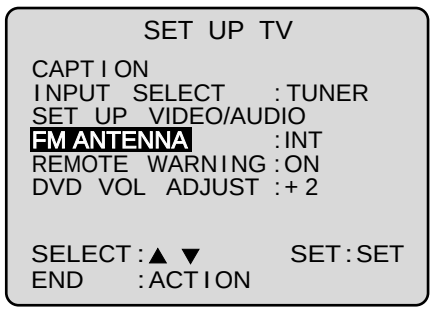

```
            SET UP TV
CAPTION
INPUT SELECT        : TUNER
SET UP VIDEO/AUDIO
FM ANTENNA          : INT
REMOTE WARNING      : ON
DVD VOL ADJUST      : + 2

SELECT : ▲ ▼           SET : SET
END    : ACTION
```

1) **Press ▲▼** to select FM ANTENNA.
2) **Press SET** to select “INT (INTERNAL)” or “EXT (EXTERNAL)” whichever sounds the best.

- ■ **For cable TV users ➔ “INT”**
- ■ **For antenna users ➔ “EXT”**

4

Press ACTION twice to end setup.

Using FM Radio

1

Press FM on the remote to display FM radio mode.

2

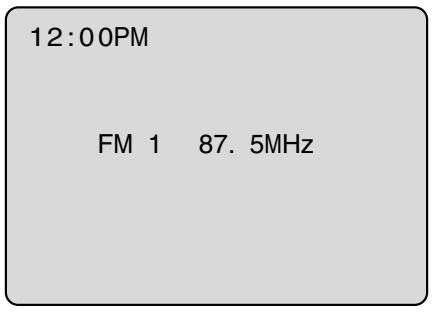

```
12:00PM

      FM 1    87. 5MHz
```

Press a number key (1~9) to select a preset FM number (see FM Radio Setup on page 28).

To exit FM mode, press TV VCR or **DVD** on the remote.

Audio Mode for FM Radio

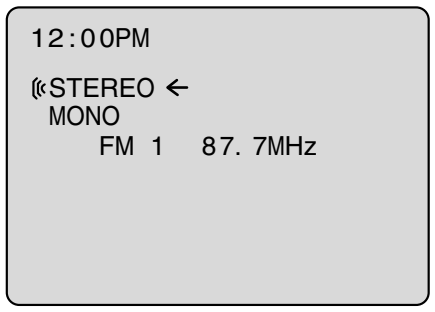

```
12:00PM

((STEREO ←
  MONO
      FM 1    87. 7MHz
```

Press AUDIO repeatedly to select “STEREO” or “MONO” in FM Radio mode.

Notes

- FM radio cannot be recorded on a Video cassette.
- You may get better reception by repositioning the unit.
- You cannot select FM Radio mode during playback or record, or while a blue back screen (PROG, ACTION, MENU) is displayed.
- Once stations are set, the selected station and current time are displayed when FM Radio mode is entered.
  To remove time, press DISPLAY. If DISPLAY is pressed again, the unit status screen appears.

Timer Recording

You can set up to 8 programs to be recorded while you are away.

1 **Press PROG*** to display SET PROGRAM screen.

2

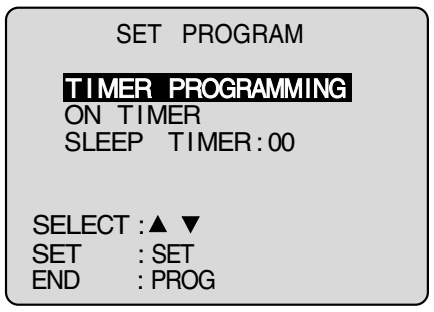

```
SET  PROGRAM

TIMER  PROGRAMMING
ON  TIMER
SLEEP  TIMER:00

SELECT :▲ ▼
SET     : SET
END     : PROG
```

1) **Press ▲▼** to select TIMER PROGRAMMING.
2) **Press SET** to display screen.

- If a program is already in memory, **press ▲▼**, and **SET** to select an unused program number.

3

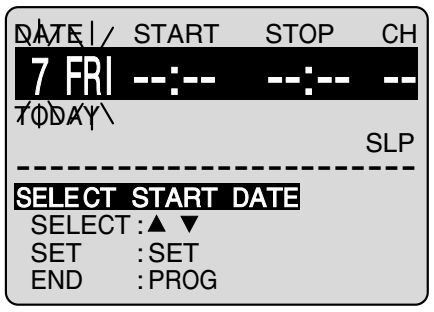

```
DATE          START     STOP     CH
 7 FRI        --:--     --:--    --
TODAY
                                 SLP
--------------------------------
SELECT  START  DATE
 SELECT :▲ ▼
 SET    :SET
 END    :PROG
```

Press ▲▼ to select and **SET** or **◀▶** to set the recording DATE.

- 1~31 = One time
- DAILY = MON~FRI
- WEEKLY SUN~SAT = Same time once a week

Example

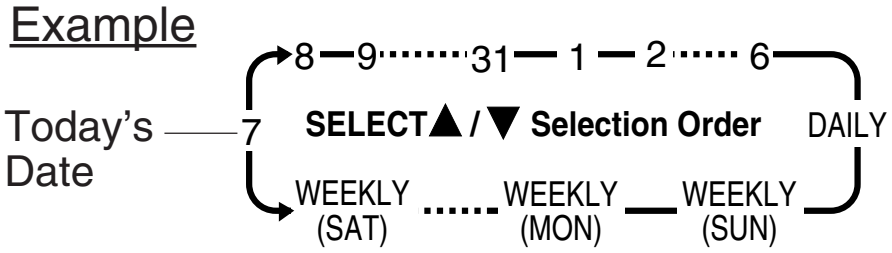

Repeat step 3 to set:
- start time, stop time
- Channel (or LINE for outside source)
- Speed (SP, LP, SLP)

4

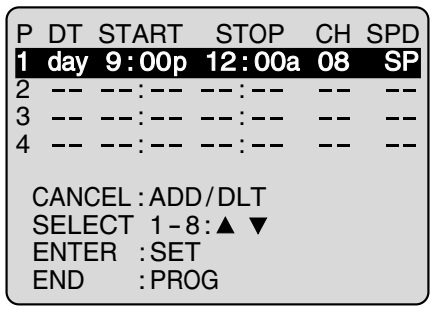

```
P  DT   START   STOP    CH  SPD
1  day  9:00p   12:00a  08   SP
2  --   --:--   --:--   --   --
3  --   --:--   --:--   --   --
4  --   --:--   --:--   --   --

 CANCEL :ADD/DLT
 SELECT  1-8:▲ ▼
 ENTER  :SET
 END    :PROG
```

Press PROG to end the program.

To Enter More Programs, press ▲▼ to select and **SET** to set a blank program number, and then repeat step 3.

---

5 **Press PROG** twice to exit this mode.

- If you're using a cable box, make sure that it is tuned to the desired channel and the power is left on for timer recording.
- PROG TIMER Indicator lights up on the unit.

☑ Ready Checklist

☐ All connections are made.
☐ Your unit is plugged in.
☐ The clock is set to correct time.
☐ The tape is long enough.
☐ The record tab is in place.

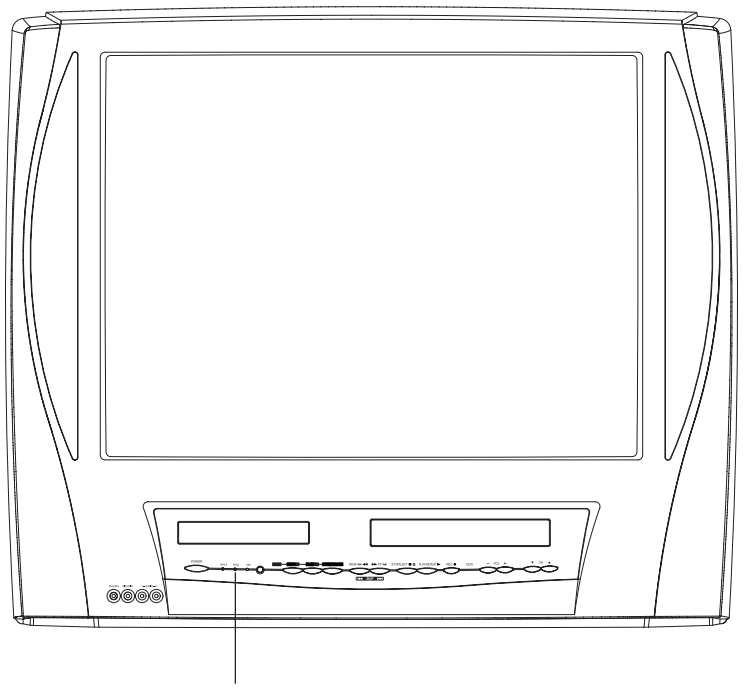

⁎Important: If a remote control button does not work when pressed, press the TV/VCR button on the remote and try the button again.

Cancel a Timer Recording: (Recording is in progress)

Hold down STOP for a few seconds to cancel the Timer Recording.

- Any future daily or weekly recordings will be performed as programmed.

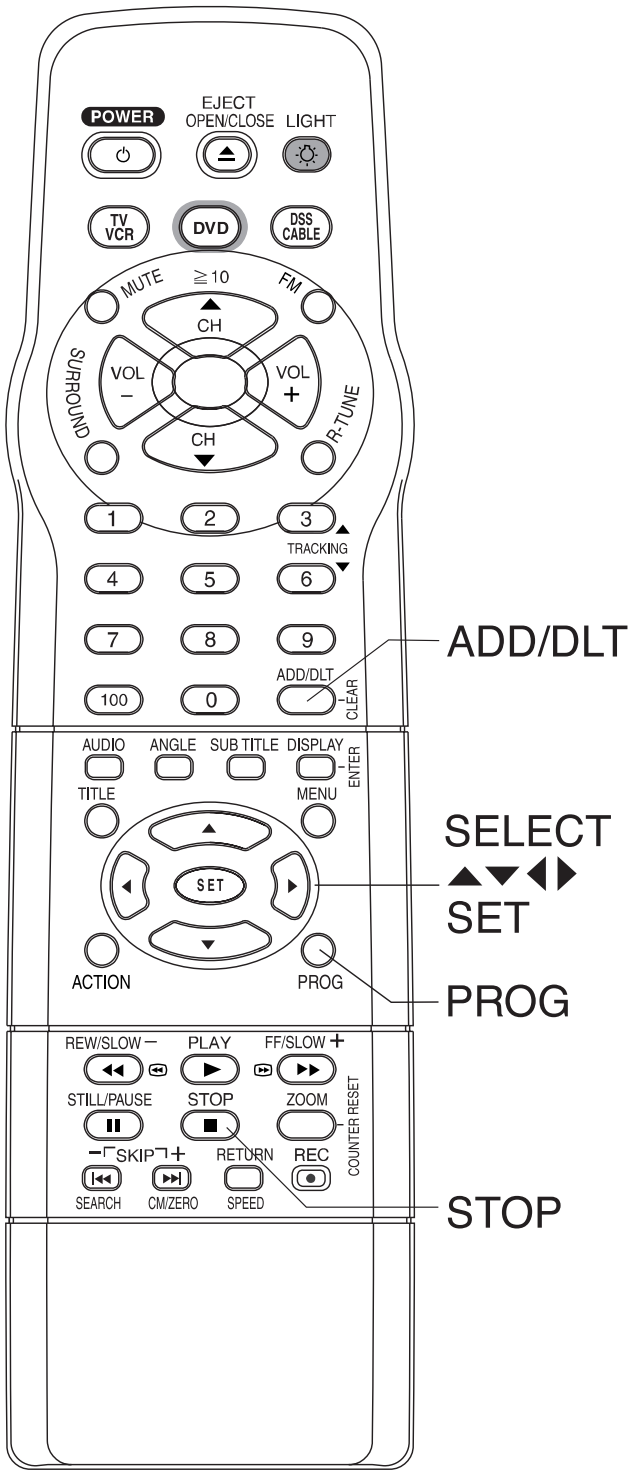
POWER
EJECT OPEN/CLOSE
LIGHT
TV/VCR
DVD
DSS CABLE
MUTE
≧10
FM
CH
SURROUND
VOL −
VOL +
R-TUNE
1
2
3
TRACKING
4
5
6
7
8
9
100
0
ADD/DLT
CLEAR
AUDIO
ANGLE
SUB TITLE
DISPLAY
ENTER
TITLE
MENU
SET
ACTION
PROG
REW/SLOW −
PLAY
FF/SLOW +
STILL/PAUSE
STOP
ZOOM
COUNTER RESET
− SKIP +
RETURN
REC
SEARCH
CM/ZERO
SPEED
ADD/DLT
SELECT ▲▼◀▶
SET
PROG
STOP

Review, Replace or Clear Program Contents : (Recording is not in progress)

1 **Repeat steps 1 and 2 on page 30.**

2

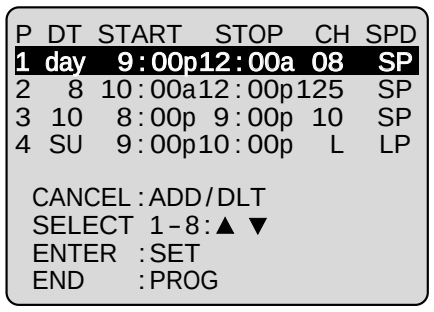

```
P  DT  START    STOP    CH  SPD
1  day   9:00p12:00a  08   SP
2    8  10:00a12:00p125    SP
3   10    8:00p  9:00p  10   SP
4  SU    9:00p10:00p    L   LP

  CANCEL :ADD/DLT
  SELECT  1-8:▲ ▼
  ENTER   :SET
  END     :PROG
```

Press ▲▼ to select the desired program.

3

To Replace program...

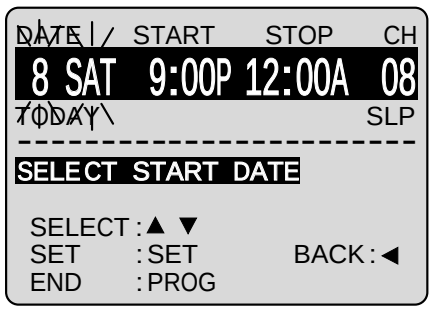

```
DATE       START      STOP      CH
 8 SAT   9:00P  12:00A   08
TODAY                           SLP
-------------------------
SELECT START DATE

 SELECT :▲ ▼
 SET    :SET          BACK:◀
 END    :PROG
```

1) **Press SET** to display.
2) **Press ▲▼** to select and **press SET** or ◀▶ to set new program contents.
3) **Press PROG**.

To Clear program...

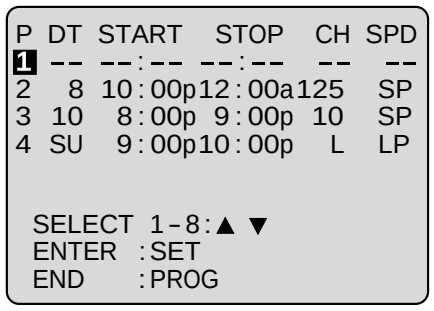

```
P  DT  START    STOP    CH  SPD
1  --  --:--  --:--   --   --
2    8  10:00p12:00a125    SP
3   10    8:00p  9:00p  10   SP
4  SU    9:00p10:00p    L   LP

  SELECT  1-8:▲ ▼
  ENTER   :SET
  END     :PROG
```

Press ADD/DLT.

4 **Press PROG** twice to exit this mode.

Notes

- 2 minutes before Timer recording is performed, “PLEASE PREPARE FOR TIMER REC” appears and/or the PROG TIMER Indicator flashes.
  Be sure a cassette with record tab is loaded and the unit is in Stop mode.
- If the start times of two programs overlap, the lower numbered program will have priority.
- If the start time for a Timer Recording comes up during a normal recording or One Touch Recording (page 18), the Timer Recording will not be performed.
- If there is a power interruption of more than one minute, the recording may not be performed or continued.
- If “INCOMPLETE” appears after all items have been set, check all entries and make necessary corrections.

Cable Box Universal Remote Control Feature

Universal Remote Control is...

The Remote Control may be set up to control some basic DSS or Cable box functions.

The Universal Remote Control Setup

1 Find your DSS box or Cable box Brand Code Number from one of the charts on the next page.

---

2 Setup remote.

Hold down DSS CABLE and **press number keys** to enter code.

- If code number is 100 or greater, e.g., press 1 - 0 - 2 for 102.

---

3 Confirm code entry.

Press POWER* to turn selected unit ON or OFF.

- See below for controllable functions in each mode.

Notes

- Please repeat the Universal Remote Control Setup after replacing remote control batteries.
- The remote control will not operate all DSS receivers or Cable Boxes made by the manufactures listed. If you get no results, your particular brand cannot be controlled.

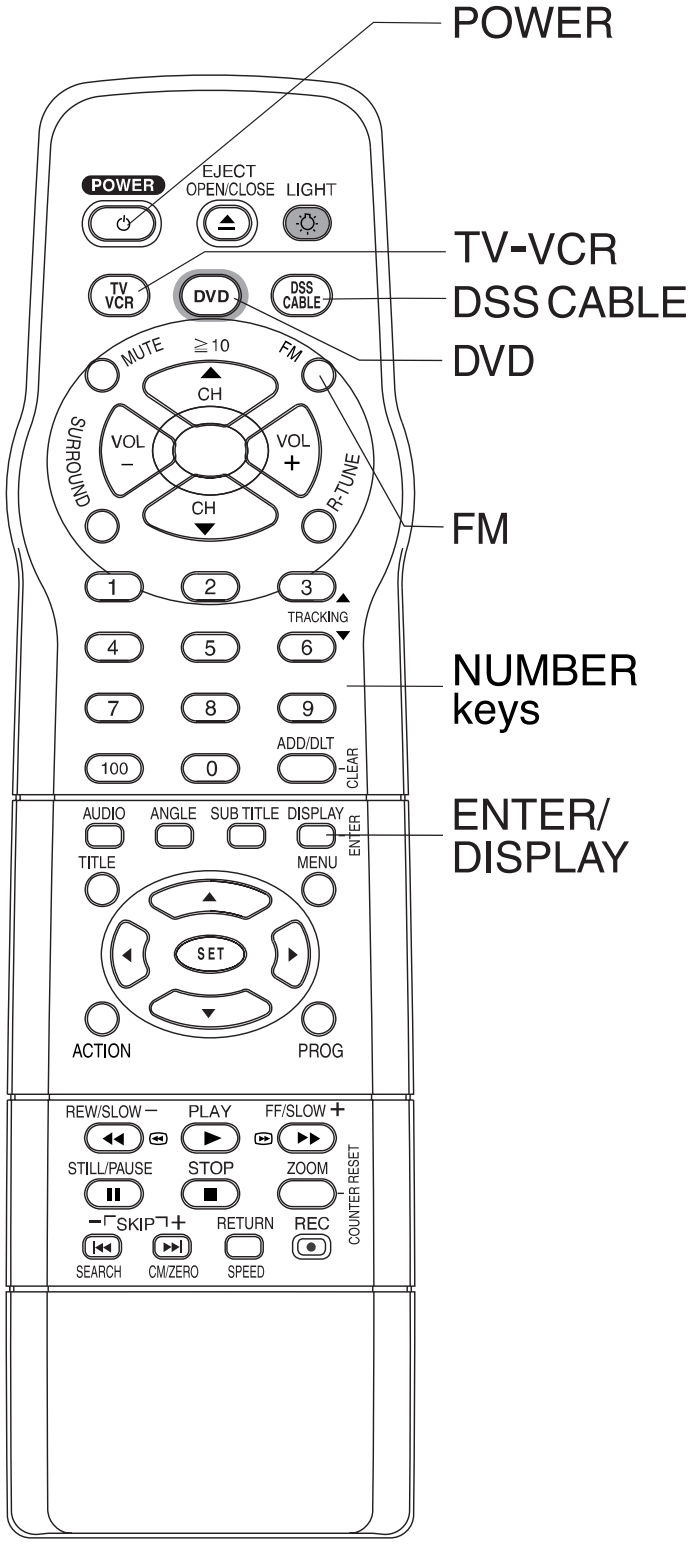
POWER
TV-VCR
DSS CABLE
DVD
FM
NUMBER keys
ENTER/ DISPLAY
POWER
EJECT OPEN/CLOSE
LIGHT
TV VCR
DVD
DSS CABLE
MUTE
≧10
CH
VOL
SURROUND
R-TUNE
TRACKING
ADD/DLT
CLEAR
AUDIO
ANGLE
SUB TITLE
DISPLAY
TITLE
MENU
ENTER
SET
ACTION
PROG
REW/SLOW
PLAY
FF/SLOW
STILL/PAUSE
STOP
ZOOM
SKIP
RETURN
REC
SEARCH
CM/ZERO
SPEED
COUNTER RESET

Using the Universal Remote Control (Available Buttons / Functions)

Once the remote control has been properly set up, you can select TV-VCR, FM, DVD, DSS or CABLE mode depending on which functions you wish to control.

Press TV VCR, FM, DVD or DSS CABLE on the remote control to select the desired mode. (See below for buttons available in each mode.)

Set to TV VCR, FM, DVD:

All TV functions, as well as functions of TV-VCR, FM, or DVD.

Set to DSS CABLE:

- Basic VCR functions, e.g. PLAY, REC, etc.
- CABLE/DSS function, e.g. POWER, ENTER, NUMBER keys (except 100 key), CH UP/DOWN.

*Important: If a remote control button does not work when pressed, press the TV/VCR, DVD, FM button on the remote and try the button again.

DSS Brand Code Numbers

Toshiba	90
Hitachi/ Hughes	91, 99
Primestar	92
Drake	93
Magnavox	94, 95
Uniden	94, 95
Optimus	94, 95
Panasonic	96
ProScan	97
RCA	97
SONY	98, 105

Cable Box Brand Code Numbers

Archer	44, 06, 01, 120, 05, 63, 126
Cableview	29, 09, 01, 63, 120, 44, 42, 30, 52, 04, 124, 126
Citizen	44, 52, 30, 63, 42, 04, 124, 126
Curtis	08, 09, 25, 61, 53, 87
Century	44, 51, 75, 59, 126
Cabletenna	29, 09, 01, 63, 120, 44, 126
Cable Cinema	29, 09, 01, 63, 120, 44, 126
Diamond	29, 09, 01, 63, 120, 44, 126
Eagle	62, 40, 22, 13, 58, 20, 26, 107
Eastern	28, 29, 130
Explorer	08, 09, 25, 61, 53, 87
Gemini	30, 04, 124
General Electric	01, 57, 120
General Instruments	01, 84, 83, 34, 03, 02, 04, 55, 65, 66, 67, 68, 120, 106, 121, 122, 115, 117, 118, 124
Gerrard	44, 51, 75, 59
GC Electronics	44, 42, 63, 29, 30, 52, 04, 124, 126
Hamlin	41, 14, 15, 28, 102, 104, 103, 130
Hitachi	31
Jerrold	01, 84, 83, 34, 03, 02, 04, 55, 65, 66, 67, 68, 120, 106, 121, 122, 115, 117, 118, 124
Jasco	30, 04, 124
Macom	31
Magnavox	26, 112
Matsushita	17, 16, 08, 87, 109
Movietime	32, 39, 42, 44, 126, 38, 40
Maestro	74, 35
NEC	40, 19, 38, 32
NSC	40, 19, 38, 32
Novavision	08, 09, 25, 61, 53, 87
Next Level	01, 84, 83, 34, 03, 02, 04, 55, 65, 66, 67, 68, 120, 106, 121, 122
Oak	46, 11, 129, 101
Oak Sigma	46, 11, 129, 101
Panasonic	17, 16, 08, 87, 109
Philips	23, 24, 20, 13, 07, 50, 128, 129
Pioneer	06, 05, 12
Pulsar	04, 42, 63, 44, 30, 52, 124, 126
Quest	06, 05, 12
Radio Shack	44, 51, 75, 59, 126
RCA	17, 16, 08, 87, 109
Realistic	44, 51, 75, 59, 126
Recoton	44, 51, 75, 59, 126
Regal	41, 14, 15, 28, 102, 104, 103, 130
Regency	28, 29, 130
Rembrandt	44, 42, 63, 29, 01, 32, 39, 120, 126
Samsung	42, 06, 32, 05, 40
Scientific Atlanta	08, 09, 25, 61, 53, 87
Sheritech	27
Signal	26, 112
SL Marx	42, 06, 32, 40, 43, 44, 52, 63, 126
Sprucer	17, 16, 08, 87, 109
Standard Components	32, 39, 42, 44, 126
Stargate	04, 42, 32, 40, 63, 44, 30, 52, 06, 124, 126
Sylvania	19, 18
Teknika	74, 35
Telecaption	77, 127
Teleview	40, 19, 38, 32, 42, 06
Texscan	19, 18
Tocom	34, 33, 01, 42, 66, 120
Toshiba	36
Unika	44, 42, 63, 29, 01, 126, 120
Universal	52, 43, 44, 63, 42, 126
Viewstar	62, 40, 22, 13, 58, 20, 26, 107
Videoway	07, 23, 50, 129
Vidtek	64
Zenith	07, 23, 50, 129

Notes

- In DSS or CABLE mode, it may be necessary to press ENTER after pressing number keys for channel selection.
- In DSS or CABLE mode, POWER, CH Up/Down, Number Keys, ACTION, PROG, DISPLAY/ENTER, SEARCH/SKIP-, R-TUNE, SELECT, SET, CM SKIP/ZERO/SKIP+, COUNTER RESET/ZOOM, ANGLE, AUDIO, TITLE, SUB TITLE, MENU, or ADD/DLT are not available. Press TV/VCR, FM, DVD to use these functions.
- Depending on your DSS receiver or Cable box brand, some of the functions listed may not be remote controllable.
- Some DSS receiver or Cable box brands require you to turn on the power manually.
- Due to changes in infra-red commands used by manufacturers, some brands have several codes. If your unit does not respond to the first code, please try the next one.

Tape Operation

Search System is ...

Each time a recording is made, an invisible index mark is placed on the tape.
When timer recordings are made, program index and information are also included.
These index marks can be used to access or scan recordings.

Index Search

Go directly to the desired recording.

1

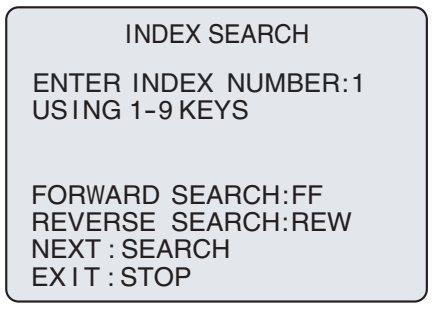

INDEX SEARCH

ENTER INDEX NUMBER:1
USING 1-9 KEYS

FORWARD SEARCH:FF
REVERSE SEARCH:REW
NEXT : SEARCH
EXIT : STOP

Press SEARCH* in Playback or Stop mode to display INDEX SEARCH screen, and then **press NUMBER Keys** to select the recording number.

- To calculate number, see below.

Press FF or **REW** to start search.

2

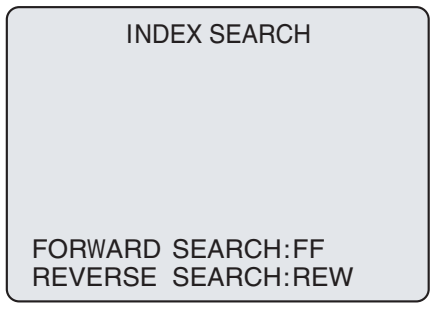

INDEX SEARCH

FORWARD SEARCH:FF
REVERSE SEARCH:REW

Play begins at search end. To search forward or back 1 index, **press FF** or **REW** while screen left in displayed (10 sec.).

To cancel, press PLAY or **STOP.**

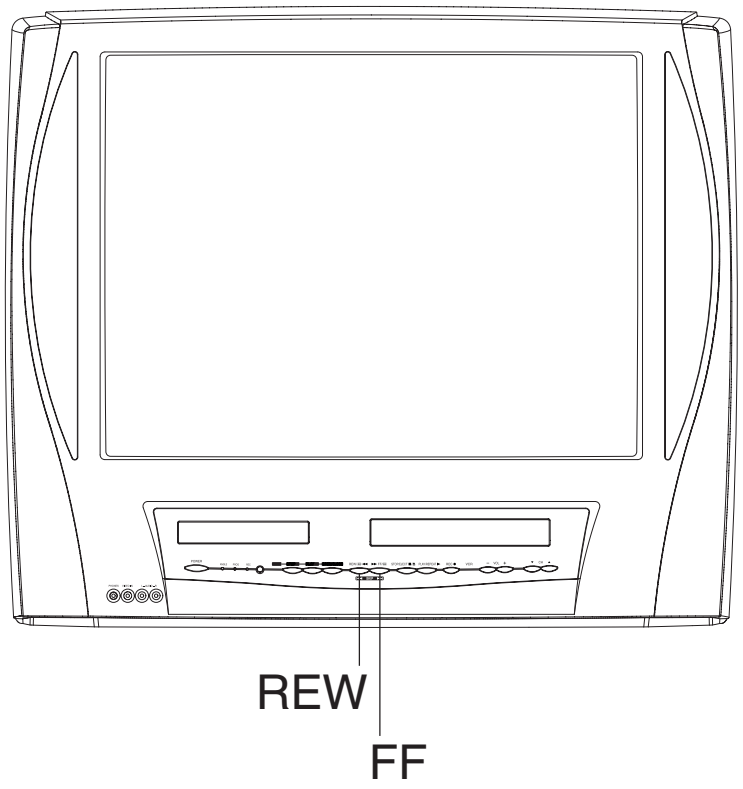

■ To calculate the Index Number

Example 1:

To go to rec. 2 from rec. 4, enter 3 and press REW.



Example 2:

To go to rec. 6 from rec. 2, enter 4 and press FF.



NOTE: ↓ indicates start points of each recording.

Notes

- Make each entry within 5 minutes, or the Index Search mode will be canceled.
- If Index Search is started very close to an index mark, that index mark may not be counted in the search.

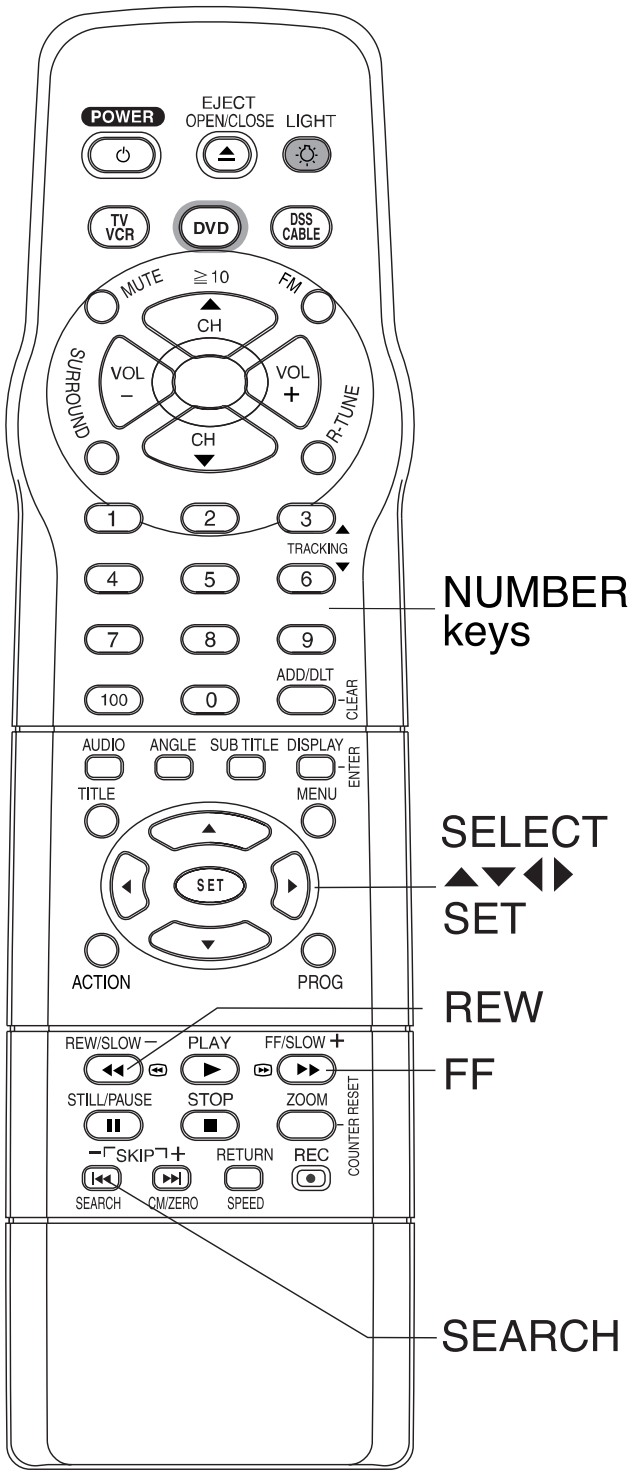
NUMBER keys
SELECT ▲▼◀▶
SET
REW
FF
SEARCH

Program End Search

Locates end point of recording for continuity.

1 **Press SEARCH** twice in Playback or Stop mode to display PROGRAM END SEARCH screen .

2

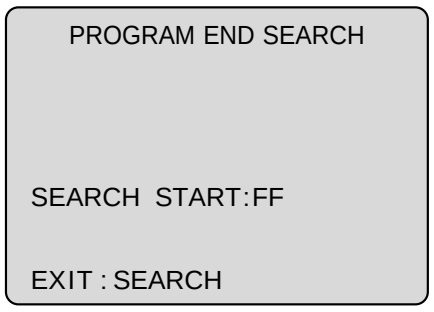

PROGRAM END SEARCH

SEARCH START:FF

EXIT : SEARCH

Press FF to start search.

To cancel, press PLAY or **STOP.**

Example of **Program End Search** operation.

Fig.1


PLAYBACK DIRECTION
Program 1
INDEX
Program 2 or BLANK
Press SEARCH button
FF
End Point

Fig.2


Program 1
BLANK
INDEX
Program 2
BLANK
Press SEARCH button
FF
End Point

Fig.3 If search exceeds a few seconds in BLANK area.


Press SEARCH button
Program 1
BLANK
INDEX
Program 2
FF
End Point

Upon locating end point...
The unit searches slightly past end point, reverse searches, and plays the last few seconds of the program, then stops.

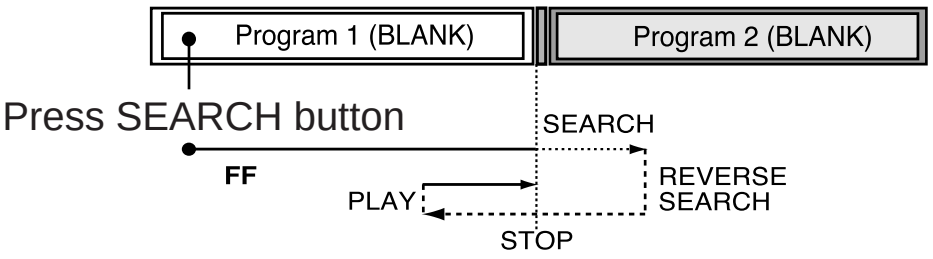
Program 1 (BLANK)
Program 2 (BLANK)
Press SEARCH button
FF
SEARCH
REVERSE SEARCH
PLAY
STOP

Note

- If Program End Search is started very close to an index mark, that mark may be skipped over.

Tape Operation (continued)

Repeat Play

Set to see a recording over and over.

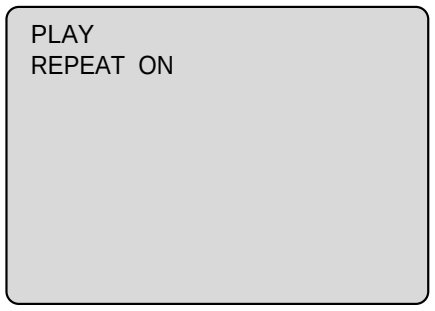
PLAY
REPEAT ON

PLAY/REPEAT

To turn “ON,”
press PLAY/REPEAT on the unit repeatedly in Play mode to select “REPEAT ON”.

To turn “OFF,”
repeat above to select “REPEAT OFF.”

- Playback repeats when tape end is reached or unrecorded portion over 30 seconds is detected.

Note

- For repeat play in DVD mode, see page 55.

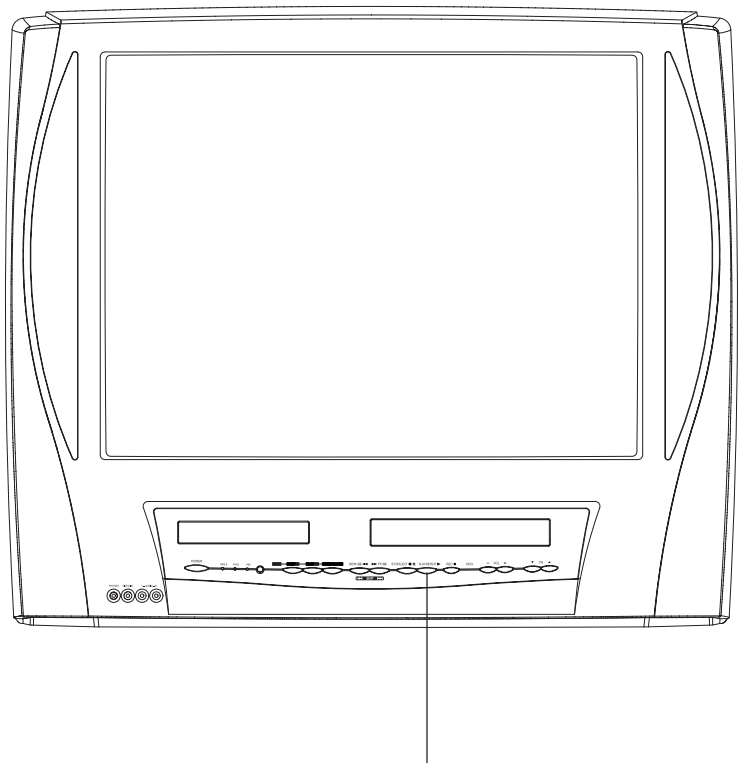

Zero Search

To quickly return to a specific tape counter location.

1 **Press DISPLAY*** during playback to display the Counter.

2 **Press COUNTER RESET** at the desired position to reset to “0:00:00.”

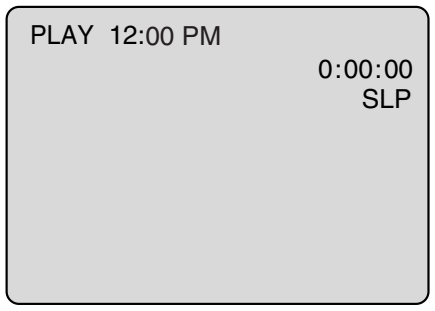
PLAY 12:00 PM
0:00:00
SLP

3 **Continue playback, rewind, or fast forward.**

4 **Press STOP.**

5 **Press CM/ZERO** in stop mode to start ZERO SEARCH.

- Unit goes into FF or REW mode and stops at the last point the Counter was set to 0:00:00.

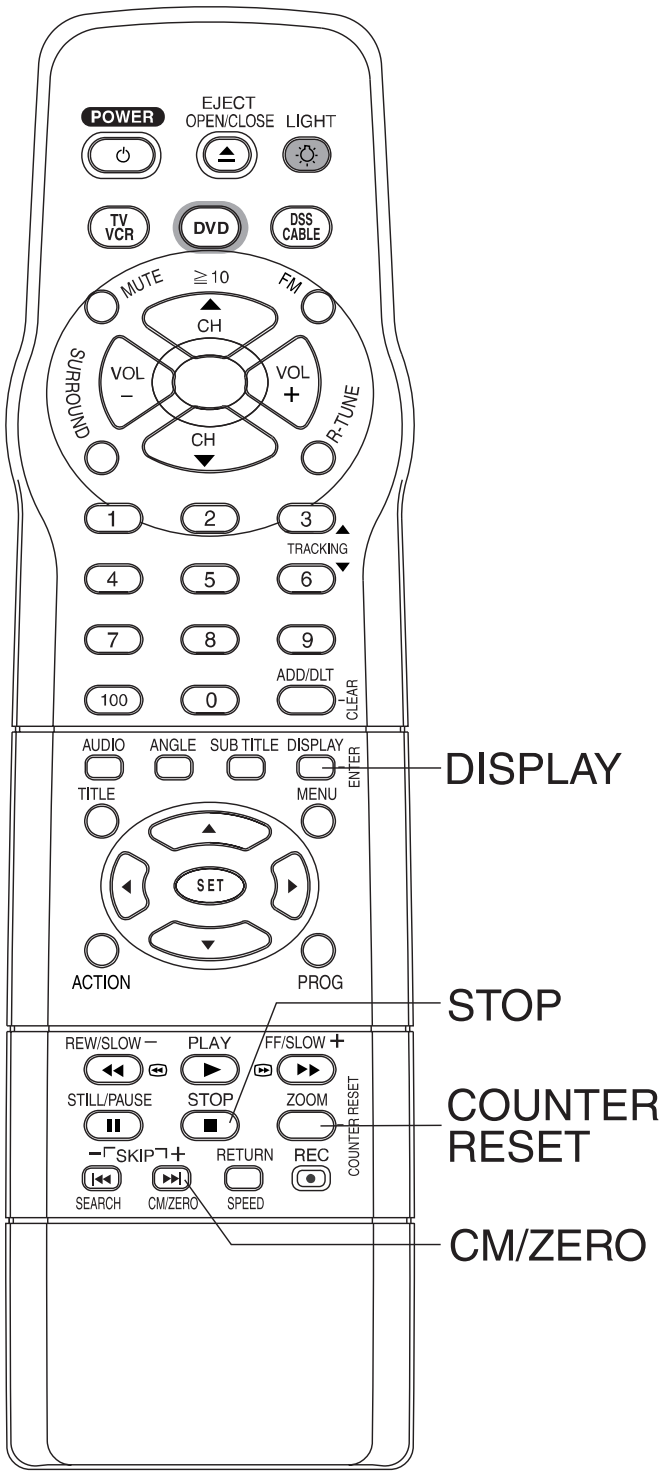
POWER
EJECT OPEN/CLOSE
LIGHT
TV VCR
DVD
DSS CABLE
MUTE
≧10
FM
CH
VOL
SURROUND
R-TUNE
TRACKING
ADD/DLT
CLEAR
100
AUDIO
ANGLE
SUB TITLE
DISPLAY
ENTER
TITLE
MENU
SET
ACTION
PROG
REW/SLOW −
PLAY
FF/SLOW +
STILL/PAUSE
STOP
ZOOM
SKIP
RETURN
REC
COUNTER RESET
SEARCH
CM/ZERO
SPEED
DISPLAY
STOP
COUNTER RESET
CM/ZERO

Auto Operation Functions

- **Auto Shut Off**
  No broadcast signal in TV mode (Only when Weak Signal Display is set to **OFF**.), DVD stop, or blank tape is played for 5 minutes
  ➔ Power turns off
  - This feature is canceled if any button is pressed during above conditions.
- **Auto Playback**
  Insert a tape in Power off mode
  ➔ Power turns on
  - Playback begins if tape has no record tab.
- **Auto Rewind (except for Recording)**
  Tape reaches its end
  ➔ Rewind, ➔ Stop
- **Playback Auto Eject (Repeat Play is "OFF")**
  Tape with no record tab reaches its end
  ➔ Rewind, ➔ Stop, ➔ Eject

Commercial Skip

By pressing the CM/ZERO button in Playback mode you can skip over 1 to 3 minutes of recorded tape in just a few seconds.

Press CM/ZERO repeatedly to select skip time in Playback mode.

- No indication appears.

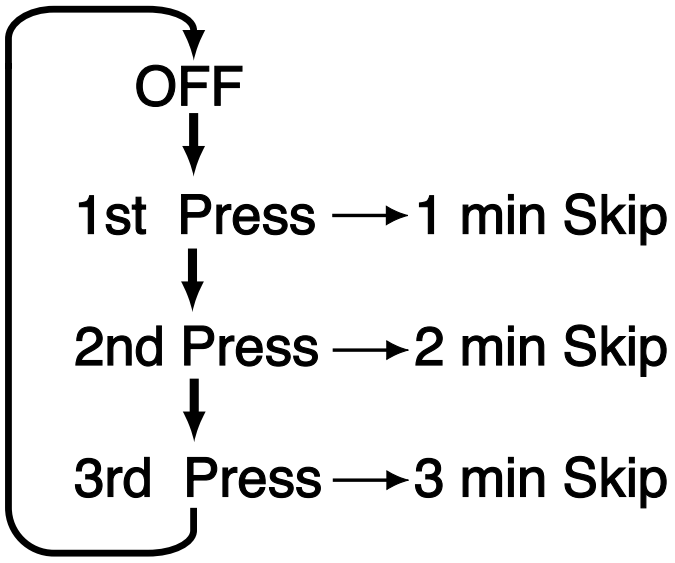
OFF
1st Press → 1 min Skip
2nd Press → 2 min Skip
3rd Press → 3 min Skip

Channel Caption

1 **Press ACTION*** to display MAIN MENU.

2

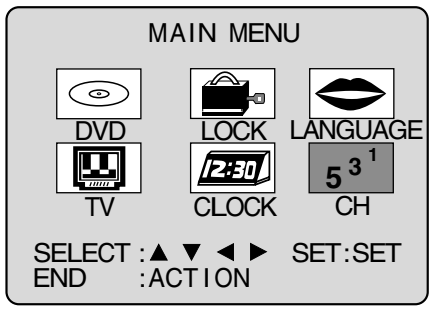

1) **Press ▲▼◀ ▶** to select “CH.”
2) **Press SET** to display SET UP CHANNEL screen.

3

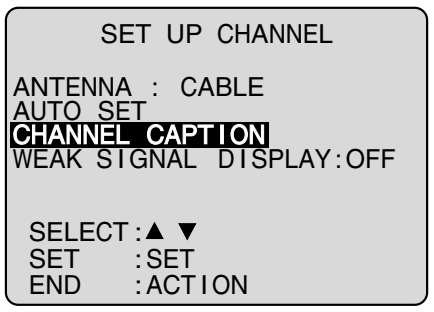

```
SET UP CHANNEL

ANTENNA  : CABLE
AUTO SET
CHANNEL CAPTION
WEAK SIGNAL DISPLAY:OFF

SELECT:▲ ▼
SET   :SET
END   :ACTION
```

1) **Press ▲▼** to select CHANNEL CAPTION.
2) **Press SET** to display screen.

4

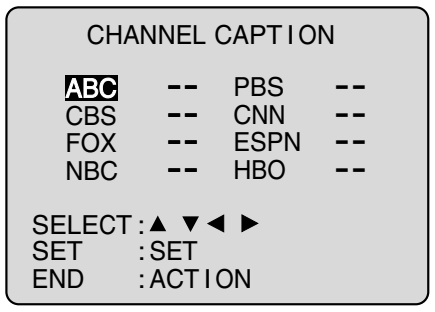

```
CHANNEL CAPTION

ABC   --   PBS   --
CBS   --   CNN   --
FOX   --   ESPN  --
NBC   --   HBO   --

SELECT:▲ ▼◀ ▶
SET   :SET
END   :ACTION
```

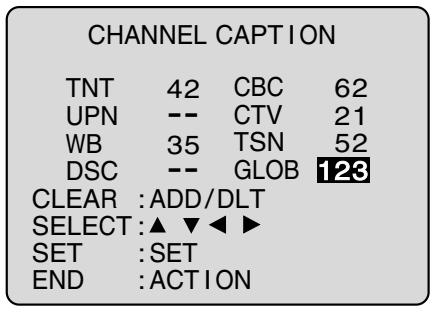

```
CHANNEL CAPTION

TNT   42   CBC   62
UPN   --   CTV   21
WB    35   TSN   52
DSC   --   GLOB 123
CLEAR :ADD/DLT
SELECT:▲ ▼◀ ▶
SET   :SET
END   :ACTION
```

1) **Press ▲▼** to select a station.
2) **Press SET** (or ▶) to move cursor to the right.
3) **Press ▲▼** to select channel number.
4) **Press SET** (or ◀ ▶) to set preset captions.

- Repeat step **4** until the Caption List is complete.

To Make Corrections
Press ▲▼, then **SET** (or ▶) to select channel number.
Press ▲▼ to change, or **ADD/DLT** to delete.

---

5 **Press ACTION** three times to end setup.

Channel Caption is ...
Station names, e.g. ABC, CNN, etc. are set so they will appear when a channel is selected. Choose 24 preset names.

☑ Ready Checklist

☐ You need a list of stations and the channel numbers you receive them on.

*Important: If a remote control button does not work when pressed, press the TV VCR button on the remote and try the button again.

Ready Checklist

☐ It is necessary to enter TV mode by pressing TV VCR before selecting “CH” on the MAIN MENU.

Remote Warning Feature

When Universal Remote Control (page 32) is used, and this feature is set to “ON,” a warning appears whenever an invalid key is pressed in DSS or Cable mode.

1 **Press ACTION**
to display MAIN MENU.

2 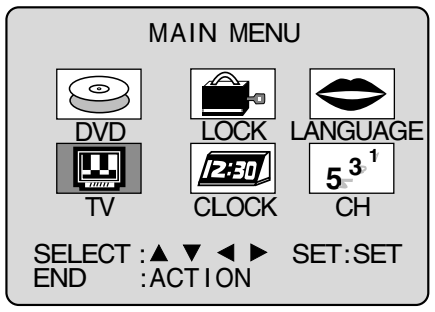

SELECT : ▲ ▼ ◀ ▶ SET : SET
END : ACTION

1) **Press ▲▼◀ ▶** to select “TV.”
2) **Press SET** to display SET UP TV screen.

3 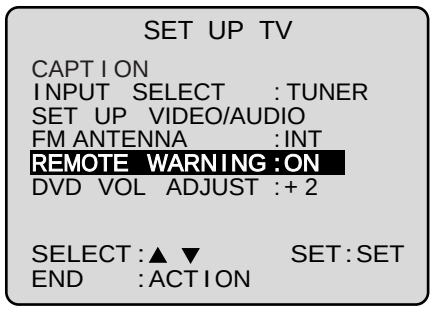
SET UP TV
CAPTION
INPUT SELECT : TUNER
SET UP VIDEO/AUDIO
FM ANTENNA : INT
REMOTE WARNING : ON
DVD VOL ADJUST : + 2
SELECT : ▲ ▼ SET : SET
END : ACTION

1) **Press ▲▼** to select REMOTE WARNING.
2) **Press SET** to set “ON” or “OFF.”

- “REMOTE WARNING : OFF”
  ➔ Remote warning will not appear even if invalid key is pressed.

4 **Press ACTION** twice
to return to normal screen.

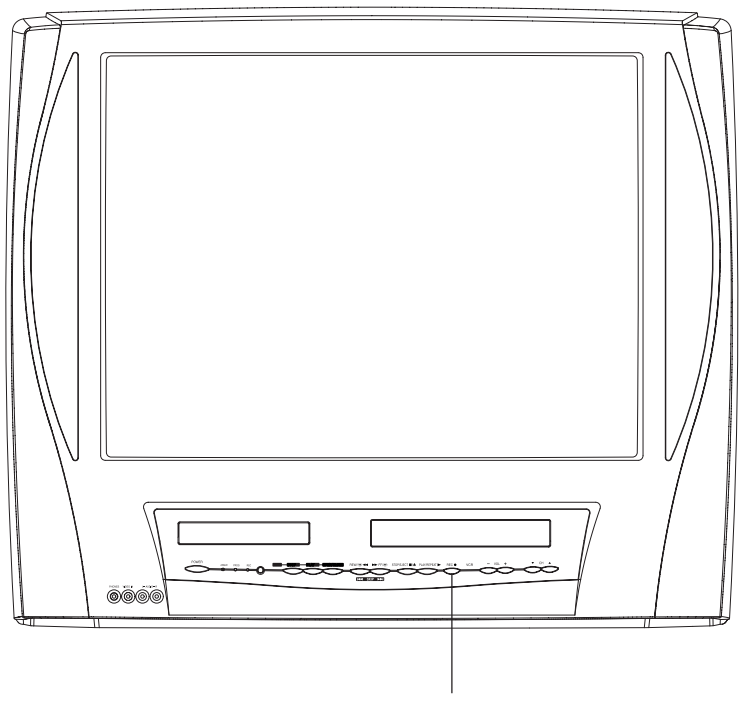

Weak Signal Display Feature

When “ON” is selected, the picture is displayed even when a broadcast signal is weak or non-existent.

1 **Press ACTION**
to display MAIN MENU.

2 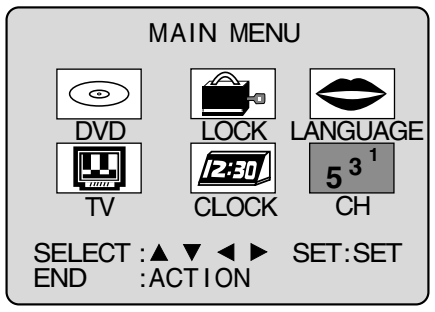

SELECT : ▲ ▼ ◀ ▶ SET : SET
END : ACTION

1) **Press ▲▼◀ ▶** to select “CH.”
2) **Press SET** to display SET UP CHANNEL screen.

3 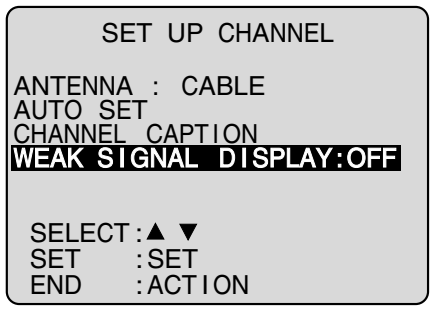
SET UP CHANNEL
ANTENNA : CABLE
AUTO SET
CHANNEL CAPTION
WEAK SIGNAL DISPLAY : OFF
SELECT : ▲ ▼
SET : SET
END : ACTION

1) **Press ▲▼** to select WEAK SIGNAL DISPLAY.
2) **Press SET** to set “ON” or “OFF.”

Notes

- “ON” = Picture is displayed regardless of signal condition, and may not always be clearly visible.
  “OFF”= Screen turns solid blue when signal is absent or weak.
- If unit is connected to equipment which has blue back feature, selecting “ON” will have no effect on the other equipment.

4 **Press ACTION** twice
to return to the normal screen.

VCR Lock

All operations are prohibited except Timer recording and tape eject. Useful for families with small children.

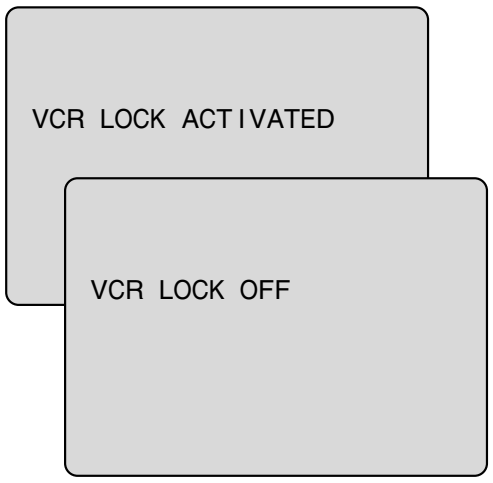
VCR LOCK ACTIVATED

VCR LOCK OFF

In Stop mode, **hold down REC** on the unit without a cassette inserted for 7 seconds to turn “ON.” (Please ignore “NO CASSETTE” warning.)

Repeat above with or without cassette to turn “OFF.”

- VCR Lock is canceled automatically after about 24 hours if clock is set.
- “Auto Power On” is not prohibited when VCR Lock is activated.

V-Chip Control Feature

V-Chip Control Feature is...

This unit has a built-in V-Chip Control which allows you to block unwanted TV usage based on US MOVIES and US TV PROGRAMS Ratings.

Process of V-Chip Control Feature

Enter Code ⇨ **Setup** ⇨ **Blocking**

Secret Code

A 4-digit code must be entered to view a blocked program or change rating settings.

1 **Press ACTION*** to display MAIN MENU.

2

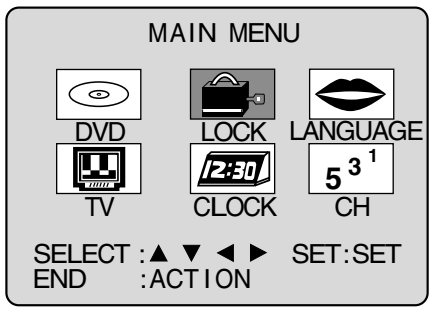
MAIN MENU
DVD LOCK LANGUAGE
TV CLOCK CH
SELECT :▲ ▼ ◀ ▶ SET:SET
END :ACTION

1) **Press ▲▼◀ ▶** to select “LOCK.”
2) **Press SET** to display LOCK screen.

3

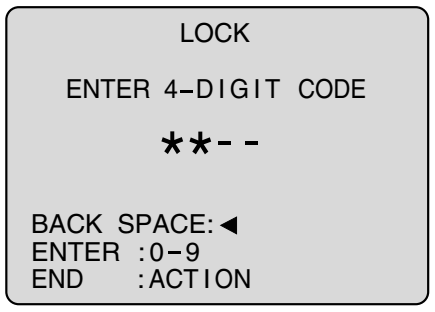
LOCK
ENTER 4-DIGIT CODE
**--
BACK SPACE:◀
ENTER :0-9
END :ACTION

1) **Press number keys** to enter your secret code.
2) **Enter same code** again for confirmation.

- Step 2) not necessary when changing rating or secret code.
- Take care that you are not observed entering the secret code.

To Make Corrections
Press ◀ repeatedly to move the cursor.
Press number keys to make the correction.

4

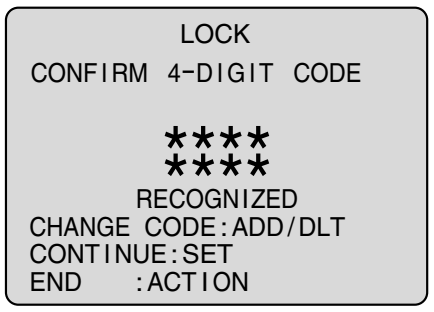
LOCK
CONFIRM 4-DIGIT CODE
****
****
RECOGNIZED
CHANGE CODE:ADD/DLT
CONTINUE:SET
END :ACTION

Press SET to display LOCK MENU (see pages 41, 42).

Or

Press ACTION twice to exit.

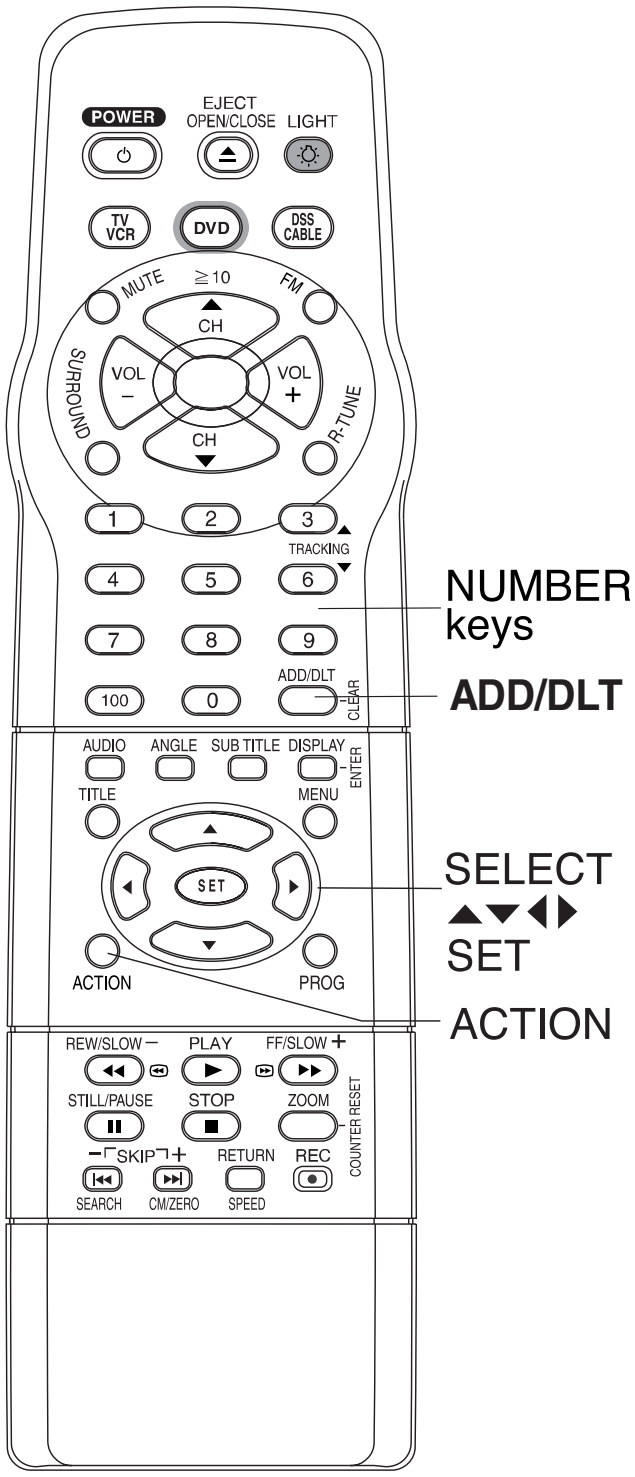
POWER
EJECT OPEN/CLOSE
LIGHT
TV VCR
DVD
DSS CABLE
MUTE
FM
SURROUND
R-TUNE
CH
VOL
TRACKING
ADD/DLT
CLEAR
AUDIO
ANGLE
SUB TITLE
DISPLAY
TITLE
MENU
ENTER
SET
ACTION
PROG
REW/SLOW
PLAY
FF/SLOW
STILL/PAUSE
STOP
ZOOM
SKIP
RETURN
REC
SEARCH
CM/ZERO
SPEED
COUNTER RESET

NUMBER keys

ADD/DLT

SELECT ▲▼◀▶

SET

ACTION

Changing your secret code

- You will need your current code.

Do steps **1** ~ **3**. In step **4**, **press ADD/DLT** to clear current code.
Repeat steps **3** and **4** to enter new code.

Notes

- Some rental movies do not include V-Chip data.
- DO NOT forget your secret code.
- Once ratings are set, restricted tapes or programs cannot be accessed unless the secret code is entered.

If LOCK menu is not displayed, do "Secret Code" steps on page 40.

Process of V-Chip Control Feature

Enter Code ⇨ **Setup** ⇨ Blocking

US MOVIES Ratings

1

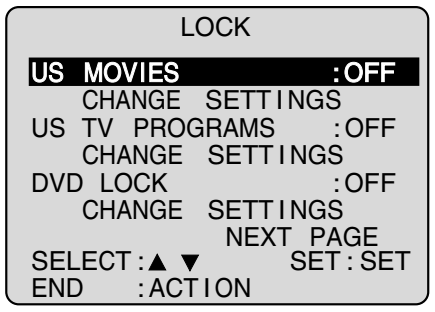

```
            LOCK
US  MOVIES            :OFF
    CHANGE  SETTINGS
US  TV  PROGRAMS      :OFF
    CHANGE  SETTINGS
DVD  LOCK             :OFF
    CHANGE  SETTINGS
             NEXT  PAGE
SELECT:▲ ▼          SET:SET
END    :ACTION
```

1) **Press ▲▼** to select US MOVIES.
2) **Press SET** to set "ON" or "OFF."

- ■ **"ON" → V-Chip Control is activated.**
- ■ **"OFF" → V-Chip Control is deactivated.**

Note

- "NEXT PAGE" displays CANADIAN V-Chip setting menu. Not necessary except when viewing Canadian tapes or broadcasts.

2

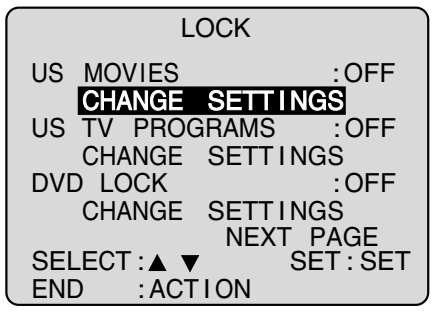

```
            LOCK
US  MOVIES            :OFF
    CHANGE  SETTINGS
US  TV  PROGRAMS      :OFF
    CHANGE  SETTINGS
DVD  LOCK             :OFF
    CHANGE  SETTINGS
             NEXT  PAGE
SELECT:▲ ▼          SET:SET
END    :ACTION
```

1) **Press ▲▼** to select CHANGE SETTINGS.
2) **Press SET** to display screen.

3

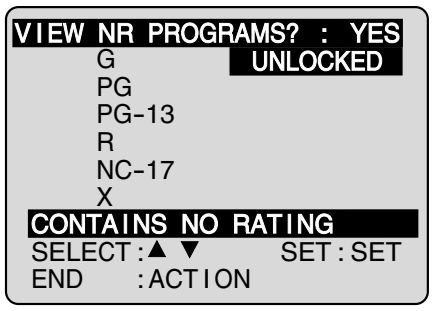

```
VIEW  NR  PROGRAMS?  :  YES
        G           UNLOCKED
        PG
        PG-13
        R
        NC-17
        X
CONTAINS  NO  RATING
SELECT:▲ ▼          SET:SET
END    :ACTION
```

1) **Press ▲▼** to select VIEW NR PROGRAMS?.
2) **Press SET** to set "YES" or "NO."

NR (Not Rated) PROGRAMS
Some movies, such as old movies or foreign movies usually have no ratings.

4

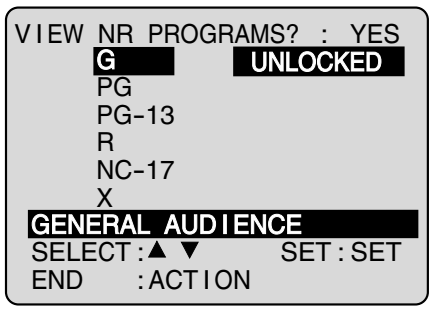

```
VIEW  NR  PROGRAMS?  :  YES
        G           UNLOCKED
        PG
        PG-13
        R
        NC-17
        X
GENERAL  AUDIENCE
SELECT:▲ ▼          SET:SET
END    :ACTION
```

1) **Press ▲▼** to select and **SET** to set ratings to be blocked. (See ratings chart on this page.)

5 **Press ACTION** to redisplay LOCK menu and continue with US TV PROGRAMS Ratings Setup (next page).
Or, **press ACTION** three times to exit.

US MOVIES RATINGS

G	**GENERAL AUDIENCE:** All ages admitted.
PG	**PARENTAL GUIDANCE:** Some material may not be suitable for children.
PG-13	**PARENTS CAUTIONED:** Some material may be inappropriate for children under 13.
R	**RESTRICTED:** Children under 17 must be accompanied by a parent or adult.
NC-17	**OVER AGE 17 ONLY:** No one 17 and under admitted.
X	**ADULTS ONLY:**

V-Chip Control Feature (continued)

If LOCK menu is not displayed, do “Secret Code” steps on page 40.

US TV PROGRAMS Ratings

1

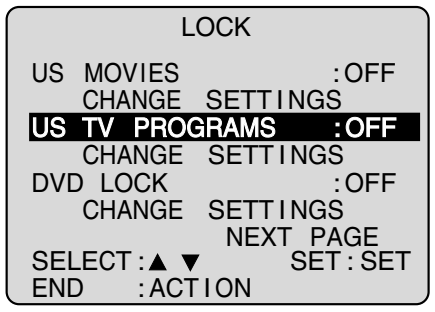

```
            LOCK

US  MOVIES                :OFF
    CHANGE  SETTINGS
US  TV  PROGRAMS          :OFF
    CHANGE  SETTINGS
DVD LOCK                  :OFF
    CHANGE  SETTINGS
              NEXT  PAGE
SELECT:▲ ▼          SET:SET
END     :ACTION
```

1) **Press ▲▼*** to select US TV PROGRAMS.
2) **Press SET** to set “ON” or “OFF.”

- ■ **“ON” ➔ V-Chip Control is activated.**
- ■ **“OFF” ➔ V-Chip Control is deactivated.**

Note

- “NEXT PAGE” displays CANADIAN V-Chip setting menu. Not necessary except when viewing Canadian tapes or broadcasts.

2

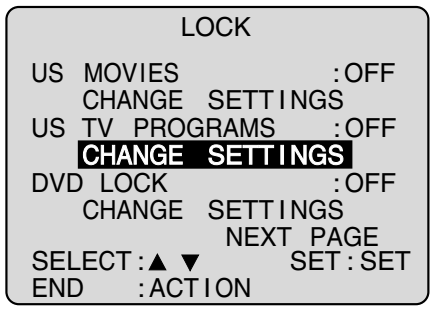

```
            LOCK

US  MOVIES                :OFF
    CHANGE  SETTINGS
US  TV  PROGRAMS          :OFF
    CHANGE  SETTINGS
DVD LOCK                  :OFF
    CHANGE  SETTINGS
              NEXT  PAGE
SELECT:▲ ▼          SET:SET
END     :ACTION
```

1) **Press ▲▼** to select CHANGE SETTINGS.
2) **Press SET** to display screen.

3

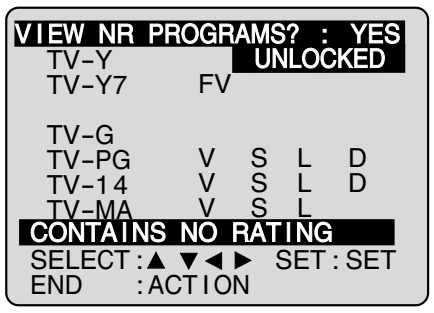

```
VIEW NR PROGRAMS?  :  YES
  TV-Y             UNLOCKED
  TV-Y7       FV

  TV-G
  TV-PG       V   S   L   D
  TV-14       V   S   L   D
  TV-MA       V   S   L
 CONTAINS NO RATING
 SELECT:▲ ▼◀ ▶    SET:SET
 END    :ACTION
```

1) **Press ▲▼** to select VIEW NR PROGRAMS?.
2) **Press SET** to set “YES” or “NO.”

NR (Not Rated) PROGRAMS
Some TV shows, such as news, sports, weather, bulletins, emergency information usually have no ratings.

4

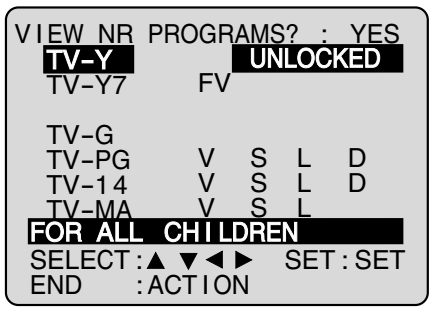

```
VIEW NR PROGRAMS?  :  YES
  TV-Y             UNLOCKED
  TV-Y7       FV

  TV-G
  TV-PG       V   S   L   D
  TV-14       V   S   L   D
  TV-MA       V   S   L
 FOR ALL  CHILDREN
 SELECT:▲ ▼◀ ▶    SET:SET
 END    :ACTION
```

1) **Press ▲▼** to select and **SET** to set ratings to be blocked. (See ratings charts on this page.)

- Ratings highlighted in Green will be blocked. Ratings in white letters will not be blocked.

Note

You may select from standard TV ratings (chart 1), or customize to a specific content rating (chart 2).

---

5 **Press ACTION** four times to exit this mode.

Process of V-Chip Control Feature

Enter Code ⇨ **Setup** ⇨ **Blocking**

US TV PROGRAMS RATINGS: Chart 1

TV-Y	**FOR ALL CHILDREN:** Content specifically geared to young viewers ages 2-6.
TV-Y7	**FOR AGE 7 AND OLDER:** May contain mild physical or comedic violence which may frighten children under 7.
TV-G	**GENERAL AUDIENCE:** Contains little or no violence, strong language, or sexual dialogue or situations.
TV-PG	**PARENTAL GUIDANCE:** May contain infrequent coarse language, limited violence, some suggestive sexual dialogue and situations.
TV-14	**PARENTS CAUTIONED:** May contain sophisticated themes, sexual situations, strong language, and more intense violence.
TV-MA	**MATURE AUDIENCE:** May contain mature themes, profane language, graphic violence, and sexual situations.

US TV PROGRAMS RATINGS: Chart 2

FV	Fantasy Violence
V	Violence
S	Sexual Situations
L	Adult Language
D	Sexually Suggestive Dialogue

Blocking Message

Process of V-Chip Control Feature

Enter Code ⇨ Setup ⇨ **Blocking**

<When V-Chip Control is activated>

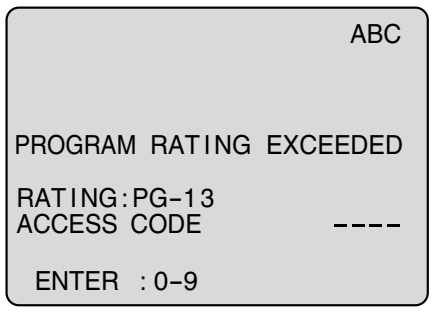

```
                         ABC

PROGRAM RATING EXCEEDED

RATING:PG-13
ACCESS CODE           ----

 ENTER  :0-9
```

- If a program or movie exceeds the ratings you have set, a message will appear on a black background and sound is muted.

To View a Blocked Program / Movie

[Temporarily Deactivate V-Chip Control]
Enter your secret code (ACCESS CODE) in the Blocking Message screen.

- V-Chip Control is reactivated when power is turned off or power failure occurs.

[Deactivate V-Chip Control]
Enter your secret code (steps 1-4 page 40). Then, set US MOVIES and/or US TV PROGRAMS to “OFF” using ▲▼ and **SET**. (Ratings set on pages 41, 42 are retained and will be in effect when V-Chip Control is activated again.)

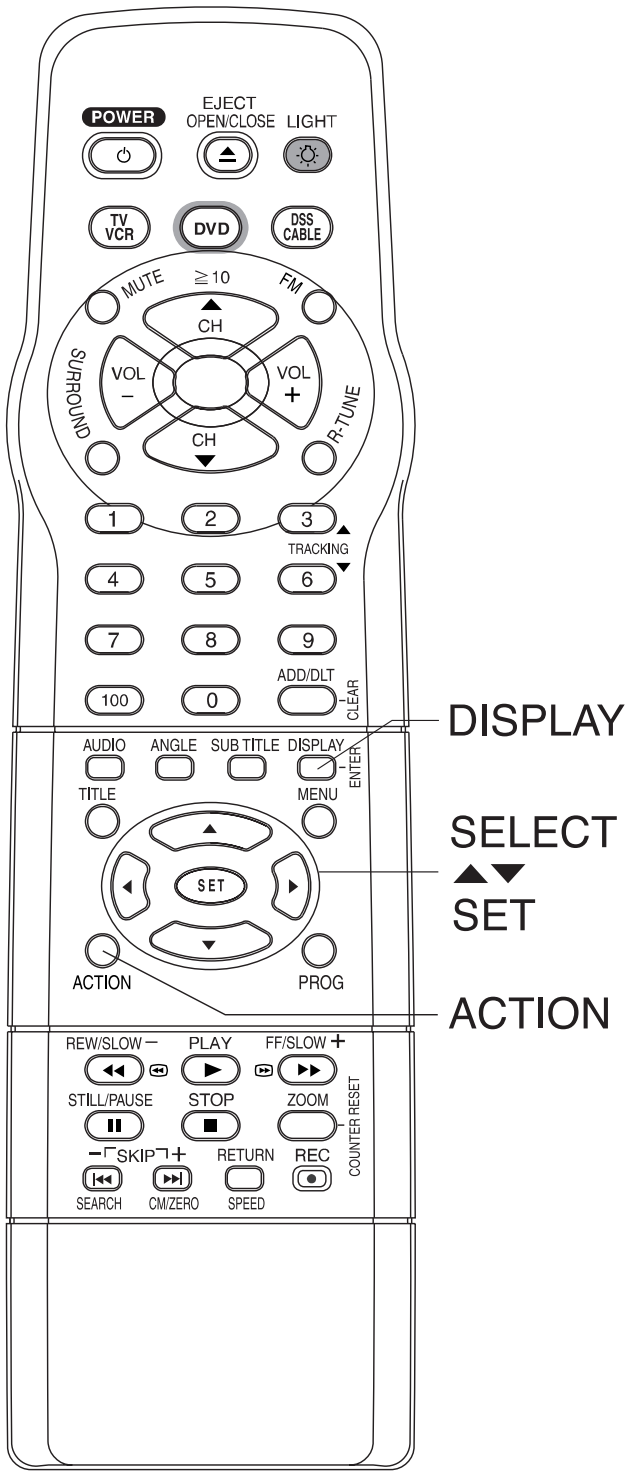

Audio Features

Audio Mode for Playback

Choose the type of sound track for playback.

1 See the “**Playback a Tape**” section on page 18 to playback the tape.

2

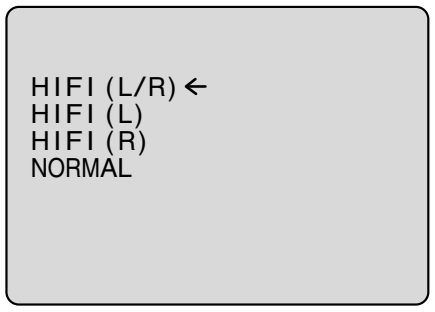

HIFI (L/R) ←
HIFI (L)
HIFI (R)
NORMAL

- This screen appears when you **press AUDIO** during playback.

Press AUDIO repeatedly (each press within 5 seconds) to select desired mode.

- Select “HIFI (L/R)”, “HIFI (L)” or “HIFI (R)” to listen to stereo recordings in stereo sound. Select “NORMAL” for monaural sound.

Audio Mode for Recording

Choose audio mode to match recording type.

1 **Press AUDIO** repeatedly to select the audio mode according to the type of broadcast to be recorded.

- The Audio mode selected stays in effect until it is changed.

2 See the “**Record On a Tape**” section on page 18 to do a recording.

Notes

- Only tapes recorded in Hi-Fi stereo will playback with true stereo sound. Standard stereo tapes will playback with monaural sound.
- To listen to Hi-Fi stereo playback, the unit AUDIO (L/R) jacks must be connected to a stereo amp and speakers.
- There may be a difference in audio level between Hi-Fi and normal audio playback.

With the proper audio mode setting, your unit can:

- record and playback MTS stereo broadcast (main language) in stereo Hi-Fi. Stereo sound is recorded on the left and right audio tracks and on the video portion of a tape.
- record and playback a monaural broadcast (main language) or SAP (Secondary Audio Program, usually in a second language) on the Hi-Fi tracks for better quality monaural sound.
- playback non-Hi-Fi tapes in monaural.

Surround Sound System

You can hear a deeper, 3-D sound effect using just the unit's two front speakers.

Set Surround sound.

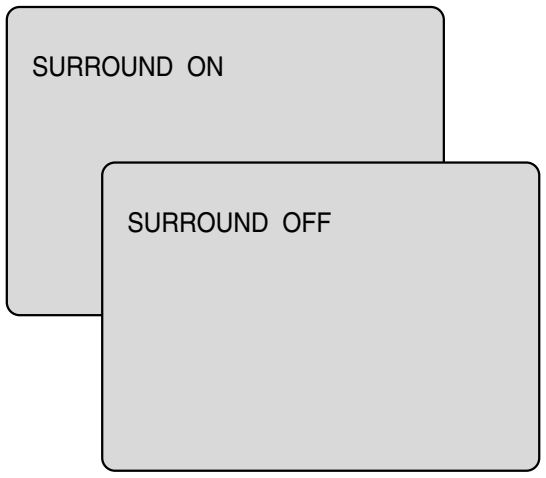
SURROUND ON
SURROUND OFF

Press SURROUND.
- "SURROUND ON" is displayed.

To Cancel, press SURROUND.

Notes

- Surround sound effect is not available for normal (mono) broadcasts.
- The surround effect (TV, VCR mode only) is not output to Audio Output L/R Connector.

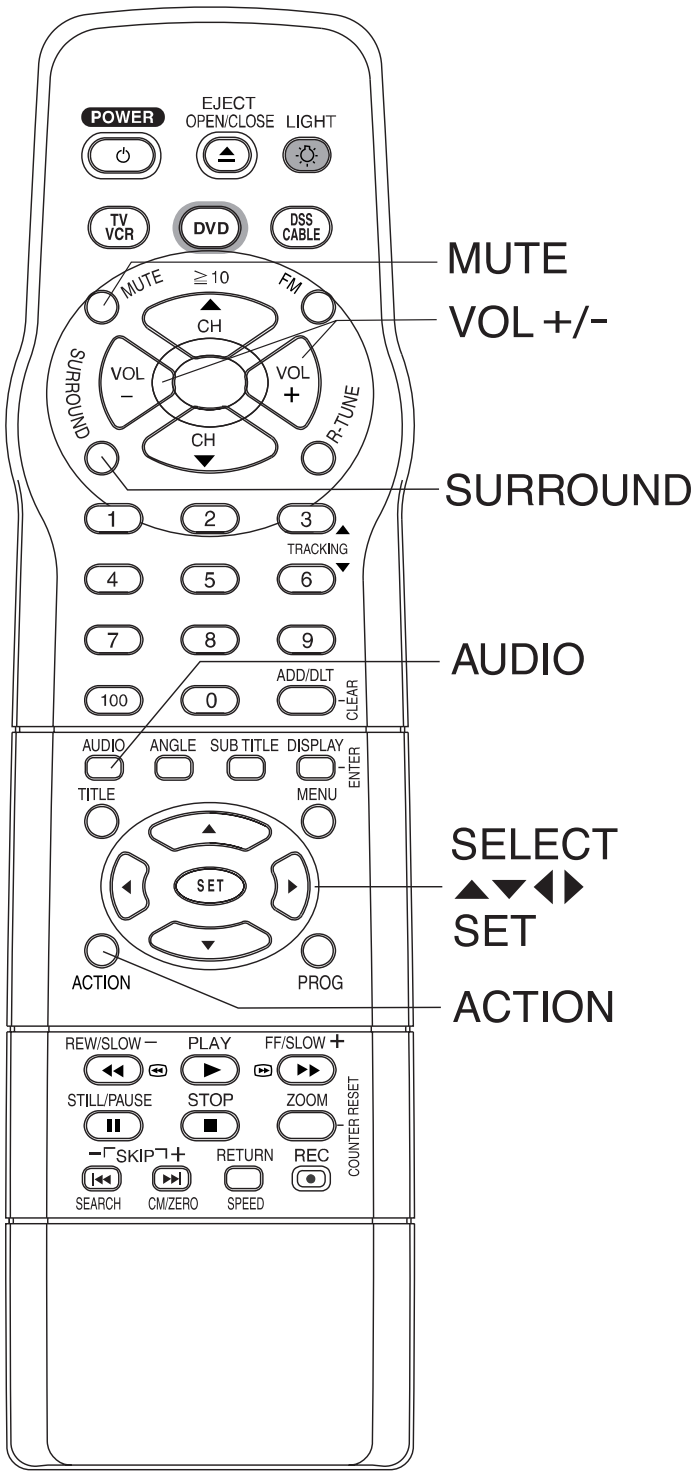
MUTE
VOL +/-
SURROUND
AUDIO
SELECT
▲▼◀▶
SET
ACTION

Video / Audio Menu

***Important:** If a remote control button does not work when pressed, press the TV/VCR button on the remote and try the button again.

This feature allows easy setting of picture and sound suitable for each program source.

Video Menu

1 **Press ACTION*** to display MAIN MENU.

2 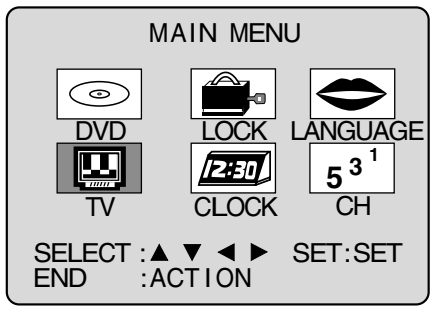
MAIN MENU
DVD LOCK LANGUAGE
TV CLOCK CH
SELECT : ▲ ▼ ◀ ▶ SET:SET
END : ACTION

1) **Press ▲▼◀▶** to select "TV."
2) **Press SET** to display SET UP TV screen.

3 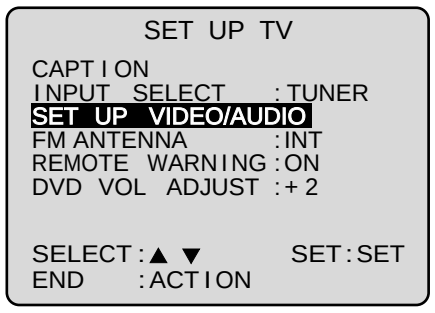
SET UP TV
CAPTION
INPUT SELECT : TUNER
SET UP VIDEO/AUDIO
FM ANTENNA : INT
REMOTE WARNING : ON
DVD VOL ADJUST : + 2
SELECT : ▲ ▼ SET : SET
END : ACTION

1) **Press ▲▼** to select "SET UP VIDEO/AUDIO."
2) **Press SET** to display.

4 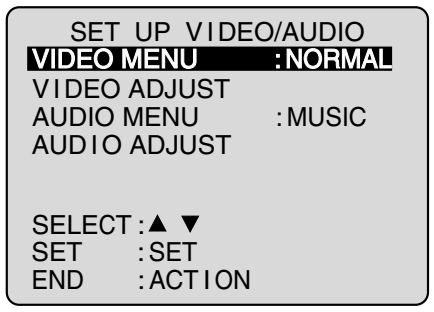
SET UP VIDEO/AUDIO
VIDEO MENU : NORMAL
VIDEO ADJUST
AUDIO MENU : MUSIC
AUDIO ADJUST
SELECT : ▲ ▼
SET : SET
END : ACTION

1) **Press ▲▼** to select "VIDEO MENU."
2) **Press SET** repeatedly to select desired mode. (See below.)

5 **Press ACTION** three times to end setup.

[Video Menu]

NORMAL
Factory setting.
MOVIE
Picture is adjusted for a Movie-like feel.
NIGHT
Color and picture intensity are adjusted to be easier on the eyes for night viewing.

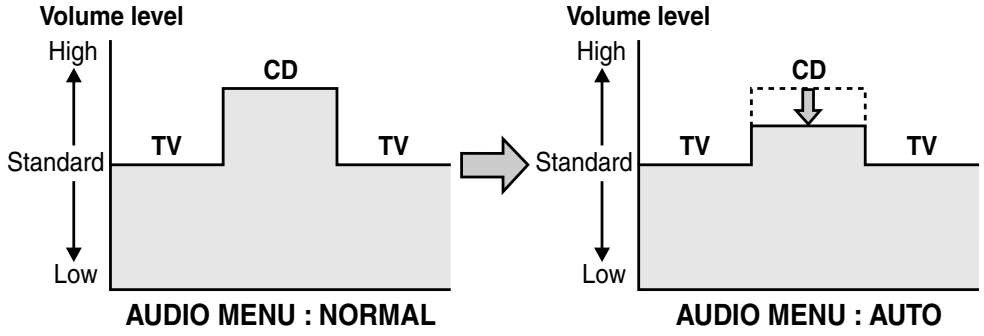

<Audio AGC Example>

Audio Menu

a **Do steps 1 - 3 left.**

b 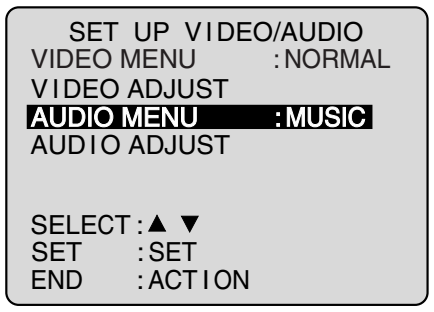
SET UP VIDEO/AUDIO
VIDEO MENU : NORMAL
VIDEO ADJUST
AUDIO MENU : MUSIC
AUDIO ADJUST
SELECT : ▲ ▼
SET : SET
END : ACTION

1) **Press ▲▼** to select "AUDIO MENU."
2) **Press SET** to select desired mode. (See below.)

c **Press ACTION** three times to end setup.

[Audio Menu]

NORMAL
Factory setting
AUTO
[Audio AGC (Auto Gain Control)**]**
The sound level is automatically adjusted to suit the program source (see below left).
MOVIE
Sound suited to movies.
MUSIC
Sound suited to music.
SPEECH
Sound suited to dialog.

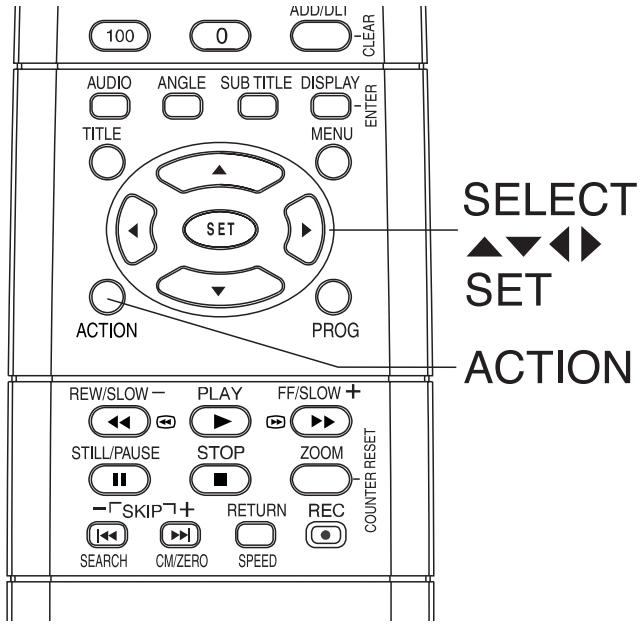

Notes

- The effects of this feature on the signal is not output to the Audio/Video Output Connector.
- When AUDIO MENU mode is "AUTO," the AUDIO ADJUST setting will be "STANDARD."
- AUDIO MENU settings remain in memory.
- VIDEO MENU settings do not remain in memory.

Video / Audio Adjustment

Video Adjustment

1 **Press ACTION** to display MAIN MENU.

2

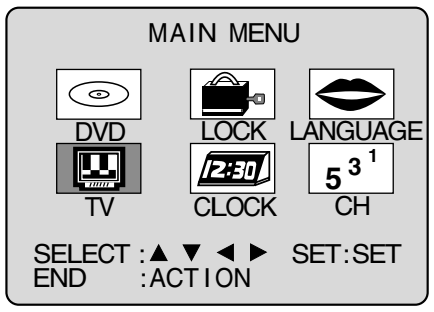
MAIN MENU
DVD LOCK LANGUAGE
TV CLOCK CH
SELECT : ▲ ▼ ◀ ▶ SET : SET
END : ACTION

1) **Press ▲▼◀▶** to select "TV."
2) **Press SET** to display SET UP TV screen.

3

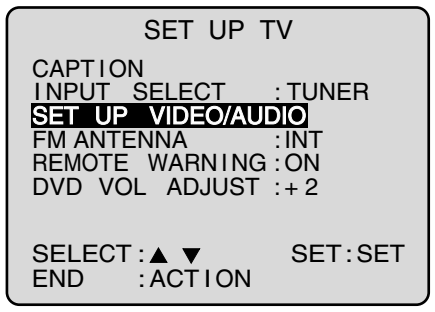
SET UP TV
CAPTION
INPUT SELECT : TUNER
SET UP VIDEO/AUDIO
FM ANTENNA : INT
REMOTE WARNING : ON
DVD VOL ADJUST : +2
SELECT : ▲ ▼ SET : SET
END : ACTION

1) **Press ▲▼** to select "SET UP VIDEO/AUDIO."
2) **Press SET** to display.

4

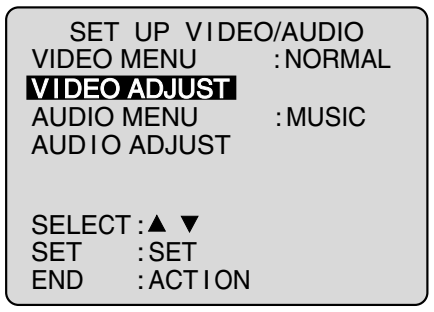
SET UP VIDEO/AUDIO
VIDEO MENU : NORMAL
VIDEO ADJUST
AUDIO MENU : MUSIC
AUDIO ADJUST
SELECT : ▲ ▼
SET : SET
END : ACTION

1) **Press ▲▼** to select "VIDEO ADJUST."
2) **Press SET** to display.

5

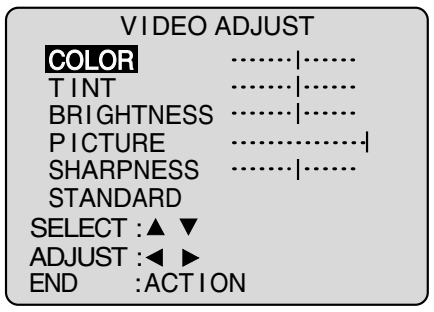
VIDEO ADJUST
COLOR ·······|······
TINT ·······|······
BRIGHTNESS ·······|······
PICTURE ··············|
SHARPNESS ·······|······
STANDARD
SELECT : ▲ ▼
ADJUST : ◀ ▶
END : ACTION

1) **Press ▲▼** to select an item. (See below.)
2) **Press ◀ ▶** to adjust.

To Reset VIDEO Controls.
Press ▲▼ and **SET** to select and set "STANDARD." All controls return to their factory settings.

6 **Press ACTION** four times to end setup.

[VIDEO Adjustment]

COLOR Control
Adjust color intensity.

TINT Control
Adjust for natural flesh tones.

BRIGHTNESS Control
Adjust picture brightness.

PICTURE Control
Adjust picture intensity by adjusting both contrast and color level in the proper balance.

SHARPNESS Control
Adjust picture sharpness.

Audio Adjustment

a **Press ACTION** to display MAIN MENU.

b

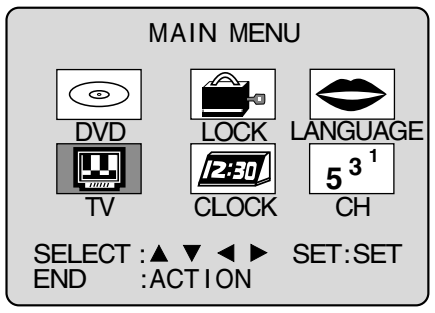
MAIN MENU
DVD LOCK LANGUAGE
TV CLOCK CH
SELECT : ▲ ▼ ◀ ▶ SET : SET
END : ACTION

1) **Press ▲▼◀▶** to select "TV."
2) **Press SET** to display SET UP TV screen.

c

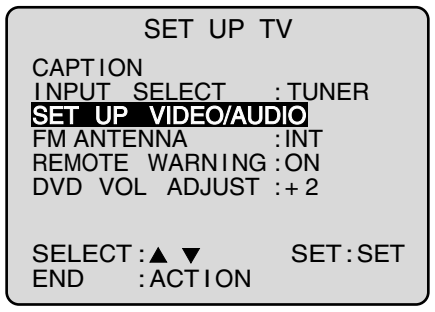
SET UP TV
CAPTION
INPUT SELECT : TUNER
SET UP VIDEO/AUDIO
FM ANTENNA : INT
REMOTE WARNING : ON
DVD VOL ADJUST : +2
SELECT : ▲ ▼ SET : SET
END : ACTION

1) **Press ▲▼** to select "SET UP VIDEO/AUDIO."
2) **Press SET** to display.

d

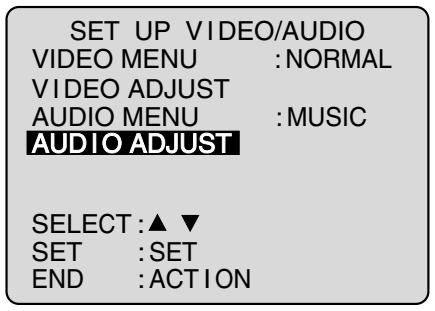
SET UP VIDEO/AUDIO
VIDEO MENU : NORMAL
VIDEO ADJUST
AUDIO MENU : MUSIC
AUDIO ADJUST
SELECT : ▲ ▼
SET : SET
END : ACTION

1) **Press ▲▼** to select "AUDIO ADJUST."
2) **Press SET** to display.

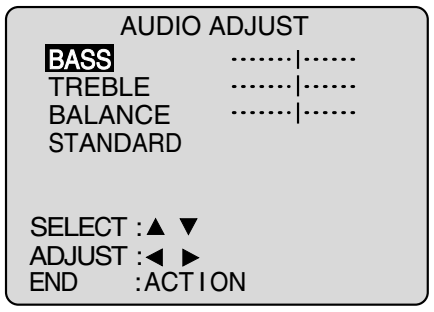
AUDIO ADJUST
BASS ·······|······
TREBLE ·······|······
BALANCE ·······|······
STANDARD
SELECT : ▲ ▼
ADJUST : ◀ ▶
END : ACTION

1) **Press ▲▼** to select an item. (See below.)
2) **Press ◀ ▶** to adjust.

To Reset AUDIO Controls.
Press ▲▼ and **SET** to select and set "STANDARD." All controls return to their factory settings.

f **Press ACTION** four times to end setup.

[AUDIO Adjustment]

BASS Control
To adjust the intensity of low frequency sound.

TREBLE Control
To adjust the intensity of high frequency sound.

BALANCE Control
To adjust the (L/R) unit speaker output level.

- The levels set here do not affect other audio equipment when connected to the Audio Output L/R Connector.

Subtitle Language (DVD only)

You can select a different subtitle language (if offered) than the one set at the Settings for DVD Operation. (See page 57.)

1

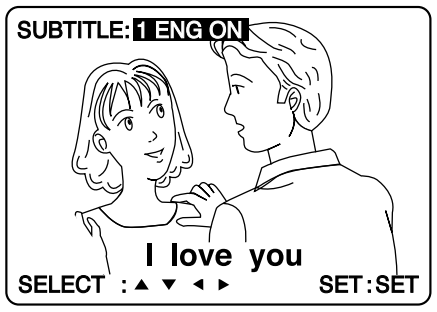

Press SUB TITLE* in Play mode to display the subtitle selection on-screen.

- Display disappears after 5 seconds.
- When no subtitles are offered, "-" will be displayed instead of the language number.

2

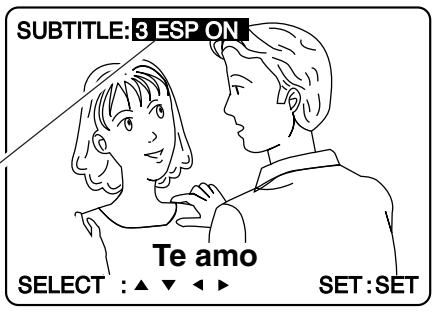

Number of subtitle language being played back.

1) **Press ▲▼** to select desired language.
2) **Press ▶** (or ◀) to set.
3) **Press ▲** (or ▼) to select "ON" or "OFF."

Notes

- When closed captioning is used along with subtitles, they may overlap. If so, turn one function off. (See pages 24 and 25.)
- If after several presses of the button the language does not change, language selection is not offered on the disc.
- Subtitles may not change to the selected language immediately.
- When power is turned on again or disc is removed, subtitles revert to initial setting language. If the initial language is not recorded on the disc, the disc's priority language will appear.

Audio Soundtrack Language (DVD only)

You can change the audio soundtrack language, selected at the Settings for DVD Operation, to a different language if available. (See page 57.) (This operation works only with discs on which multiple audio soundtrack languages are recorded.)

a

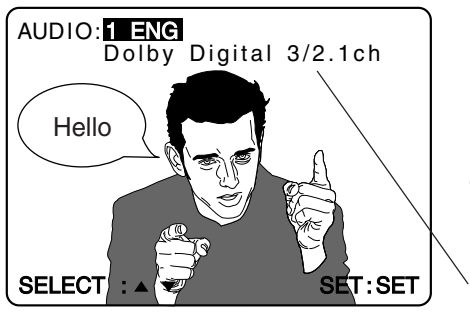

Press AUDIO in Play mode to display the audio selection on-screen.

- Display disappears after 5 seconds.

Audio attribute 1 type, sampling frequency, bit No. of the disc.

---

b

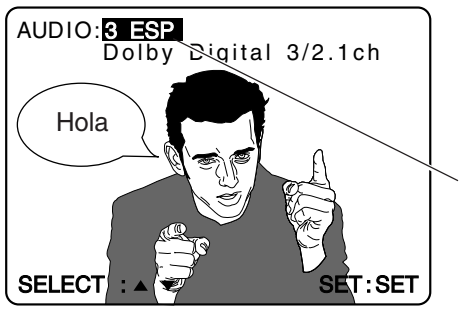

1) **Press ▲▼** to select desired language.

Number of the audio soundtrack language being played back.

Ready Checklist

☐ Please read "Basic DVD Operation" on page 20.

[Subtitle language (No.)]
[Audio sound track language (No.)]

ENG	English
FRA	French
DEU	German
ITA	Italian
ESP	Spanish
NLD	Dutch
SVE	Swedish
NOR	Norwegian
DAN	Danish
POR	Portuguese
RUS	Russian
JPN	Japanese
CHI	Chinese
KOR	Korean
MAL	Malay
VIE	Vietnamese
THA	Thai
	Other

- Change the No. by **pressing ▲▼**, and **press SET**.

[Audio attribute 1 type, sampling frequency, bit No. of the disc (see page 58)]

LPCM	**96KHz or 48KHz**	**16bit**	**Linear PCM disc**
		20bit	
		24bit	
Dolby Digital	**1ch - 5.1ch**		**Dolby Digital disc**
DTS	**1ch - 5.1ch**		**DTS disc**

Notes

- If, after several presses of the button the language does not change, language selection is not offered on the disc.
- When power is turned on again or disc is removed, language reverts to initial setting. If this language is not recorded on the disc, the language recorded will be heard.

*Important: If a remote control button does not work when pressed, press the DVD button on the remote and try the button again.

When ⃠ appears on the screen while a button is being operated, it means that the corresponding operation is prohibited by the unit or the disc.

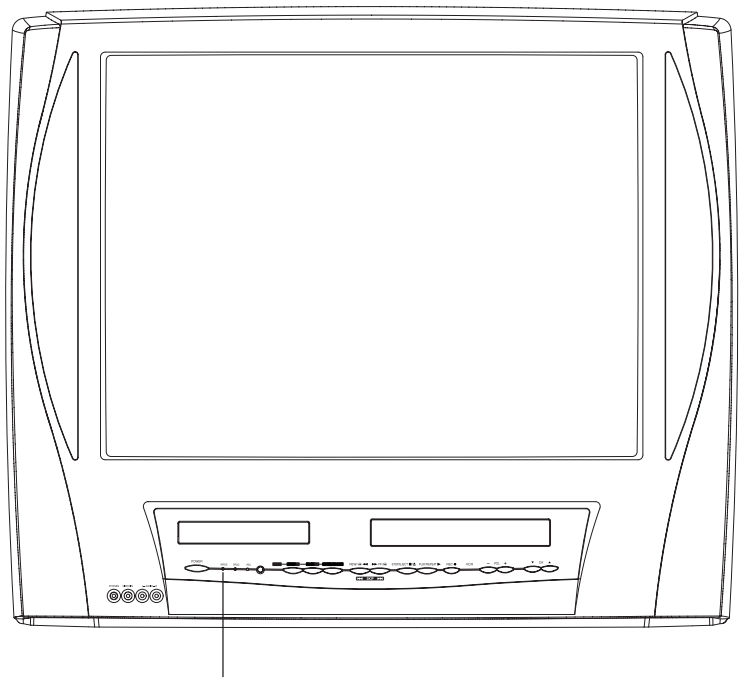
ANGLE Indicator

Notes

- ANGLE Indicator lights up on the unit when a scene recorded at different angles is detected.
- The angle number can be set beforehand so that the angle is switched whenever ANGLE Indicator lights up.

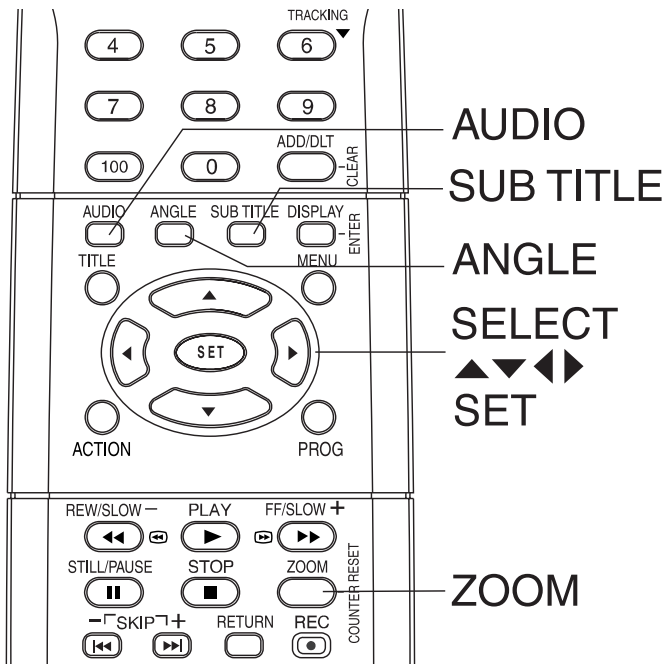
TRACKING
4
5
6
7
8
9
100
0
ADD/DLT
CLEAR
AUDIO
ANGLE
SUB TITLE
DISPLAY
ENTER
TITLE
MENU
SET
ACTION
PROG
REW/SLOW –
PLAY
FF/SLOW +
STILL/PAUSE
STOP
ZOOM
COUNTER RESET
–⌜SKIP⌝+
RETURN
REC
AUDIO
SUB TITLE
ANGLE
SELECT
▲▼◀▶
SET
ZOOM

Notes

- Closed captioning will not be displayed while Picture Zoom is used. To see subtitles, set the subtitle feature to ON (see page 48).
- The subtitle cannot be enlarged nor can it’s position be changed.
- The picture zoom feature does not work with a Video CD.
- During picture zoom, “ZOOM1” or “ZOOM2” is displayed on-screen.
- Zooming, on some discs, may result in poor picture quality, or not operate.

Multiple Angle Viewing (DVD only)

DVDs may contain scenes shot from multiple camera angles allowing the same scene to be viewed at different angles. You can view these angles, if available, using the ANGLE button.

1

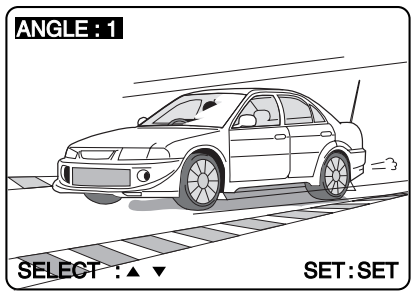
ANGLE : 1
SELECT : ▲ ▼
SET : SET

Press ANGLE in Play mode to display the angle selection on-screen.

- Display disappears after 5 seconds.

2

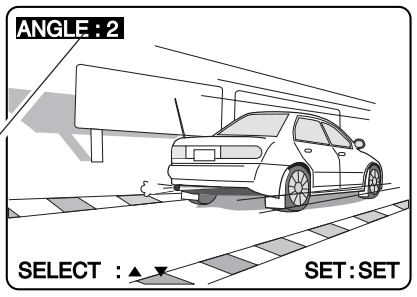
ANGLE : 2
SELECT : ▲ ▼
SET : SET

Press ▲▼ to select the desired angle.

Number of angle being played back.

Vocal selection for Karaoke discs (DVD/Video CD)

a **Press AUDIO** in Play mode to display the audio screen.

b

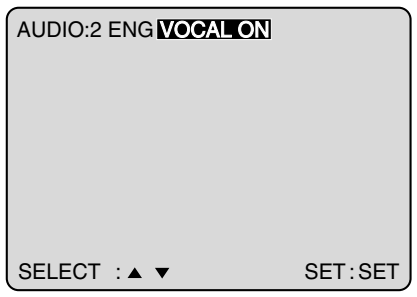
AUDIO:2 ENG VOCAL ON
SELECT : ▲ ▼
SET : SET

1) Press ▲▼ (or ◀ ▶) to select as shown below.
2) Press ▶ (or ◀) to set. (DVD only)

- DVD Karaoke (1 vocal) VOCAL ON↔VOCAL OFF
- DVD Karaoke (2 vocals) VOCAL V1 + V2→VOCAL V1→VOCAL V2→VOCAL OFF
- Video CD LR→L→R

Picture Zoom (DVD only)

You can enlarge specific portions of a picture and select the zoom ratio using the ZOOM button on the remote during DVD playback.

Set Zoom size.

Press ZOOM repeatedly to change display as follows.

- You can enlarge the center portion of the image to one of 2 magnifications.

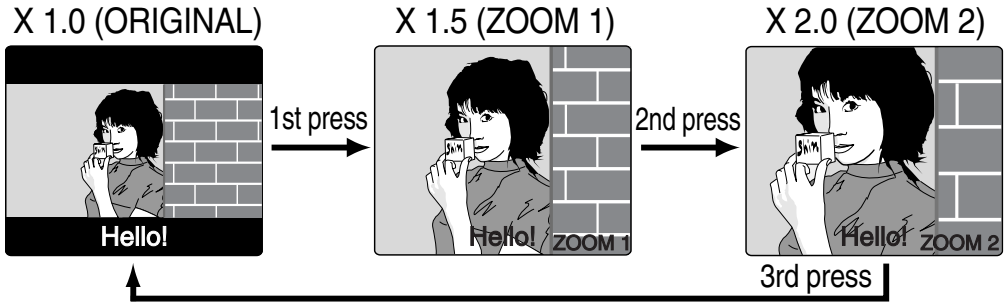
X 1.0 (ORIGINAL)
X 1.5 (ZOOM 1)
X 2.0 (ZOOM 2)
1st press
2nd press
3rd press
Hello!
Hello!
ZOOM 1
Hello!
ZOOM 2

Use the ▲, ▼, ◀ and ▶ buttons to move the position up, down, left and right.

Disc Operation (continued)

Title menu (DVD only)

Some DVDs have more than one title, e.g. movies. If the disc offers a title menu, you can select the desired title number. (Operation may vary according to the disc.)

1

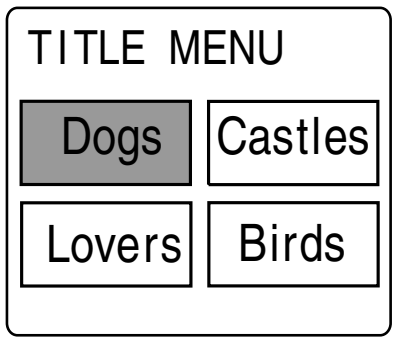

```
TITLE MENU
Dogs     Castles
Lovers   Birds
```

<Example>

Press TITLE* in Play mode to display title screen.

- **Pressing TITLE** again resumes play from the scene when TITLE was first pressed.

2

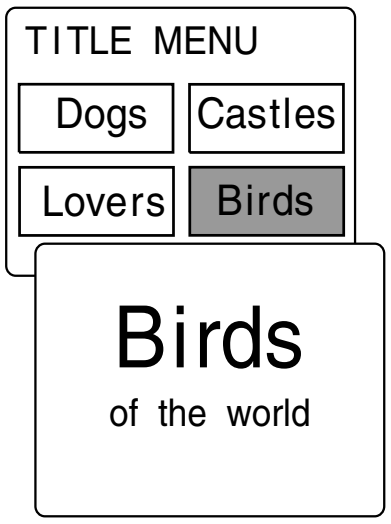

```
TITLE MENU
Dogs     Castles
Lovers   Birds

Birds
of the world
```

<Example>

1) **Press ▲▼◀ ▶** or **number Key(s)** to select a title.

2) **Press SET** or **PLAY** to start play.

- Step 2) not necessary when using number key(s).

DVD menu (DVD only)

DVDs may offer a special menu. This menu may include guides to unique contents, audio/subtitle languages, etc. Although contents and operation may vary, the following steps show basic steps for using the menu.

a

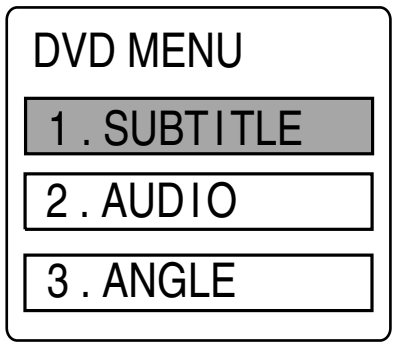

```
DVD MENU
1 . SUBTITLE
2 . AUDIO
3 . ANGLE
```

<Example>

Press MENU in Play mode to display DVD menu.

- **Pressing MENU** again resumes play from the scene when MENU was first pressed.

b

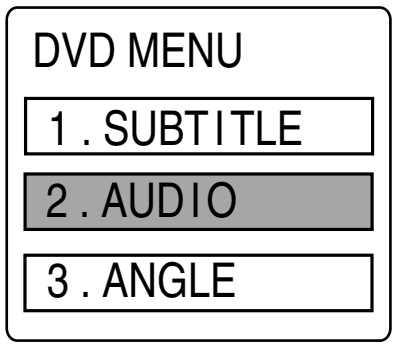

```
DVD MENU
1 . SUBTITLE
2 . AUDIO
3 . ANGLE
```

<Example>

1) **Press ▲▼◀ ▶** or **number key(s)** to select an item.

2) **Press SET** or **PLAY** to access.

- Step 2) not necessary when using number key(s).

Repeat step "b" if more than one menu.

Program Play (Video CD/CD)

You can program specific tracks and order of play.

1 **Press ACTION** in Stop mode to display MAIN MENU.

2

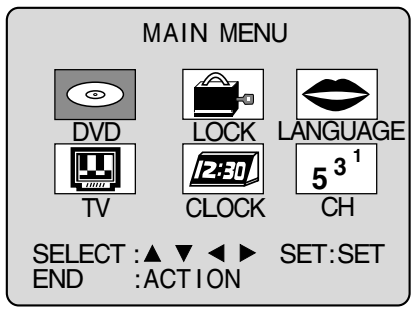

```
MAIN MENU
DVD   LOCK   LANGUAGE
TV    CLOCK  CH
SELECT :▲ ▼ ◀ ▶   SET:SET
END    :ACTION
```

1) **Press ▲▼◀ ▶** to select "DVD."

2) **Press SET** to display screen.

3

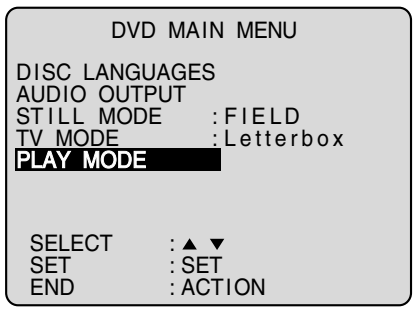

```
DVD MAIN MENU
DISC LANGUAGES
AUDIO OUTPUT
STILL MODE     : FIELD
TV MODE        : Letterbox
PLAY MODE

SELECT   : ▲ ▼
SET      : SET
END      : ACTION
```

1) **Press ▲▼** to select "PLAY MODE."

2) **Press SET** to display screen.

4

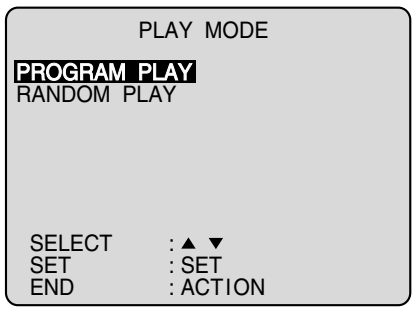

```
PLAY MODE
PROGRAM PLAY
RANDOM PLAY

SELECT   : ▲ ▼
SET      : SET
END      : ACTION
```

1) **Press ▲▼** to select "PROGRAM PLAY."

2) **Press SET** to display screen.

5

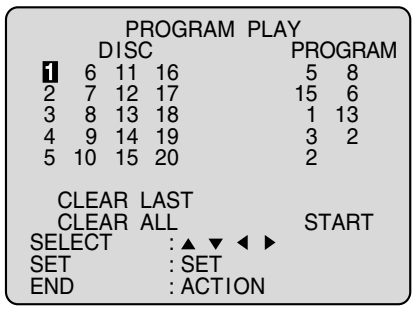

```
        PROGRAM PLAY
   DISC                PROGRAM
1   6  11  16           5   8
2   7  12  17          15   6
3   8  13  18           1  13
4   9  14  19           3   2
5  10  15  20           2

  CLEAR LAST
  CLEAR ALL                START
SELECT   : ▲ ▼ ◀ ▶
SET      : SET
END      : ACTION
```

1) **Press ▲▼◀ ▶** to select a track number. (Track numbers on disc are displayed.)

2) **Press SET** to set.

- Repeat step 5 to select another track.
- The selected track is added on the right side.

6

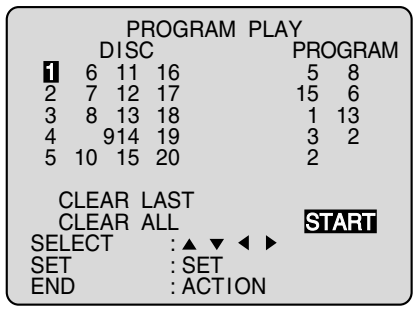

```
        PROGRAM PLAY
   DISC                PROGRAM
1   6  11  16           5   8
2   7  12  17          15   6
3   8  13  18           1  13
4   9  14  19           3   2
5  10  15  20           2

  CLEAR LAST
  CLEAR ALL                START
SELECT   : ▲ ▼ ◀ ▶
SET      : SET
END      : ACTION
```

1) **Press ▲▼◀ ▶** to select "START."

2) **Press SET** to start play of programs in the sequence selected.

- To cancel, **press STOP** during play, then **press CLEAR**.

Notes

- Up to 15 tracks can be programmed.
- "◀ " or " ▶" (depending on disc) indicates additional PROGRAM PLAY screen. **Press ▲▼◀ ▶** for next or previous screen.
- **To clear the last program one by one, Press ▲▼◀ ▶** to move to "CLEAR LAST" and **press SET**. (**Pressing CLEAR** also clears last program.)
- **To clear all programs, Press ▲▼◀ ▶** to move to "CLEAR ALL" and **press SET**. (Programs are also cleared when the power is turned off or the disc is removed.)

*Important: If a remote control button does not work when pressed, press the TV/VCR, DVD button on the remote and try the button again.

Program Repeat Play (Video CD/CD)

a **Do steps 1 through 6 on previous page.**

b **Press DISPLAY** to display Disc Information screen.

(Disc Information Screen)

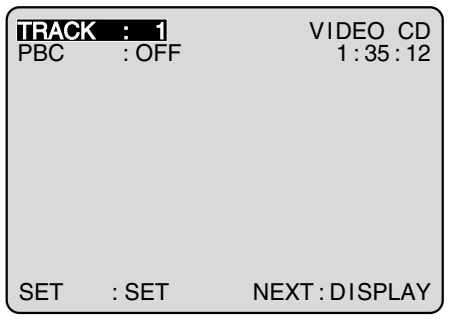

```
TRACK   :  1                VIDEO CD
PBC     : OFF                1:35:12

SET     : SET          NEXT : DISPLAY
```

c **Press DISPLAY** again to display Unit Information screen.

d **Press SET** to enter Select mode. (“REPEAT OFF” will flash.)

(Unit Information Screen)

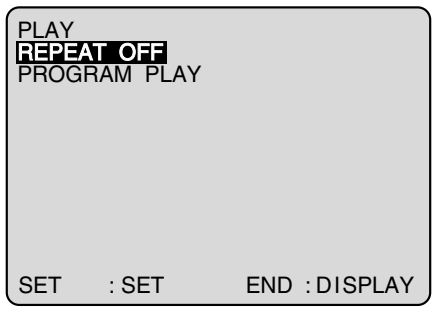

```
PLAY
REPEAT OFF
PROGRAM PLAY

SET     : SET          END : DISPLAY
```

e **Press ▲▼** to select “DISC REPEAT.”

(Unit Information Screen)

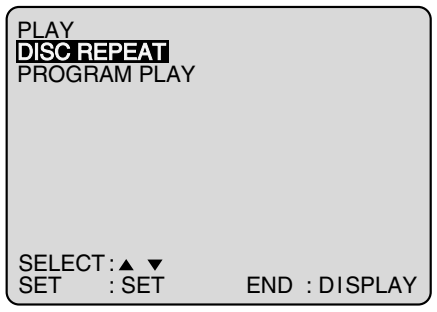

```
PLAY
DISC REPEAT
PROGRAM PLAY

SELECT : ▲ ▼
SET    : SET           END : DISPLAY
```

f **Press SET** to set mode. (“DISC REPEAT” stops flashing.)
To cancel, select “REPEAT OFF” in step **e**, then **press SET**.

Ready Checklist

☐ Unit is in TV-VCR mode, press TV/VCR.
☐ Video CD or CD is inserted.

Random Play (Video CD/CD)

Tracks are played in a random order.

1 **Press ACTION** in Stop mode to display MAIN MENU.

2

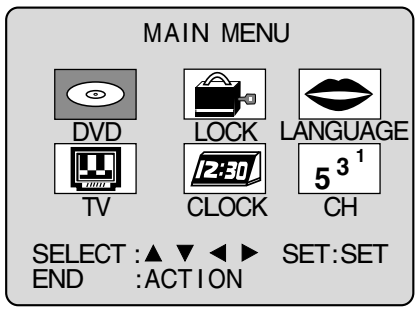

```
MAIN MENU

DVD      LOCK      LANGUAGE
TV       CLOCK     CH

SELECT : ▲ ▼ ◀ ▶   SET : SET
END    : ACTION
```

1) **Press ▲▼◀▶** to select “DVD.”
2) **Press SET** to display screen.

3

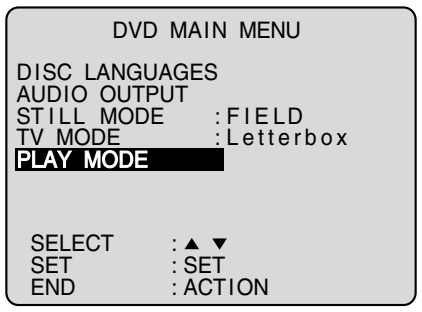

```
DVD MAIN MENU

DISC LANGUAGES
AUDIO OUTPUT
STILL MODE      : FIELD
TV MODE         : Letterbox
PLAY MODE

SELECT          : ▲ ▼
SET             : SET
END             : ACTION
```

1) **Press ▲▼** to select “PLAY MODE.”
2) **Press SET** to display screen.

4

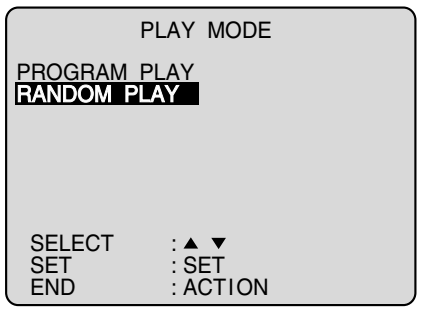

```
PLAY MODE

PROGRAM PLAY
RANDOM PLAY

SELECT          : ▲ ▼
SET             : SET
END             : ACTION
```

1) **Press ▲▼** to select “RANDOM PLAY.”
2) **Press SET** to begin random play.

- To cancel, **press STOP** during play, then **press CLEAR**.

MP3 Playback Operation

***Important:** If a remote control button does not work when pressed, press the DVD button on the remote and try the button again.

MP3 Playback

You can use this unit to play MP3 format audio recorded for personal use with a computer etc. onto a CD-R or CD-RW. Play may not be possible in some cases due to the condition of the recording.

1 **Press POWER** on the remote or DECK.

2 **Press OPEN/CLOSE,** and then place a MP3 disc into the disc tray.
Press OPEN/CLOSE to close.

3 Display MP3 MENU and start playing automatically. (The MP3 CD layer is displayed.)

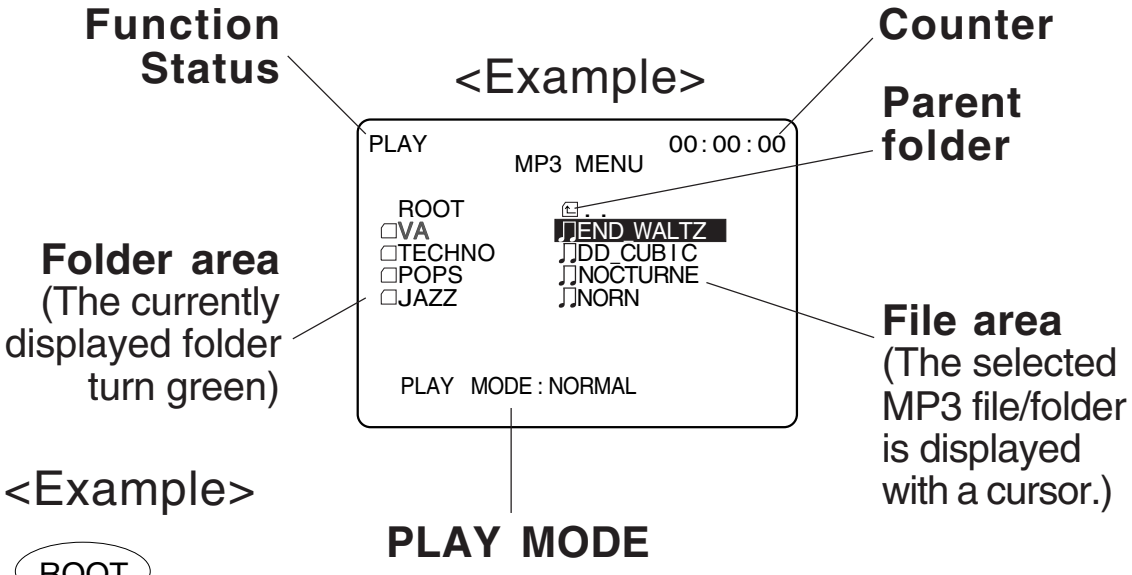
Function Status
<Example>
Counter
Parent folder
PLAY
00 : 00 : 00
MP3 MENU
ROOT
VA
TECHNO
POPS
JAZZ
END WALTZ
DD_CUBIC
NOCTURNE
NORN
PLAY MODE : NORMAL
Folder area (The currently displayed folder turn green)
File area (The selected MP3 file/folder is displayed with a cursor.)
PLAY MODE

<Example>

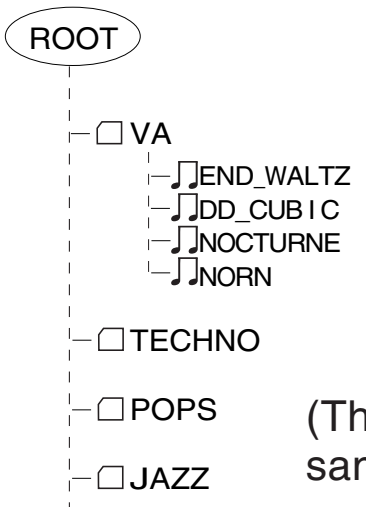
ROOT
VA
END_WALTZ
DD_CUBIC
NOCTURNE
NORN
TECHNO
POPS
JAZZ

♫ : **MP3 file**
☐ : **Folder**
⤴ : **Parent folder**

(The disc layer composition of the sample OSD above is displayed.)

Forward/Reverse Search
Press FF/SLOW+ or **RR/SLOW-** during play.
Press PLAY to release.

- Search speed, slow at first, increases with each additional press of the button up to 4 levels.

Forward/Reverse Track Skip
Press SKIP ▶▶I or **I◀◀ SKIP** during play.
Each press skips a track.

- If pressed within first 3 seconds of playback, skips to the previous track. If over 3 seconds, returns to first of that track. (**I◀◀ SKIP** only.)
- Only the **SKIP ▶▶I** or **I◀◀ SKIP** button can be used for track skip selection during playback. Place unit into Stop mode before performing folder/file selection (see above right.)

4 **Press STOP** to stop playing.

5 **Press OPEN/CLOSE** to eject the disc.
The MP3 MENU is closed automatically.

MP3 playback (During STOP mode)
1) **Press ▲▼** to select an MP3 file (♫).
2) **Press SET** or **PLAY** to start playback.

Select folder (During STOP mode)
1) **Press ▲▼** to select a folder (☐).
2) **Press SET** displays files/folders contained in the folder.

Select parent folder (During STOP mode)
1) **Press ▲▼** to select a folder (⤴).
2) **Press SET** changes to the previous layer display.

Note

- Folder area operation cannot be done. Only file area operation is possible.

Select PLAY MODE (During STOP mode)
1) **Press ◀ ▶** moves the cursor to PLAY MODE.
2) **Press ▲▼** to select the desired PLAY MODE (see below).

[PLAY MODE]

NORMAL:
All MP3 files are selected and played back one time only.

SINGLE REPEAT:
The selected MP3 file is played back repeatedly.

FOLDER REPEAT:
The MP3 files contained in the selected folder are played back repeatedly.
However, folders below the selected folder are not played back.

DISC REPEAT:
All MP3 files are played back repeatedly.

DVD Operation using On-Screen Displays

When DISPLAY is pressed, On-Screen Displays show disc information (title/chapter/track number, elapsed playing time) and unit information (repeat play, Play mode).

1 **Press DISPLAY** in Play or Stop mode to display “On-Screen Display.”

- Each **press** of **DISPLAY** changes the on-screen display as follows. (Please refer to page 54 or 55.)

→ Selected disc information
↓
Selected unit information
↓
Normal Screen

Note

DISPLAY button does not function while DVD TITLE MENU is displayed.

---

2 1) **Press ▲▼** (or ◀ ▶) to select an item.
2) **Press SET** to set.

---

3 1) **Press ▲▼** to select the setting.
2) **Press SET** to set.

<Example of DVD>

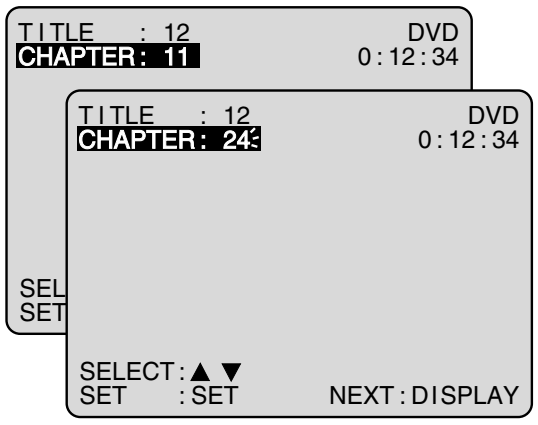
TITLE : 12
CHAPTER : 11
DVD
0 : 12 : 34
SEL
SET
TITLE : 12
CHAPTER : 24
DVD
0 : 12 : 34
SELECT : ▲ ▼
SET : SET
NEXT : DISPLAY

- For some functions the setting will be registered immediately without **pressing SET**.
- When numbers are displayed (e.g. title number), the number keys are also available.

To make corrections, press ▲▼ and **SET** repeatedly to move to error, then correct.

- **Pressing ▶** is effective for elapsing time instead of the above buttons. **Press ◀** repeatedly to delete the error, then correct.

<Example of Video CD>

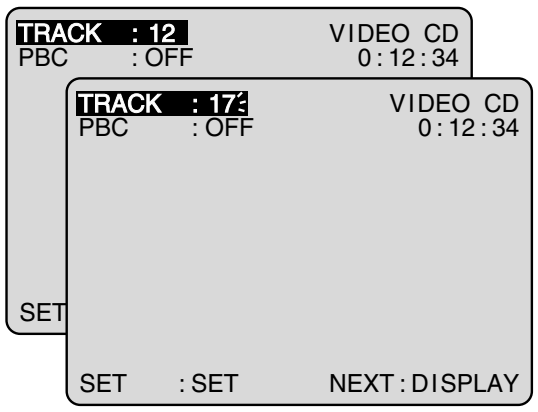
TRACK : 12
PBC : OFF
VIDEO CD
0 : 12 : 34
SET
TRACK : 17
PBC : OFF
VIDEO CD
0 : 12 : 34
SET : SET
NEXT : DISPLAY

To return to the normal screen, press CLEAR or **DISPLAY** repeatedly.

Ready Checklist

☐ Unit is in DVD mode, press DVD.

Notes

- When **DISPLAY** is pressed during playback of a Video CD with Playback control, the **number keys** are not available on the displayed screen. In this case, **press DISPLAY** again to remove the displayed screen.
- When ⃠ appears on the screen while a button is being operated, it means that the corresponding operation is prohibited by the unit or the disc.

DVD Operation using On-Screen Displays (continued)

Detailed Descriptions of Each On-Screen Display

Disc information screen (for DVD)

1. TITLE No.

- Change the No. by **pressing ▲▼*** or the **number keys**, and **press SET**.

2. Chapter No.

- Change the No. by **pressing ▲▼** or the **number keys**, and **press SET**.

3. Disc currently being played

4. Elapsed playing time

The screen may be changed by selecting the elapsed time.

- Change the elapsed time by **pressing number keys**, and **press SET**.

(e.g.) 01 : 23 : 45 0 ➔ 1 ➔ 2 ➔ 3 ➔ 4 ➔ 5

- This function does not work with some discs.

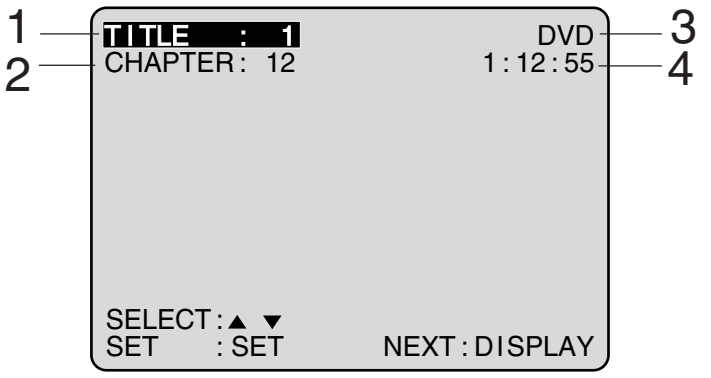

TITLE : 1 DVD
CHAPTER : 12 1 : 12 : 55

SELECT : ▲ ▼
SET : SET NEXT : DISPLAY

Disc information screen (for Video CD/ CD)

A. Track No.

- Change the No. by **pressing ▲▼** or the **number keys**, and **press SET**.

B. Playback control ON/OFF

[Video CD with playback control only]

ON	Video CD menu play is displayed.
OFF	Video CD menu play is cleared.

C. Disc currently being played

Video CD	CD

D. Elapsed playing time

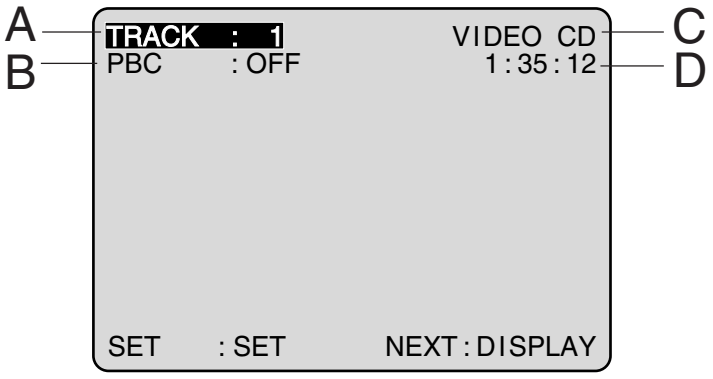

TRACK : 1 VIDEO CD
PBC : OFF 1 : 35 : 12

SET : SET NEXT : DISPLAY

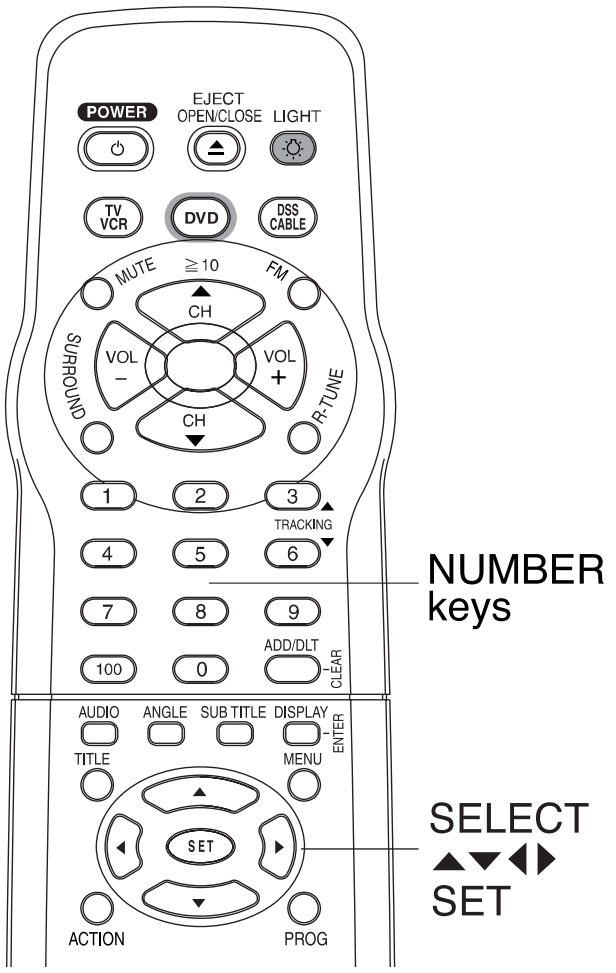
POWER
EJECT OPEN/CLOSE
LIGHT
TV VCR
DVD
DSS CABLE
MUTE
≧10
FM
CH
VOL –
VOL +
SURROUND
R-TUNE
CH
1
2
3
TRACKING
4
5
6
7
8
9
ADD/DLT
100
0
CLEAR
AUDIO
ANGLE
SUB TITLE
DISPLAY
ENTER
TITLE
MENU
SET
ACTION
PROG
NUMBER keys
SELECT ▲▼◀▶
SET

Notes

- Track No. and elapsed playing time are not displayed during play started from menu of Video CDs with playback control.
- When ⃠ appears on the screen while a button is being operated, it means that the corresponding operation is prohibited by the unit or the disc.

Detailed Descriptions of Each On-Screen Display

Unit information screen

- Change the desired mode during play by **pressing ▲▼**, and **press SET**.

a. Repeat Play

DVD	CHAPTER REPEAT	TITLE REPEAT	REPEAT OFF
Video CD/CD	TRACK REPEAT	DISC REPEAT	REPEAT OFF

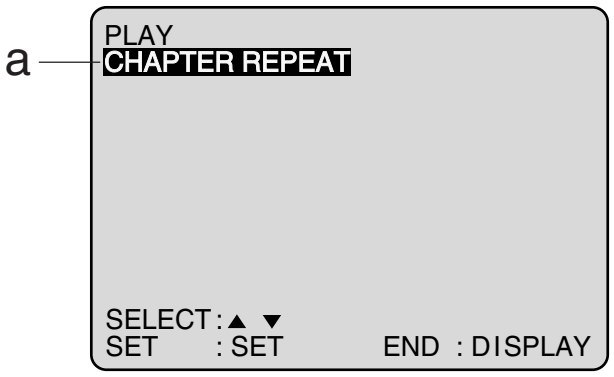

PLAY
CHAPTER REPEAT

SELECT : ▲ ▼
SET : SET END : DISPLAY

b. Play mode [Video CD/ CD only] (See page 53 or 54.)

PROGRAM PLAY	program play
RANDOM PLAY	random play
-	normal play

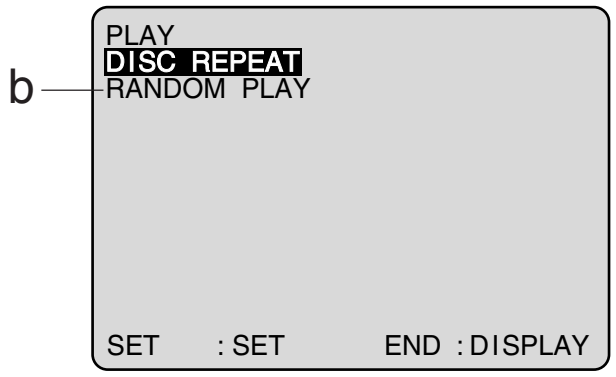

PLAY
DISC REPEAT
RANDOM PLAY

SET : SET END : DISPLAY

For your reference

- **CHAPTER/TITLE REPEAT PLAY (DVD)**

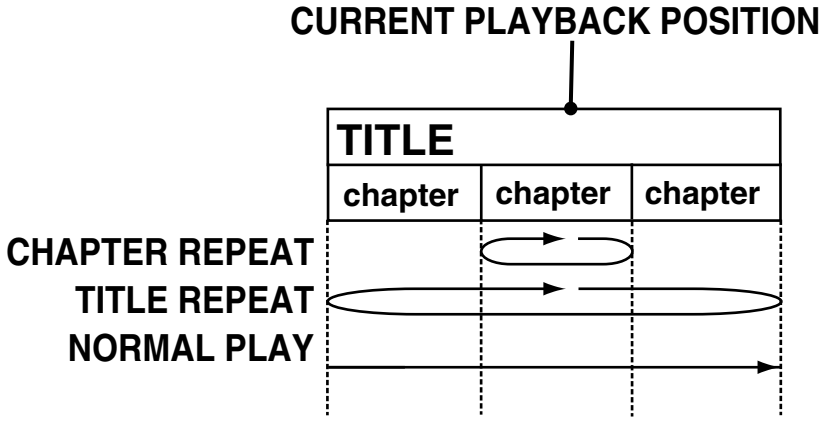
CURRENT PLAYBACK POSITION
TITLE
chapter
chapter
chapter
CHAPTER REPEAT
TITLE REPEAT
NORMAL PLAY

- **TRACK/DISC REPEAT PLAY (Video CD/CD)**

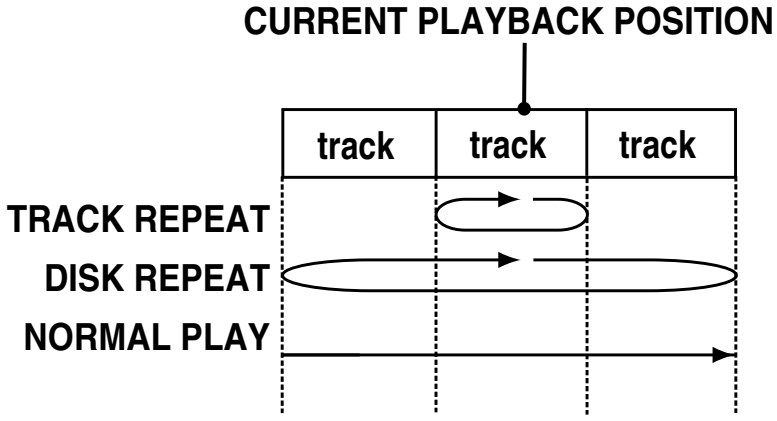
CURRENT PLAYBACK POSITION
track
track
track
TRACK REPEAT
DISK REPEAT
NORMAL PLAY

Note

- For repeat play in VCR mode, see page 36.

DVD Lock Feature

You can prevent playback of DVDs in a specific rating level which may be unsuitable for children.

- Some DVDs are encoded with a rating level. If the disc rating is higher (stricter) than the one you preset, playback will be prohibited.

Caution

Discs not encoded with rating level will play even if the jacket states it is for mature audiences. For these discs, the DVD Lock Ratings will not work.

DVD Lock Ratings (DVD only)

Perform DVD Lock setting in TV mode.
Enter your secret code to display LOCK menu.
(Do “Secret Code” steps on page 40.)

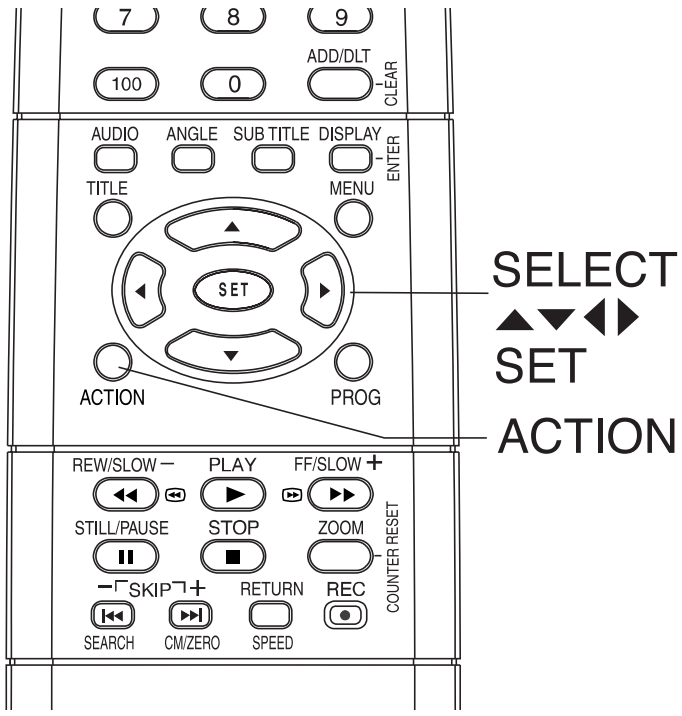

1

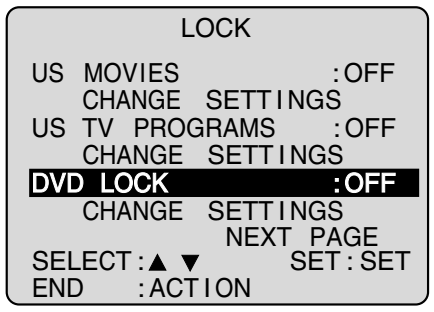

```
              LOCK
US  MOVIES                :OFF
     CHANGE  SETTINGS
US  TV  PROGRAMS          :OFF
     CHANGE  SETTINGS
DVD  LOCK                 :OFF
     CHANGE  SETTINGS
                  NEXT  PAGE
SELECT:▲ ▼           SET:SET
END     :ACTION
```

1) **Press ▲▼*** to select “DVD LOCK.”
2) **Press SET** to set “ON” or “OFF.”

- ■ **“ON” → DVD Lock is activated.**
- ■ **“OFF” → DVD Lock is deactivated.**

2

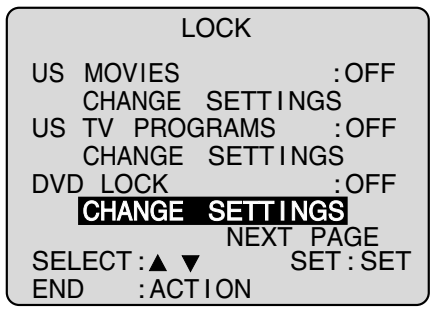

```
              LOCK
US  MOVIES                :OFF
     CHANGE  SETTINGS
US  TV  PROGRAMS          :OFF
     CHANGE  SETTINGS
DVD  LOCK                 :OFF
     CHANGE  SETTINGS
                  NEXT  PAGE
SELECT:▲ ▼           SET:SET
END     :ACTION
```

1) **Press ▲▼** to select “CHANGE SETTINGS.”
2) **Press SET** to display screen.

3

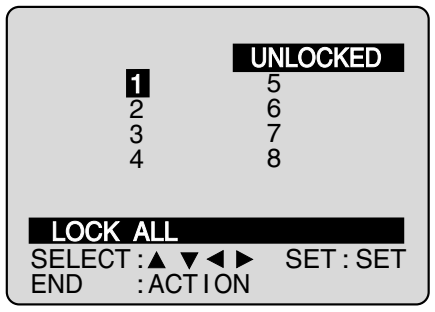

```
                    UNLOCKED
        1             5
        2             6
        3             7
        4             8

 LOCK  ALL
SELECT:▲ ▼◀ ▶      SET:SET
END     :ACTION
```

1) **Press ▲▼◀ ▶** to select rating level.
2) **Press SET** to select “LOCKED” or “UNLOCKED.”

LEVEL 1 : LOCK ALL:
Playback of all DVDs, CDs and Video CDs is prohibited. (Use to prohibit play of mature theme DVDs not encoded with rating level.)

LEVEL 2 : DVDs expressly for children can be played back.

LEVEL 3 to 7 :
DVDs for general audiences/children can be played back. (DVDs with mature content are prohibited.)

LEVEL 8 : NO LIMIT: (Factory preset)
All DVDs can be played back.

- Ratings which are highlighted in Green will be blocked; those not highlighted (white letters) will not be blocked.

4 **Press ACTION** three times to end setup.

<When DVD Lock is activated>

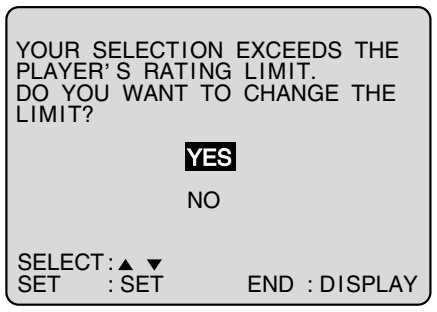

```
YOUR  SELECTION  EXCEEDS  THE
PLAYER'S  RATING  LIMIT.
DO  YOU  WANT  TO  CHANGE  THE
LIMIT?

              YES
              NO

SELECT:▲ ▼
SET     :SET          END  :DISPLAY
```

After DVD Lock is set and a blocked DVD is played, this message will appear. The message may differ depending on the disc.

To continue viewing a blocked program for now,
Press ▲▼ to select “YES” and **SET**. Then, enter your 4-digit secret code. When “NO” is selected, blocked programs cannot be viewed.

To change DVD LOCK settings
After entering your secret code in step 3 on page 40, select “OFF” to deactivate DVD Lock or change the rating level.

Settings for DVD Operation

1 **Press ACTION** in Stop mode to display MAIN MENU.

2 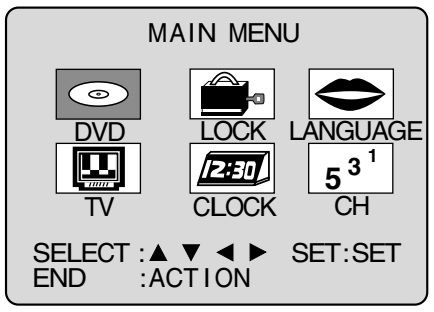

MAIN MENU

DVD LOCK LANGUAGE

TV CLOCK CH

SELECT :▲ ▼ ◀ ▶ SET:SET
END :ACTION

1) **Press ▲▼◀ ▶** to select “DVD.”
2) **Press SET** to display screen.

3 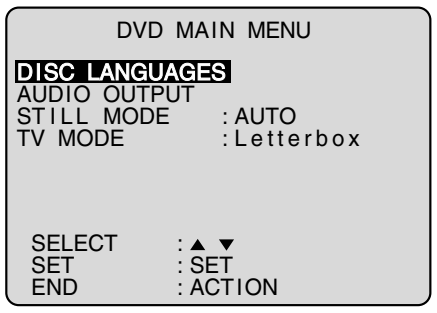

DVD MAIN MENU
DISC LANGUAGES
AUDIO OUTPUT
STILL MODE : AUTO
TV MODE : Letterbox

SELECT : ▲ ▼
SET : SET
END : ACTION

1) **Press ▲▼** to select an item.
2) **Press SET** to set.

DISC LANGUAGES (See below.)
Any languages offered on the disc can be set. If a language not offered is set, the original disc language will be selected.

AUDIO OUTPUT (See page 58.)
You can set the audio output that comes from the digital audio output terminal.

STILL MODE (See page 59.)
To select “FIELD” or “FRAME” to prevent jitter or to make small text or fine patterns clearly visible in a still picture. When “AUTO” is set “FIELD” or “FRAME” is selected automatically.

TV MODE (See page 59.)
To select whether the video material for a wide-screen will be played back in Pan & Scan style or in Letterbox style.

DISC LANGUAGES (DVD only)

To select and set the language of the audio soundtrack, subtitles, or title/DVD menus for all discs to be played.

4 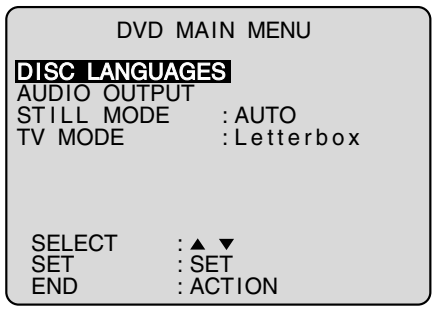

DVD MAIN MENU
DISC LANGUAGES
AUDIO OUTPUT
STILL MODE : AUTO
TV MODE : Letterbox

SELECT : ▲ ▼
SET : SET
END : ACTION

1) **Press ▲▼** to select “DISC LANGUAGES.”
2) **Press SET** to display screen.

5 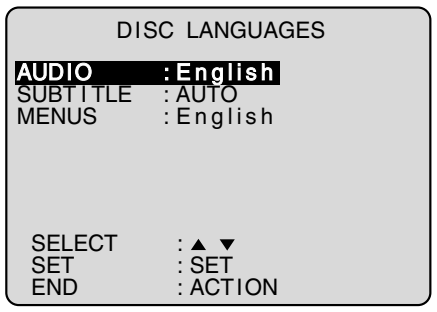

DISC LANGUAGES
AUDIO : English
SUBTITLE : AUTO
MENUS : English

SELECT : ▲ ▼
SET : SET
END : ACTION

1) **Press ▲▼** to select an item.
2) **Press SET** repeatedly for desired language. (Please refer right.)

6 **Press ACTION** to redisplay DVD menu and go to step 3 to setup another item. Or, **press ACTION** three times to exit.

Once initial settings are done, they remain in memory (even after power off) until changed. This means the unit will always operate under the same conditions (especially DVDs) each time.

Ready Checklist

☐ Unit is in TV-VCR mode, press TV/VCR.

“AUDIO” selections

To select the audio soundtrack language.
(factory preset: English)
English/Spanish/French
Original: Original disc language
OTHER ✱✱✱✱: Other language selection*1

“SUBTITLE” selections

To select the subtitle language.
(Factory preset: AUTO)
AUTO: Same language selected for “AUDIO”

- If language set for “AUDIO” is used in playback, subtitles will not appear.
- If another language is used during playback, the subtitles will appear in the language selected at “AUDIO” setup.

English/Spanish/French
OTHER ✱✱✱✱: Other language selection*1

“MENUS” selections

(factory preset: English)
To select the language used in title menus or DVD menus.
English/Spanish/French
OTHER ✱✱✱✱: Other language selection*1

To enter OTHER ✱✱✱✱ code number, Press number keys (Please refer to language codes on page 63).
To make corrections, **press ◀** repeatedly to delete language code number, and correct.

*1 If the selected language is not offered, the original disc language is selected.

Settings for DVD Operation (continued)

AUDIO OUTPUT

Select the digital output to be output from the optical digital audio output connector of the unit.

1 **Do steps 1 and 2 on page 57.**

2

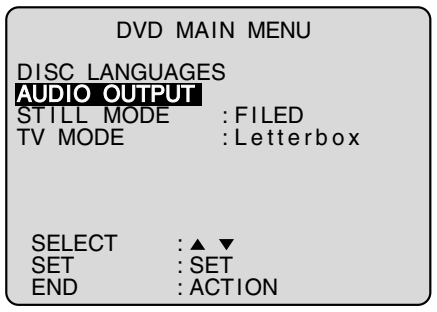

```
DVD MAIN MENU

DISC LANGUAGES
AUDIO OUTPUT
STILL MODE      : FILED
TV MODE         : Letterbox

SELECT    : ▲ ▼
SET       : SET
END       : ACTION
```

1) **Press ▲▼*** to select "AUDIO OUTPUT."
2) **Press SET** to display screen.

3

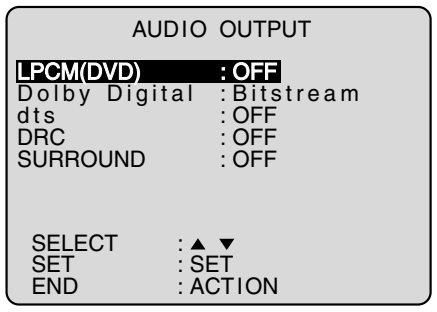

```
AUDIO OUTPUT

LPCM(DVD)       : OFF
Dolby Digital   : Bitstream
dts             : OFF
DRC             : OFF
SURROUND        : OFF

SELECT    : ▲ ▼
SET       : SET
END       : ACTION
```

1) **Press ▲▼** to select an item.
2) **Press SET** repeatedly for output. (See below.)

"LPCM (DVD)" selections

OFF: Linear PCM of less than 48 kHz/16 bit is output. When playing DVDs recorded in linear PCM of over 48 kHz/20 bit or 96 kHz, no digital audio is output. (Factory preset)

PCM: When playing DVDs recorded in linear PCM of 48 kHz/20 bit/24 bit or 96 kHz, digital audio converted to 48 kHz/16 bit is output. (Digital output of PCM audio is restricted to 48 kHz/16 bit or below for copyright protection.)

"Dolby Digital" selections

Bitstream: Dolby Digital bitstream (1ch-5.1ch) is output. (Factory preset)

OFF: No output.

"dts" selections

Bitstream: dts bitstream is output. (Factory preset)

OFF: No output.

"DRC (Dynamic Range Compression)" selections

OFF: Normal audio range is selected. (Factory preset)

ON: For dynamic sound even at low volume, this is useful for late-night listening. [Dolby Digital DVDs only].

"SURROUND" selections

Surround Sound creates the effect of sound coming from non-existent rear speakers even when only connected to a 2-channel stereo system.

OFF: No Surround Sound effect. (Factory preset)

ON: Surround Sound effect.

4 **Press ACTION** to redisplay DVD menu and go to step 2 to setup another item. Or, **press ACTION** three times to exit.

Type of amplifier to be connected	**Recommended setting**		
	LPCM (DVD)	Dolby Digital	dts
No amplifier is connected	OFF	OFF	OFF
AV amplifier (with digital audio input connector) without Dolby Digital/dts decoder	PCM*1	OFF*2	OFF*2
AV amplifier including Dolby Digital decoder	PCM*1	Bitstream	OFF
AV amplifier including Dolby Digital/dts decoder	PCM*1	Bitstream	Bitstream*3

- Make settings according to amplifier connected to optical audio output as shown in above table.
- When a dts decoder is not connected, to enjoy dts DVD, please select audio output other than dts at the dts DVD menu screen. Otherwise, there will be no sound from the unit speakers.

*1 Audio output from unit is converted to 48 kHz/16 bit in addition to audio from digital audio output.
To enjoy high quality sound at 48 kHz/20 bit / 24 bit or 96 kHz, connect the amplifier or decoder directly to the audio output connectors, not to the digital audio output connector. [Select "OFF" at the "LPCM (DVD)".]

*2 When connecting an amplifier (with an optical digital input connector) which does not contain the Dolby Digital or dts decoder, be sure to select "OFF".
If "Bitstream" is selected, starting DVD play may cause such a high level of noise as to be harmful to your ears and damage the speakers.

*3 When a dts decoder is connected, please select "Bitstream" in "dts". If "OFF" is selected, there will be no sound.

Notes

- Turn off other surround effects when using this surround effect.
- For optimum effect, the distance between the unit and the listener should be about 3 or 4 times the distance between the right and left front speakers.

*Important: If a remote control button does not work when pressed, press the DVD button on the remote and try the button again.

STILL MODE

Set to reduce jitter in a displayed still picture or a motion picture.

1 **Do steps 1 and 2 on page 57.**

2

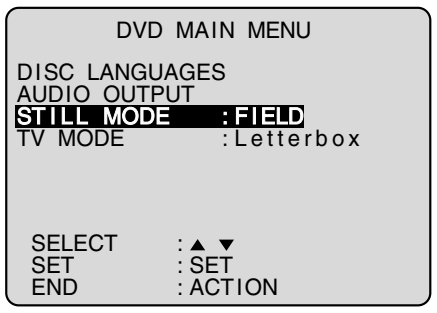

```
DVD MAIN MENU
DISC LANGUAGES
AUDIO OUTPUT
STILL MODE      : FIELD
TV MODE         : Letterbox

SELECT          : ▲ ▼
SET             : SET
END             : ACTION
```

1) **Press ▲▼** to select "STILL MODE."

2) **Press SET** repeatedly for mode. (See below)

AUTO: "FIELD" (Field still) or "FRAME" (Frame still) is automatically selected during the still mode. (Factory preset)

FIELD: "FIELD" (Field still) is always selected. This setting will reduce jitter when compared with "AUTO" on some discs.

FRAME: "FRAME" (Frame still) is always selected. Some texts and fine patterns will be seen clearly when compared with "AUTO" on some discs.

3 **Press ACTION** twice to exit this mode.

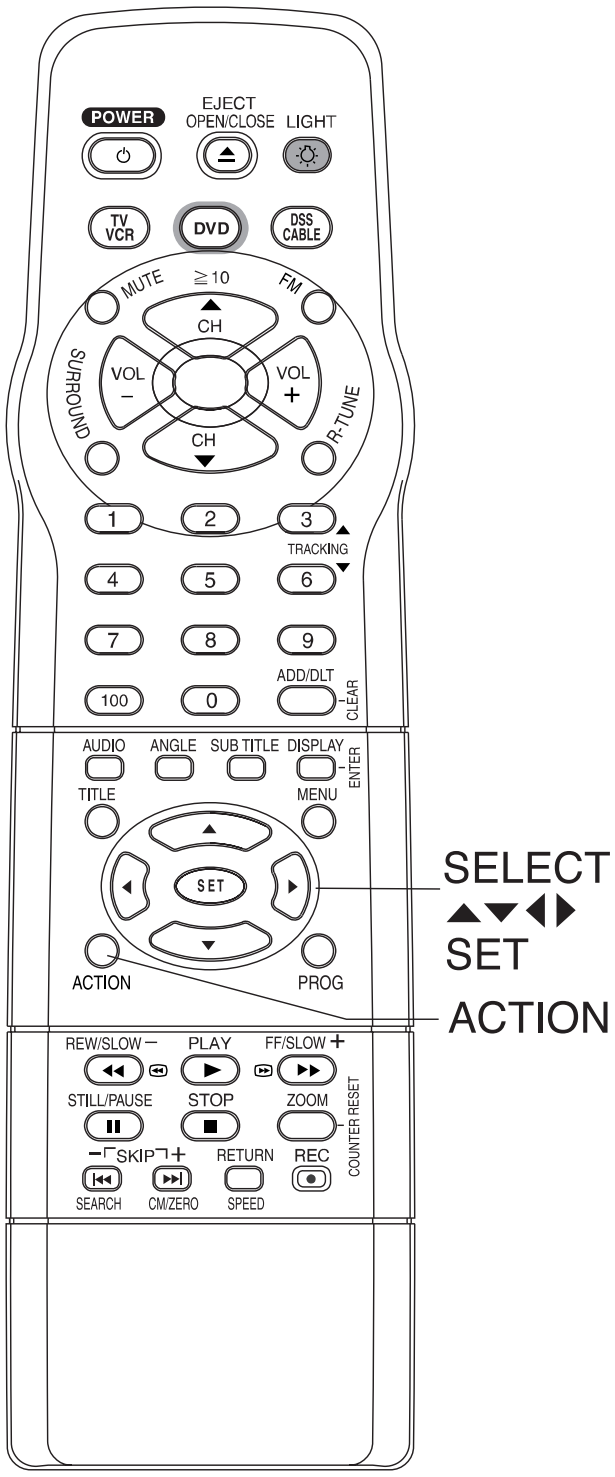
POWER
EJECT
OPEN/CLOSE
LIGHT
TV
VCR
DVD
DSS
CABLE
MUTE
≥10
FM
CH
VOL
−
VOL
+
SURROUND
R-TUNE
CH
1
2
3
TRACKING
4
5
6
7
8
9
ADD/DLT
100
0
CLEAR
AUDIO
ANGLE
SUB TITLE
DISPLAY
ENTER
TITLE
MENU
SET
ACTION
PROG
REW/SLOW −
PLAY
FF/SLOW +
STILL/PAUSE
STOP
ZOOM
COUNTER RESET
−SKIP+
RETURN
REC
SEARCH
CM/ZERO
SPEED
SELECT
▲▼◀▶
SET
ACTION

Selecting TV MODE

Set the screen display style for wide-screen video material playback.

a **Do steps 1 and 2 on page 57.**

b

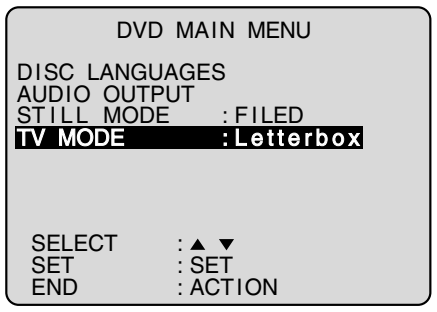

```
DVD MAIN MENU
DISC LANGUAGES
AUDIO OUTPUT
STILL MODE      : FILED
TV MODE         : Letterbox

SELECT          : ▲ ▼
SET             : SET
END             : ACTION
```

1) **Press ▲▼** to select "TV MODE."

2) **Press SET** repeatedly for mode. (See below.)

Pan & Scan : (Factory preset) Wide screen video data is played in Pan & Scan style (left and right of screen is trimmed.)
- Video data not formatted in Pan & Scan will play in letterbox style.

Letterbox : Wide screen video data is played in Letterbox style (top and bottom of screen has black margin).

c **Press ACTION** twice to exit this mode.

Example

- Pan & Scan (Factory preset)

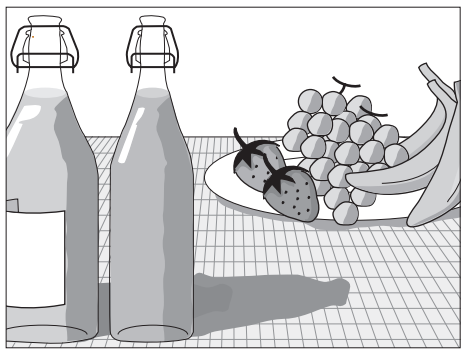

- Letterbox

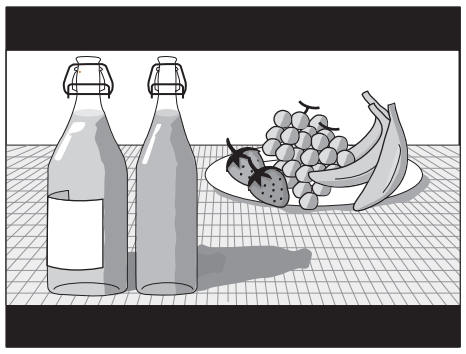

Before Requesting Service

Check the following points once again if you are having trouble with your unit.

Power	Correction
No power…	• Completely insert Power Plug into an AC outlet. • Set POWER button to ON.
Power turns itself off...	• Auto power-off (shutoff) occurs after about 5 min. in DVD mode with no operation, or if there is no broadcast signal in TV or Playback mode. Turn the power back on. (P. 21, 37)

Monitor	Correction
No picture or sound...	• Make sure your antenna system (TV or CABLE), is correctly set. (P. 11) • Completely insert Power Plug into an AC outlet. • Set POWER button to ON.
Poor picture with normal sound...	• Adjust BRIGHTNESS, SHARPNESS, and PICTURE controls in the SET UP Video Adjustment. (P. 47)
Poor sound with normal picture...	• Adjust VOLUME control. (P. 22)
Poor TV reception...	• Adjust SHARPNESS and PICTURE controls in the SET UP Video Adjustment. (P. 47)
No color or poor color...	• Adjust TINT and COLOR controls in the SET UP Video Adjustment. (P. 47)
Ghost (multiple) images...	• Install a directional antenna.
TV programs cannot be watched...	• Make sure the selected channel is in unit's memory. (P. 16)
Channel cannot be selected...	• Only the channel begin recorded can be viewed on this unit.

VCR	Correction
TV program cannot be recorded...	• Make sure your antenna system (TV or CABLE), is correctly set. (P. 11) • Make sure cassette record tab is intact. (P. 4)
Timer recording cannot be performed…	• Check that clock is set to current time and date. • Make sure DSS/CABLE box (if used) is left on and tuned to channel to be recorded. • Set recording Start/Stop times correctly. (P. 30, 31) • Timer recording may not be performed or continued if a power interruption of more than 1 minute occurs before or during a Timer Recording, even after power is restored.
No playback picture, or the playback picture is noisy or contains streaks...	• Adjust TRACKING control in either direction. (P. 6) • Try Head Cleaning. (P. 6)
VCR cannot be controlled...	• Make sure VCR LOCK is set to off. (P. 39)

Remote Control	Correction
Unit cannot be controlled...	• Aim Remote directly at the remote sensor on the unit. (P. 10) • Avoid any object blocking signal path. • Inspect the remote batteries. (P. 4) • Make sure VCR LOCK is set to off. (P. 39) • Exposing unit remote sensor to direct fluorescent or outdoor light may cause signal interference.
ACTION, PLAY, SELECT, SET POWER, etc. buttons cannot be selected...	• Press TV/VCR for TV-VCR mode. (P. 32) • Press DVD for DVD mode. (P. 32) • Press FM for FM mode. (P. 32) • Check remote batteries.

DVD/Video CD/CD	Correction
Play fails to start even when PLAY is pressed...	• This unit cannot play discs other than DVDs, Video CDs and CDs. • The disc may be dirty and require cleaning.
Play starts but then stops immediately...	• Be sure disc is installed with label side up.
Picture is distorted during rapid advance or rapid reverse...	• The picture will be somewhat distorted at times: this is normal.
No Forward/Reverse search play...	• Some discs may have sections which prohibit Forward/ Reverse search. (P. 21)
Play does not start even when title is selected...	• Confirm the “DVD LOCK” setting. (P. 56)
Audio soundtrack and/or subtitle language is not the one selected at the initial settings...	• If the audio soundtrack and/or subtitle language selected at DVD initial settings does not exist on the disc, it will not be accessible.
No subtitles...	• Subtitles appear only when available on disc. • Select “ON” at the “Subtitle Language” section (P. 48) to display subtitles.
Alternative audio soundtrack (or subtitle) language cannot be selected...	• Alternative language cannot be selected with discs which do not contain more than one language. • For some discs, alternative language cannot be selected with the AUDIO or SUB TITLE button. Try selecting it from the DVD menu if available.
Angle cannot be changed...	• This function is dependent on software availability. Even if disc has multiple angles, they may be recorded for specific scenes only (ANGLE Indicator on unit lights up). (P. 49)

Miscellaneous	Correction
Video cassette cannot be inserted...	• Insert the cassette window side up; record tab facing you.
Video cassette cannot be removed...	• Completely insert Power Plug into an AC outlet.
Eject does not function or insertion cannot be done...	• Turn the POWER off and then on, and try ejecting or inserting the tape again.
Video cassette ejects when a recording is started, or the power is turned off for timer recording...	• Make sure cassette record tab is intact. (P. 4)
The disc cannot be removed...	• First, unplug unit. Then, prepare a rigid wire (e.g. an extended paper clip, etc.) and, applying moderate force, insert it straight into the hole at the base of the tray. The tray will eject a little. Now, pull the tray all the way out and remove the disc. (P. 9)
In Stop mode, the VCR motor (CYLINDER) continues to rotate...	• To enable Quick Play mechanism, the VCR cylinder will rotate for about 3 minutes. This reduces response time from Stop to Play mode and from Play to Rewind Search mode.

If you cannot resolve the problem, please call the Customer Call Center for product assistance at 1-800-211-PANA (7262.)
To locate an authorized servicenter, please call toll free 1-800-211-PANA (7262.)
or send e-mail to : consumerproducts@panasonic.com

Warning and Instruction Displays

These displays will alert you of a missed operation or provide further instructions.

OSD	Caution	Page
PLEASE SET CLOCK BEFORE PROGRAMMING	• If you attempt to set or review a Timer Recording or set the On-Timer and the Clock is not set...	16, 17
CHECK CASSETTE RECORD TAB	• If you press REC, and a cassette is inserted with no record tab...	4, 18
TO CANCEL TIMER REC HOLD DOWN STOP KEY FOR APPROX 3 SEC	• If you press STOP during a Timer Recording...	31
NO CASSETTE PLEASE INSERT A CASSETTE	• If you press PLAY, FF, REW, or REC without a cassette inserted...	18
PLEASE PREPARE FOR TIMER REC	• If the unit is not in Stop mode or a cassette with record tab is not inserted two minutes before a Timer Recording is about to begin...	30, 31
VIDEO HEADS MAY NEED CLEANING PLEASE INSERT HEAD CLEANING CASSETTE OR REFER TO MANUAL END: PLAY	• If head cleaning becomes necessary while playing back a tape...	6
VCR LOCK ACTIVATED	• If you press a function button other than STOP/EJECT or POWER while the unit is in VCR Lock mode...	39
PLEASE CHECK THE DISC, AND FOR STAINS OR SCRATCHES ON DISC	• If you press PLAY, or the unit reads data from a stained or scratched disc in DVD mode. Also, if the type of disc is other than DVD, Video CD or CD...	7
IT IS PROHIBITED TO COPY DVD/ VIDEO CD/CD TO VHS	• If you press REC in DVD mode...	18, 19

Language Code List

Enter the appropriate code number for the initial settings “AUDIO”, “SUBTITLE” and/or “MENUS” (see page 57).

Code	Language
6565	Afar
6566	Abkhazian
6570	Afrikaans
6577	Ameharic
6582	Arabic
6583	Assamese
6588	Aymara
6590	Azerbaijani
6665	Bashkir
6669	Byelorussian
6671	Bulgarian
6672	Bihari
6678	Bengali; Bangla
6679	Tibetan
6682	Breton
6765	Catalan
6779	Corsican
6783	Czech
6789	Welsh
6865	Danish
6869	German
6890	Bhutani
6976	Greek
6978	English
6979	Esperanto
6983	Spanish
6984	Estonian
6985	Basque
7065	Persian
7073	Finnish
7074	Fiji

Code	Language
7079	Faroese
7082	French
7089	Frisian
7165	Irish
7168	Scots Gaelic
7176	Galician
7178	Guarani
7185	Gujarati
7265	Hausa
7273	Hindi
7282	Croatian
7285	Hungarian
7289	Armenian
7365	Interlingua
7378	Indonesian
7383	Icelandic
7384	Italian
7387	Hebrew
7465	Japanese
7473	Yiddish
7487	Javanese
7565	Georgian
7575	Kazakh
7576	Greenlandic
7577	Cambodian
7578	Kannada
7579	Korean
7583	Kashmiri
7585	Kurdish
7589	Kirghiz
7665	Latin

Code	Language
7678	Lingala
7679	Laothian
7684	Lithuanian
7686	Latvian, Lettish
7771	Malagasy
7773	Maori
7775	Macedonian
7776	Malayalam
7778	Mongolian
7779	Moldavian
7782	Marathi
7783	Malay
7784	Maltese
7789	Burmese
7865	Nauru
7869	Nepali
7876	Dutch
7879	Norwegian
7982	Oriya
8065	Panjabi
8076	Polish
8083	Pashto, Pushto
8084	Portuguese
8185	Quechua
8277	Rhaeto-Romance
8279	Romanian
8285	Russian
8365	Sanskrit
8368	Sindhi
8372	Serbo-Croatian
8373	Singhalese

Code	Language
8375	Slovak
8376	Slovenian
8377	Samoan
8378	Shona
8379	Somali
8381	Albanian
8382	Serbian
8385	Sundanese
8386	Swedish
8387	Swahili
8465	Tamil
8469	Telugu
8471	Tajik
8472	Thai
8473	Tigrinya
8475	Turkmen
8476	Tagalog
8479	Tonga
8482	Turkish
8484	Tatar
8487	Twi
8575	Ukrainian
8582	Urdu
8590	Uzbek
8673	Vietnamese
8679	Volapük
8779	Wolof
8872	Xhosa
8979	Yoruba
9072	Chinese
9085	Zulu

Spanish Quick Use Guide/Guía para rápida consulta

Conexión de la antena externa

Desenganche la antena del televisor o de la videograbadora que tuviera anteriormente y conéctela a la parte trasera del registrador Combinación de TV/DVD/VDR, como se muestra en el diagrama. Si el sistema de su antena tiene conductores UHF y VHF separados, usted necesita un mezclador de banda UHF/VHF (no viene con el equipo.)

ADVERTENCIA:
Al utilizar cables coaxiales RF del "Tipo tuerca", solo debe apretarse con los dedos. Si se aprieta demasiado los cables pueden resultar dañados.

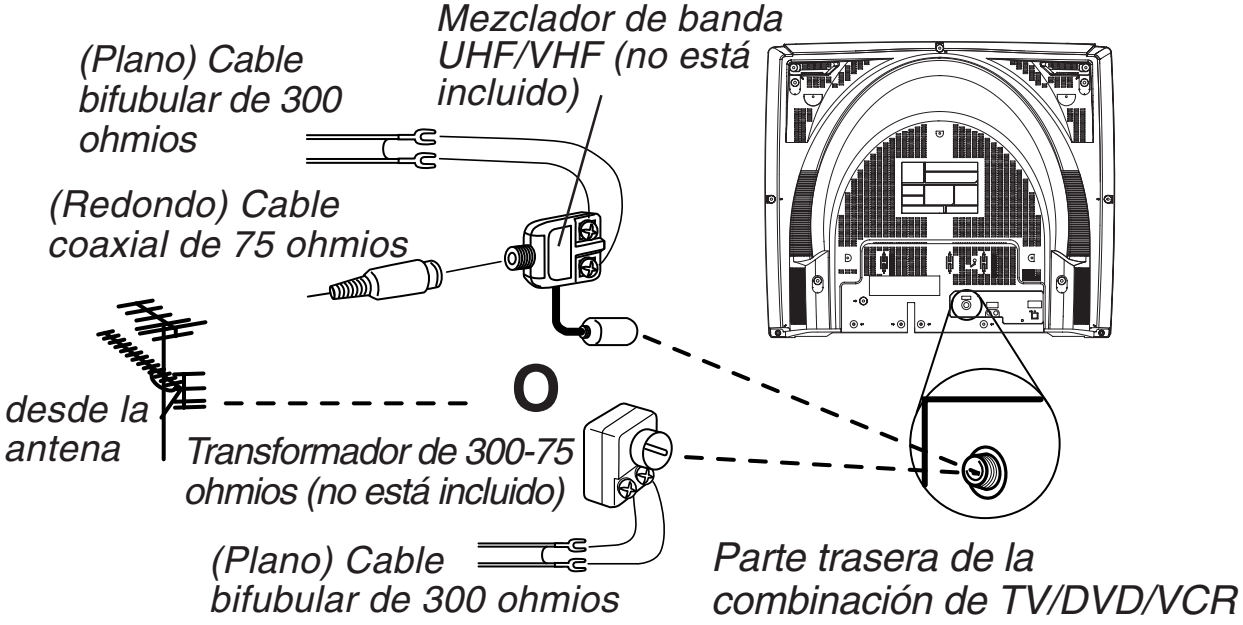
(Plano) Cable bifubular de 300 ohmios
Mezclador de banda UHF/VHF (no está incluido)
(Redondo) Cable coaxial de 75 ohmios
desde la antena
O
Transformador de 300-75 ohmios (no está incluido)
(Plano) Cable bifubular de 300 ohmios
Parte trasera de la combinación de TV/DVD/VCR

Conexiones de TV cable

■ Sin un decodificador de TV cable

Podrá;
- grabar o ver canales sin codificar.

No Podrá;
- grabar o ver canales codificados.
- ver otro canal que no sea el seleccionado para cualquier tipo de grabación.

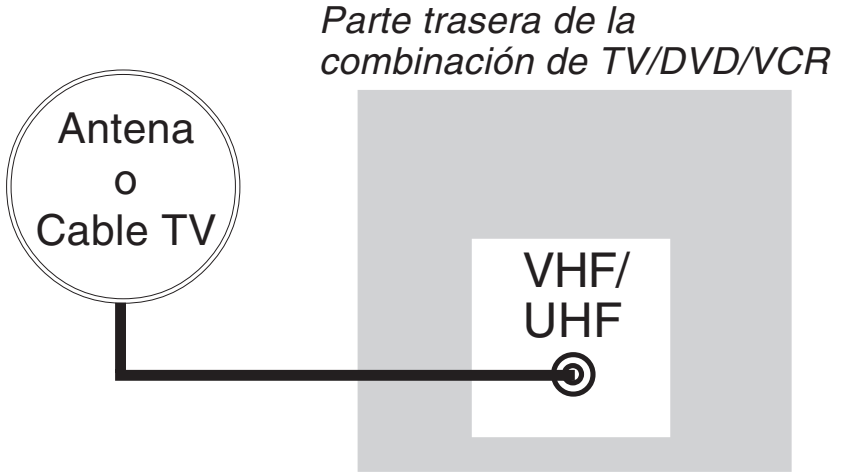
Parte trasera de la combinación de TV/DVD/VCR
Antena o Cable TV
VHF/ UHF

■ Con un decodificador de TV cable

Podrá;
- grabar o ver cualquier canal incluso los canales codificados.

NOTA : El canal deberá ser seleccionado en el decodificador de TV cable.

No Podrá;
- ver otro canal que no sea el seleccionado para cualquier tipo de grabación.
- hacer una grabación con temporizador de un canal a menos que lo seleccione en el decodificador de TV cable.

Para ver y grabar un canal codificado/ no codificado
Sintonice el canal del Registrador de la combinación de VCR/TV en el canal de salida de la caja convertidora de televisión por cable (por ejemple el canal 3.) Después, seleccione en el decodificador de TV cable el canal que se quiera ver o grabar.

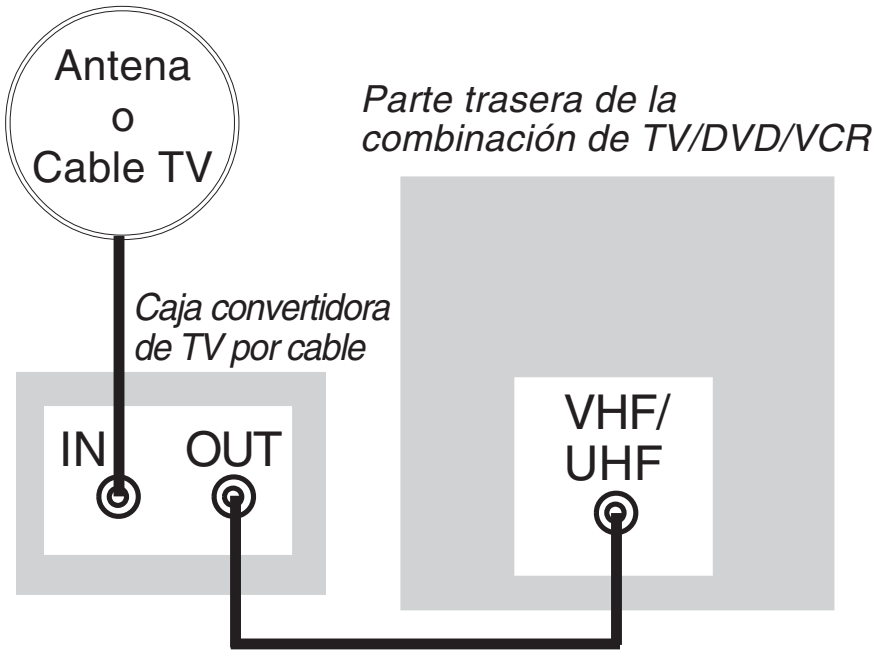
Antena o Cable TV
Parte trasera de la combinación de TV/DVD/VCR
Caja convertidora de TV por cable
IN
OUT
VHF/ UHF

■ Con un receptor DSS

Podrá;
- grabar o ver cualquier canal incluso los canales codificados.

NOTA : El canal deberá ser seleccionado en el receptor DSS.

No Podrá;
- ver otro canal que no sea el seleccionado para cualquier tipo de grabación.
- hacer una grabación con temporizador de un canal a menos que lo seleccione en el receptor DSS.

NOTA : El receptor DSS debe estar apagado para ver programas desde un decodificador de TV cable o desde la antena. Consulte el manual del receptor DSS para más detalles.

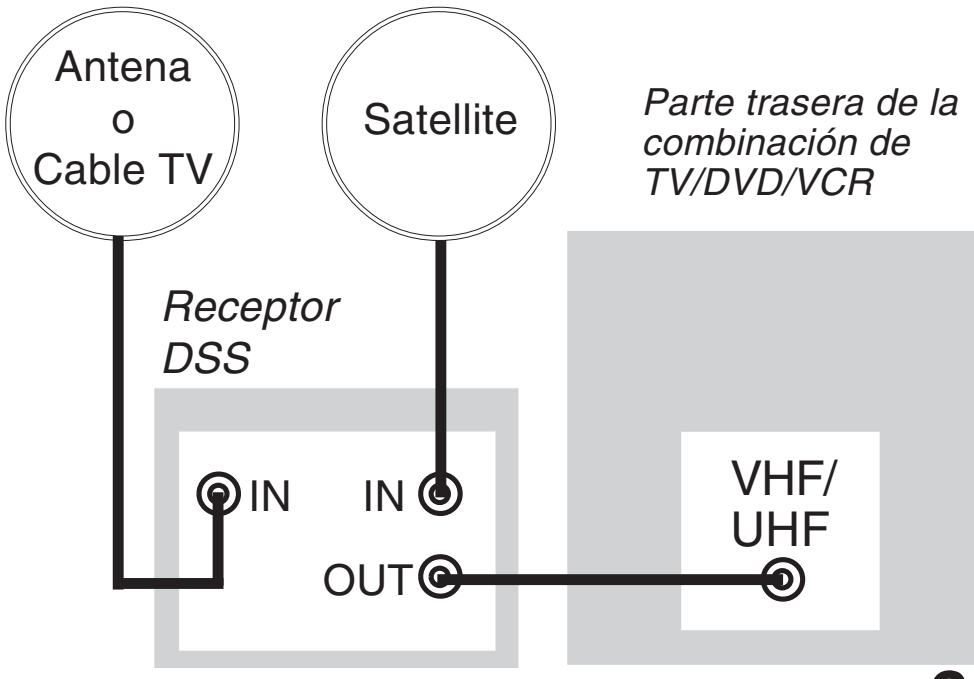
Antena o Cable TV
Satellite
Parte trasera de la combinación de TV/DVD/VCR
Receptor DSS
IN
IN
OUT
VHF/ UHF

Spanish Quick Use Guide/Guía para rápida consulta

Realizando Configuracion Inicial

Presione TV/VCR para modo del TV-VCR

1 **Tape el cable electrico de la unidad en el enchufe de pared de la CA.**

2 **POWER de la prensa en el telecontrol o la unidad. La unidad se adelanta y comienzo auto del canal y del reloj.**

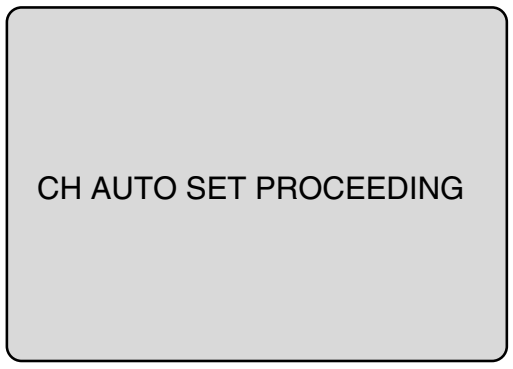

CH AUTO SET PROCEEDING

- Si usa convertidor de cable, enciendala y seleccione el Servicio Publico de Canales de Television (PBS) en su horario de uso o tiempo de su zona. Si utiliza receptor DSS este debe de estar apagado.

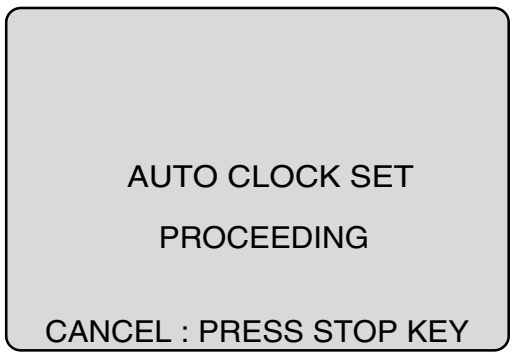

AUTO CLOCK SET
PROCEEDING
CANCEL : PRESS STOP KEY

3 **Selecciones se realizaran automaticamente cuando la configuracion termine, la pantalla siguiente aparecera.**

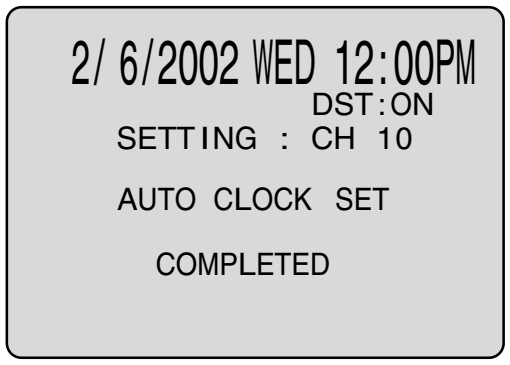

2/ 6/2002 WED 12:00PM
DST:ON
SETTING : CH 10
AUTO CLOCK SET
COMPLETED

Si “AUTO CLOCK SET IS INCOMPLETE” aparece en pantalla, coloque el tiempo usando el procedimiento manual (MANUAL CLOCK SET), vealo enseguida.

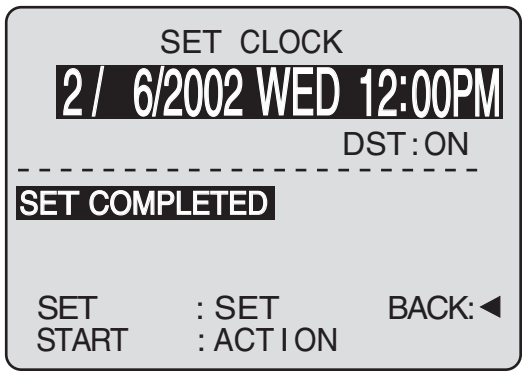

SET CLOCK
2/ 6/2002 WED 12:00PM
DST:ON
SET COMPLETED
SET : SET BACK:◄
START : ACTION

Ajuste Manual del Reloj

Si el ajuste automático del reloj no se ha completado, ajuste el reloj manualmente de la siguiente manera:

1) Presione la tecla ACTION en el control remoto para visualizar la pantalla del menú RELOJ.
2) Presione ▲▼ para seleccionar el mes y **SET** para ajustar. De la misma forma, seleccione y ajuste la fecha, año, hora y DST (Hora de Verano).
3) Presione dos veces la tecla ACTION para poner el RELOJ en marcha y salir.

Ajustar de nuevo el reloj

1 Presione ACTION para exhiba el menú.

2

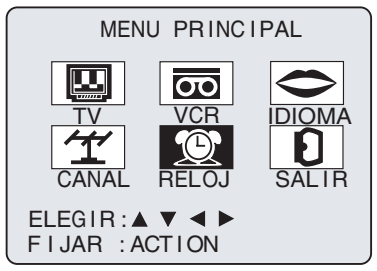

Presione ▲▼◄► para seleccionar “RELOJ”. Presione SET.

3

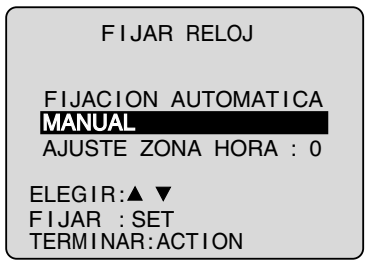

FIJAR RELOJ
FIJACION AUTOMATICA
MANUAL
AJUSTE ZONA HORA : 0
ELEGIR:▲ ▼
FIJAR : SET
TERMINAR:ACTION

Presione ▲▼ para seleccionar “MANUAL” y luego presione SET.

4

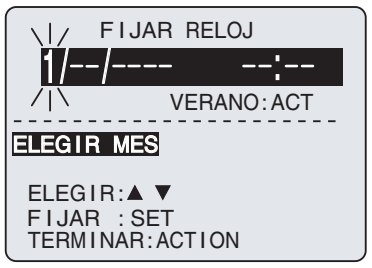

FIJAR RELOJ
1/--/---- --:--
VERANO:ACT
ELEGIR MES
ELEGIR:▲ ▼
FIJAR : SET
TERMINAR:ACTION

Presione ▲▼ y SET para seleccionar y ajustar la hora y la fecha.

5 Presione ACTION dos veces para que el reloj comience a funcionar y salir desde este modo.

Operaciones básicas para la reproducción

1 Inserte un cassette.
- El videograbador combinado se enciende automáticamente.

2 Presione PLAY.
- La reproducción comienza automáticamente si el cassette no tiene la lengüeta para prevención de grabación.

■ Para encontrar una escena en particular
Búsqueda hacia adelante ➔ Presione FF/SLOW+
Búsqueda hacia atrás ➔ Presione REW/SLOW-

■ Para ver una imagen fija (congelada) ➔ Presione STILL/PAUSE

■ Para ver en cámara lenta ➔ Presione FF/SLOW+ o REW/SLOW- en el modo de imagen fija

■ Para ver imágenes cuadro a cuadro ➔ Presione STILL/PAUSE en el modo de imagen fija

■ Para parar ➔ Presione STOP

■ Para rebobinar la cinta ➔ Presione REW/SLOW-

■ Para hacer avanzar la cinta rápidamente ➔ Presione FF/SLOW+

■ Para expulsar el cassette ➔ Presione EJECT en el control remoto o STOP/EJECT en el videograbador combinado

Operaciones básicas para la grabación

1 Inserte un el cassette con la lengüeta para prevención de grabado.
- El videograbador combinado se enciende automáticamente.

2 Seleccione el canal.
Presione CH ▲▼ o las teclas numéricas correspondiente.

3 Seleccione la velocidad de grabación.
Presione SPEED.
SP = reproducción normal
LP = reproducción larga
SLP = reproducción super larga
- La velocidad seleccionada debe aparecer en la pantalla.

4 Comience la grabación.
Presione REC.
- Para editar partes no deseadas de una grabación, presione STILL/PAUSE para hacer una pausa durante la grabación.
- No podrá ver otro canal durante la grabación.

■ Para parar ➔ Presione STOP.

■ **El videograbador combinado deja de grabar a una hora prefijada.**
(Grabación de un toque)
Presione REC repetidamente para ajustar la hora de grabación (30 min - 4 horas.)

Grabación con temporizador

1 Exhiba FIJAR PROGRAMACION.
Presione PROG.

2

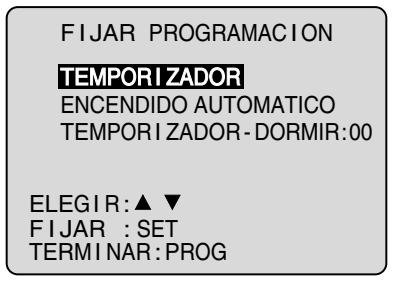

```
FIJAR PROGRAMACION
TEMPORIZADOR
ENCENDIDO AUTOMATICO
TEMPORIZADOR-DORMIR:00

ELEGIR:▲ ▼
FIJAR  :SET
TERMINAR:PROG
```

Exhiba TEMPORIZADOR.
1) Presione ▲▼ para seleccionar.
2) Presione SET para exhibir.

- Si ya existe un programa en la memoria, presione ▲▼ y SET para seleccionar un número de programa sin usar.

3

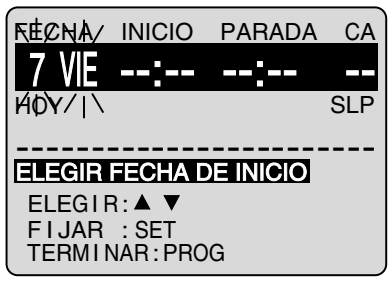

```
FECHA   INICIO   PARADA   CA
 7 VIE  --:--    --:--    --
HOY                      SLP
----------------------------
ELEGIR FECHA DE INICIO
 ELEGIR:▲ ▼
 FIJAR  :SET
 TERMINAR:PROG
```

Ajuste la fecha de grabación.
1) Presione ▲▼ para seleccionar.
2) Presione SET o ◀ ▶ para ajustar.

- 1 - 31 = Grabación única
- DIARIO = a la misma hora de lunes a viernes
- SEMANAL = a la misma hora una vez a la semana



Repita el paso 3 para ajustar:
hora de comienzo, hora de parada, canal (o LINEA para una fuente exterior), velocidad (SP, LP, SLP).

4

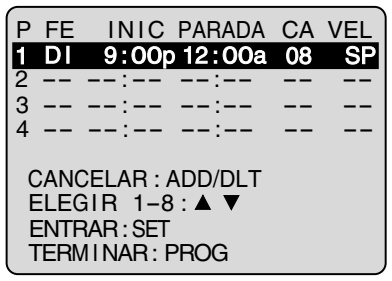

```
P FE    INIC  PARADA  CA  VEL
1 DI   9:00p 12:00a   08   SP
2 -- --:--  --:--     --   --
3 -- --:--  --:--     --   --
4 -- --:--  --:--     --   --

 CANCELAR : ADD/DLT
 ELEGIR 1-8 : ▲ ▼
 ENTRAR : SET
 TERMINAR : PROG
```

Termine el programa.
Presione PROG
Para introducir más programas.
presione ▲▼ y SET para seleccionar y ajustar el número de programa en blanco, y luego repita los pasos 3.

5 Salga de este modo.
Presione PROG dos veces
- Si está usando un decodificador de TV cable, asegúrese que se encuentra en el canal deseado y que la alimentación queda conectada para grabar con temporizador.
- El indicador PROG TIMER se enciende en el videograbador combinado.

Spanish Quick Use Guide/Guía para rápida consulta

Operaciones básicas del DVD

1 **Presione POWER en el control remoto o el aparato.**

2 **Elija el modo DVD**
Presione DVD.

3 **Introducir un disco.**
1) Presione OPEN/CLOSE.
2) Ponga un disco en la bandeja de disco.
- Sujete el disco sin tocar ninguna de sus superficies, póngalo con el lado donde esté impreso el título hacia arriba, alinéelo con las guías y póngalo en su posición apropiada. Disco de 3"(8 cm) Disco de 5" (12 cm)

4 **Iniciar la reproducción**
Presione PLAY.
La bandeja del disco se cierra automáticamente.
- Si está usando un DVD interactivo (Interactive DVD) o un Vídeo CD con contol de reproducción (playback control) y aparece un menú de títulos (TITLE MENU) en la pantalla, siga al paso 5.

5 **Elija el artículo deseado.**
1) Presione ▲▼◀ ▶ o las teclas numéricas.
2) Presione SET para la reproducción.
Si usa las teclas numéricas, la reproducción comienza automáticamente.

6 **Parar la reproducción.**
Presione STOP.

7 **Expulsar el disco.**
Presione OPEN/CLOSE.

- **Para buscar una escena particular**
  Búsqueda hacia adelante
  Presione FF/SLOW+ en el modo de reproducción.
  Búsqueda hacia atrás
  Presione REW/SLOW- en el modo de reproducción.
  (Para liberar, presione PLAY)
- **Para saltar un capítulo o una pista**
  Salto hacia adelante
  Presione SKIP ▶▶I en el modo de reproducción.
  Un capítulo (DVD) o una pista (Vídeo CD/CD) se salta cada ves que se oprime la tecla.
  Salto hacia atrás
  Presione I◀◀ SKIP en el modo de reproducción.
- **Para ver una imagen fija**
  Presione STILL/PAUSE durante la reproducción.
  (Para liberar, presione PLAY)
- **Para ver imágenes cuadro a cuadro (DVD/Vídeo CD)**
  Presione STILL/PAUSE en el modo de imagen fija.
  La imagen avanza un cuadro cada vez que presiona la tecla.
  (Para volver a la reproducción normal, presione PLAY.)
- **Para ver en cámara lenta (DVD/Vídeo CD)**
  Presione FF/SLOW+ o REW/SLOW- en el modo de imagen fija.
  (Para liberar, presione PLAY)

Funcionnamiento del DVD utilizando visualizaciones en pantalla

Cuando se presiona DISPLAY, la visualización en pantalla muestra la información del disco (título / capítulo / número de lista, tiempo transcurrido de reproducción, audio / idioma del subtítulo, y ángulo) e información (repetir la reproducción, modo reproducción, Karaoke vocal encendido / apagado, etc.).

1 **Visualizar Visualizaciones en pantalla.**
Presione DISPLAY en el modo reproducción o parada.
- Cada vez que se presione DISPLAY, la visualización en pantalla cambia como se muestra a continuación.

→ Información seleccionada del disco
↓
Información seleccionada de la unidad
↓
Pantalla normal

2 **Selección del ítem deseado**
1) Presione ▲▼ (o ◀ ▶) para seleccionar.
2) Presione SET para ajustar

3 <Ejemplo de DVD>

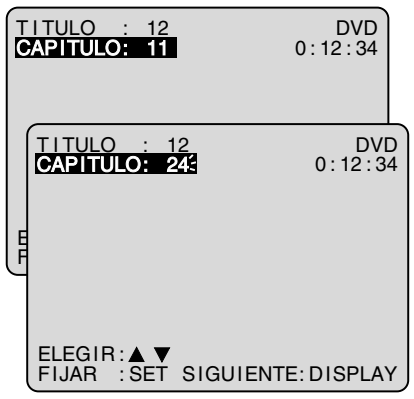

Selección del ajuste deseado
1) Presione ▲▼ para seleccionar.
2) Presione SET para ajustar.

<Ejemplo de Vídeo CD>

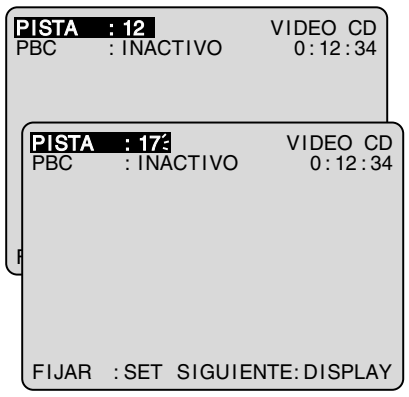

Para volver a la pantalla normal,
Presione repetidamente CLEAR o DISPLAY.

Cambio del idioma de subtítulos [DVD solamente]

El idioma de los subtítulos seleccionado al hacer las fijaciones iniciales se puede cambiar por otro idioma diferente, si éste se encuentra disponible.

1

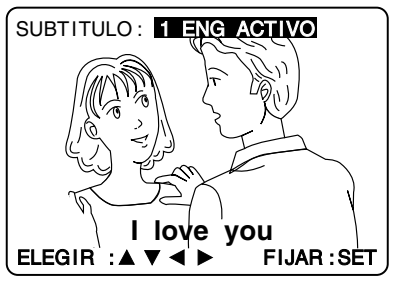
SUBTITULO : 1 ENG ACTIVO
I love you
ELEGIR : ▲ ▼ ◀ ▶
FIJAR : SET

Presione SUBTITLE durante la reproducción.

Cuando no haya subtítulos grabados, “-” se visualizará en lugar del número de idioma.

2

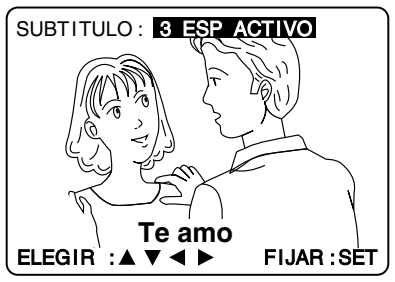
SUBTITULO : 3 ESP ACTIVO
Te amo
ELEGIR : ▲ ▼ ◀ ▶
FIJAR : SET

Seleccionar el idioma deseado.

1) Presione ▲▼ para seleccionar idioma.
2) Presione ▶ (o ◀) para ajustar.
3) Presione ▲ (o ▼) para seleccionar “ACTIVO” o “INACTIVO.”

Cambio del idioma de la pista de sonido [DVD solamente]

El idioma de la pista de sonido seleccionado al hacer las fijaciones iniciales se puede cambiar por otro idioma diferente, si éste se encuentra disponible.

1

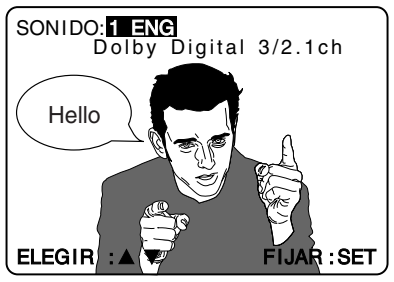
SONIDO: 1 ENG
Dolby Digital 3/2.1ch
Hello
ELEGIR : ▲ ▼
FIJAR : SET

Visualizar la pantalla AUDIO.

Presione AUDIO durante la reproducción.

2

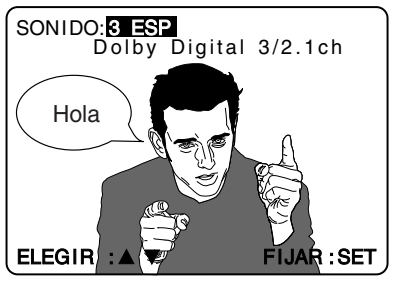
SONIDO: 3 ESP
Dolby Digital 3/2.1ch
Hola
ELEGIR : ▲ ▼
FIJAR : SET

Seleccionar el idioma deseado.

Presione ▲▼ para seleccionar idioma.

Visión desde otro ángulo [DVD solamente]

Algunos discos DVD tienen escenas que han sido filmadas simultáneamente desde un número de ángulos diferentes. Con estos discos, la misma escena podrá verse desde cada uno de estos ángulos diferentes utilizando el botón ANGLE.

1

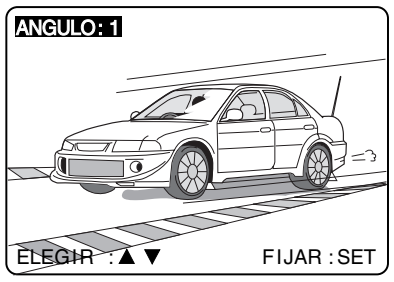
ANGULO : 1
ELEGIR : ▲ ▼
FIJAR : SET

Visualizar la pantalla de ángulo.

Presione ANGLE durante la reproducción.

2

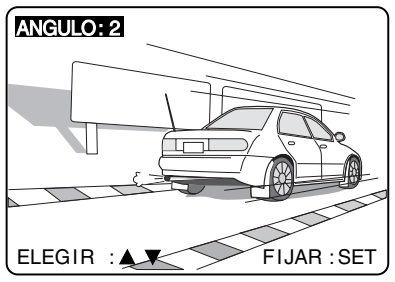
ANGULO : 2
ELEGIR : ▲ ▼
FIJAR : SET

Seleccionar el ángulo deseado.

Presione ▲▼ para seleccionar.

Selección de vocal para los discos de Karaoke [DVD/Video CD]

1 **Visualizar la pantalla AUDIO.**

Presione AUDIO durante la reproducción.

2

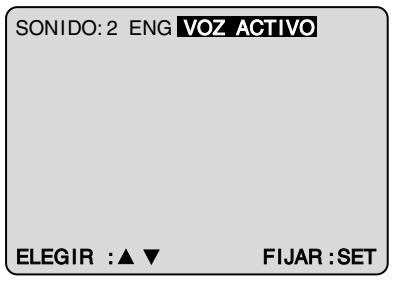
SONIDO: 2 ENG VOZ ACTIVO
ELEGIR : ▲ ▼
FIJAR : SET

Seleccionar el ajuste deseado.

1) Presione ▲▼ (o ◀ ▶) para seleccionar.
2) Presione ▶ (o ◀) para ajustar. (DVD solamente)

- DVD Karaoke (1 vocal) VOCAL ON↔VOCAL OFF
- DVD Karaoke (2 vocales) VOCAL V1 + V2 → VOCAL V1 → VOCAL V2 → VOCAL OFF → VOCAL V1 + V2
- Video CD LR → L → R

Utilización de un menú de títulos [DVD solamente]

Algunos discos con películas, por ejemplo, vienen con dos o más títulos. Si el disco tiene un menú de títulos grabados, el botón TITLE podrá utilizarse para seleccionar el título de la película.

1 **Presione TITLE durante la reproducción.**

Ahora se visualiza una lista de los títulos del disco.

2

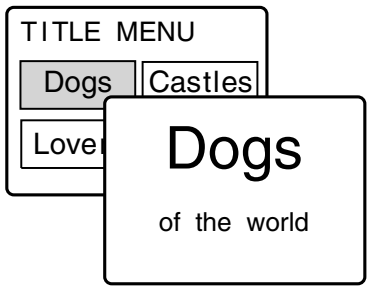
TITLE MENU
Dogs
Castles
Love
Dogs
of the world

Seleccionar el título deseado.

1) Presione ▲▼ ◀ ▶ o las teclas numéricas seleccionar.
2) Presione SET o PLAY.

Utilización de un menu de DVD [DVD solamente]

Algunos discos DVD tienen estructuras únicas de menús llamadas menús DVD. Por ejemplo, los DVDs programados con un contenido complejo proporcionan menús guía, y los grabados con varios idiomas proporcionan menús para audio e idiomas de subtítulos. Aunque los contenidos de los menús DVD y la operación cambian de disco a disco, a continuación se explica la operación básica cuando se utiliza esta característica.

1 **Presione MENU durante la reproducción.**

El menú de DVD introducido en el disco se visualiza ahora.

2

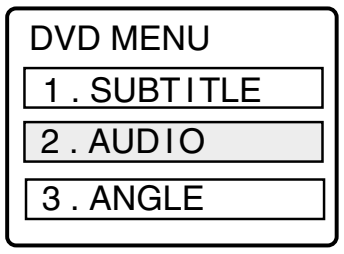
DVD MENU
1 . SUBTITLE
2 . AUDIO
3 . ANGLE

Seleccionar el ítem deseado.

1) Presione ▲▼ ◀ ▶ o las teclas numéricas para seleccionar.
2) Presione SET o PLAY.

Ampliación de la imagen [DVD solamente]

Durante la reproducción de un DVD, puede ampliar partes específicas de una imagen y seleccionar la relación de zoom usando el botón ZOOM del control remoto.

Seleccione el tamaño de la imagen.

Presione ZOOM repetidamente para cambiar el tamaño de la imagen como se indica a continuación:

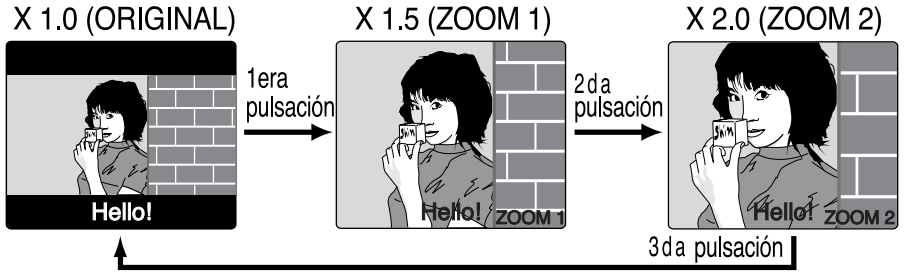
X 1.0 (ORIGINAL)
X 1.5 (ZOOM 1)
X 2.0 (ZOOM 2)
1era pulsación
2da pulsación
3da pulsación
Hello!
ZOOM 1
ZOOM 2

- ■ Use los botones ▲ y ▼ para desplazar la posición hacia arriba o hacia abajo.
- ■ Use los botones ◀ y ▶ para desplazar la posición hacia la izquierda o hacia la derecha.

Spanish Quick Use Guide/Guía para rápida consulta

Reproducción programada [Vídeo CD/CD]

Puede usted programar pistas específicas y el orden de reproducción.

- Vídeo CD o CD es insertado en el modeo DVD.

1 Visualizar MAIN MENU.

Presione ACTION en el modo parada.

2 Vísualizar la pantalla DVD.

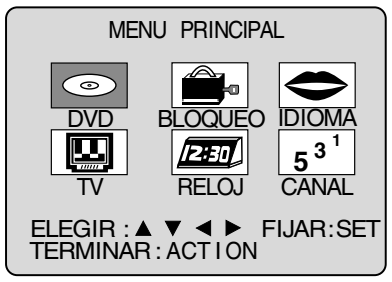
MENU PRINCIPAL
DVD
BLOQUEO
IDIOMA
TV
RELOJ
CANAL
12:30
5 3 1
ELEGIR : ▲ ▼ ◀ ▶ FIJAR:SET
TERMINAR : ACTION

1) Presione ▲▼◀▶ para seleccionar “DVD.”
2) Presione SET para visualizar.

3 Seleccionar “MODO DE REPRODUCCION.”

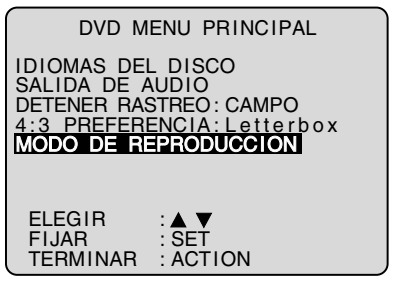
DVD MENU PRINCIPAL
IDIOMAS DEL DISCO
SALIDA DE AUDIO

DETENER RASTREO: CAMPO
4:3 PREFERENCIA: Letterbox

MODO DE REPRODUCCION
ELEGIR : ▲ ▼
FIJAR : SET
TERMINAR : ACTION

1) Presione ▲▼ para seleccionar.
2) Presione SET para visualizar.

4 Seleccionar “REPRODUCCION DE PROGRAMAS.”

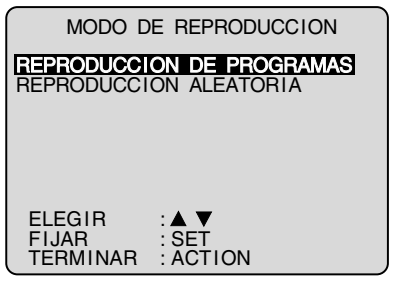
MODO DE REPRODUCCION
REPRODUCCION DE PROGRAMAS
REPRODUCCION ALEATORIA
ELEGIR : ▲ ▼
FIJAR : SET
TERMINAR : ACTION

1) Presione ▲▼ para seleccionar.
2) Presione SET para visualizar.

5 Seleccionar el número de la pista deseada. (Se visualizan los números de la pista del disco).

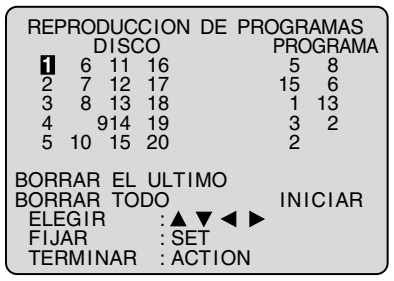
REPRODUCCION DE PROGRAMAS
DISCO
PROGRAMA
1 6 11 16
2 7 12 17
3 8 13 18
4 914 19
5 10 15 20
5 8
15 6
1 13
3 2
2
BORRAR EL ULTIMO
BORRAR TODO
INICIAR
ELEGIR : ▲ ▼ ◀ ▶
FIJAR : SET
TERMINAR : ACTION

1) Presione ▲▼◀▶ para seleccionar.
2) Presione SET para seleccionar.

- Repita el paso 5 para seleccionar otra pista.
- La pista seleccionada se añade a la parte derecha.

6 Comenzar “REPRODUCCION DE PROGRAMAS.”

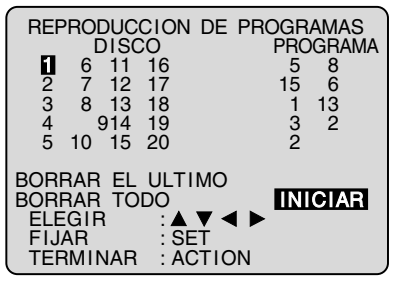
REPRODUCCION DE PROGRAMAS
DISCO
PROGRAMA
1 6 11 16
2 7 12 17
3 8 13 18
4 914 19
5 10 15 20
5 8
15 6
1 13
3 2
2
BORRAR EL ULTIMO
BORRAR TODO
INICIAR
ELEGIR : ▲ ▼ ◀ ▶
FIJAR : SET
TERMINAR : ACTION

1) Presione ▲▼◀▶ para seleccionar “INICIAR.”
2) Presione SET.

- La reproducción comienza en la secuencia programada.
- Para cancelar, pulsar STOP durante la reproducción y luego presione CLEAR.

Reproducción arbitraria [Vídeo CD/CD]

Las pistas se reproducen de forma arbitraria.

1 Repita los pasos 1-3 de la página anterior.

2 Seleccionar “REPRODUCCION ALEATORIA.”

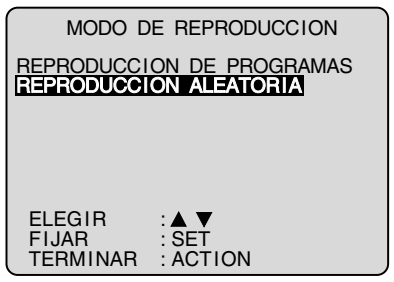
MODO DE REPRODUCCION
REPRODUCCION DE PROGRAMAS
REPRODUCCION ALEATORIA
ELEGIR : ▲ ▼
FIJAR : SET
TERMINAR : ACTION

1) Presione ▲▼ para seleccionar.
2) Presione SET.

- Comienza la reproducción arbitraria.
- Para cancelar, presione STOP durante la reproducción y luego presione CLEAR.

Fijaciones iniciales

1 Visualizar MAIN MENU. Presione ACTION en el modo de parada.

2 Visualizar la pantalla DVD.

1) Presione ▲▼◀▶ para seleccionar.
2) Presione SET.

3 Seleccionar el artículo deseado.

1) Presione ▲▼ para seleccionar.
2) Presione SET.

IDIOMAS DEL DISCO

Todos los idiomas ofrecidos en el disco pueden ser ajustados, Si el idioma ajustado no es ofrecido en el disco, se seleccionará el idioma original del disco.

SALIDA DE AUDIO

Puede usted ajustar la salida audio procedente del terminal de salida audio digital.

DETENER RASTREO

Para seleccionar “CAMPO” o “CUADRO” para prevenir inestabilidad o para permitir ver textos pequeños o patrones finos claramente en el modo de imagen fija.

4 : 3 PREFERENCIA

Para seleccionar si el material del vídeo para pantalla ancha será vuelto a reproducir en el estilo Pan&Scan o en el estilo Letterbox en la pantalla.

4 Seleccionar el artículo deseado.

1) Presione ▲▼ para seleccionar.
2) Presione SET.

5 Volver a visualizar el menú de DVD para continuar el ajuste.

Presione ACTION y pase al paso 3 para ajustar otro ajuste o, para salir, presione ACTION tres veces.

Selección de IDIOMAS DEL DISCO [DVD solamente]

Seleccione “AUDIO” Inglés / Español / Francés : (Fijación de fábrica : inglés)

Original : Se seleccionará el idioma original de cada disco.

OTRO ** :** Se puede seleccionar el otro idioma.

Seleccione “SUBTITULO”

AUTO : Se seleccionará el mismo que fue seleccionado en la preparación de “AUDIO”. (Fijación de fábrica)

- Si el idioma seleccionado en la preparación de “AUDIO” se utiliza durante la reproducción, los subtítulos no aparecerán.
- Si se utiliza otro idioma durante la reproducción, los subtítulos aparecerán en el idioma seleccionado en la preparación de “AUDIO”

Inglés / Español / Francés

OTRO ** :** Se puede seleccionar el otro idioma.

Seleccione “MENU”

Inglés / Español / Francés : (Fijación de fábrica : inglés)
OTRO ** :** Se puede seleccionar el otro idioma.

Selección de SALIDA DE AUDIO

Seleccione “LPCM(DVD)”

INACTIVO : Por el conector de salida de audio digital solamente sale PCM lineal de 48 kHz/16 bits. Durante la reproducción del DVD grabado en el PCM lineal de 48 kHz/20 bits o 96 kHz, no sale audio digital. (Fijación de fábrica)

PCM : Durante la reproducción del DVD grabado en el PCM lineal de 48 kHz/ 20 bits/24 bits o 96 kHz, sale audio digital convertido a 48 kHz/16 bits. (La salida digital de audio PCM está restringida a 48 kHz/16bits o menos para proteger los derechos de autor.)

Seleccione “Dolby Digital”

Bitstream: Sale un flujo de bits Dolby digital (2ch-5.1ch). (Fijación de fábrica)

INACTIVO : No hay salida de audio.

Seleccione “dts”

Bitstream : Sale un flujo de bits dts. (Fijación de fábrica)

INACTIVO : No hay salida de audio.

Seleccione “DRC (Dynamic Range Compression)”

INACTIVO : Se selecciona el margen de audio normal.
(Fijación de fábrica)

ACTIVO : Seleccione este ajuste para disfrutar de un sonido dinámico incluso a bajo volumen. Esto es muy útil para escuchar durante la noche.
[Esta función sólo se activa con DVDs Dolby Digital.]

Seleccione “SURROUND”

El sonido envolvente crea el efecto de sonido que procede de altavoces que parecen ester en la parte de atrás aún cuando solo se ha conectado a un sistema estéreo de 2 canales.

INACTIVO : No efecto de sonido envolvente. (Fijación de fábrica)

ACTIVO : Efecto de sonido envolvente.

Selección de DETENER RASTREO

AUTO : Durante el modo de imagen fija se seleccionarán automáticamente “Campo fijo” o “Cuadro fijo” (Fijacion de fabrica)

CAMPO : Seleccione este ajuste cuando ocurra “distorsión” en las imagenes, incluso cuando se haya seleccionado “AUTO”.

CUADRO : “Cuadro fijo” es siempre seleccionado. Seleccionar este ajuste cuando no se puedan ver claramente texto pequeño o patrones finos incluso cuando esté seleccionado “AUTO”.

Selección de 4 : 3 PREFERENCIA

Pan&Scan : Datos de la pantalla ancha de vídeo son reproducidos en el estilo Pan & Scan (la parte derecha e izquierda de la pantalla son recortadas). (Fijación de fábrica)

- Datos de vídeo no formateados en Pan & Scan serán reproducidos en el estilo letterbox.

Letterbox : Datos de la pantalla ancha de vídeo son reproducidos en el estilo Letterbox (la parte de arriba y abajo de la pantalla tienen un margen negro).

Index

TV / VCR

A Accessories 4
AC Power Plug 10
ACTION button 8, 16
ADD / DLT button 8, 17
Audio Adjustment 47
Audio Auto Gain Control (AGC) 46
Audio button 8, 23
Audio connections 12
Audio Features 44, 45
Audio Menu 46
Audio Mode for FM Radio 29
Audio Mode for Playback 44
Audio Mode for Recording 44
Audio Mode for TV Viewing 23
Audio Mute 22
Audio / Video In Jack 10
Audio Output Connector (L/R) 11
Auto Operation Functions 37
B Batteries 4
Before Requesting Service 60, 61
Before Using 4
Blocking Message 43
Blue Screen Display 27
Broadcast Types 23
C Cable Box Brand Code Number 33
Cable Box Universal Remote Control Feature 32
Cassette Compartment 10
Caption On Mute 25
Channel 16, 17, 27
Channel Caption 38
CHANNEL UP / DOWN button 8, 22
Clock 16, 17
Closed Caption 24, 25
CM SKIP / ZERO SEARCH button .. 8, 36, 37
Code Numbers, DSS / Cable Box Brand .32
Commercial Skip 37
Connections 11
Connections, Audio 12
Connections, DSS / Cable Box 11
Connections, Antenna/Cable 11
Copy Your Tapes (Dubbing) 19
COUNTER RESET button 8, 36
Customer Services Directory 33
D DISPLAY / ENTER button 8, 27, 32
DSS Brand Code Number 75
DSS CABLE button 8, 32
DSS / Cable Box Connections 11
DST (Daylight Saving Time) 6
E Eject button 8
Eject tape 18
F Fast Forward 18
FF button 8, 18
FM button 8, 28, 29
FM Radio 28, 29
Forward Search 18
Frame by Frame Advance 18
Front Panel Indicators 9
Function Display 27
H Head Cleaning 6
I Important Safeguards and Precautions 2
Information (Unit, Cassette, Disc) .... 6 - 7
Initial Setup 14
Index Search 34
Indicators on the Front Panel 9
Input Mode 19
L Language 16
LIGHT button 9
Limited Warranty ....BC
Location of Controls 8
M MTS Broadcast / TV Stereo System 23
MUTE button 8, 22
N NUMBER keys 8, 22
O 100 Key 22
One Touch Recording 18
On-Screen Display (OSD) 27
ON-TIMER with Alarm 26
P Phones 22
Playback 18
PLAY button 8, 18
POWER button 8, 14
PROG button 8, 26, 30
Program End Search 35
PROG TIMER Indicator 9, 30
Q Quality Picture 6
R Rapid Tune 22
R-TUNE button 8, 22
REC button 8, 18
REC Indicator 9, 18
Rec(ord) 18
Record / Playback Speed Settings 4
Remote Control Buttons 8
Remote Sensor 9
Remote Warning Feature 39
Repeat Play 36
Reset Language, Channels, Clock, Time Zone Adjust 16, 17
Reset unit 15
Reverse Search 18
REW button 8, 18
Rewind 18

TV / VCR

S
Safety Precautions 3
SEARCH button 8, 34, 35
Secret Code 40
Selecting Input Mode 19
SELECT / SET button 8, 16
Sleep Timer 26
Slow Motion 18
Spanish Quick Use Guide 65
Special VCR Features 38
Specifications 6
SPEED button 8, 18
Still Picture 18
STILL / PAUSE button 8, 18
STOP button 8, 18
SURROUND button 8, 45
Surround Sound 45

T
Table of Contents 5
Tape Erasure Prevention 4
Tape Operation 34
Timer Program Review, Replace, Clear 31
Timer Recording 30
Timer Recording Cancellation 31
Time Zone Adjust 17
TRACKING / V-LOCK buttons 6, 8
TV Operation 22
TV Timer Features 26
TV - VCR button 8, 32
TV/VCR Status & Clock Display 27

U
Unit, Front/Rear view 10, 11
Universal Remote Control 32
US MOVIES Ratings 41
US TV PROGRAMS Ratings 42

V
VCR Lock 39
Video Adjustment 47
Video Menu 46
V-Chip Control Feature 40
VHF / UHF Antenna Input Terminal 11
VOLUME UP / DOWN button 8, 22

W
Warning and Instruction Displays 62
Weak Signal Display Feature 39

Z
Zero Search 36

DVD

A
ANGLE button 8, 49
Angle Indicator 9, 49
Auto-Power Off function 21
AUDIO button 8, 48
AUDIO OUTPUT 58
Audio soundtrack language (DVD) 48

B
Basic DVD Operation 20

C
CLEAR button 8, 51, 53

D
Definition of terms 7
Disc Audio attribute 1 type, sampling frequency, bit No. 48
Disc format 7
Disc handling 7
Disc information screen 54
DISC LANGUAGES (DVD) 57
Disc Operation 10, 48
Disc Tray 7, 20
DISPLAY button 8, 53
DVD button 8, 20
DVD Lock Feature (DVD) 56
DVD Lock Ratings (DVD) 56
DVD menu (DVD) 50
DVD Operation using On-Screen 53

F
FF button 8, 20
Forward/ Reverse Chapter/ Track skip 21
Frame by Frame picture (DVD/Video CD) 21

K
Karaoke (DVD/Video CD) 49

L
Language Code List 8, 63

M
MENU button 50
Multiple angle viewing (DVD) 49

O
OPEN / CLOSE button 8, 20
Optical digital audio output connector 11

P
Picture Zoom (DVD) 49
Play 20
Playback control (Video CDs) 21
PLAY button 8, 20
Program Play (Video CD/CD) 50
Program Repeat Play (Video CD/CD) 51

R
Random Play (Video CD/CD) 51
Region number 3
Foward / Reverse rapid scene search 21
Repeat Play 55
RESUME function 21
RETURN button 8, 20
REW button 8, 20

S
Settings for DVD Operation 57
SKIP + / - button 8, 20
Slow Motion (DVD/Video CD) 21
SLOW + / - button 8, 21
STILL MODE 59
Still (Pause) Picture 21
STILL / PAUSE button 8, 21
Subtitle language (DVD) 48

T
TV MODE 59
Title menu (DVD) 50

U
Unit information screen (Unit) 55

Z
Zoom button 8, 49

PANASONIC CONSUMER ELECTRONICS COMPANY,
DIVISION OF MATSUSHITA ELECTRIC
CORPORATION OF AMERICA
One Panasonic Way Secaucus, New Jersey 07094

PANASONIC SALES COMPANY, DIVISION OF MATSUSHITA
ELECTRIC OF PUERTO RICO, INC.,
AVE. 65 de Infantería, Km. 9.5 San Gabriel Industrial Park,
Carolina, Puerto Rico 00985

Panasonic/Quasar Video Products
Limited Warranty

Limited Warranty Coverage
If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as “the warrantor”) will, for the length of the period indicated on the chart below, which starts with the date of original purchase (“warranty period”), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

Product	Parts	Labor	Service	Contact Number
Camcorder	One (1) Year (except CCD Image Sensor) CCD Image Sensor - 6 (Six) Months	Ninety (90) Days Ninety (90) Days	Carry-In or Mail-In	1-800-211-PANA(7262)
DVD/VCR Deck, A/V Mixer	One (1) Year	Ninety (90) Days	Carry-In or Mail-In	1-800-211-PANA(7262)
TV/VCR, TV/DVD, TV/DVD/VCR Combination	One (1) Year (except CRT) CRT - Two (2) Years	Ninety (90) Days Ninety (90) Days	Carry-In: 21” CRT and Smaller In-Home or Carry-In: 22” CRT and Larger	1-800-211-PANA(7262)
TV/HDR Combination	One (1) Year (except CRT) CRT - Two (2) Years	Ninety (90) Days Ninety (90) Days	In-Home or Carry-In	1-888-843-9788
Rechargeable Batteries (in exchange for defective item)	Ten (10) Days	Not Applicable	Carry-In or Mail-In	1-800-211-PANA(7262)
Tape (in exchange for defective item)	Five (5) Days	Not Applicable	Carry-In or Mail-In	1-800-211-PANA(7262)
Memory Cards (in exchange for defective item)	Ninety (90) Days	Not Applicable	Carry-In or Mail-In	1-800-211-PANA(7262)

During the “Labor” warranty period there will be no charge for labor. During the “Parts” warranty period, there will be no charge for parts. You must carry-in or mail-in your product or arrange for in-home service, as applicable, during the warranty period.
If non-rechargeable batteries are included, they are not warranted. This warranty only applies to products purchased and serviced in the United States or Puerto Rico. This warranty is extended only to the original purchaser of a new product which was not sold “as is”. A purchase receipt or other proof of the original purchase date is required for warranty service.

Carry-In, Mail-in or In-Home Service
For Carry-In, Mail-In or In-Home Service (as applicable) in the United States call toll free contact number listed above or visit Panasonic Web Site: http://www.panasonic.com
For assistance in Puerto Rico call Panasonic Sales Company (787)-750-4300 or fax (787)-768-2910.

In-Home service, if applicable, requires clear, complete and easy access to the product by the authorized servicer and does not include removal or re-installation of an installed product. It is possible that certain in-home repairs will not be completed in-home, but will require that the product, or parts of the product, be removed for shop diagnosis and/or repair and then returned.

Limited Warranty Limits And Exclusions
This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage, nor does it cover markings or retained images on the picture tube resulting from viewing fixed images (including, among other things, letterbox pictures on standard 4:3 screen TV's, or non-expanded standard 4:3 pictures on wide screen TV's, or onscreen data in a stationary and fixed location). The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, or commercial use (such as in a hotel, office, restaurant, or other business), rental use of the product, service by anyone other than a Factory Servicenter or other Authorized Servicer, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. (As examples, this excludes damages for lost time, cost of having someone remove or re-install an installed unit if applicable, or travel to and from the servicer, loss of media or images, data or other memory or recorded content. The items listed are not exclusive, but are for illustration only.)
ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

PARTS AND SERVICE (INCLUDING COST OF AN IN-HOME SERVICE CALL, WHERE APPLICABLE) WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY ARE YOUR RESPONSIBILITY.

Customer Services Directory

For Product Information, Operating Assistance, Literature Request, Dealer Locations, and all Customer Service inquiries please contact:
1-800-211-PANA (7262), Monday-Friday 9 am-9 pm; Saturday-Sunday 9 am-7 pm, EST.
or send e-mail : consumerproducts@panasonic.com

Web Site: http://www.panasonic.com
You can purchase parts, accessories or locate your nearest servicenter by visiting our Web Site.

Accessory Purchases:

1-800-332-5368 (Customer Orders Only)
Panasonic Services Company 20421 84th Avenue South, Kent, WA 98032
(Monday-Friday 6 am-5 pm; Saturday 6 am-10:30 am, PST)
(Visa, MasterCard, Discover Card, American Express, Check)

Service in Puerto Rico

Matsushita Electric of Puerto Rico, Inc. Panasonic Sales Company/ Factory Servicenter:
Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park, Carolina, Puerto Rico 00985
Phone (787)750-4300 Fax (787)768-2910

As of February 2002

Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation of America
One Panasonic Way Secaucus, New Jersey 07094

Panasonic Sales Company (“PSC”),
Division of Matsushita Electric of Puerto Rico, Inc.
Ave. 65 de Infantería, Km. 9.5
San Gabriel Industrial Park, Carolina, Puerto Rico 00985

P

Printed in U.S.A
LSQT0520A
M0202-0

1. **Important safety notice**
   Components identified by the sign ⚠ have special characteristics important for safety. When replacing any of these components. Use only the specified parts.

2. Do not use the part number shown on this drawing for ordering.
   The correct part number and part value is shown in the parts list, and may be slightly different or amended since this drawing was prepared.

3. Use only original replacement parts:
   To maintain original function and reliability of repaired units, use only original replacement parts which are listed with their part numbers in the parts list section of the service manual.

4. Parts different in shape or size may be used.
   However, only interchangeable parts will be supplied as service replacement parts.

5. Test point information
   ⦶ :Test point with a jumper wire across a hole in P.C.B.
   ▭→ :Test point with a component lead on the foil side.
   ▨ :Test point with no test pin.
   ● :Test point with a test pin.

Schematic Diagram Notes

1. Indication for Zener Voltage of Zener Diodes
   The Zener Voltage of Zener Diodes are indicated as such on Schematic Diagrams.

   Example:
   (6.2V)......Zener Voltage

2. How to identify Connectors
   Each connector is labeled with a Connector No. and Pin No. Indicating what it is connected to,
   in other words, its counter part.
   Use the interconnection schematic diagram to find the connection between associated connectors.

   Example:
   The connections between C.B.A.s are shown below.

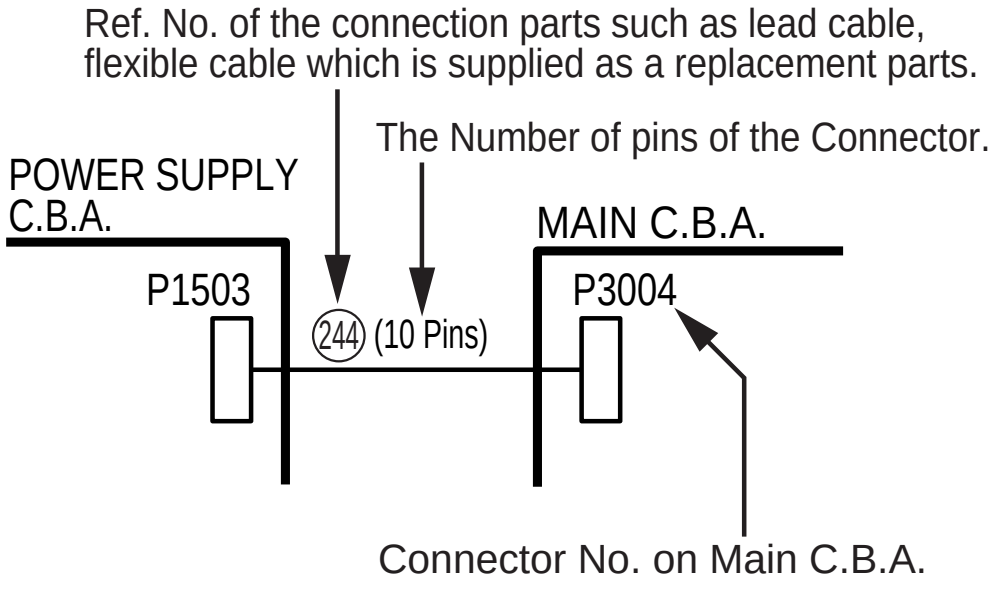
Ref. No. of the connection parts such as lead cable, flexible cable which is supplied as a replacement parts.
The Number of pins of the Connector.
POWER SUPPLY C.B.A.
MAIN C.B.A.
P1503
244
(10 Pins)
P3004
Connector No. on Main C.B.A.

3. Parts marked "PT" are not used in any models included in this service model.

   Example:


C6011
100P
PT
C6011
PT
R6097
PT

4. Jumper wires are used for WA10, WA5 etc and these are not supplied as replacement parts.

Signal Waveform Note

How to read Signal Waveform

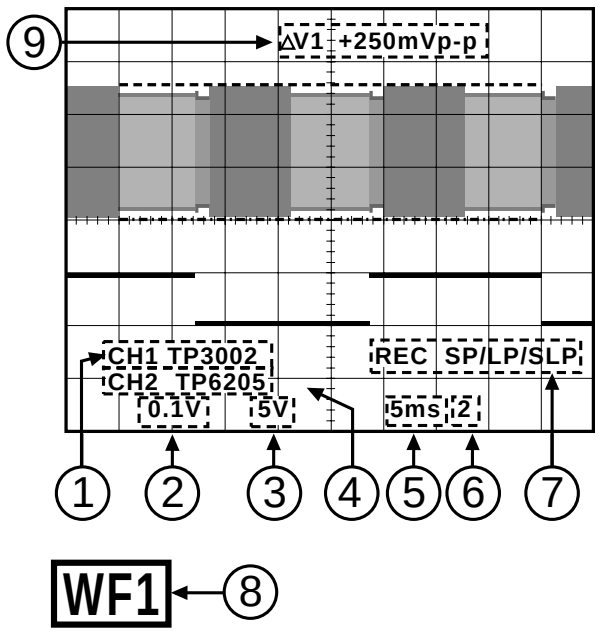
9
ΔV1 +250mVp-p
CH1 TP3002
CH2 TP6205
0.1V
5V
REC
SP/LP/SLP
5ms
2
1
2
3
4
5
6
7
WF1
8

① Connecting Point
② Volts/Div
③ Volts/Div
④ Connecting Point
⑤ Time/Div
⑥ Trigger Channel of the scope (1:CH1,2:CH2)
⑦ Operation Mode of VCR
⑧ Waveform Point on Schematic
⑨ ΔV1:Peak to Peak

Voltage Chart Note

Voltage Measurement

a. Color bar signal in SP mode.
b. ---:Unmeasurable or not necessary to measure.

Circuit Board Layout Note

Circuit Board Layout shows components installed for various models.
For proper parts content for the model you are servicing, please refer to the schematic diagram and parts list.

NOTE:
Circuit Board Layout includes components which are not used.

MAIN I (SYSTEM CONTROL/ SERVO) SCHEMATIC DIAGRAM

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

KEY VOLTAGE CHART (SW6301～6305,6307 ～ 6310, 9312,9313,6381,6382)

TERMINAL VOLTAGE	0V～0.6V	0.7V～1.9V	2.0V～3.1V	3.2V～4.4V
KEY DATA1 (PIN 89)	CH DOWN	VOLUME DOWN	FF/CUE	-----
KEY DATA2 (PIN 88)	CH UP	VOLUME UP	-----	-----
KEY DATA3 (PIN 87)	PLAY	REW /REVIEW	REC	DVD PLAY
KEY DATA4 (PIN 86)	STOP/EJECT	OPEN /CLOSE	POWER	DVD STOP

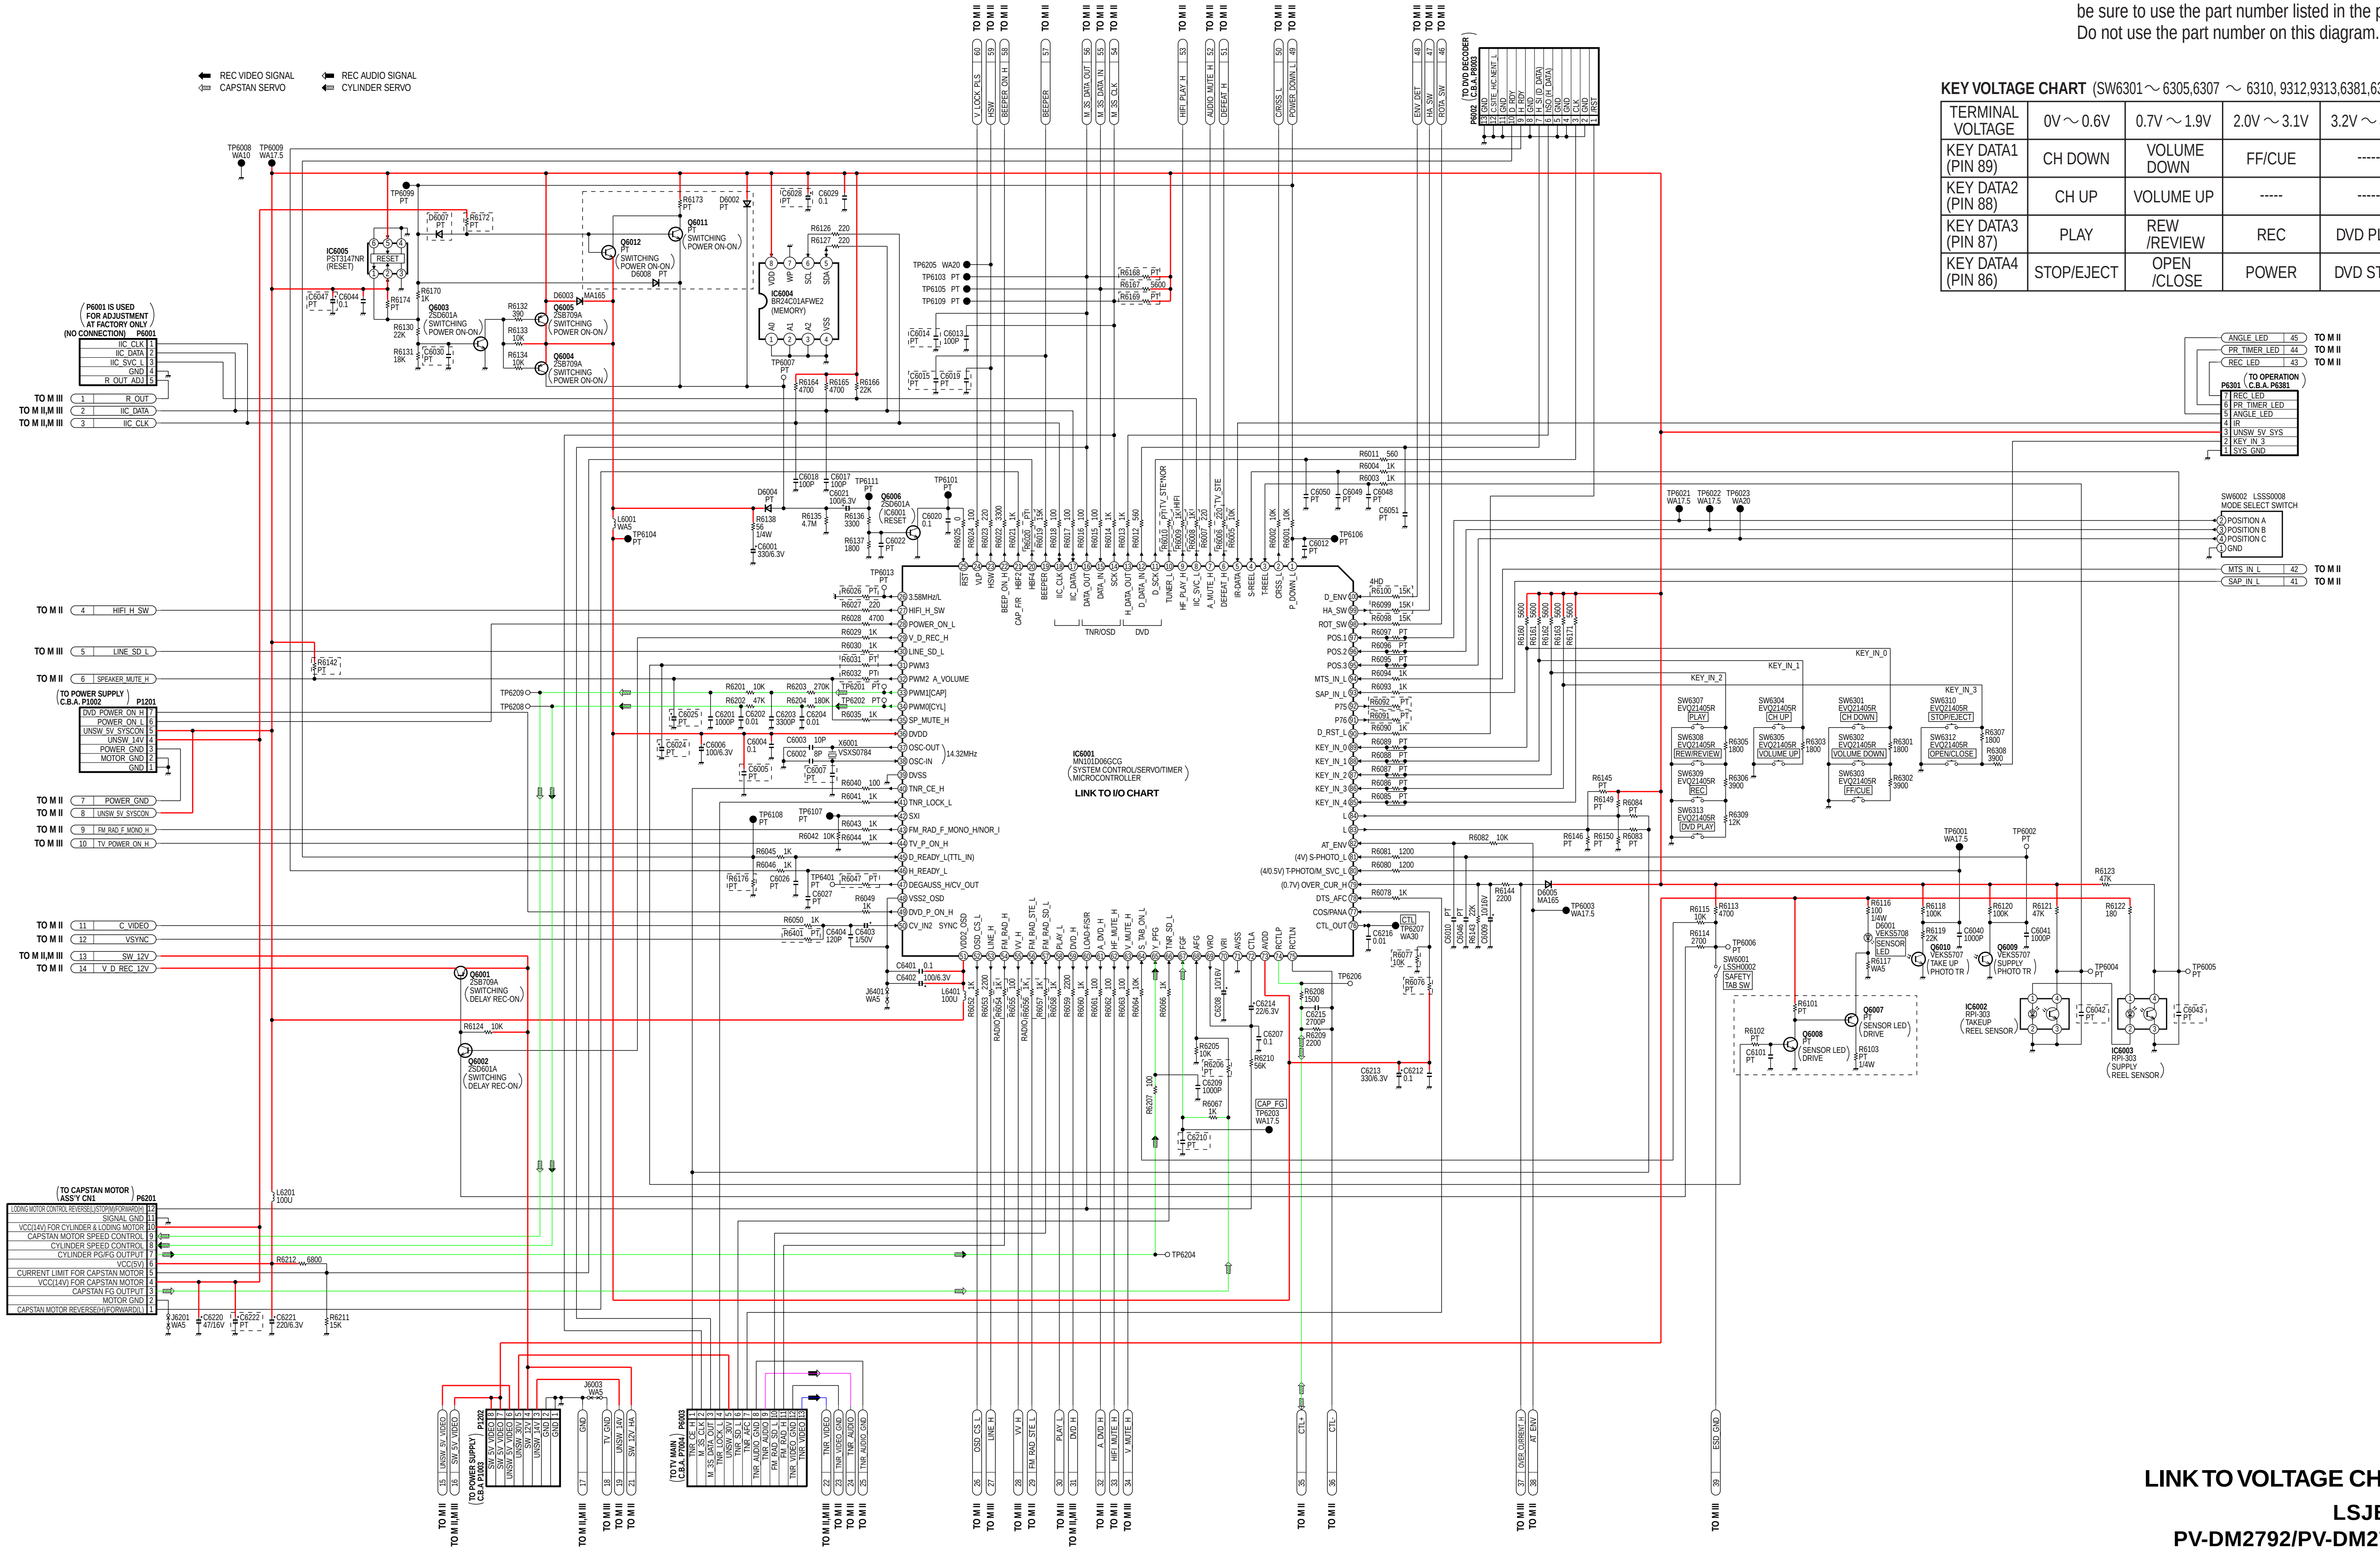
REC VIDEO SIGNAL
CAPSTAN SERVO
REC AUDIO SIGNAL
CYLINDER SERVO
IC6001
MN101D06GCG
(SYSTEM CONTROL/SERVO/TIMER MICROCONTROLLER)
LINK TO I/O CHART
IC6004
BR24C01AFWE2
(MEMORY)
IC6005
PST3147NR
(RESET)
Q6001 2SB709A SWITCHING DELAY REC-ON
Q6002 2SD601A SWITCHING DELAY REC-ON
Q6003 2SD601A SWITCHING POWER ON-ON
Q6004 2SB709A SWITCHING POWER ON-ON
Q6005 2SB709A SWITCHING POWER ON-ON
Q6006 2SD601A (IC6001 RESET)
Q6011 PT SWITCHING POWER ON-ON
Q6012 PT SWITCHING POWER ON-ON
X6001 VSX50784 14.32MHz
P6001 IS USED FOR ADJUSTMENT AT FACTORY ONLY (NO CONNECTION)
TO POWER SUPPLY C.B.A. P1002
TO CAPSTAN MOTOR ASS'Y CN1
TO OPERATION C.B.A. P6381
TO DVD DECODER C.B.A. P8003
TO TV MAIN C.B.A. P7004
TO POWER SUPPLY C.B.A. P1003
SW6002 LSSS0008 MODE SELECT SWITCH
SW6001 LSSH0002 SAFETY TAB SW
IC6002 RPI-303 TAKEUP REEL SENSOR
IC6003 RPI-303 SUPPLY REEL SENSOR
Q6007 PT SENSOR LED DRIVE
Q6008 PT SENSOR LED DRIVE
Q6009 VEK55707 SUPPLY PHOTO TR
Q6010 VEK55707 TAKE UP PHOTO TR
D6001 VEK55708 SENSOR LED
TO M I
TO M II
TO M III

LINK TO VOLTAGE CHART

LSJB2021
PV-DM2792/PV-DM2792-K
MAIN I SCHEMATIC DIAGRAM

I/O CHART OF IC6001

Pin No.	I/O	Signal Name	Description
1	I	P_DOWN_L	POWER DOWN(L)
2	O	CRSS_L	CUE/REV/SS(L)
3	I	T-REEL	TAKEUP REEL PULSE
4	I	S-REEL	SUPPLY REEL PULSE
5	I	IR-DATA	IR-DATA
6	O	DEFEAT_H	AUDIO DEFEAT(H)
7	O	A_MUTE_H	AUDIO MUTE(H)
8	I	IIC_SVC_L	I2C SERVICE MODE(L)
9	I	HF_PLAY_H	Hi-Fi AUDIO PB(H)
10	-	TUNER_L	(Not used)
11	I	D_SCK	DVD SERIAL CLOCK
12	I	D_DATA_IN	DVD SERIAL DATA 0
13	O	H_DATA_OUT	DVD SERIAL DATA 1
14	O	SCK	SERIAL CLOCK
15	I	DATA_IN	SERIAL DATA 0
16	O	DATA_OUT	SERIAL DATA 1
17	I/O	IIC_DATA	I2C SERIAL DATA
18	O	IIC_CLK	I2C SERIAL CLOCK
19	I/O	BEEPER	BEEPER
20	-	NC	(Not used)
21	O	CAP_F/R	CAPSTAN MOTOR REVERSE(H)/FORWARD(L)
22	O	BEEPER_ON_H	BEEPER ON(H)
23	O	HSW	HEAD SW
24	O	VLP	V-LOCK PULSE
25	I	RST	RESET(L)
26	O	3.58MHz/L	3.58MHz
27	O	HIFI_H_SW	Hi-Fi HEAD SW
28	O	POWER_ON_L	POWER ON(L)
29	O	V_D_REC_H	VIDEO DELAY REC(H)
30	I	LINE_SD_L	TV SIGNAL(L)
31	-	NC	(Not used)
32	O	A_VOLUME	AUDIO VOLUME
33	O	CAP	CAP ERROR
34	O	CYL	CYL ERROR
35	O	SP_MUTE_H	AUDIO AMP MUTE(H)
36	I	DVDD	VDD (+5V)
37	O	OSC_OUT	OSC 2
38	I	OSC_IN	OSC 1
39	-	DVSS	Ground
40	O	TNR_CE_H	TUNER CHIP ENABLE(H)
41	I	TNR_LOCK_L	TUNER LOCK SIGNAL(L)
42	-	SXI	SXI
43	I/O	FM_RAD_F_MONO_H/NOR_I	FM MONO(H)
44	O	TV_P_ON_H	TV POWER ON(H)
45	I	D_READY_L	DVD READY(L)
46	I	H_READY_L	HOST READY(L)
47	O	DEGAVSS_H/CV_OUT	(Not used)
48	-	VSS2_OSD	Ground
49	O	DVD_P_ON_H	DVD POWER ON(H)
50	I	CV_IN2	VIDEO

Pin No.	I/O	Signal Name	Description
51	I	VDD2_OSD	VDD (+5V)
52	O	OSD_CS_L	OSD CS(L)
53	O	LINE_H	LINE SIGNAL(H)
54	O	FM_RAD_H	FM RADIO(H)/TV(L)
55	O	VV_H	VV(H)/EE(L)
56	I	FM_RAD_STE_L	FM RADIO STEREO(L)/MONO(H)
57	I	FM_RAD_SD_L	FM RADIO SIGNAL(L)
58	O	PLAY_L	PB(L)
59	O	DVD_H	DVD(H)
60	I/O	LOAD-F/S/R	LOADING MOTOR CONTROL REVERSE(L)/STOP(M)/FORWARD(H)
61	O	A_DVD_H	AUDIO DVD(H)
62	O	HF_MUTE_H	Hi-Fi AUDIO MUTE(H)
63	O	V_MUTE_H	VIDEO MUTE(H)
64	I	S_TAB_ON_L	SAFETY TAB ON(L)
65	I	Y_PFG	CYL PG/FG
66	I	TNR_SD_L	TUNER SIGNAL(L))
67	O	FGF	CAP FG
68	I	AFG	CAP FG
69	O	VRO	V-REF 1
70	I	VRI	V-REF 2
71	-	AVSS	Ground
72	I	CTLA	CTL AMP
73	-	AVDD	VDD (+5V)
74	I/O	RCTLP	CTL PULSE(+)
75	-	RCTLN	CTL PULSE(-)
76	O	CTL_OUT	PB CONTROL PULSE
77	-	COS/PANA	(Not used)
78	I	DTS_AFC	AFC
79	I	OVER_CUR_H	OVER CURRENT(H)
80	I	T-PHOTO/M_SVC_L	TAKEUP PHOTO TR(L)/SERVICE(L)
81	I	S-PHOTO_L	SUPPLY PHOTO TR(L)
82	I	AT_ENV	ENV-VOLTAGE
83	-	L	SWITCHING TERMINAL OPTION (2HEAD/4HEAD/TV STEREO/Hi-Fi/2LC)
84	-	L	SWITCHING TERMINAL OPTION (FM RADIO/UNIV/DEMO)
85	-	KEY_IN_4	(Not used)
86	I	KEY_IN_3	KEY DATA 3
87	I	KEY_IN_2	KEY DATA 2
88	I	KEY_IN_1	KEY DATA 1
89	I	KEY_IN_0	KEY DATA0
90	O	D_RST_L	DVD RESET(L)
91	-	NC	(Not used)
92	-	NC	(Not used)
93	I	SAP_IN_L	SAP SIGNAL(L)
94	I	MTS_IN_L	MTS SIGNAL(L)
95	I	POS.3	MODE SW POSITION C
96	I	POS.2	MODE SW POSITION B
97	I	POS.1	MODE SW POSITION A
98	O	ROT_SW	ROTARY SW
99	O	HA_SW	HEAD AMP SW
100	I	D-ENV	ENVELOPE DET

CAPSTAN MOTOR ASS'Y

NOTE:
CAPSTAN MOTOR ASS'Y (REF. NO. 46) IS SUPPLIED AS A UNIT ONLY.
HOWEVER, THE FLAT FLEXIBLE CABLE (REF. NO. 48) IS AVAILABLE SEPARATELY AS A REPLACEMENT PART.

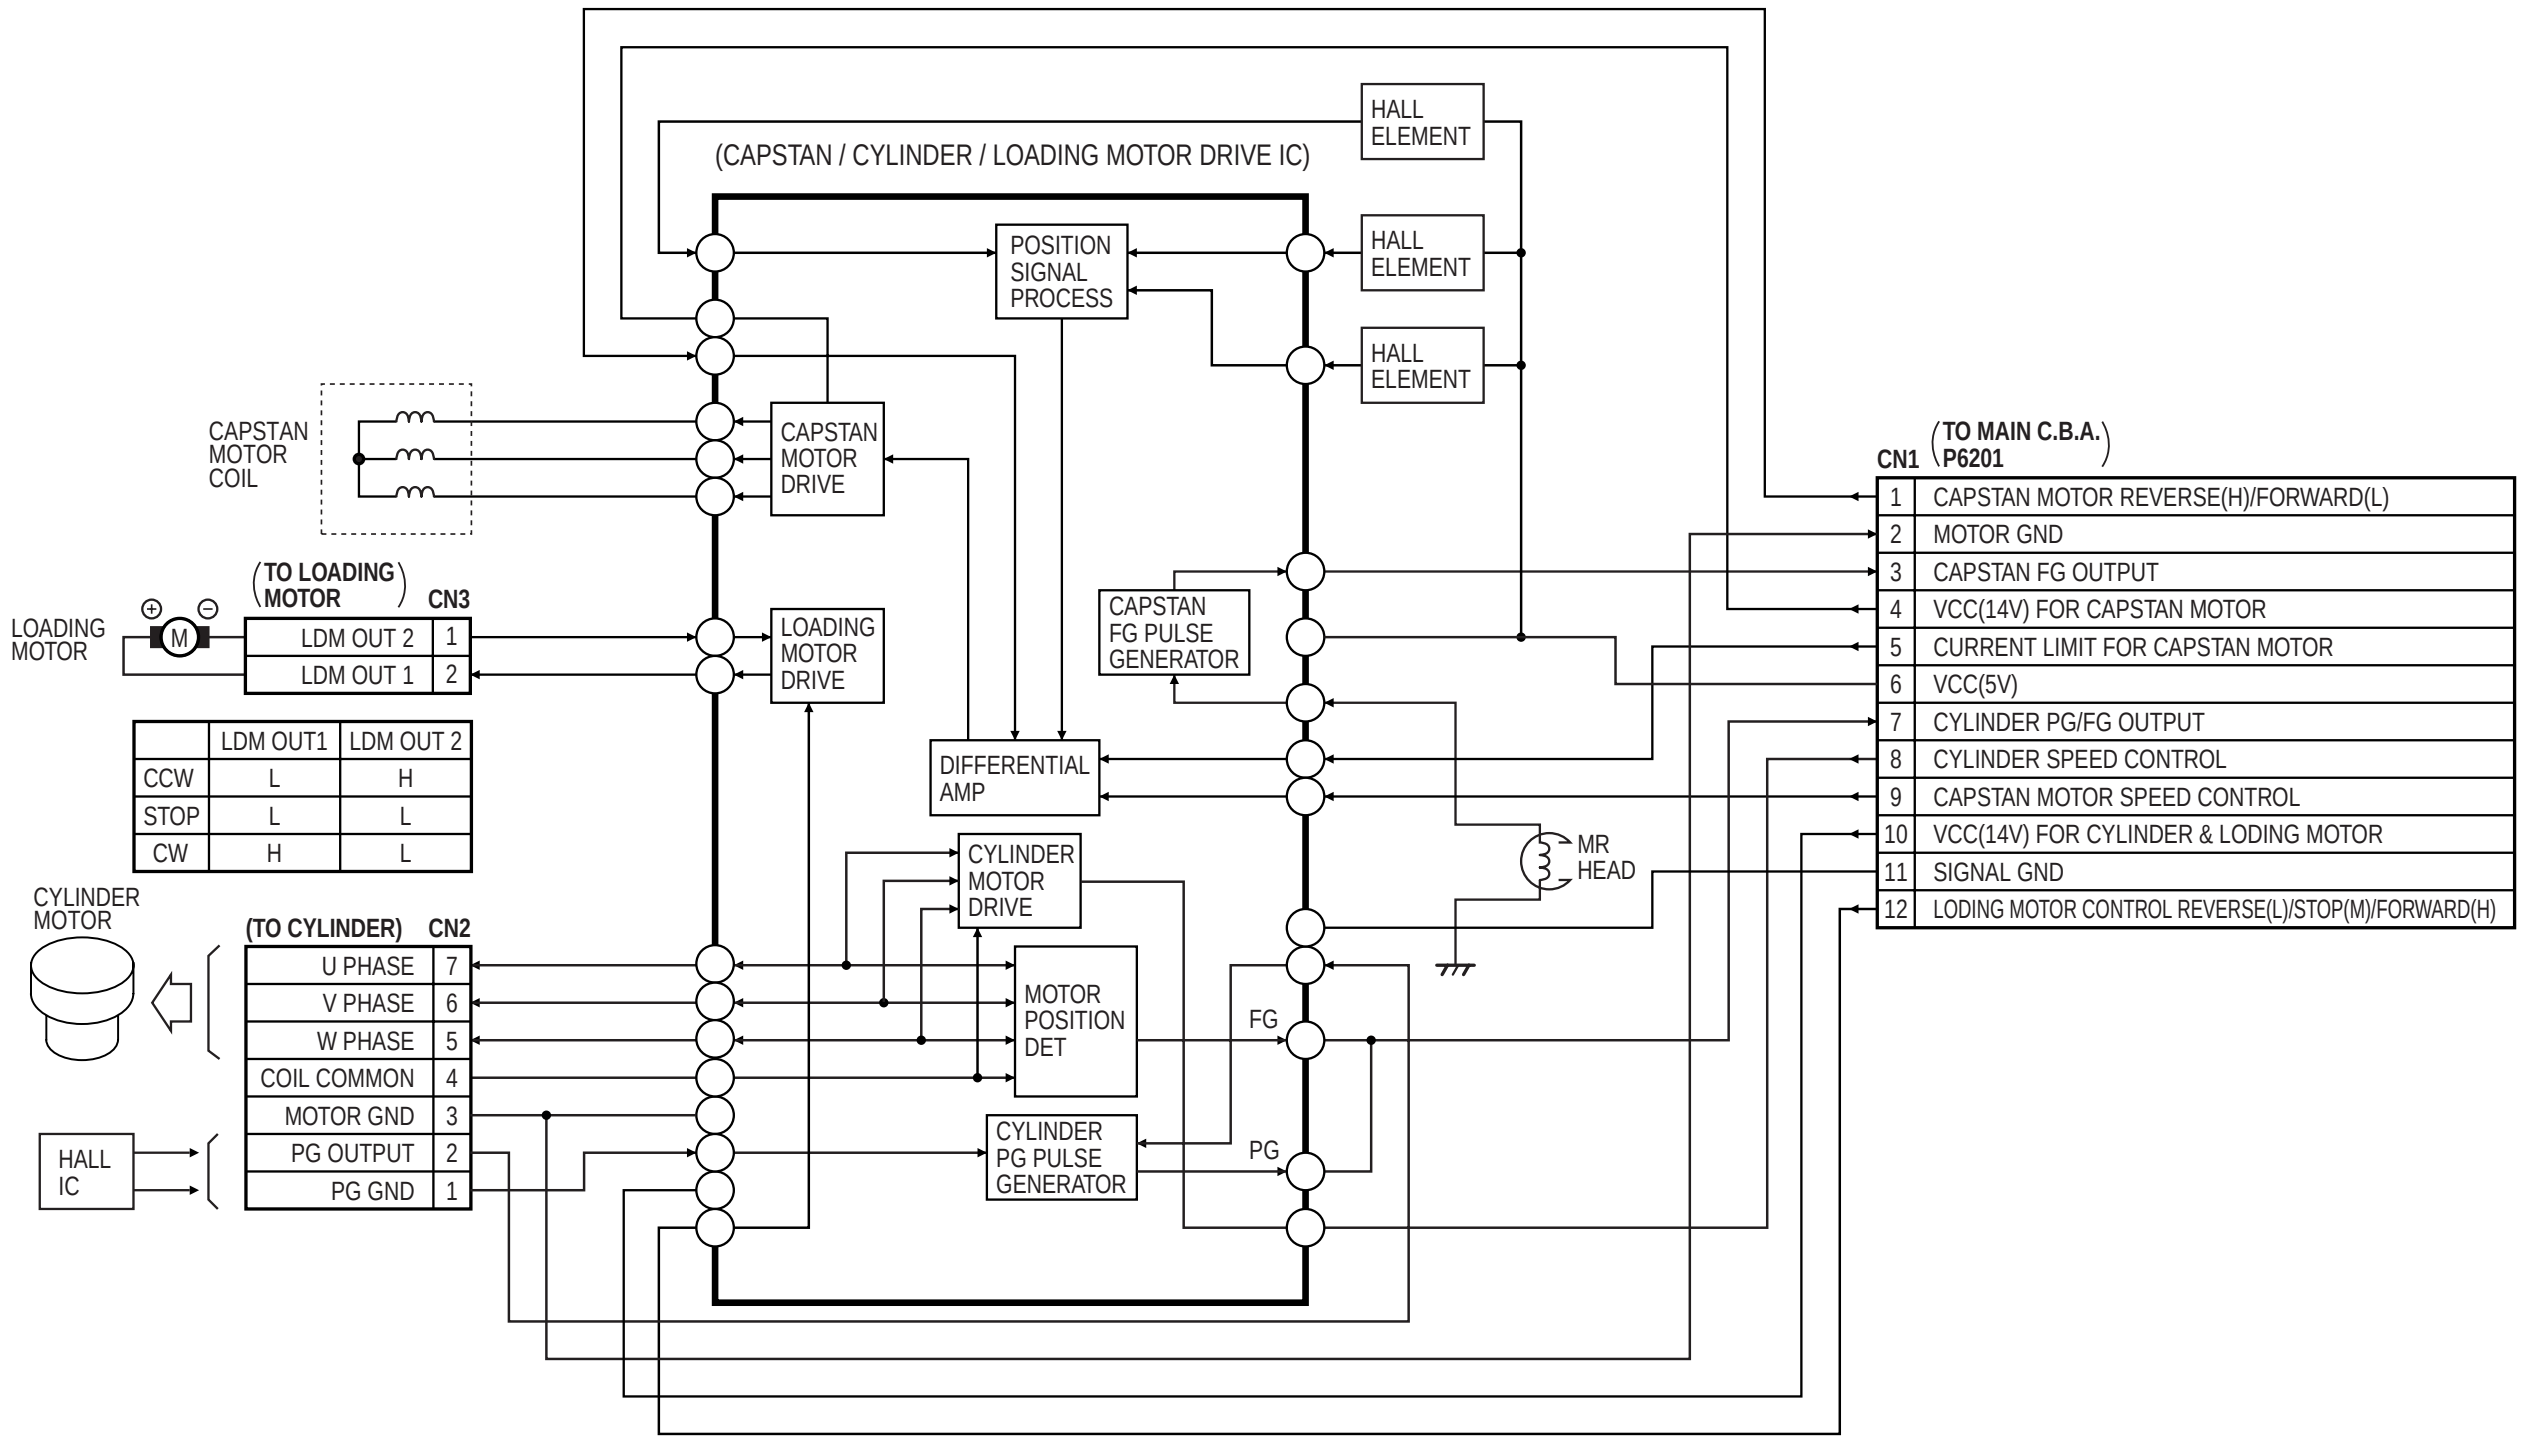
(CAPSTAN / CYLINDER / LOADING MOTOR DRIVE IC)
HALL ELEMENT
HALL ELEMENT
HALL ELEMENT
POSITION SIGNAL PROCESS
CAPSTAN MOTOR COIL
CAPSTAN MOTOR DRIVE
LOADING MOTOR
M
(TO LOADING MOTOR)
CN3
LDM OUT 2
1
LDM OUT 1
2
LOADING MOTOR DRIVE
CAPSTAN FG PULSE GENERATOR
DIFFERENTIAL AMP
CYLINDER MOTOR DRIVE
MR HEAD
CYLINDER MOTOR
(TO CYLINDER)
CN2
U PHASE
7
V PHASE
6
W PHASE
5
COIL COMMON
4
MOTOR GND
3
PG OUTPUT
2
PG GND
1
HALL IC
MOTOR POSITION DET
CYLINDER PG PULSE GENERATOR
FG
PG
CN1
(TO MAIN C.B.A. P6201)
1 CAPSTAN MOTOR REVERSE(H)/FORWARD(L)
2 MOTOR GND
3 CAPSTAN FG OUTPUT
4 VCC(14V) FOR CAPSTAN MOTOR
5 CURRENT LIMIT FOR CAPSTAN MOTOR
6 VCC(5V)
7 CYLINDER PG/FG OUTPUT
8 CYLINDER SPEED CONTROL
9 CAPSTAN MOTOR SPEED CONTROL
10 VCC(14V) FOR CYLINDER & LODING MOTOR
11 SIGNAL GND
12 LODING MOTOR CONTROL REVERSE(L)/STOP(M)/FORWARD(H)

	LDM OUT1	LDM OUT 2
CCW	L	H
STOP	L	L
CW	H	L

MAIN II (SIGNAL PROCESS/AUDIO) SCHEMATIC DIAGRAM

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

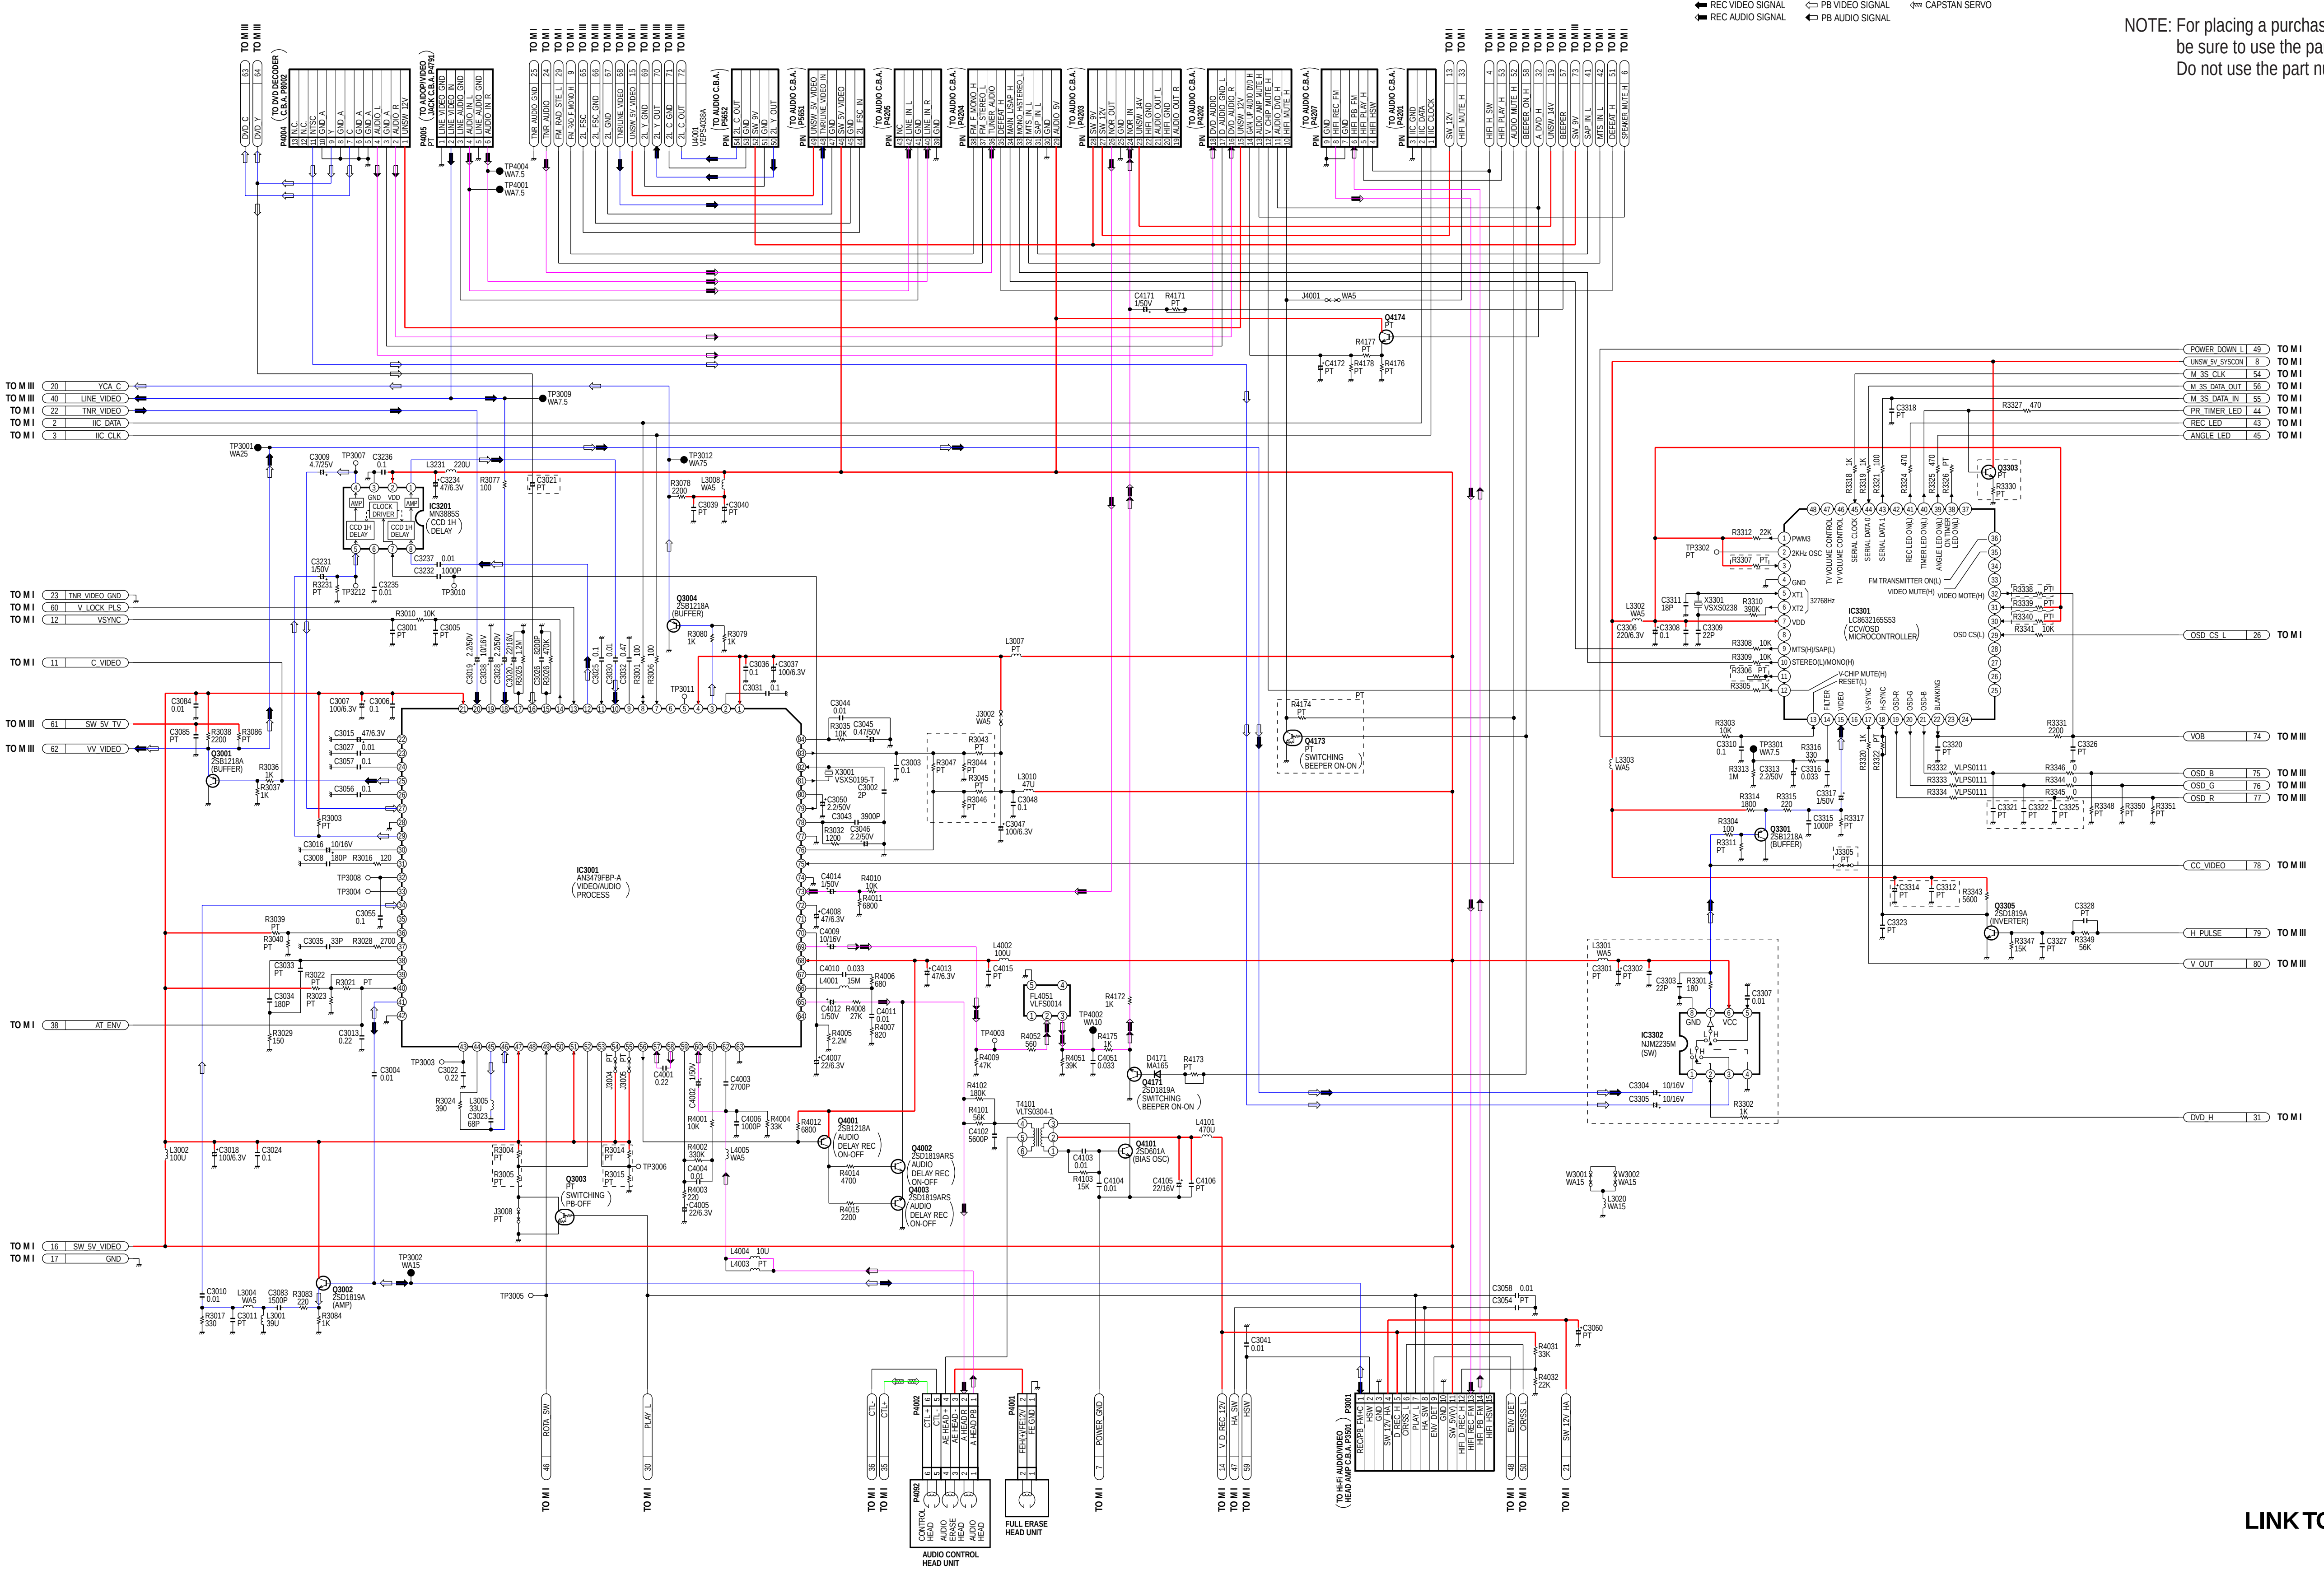

REC VIDEO SIGNAL
REC AUDIO SIGNAL
PB VIDEO SIGNAL
PB AUDIO SIGNAL
CAPSTAN SERVO
IC3001 AN3479FBP-A (VIDEO/AUDIO PROCESS)
IC3201 MN3885S (CCD 1H DELAY)
IC3301 LC8632165S53 (CCD/OSD MICROCONTROLLER)
IC3302 NJM2235M (SW)
Q3001 2SB1218A (BUFFER)
Q3002 2SD1819A (AMP)
Q3003 PT (SWITCHING PB-OFF)
Q3004 2SB1218A (BUFFER)
Q3301 2SB1218A (BUFFER)
Q3303 PT
Q3305 2SD1819A (INVERTER)
Q4001 2SB1218A (AUDIO DELAY REC ON-OFF)
Q4002 2SD1819ARS (AUDIO DELAY REC ON-OFF)
Q4003 2SD1819ARS (AUDIO DELAY REC ON-OFF)
Q4101 2SD601A (BIAS OSC)
Q4171 2SD1819A (SWITCHING BEEPER ON-ON)
Q4173 PT (SWITCHING BEEPER ON-ON)
Q4174 PT
T4101 VLTS0304-1
FL4051 VLFS0014
X3001 VSXS0195-T
X3301 VSXS0238
P4004 (TO DVD DECODER C.B.A. P8002)
P4005 (TO ADD/P.VIDEO JACK C.B.A. P4701)
P5652 (TO AUDIO C.B.A.)
P5651 (TO AUDIO C.B.A.)
P4205 (TO AUDIO C.B.A.)
P4204 (TO AUDIO C.B.A.)
P4203 (TO AUDIO C.B.A.)
P4202 (TO AUDIO C.B.A.)
P4207 (TO AUDIO C.B.A.)
P4201 (TO AUDIO C.B.A.)
P3001 (TO HI-FI AUDIO/VIDEO HEAD AMP C.B.A. P2501)
P4002
P4001
P4092
AUDIO CONTROL HEAD UNIT
FULL ERASE HEAD UNIT
TO M I
TO M II
TO M III

LINK TO VOLTAGE CHART

LSJB2021
PV-DM2792/PV-DM2792-K
MAIN II SCHEMATIC DIAGRAM

IC3001 VIDEO/AUDIO SIGNAL PROCESS / HEAD AMP IC- DETAIL BLOCK DIAGRAM

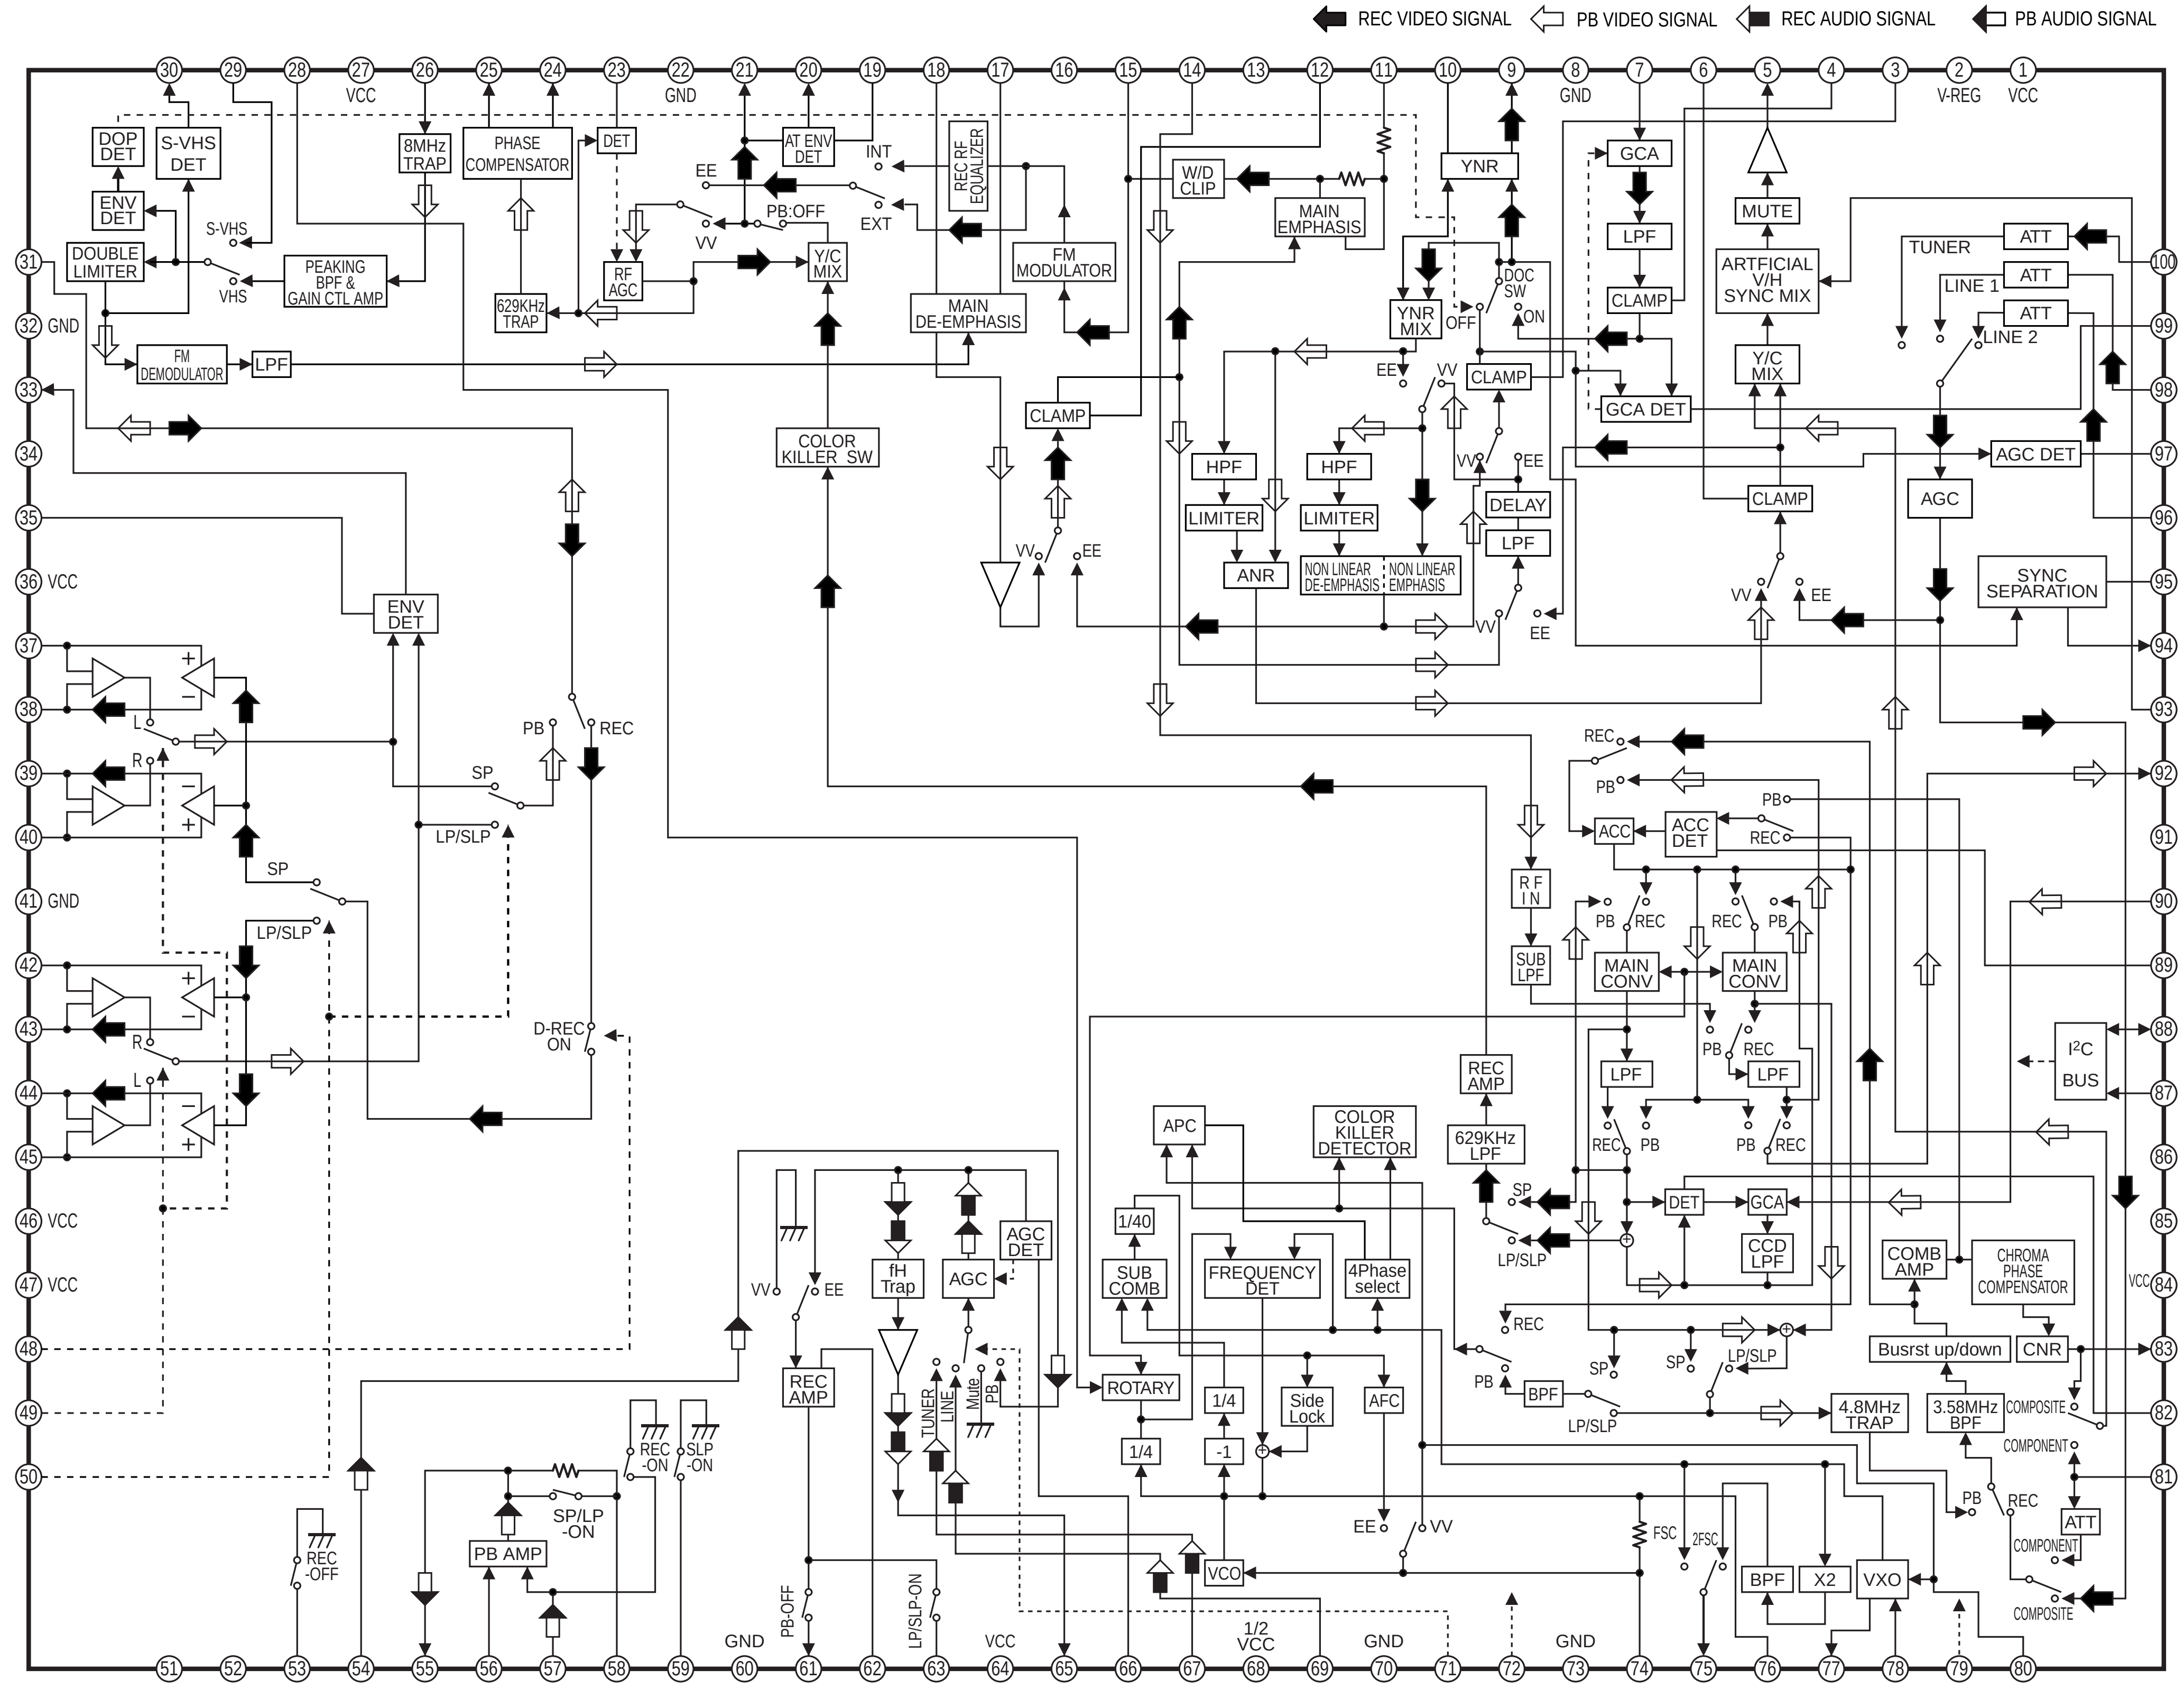
REC VIDEO SIGNAL
PB VIDEO SIGNAL
REC AUDIO SIGNAL
PB AUDIO SIGNAL
VCC
GND
V-REG
DOP DET
S-VHS DET
ENV DET
DOUBLE LIMITER
S-VHS
VHS
PEAKING BPF & GAIN CTL AMP
FM DEMODULATOR
LPF
8MHz TRAP
PHASE COMPENSATOR
629KHz TRAP
DET
RF AGC
AT ENV DET
INT
EXT
EE
VV
PB:OFF
Y/C MIX
REC RF EQUALIZER
FM MODULATOR
MAIN DE-EMPHASIS
COLOR KILLER SW
CLAMP
W/D CLIP
MAIN EMPHASIS
YNR
YNR MIX
DOC SW
ON
OFF
HPF
LIMITER
ANR
NON LINEAR DE-EMPHASIS
NON LINEAR EMPHASIS
DELAY
GCA
GCA DET
MUTE
ARTFICIAL V/H SYNC MIX
ATT
TUNER
LINE 1
LINE 2
AGC DET
AGC
SYNC SEPARATION
ENV DET
PB
REC
SP
LP/SLP
L
R
D-REC ON
REC AMP
629KHz LPF
RF IN
SUB LPF
ACC
ACC DET
MAIN CONV
CCD LPF
I²C BUS
COMB AMP
CHROMA PHASE COMPENSATOR
Busrst up/down
CNR
4.8MHz TRAP
3.58MHz BPF
COMPOSITE
COMPONENT
BPF
X2
VXO
FSC
2FSC
VCO
APC
COLOR KILLER DETECTOR
1/40
SUB COMB
FREQUENCY DET
4Phase select
ROTARY
1/4
-1
Side Lock
AFC
fH Trap
Mute
REC -ON
SLP -ON
SP/LP -ON
PB AMP
REC -OFF
PB-OFF
LP/SLP-ON
1/2 VCC
①
②
③
④
⑤
⑥
⑦
⑧
⑨
⑩
⑪
⑫
⑬
⑭
⑮
⑯
⑰
⑱
⑲
⑳
㉑
㉒
㉓
㉔
㉕
㉖
㉗
㉘
㉙
㉚
㉛
㉜
㉝
㉞
㉟
㊱
㊲
㊳
㊴
㊵
㊶
㊷
㊸
㊹
㊺
㊻
㊼
㊽
㊾
㊿
(51)
(52)
(53)
(54)
(55)
(56)
(57)
(58)
(59)
(60)
(61)
(62)
(63)
(64)
(65)
(66)
(67)
(68)
(69)
(70)
(71)
(72)
(73)
(74)
(75)
(76)
(77)
(78)
(79)
(80)
(81)
(82)
(83)
(84)
(85)
(86)
(87)
(88)
(89)
(90)
(91)
(92)
(93)
(94)
(95)
(96)
(97)
(98)
(99)
(100)

MAIN III (TV Y/C PROCESS) SCHEMATIC DIAGRAM

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN ⚠ HAVE
SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY.
WHEN REPLACING ANY OF THESE COMPONENTS,
USE ONLY THE SPECIFIED PARTS.

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

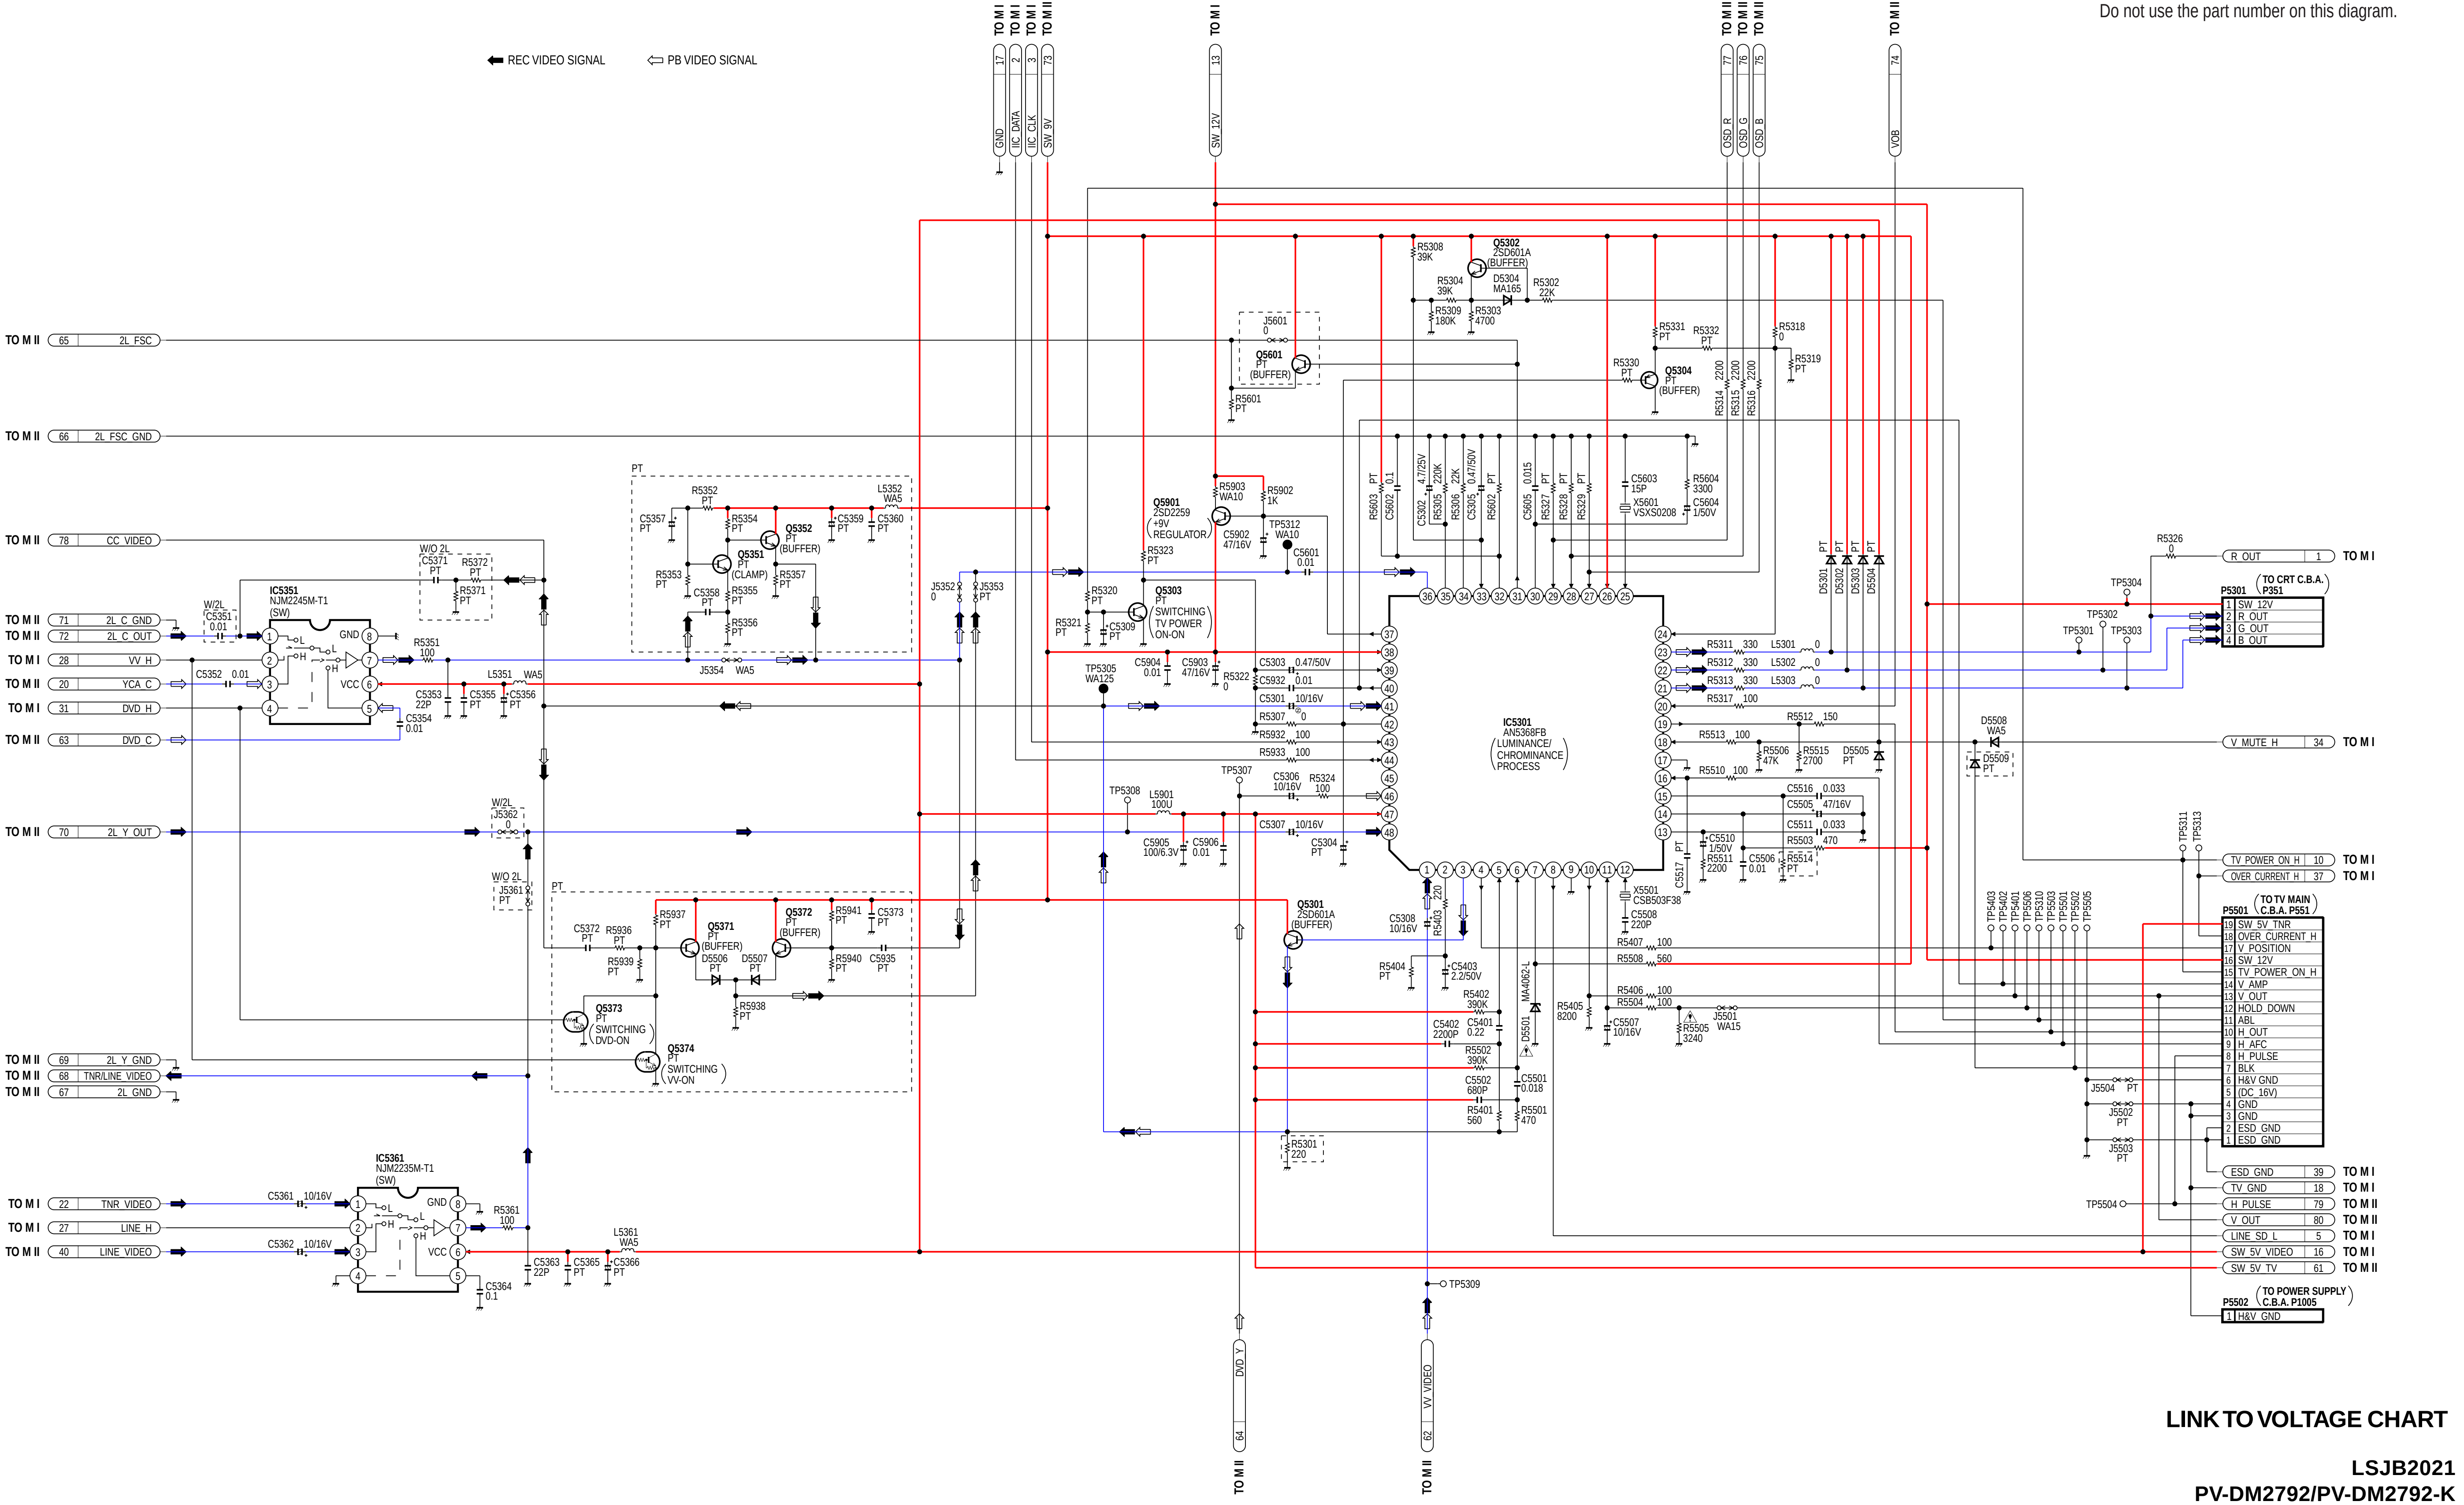

REC VIDEO SIGNAL
PB VIDEO SIGNAL
TO M I
TO M II
GND
IIC_DATA
IIC_CLK
SW_9V
SW_12V
OSD_R
OSD_G
OSD_B
VOB
2L_FSC
2L_FSC_GND
CC_VIDEO
2L_C_GND
2L_C_OUT
VV_H
YCA_C
DVD_H
DVD_C
2L_Y_OUT
2L_Y_GND
TNR/LINE_VIDEO
2L_GND
TNR_VIDEO
LINE_H
LINE_VIDEO
DVD_Y
VV_VIDEO
IC5351
NJM2245M-T1
(SW)
IC5361
NJM2235M-T1
(SW)
IC5301
AN5368FB
LUMINANCE/
CHROMINANCE
PROCESS
Q5351
(CLAMP)
Q5352
(BUFFER)
Q5371
(BUFFER)
Q5372
(BUFFER)
Q5373
SWITCHING
DVD-ON
Q5374
SWITCHING
VV-ON
Q5901
2SD2259
+9V
REGULATOR
Q5303
SWITCHING
TV POWER
ON-ON
Q5601
(BUFFER)
Q5302
2SD601A
(BUFFER)
Q5304
(BUFFER)
Q5301
2SD601A
(BUFFER)
X5601
VSXS0208
X5501
CSB503F38
P5301
TO CRT C.B.A.
P351
SW_12V
R_OUT
G_OUT
B_OUT
R_OUT
V_MUTE_H
TV_POWER_ON_H
OVER_CURRENT_H
P5501
TO TV MAIN
C.B.A. P551
SW_5V_TNR
OVER_CURRENT_H
V_POSITION
SW_12V
TV_POWER_ON_H
V_AMP
V_OUT
HOLD_DOWN
ABL
H_OUT
H_AFC
H_PULSE
BLK
H&V GND
(DC_16V)
GND
GND
ESD_GND
ESD_GND
ESD_GND
TV_GND
H_PULSE
V_OUT
LINE_SD_L
SW_5V_VIDEO
SW_5V_TV
P5502
TO POWER SUPPLY
C.B.A. P1005
H&V_GND

LINK TO VOLTAGE CHART

LSJB2021
PV-DM2792/PV-DM2792-K
MAIN III SCHEMATIC DIAGRAM

IC5301 LUMINANCE/CHROMINANCE PROCESS IC- DETAIL BLOCK DIAGRAM

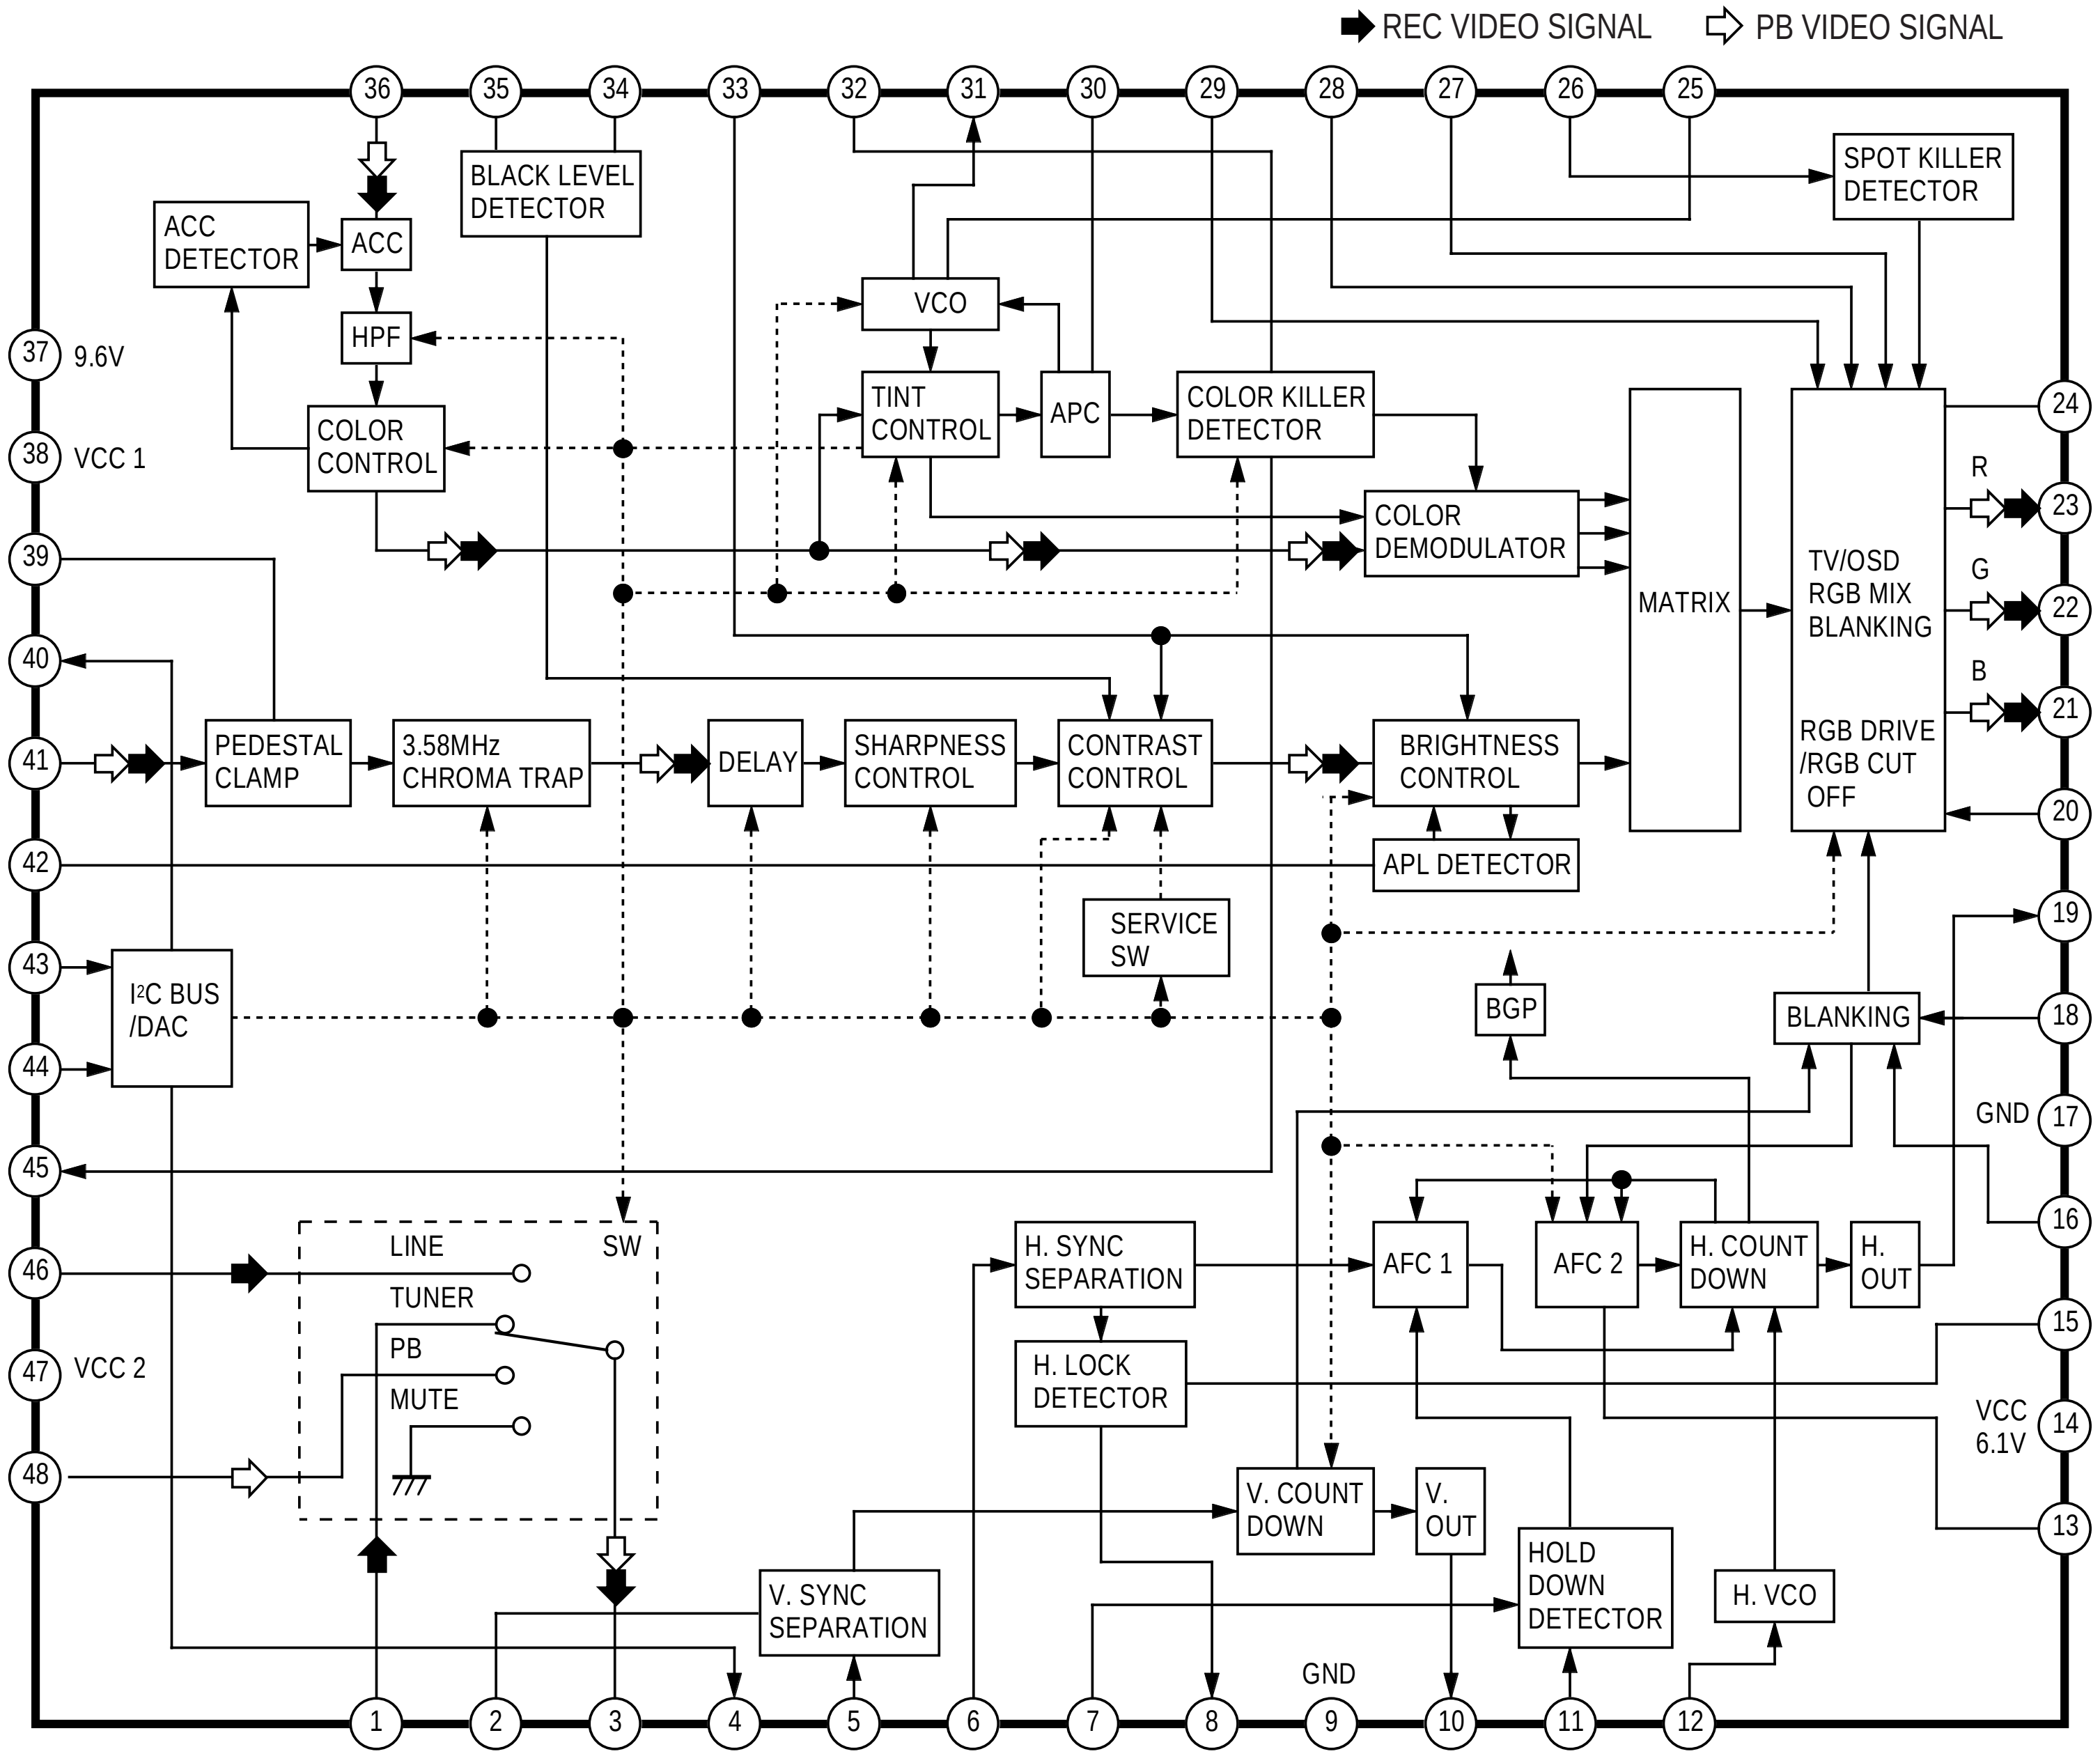
REC VIDEO SIGNAL
PB VIDEO SIGNAL
36
35
34
33
32
31
30
29
28
27
26
25
BLACK LEVEL DETECTOR
SPOT KILLER DETECTOR
ACC DETECTOR
ACC
VCO
HPF
37 9.6V
38 VCC 1
COLOR CONTROL
TINT CONTROL
APC
COLOR KILLER DETECTOR
COLOR DEMODULATOR
MATRIX
TV/OSD RGB MIX BLANKING
RGB DRIVE /RGB CUT OFF
24
R 23
G 22
B 21
20
39
40
41
PEDESTAL CLAMP
3.58MHz CHROMA TRAP
DELAY
SHARPNESS CONTROL
CONTRAST CONTROL
BRIGHTNESS CONTROL
42
APL DETECTOR
SERVICE SW
43
I²C BUS /DAC
44
BGP
BLANKING
19
18
GND 17
16
45
46
LINE
SW
TUNER
PB
MUTE
47 VCC 2
48
H. SYNC SEPARATION
AFC 1
AFC 2
H. COUNT DOWN
H. OUT
15
H. LOCK DETECTOR
VCC 6.1V 14
V. COUNT DOWN
V. OUT
HOLD DOWN DETECTOR
13
H. VCO
V. SYNC SEPARATION
GND
1
2
3
4
5
6
7
8
9
10
11
12

MAIN IV (POWER SUPPLY) SCHEMATIC DIAGRAM

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,
REPLACE ONLY WITH THE SAME TYPE 1.6A 125/250V FUSE.
ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES
D'T INCENDIE N'I UTILISERQUE DES FUSIBLE DE MÉME
TYPE 1.6A 125/250V

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN ⚠ HAVE
SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY.
WHEN REPLACING ANY OF THE COMPONENTS,
USE ONLY THE SPECIFIED PARTS.

HOT CIRCUIT. BE CAREFUL AND USE AN ISOLATION TRANSFORMER WHEN SERVICING.

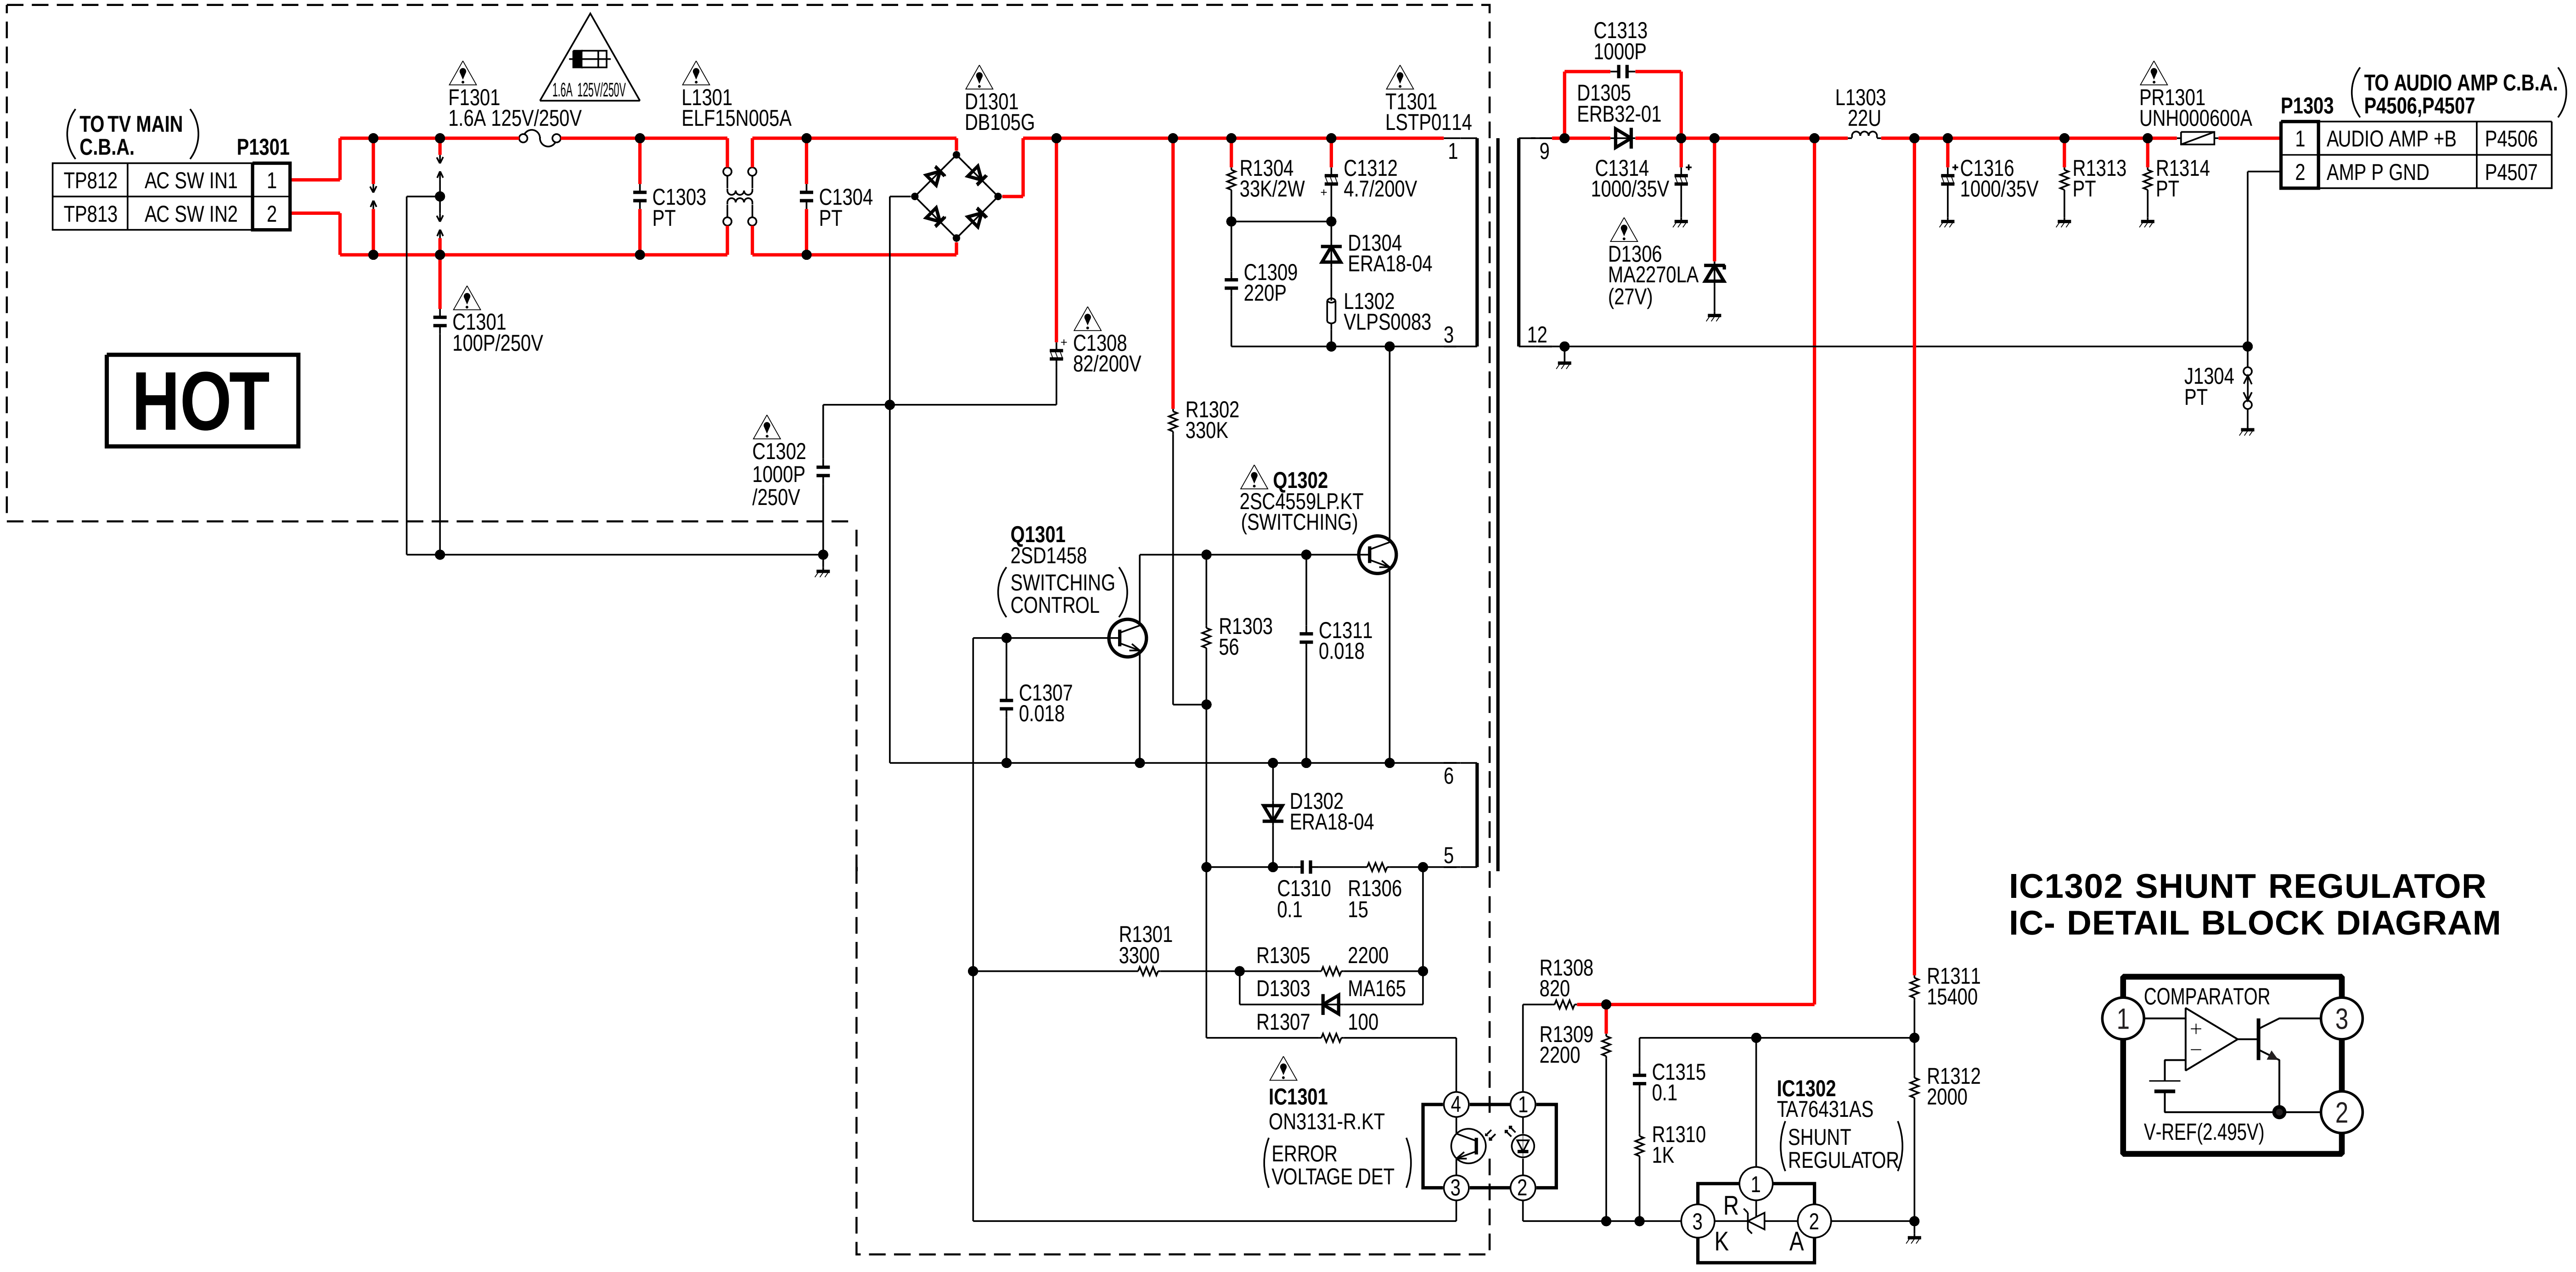
TO TV MAIN C.B.A.
P1301
TP812
AC SW IN1
1
TP813
AC SW IN2
2
HOT
F1301
1.6A 125V/250V
1.6A 125V/250V
L1301
ELF15N005A
C1303
PT
C1304
PT
C1301
100P/250V
D1301
DB105G
C1302
1000P
/250V
C1308
82/200V
T1301
LSTP0114
R1304
33K/2W
C1312
4.7/200V
C1309
220P
D1304
ERA18-04
L1302
VLPS0083
R1302
330K
Q1302
2SC4559LP.KT
(SWITCHING)
Q1301
2SD1458
(SWITCHING CONTROL)
R1303
56
C1311
0.018
C1307
0.018
D1302
ERA18-04
C1310
0.1
R1306
15
R1301
3300
R1305
2200
D1303
MA165
R1307
100
IC1301
ON3131-R.KT
(ERROR VOLTAGE DET)
1
2
3
4
5
6
9
12
C1313
1000P
D1305
ERB32-01
C1314
1000/35V
D1306
MA2270LA
(27V)
L1303
22U
C1316
1000/35V
R1313
PT
R1314
PT
PR1301
UNH000600A
P1303
TO AUDIO AMP C.B.A.
P4506,P4507
1
AUDIO AMP +B
P4506
2
AMP P GND
P4507
J1304
PT
R1308
820
R1309
2200
C1315
0.1
R1310
1K
IC1302
TA76431AS
(SHUNT REGULATOR)
R
K
A
R1311
15400
R1312
2000

IC1302 SHUNT REGULATOR IC- DETAIL BLOCK DIAGRAM

COMPARATOR
+
−
V-REF(2.495V)
1
2
3

LINK TO VOLTAGE CHART

AUDIO I SCHEMATIC DIAGRAM

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

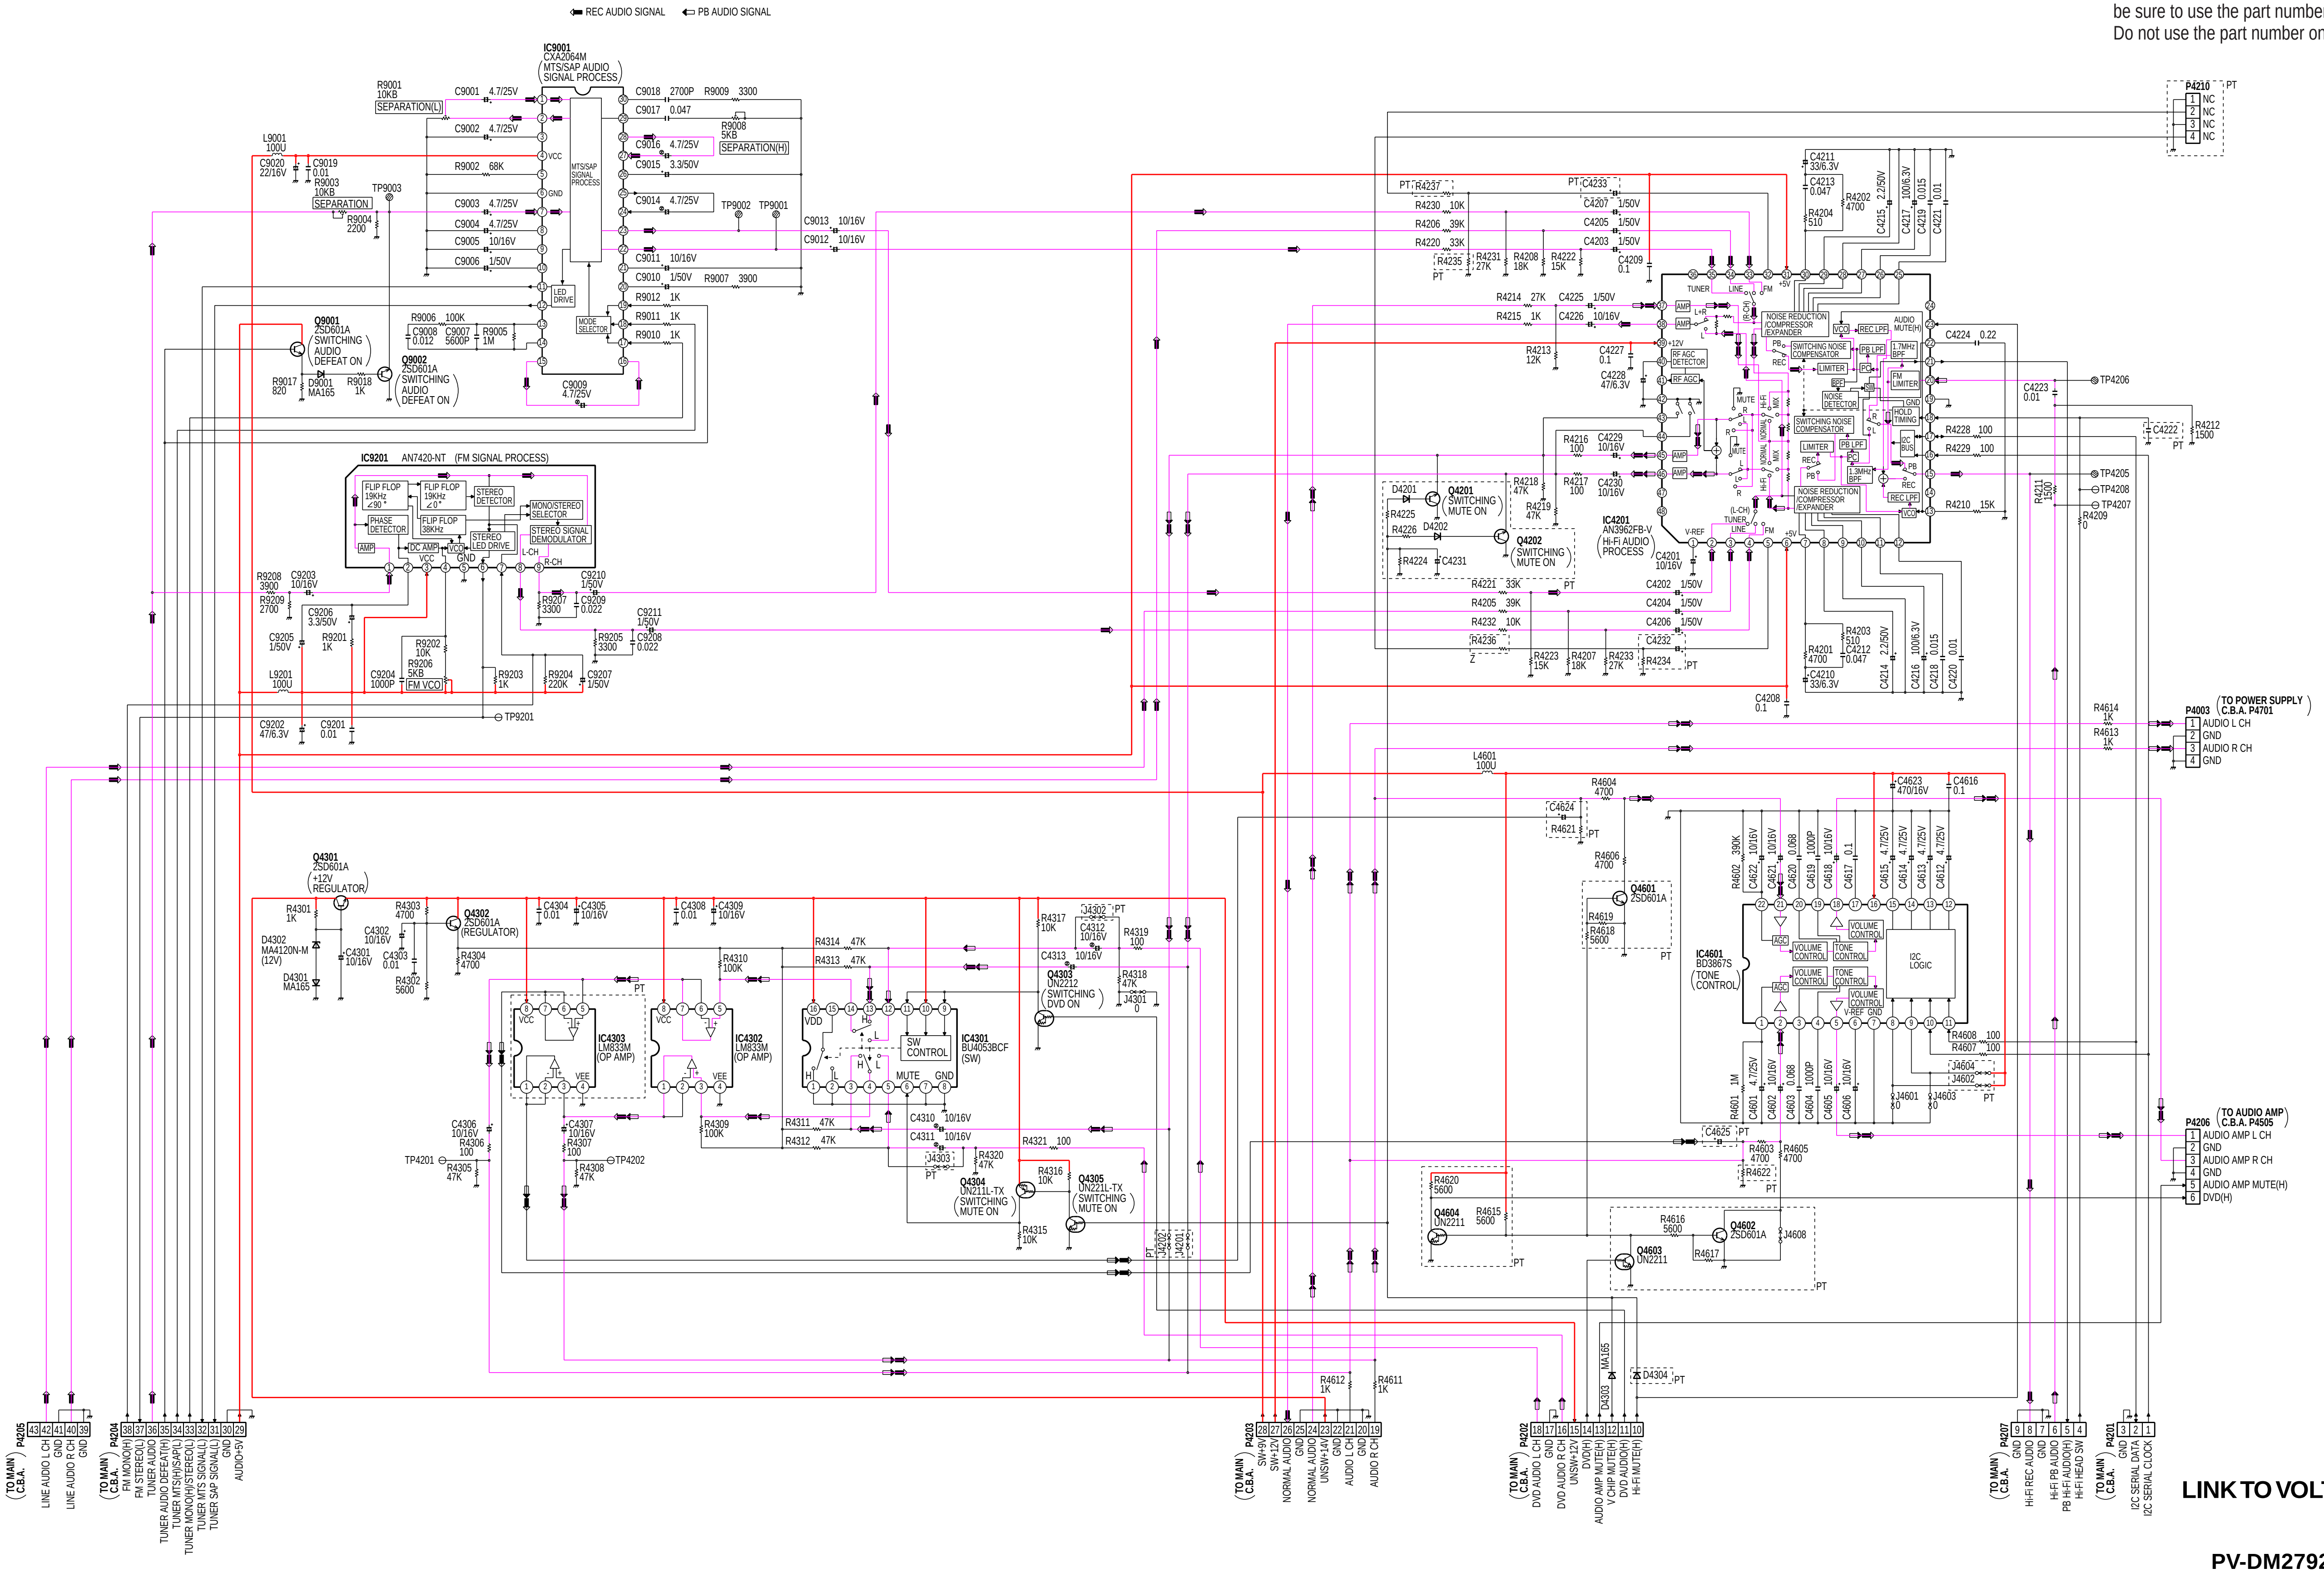

REC AUDIO SIGNAL
PB AUDIO SIGNAL
IC9001 CXA2064M (MTS/SAP AUDIO SIGNAL PROCESS)
IC9201 AN7420-NT (FM SIGNAL PROCESS)
Q9001 2SD601A (SWITCHING AUDIO DEFEAT ON)
Q9002 2SD601A (SWITCHING AUDIO DEFEAT ON)
IC4201 AN3962FB-V (Hi-Fi AUDIO PROCESS)
Q4201 (SWITCHING MUTE ON)
Q4202 (SWITCHING MUTE ON)
IC4601 BD3867S (TONE CONTROL)
Q4601 2SD601A
Q4602 2SD601A
Q4603 UN2211
Q4604 UN2211
Q4301 2SD601A (+12V REGULATOR)
Q4302 2SD601A (REGULATOR)
Q4303 UN2212 (SWITCHING DVD ON)
Q4304 UN211L-TX (SWITCHING MUTE ON)
Q4305 UN221L-TX (SWITCHING MUTE ON)
IC4303 LM833M (OP AMP)
IC4302 LM833M (OP AMP)
IC4301 BU4053BCF (SW)
P4210 NC NC NC NC
P4003 (TO POWER SUPPLY C.B.A. P4701) AUDIO L CH GND AUDIO R CH GND
P4206 (TO AUDIO AMP C.B.A. P4505) AUDIO AMP L CH GND AUDIO AMP R CH GND AUDIO AMP MUTE(H) DVD(H)
P4205 (TO MAIN C.B.A.) LINE AUDIO L CH GND LINE AUDIO R CH GND
P4204 (TO MAIN C.B.A.) FM MONO(H) FM STEREO(L) TUNER AUDIO TUNER AUDIO DEFEAT(H) TUNER MTS(H)/SAP(L) TUNER MONO(H)/STEREO(L) TUNER MTS SIGNAL(L) TUNER SAP SIGNAL(L) GND AUDIO+5V
P4203 (TO MAIN C.B.A.) SW+9V SW+12V NORMAL AUDIO GND NORMAL AUDIO UNSW+14V GND AUDIO L CH GND AUDIO R CH
P4202 (TO MAIN C.B.A.) DVD AUDIO L CH GND DVD AUDIO R CH GND DVD(H) AUDIO AMP MUTE(H) V CHIP MUTE(H) DVD AUDIO(H) Hi-Fi MUTE(H)
P4207 (TO MAIN C.B.A.) GND Hi-Fi REC AUDIO GND Hi-Fi PB AUDIO(H) PB Hi-Fi AUDIO(H) Hi-Fi HEAD SW
P4201 (TO MAIN C.B.A.) GND I2C SERIAL DATA I2C SERIAL CLOCK

LINK TO VOLTAGE CHART

VJPS4038
PV-DM2792/PV-DM2792-K
AUDIO I SCHEMATIC DIAGRAM

IC9001 MTS/SAP AUDIO PROCESS IC- DETAIL BLOCK DIAGRAM

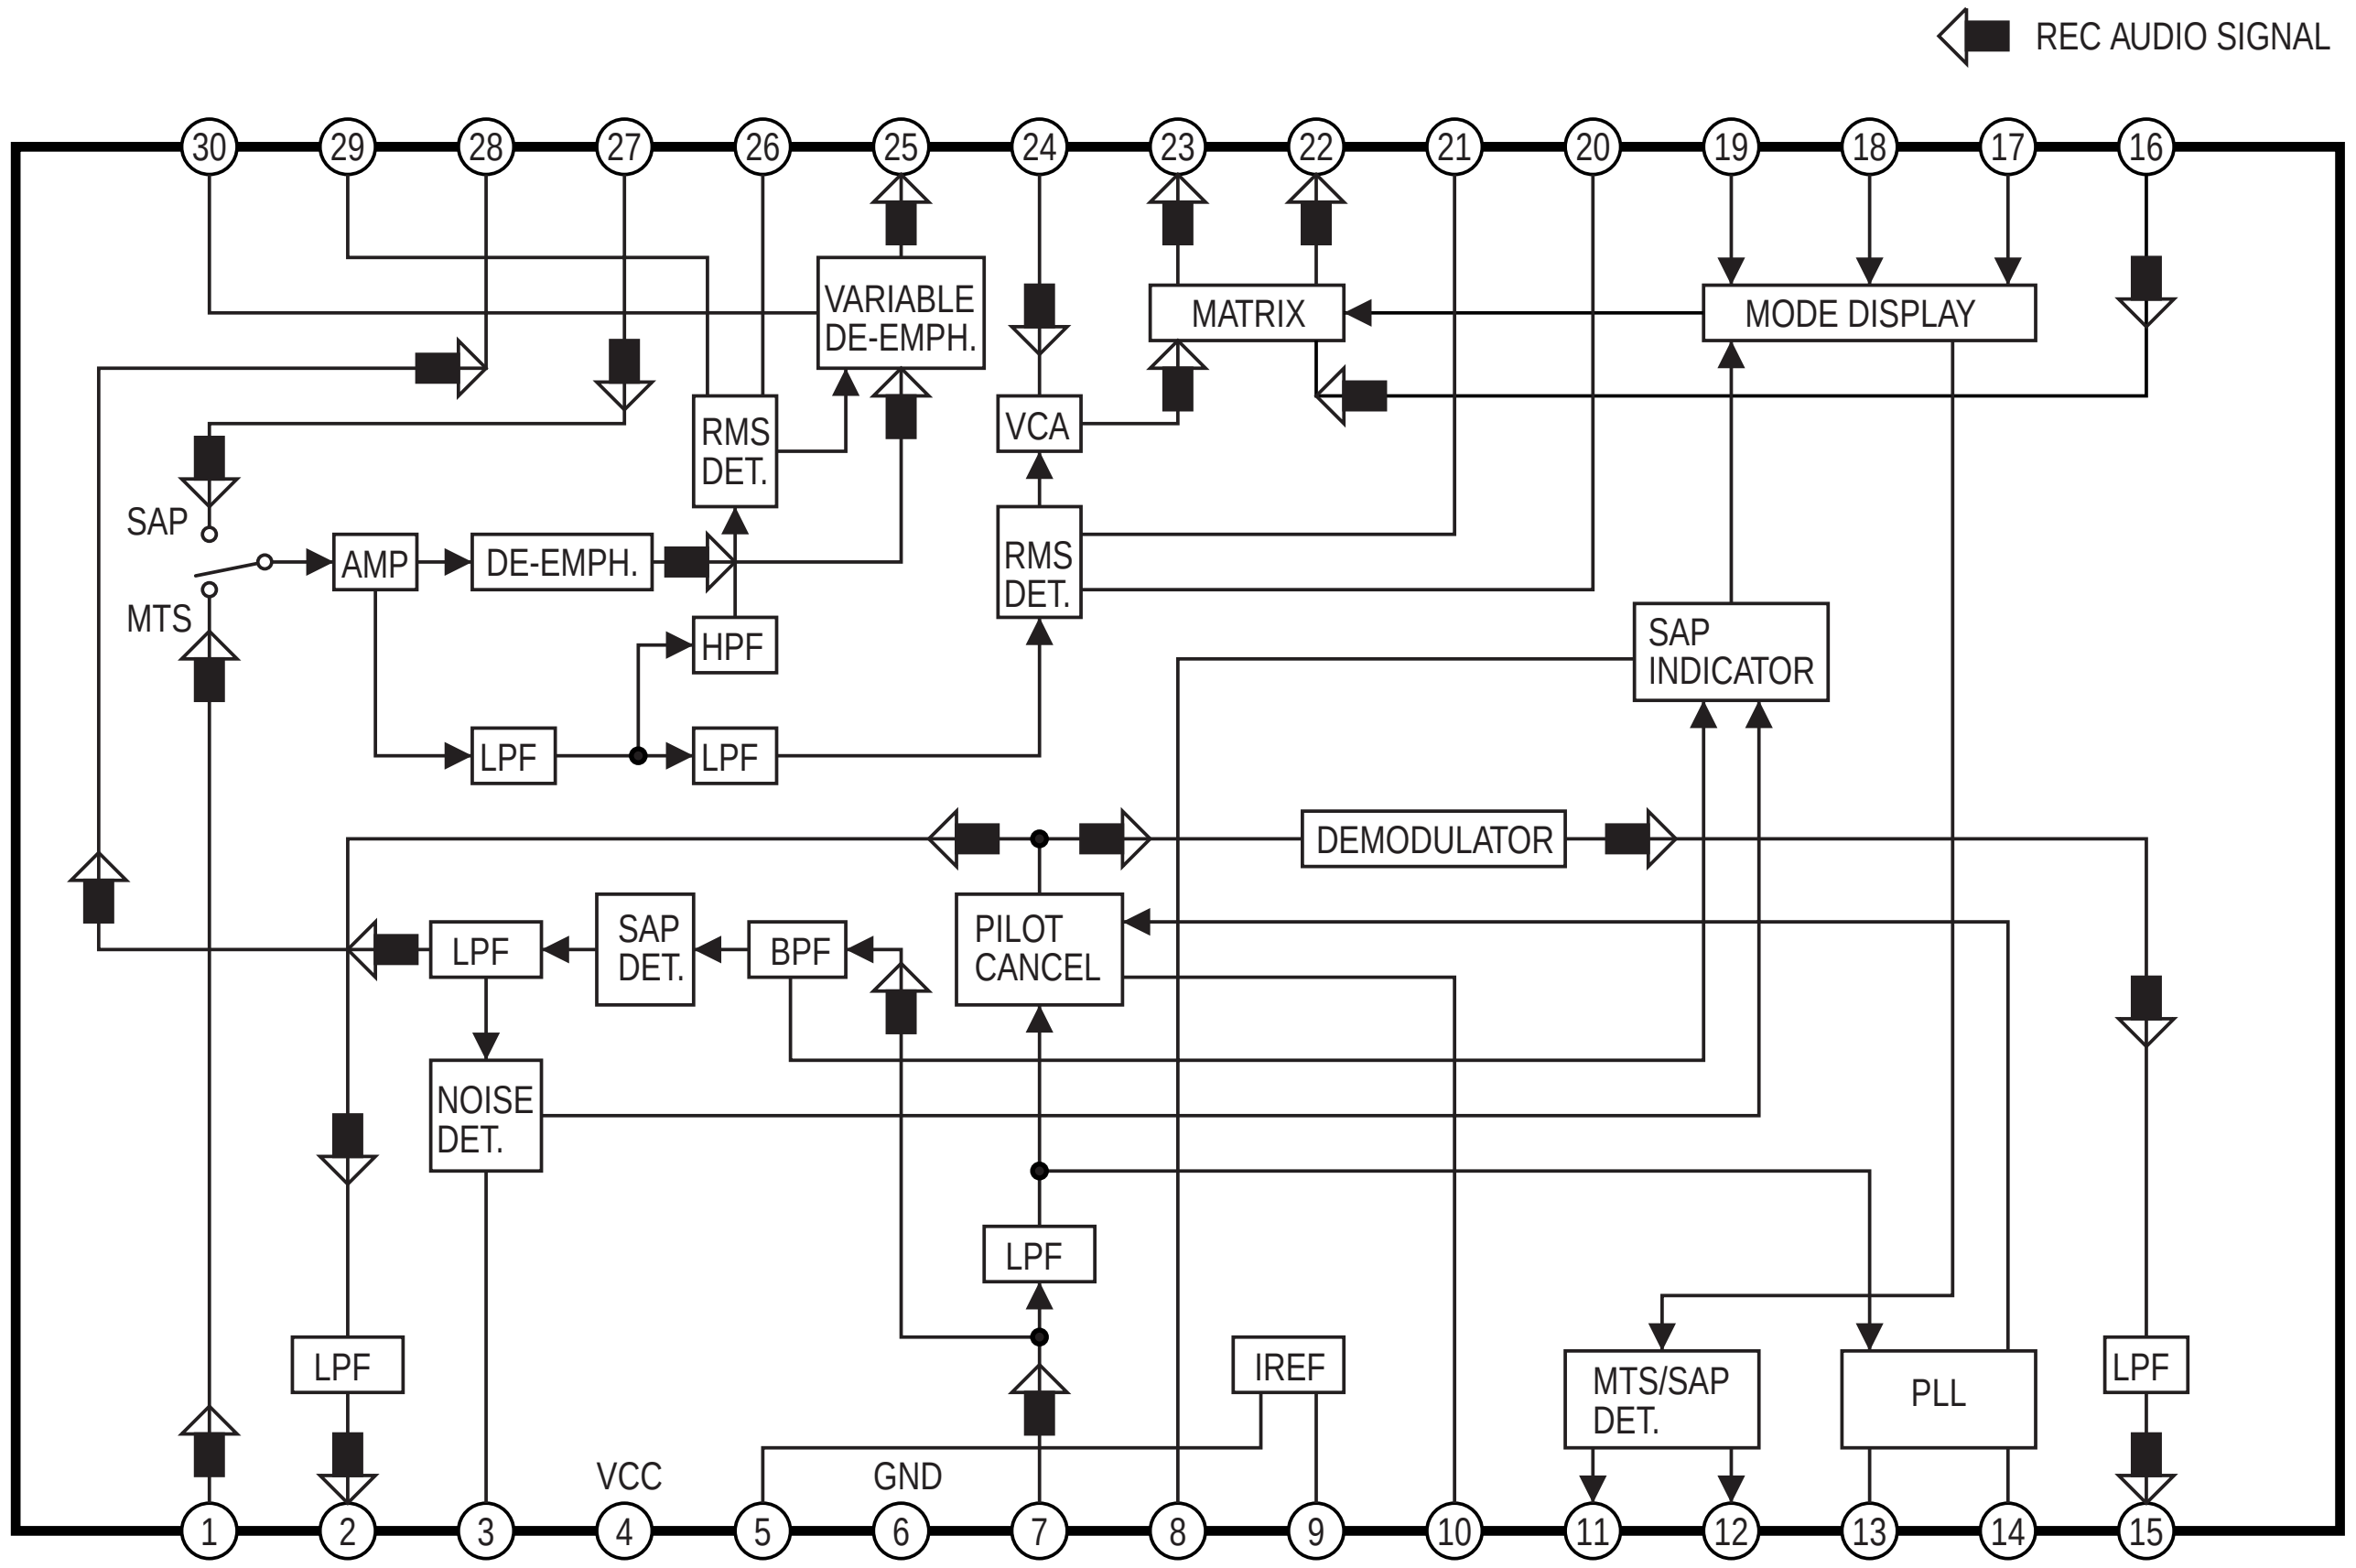
REC AUDIO SIGNAL
30
29
28
27
26
25
24
23
22
21
20
19
18
17
16
VARIABLE DE-EMPH.
MATRIX
MODE DISPLAY
VCA
RMS DET.
SAP
MTS
AMP
DE-EMPH.
HPF
RMS DET.
SAP INDICATOR
LPF
LPF
DEMODULATOR
LPF
SAP DET.
BPF
PILOT CANCEL
NOISE DET.
LPF
LPF
IREF
MTS/SAP DET.
PLL
LPF
VCC
GND
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15

AUDIO II SCHEMATIC DIAGRAM

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

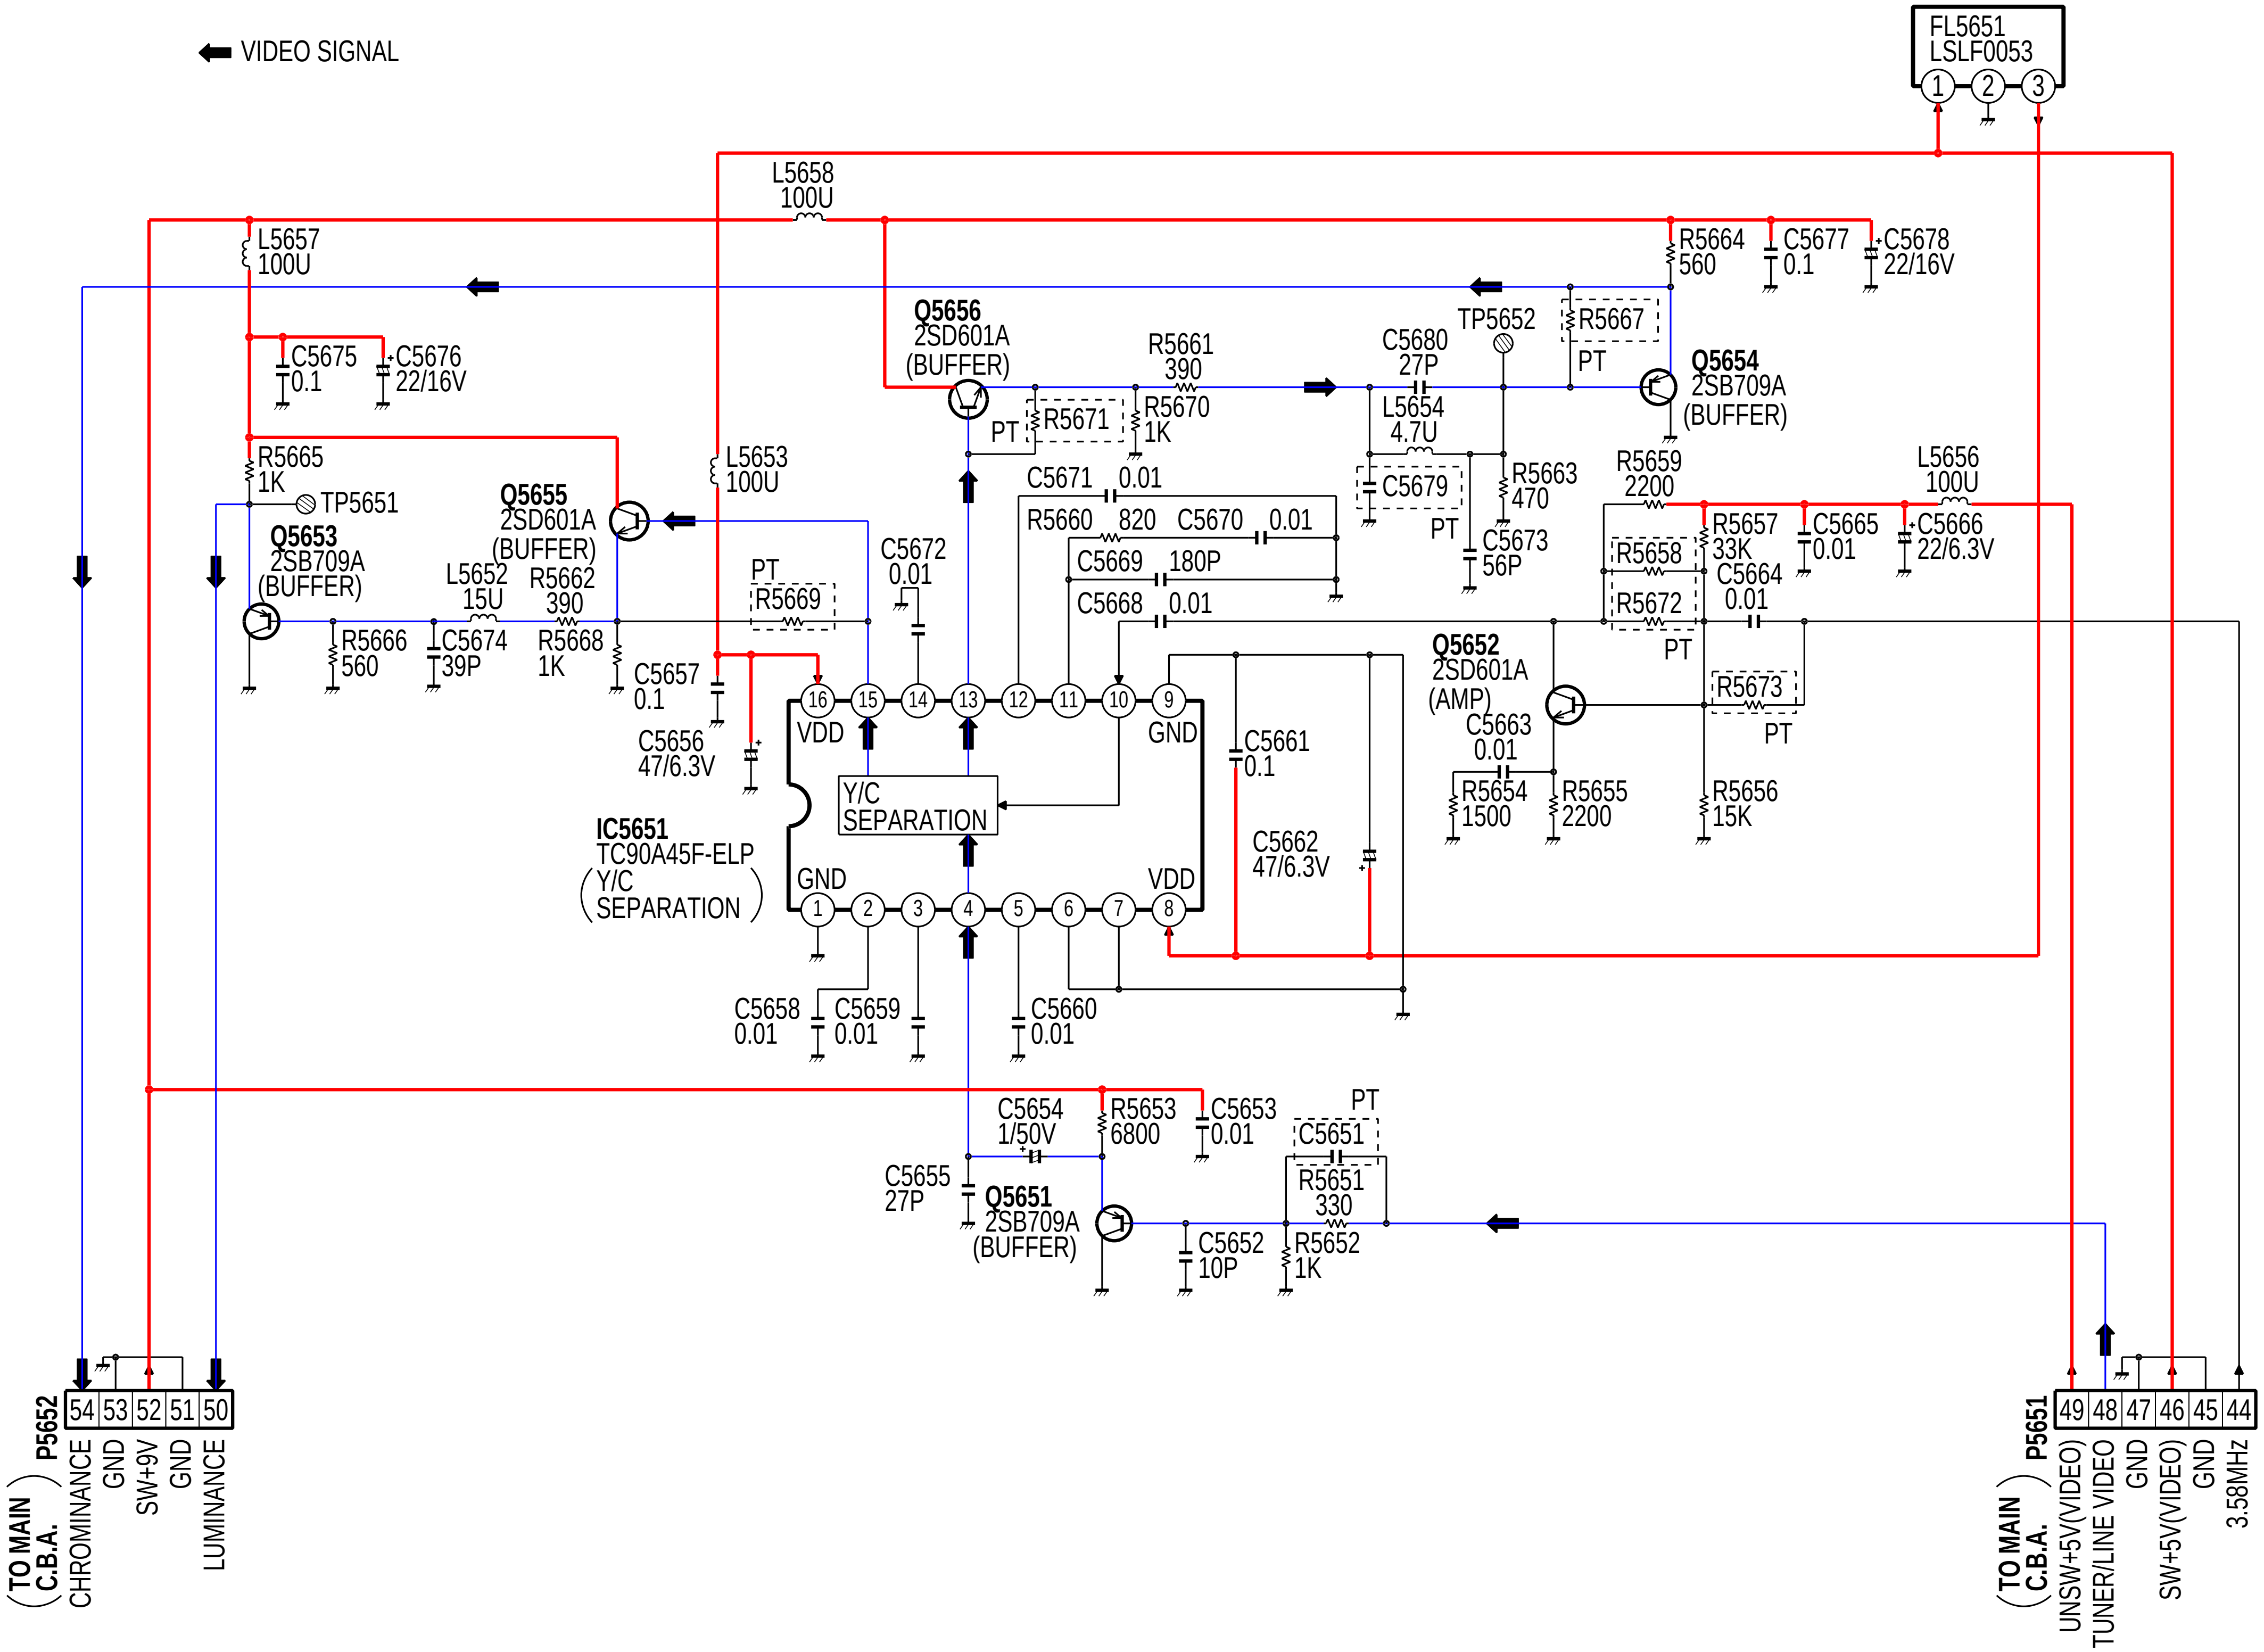

VIDEO SIGNAL
FL5651
LSLF0053
1
2
3
L5658
100U
L5657
100U
R5664
560
C5677
0.1
C5678
22/16V
C5675
0.1
C5676
22/16V
Q5656
2SD601A
(BUFFER)
R5661
390
C5680
27P
TP5652
R5667
PT
Q5654
2SB709A
(BUFFER)
PT
R5671
R5670
1K
L5654
4.7U
R5665
1K
TP5651
L5653
100U
C5671
0.01
C5679
R5663
470
R5659
2200
L5656
100U
Q5655
2SD601A
(BUFFER)
Q5653
2SB709A
(BUFFER)
R5660
820
C5670
0.01
PT
C5673
56P
R5657
33K
C5665
0.01
C5666
22/6.3V
C5672
0.01
C5669
180P
R5658
C5664
0.01
L5652
15U
R5662
390
PT
R5669
C5668
0.01
R5672
PT
Q5652
2SD601A
(AMP)
R5666
560
C5674
39P
R5668
1K
C5657
0.1
R5673
16
15
14
13
12
11
10
9
VDD
GND
PT
C5663
0.01
C5656
47/6.3V
C5661
0.1
Y/C
SEPARATION
R5654
1500
R5655
2200
R5656
15K
IC5651
TC90A45F-ELP
(Y/C
SEPARATION)
C5662
47/6.3V
GND
VDD
1
2
3
4
5
6
7
8
C5658
0.01
C5659
0.01
C5660
0.01
C5654
1/50V
R5653
6800
C5653
0.01
PT
C5651
C5655
27P
Q5651
2SB709A
(BUFFER)
R5651
330
C5652
10P
R5652
1K
P5652
54
53
52
51
50
(TO MAIN C.B.A.)
CHROMINANCE
GND
SW+9V
GND
LUMINANCE
P5651
49
48
47
46
45
44
(TO MAIN C.B.A.)
UNSW+5V(VIDEO)
TUNER/LINE VIDEO
GND
SW+5V(VIDEO)
GND
3.58MHz

LINK TO VOLTAGE CHART

AUDIO AMP SCHEMATIC DIAGRAM

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts, be sure to use the part number listed in the parts list. Do not use the part number on this diagram.

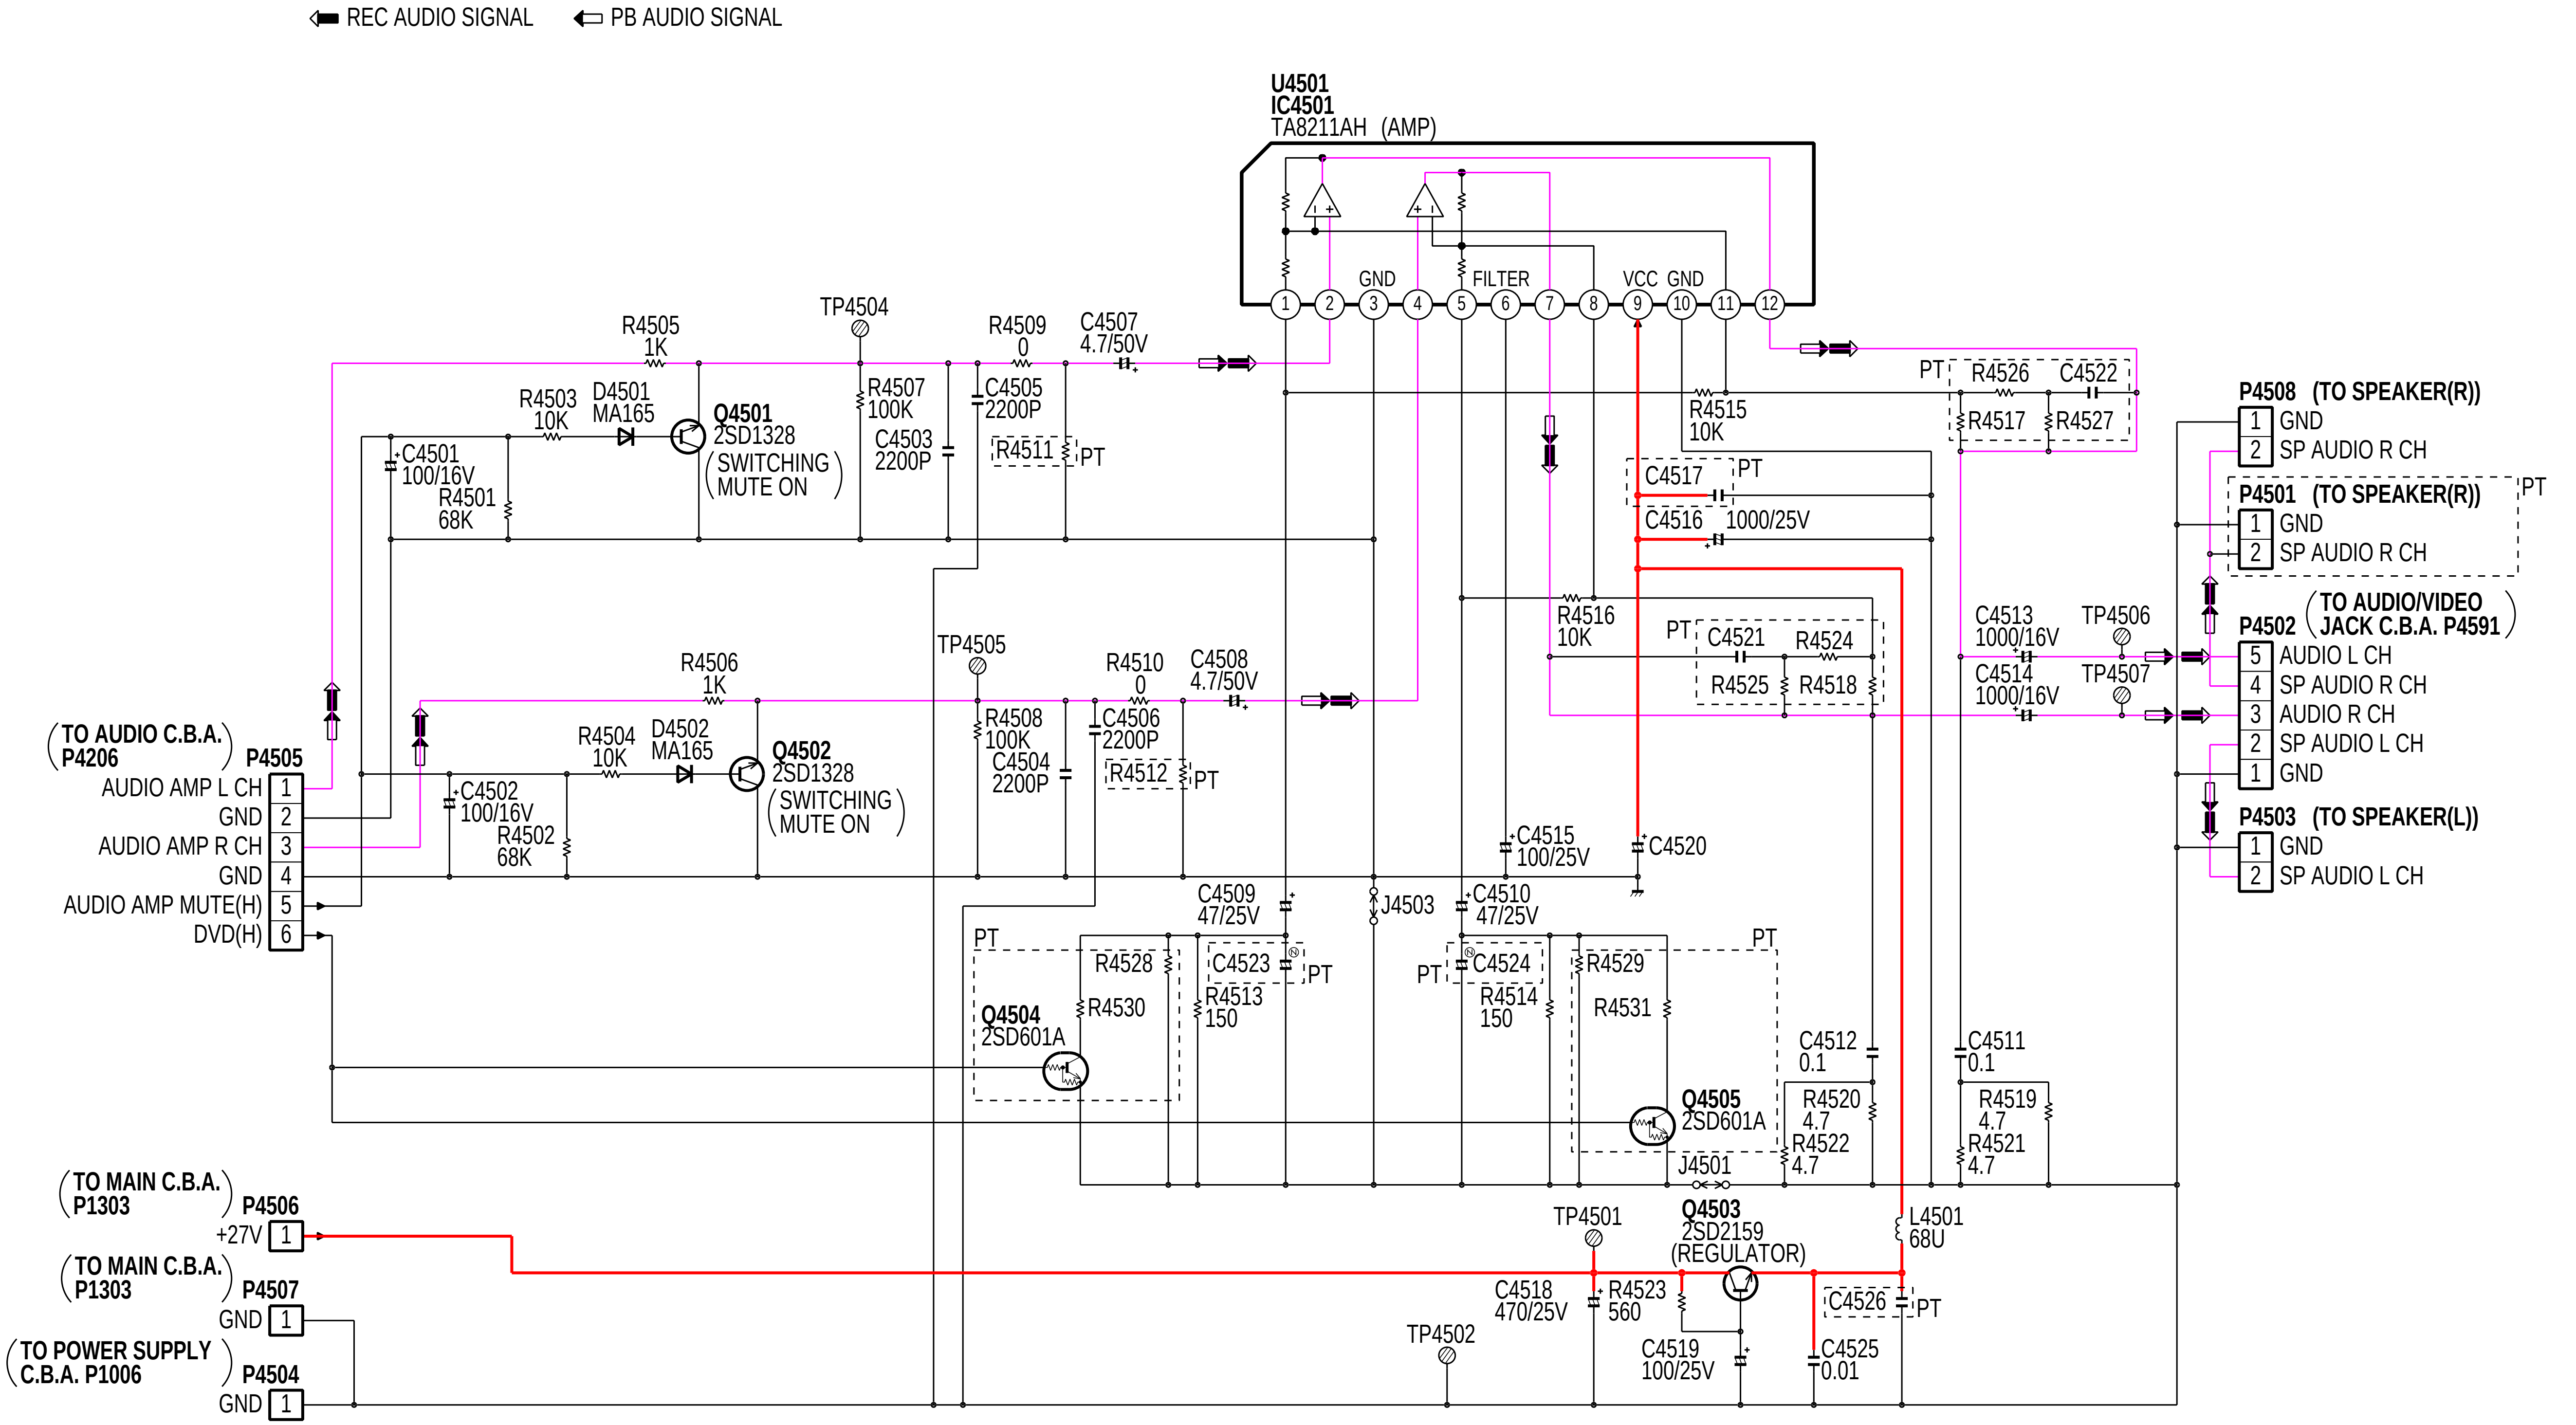

REC AUDIO SIGNAL
PB AUDIO SIGNAL
U4501
IC4501
TA8211AH (AMP)
GND
FILTER
VCC
GND
1
2
3
4
5
6
7
8
9
10
11
12
R4505
1K
TP4504
R4509
0
C4507
4.7/50V
R4503
10K
D4501
MA165
Q4501
2SD1328
SWITCHING
MUTE ON
R4507
100K
C4505
2200P
C4503
2200P
R4511
PT
C4501
100/16V
R4501
68K
R4506
1K
TP4505
R4510
0
C4508
4.7/50V
R4504
10K
D4502
MA165
Q4502
2SD1328
SWITCHING
MUTE ON
R4508
100K
C4506
2200P
C4504
2200P
R4512
PT
C4502
100/16V
R4502
68K
TO AUDIO C.B.A.
P4206
P4505
AUDIO AMP L CH
GND
AUDIO AMP R CH
GND
AUDIO AMP MUTE(H)
DVD(H)
1
2
3
4
5
6
R4515
10K
PT
R4526
C4522
R4517
R4527
C4517
PT
C4516
1000/25V
R4516
10K
PT
C4521
R4524
R4525
R4518
C4513
1000/16V
TP4506
C4514
1000/16V
TP4507
C4515
100/25V
C4520
C4509
47/25V
J4503
C4510
47/25V
PT
R4528
R4530
Q4504
2SD601A
C4523
PT
R4513
150
PT
C4524
R4514
150
R4529
R4531
PT
Q4505
2SD601A
C4512
0.1
C4511
0.1
R4520
4.7
R4522
4.7
R4519
4.7
R4521
4.7
J4501
P4508 (TO SPEAKER(R))
1 GND
2 SP AUDIO R CH
P4501 (TO SPEAKER(R))
PT
1 GND
2 SP AUDIO R CH
P4502
TO AUDIO/VIDEO JACK C.B.A. P4591
5 AUDIO L CH
4 SP AUDIO R CH
3 AUDIO R CH
2 SP AUDIO L CH
1 GND
P4503 (TO SPEAKER(L))
1 GND
2 SP AUDIO L CH
TO MAIN C.B.A.
P1303
P4506
+27V
1
TO MAIN C.B.A.
P1303
P4507
GND
1
TO POWER SUPPLY
C.B.A. P1006
P4504
GND
1
TP4501
Q4503
2SD2159
(REGULATOR)
L4501
68U
C4518
470/25V
R4523
560
C4526
PT
TP4502
C4519
100/25V
C4525
0.01

LINK TO VOLTAGE CHART

POWER SUPPLY SCHEMATIC DIAGRAM

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,
REPLACE ONLY WITH THE SAME TYPE 3A 125V/250V FUSE.
ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES
D' INCENDIE N' UTILISERQUE DES FUSIBLE DE MÉME
TYPE 3A 125V/250V

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN ⚠ HAVE
SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY.
WHEN REPLACING ANY OF THESE COMPONENTS,
USE ONLY THE SPECIFIED PARTS.

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

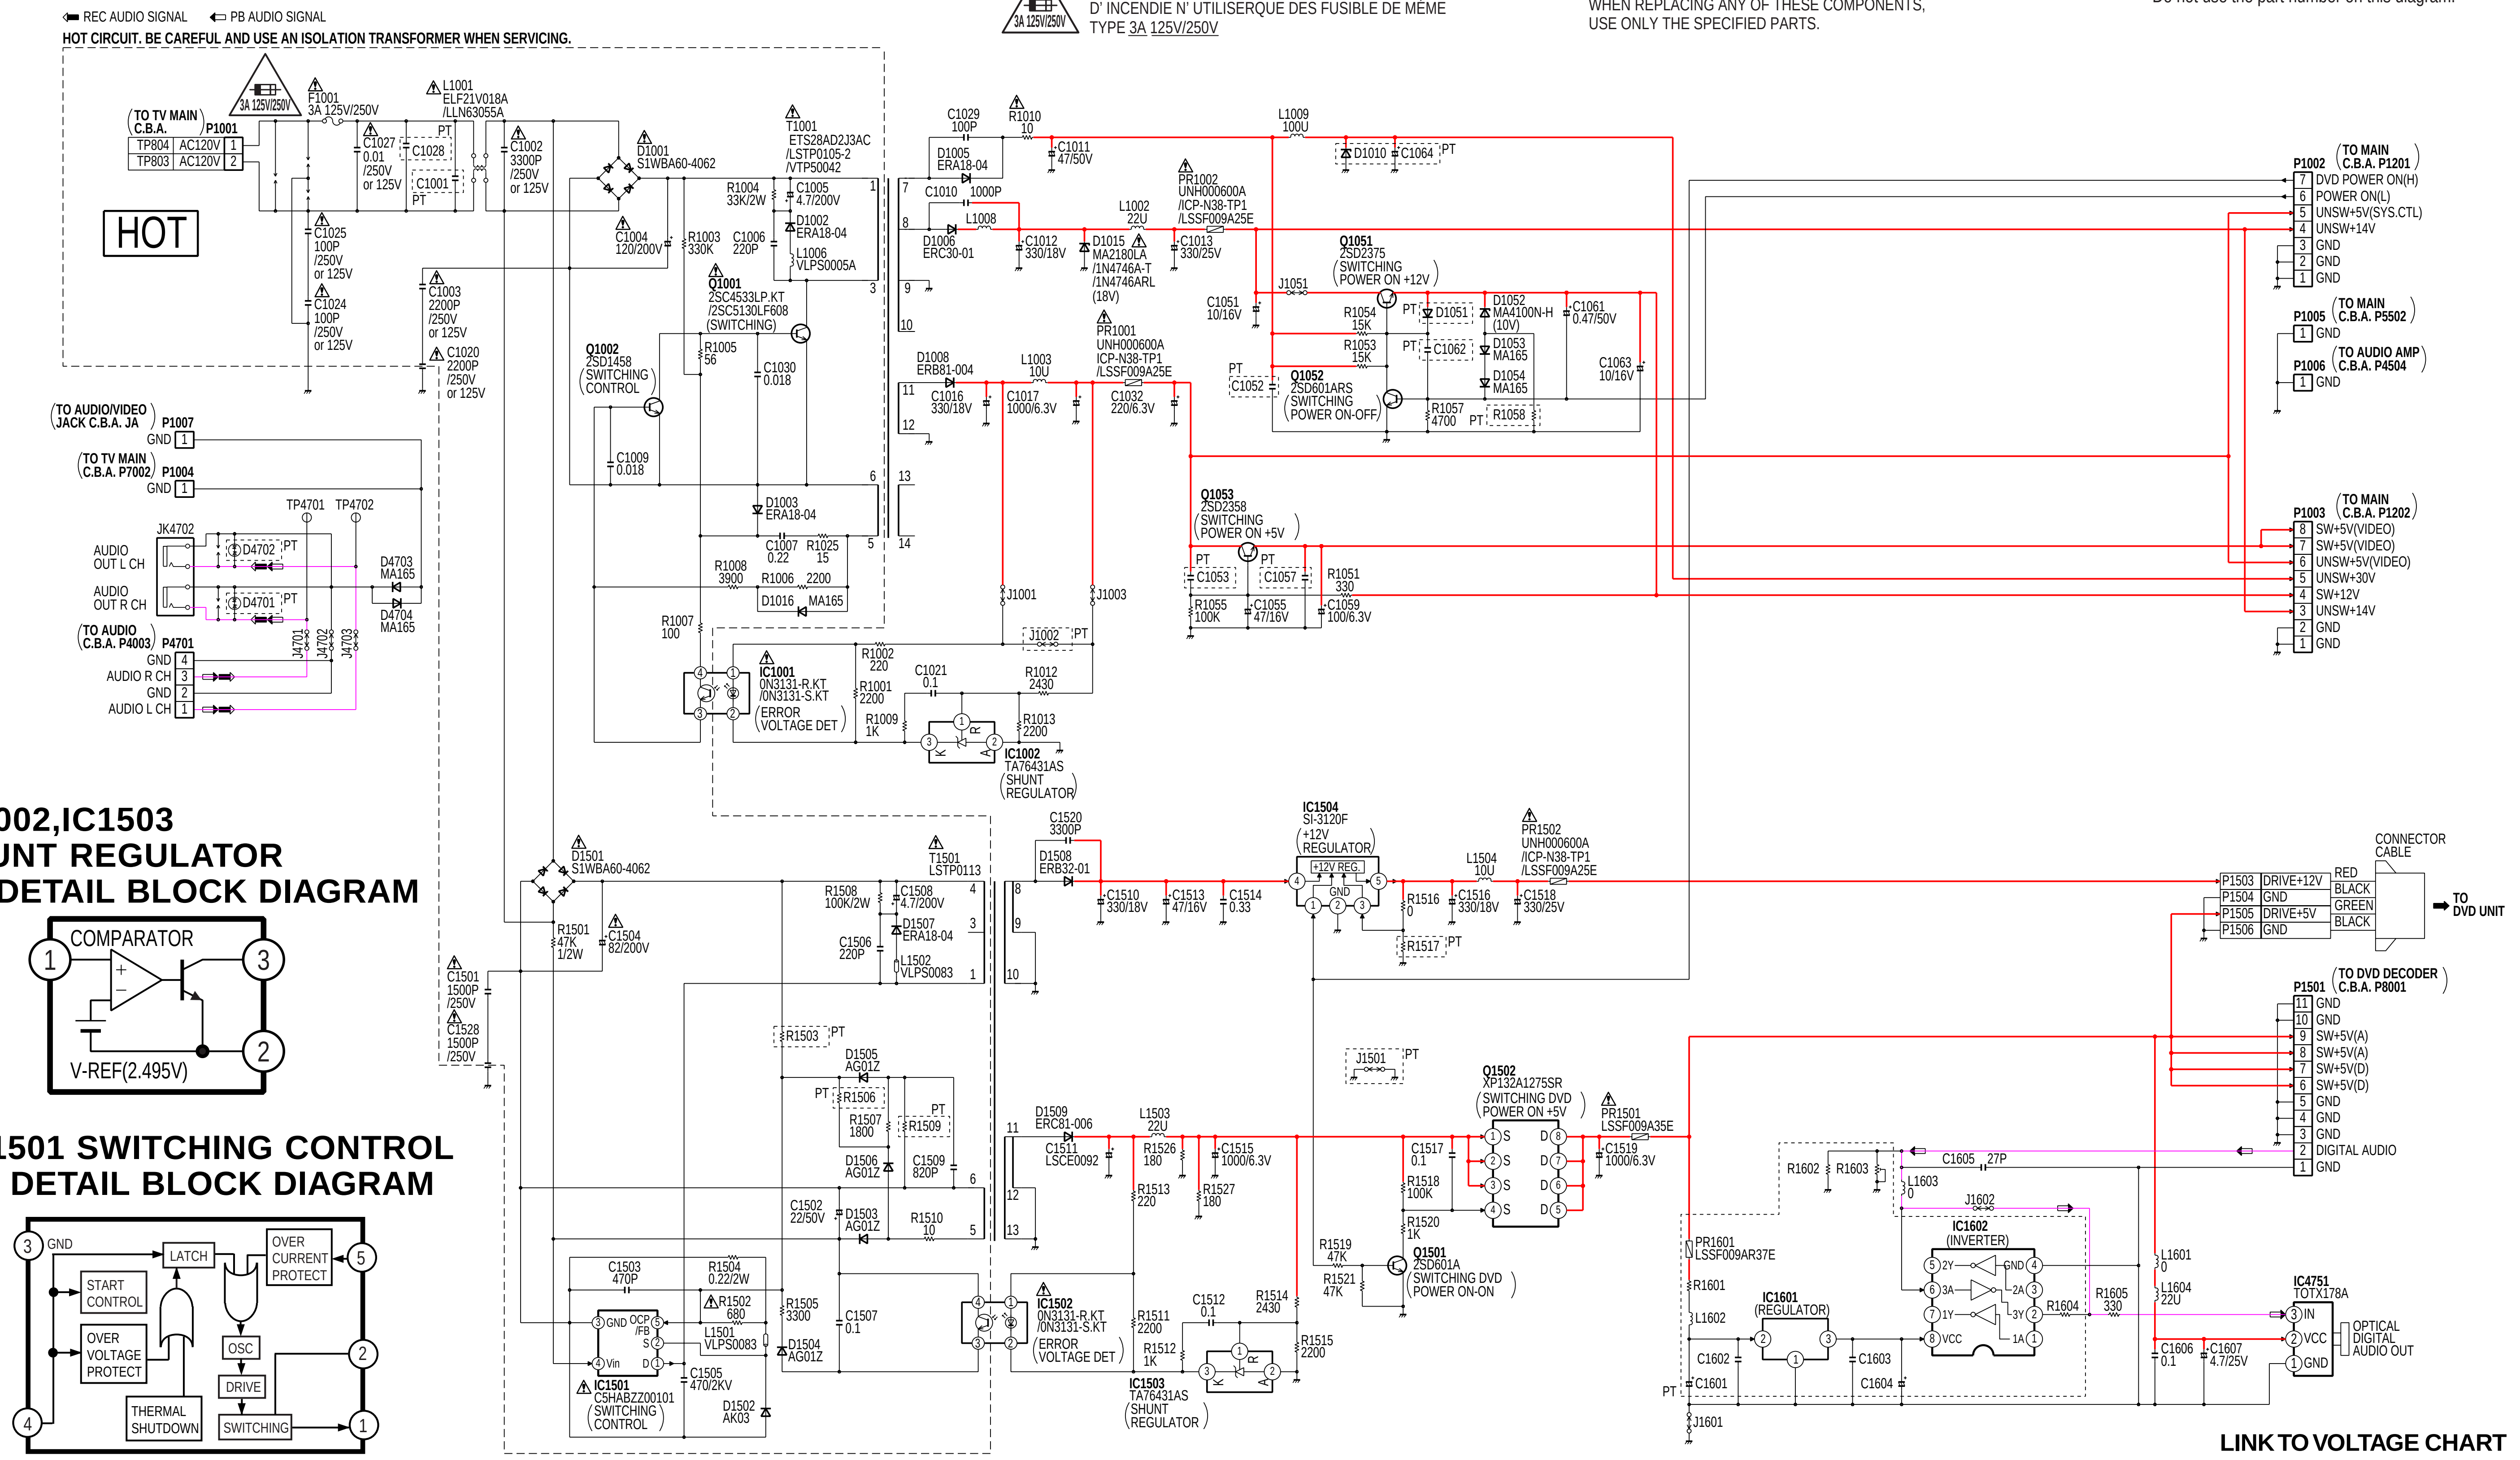

3A 125V/250V
REC AUDIO SIGNAL
PB AUDIO SIGNAL
HOT CIRCUIT. BE CAREFUL AND USE AN ISOLATION TRANSFORMER WHEN SERVICING.
HOT
TO TV MAIN C.B.A. P1001
TP804 AC120V 1
TP803 AC120V 2
F1001 3A 125V/250V
L1001 ELF21V018A /LLN63055A
C1027 0.01 /250V or 125V
C1028 PT
C1001 PT
C1002 3300P /250V or 125V
C1025 100P /250V or 125V
C1024 100P /250V or 125V
C1003 2200P /250V or 125V
C1020 2200P /250V or 125V
D1001 S1WBA60-4062
C1004 120/200V
R1004 33K/2W
R1003 330K
C1006 220P
C1005 4.7/200V
D1002 ERA18-04
L1006 VLPS0005A
T1001 ETS28AD2J3AC /LSTP0105-2 /VTP50042
Q1001 2SC4533LP.KT /2SC5130LF608 (SWITCHING)
Q1002 2SD1458 (SWITCHING CONTROL)
R1005 56
C1030 0.018
C1009 0.018
D1003 ERA18-04
C1007 0.22
R1025 15
R1008 3900
R1006 2200
D1016 MA165
R1007 100
IC1001 0N3131-R.KT /0N3131-S.KT (ERROR VOLTAGE DET)
R1002 220
R1001 2200
R1009 1K
C1021 0.1
R1012 2430
R1013 2200
IC1002 TA76431AS (SHUNT REGULATOR)
J1001
J1002 PT
J1003
C1029 100P
R1010 10
D1005 ERA18-04
C1011 47/50V
C1010 1000P
L1008
D1006 ERC30-01
C1012 330/18V
L1002 22U
D1015 MA2180LA /1N4746A-T /1N4746ARL (18V)
C1013 330/25V
PR1002 UNH00600A /ICP-N38-TP1 /LSSF009A25E
PR1001 UNH00600A ICP-N38-TP1 /LSSF009A25E
D1008 ERB81-004
L1003 10U
C1016 330/18V
C1017 1000/6.3V
C1032 220/6.3V
L1009 100U
D1010 C1064 PT
Q1051 2SD2375 (SWITCHING POWER ON +12V)
J1051
C1051 10/16V
R1054 15K
R1053 15K
D1051 PT
C1062 PT
D1052 MA4100N-H (10V)
D1053 MA165
D1054 MA165
C1061 0.47/50V
C1063 10/16V
C1052 PT
Q1052 2SD601ARS (SWITCHING POWER ON-OFF)
R1057 4700
R1058 PT
Q1053 2SD2358 (SWITCHING POWER ON +5V)
C1053 PT
C1057 PT
R1051 330
R1055 100K
C1055 47/16V
C1059 100/6.3V
TO MAIN C.B.A. P1201 P1002
7 DVD POWER ON(H)
6 POWER ON(L)
5 UNSW+5V(SYS.CTL)
4 UNSW+14V
3 GND
2 GND
1 GND
TO MAIN C.B.A. P5502 P1005
1 GND
TO AUDIO AMP C.B.A. P4504 P1006
1 GND
TO MAIN C.B.A. P1202 P1003
8 SW+5V(VIDEO)
7 SW+5V(VIDEO)
6 UNSW+5V(VIDEO)
5 UNSW+30V
4 SW+12V
3 UNSW+14V
2 GND
1 GND
TO AUDIO/VIDEO JACK C.B.A. JA P1007
GND 1
TO TV MAIN C.B.A. P7002 P1004
GND 1
TP4701 TP4702
JK4702
AUDIO OUT L CH
AUDIO OUT R CH
D4702 PT
D4701 PT
D4703 MA165
D4704 MA165
J4701 J4702 J4703
TO AUDIO C.B.A. P4003 P4701
GND 4
AUDIO R CH 3
GND 2
AUDIO L CH 1
D1501 S1WBA60-4062
R1501 47K 1/2W
C1504 82/200V
C1501 1500P /250V
C1528 1500P /250V
R1508 100K/2W
C1508 4.7/200V
D1507 ERA18-04
C1506 220P
L1502 VLPS0083
T1501 LSTP0113
R1503 PT
D1505 AG01Z
R1506 PT
R1507 1800
R1509 PT
D1506 AG01Z
C1509 820P
C1502 22/50V
D1503 AG01Z
R1510 10
C1503 470P
R1504 0.22/2W
R1502 680
L1501 VLPS0083
R1505 3300
C1507 0.1
D1504 AG01Z
IC1501 C5HABZZ00101 (SWITCHING CONTROL)
GND OCP/FB S D Vin
C1505 470/2KV
D1502 AK03
IC1502 0N3131-R.KT /0N3131-S.KT (ERROR VOLTAGE DET)
R1511 2200
R1512 1K
C1512 0.1
R1514 2430
R1515 2200
IC1503 TA76431AS (SHUNT REGULATOR)
C1520 3300P
D1508 ERB32-01
C1510 330/18V
C1513 47/16V
C1514 0.33
IC1504 SI-3120F (+12V REGULATOR)
+12V REG. GND
R1516 0
R1517 PT
L1504 10U
C1516 330/18V
PR1502 UNH00600A /ICP-N38-TP1 /LSSF009A35E
C1518 330/25V
CONNECTOR CABLE
P1503 DRIVE+12V RED
P1504 GND BLACK
P1505 DRIVE+5V GREEN
P1506 GND BLACK
TO DVD UNIT
TO DVD DECODER C.B.A. P8001 P1501
11 GND
10 GND
9 SW+5V(A)
8 SW+5V(A)
7 SW+5V(D)
6 SW+5V(D)
5 GND
4 GND
3 GND
2 DIGITAL AUDIO
1 GND
J1501 PT
D1509 ERC81-006
L1503 22U
C1511 LSCE0092
R1526 180
C1515 1000/6.3V
R1513 220
R1527 180
C1517 0.1
R1518 100K
R1520 1K
Q1502 XP132A1275SR (SWITCHING DVD POWER ON +5V)
PR1501 LSSF009A35E
C1519 1000/6.3V
R1519 47K
R1521 47K
Q1501 2SD601A (SWITCHING DVD POWER ON-ON)
PR1601 LSSF009AR37E
R1601
L1602
IC1601 (REGULATOR)
C1602
C1601 PT
C1603
C1604
J1601
R1602 R1603
L1603 0
C1605 27P
J1602
IC1602 (INVERTER)
2Y GND 3A 2A 1Y 3Y VCC 1A
R1604
R1605 330
L1601 0
L1604 22U
C1606 0.1
C1607 4.7/25V
IC4751 TOTX178A
IN VCC GND
OPTICAL DIGITAL AUDIO OUT
COMPARATOR
V-REF(2.495V)
GND
LATCH
OVER CURRENT PROTECT
START CONTROL
OVER VOLTAGE PROTECT
OSC
DRIVE
THERMAL SHUTDOWN
SWITCHING

IC1002,IC1503 SHUNT REGULATOR IC- DETAIL BLOCK DIAGRAM

IC1501 SWITCHING CONTROL IC- DETAIL BLOCK DIAGRAM

LINK TO VOLTAGE CHART

VJPS1029
PV-DM2792/PV-DM2792-K
POWER SUPPLY SCHEMATIC DIAGRAM

TV MAIN SCHEMATIC DIAGRAM

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,
REPLACE ONLY WITH THE SAME TYPE 4A 125/250V FUSE.
ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES
D' INCENDIE N' UTILISERQUE DES FUSIBLE DE MÉME
TYPE 4A 125/250V

4A 125/250V

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN ⚠ HAVE
SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY.
WHEN REPLACING ANY OF THESE COMPONENTS,
USE ONLY THE SPECIFIED PARTS.

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

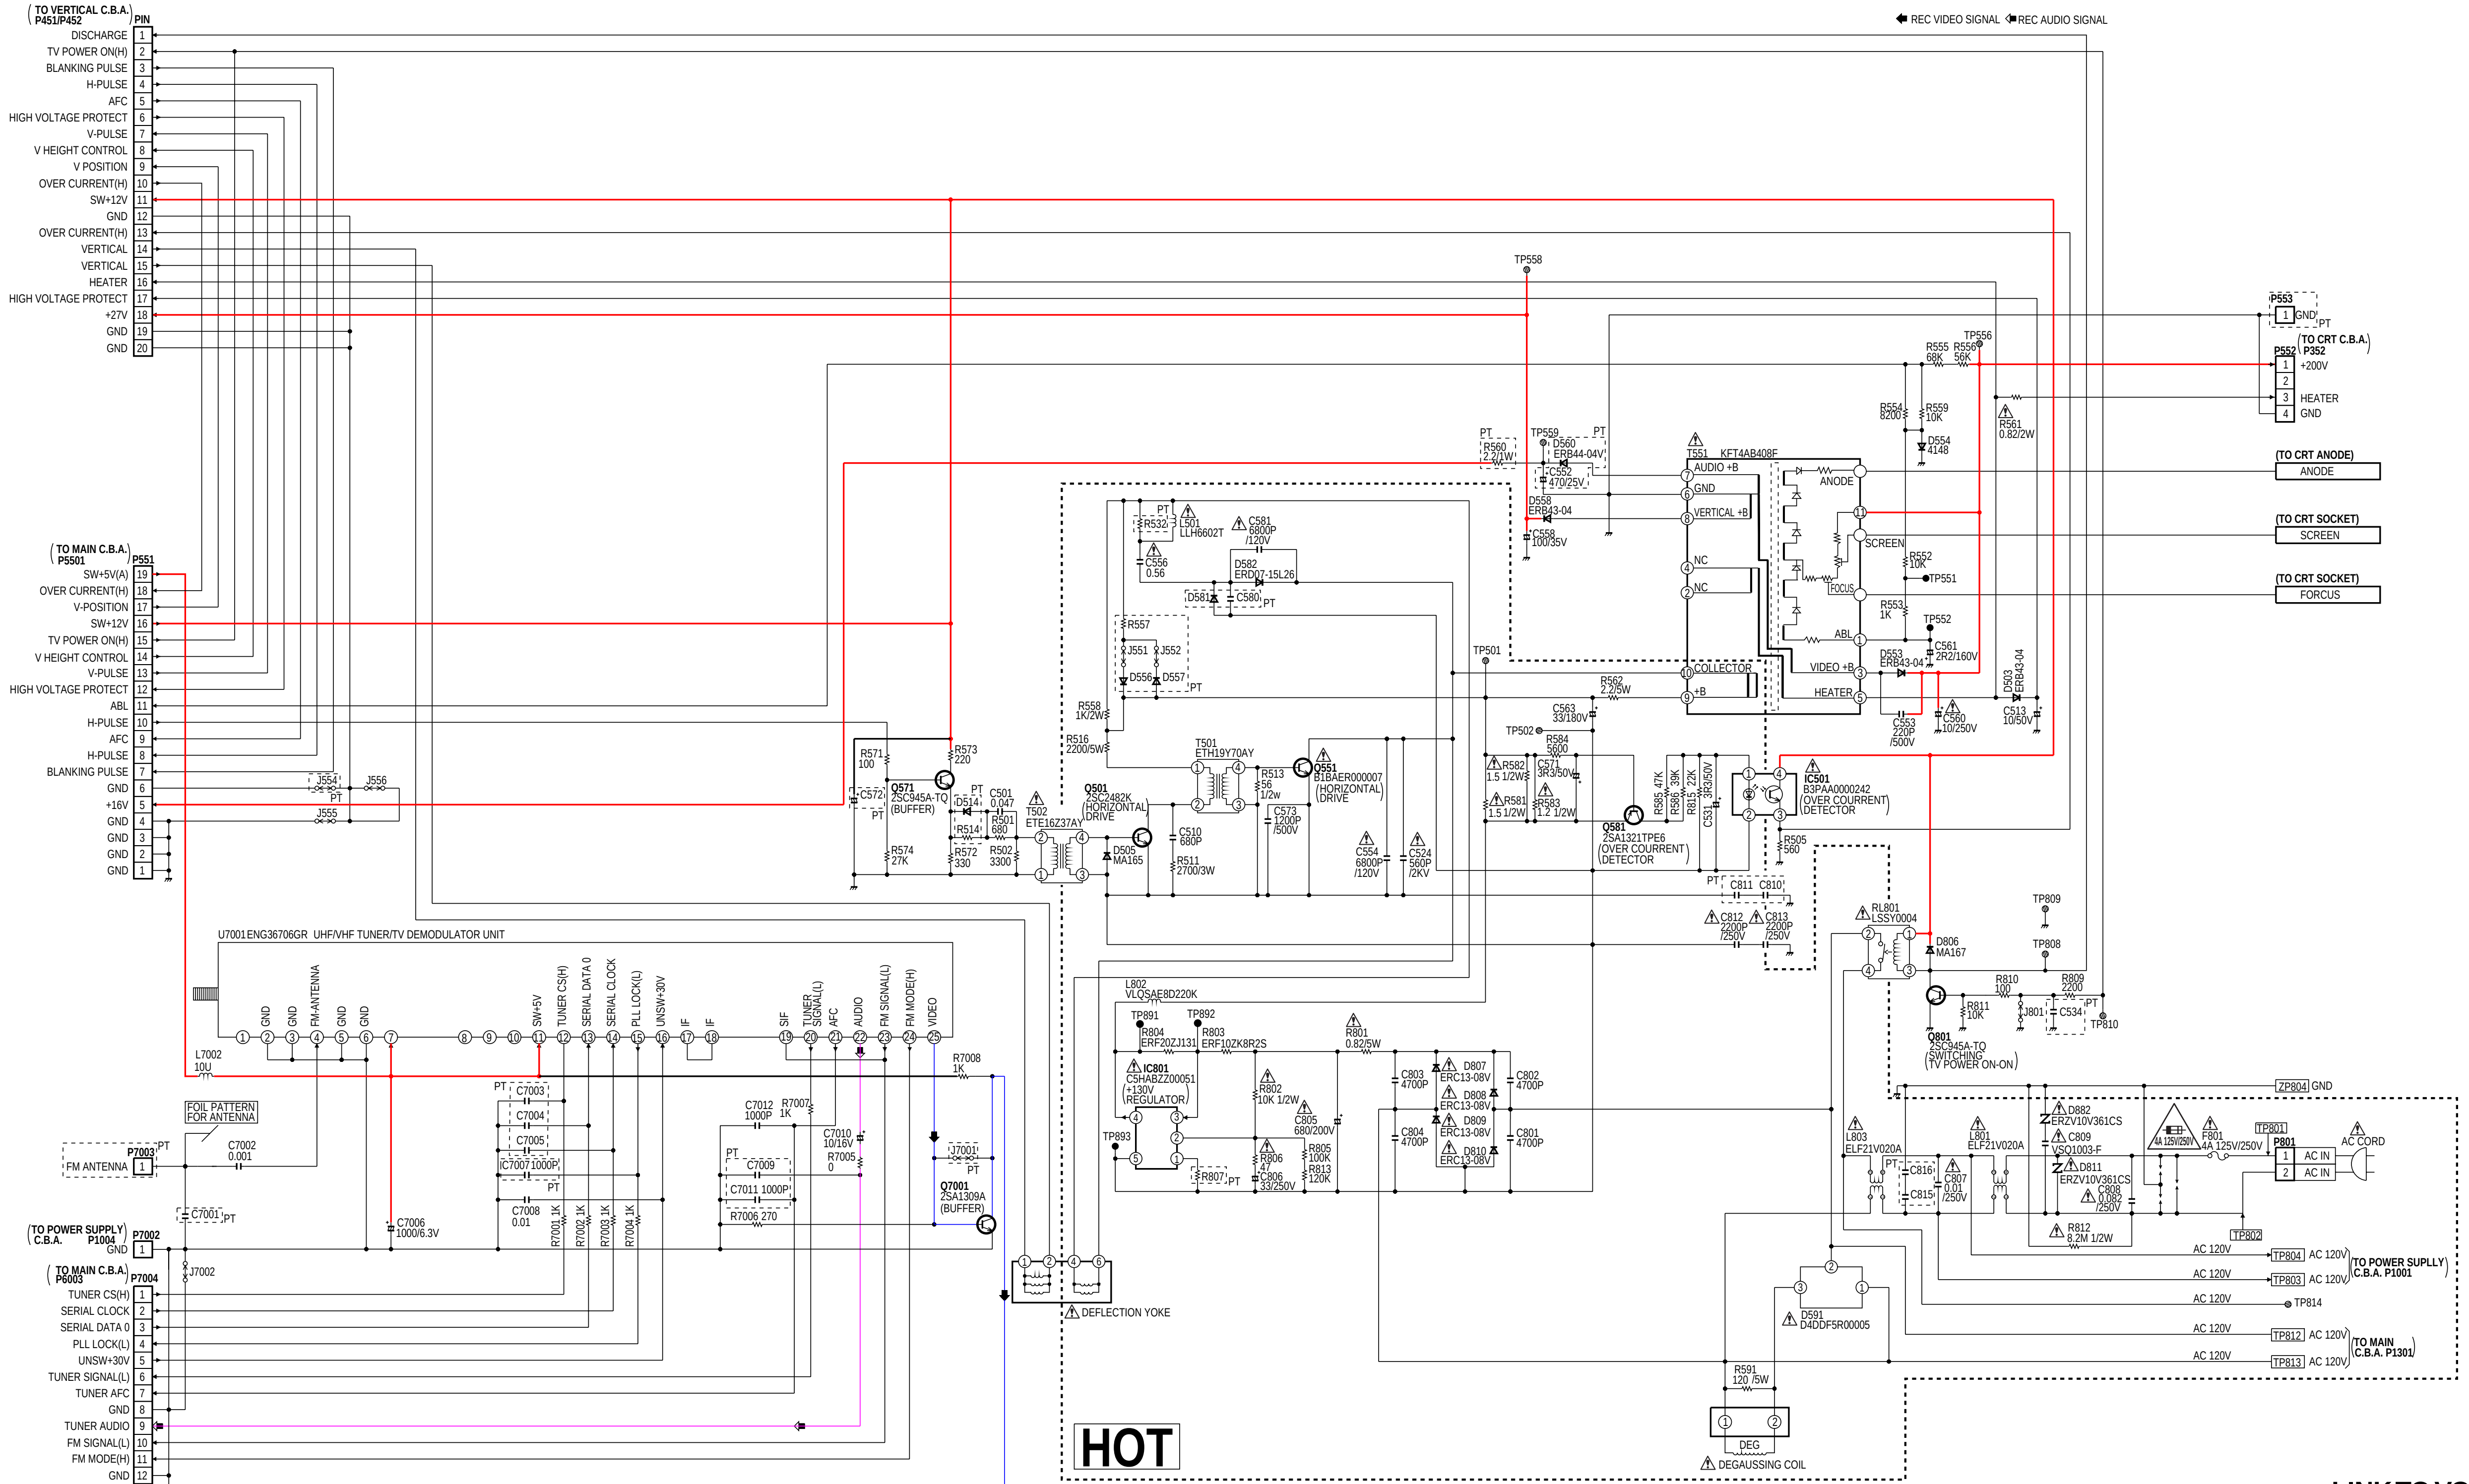

(TO VERTICAL C.B.A. P451/P452)
PIN
DISCHARGE 1
TV POWER ON(H) 2
BLANKING PULSE 3
H-PULSE 4
AFC 5
HIGH VOLTAGE PROTECT 6
V-PULSE 7
V HEIGHT CONTROL 8
V POSITION 9
OVER CURRENT(H) 10
SW+12V 11
GND 12
OVER CURRENT(H) 13
VERTICAL 14
VERTICAL 15
HEATER 16
HIGH VOLTAGE PROTECT 17
+27V 18
GND 19
GND 20
REC VIDEO SIGNAL
REC AUDIO SIGNAL
TP558
P553
GND
PT
(TO CRT C.B.A. P352)
P552
+200V
HEATER
GND
(TO CRT ANODE)
ANODE
(TO CRT SOCKET)
SCREEN
(TO CRT SOCKET)
FORCUS
(TO MAIN C.B.A. P5501)
P551
SW+5V(A) 19
OVER CURRENT(H) 18
V-POSITION 17
SW+12V 16
TV POWER ON(H) 15
V HEIGHT CONTROL 14
V-PULSE 13
HIGH VOLTAGE PROTECT 12
ABL 11
H-PULSE 10
AFC 9
H-PULSE 8
BLANKING PULSE 7
GND 6
+16V 5
GND 4
GND 3
GND 2
GND 1
J554
J556
J555
PT
T551 KFT4AB408F
AUDIO +B
GND
VERTICAL +B
NC
NC
COLLECTOR
+B
ANODE
SCREEN
FOCUS
ABL
VIDEO +B
HEATER
R555 68K
R556 56K
TP556
R554 8200
R559 10K
D554 4148
R561 0.82/2W
PT R560 2.2/1W
TP559
D560 ERB44-04V
C552 470/25V
D558 ERB43-04
C558 100/35V
R532
L501 LLH6602T
C581 6800P /120V
C556 0.56
D582 ERD07-15L26
D581
C580
R557
J551 J552
D556 D557
R558 1K/2W
R516 2200/5W
R552 10K
TP551
R553 1K
TP552
D553 ERB43-04
C561 2R2/160V
D503 ERB43-04
R562 2.2/5W
C563 33/180V
TP501
TP502
R584 5600
C553 220P /500V
C560 10/250V
C513 10/50V
R571 100
R573 220
Q571 2SC945A-TQ (BUFFER)
C572
PT
D514
C501 0.047
R501 680
R514
T502 ETE16Z37AY
Q501 2SC2482K (HORIZONTAL) DRIVE
T501 ETH19Y70AY
R513 56 1/2W
Q551 B1BAER000007 (HORIZONTAL) DRIVE
C573 1200P /500V
R574 27K
R572 330
R502 3300
D505 MA165
C510 680P
R511 2700/3W
C554 6800P /120V
C524 560P /2KV
R582 1.5 1/2W
C571 3R3/50V
R581 1.5 1/2W
R583 1.2 1/2W
Q581 2SA1321TPE6 (OVER COURRENT) DETECTOR
R585 47K
R586 39K
R515 22K
C531 3R3/50V
IC501 B3PAA0000242 (OVER CURRENT) DETECTOR
R505 560
C811 C810
C812 2200P /250V
C813 2200P /250V
RL801 LSSY0004
D806 MA167
TP809
TP808
R810 100
R809 2200
R811 10K
J801
C534
TP810
Q801 2SC945A-TQ (SWITCHING) (TV POWER ON-ON)
U7001 ENG36706GR UHF/VHF TUNER/TV DEMODULATOR UNIT
GND
GND
FM-ANTENNA
GND
GND
SW+5V
TUNER CS(H)
SERIAL DATA 0
SERIAL CLOCK
PLL LOCK(L)
UNSW+30V
IF
IF
SIF
TUNER SIGNAL(L)
AFC
AUDIO
FM SIGNAL(L)
FM MODE(H)
VIDEO
L7002 10U
R7008 1K
FOIL PATTERN FOR ANTENNA
P7003
FM ANTENNA
C7002 0.001
C7001
C7003
C7004
C7005
IC7007 1000P
C7008 0.01
R7001 1K
R7002 1K
R7003 1K
R7004 1K
C7012 1000P
R7007 1K
C7009
C7011 1000P
R7006 270
C7010 10/16V
R7005 0
J7001
Q7001 2SA1309A (BUFFER)
C7006 1000/6.3V
(TO POWER SUPPLY C.B.A. P1004)
P7002
GND
(TO MAIN C.B.A. P6003)
P7004
J7002
TUNER CS(H) 1
SERIAL CLOCK 2
SERIAL DATA 0 3
PLL LOCK(L) 4
UNSW+30V 5
TUNER SIGNAL(L) 6
TUNER AFC 7
GND 8
TUNER AUDIO 9
FM SIGNAL(L) 10
FM MODE(H) 11
GND 12
TUNER VIDEO 13
L802 VLQSAE8D220K
TP891
TP892
R804 ERF20ZJ131
R803 ERF10ZK8R2S
R801 0.82/5W
IC801 C5HABZZ00051 (+130V REGULATOR)
R802 10K 1/2W
C805 680/200V
C803 4700P
D807 ERC13-08V
D808 ERC13-08V
D809 ERC13-08V
D810 ERC13-08V
C802 4700P
C804 4700P
C801 4700P
TP893
R807
R806 47
C806 33/250V
R805 100K
R813 120K
ZP804 GND
D882 ERZV10V361CS
C809 VSQ1003-F
D811 ERZV10V361CS
C808 0.082 /250V
R812 8.2M 1/2W
L803 ELF21V020A
L801 ELF21V020A
C816
C815
C807 0.01 /250V
4A 125/250V
F801 4A 125V/250V
TP801
P801
AC CORD
AC IN
AC IN
TP802
AC 120V
TP804 AC 120V
TP803 AC 120V
(TO POWER SUPPLY C.B.A. P1001)
TP814
TP812 AC 120V
TP813 AC 120V
(TO MAIN C.B.A. P1301)
D591 D4DDF5R00005
R591 120 /5W
DEG
DEGAUSSING COIL
DEFLECTION YOKE

HOT

HOT CIRCUIT. BE CAREFUL AND USE AN ISOLATION TRANSFORMER WHEN SERVICING.

LINK TO VOLTAGE CHART

LRP61012
PV-DM2792/PV-DM2792-K
TV MAIN SCHEMATIC DIAGRAM

CRT SCHEMATIC DIAGRAM

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN ⚠ HAVE
SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY.
WHEN REPLACING ANY OF THESE COMPONENTS,
USE ONLY THE SPECIFIED PARTS.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

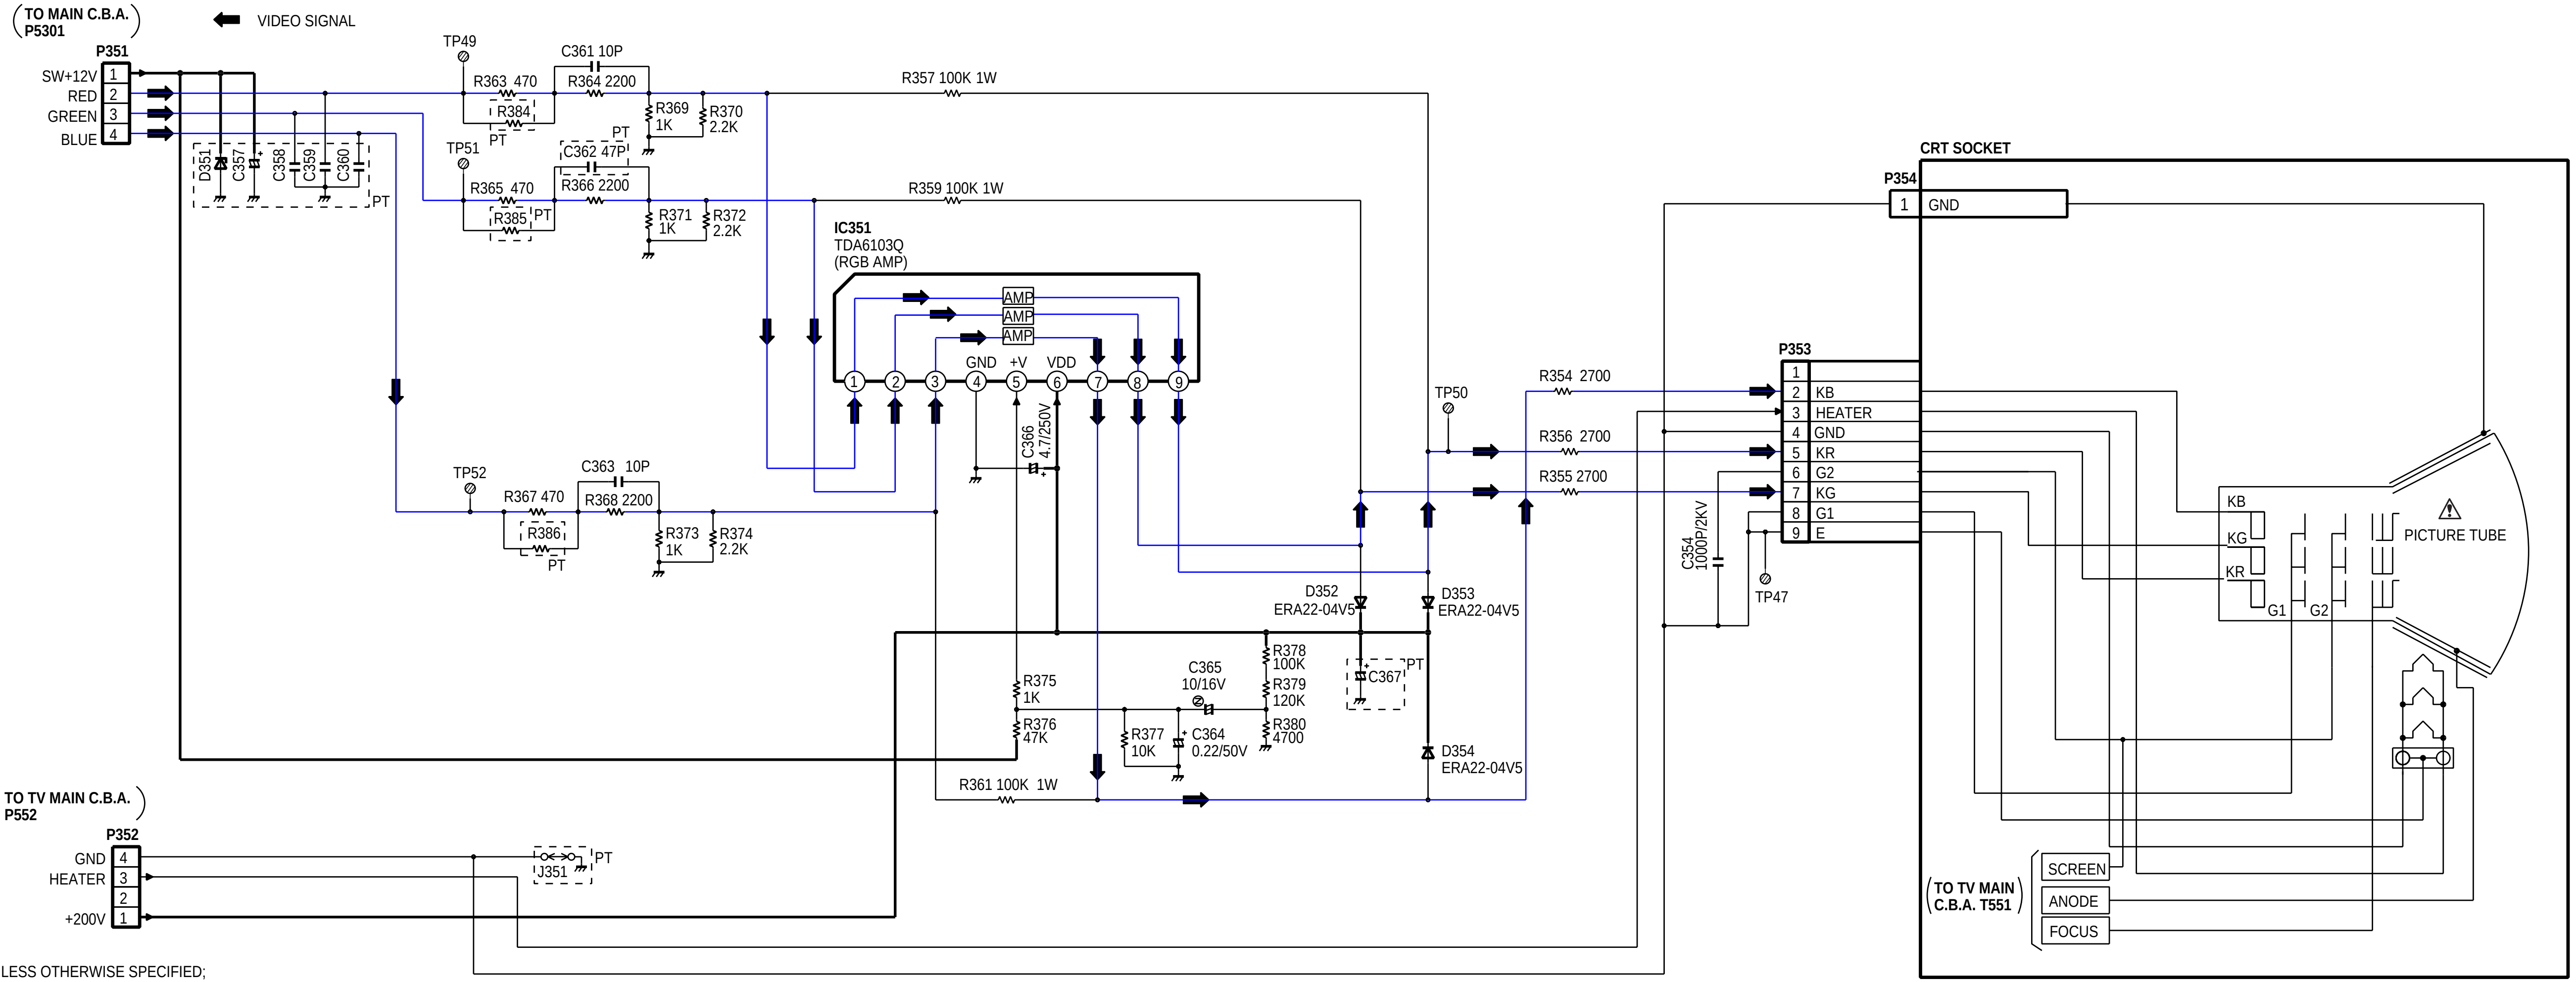

TO MAIN C.B.A.
P5301
VIDEO SIGNAL
P351
SW+12V 1
RED 2
GREEN 3
BLUE 4
D351
C357
C358
C359
C360
PT
TP49
C361 10P
R363 470
R364 2200
R384
PT
R369 1K
R370 2.2K
TP51
C362 47P
PT
R365 470
R366 2200
R385
PT
R371 1K
R372 2.2K
R357 100K 1W
R359 100K 1W
IC351
TDA6103Q
(RGB AMP)
AMP
AMP
AMP
GND
+V
VDD
1 2 3 4 5 6 7 8 9
C366 4.7/250V
TP52
C363 10P
R367 470
R368 2200
R386
PT
R373 1K
R374 2.2K
R375 1K
R376 47K
C365 10/16V
R377 10K
C364 0.22/50V
R378 100K
R379 120K
R380 4700
C367
PT
D352 ERA22-04V5
D353 ERA22-04V5
D354 ERA22-04V5
R361 100K 1W
TP50
R354 2700
R356 2700
R355 2700
C354 1000P/2KV
TP47
P353
1
2 KB
3 HEATER
4 GND
5 KR
6 G2
7 KG
8 G1
9 E
CRT SOCKET
P354
1 GND
KB
KG
KR
G1
G2
⚠ PICTURE TUBE
TO TV MAIN C.B.A. T551
SCREEN
ANODE
FOCUS
TO TV MAIN C.B.A.
P552
P352
GND 4
HEATER 3
2
+200V 1
J351
PT

UNLESS OTHERWISE SPECIFIED;
WATTAGE OF RESISTORS IS 1/10W.

LINK TO VOLTAGE CHART

VERTICAL SCHEMATIC DIAGRAM

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN ⚠ HAVE
SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY.
WHEN REPLACING ANY OF THESE COMPONENTS,
USE ONLY THE SPECIFIED PARTS.

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

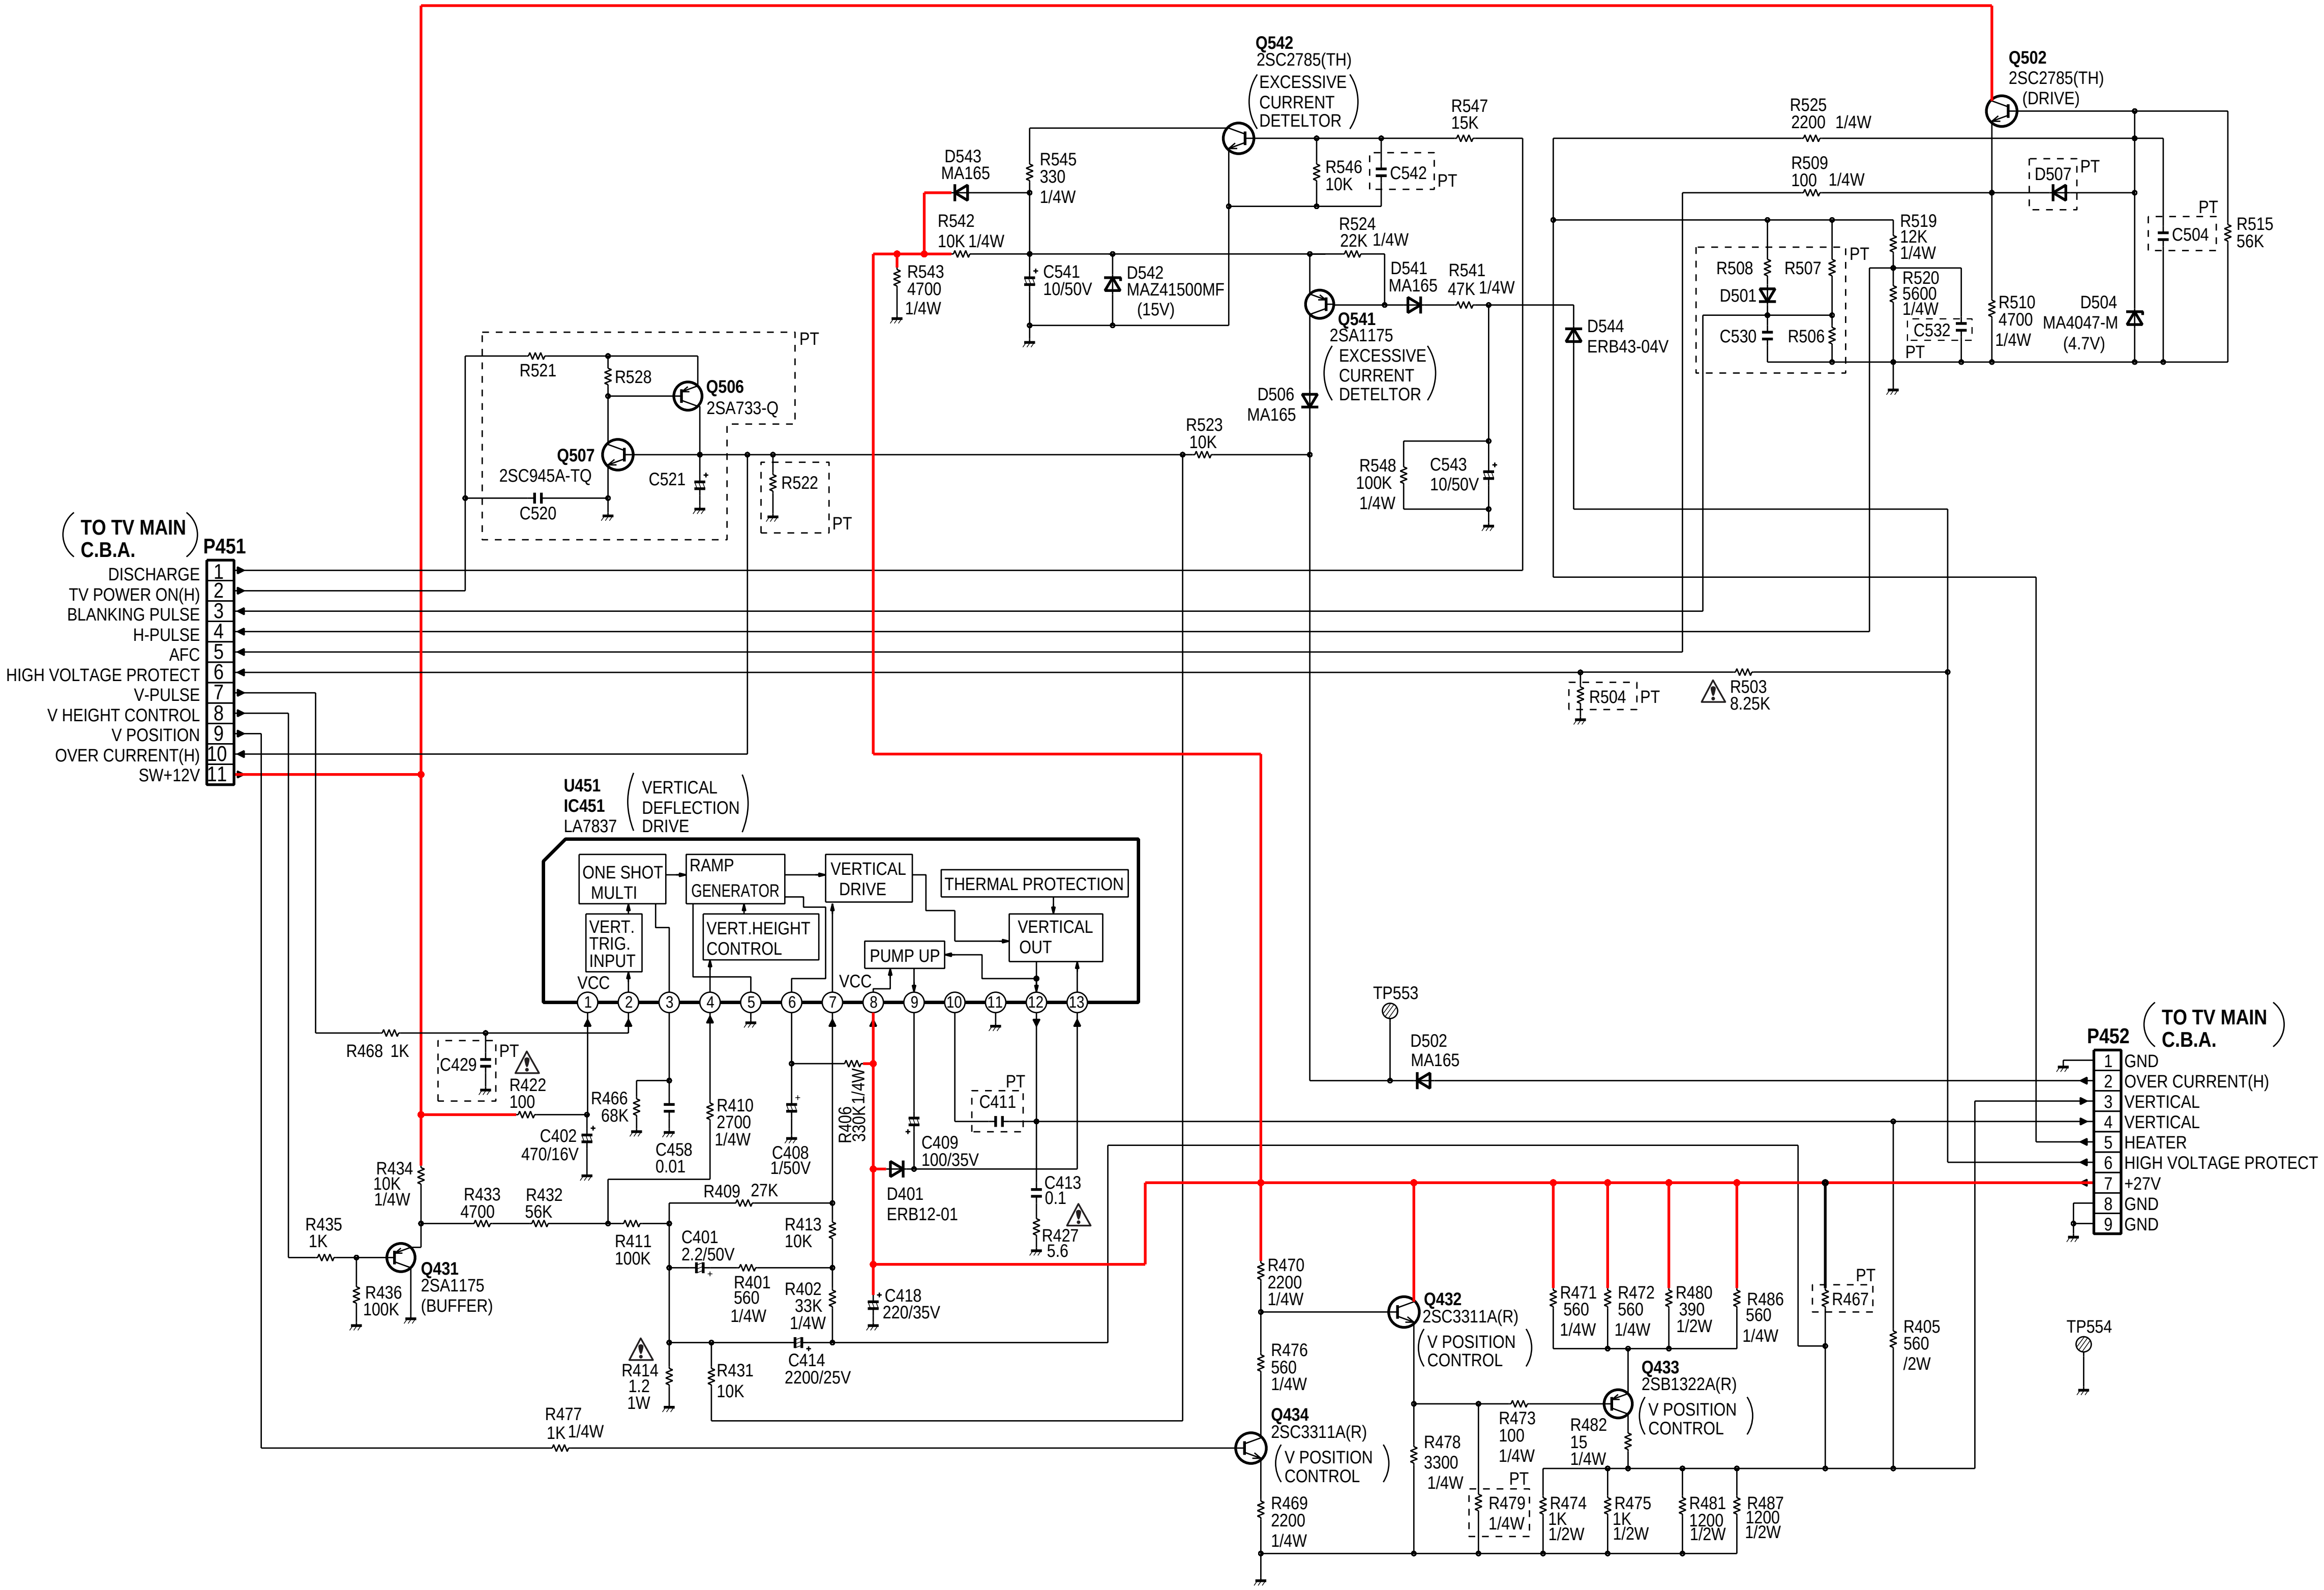

TO TV MAIN C.B.A.
P451
1 DISCHARGE
2 TV POWER ON(H)
3 BLANKING PULSE
4 H-PULSE
5 AFC
6 HIGH VOLTAGE PROTECT
7 V-PULSE
8 V HEIGHT CONTROL
9 V POSITION
10 OVER CURRENT(H)
11 SW+12V
Q542 2SC2785(TH) EXCESSIVE CURRENT DETELTOR
Q502 2SC2785(TH) (DRIVE)
Q541 2SA1175 EXCESSIVE CURRENT DETELTOR
Q506 2SA733-Q
Q507 2SC945A-TQ
D543 MA165
D542 MAZ41500MF (15V)
D541 MA165
D506 MA165
D544 ERB43-04V
D507
D501
D504 MA4047-M (4.7V)
R545 330 1/4W
R542 10K 1/4W
R543 4700 1/4W
C541 10/50V
R546 10K
C542
R547 15K
R524 22K 1/4W
R541 47K 1/4W
R523 10K
R548 100K 1/4W
C543 10/50V
R521
R528
C521
C520
R522
R525 2200 1/4W
R509 100 1/4W
R519 12K 1/4W
R520 5600 1/4W
R508
R507
C530
R506
C532
R510 4700 1/4W
C504
R515 56K
R504
R503 8.25K
PT
U451 IC451 LA7837 VERTICAL DEFLECTION DRIVE
ONE SHOT MULTI
RAMP GENERATOR
VERTICAL DRIVE
THERMAL PROTECTION
VERT. TRIG. INPUT
VERT.HEIGHT CONTROL
PUMP UP
VERTICAL OUT
VCC
VCC
1 2 3 4 5 6 7 8 9 10 11 12 13
R468 1K
C429
R422 100
R466 68K
C402 470/16V
C458 0.01
R410 2700 1/4W
C408 1/50V
R406 330K 1/4W
C409 100/35V
C411
D401 ERB12-01
C413 0.1
R427 5.6
R434 10K 1/4W
R433 4700
R432 56K
R409 27K
R411 100K
R413 10K
C401 2.2/50V
R401 560 1/4W
R402 33K 1/4W
C418 220/35V
R435 1K
R436 100K
Q431 2SA1175 (BUFFER)
R414 1.2 1W
R431 10K
C414 2200/25V
R477 1K 1/4W
TP553
D502 MA165
R470 2200 1/4W
R476 560 1/4W
Q434 2SC3311A(R) V POSITION CONTROL
R469 2200 1/4W
Q432 2SC3311A(R) V POSITION CONTROL
R478 3300 1/4W
R473 100 1/4W
R479 1/4W
R471 560 1/4W
R472 560 1/4W
R480 390 1/2W
R486 560 1/4W
R482 15 1/4W
Q433 2SB1322A(R) V POSITION CONTROL
R474 1K 1/2W
R475 1K 1/2W
R481 1200 1/2W
R487 1200 1/2W
R467
R405 560 /2W
TP554
TO TV MAIN C.B.A.
P452
1 GND
2 OVER CURRENT(H)
3 VERTICAL
4 VERTICAL
5 HEATER
6 HIGH VOLTAGE PROTECT
7 +27V
8 GND
9 GND

LINK TO VOLTAGE CHART

LRP63019
PV-DM2792/PV-DM2792-K
VERTICAL SCHEMATIC DIAGRAM

OPERATION SCHEMATIC DIAGRAM

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

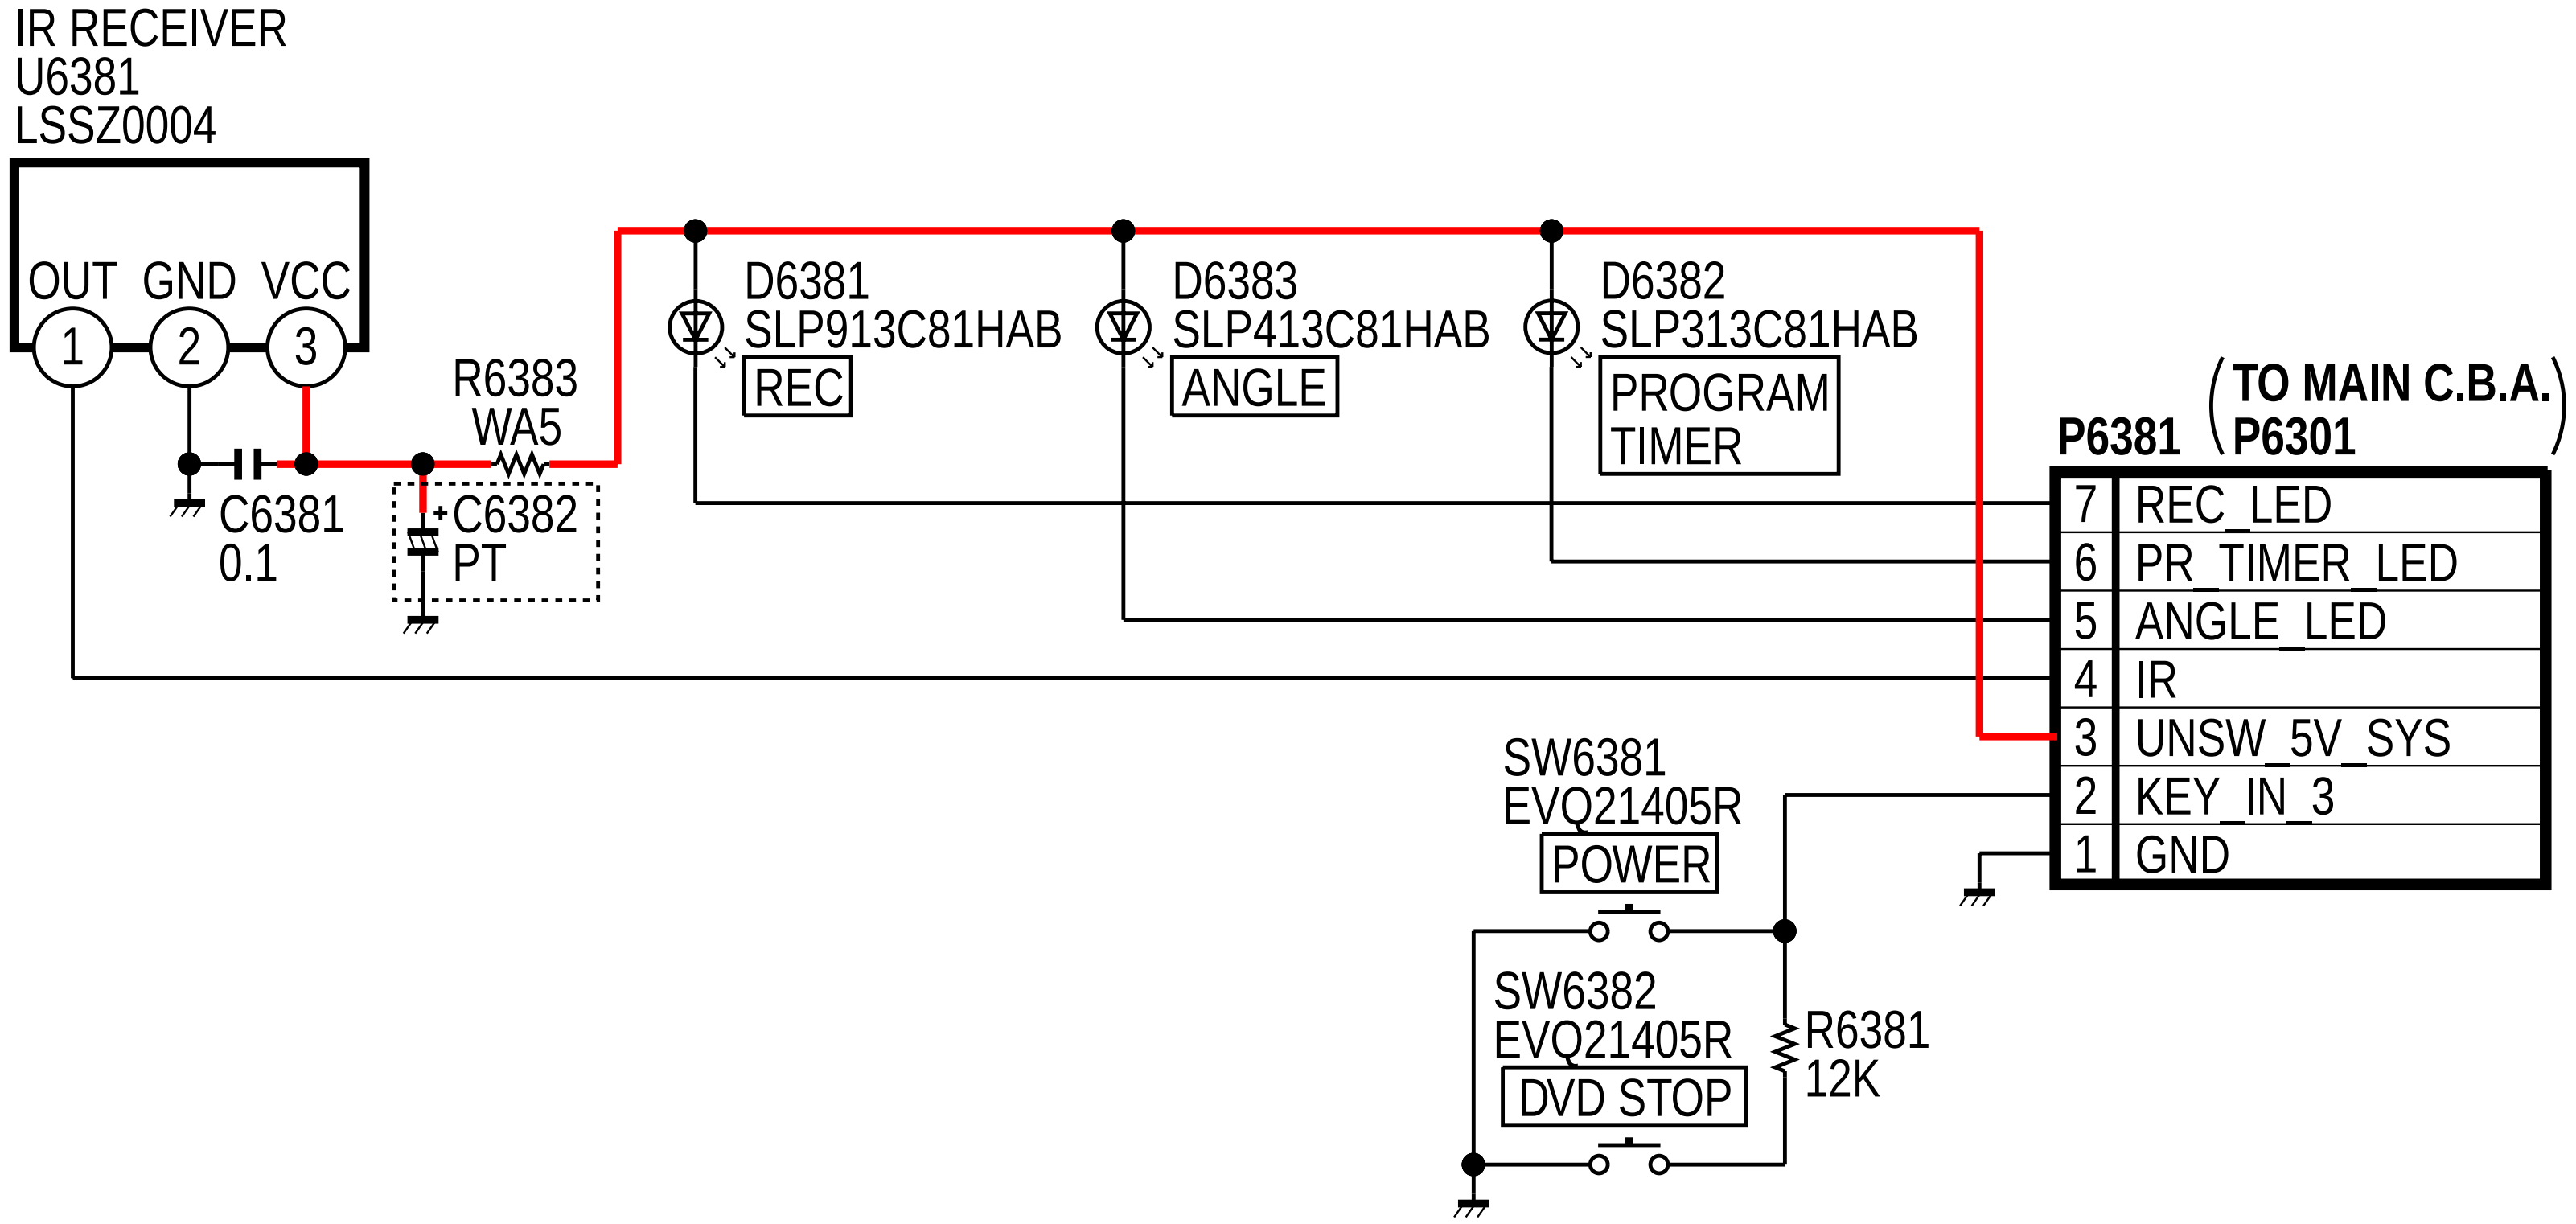
IR RECEIVER
U6381
LSSZ0004
OUT GND VCC
1 2 3
C6381
0.1
R6383
WA5
C6382
PT
D6381
SLP913C81HAB
REC
D6383
SLP413C81HAB
ANGLE
D6382
SLP313C81HAB
PROGRAM
TIMER
P6381
TO MAIN C.B.A.
P6301
7 REC_LED
6 PR_TIMER_LED
5 ANGLE_LED
4 IR
3 UNSW_5V_SYS
2 KEY_IN_3
1 GND
SW6381
EVQ21405R
POWER
SW6382
EVQ21405R
DVD STOP
R6381
12K

AUDIO / VIDEO JACK SCHEMATIC DIAGRAM

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts, be sure to use the part number listed in the parts list. Do not use the part number on this diagram.

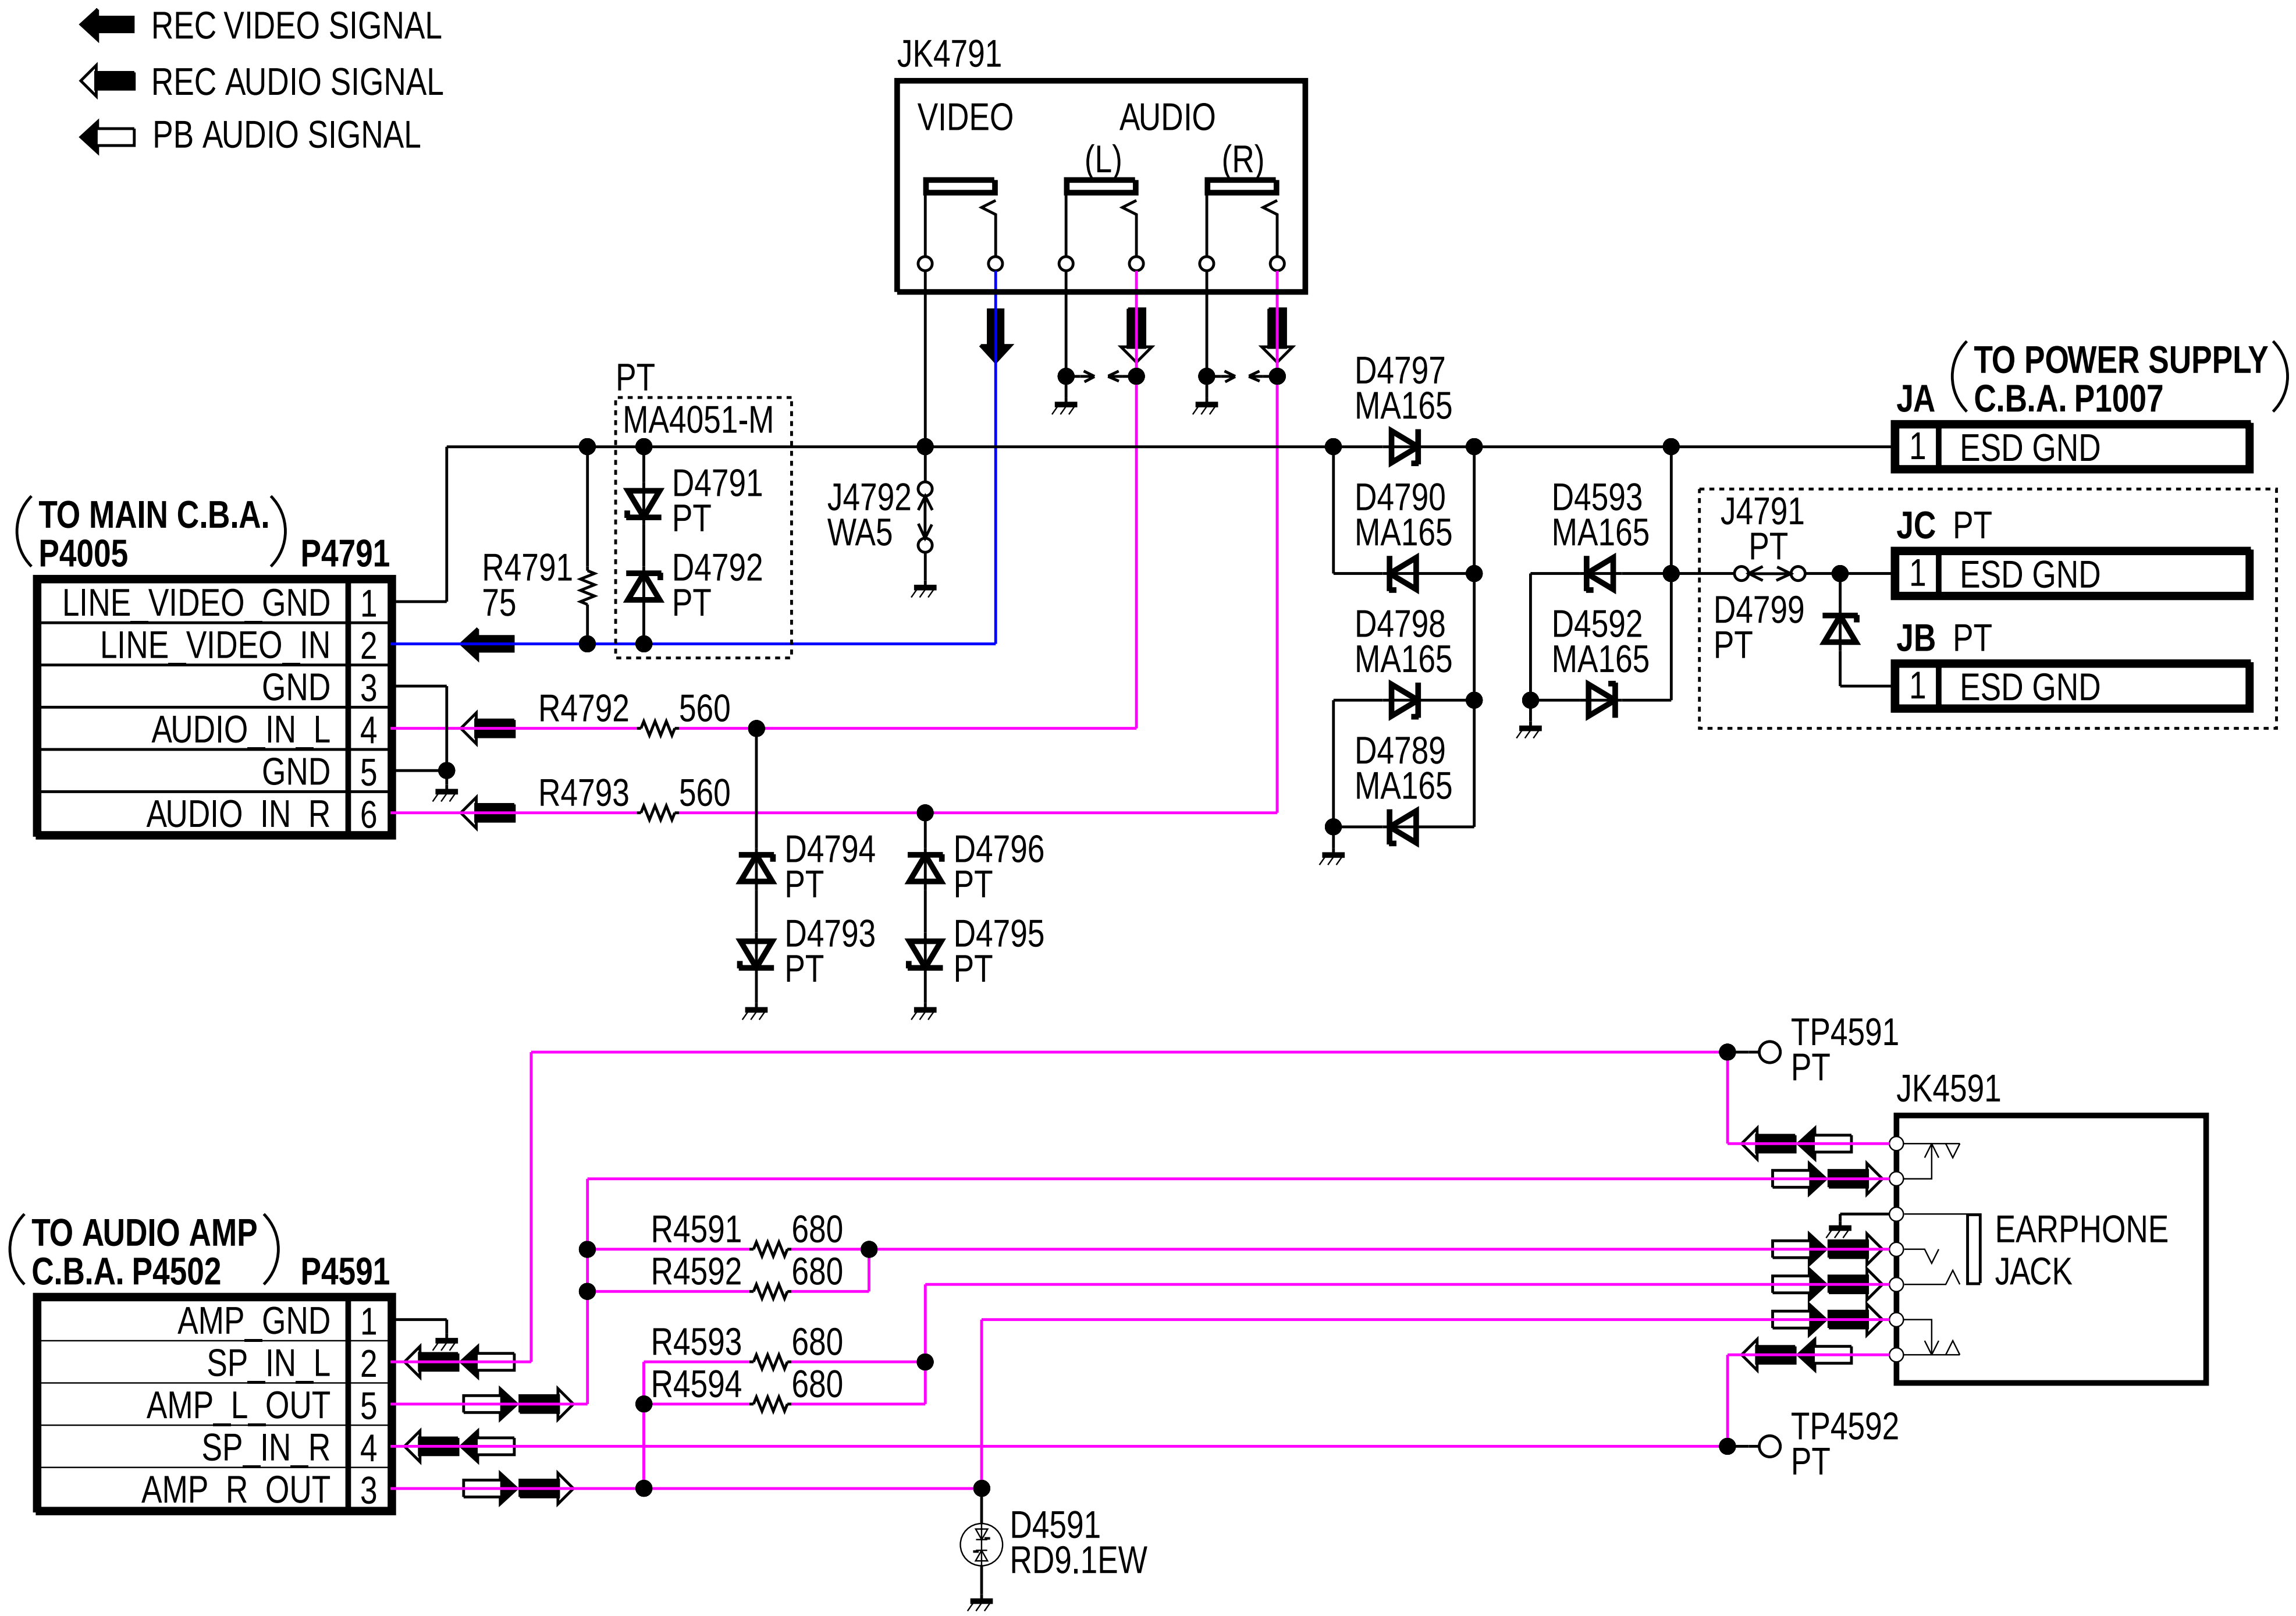
REC VIDEO SIGNAL
REC AUDIO SIGNAL
PB AUDIO SIGNAL
JK4791
VIDEO
AUDIO
(L)
(R)
PT
MA4051-M
D4791
PT
D4792
PT
R4791
75
J4792
WA5
D4797
MA165
D4790
MA165
D4798
MA165
D4789
MA165
D4593
MA165
D4592
MA165
J4791
PT
D4799
PT
TO POWER SUPPLY
C.B.A. P1007
JA
1
ESD GND
JC
PT
1
ESD GND
JB
PT
1
ESD GND
TO MAIN C.B.A.
P4005
P4791
LINE_VIDEO_GND 1
LINE_VIDEO_IN 2
GND 3
AUDIO_IN_L 4
GND 5
AUDIO_IN_R 6
R4792
560
R4793
560
D4794
PT
D4793
PT
D4796
PT
D4795
PT
TP4591
PT
JK4591
EARPHONE
JACK
TO AUDIO AMP
C.B.A. P4502
P4591
AMP_GND 1
SP_IN_L 2
AMP_L_OUT 5
SP_IN_R 4
AMP_R_OUT 3
R4591
680
R4592
680
R4593
680
R4594
680
TP4592
PT
D4591
RD9.1EW

LINK TO VOLTAGE CHART

Hi-Fi AUDIO/VIDEO HEAD AMP SCHEMATIC DIAGRAM

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts, be sure to use the part number listed in the parts list. Do not use the part number on this diagram.

⬅ REC VIDEO SIGNAL ⇦ PB VIDEO SIGNAL

⬅ REC AUDIO SIGNAL ⇦ PB AUDIO SIGNAL

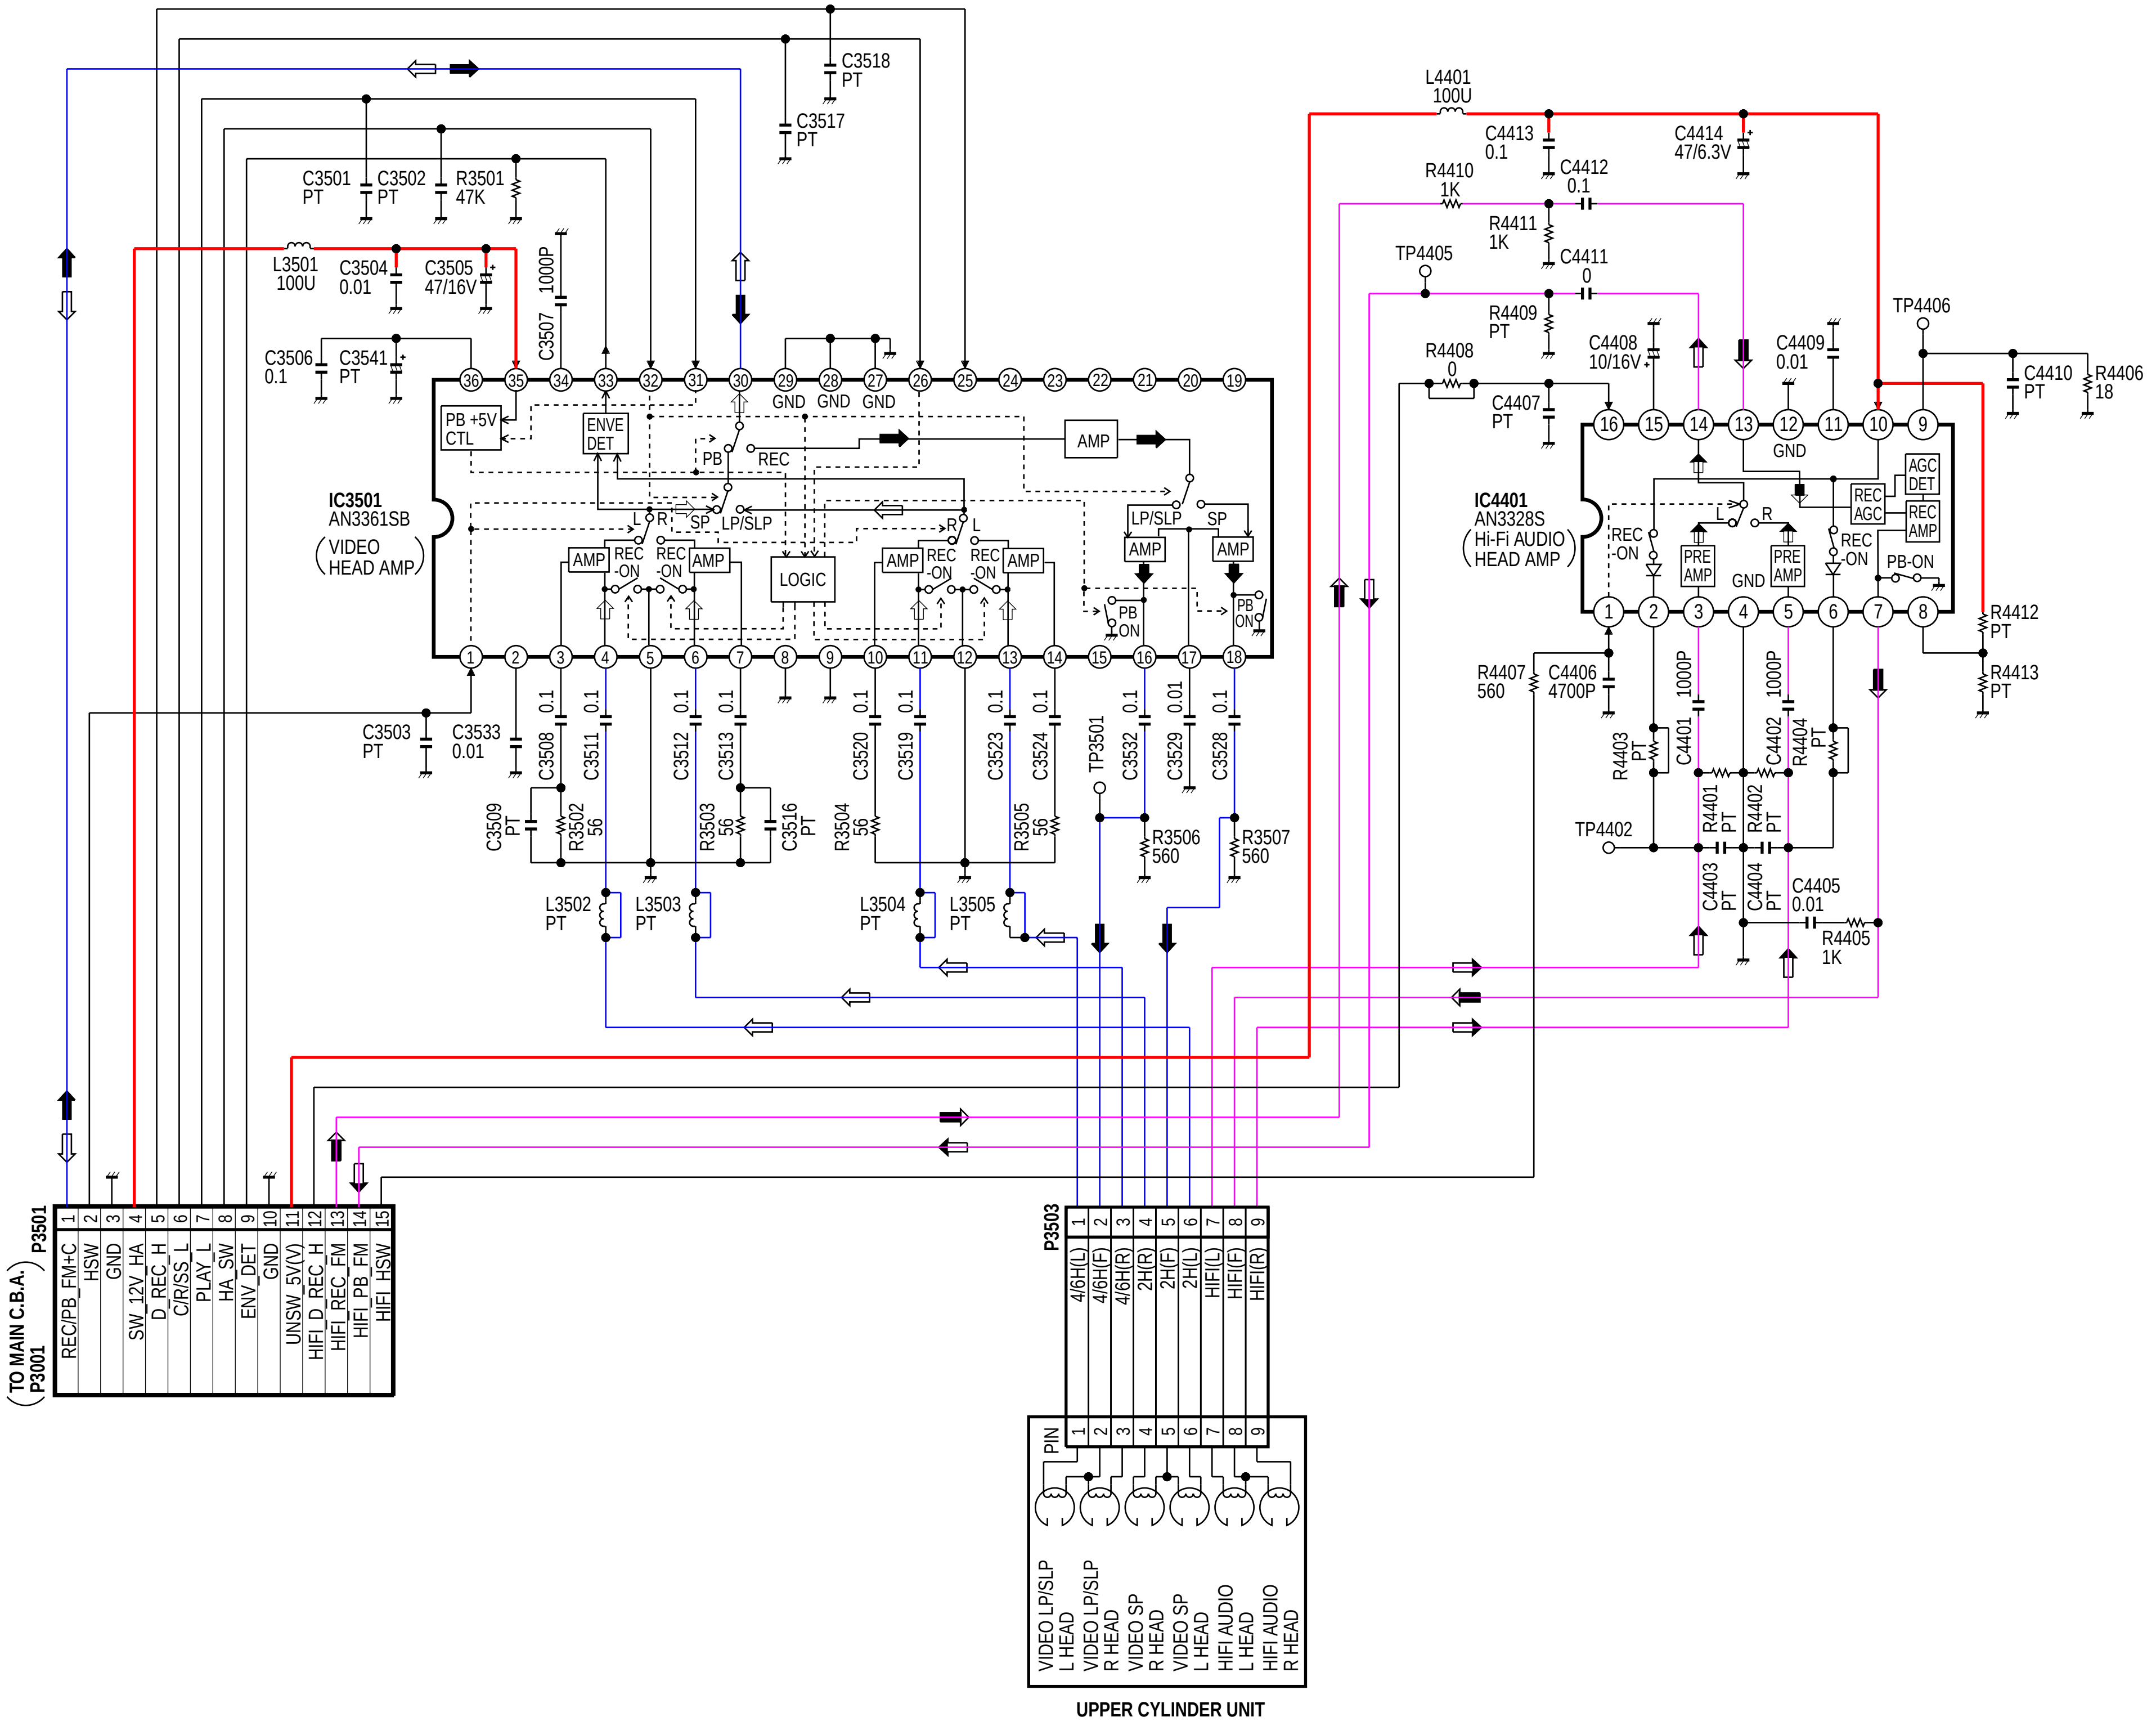
IC3501
AN3361SB
(VIDEO HEAD AMP)
PB +5V CTL
ENVE DET
AMP
LOGIC
PB
REC
L
R
SP
LP/SLP
REC -ON
PB ON
GND
C3518 PT
C3517 PT
C3501 PT
C3502 PT
R3501 47K
L3501 100U
C3504 0.01
C3505 47/16V
C3507 1000P
C3506 0.1
C3541 PT
C3503 PT
C3533 0.01
C3508 0.1
C3511 0.1
C3512 0.1
C3513 0.1
C3520 0.1
C3519 0.1
C3523 0.1
C3524 0.1
C3532 0.1
C3529 0.01
C3528 0.1
C3509 PT
R3502 56
R3503 56
C3516 PT
R3504 56
R3505 56
TP3501
R3506 560
R3507 560
L3502 PT
L3503 PT
L3504 PT
L3505 PT
IC4401
AN3328S
(Hi-Fi AUDIO HEAD AMP)
AGC DET
REC AGC
REC AMP
PRE AMP
REC -ON
PB-ON
L4401 100U
C4413 0.1
C4414 47/6.3V
R4410 1K
C4412 0.1
R4411 1K
C4411 0
TP4405
R4409 PT
R4408 0
C4407 PT
C4408 10/16V
C4409 0.01
TP4406
C4410 PT
R4406 18
R4412 PT
R4413 PT
R4407 560
C4406 4700P
R4403 PT
C4401 1000P
C4402 1000P
R4404 PT
R4401 PT
R4402 PT
TP4402
C4403 PT
C4404 PT
C4405 0.01
R4405 1K
(TO MAIN C.B.A. P3001)
P3501
1 REC/PB_FM+C
2 HSW
3 GND
4 SW_12V_HA
5 D_REC_H
6 C/R/SS_L
7 PLAY_L
8 HA_SW
9 ENV_DET
10 GND
11 UNSW_5V(V)
12 HIFI_D_REC_H
13 HIFI_REC_FM
14 HIFI_PB_FM
15 HIFI_HSW
P3503
1 4/6H(L)
2 4/6H(F)
3 4/6H(R)
4 2H(R)
5 2H(F)
6 2H(L)
7 HIFI(L)
8 HIFI(F)
9 HIFI(R)
PIN
VIDEO LP/SLP L HEAD
VIDEO LP/SLP R HEAD
VIDEO SP R HEAD
VIDEO SP L HEAD
HIFI AUDIO L HEAD
HIFI AUDIO R HEAD
UPPER CYLINDER UNIT

LINK TO VOLTAGE CHART

DVD DECODER I SCHEMATIC DIAGRAM

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

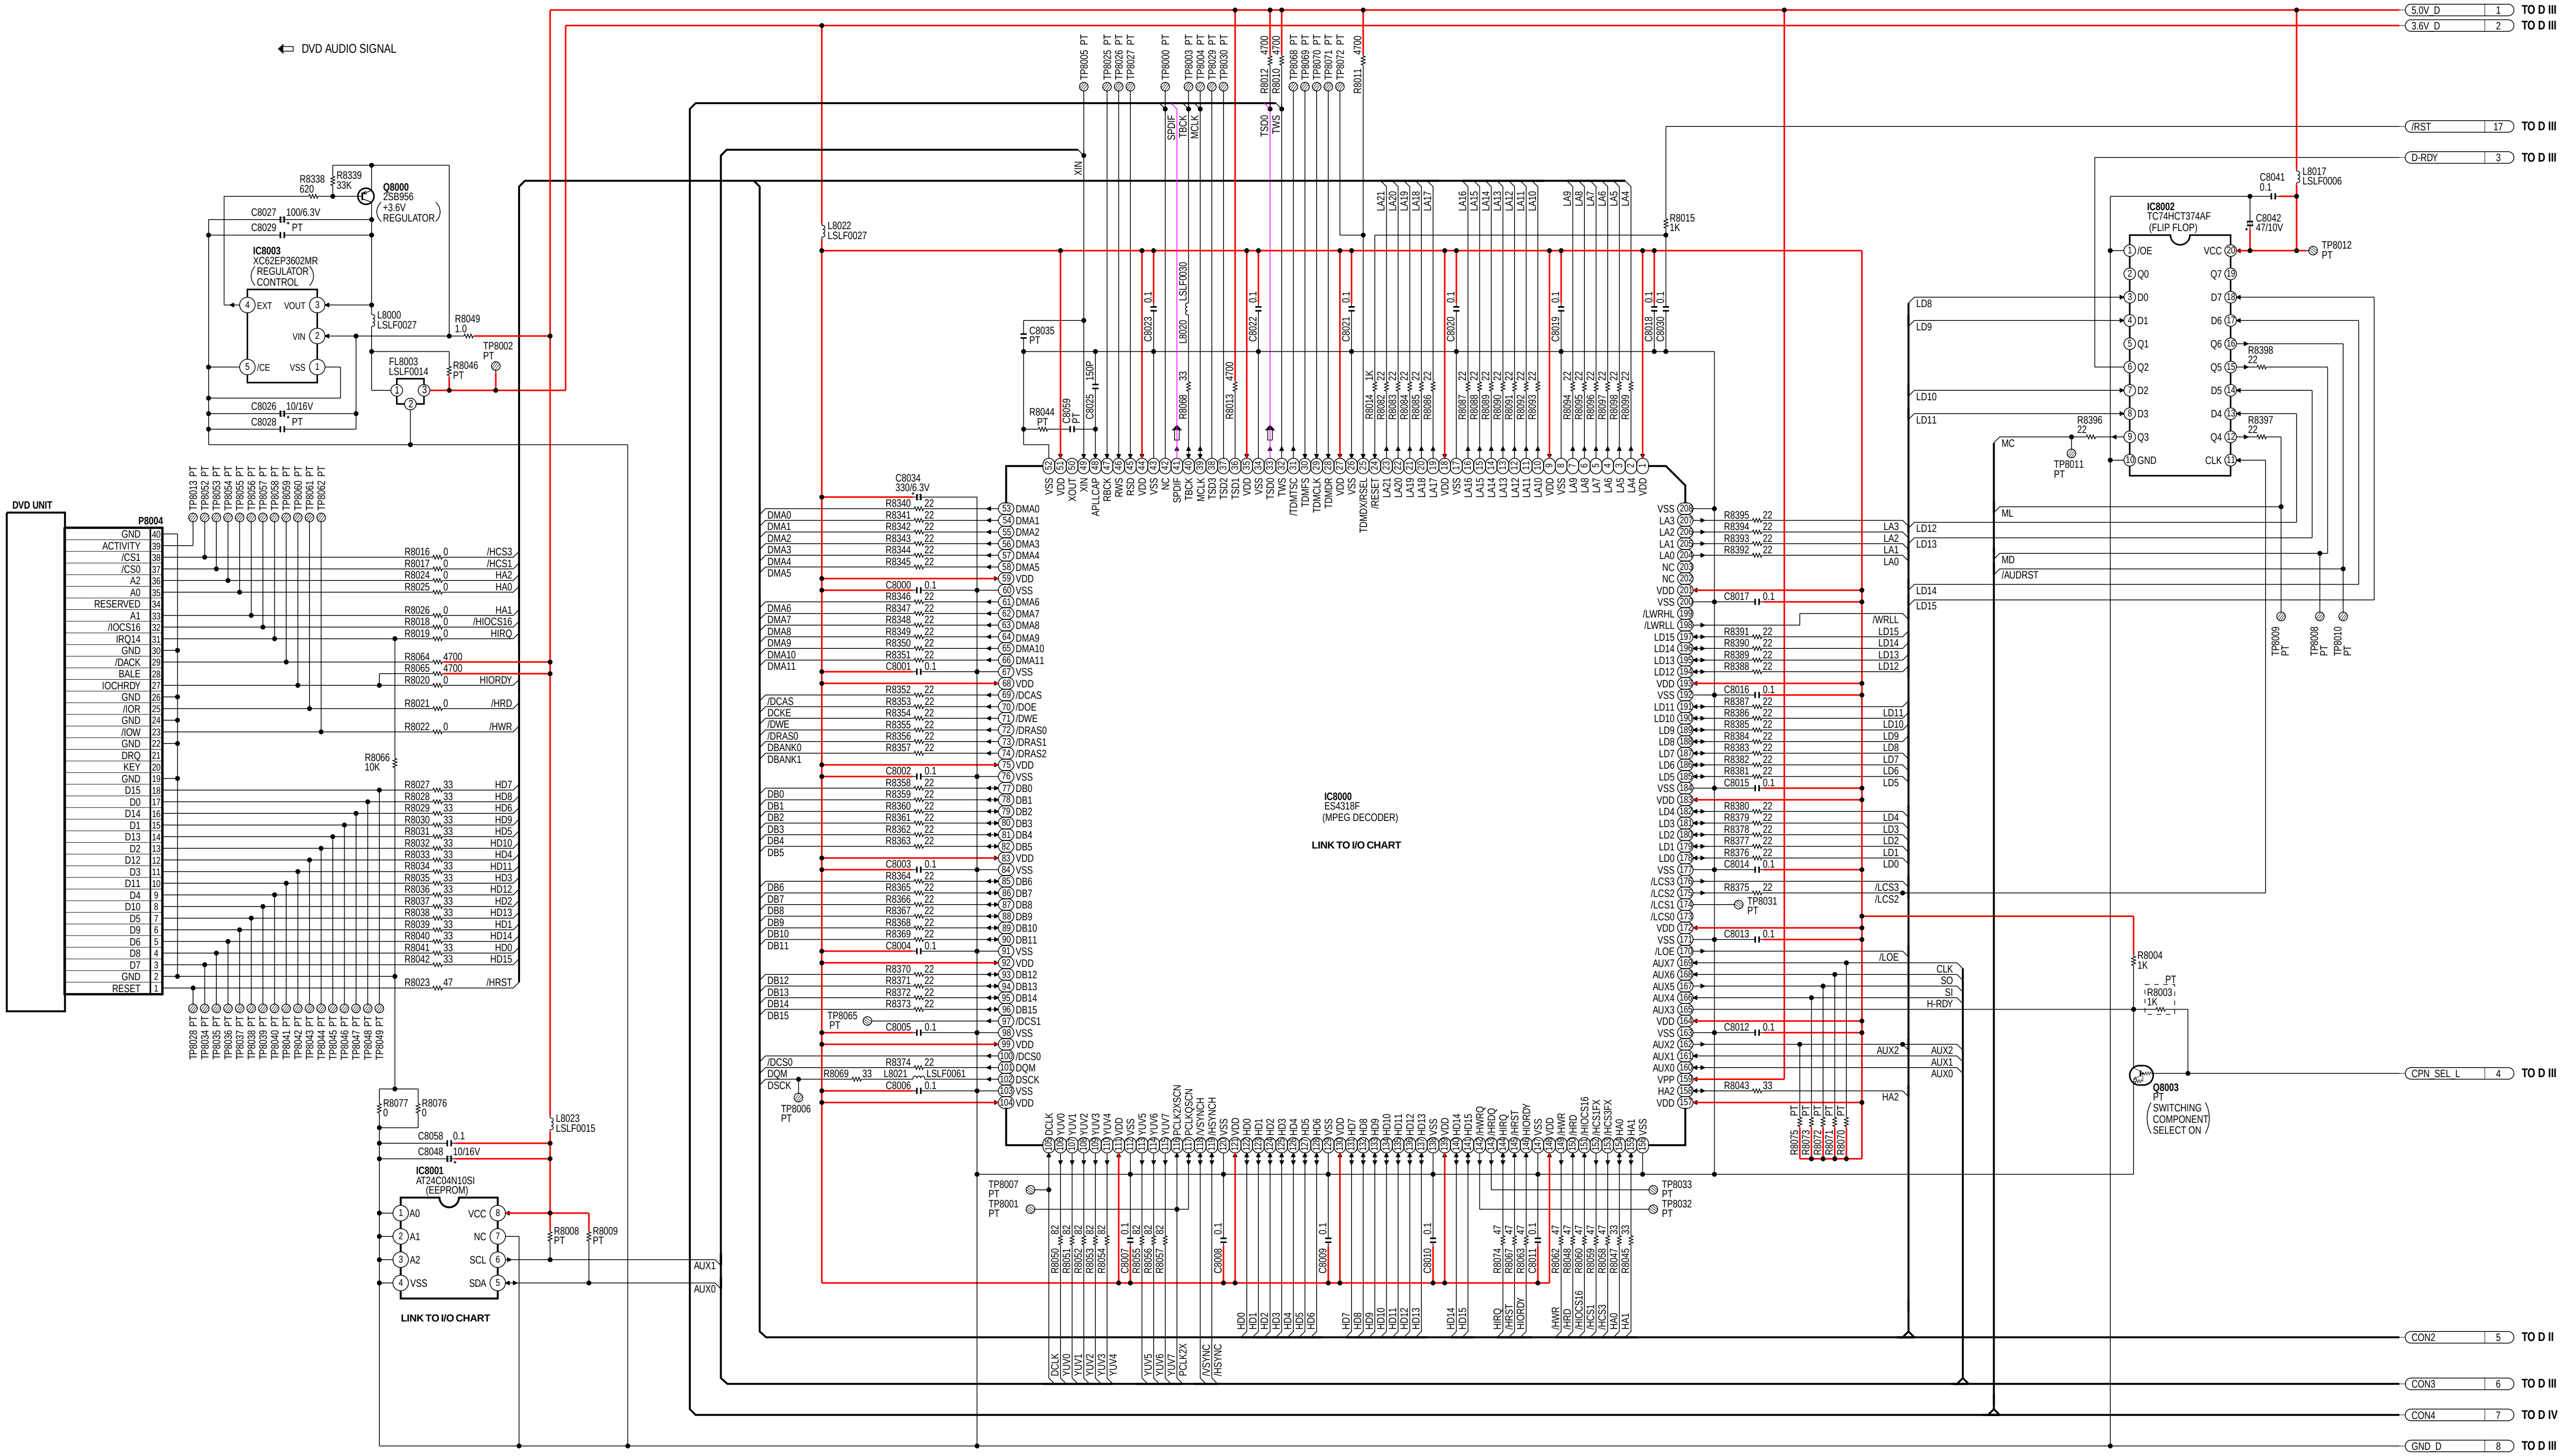
DVD AUDIO SIGNAL
DVD UNIT
P8004
Q8000
2SB956
+3.6V
REGULATOR
IC8003
XC62EP3602MR
REGULATOR
CONTROL
IC8000
ES4318F
(MPEG DECODER)
LINK TO I/O CHART
IC8001
AT24C04N10SI
(EEPROM)
LINK TO I/O CHART
IC8002
TC74HCT374AF
(FLIP FLOP)
Q8003
PT
SWITCHING
COMPONENT
SELECT ON
5.0V_D 1 TO D III
3.6V_D 2 TO D III
/RST 17 TO D III
D-RDY 3 TO D III
CPN_SEL_L 4 TO D III
CON2 5 TO D II
CON3 6 TO D III
CON4 7 TO D IV
GND_D 8 TO D III

LINK TO VOLTAGE CHART

I/O CHART OF IC8000

Pin No.	I/O	Signal Name	Description
1	I	VDD	+3.6V
2	O	LA4	Memory address 4
3	O	LA5	Memory address 5
4	O	LA6	Memory address 6
5	O	LA7	Memory address 7
6	O	LA8	Memory address 8
7	O	LA9	Memory address 9
8	-	VSS	Ground
9	I	VDD	+3.6V
10	O	LA10	Memory address 10
11	O	LA11	Memory address 11
12	O	LA12	Memory address 12
13	O	LA13	Memory address 13
14	O	LA14	Memory address 14
15	O	LA15	Memory address 15
16	O	LA16	Memory address 16
17	-	VSS	Ground
18	I	VDD	+3.6V
19	O	LA17	Memory address 17
20	O	LA18	Memory address 18
21	O	LA19	Memory address 19
22	O	LA20	Memory address 20
23	O	LA21	Memory address 21
24	I	/RESET	Reset : low
25	-	TDMDX/RSEL	(Not used)
26	-	VSS	Ground
27	I	VDD	+3.6V
28	-	TDMDR	(Not used)
29	-	TDMCLK	(Not used)
30	-	TDMFS	(Not used)
31	-	/TDMTSC	(Not used)
32	O	TWS	Audio transmit frame sync
33	O	TSD0	Audio serial data
34	-	VSS	Ground
35	I	VDD	+3.6V
36	-	TSD1	(Not used)
37	-	TSD2	(Not used)
38	-	TSD3	(Not used)
39	I/O	MCLK	Audio master clock
40	I/O	TBCK	Audio transmit bit clock
41	O	SPDIF	IEC958 audio data
42	-	NC	(Not used)
43	-	VSS	Ground
44	I	VDD	+3.6V
45	-	RSD	(Not used)
46	-	RWS	(Not used)
47	-	RBCK	(Not used)
48	-	APLLCAP	(Not used)
49	I	XIN	27MHz clock
50	-	XOUT	(Not used)
51	I	VDD	+3.6V
52	-	VSS	Ground
53	O	DMA0	SDRAM address 0
54	O	DMA1	SDRAM address 1
55	O	DMA2	SDRAM address 2
56	O	DMA3	SDRAM address 3
57	O	DMA4	SDRAM address 4
58	O	DMA5	SDRAM address 5
59	I	VDD	+3.6V
60	-	VSS	Ground
61	O	DMA6	SDRAM address 6
62	O	DMA7	SDRAM address 7
63	O	DMA8	SDRAM address 8
64	O	DMA9	SDRAM address 9
65	O	DMA10	SDRAM address 10
66	O	DMA11	SDRAM address 11
67	-	VSS	Ground
68	I	VDD	+3.6V
69	O	/DCAS	Column address strobe : low
70	-	/DOE	(Not used)
71	O	/DWE	Write enable : low
72	O	/DRAS0	Row address strobe : low
73	-	/DRAS1	(Not used)
74	-	/DRAS2	(Not used)
75	I	VDD	+3.6V
76	-	VSS	Ground
77	I/O	DB0	SDRAM data 0
78	I/O	DB1	SDRAM data 1
79	I/O	DB2	SDRAM data 2
80	I/O	DB3	SDRAM data 3
81	I/O	DB4	SDRAM data 4
82	I/O	DB5	SDRAM data 5
83	I	VDD	+3.6V
84	-	VSS	Ground
85	I/O	DB6	SDRAM data 6
86	I/O	DB7	SDRAM data 7
87	I/O	DB8	SDRAM data 8
88	I/O	DB9	SDRAM data 9
89	I/O	DB10	SDRAM data 10
90	I/O	DB11	SDRAM data 11
91	-	VSS	Ground
92	I	VDD	+3.6V
93	I/O	DB12	SDRAM data 12
94	I/O	DB13	SDRAM data 13
95	I/O	DB14	SDRAM data 14
96	I/O	DB15	SDRAM data 15
97	O	/DCS1	SDRAM chip select : low
98	-	VSS	Ground
99	I	VDD	+3.6V
100	O	/DCS0	SDRAM chip select : low
101	O	DQM	Data input/output mask
102	O	DSCK	SDRAM clock
103	-	VSS	Ground
104	I	VDD	+3.6V
105	I	DCLK	27MHz clock
106	O	YUV0	YUV data 0
107	O	YUV1	YUV data 1
108	O	YUV2	YUV data 2
109	O	YUV3	YUV data 3
110	O	YUV4	YUV data 4
111	I	VDD	+3.6V
112	-	VSS	Ground
113	I	YUV5	YUV data 5
114	I	YUV6	YUV data 6
115	I	YUV7	YUV data 7
116	I	PCLK2XSCN	2X pixel clock
117	I/O	PCLKQSCN	pixel clock
118	I/O	/VSYNCH	V-sync signal
119	I/O	/HSYNCH	V-sync signal
120	-	VSS	Ground
121	I	VDD	+3.6V
122	I/O	HD0	Host data 0
123	I/O	HD1	Host data 1
124	I/O	HD2	Host data 2
125	I/O	HD3	Host data 3
126	I/O	HD4	Host data 4
127	I/O	HD5	Host data 5
128	I/O	HD6	Host data 6
129	-	VSS	Ground
130	I	VDD	+3.6V
131	I/O	HD7	Host data 7
132	I/O	HD8	Host data 8
133	I/O	HD9	Host data 9
134	I/O	HD10	Host data 10
135	I/O	HD11	Host data 11
136	I/O	HD12	Host data 12
137	I/O	HD13	Host data 13
138	-	VSS	Ground
139	I	VDD	+3.6V
140	I/O	HD14	Host data 14
141	I/O	HD15	Host data 15
142	-	/HWRQ	(Not used)
143	-	/HRDQ	(Not used)
144	I/O	HIRQ	Host interrupt
145	I	/HRST	Host reset : low
146	I	HIORDY	Host I/O ready
147	-	VSS	Ground
148	I	VDD	+3.6V
149	O	/HWR	Host write request : low
150	I	/HRD	Host read request : low
151	I	/HIOCS16	Device 16-bit data transfer
152	O	/HCS1FX	Host select 1
153	O	/HCS3FX	Host select 3
154	I/O	HA0	Host address 0
155	I/O	HA1	Host address 1
156	-	VSS	Ground
157	I	VDD	+3.6V
158	I/O	HA2	Host address 2
159	I	VPP	Peripheral protection voltage
160	I/O	AUX0	I2C serial data
161	I	AUX1	I2C serial clock
162	O	AUX2	DVD ready (Busy : low)
163	-	VSS	Ground
164	I	VDD	+3.6V
165	-	AUX3	(Not used)
166	I	AUX4	DVD chip select : low
167	O	AUX5	Serial data 1
168	I	AUX6	Serial data 0
169	I	AUX7	Serial clock
170	O	/LOE	Output enable : low
171	-	VSS	Ground
172	I	VDD	+3.6V
173	-	/LCS0	(Not used)
174	-	/LCS1	(Not used)
175	O	/LCS2	Clock
176	O	/LCS3	Memory chip select : low
177	-	VSS	Ground
178	I/O	LD0	Memory data 0
179	I/O	LD1	Memory data 1
180	I/O	LD2	Memory data 2
181	I/O	LD3	Memory data 3
182	I/O	LD4	Memory data 4
183	I	VDD	+3.6V
184	-	VSS	Ground
185	I/O	LD5	Memory data 5
186	I/O	LD6	Memory data 6
187	I/O	LD7	Memory data 7
188	I/O	LD8	Memory data 8
189	I/O	LD9	Memory data 9
190	I/O	LD10	Memory data 10
191	I/O	LD11	Memory data 11
192	-	VSS	Ground
193	I	VDD	+3.6V
194	I/O	LD12	Memory data 12
195	I/O	LD13	Memory data 13
196	I/O	LD14	Memory data 14
197	I/O	LD15	Memory data 15
198	O	/LWRLL	Write enable : low
199	-	/LWRHL	(Not used)
200	-	VSS	Ground
201	I	VDD	+3.6V
202	-	NC	(Not used)
203	-	NC	(Not used)
204	O	LA0	Memory address 0
205	O	LA1	Memory address 1
206	O	LA2	Memory address 2
207	O	LA3	Memory address 3
208	-	VSS	Ground

I/O CHART OF IC8001

Pin No.	I/O	Signal Name	Description
1	-	A0	(Not used)
2	-	A1	(Not used)
3	-	A2	(Not used)
4	-	VSS	Ground
5	I/O	SDA	I2C Serial data
6	O	SCL	I2C Serial clock
7	-	NC	(Not used)
8	I	VCC	+5.0V

IC8002 FLIP FLOP IC-DETAIL BLOCK DIAGRAM

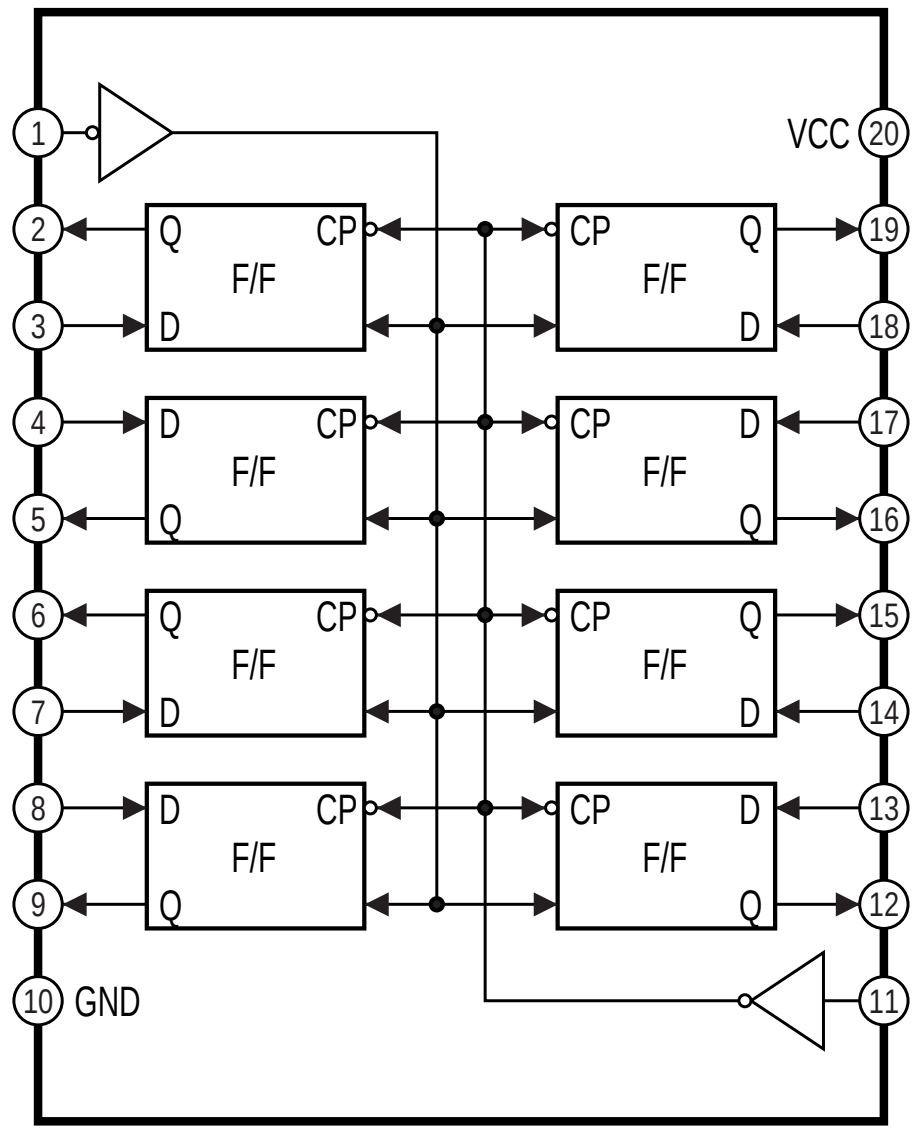

IC8003 REGULATOR CONTROL IC-DETAIL BLOCK DIAGRAM

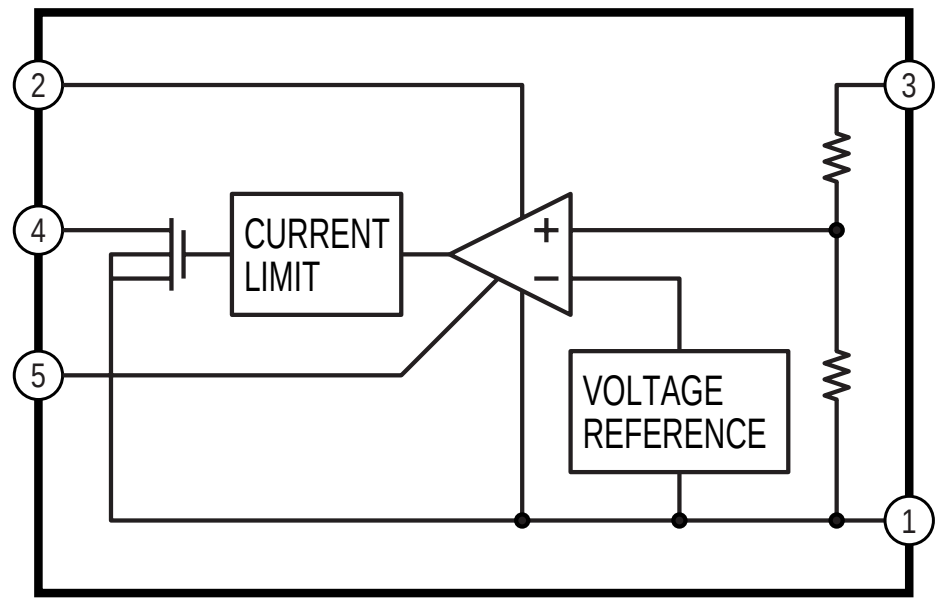

DVD DECODER II SCHEMATIC DIAGRAM

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

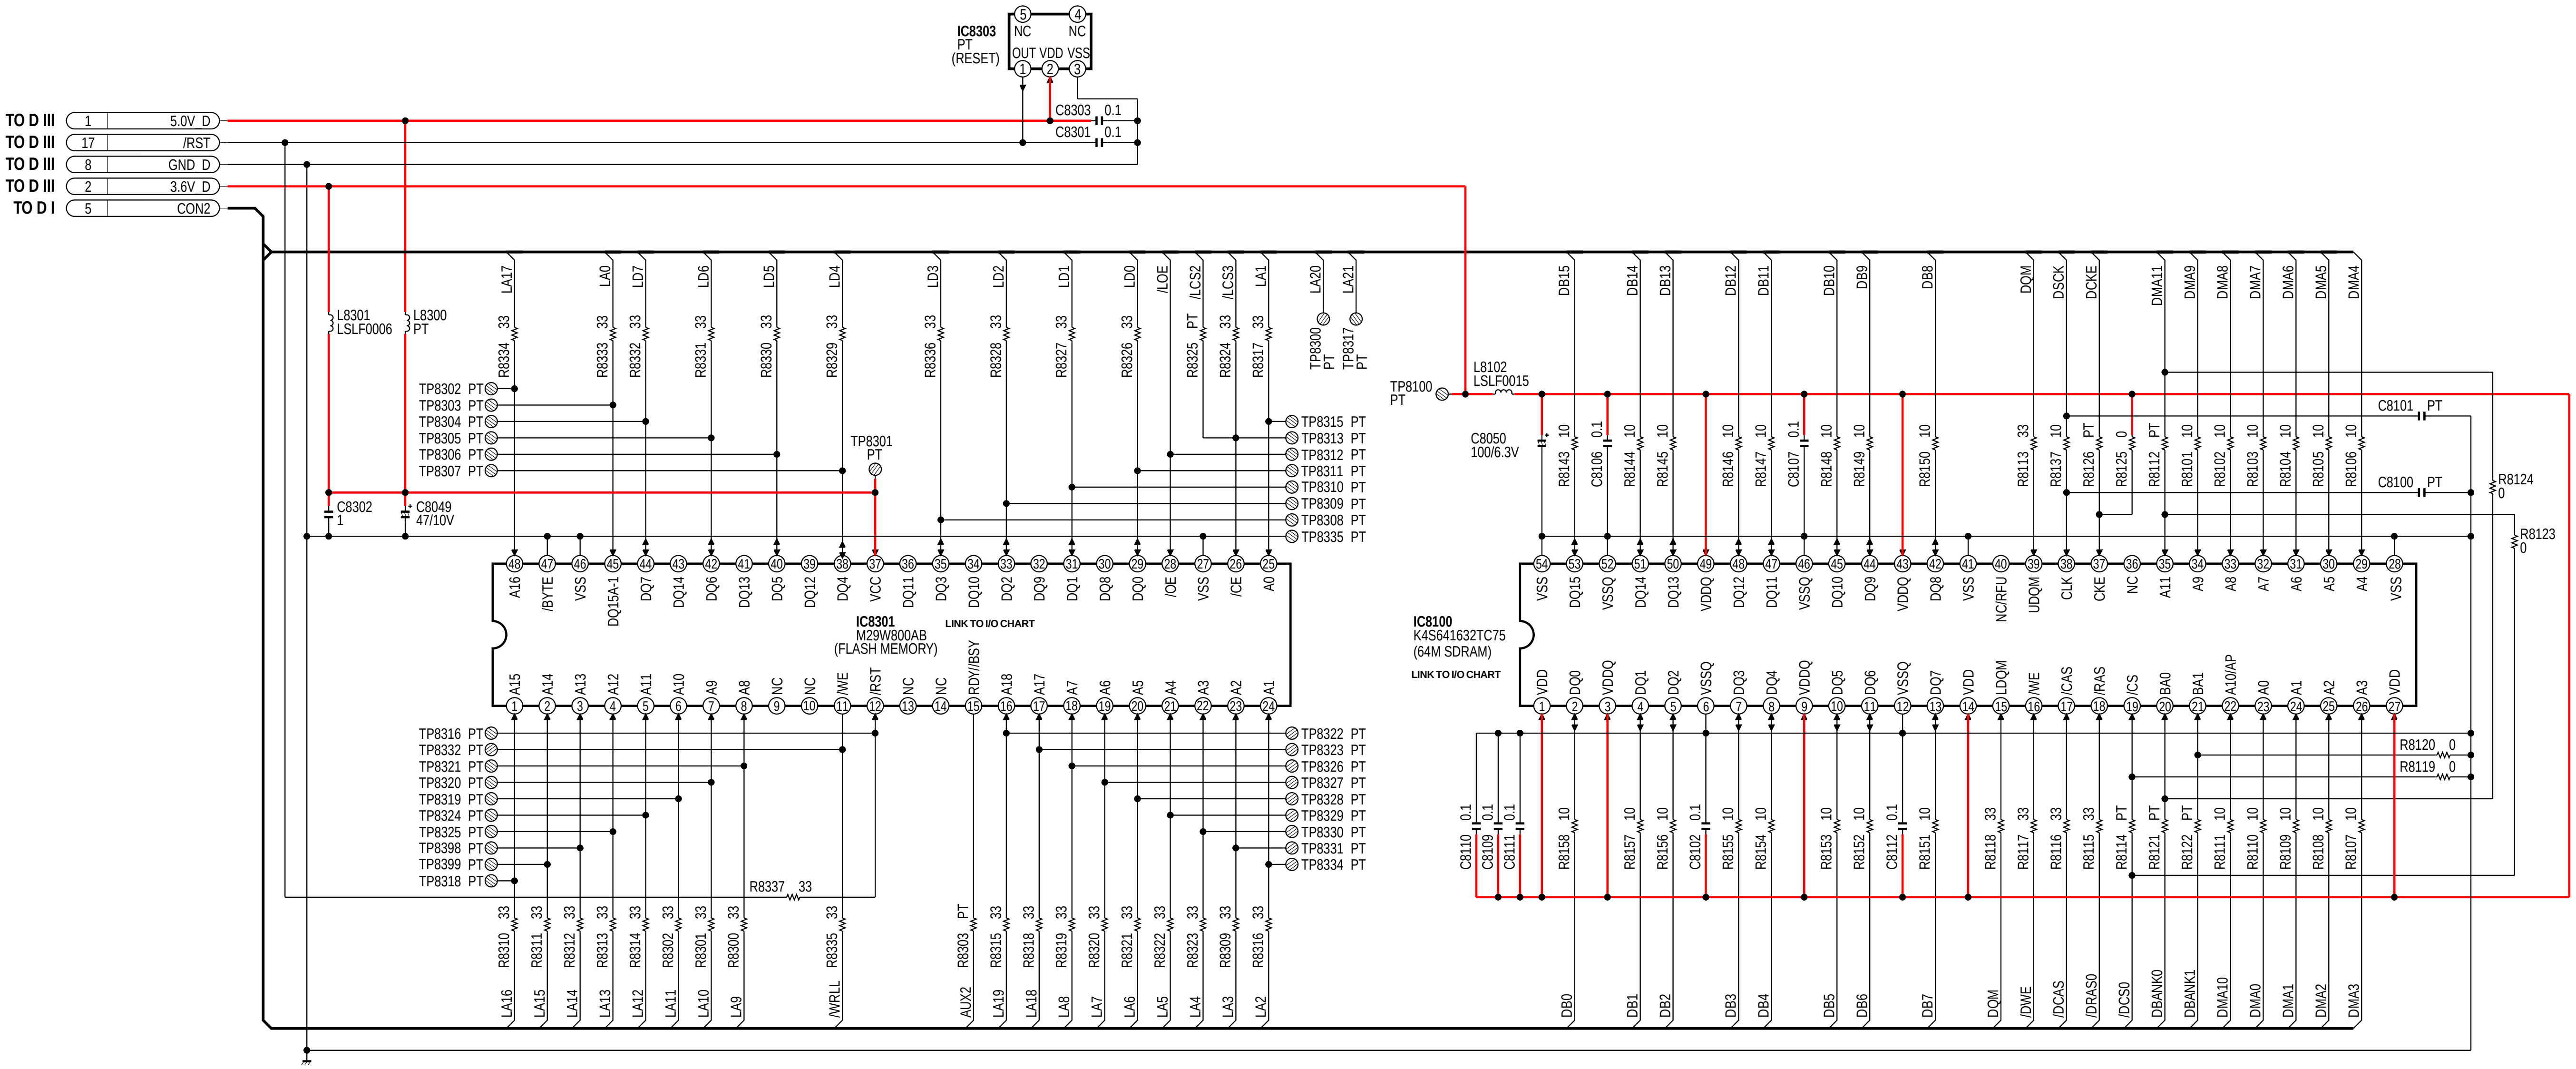

TO D III 1 5.0V_D
TO D III 17 /RST
TO D III 8 GND_D
TO D III 2 3.6V_D
TO D I 5 CON2
IC8303
PT
(RESET)
NC
NC
OUT VDD VSS
C8303 0.1
C8301 0.1
L8301 LSLF0006
L8300 PT
C8302 1
C8049 47/10V
TP8301 PT
IC8301
M29W800AB
(FLASH MEMORY)
LINK TO I/O CHART
R8337 33
TP8100 PT
L8102 LSLF0015
C8050 100/6.3V
C8101 PT
C8100 PT
R8124 0
R8123 0
R8120 0
R8119 0
IC8100
K4S641632TC75
(64M SDRAM)
LINK TO I/O CHART

LINK TO VOLTAGE CHART

I/O CHART OF IC8301

Pin No.	I/O	Signal Name	Description
1	I	A15	Memory address 16
2	I	A14	Memory address 15
3	I	A13	Memory address 14
4	I	A12	Memory address 13
5	I	A11	Memory address 12
6	I	A10	Memory address 11
7	I	A9	Memory address 10
8	I	A8	Memory address 9
9	-	NC	(Not used)
10	-	NC	(Not used)
11	I	/WE	Write enable : low
12	I	/RST	Reset : low
13	-	NC	(Not used)
14	-	NC	(Not used)
15	I	RDY/BSY	DVD Ready (Busy : low)
16	I	A18	Memory address 19
17	I	A17	Memory address 18
18	I	A7	Memory address 8
19	I	A6	Memory address 7
20	I	A5	Memory address 6
21	I	A4	Memory address 5
22	I	A3	Memory address 4
23	I	A2	Memory address 3
24	I	A1	Memory address 2
25	I	A0	Memory address 1
26	I	/CE	Memory chip select : low
27	-	VSS	Ground
28	I	/OE	Output enable : low
29	I/O	DQ0	Memory data 0
30	I/O	DQ8	Memory data 8
31	I/O	DQ1	Memory data 1
32	I/O	DQ9	Memory data 9
33	I/O	DQ2	Memory data 2
34	I/O	DQ10	Memory data 10
35	I/O	DQ3	Memory data 3
36	I/O	DQ11	Memory data 11
37	I	VCC	+5.0V
38	I/O	DQ4	Memory data 4
39	I/O	DQ12	Memory data 12
40	I/O	DQ5	Memory data 5
41	I/O	DQ13	Memory data 13
42	I/O	DQ6	Memory data 6
43	I/O	DQ14	Memory data 14
44	I/O	DQ7	Memory data 7
45	I/O	DQ15A-1	Memory address 0
46	-	VSS	Ground
47	-	/BYTE	Ground
48	I	A16	Memory address 16

I/O CHART OF IC8100

Pin No.	I/O	Signal Name	Description
1	I	VDD	+3.6V
2	I/O	DQ0	SDRAM data 7
3	I	VDDQ	+3.6V
4	I/O	DQ1	SDRAM data 6
5	I/O	DQ2	SDRAM data 5
6	-	VSSQ	Ground
7	I/O	DQ3	SDRAM data 4
8	I/O	DQ4	SDRAM data 3
9	I	VDDQ	+3.6V
10	I/O	DQ5	SDRAM data 2
11	I/O	DQ6	SDRAM data 1
12	-	VSSQ	Ground
13	I/O	DQ7	SDRAM data 0
14	I	VDD	+3.6V
15	I	LDQM	Data input/output mask
16	I	/WE	Write enable : low
17	I	/CAS	Column address strobe : low
18	I	/RAS	Row address strobe : low
19	I	/CS	SDRAM chip select : low
20	I	BA0	(Not used)
21	I	BA1	(Not used)
22	I	A10	SDRAM address 10
23	I	A0	SDRAM address 0
24	I	A1	SDRAM address 1
25	I	A2	SDRAM address 2
26	I	A3	SDRAM address 3
27	I	VDD	+3.6V
28	-	VSS	Ground
29	I	A4	SDRAM address 4
30	I	A5	SDRAM address 5
31	I	A6	SDRAM address 6
32	I	A7	SDRAM address 7
33	I	A8	SDRAM address 8
34	I	A9	SDRAM address 9
35	I	A11	SDRAM address 11
36	-	NC	(Not used)
37	-	CKE	(Not used)
38	I	CLK	SDRAM clock
39	I	UDQM	Data input/output mask
40	-	NC	(Not used)
41	-	VSS	Ground
42	I/O	DQ8	SDRAM data 8
43	I	VDDQ	+3.6V
44	I/O	DQ9	SDRAM data 9
45	I/O	DQ10	SDRAM data 10
46	-	VSSQ	Ground
47	I/O	DQ11	SDRAM data 11
48	I/O	DQ12	SDRAM data 12
49	I	VDDQ	+3.6V
50	I/O	DQ13	SDRAM data 13
51	I/O	DQ14	SDRAM data 14
52	-	VSSQ	Ground
53	I/O	DQ15	SDRAM data 15
54	-	VSS	Ground

DVD DECODER III SCHEMATIC DIAGRAM

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

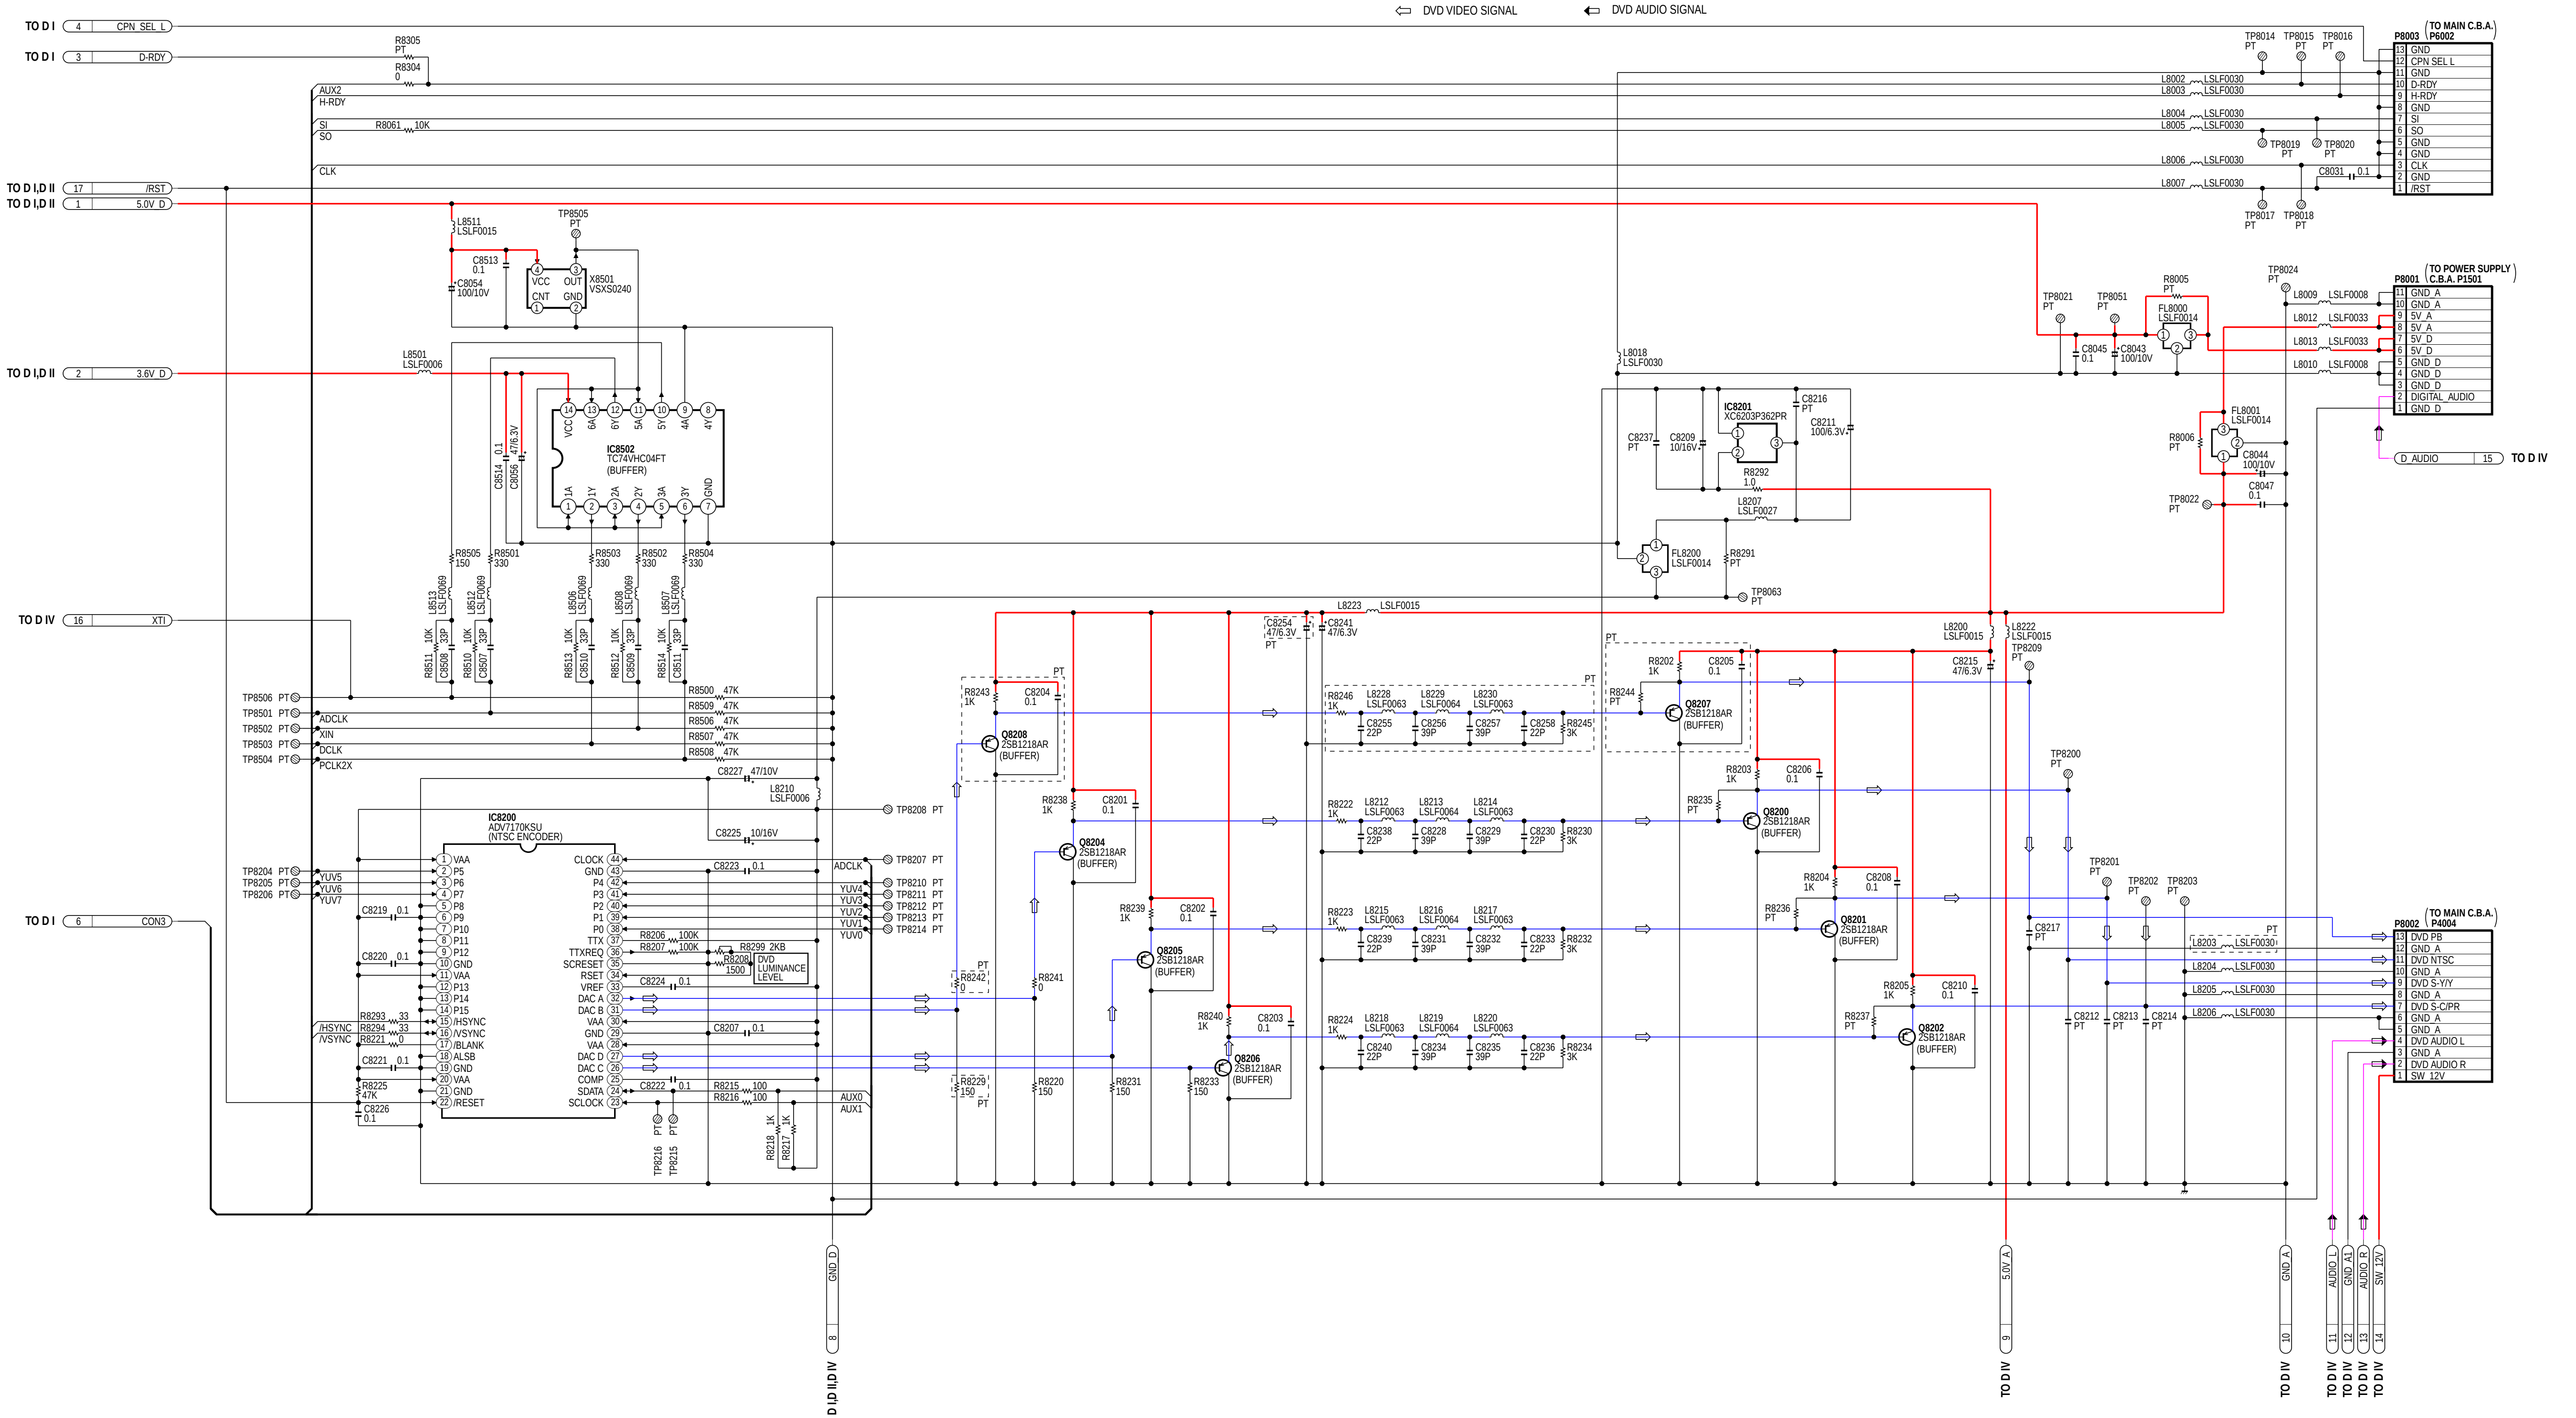
DVD VIDEO SIGNAL
DVD AUDIO SIGNAL
TO D I 4 CPN_SEL_L
TO D I 3 D-RDY
TO D I,D II 17 /RST
TO D I,D II 1 5.0V_D
TO D I,D II 2 3.6V_D
TO D IV 16 XTI
TO D I 6 CON3
TO MAIN C.B.A. P8003 P6002
TO POWER SUPPLY C.B.A. P1501 P8001
TO MAIN C.B.A. P8002 P4004
IC8502 TC74VHC04FT (BUFFER)
X8501 VSXS0240
IC8200 ADV7170KSU (NTSC ENCODER)
IC8201 XC6203P362PR
Q8208 2SB1218AR (BUFFER)
Q8204 2SB1218AR (BUFFER)
Q8205 2SB1218AR (BUFFER)
Q8206 2SB1218AR (BUFFER)
Q8207 2SB1218AR (BUFFER)
Q8200 2SB1218AR (BUFFER)
Q8201 2SB1218AR (BUFFER)
Q8202 2SB1218AR (BUFFER)
R8299 2KB DVD LUMINANCE LEVEL
TO D I,D II GND_D 8
TO D IV 5.0V_A 9
TO D IV GND_A 10
TO D IV AUDIO_L 11
TO D IV GND_A1 12
TO D IV AUDIO_R 13
TO D IV SW_12V 14
D_AUDIO 15 TO D IV

LINK TO VOLTAGE CHART

LSJB2007
PV-DM2792/PV-DM2792-K
DVD DECODER III SCHEMATIC DIAGRAM

IC8200 NTSC ENCODER IC-DETAIL BLOCK DIAGRAM

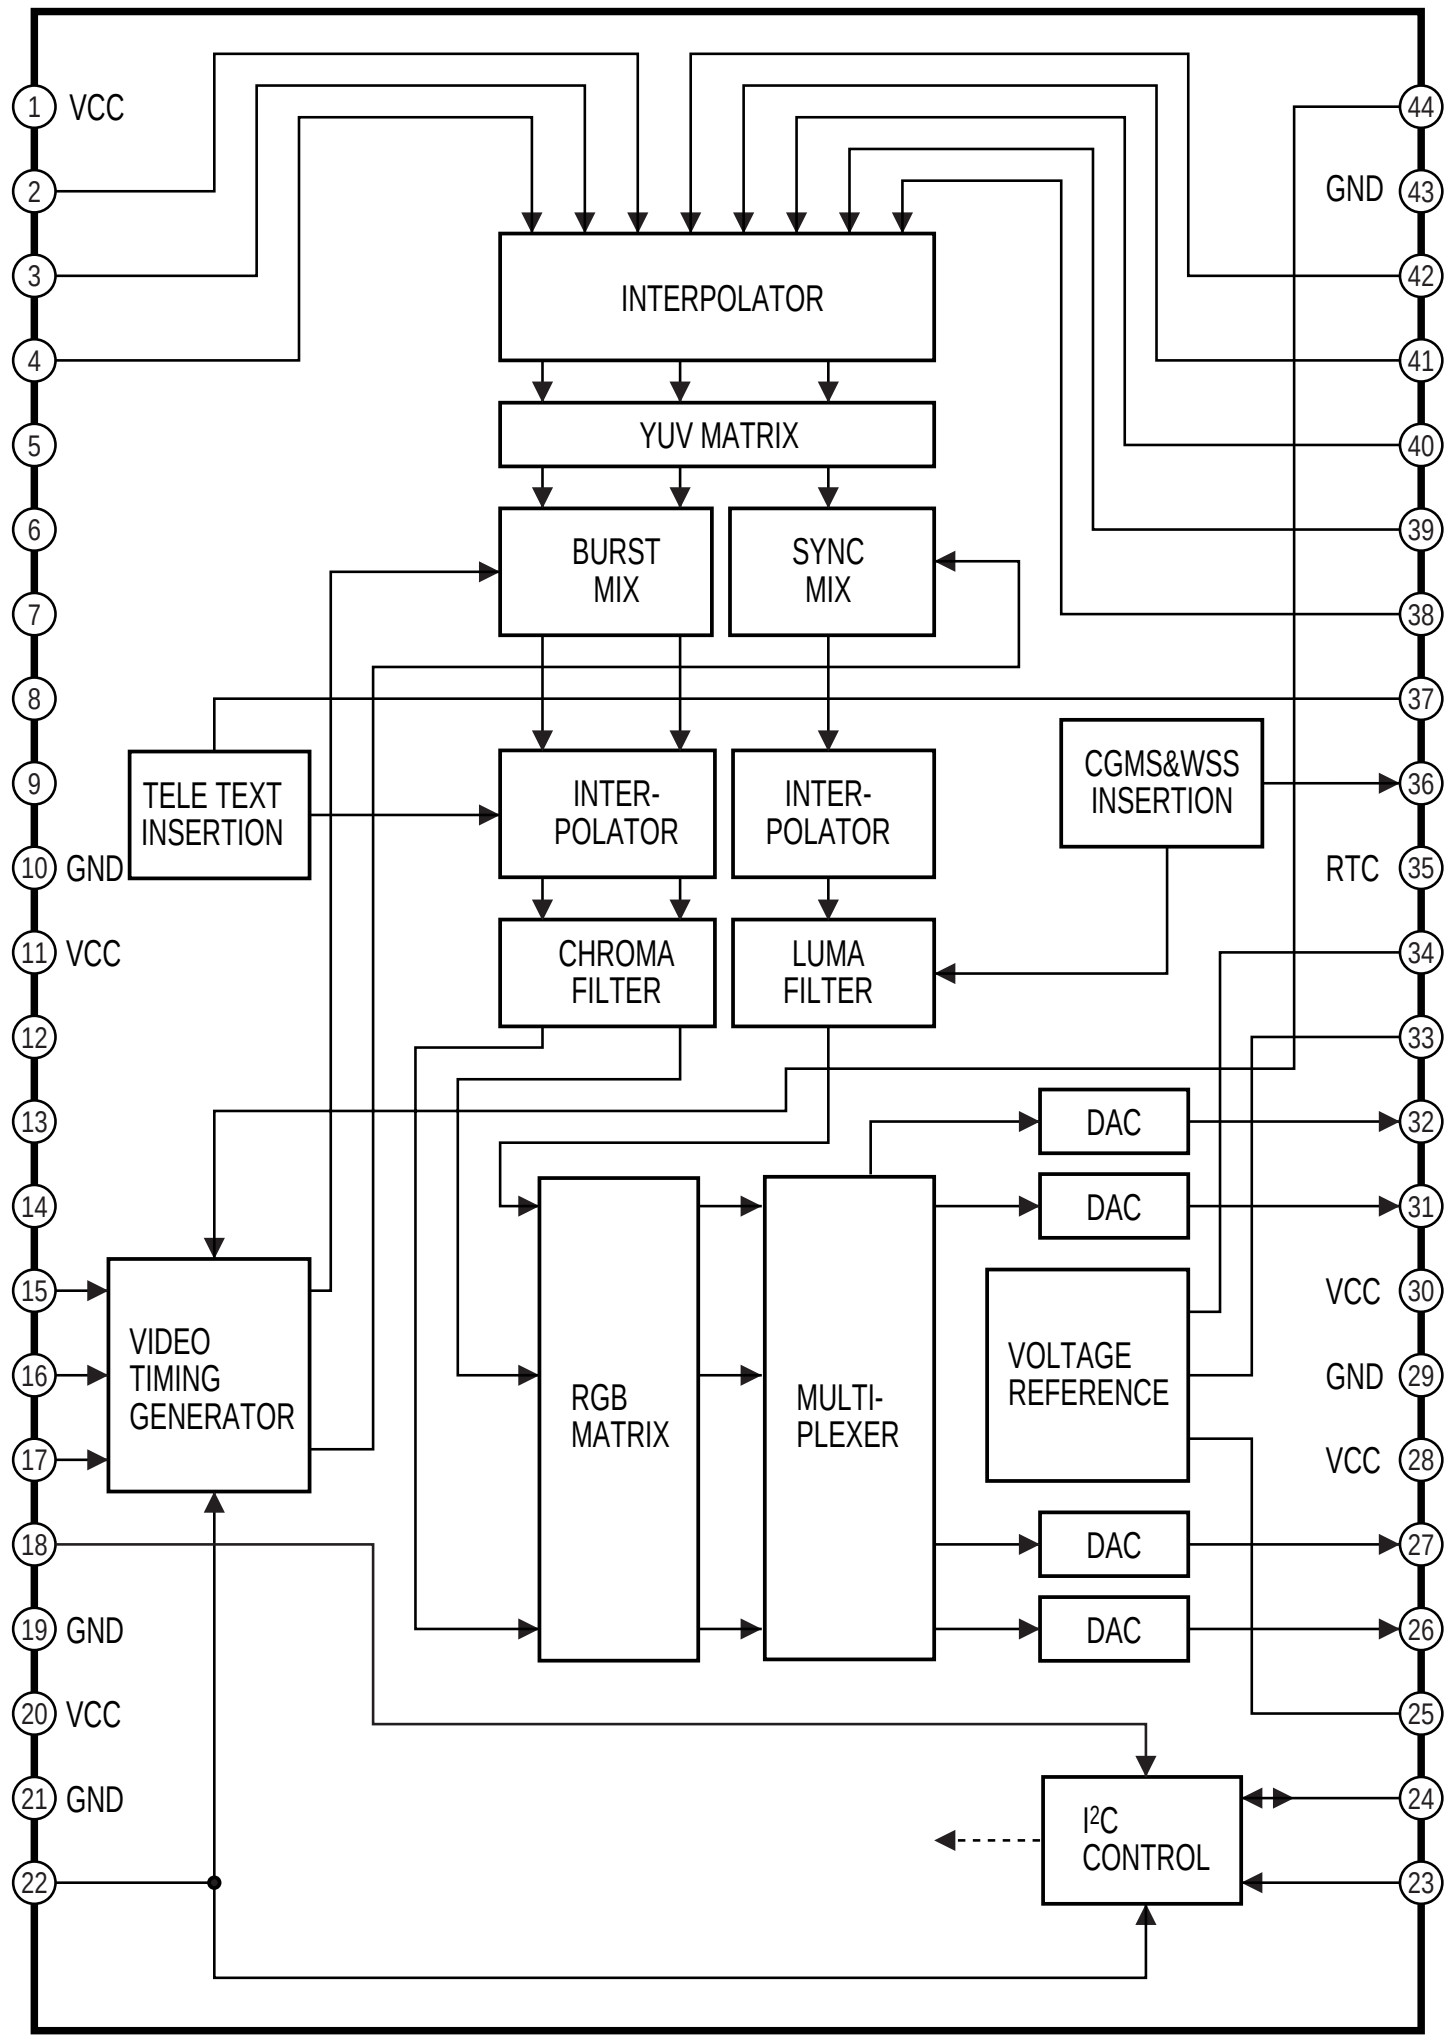
1 VCC
2
3
4
5
6
7
8
9
10 GND
11 VCC
12
13
14
15
16
17
18
19 GND
20 VCC
21 GND
22
INTERPOLATOR
YUV MATRIX
BURST MIX
SYNC MIX
TELE TEXT INSERTION
INTER-POLATOR
INTER-POLATOR
CGMS&WSS INSERTION
CHROMA FILTER
LUMA FILTER
DAC
DAC
VIDEO TIMING GENERATOR
RGB MATRIX
MULTI-PLEXER
VOLTAGE REFERENCE
DAC
DAC
I²C CONTROL
44
GND 43
42
41
40
39
38
37
36
RTC 35
34
33
32
31
VCC 30
GND 29
VCC 28
27
26
25
24
23

IC8502 BUFFER IC-DETAIL BLOCK DIAGRAM

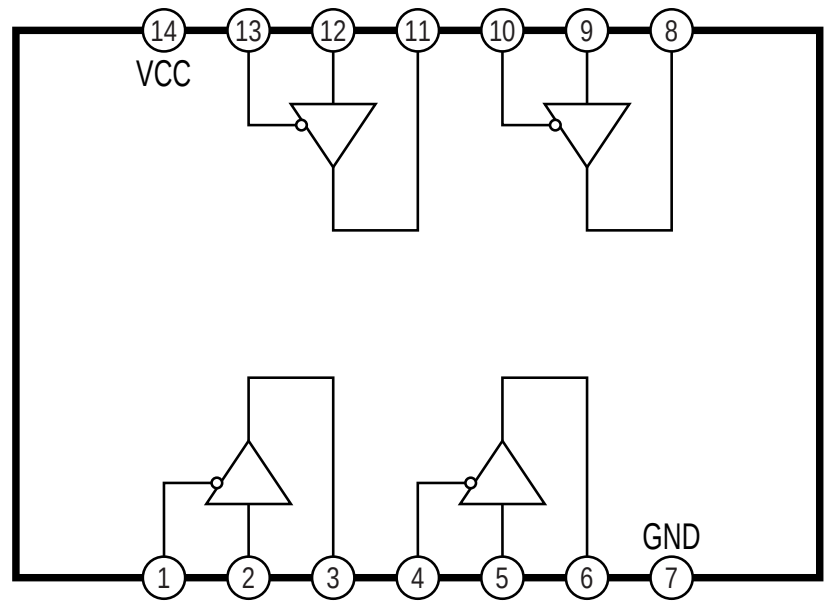
14
13
12
11
10
9
8
VCC
GND
1
2
3
4
5
6
7

DVD DECODER IV SCHEMATIC DIAGRAM

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

I/O CHART OF IC8403

Pin No.	I/O	Signal Name	Description
1	I	XTI	27MHz clock
2	O	SCKO	System clock
3	I	VCP	+5.0V
4	-	NC	(Not used)
5	-	MCKO	(Not used)
6	I	ML	Mode control latch
7	I	MC	Mode control clock
8	I	MD	Mode control data
9	I	RSTB	Audio DAC reset : low
10	-	ZERO	(Not used)
11	O	V OUT R	Audio R-CH
12	-	GNDA	Ground
13	I	VCA	+5.0V
14	O	V OUT L	Audio L-CH
15	-	CAP	Audio common
16	I	BCKIN	Audio bit clock
17	I	DIN	Audio serial data
18	I	LRCIN	Audio left/right clock
19	-	NC	(Not used)
20	-	RSV	(Not used)
21	I	VDD	+5.0V
22	-	GNDD	Ground
23	-	GNDP	Ground
24	-	XTO	(Not used)

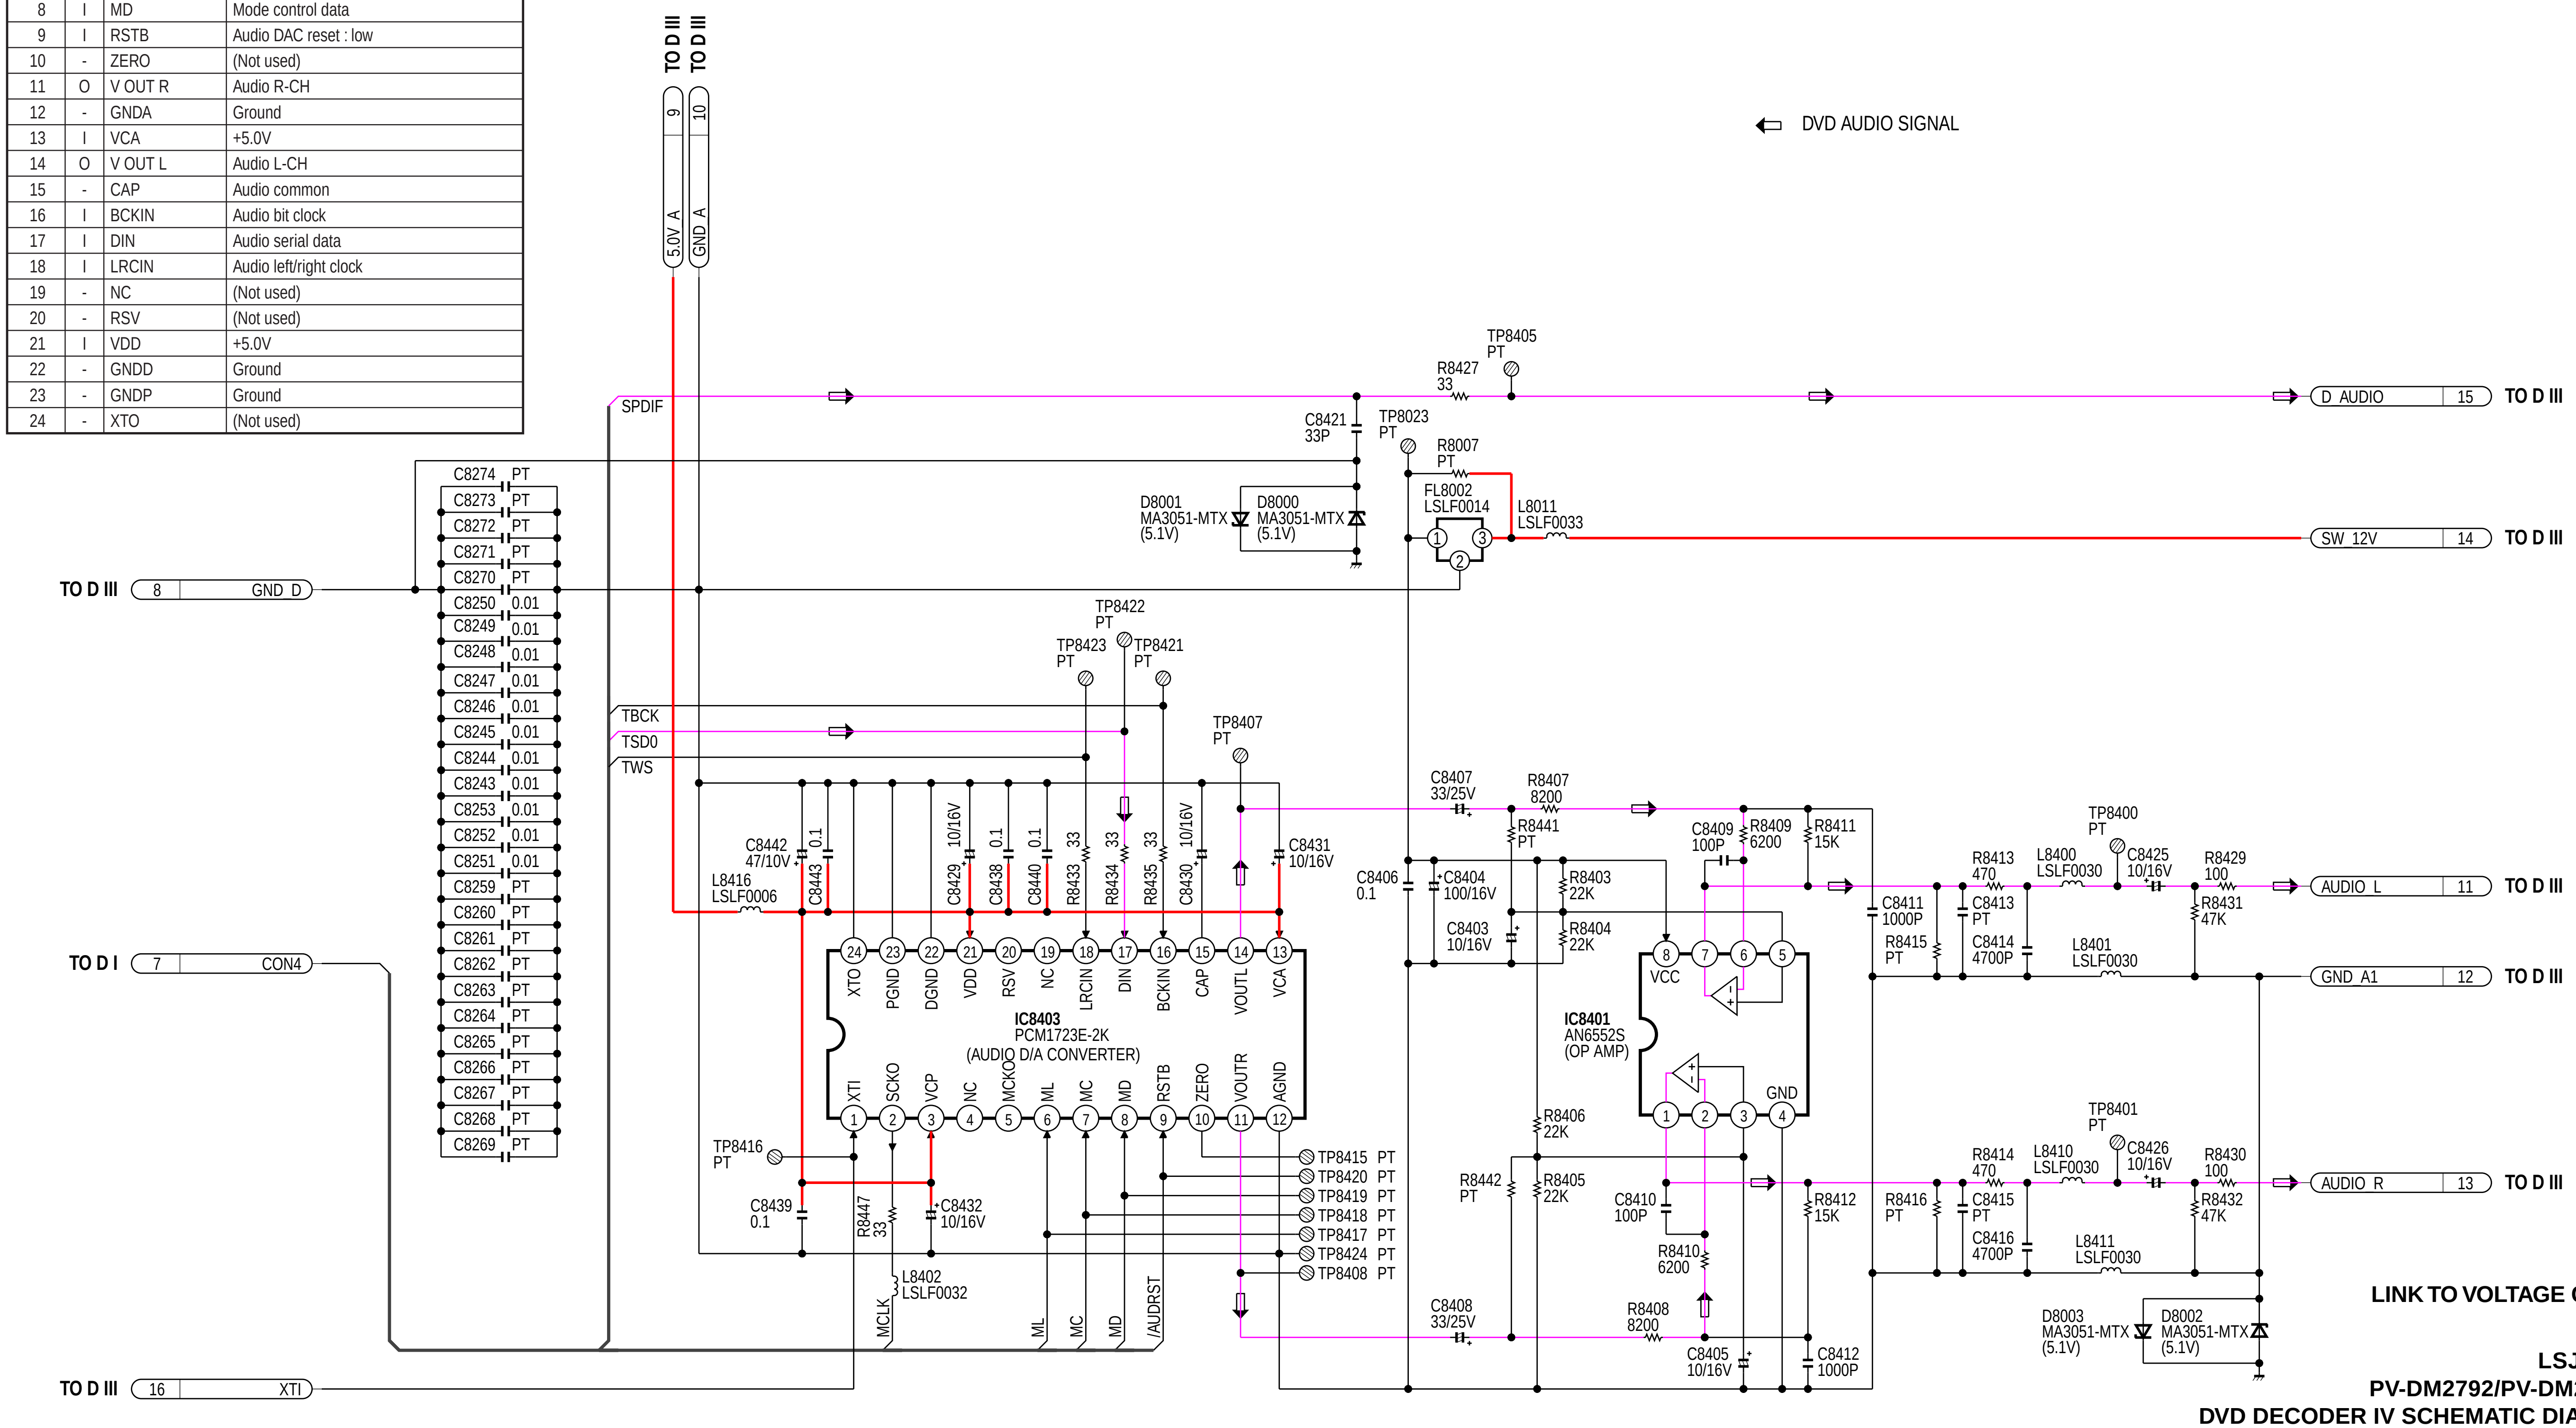

TO D III
TO D III
9
10
5.0V A
GND A
DVD AUDIO SIGNAL
SPDIF
TP8405 PT
R8427 33
C8421 33P
D AUDIO 15 TO D III
TP8023 PT
R8007 PT
FL8002 LSLF0014
L8011 LSLF0033
SW 12V 14 TO D III
D8001 MA3051-MTX (5.1V)
D8000 MA3051-MTX (5.1V)
C8274 PT
C8273 PT
C8272 PT
C8271 PT
C8270 PT
C8250 0.01
C8249 0.01
C8248 0.01
C8247 0.01
C8246 0.01
C8245 0.01
C8244 0.01
C8243 0.01
C8253 0.01
C8252 0.01
C8251 0.01
C8259 PT
C8260 PT
C8261 PT
C8262 PT
C8263 PT
C8264 PT
C8265 PT
C8266 PT
C8267 PT
C8268 PT
C8269 PT
TO D III 8 GND D
TO D I 7 CON4
TO D III 16 XTI
TP8422 PT
TP8423 PT
TP8421 PT
TBCK
TSD0
TWS
TP8407 PT
C8442 47/10V
L8416 LSLF0006
C8443 0.1
C8429 10/16V
C8438 0.1
C8440 0.1
R8433 33
R8434 33
R8435 33
C8430 10/16V
C8431 10/16V
XTO PGND DGND VDD RSV NC LRCIN DIN BCKIN CAP VOUTL VCA
XTI SCKO VCP NC MCKO ML MC MD RSTB ZERO VOUTR AGND
IC8403
PCM1723E-2K
(AUDIO D/A CONVERTER)
TP8416 PT
C8439 0.1
R8447 33
C8432 10/16V
L8402 LSLF0032
MCLK
ML
MC
MD
/AUDRST
TP8415 PT
TP8420 PT
TP8419 PT
TP8418 PT
TP8417 PT
TP8424 PT
TP8408 PT
C8407 33/25V
R8407 8200
R8441 PT
C8406 0.1
C8404 100/16V
R8403 22K
C8403 10/16V
R8404 22K
C8409 100P
R8409 6200
R8411 15K
VCC
IC8401
AN6552S
(OP AMP)
GND
R8406 22K
R8442 PT
R8405 22K
C8410 100P
R8410 6200
C8408 33/25V
R8408 8200
C8405 10/16V
C8412 1000P
C8411 1000P
R8415 PT
R8412 15K
R8416 PT
R8413 470
C8413 PT
C8414 4700P
L8400 LSLF0030
TP8400 PT
C8425 10/16V
R8429 100
R8431 47K
L8401 LSLF0030
AUDIO L 11 TO D III
GND A1 12 TO D III
R8414 470
C8415 PT
C8416 4700P
L8410 LSLF0030
TP8401 PT
C8426 10/16V
R8430 100
R8432 47K
L8411 LSLF0030
AUDIO R 13 TO D III
D8003 MA3051-MTX (5.1V)
D8002 MA3051-MTX (5.1V)

LINK TO VOLTAGE CHART

LSJB2007
PV-DM2792/PV-DM2792-K
DVD DECODER IV SCHEMATIC DIAGRAM

INTERCONNECTION SCHEMATIC DIAGRAM

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

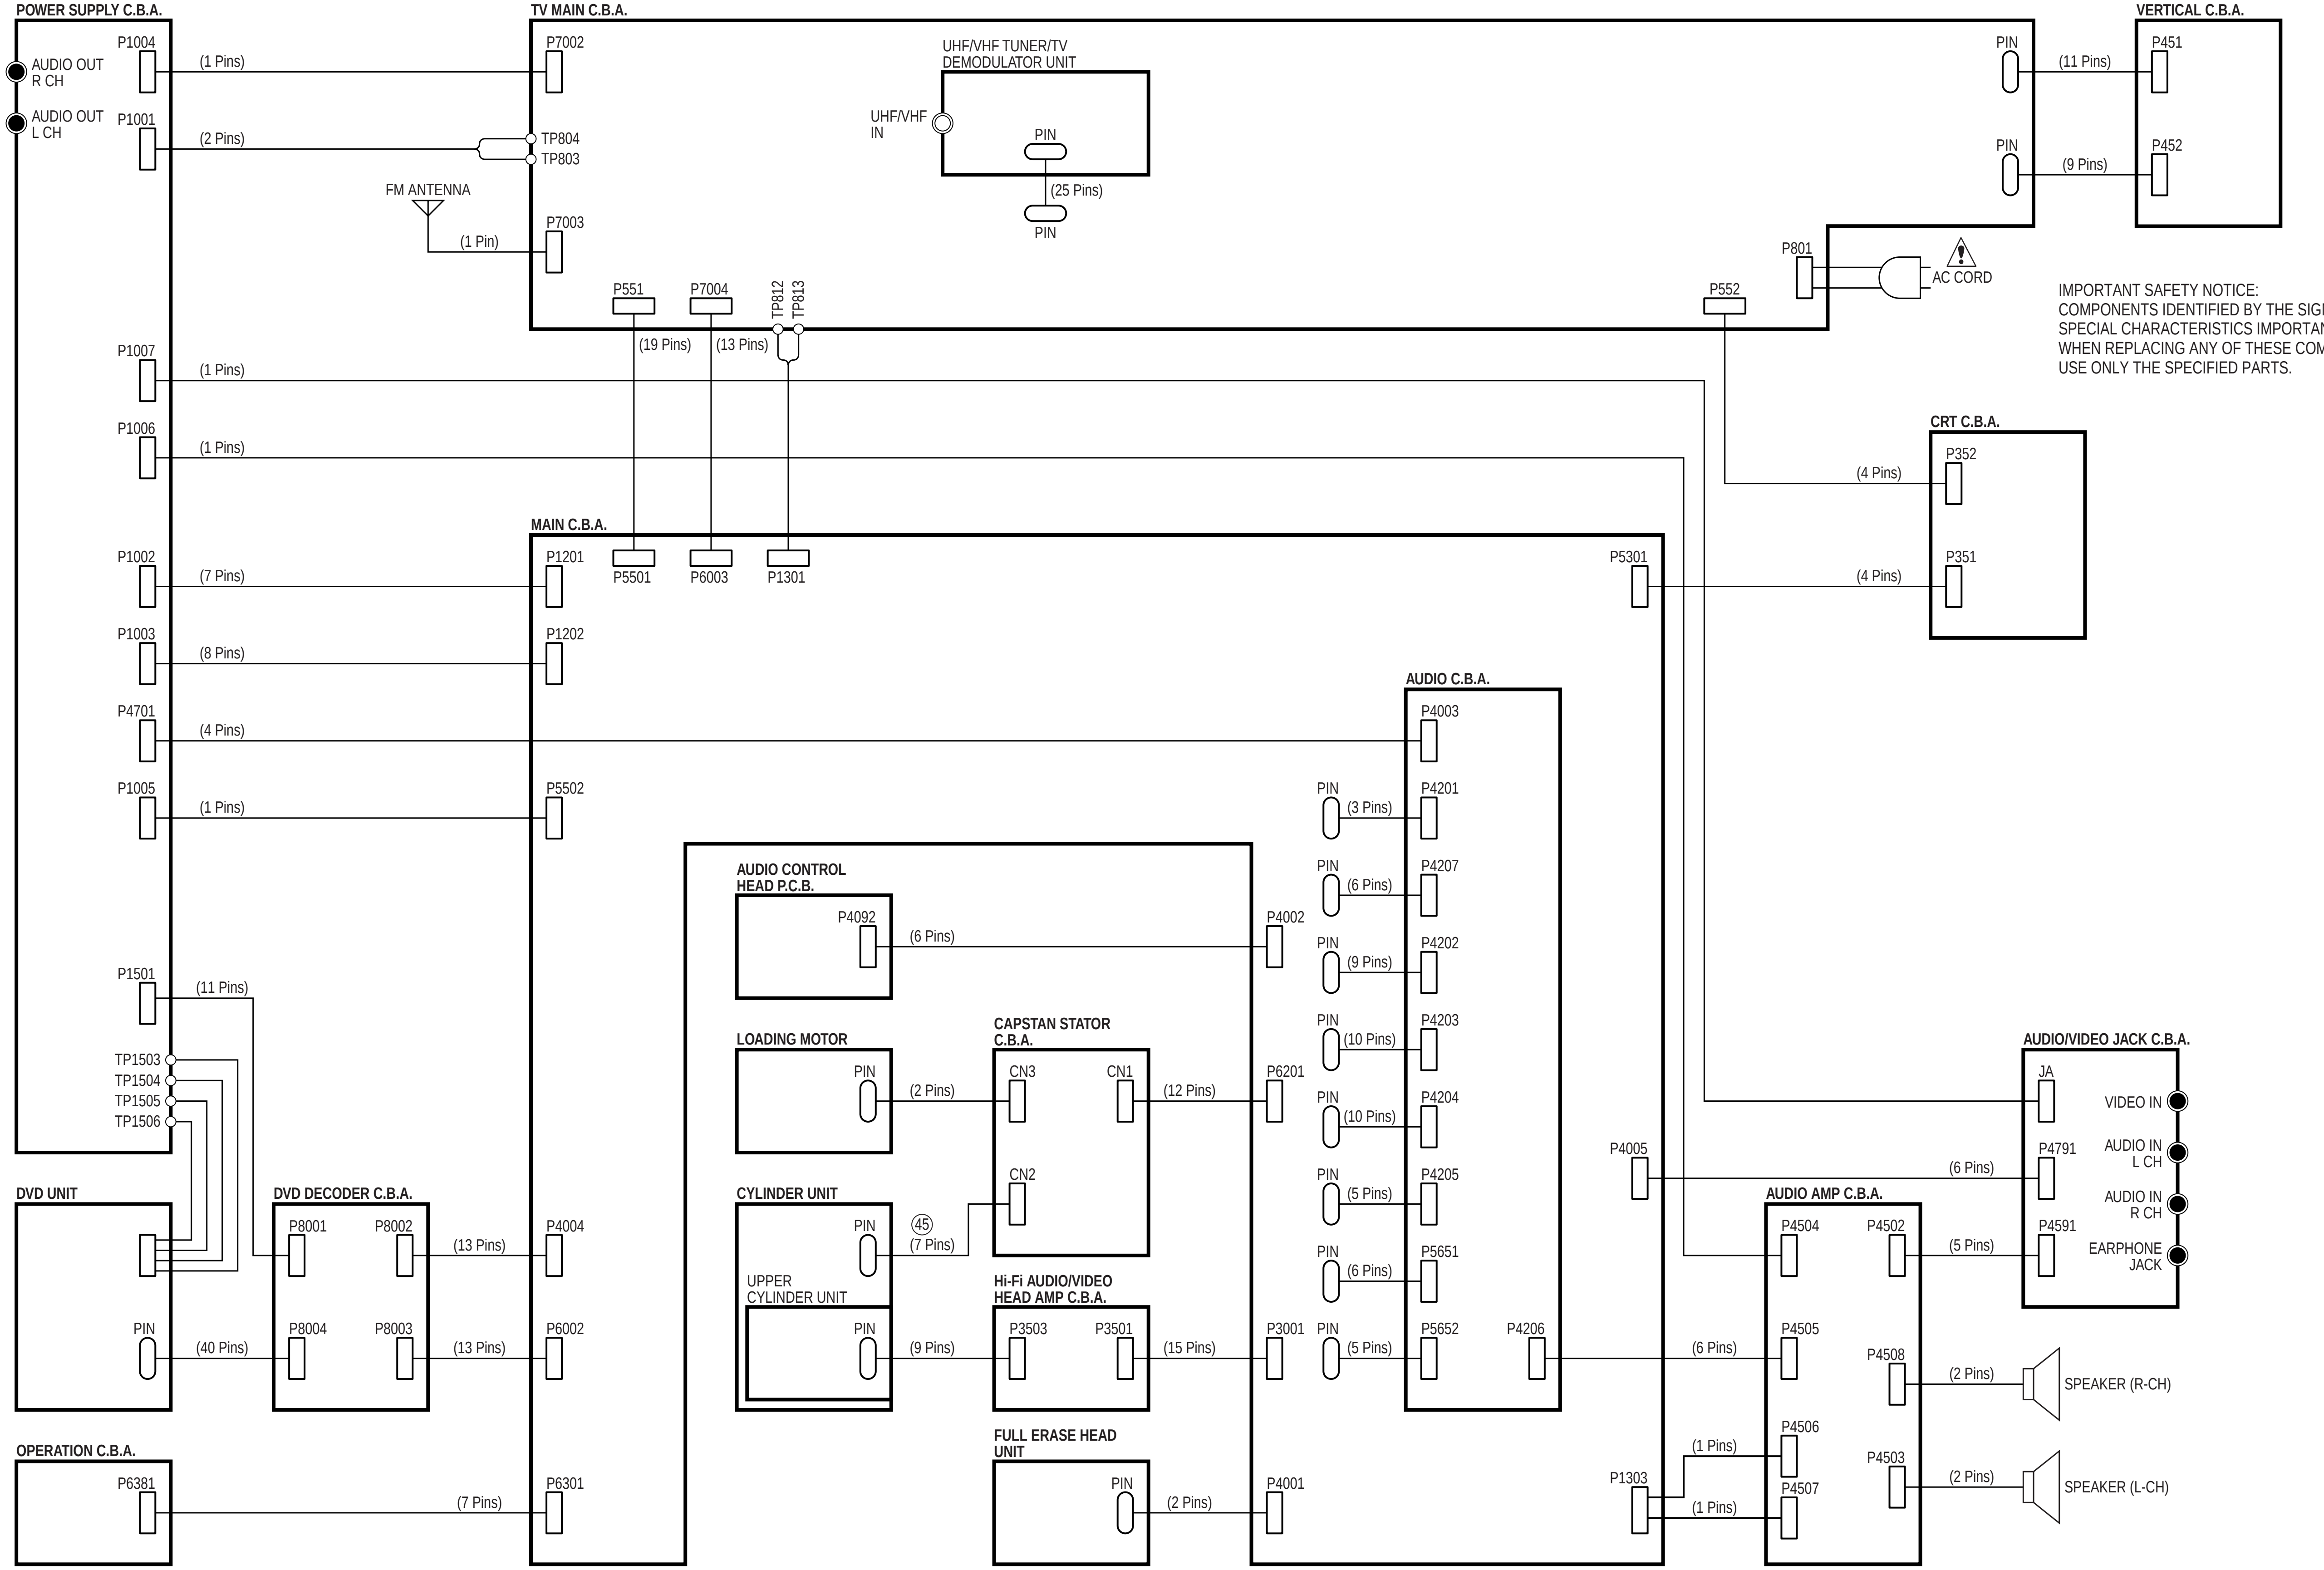
POWER SUPPLY C.B.A.
AUDIO OUT R CH
AUDIO OUT L CH
P1004
(1 Pins)
P1001
(2 Pins)
P1007
(1 Pins)
P1006
(1 Pins)
P1002
(7 Pins)
P1003
(8 Pins)
P4701
(4 Pins)
P1005
(1 Pins)
P1501
(11 Pins)
TP1503
TP1504
TP1505
TP1506
TV MAIN C.B.A.
P7002
TP804
TP803
FM ANTENNA
(1 Pin)
P7003
UHF/VHF TUNER/TV DEMODULATOR UNIT
UHF/VHF IN
PIN
(25 Pins)
PIN
P551
P7004
TP812
TP813
(19 Pins)
(13 Pins)
P552
P801
AC CORD
PIN
(11 Pins)
PIN
(9 Pins)
VERTICAL C.B.A.
P451
P452
CRT C.B.A.
P352
(4 Pins)
P351
(4 Pins)
MAIN C.B.A.
P1201
P5501
P6003
P1301
P1202
P5502
P5301
P4004
P6002
P6301
AUDIO CONTROL HEAD P.C.B.
P4092
(6 Pins)
P4002
LOADING MOTOR
PIN
(2 Pins)
CAPSTAN STATOR C.B.A.
CN3
CN1
(12 Pins)
P6201
CN2
CYLINDER UNIT
PIN
㊺
(7 Pins)
UPPER CYLINDER UNIT
PIN
(9 Pins)
Hi-Fi AUDIO/VIDEO HEAD AMP C.B.A.
P3503
P3501
(15 Pins)
P3001
FULL ERASE HEAD UNIT
PIN
(2 Pins)
P4001
AUDIO C.B.A.
P4003
PIN
(3 Pins)
P4201
PIN
(6 Pins)
P4207
PIN
(9 Pins)
P4202
PIN
(10 Pins)
P4203
PIN
(10 Pins)
P4204
PIN
(5 Pins)
P4205
PIN
(6 Pins)
P5651
PIN
(5 Pins)
P5652
P4206
(6 Pins)
P4005
(6 Pins)
P1303
(1 Pins)
(1 Pins)
AUDIO AMP C.B.A.
P4504
P4502
(5 Pins)
P4505
P4508
(2 Pins)
SPEAKER (R-CH)
P4506
P4507
P4503
(2 Pins)
SPEAKER (L-CH)
AUDIO/VIDEO JACK C.B.A.
JA
VIDEO IN
P4791
AUDIO IN L CH
AUDIO IN R CH
P4591
EARPHONE JACK
DVD UNIT
PIN
(40 Pins)
DVD DECODER C.B.A.
P8001
P8002
(13 Pins)
P8004
P8003
(13 Pins)
OPERATION C.B.A.
P6381
(7 Pins)

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN ⚠ HAVE
SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY.
WHEN REPLACING ANY OF THESE COMPONENTS,
USE ONLY THE SPECIFIED PARTS.

8.2. MAIN SCHEMATIC DIAGRAMS

MAIN I (SYSTEM CONTROL/ SERVO) SCHEMATIC DIAGRAM

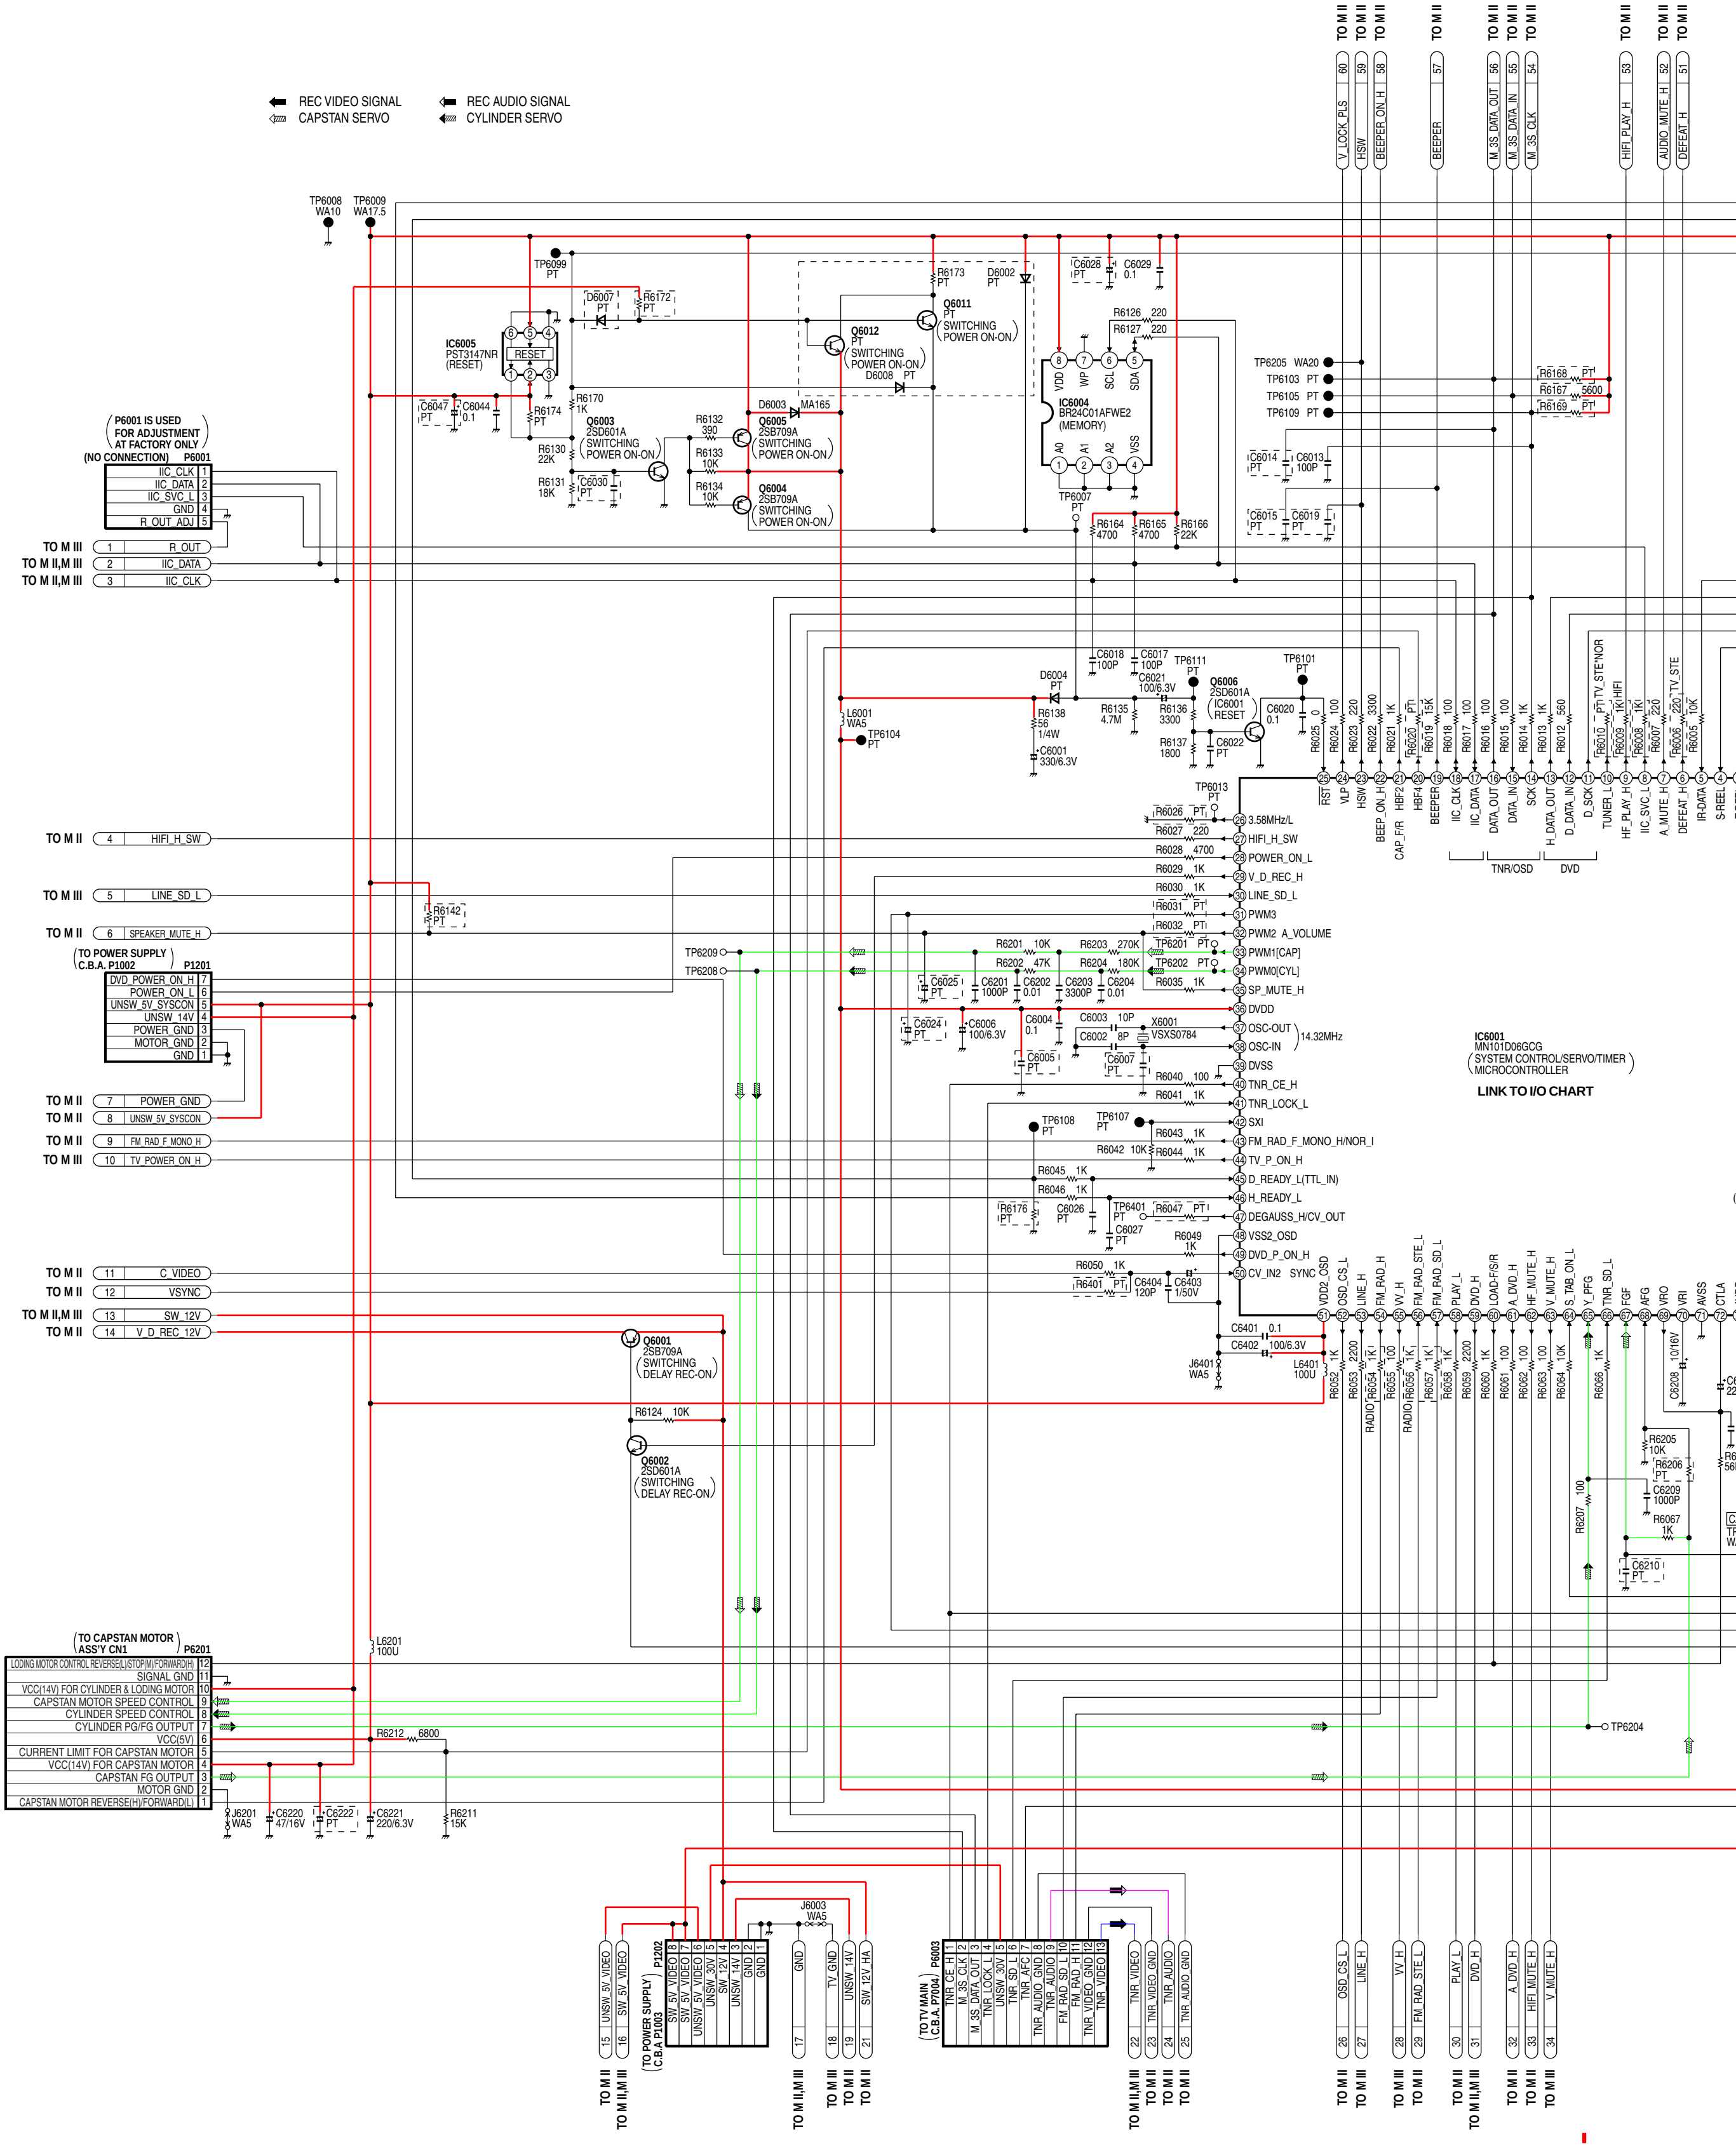
REC VIDEO SIGNAL
CAPSTAN SERVO
REC AUDIO SIGNAL
CYLINDER SERVO
IC6005 PST3147NR (RESET)
IC6004 BR24C01AFWE2 (MEMORY)
IC6001 MN101D06GCG (SYSTEM CONTROL/SERVO/TIMER MICROCONTROLLER)
LINK TO I/O CHART
Q6011 PT (SWITCHING POWER ON-ON)
Q6012 PT (SWITCHING POWER ON-ON)
Q6003 2SD601A (SWITCHING POWER ON-ON)
Q6005 2SB709A (SWITCHING POWER ON-ON)
Q6004 2SB709A (SWITCHING POWER ON-ON)
Q6006 2SD601A (IC6001 RESET)
Q6001 2SB709A (SWITCHING DELAY REC-ON)
Q6002 2SD601A (SWITCHING DELAY REC-ON)
X6001 VSX5784 14.32MHz
P6001 IS USED FOR ADJUSTMENT AT FACTORY ONLY (NO CONNECTION) P6001
IIC_CLK
IIC_DATA
IIC_SVC_L
GND
R_OUT_ADJ
TO M III R_OUT
TO M II,M III IIC_DATA
TO M II,M III IIC_CLK
TO M II HIFI_H_SW
TO M III LINE_SD_L
TO M II SPEAKER_MUTE_H
(TO POWER SUPPLY C.B.A. P1002) P1201
DVD_POWER_ON_H
POWER_ON_L
UNSW_5V_SYSCON
UNSW_14V
POWER_GND
MOTOR_GND
GND
TO M II POWER_GND
TO M II UNSW_5V_SYSCON
TO M II FM_RAD_F_MONO_H
TO M III TV_POWER_ON_H
TO M II C_VIDEO
TO M II VSYNC
TO M II,M III SW_12V
TO M II V_D_REC_12V
(TO CAPSTAN MOTOR ASS'Y CN1) P6201
LODING MOTOR CONTROL REVERSE(L)/STOP(M)/FORWARD(H)
SIGNAL GND
VCC(14V) FOR CYLINDER & LODING MOTOR
CAPSTAN MOTOR SPEED CONTROL
CYLINDER SPEED CONTROL
CYLINDER PG/FG OUTPUT
VCC(5V)
CURRENT LIMIT FOR CAPSTAN MOTOR
VCC(14V) FOR CAPSTAN MOTOR
CAPSTAN FG OUTPUT
MOTOR GND
CAPSTAN MOTOR REVERSE(H)/FORWARD(L)
(TO POWER SUPPLY C.B.A. P1003) P1202
(TO TV MAIN C.B.A. P7004) P6003
TO M II V_LOCK_PLS
TO M II HSW
TO M II BEEPER_ON_H
TO M II BEEPER
TO M II M_3S_DATA_OUT
TO M II M_3S_DATA_IN
TO M II M_3S_CLK
TO M II HIFI_PLAY_H
TO M II AUDIO_MUTE_H
TO M II DEFEAT_H
3.58MHz/L
HIFI_H_SW
POWER_ON_L
V_D_REC_H
LINE_SD_L
PWM3
PWM2 A_VOLUME
PWM1[CAP]
PWM0[CYL]
SP_MUTE_H
DVDD
OSC-OUT
OSC-IN
DVSS
TNR_CE_H
TNR_LOCK_L
SXI
FM_RAD_F_MONO_H/NOR_I
TV_P_ON_H
D_READY_L(TTL_IN)
H_READY_L
DEGAUSS_H/CV_OUT
VSS2_OSD
DVD_P_ON_H
CV_IN2 SYNC
TNR/OSD
DVD
TP6204
130

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts, be sure to use the part number listed in the parts list. Do not use the part number on this diagram.

KEY VOLTAGE CHART (SW6301〜6305,6307 〜 6310, 9312,9313,6381,6382)

TERMINAL VOLTAGE	0V〜0.6V	0.7V〜1.9V	2.0V〜3.1V	3.2V〜4.4V
KEY DATA1 (PIN 89)	CH DOWN	VOLUME DOWN	FF/CUE	-----
KEY DATA2 (PIN 88)	CH UP	VOLUME UP	-----	-----
KEY DATA3 (PIN 87)	PLAY	REW /REVIEW	REC	DVD PLAY
KEY DATA4 (PIN 86)	STOP/EJECT	OPEN /CLOSE	POWER	DVD STOP

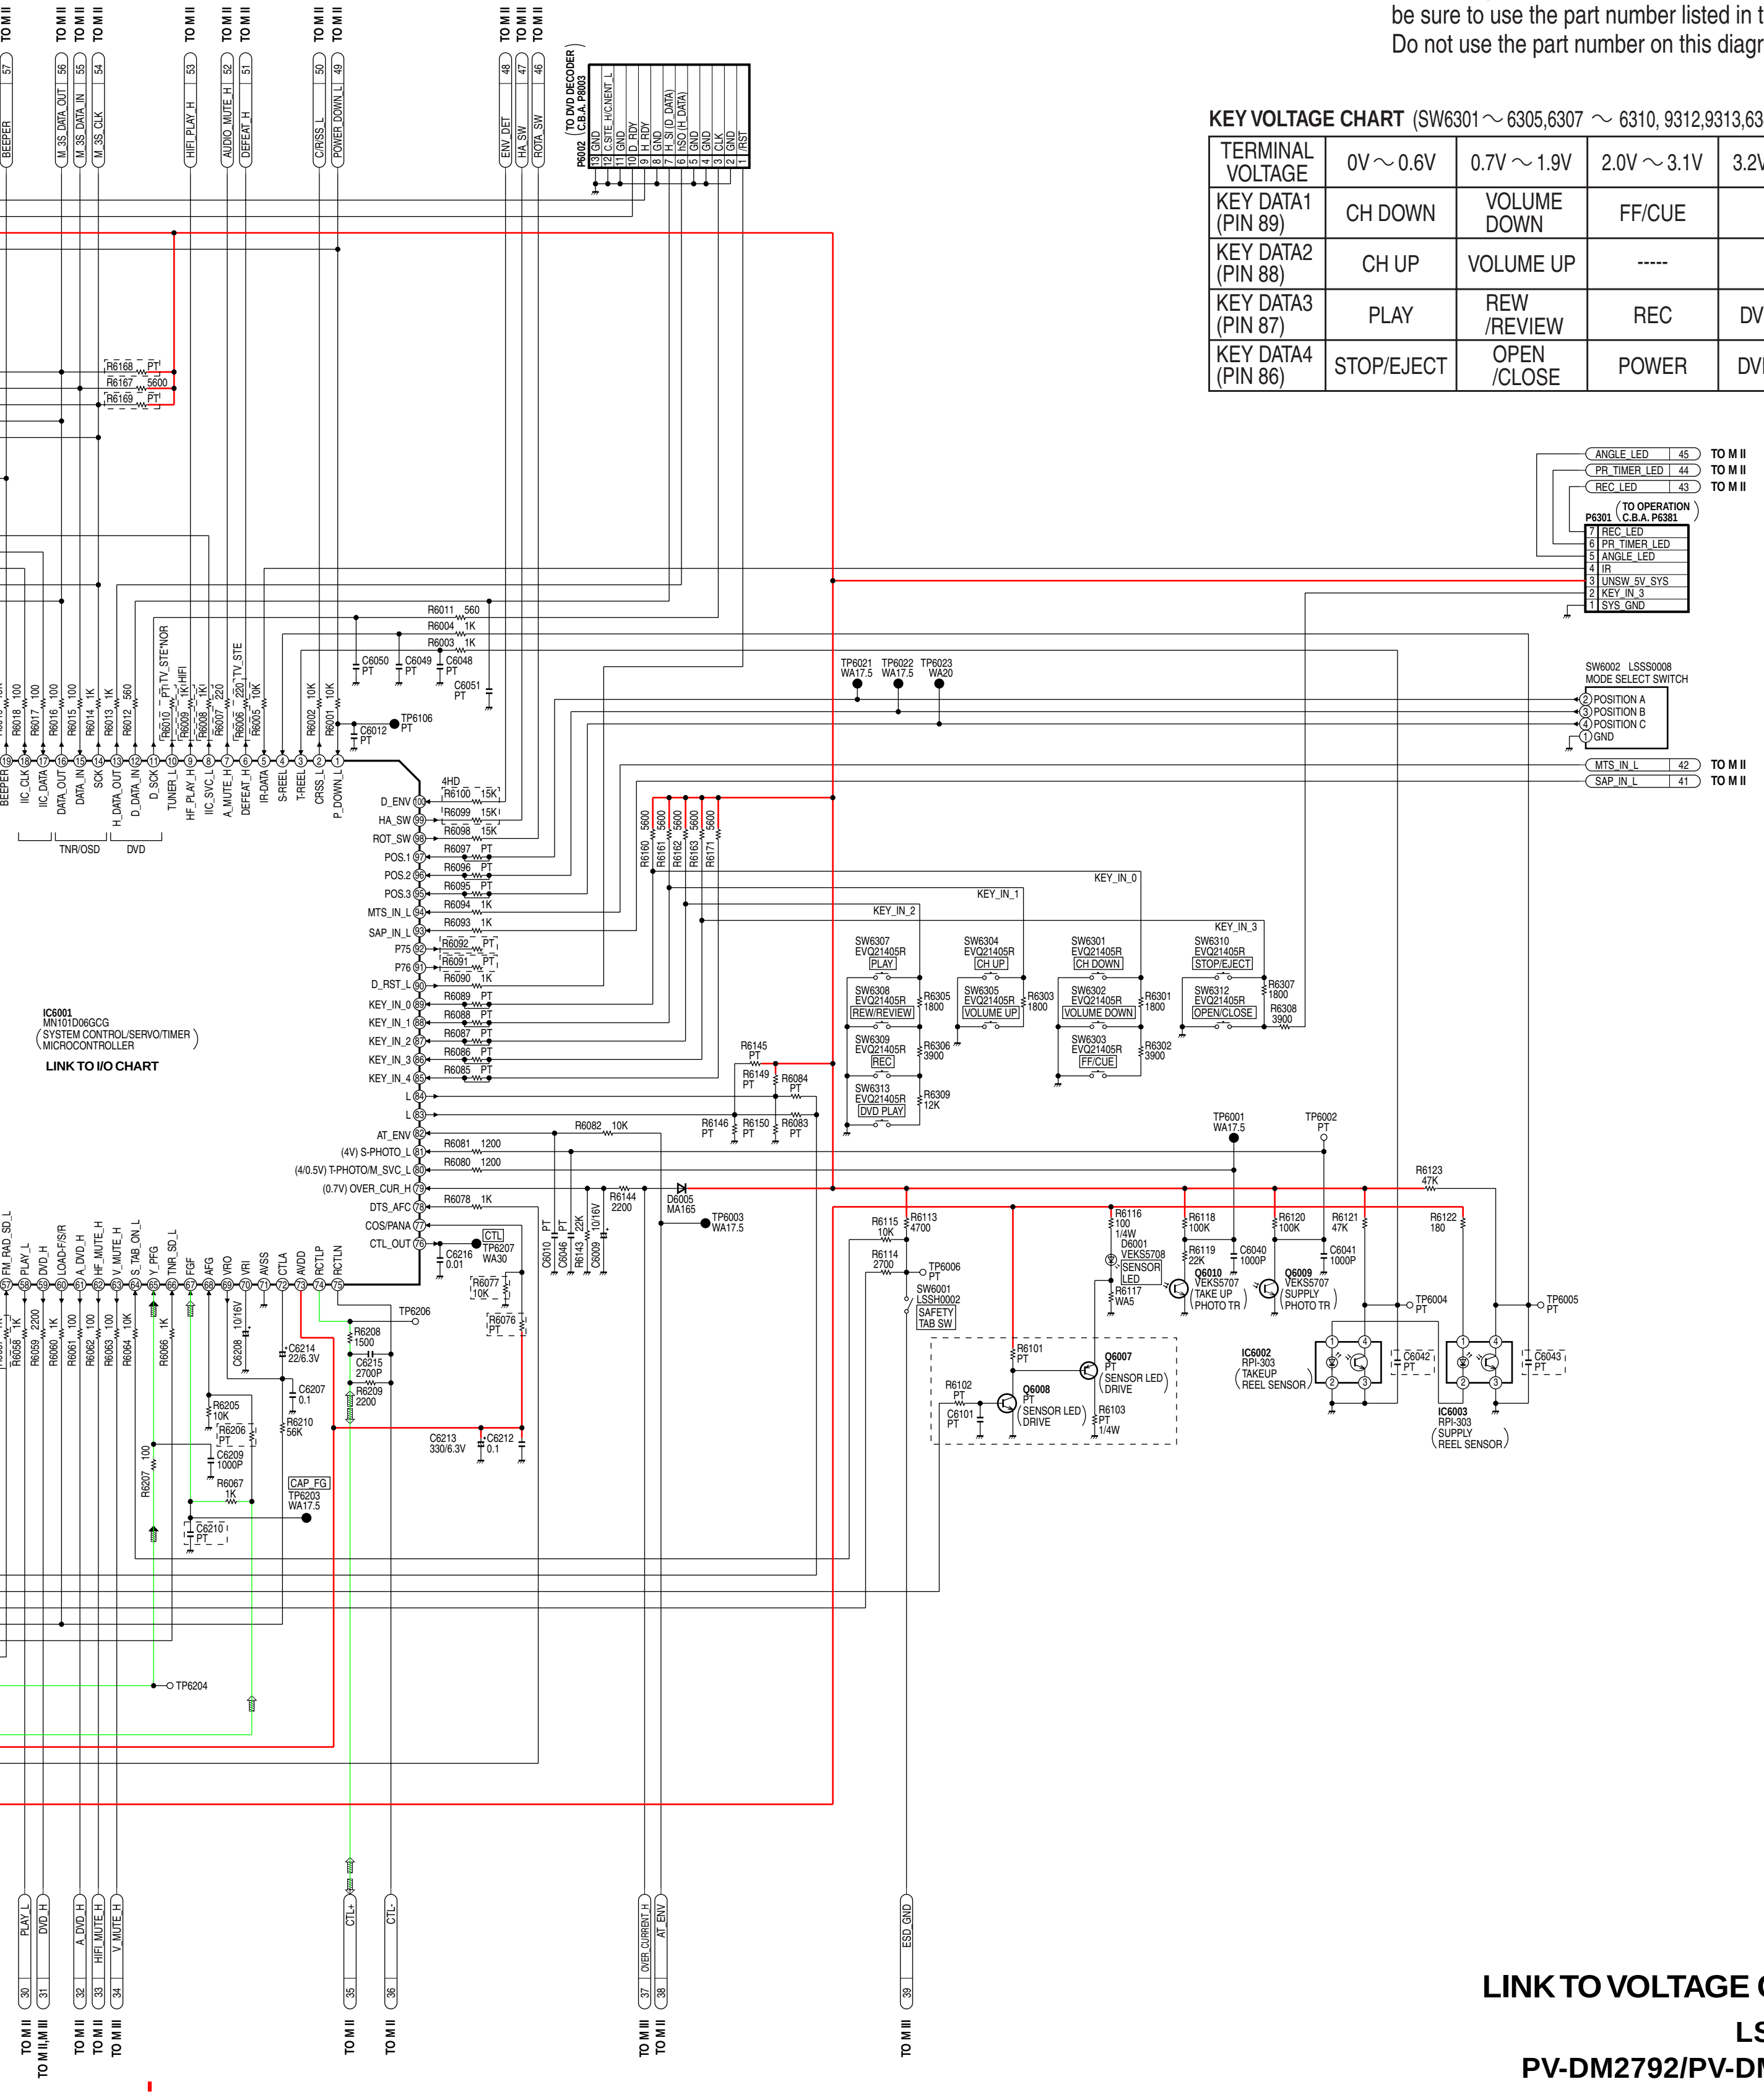

TO M II
BEEPER
M_3S_DATA_OUT
M_3S_DATA_IN
M_3S_CLK
HIFI_PLAY_H
AUDIO_MUTE_H
DEFEAT_H
C-RSS_L
POWER_DOWN_L
ENV_DET
HA_SW
ROTA_SW
P6002 (TO DVD DECODER C.B.A. P8003)
13 GND
12 C.SITE_H/C.NENT_L
11 GND
10 D_RDY
9 H_RDY
8 GND
7 H_SI (D_DATA)
6 HSO (H_DATA)
5 GND
4 GND
3 CLK
2 GND
1 /RST
R6168 PT
R6167 5600
R6169 PT
R6011 560
R6004 1K
R6003 1K
C6050 PT
C6049 PT
C6048 PT
C6051 PT
C6012 PT
TP6106 PT
R6002 10K
R6001 10K
TNR/OSD
DVD
IIC_CLK
IIC_DATA
DATA_OUT
DATA_IN
SCK
H_DATA_OUT
D_DATA_IN
D_SCK
TUNER_L
HF_PLAY_H
IIC_SVC_L
A_MUTE_H
DEFEAT_H
IR-DATA
S-REEL
T-REEL
CRSS_L
P_DOWN_L
D_ENV
HA_SW
ROT_SW
POS.1
POS.2
POS.3
MTS_IN_L
SAP_IN_L
P75
P76
D_RST_L
KEY_IN_0
KEY_IN_1
KEY_IN_2
KEY_IN_3
KEY_IN_4
AT_ENV
(4V) S-PHOTO_L
(4/0.5V) T-PHOTO/M_SVC_L
(0.7V) OVER_CUR_H
DTS_AFC
COS/PANA
CTL_OUT
4HD
R6100 15K
R6099 15K
R6098 15K
R6097 PT
R6096 PT
R6095 PT
R6094 1K
R6093 1K
R6092 PT
R6091 PT
R6090 1K
R6089 PT
R6088 PT
R6087 PT
R6086 PT
R6085 PT
R6081 1200
R6080 1200
R6078 1K
R6082 10K
IC6001
MN101D06GCG
(SYSTEM CONTROL/SERVO/TIMER MICROCONTROLLER)
LINK TO I/O CHART
R6160 5600
R6161 5600
R6162 5600
R6163 5600
R6171 5600
TP6021 WA17.5
TP6022 WA17.5
TP6023 WA20
SW6307 EVQ21405R PLAY
SW6308 EVQ21405R REW/REVIEW
SW6309 EVQ21405R REC
SW6313 EVQ21405R DVD PLAY
SW6304 EVQ21405R CH UP
SW6305 EVQ21405R VOLUME UP
SW6301 EVQ21405R CH DOWN
SW6302 EVQ21405R VOLUME DOWN
SW6303 EVQ21405R FF/CUE
SW6310 EVQ21405R STOP/EJECT
SW6312 EVQ21405R OPEN/CLOSE
R6305 1800
R6306 3900
R6309 12K
R6303 1800
R6301 1800
R6302 3900
R6307 1800
R6308 3900
R6145 PT
R6149 PT
R6084 PT
R6146 PT
R6150 PT
R6083 PT
ANGLE_LED 45
PR_TIMER_LED 44
REC_LED 43
P6301 (TO OPERATION C.B.A. P6381)
7 REC_LED
6 PR_TIMER_LED
5 ANGLE_LED
4 IR
3 UNSW_5V_SYS
2 KEY_IN_3
1 SYS_GND
SW6002 LSSS0008
MODE SELECT SWITCH
2 POSITION A
3 POSITION B
4 POSITION C
1 GND
MTS_IN_L 42
SAP_IN_L 41
TP6001 WA17.5
TP6002 PT
R6123 47K
C6010 PT
C6046 PT
R6143 22K
C6009 10/16V
R6144 2200
D6005 MA165
TP6003 WA17.5
R6115 10K
R6113 4700
R6114 2700
TP6006 PT
SW6001 LSSH0002 SAFETY TAB SW
R6116 100 1/4W
D6001 VEKS5708 SENSOR LED
R6117 WA5
R6118 100K
R6119 22K
C6040 1000P
Q6010 VEKS5707 (TAKE UP PHOTO TR)
R6120 100K
R6121 47K
C6041 1000P
Q6009 VEKS5707 (SUPPLY PHOTO TR)
R6122 180
TP6004 PT
TP6005 PT
R6101 PT
Q6007 PT (SENSOR LED DRIVE)
R6102 PT
C6101 PT
Q6008 PT (SENSOR LED DRIVE)
R6103 PT 1/4W
IC6002 RPI-303 (TAKEUP REEL SENSOR)
C6042 PT
IC6003 RPI-303 (SUPPLY REEL SENSOR)
C6043 PT
CTL
TP6207 WA30
C6216 0.01
R6077 10K
R6076 PT
TP6206
FM_RAD_SD_L
PLAY_L
DVD_H
LOAD-FS/R
A_DVD_H
HF_MUTE_H
V_MUTE_H
S_TAB_ON_L
Y_PFG
TNR_SD_L
FGF
AFG
VRO
VRI
AVSS
CTLA
AVDD
RCTLP
RCTLN
R6058 1K
R6059 2200
R6060 1K
R6061 100
R6062 100
R6063 100
R6064 10K
R6066 1K
C6208 10/16V
C6214 22/6.3V
R6208 1500
C6215 2700P
R6209 2200
C6207 0.1
R6205 10K
R6206 PT
R6210 56K
C6209 1000P
R6067 1K
R6207 100
C6210 PT
CAP_FG
TP6203 WA17.5
C6213 330/6.3V
C6212 0.1
TP6204
PLAY_L 30
DVD_H 31
A_DVD_H 32
HIFI_MUTE_H 33
V_MUTE_H 34
CTL+ 35
CTL- 36
OVER_CURRENT_H 37
AT_ENV 38
ESD_GND 39
TO M II,M III
TO M III

LINK TO VOLTAGE CHART

LSJB2021

PV-DM2792/PV-DM2792-K

MAIN I SCHEMATIC DIAGRAM

MAIN II (SIGNAL PROCESS/AUDIO) SCHEMATIC DIAGRAM

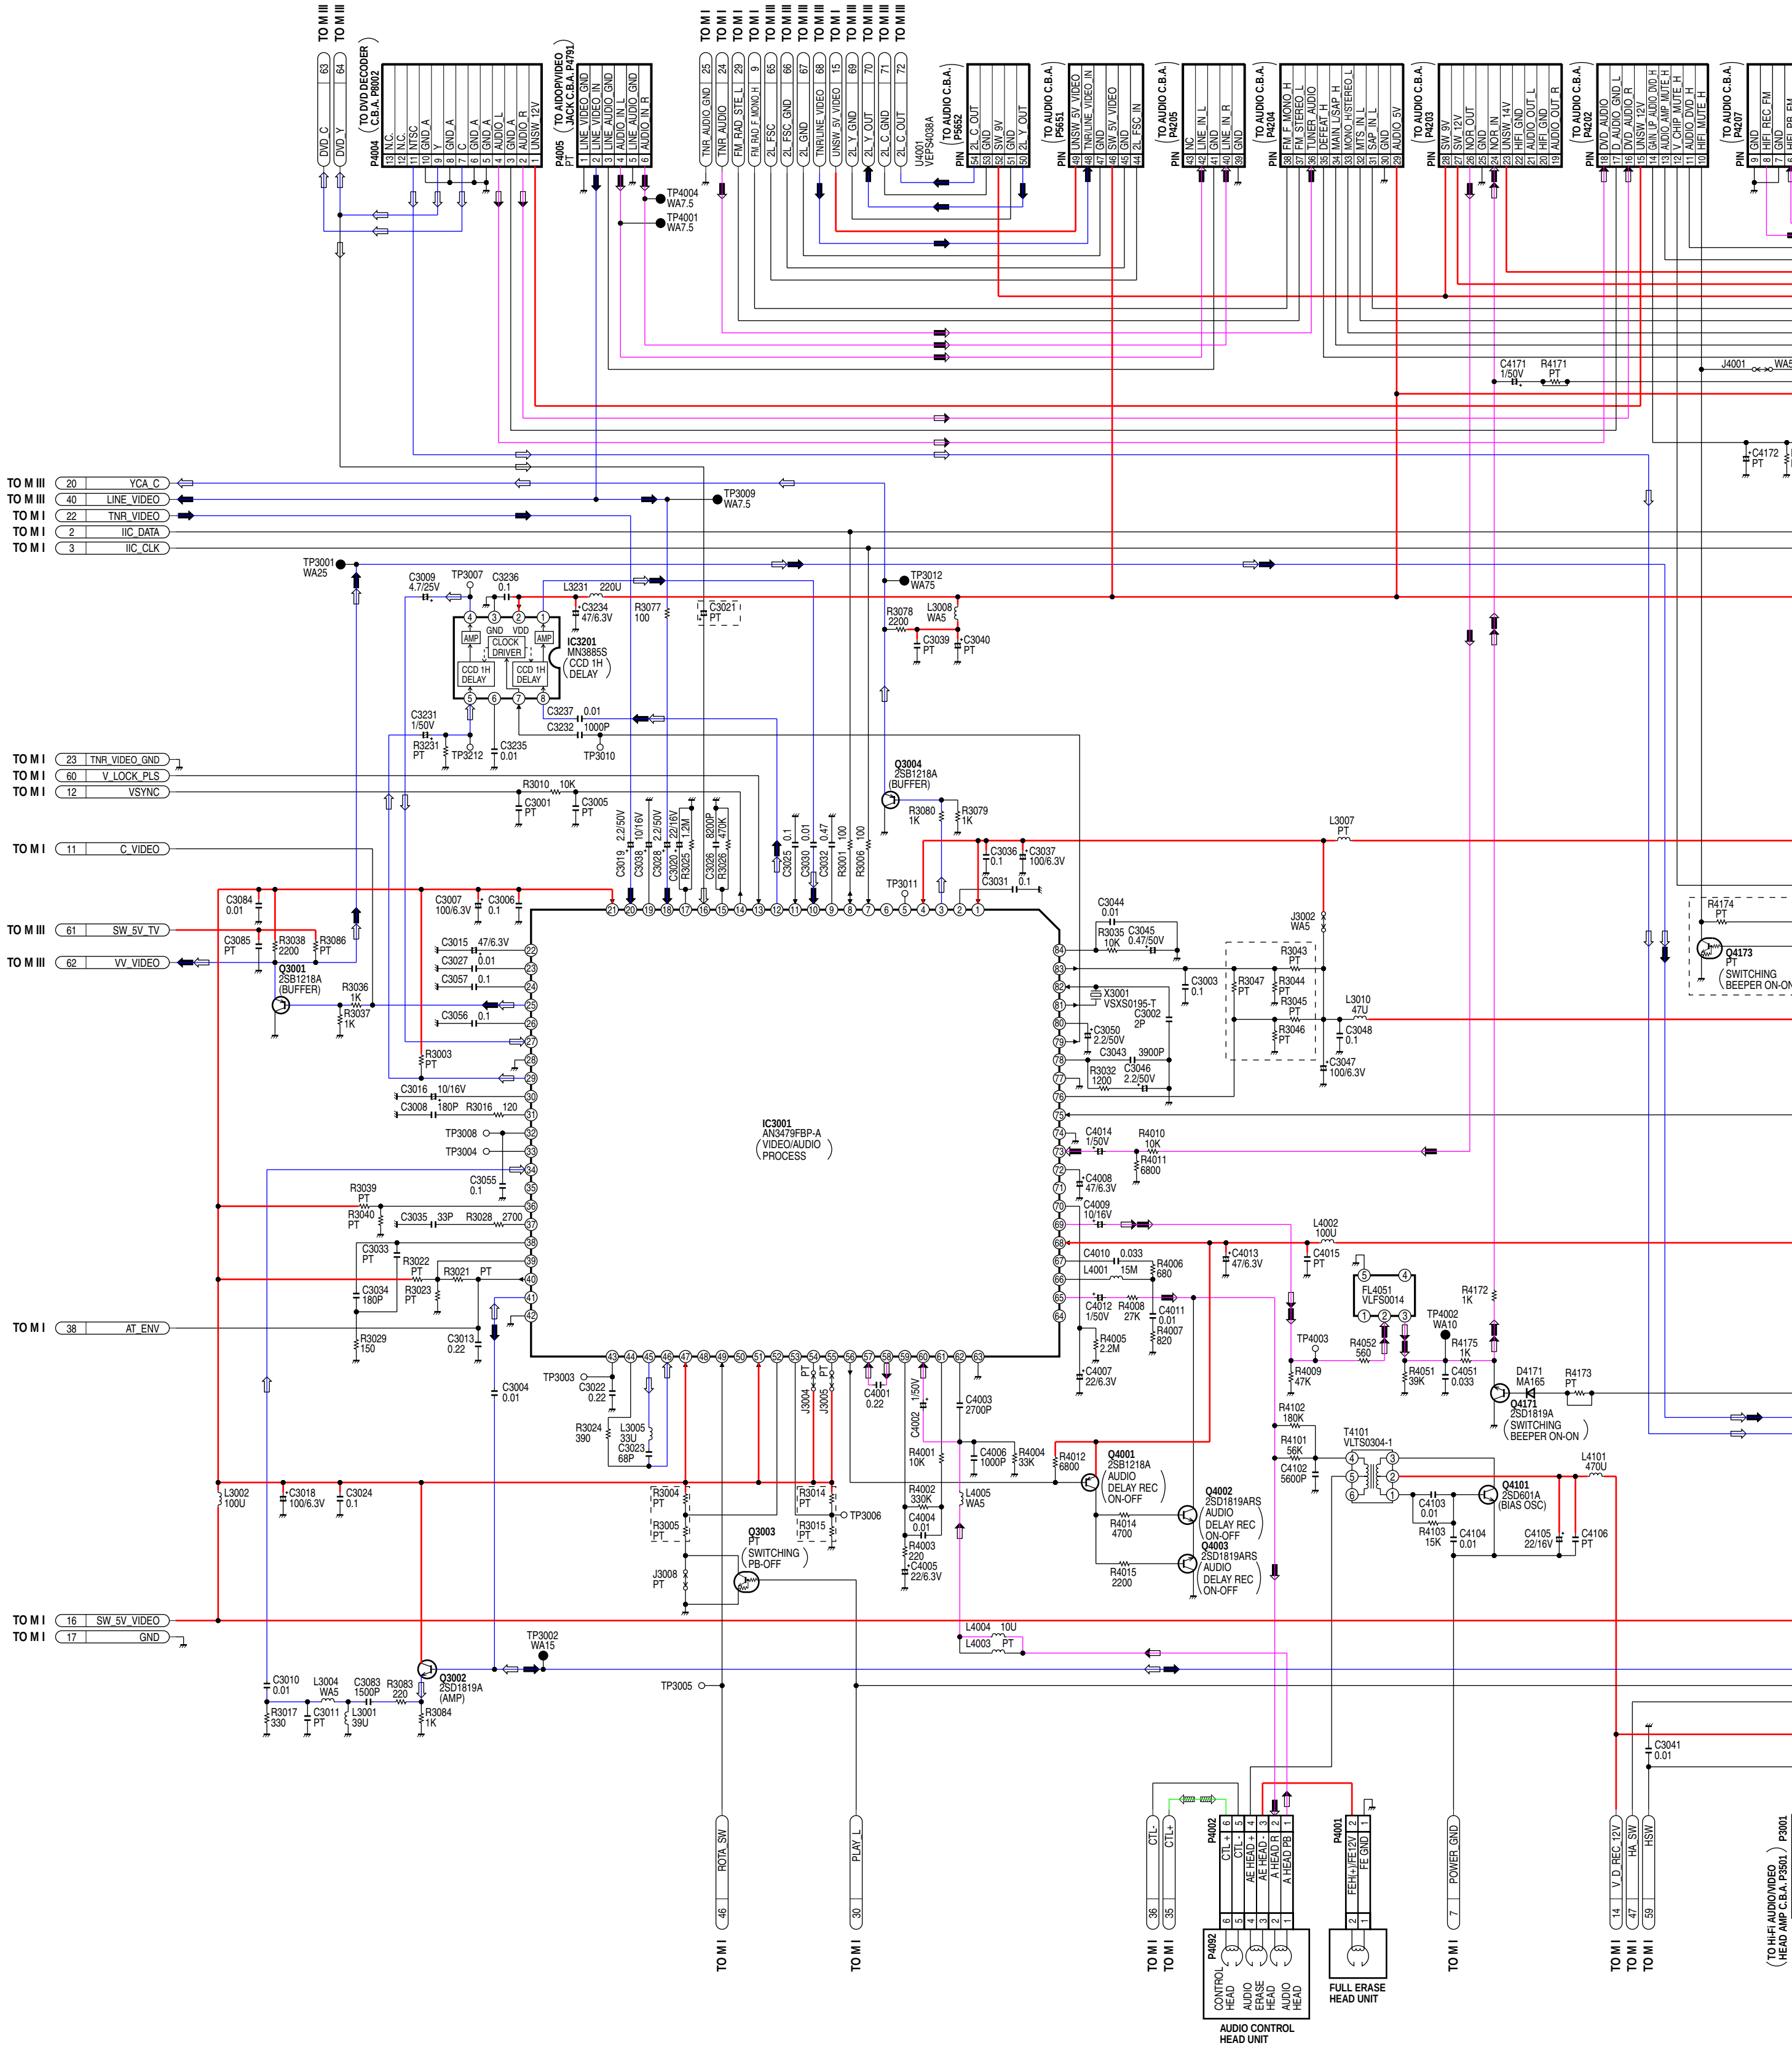
TO M III
TO M III
DVD_C
DVD_Y
P4004
(TO DVD DECODER C.B.A. P8002)
P4005
(TO AUDIO/VIDEO JACK C.B.A. P4791)
TP4004 WA7.5
TP4001 WA7.5
TO M I
TO M III
J4001 VEP54038A
(TO AUDIO C.B.A. P5652)
(TO AUDIO C.B.A. P5651)
(TO AUDIO C.B.A. P4205)
(TO AUDIO C.B.A. P4204)
(TO AUDIO C.B.A. P4203)
(TO AUDIO C.B.A. P4202)
(TO AUDIO C.B.A. P4207)
C4171 1/50V
R4171 PT
J4001 WA5
C4172 PT
TO M III 20 YCA_C
TO M III 40 LINE_VIDEO
TO M I 22 TNR_VIDEO
TO M I 2 IIC_DATA
TO M I 3 IIC_CLK
TP3009 WA7.5
TP3001 WA25
TP3012 WA75
IC3201 MN3885S (CCD 1H DELAY)
AMP
GND
VDD
CLOCK DRIVER
CCD 1H DELAY
L3231 220U
C3234 47/6.3V
R3077 100
C3021 PT
R3078 2200
L3008 WA5
C3039 PT
C3040 PT
C3231 1/50V
R3231 PT
TP3212
C3235 0.01
C3237 0.01
C3232 1000P
TP3010
TO M I 23 TNR_VIDEO_GND
TO M I 60 V_LOCK_PLS
TO M I 12 VSYNC
TO M I 11 C_VIDEO
R3010 10K
C3001 PT
C3005 PT
Q3004 2SB1218A (BUFFER)
R3080 1K
R3079 1K
C3036 0.1
C3037 100/6.3V
C3031 0.1
TP3011
L3007 PT
C3084 0.01
C3085 PT
R3038 2200
R3086 PT
Q3001 2SB1218A (BUFFER)
R3036 1K
R3037 1K
TO M III 61 SW_5V_TV
TO M III 62 VV_VIDEO
C3007 100/6.3V
C3006 0.1
C3015 47/6.3V
C3027 0.01
C3057 0.1
C3056 0.1
R3003 PT
C3016 10/16V
C3008 180P
R3016 120
TP3008
TP3004
C3055 0.1
R3039 PT
R3040 PT
C3035 33P
R3028 2700
C3033 PT
R3022 PT
R3021 PT
C3034 180P
R3023 PT
R3029 150
C3013 0.22
TO M I 38 AT_ENV
IC3001 AN3479FBP-A (VIDEO/AUDIO PROCESS)
C3044 0.01
R3035 10K
C3045 0.47/50V
X3001 VSX50195-T
C3002 2P
C3050 2.2/50V
C3043 3900P
R3032 1200
C3046 2.2/50V
C3003 0.1
R3047 PT
R3043 PT
R3044 PT
R3045 PT
R3046 PT
J3002 WA5
L3010 47U
C3048 0.1
C3047 100/6.3V
R4174 PT
Q4173 PT (SWITCHING BEEPER ON-ON)
C4014 1/50V
R4010 10K
R4011 6800
C4008 47/6.3V
C4009 10/16V
L4002 100U
C4015 PT
C4010 0.033
L4001 15M
C4013 47/6.3V
R4006 680
FL4051 VLFS0014
R4172 1K
TP4002 WA10
C4012 1/50V
R4008 27K
C4011 0.01
R4007 820
R4005 2.2M
C4007 22/6.3V
TP4003
R4052 560
R4175 1K
R4009 47K
R4051 39K
C4051 0.033
D4171 MA165
R4173 PT
Q4171 2SD1819A (SWITCHING BEEPER ON-ON)
TP3003
C3022 0.22
C3004 0.01
R3024 390
L3005 33U
C3023 68P
C4001 0.22
C4003 2700P
C4002 1/50V
R4001 10K
C4006 1000P
R4004 33K
R4012 6800
Q4001 2SB1218A (AUDIO DELAY REC ON-OFF)
R4102 180K
R4101 56K
C4102 5600P
T4101 VLTS0304-1
L4101 470U
Q4101 2SD601A (BIAS OSC)
C4103 0.01
R4103 15K
C4104 0.01
C4105 22/16V
C4106 PT
R4002 330K
C4004 0.01
R4003 220
C4005 22/6.3V
L4005 WA5
R4014 4700
R4015 2200
Q4002 2SD1819ARS (AUDIO DELAY REC ON-OFF)
Q4003 2SD1819ARS (AUDIO DELAY REC ON-OFF)
R3004 PT
R3005 PT
R3014 PT
R3015 PT
TP3006
Q3003 PT (SWITCHING PB-OFF)
J3008 PT
L3002 100U
C3018 100/6.3V
C3024 0.1
TO M I 16 SW_5V_VIDEO
TO M I 17 GND
TP3002 WA15
L4004 10U
L4003 PT
C3010 0.01
L3004 WA5
C3083 1500P
R3083 220
Q3002 2SD1819A (AMP)
R3017 330
C3011 PT
L3001 39U
R3084 1K
TP3005
C3041 0.01
ROTA_SW
PLAY_L
CTL-
CTL+
P4092
P4001
POWER_GND
V_D_REC_12V
HA_SW
HSW
TO M I
(TO HI-FI AUDIO/VIDEO HEAD AMP C.B.A. P3501) P3001
CONTROL HEAD
AUDIO ERASE HEAD
AUDIO HEAD
AUDIO CONTROL HEAD UNIT
FULL ERASE HEAD UNIT

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

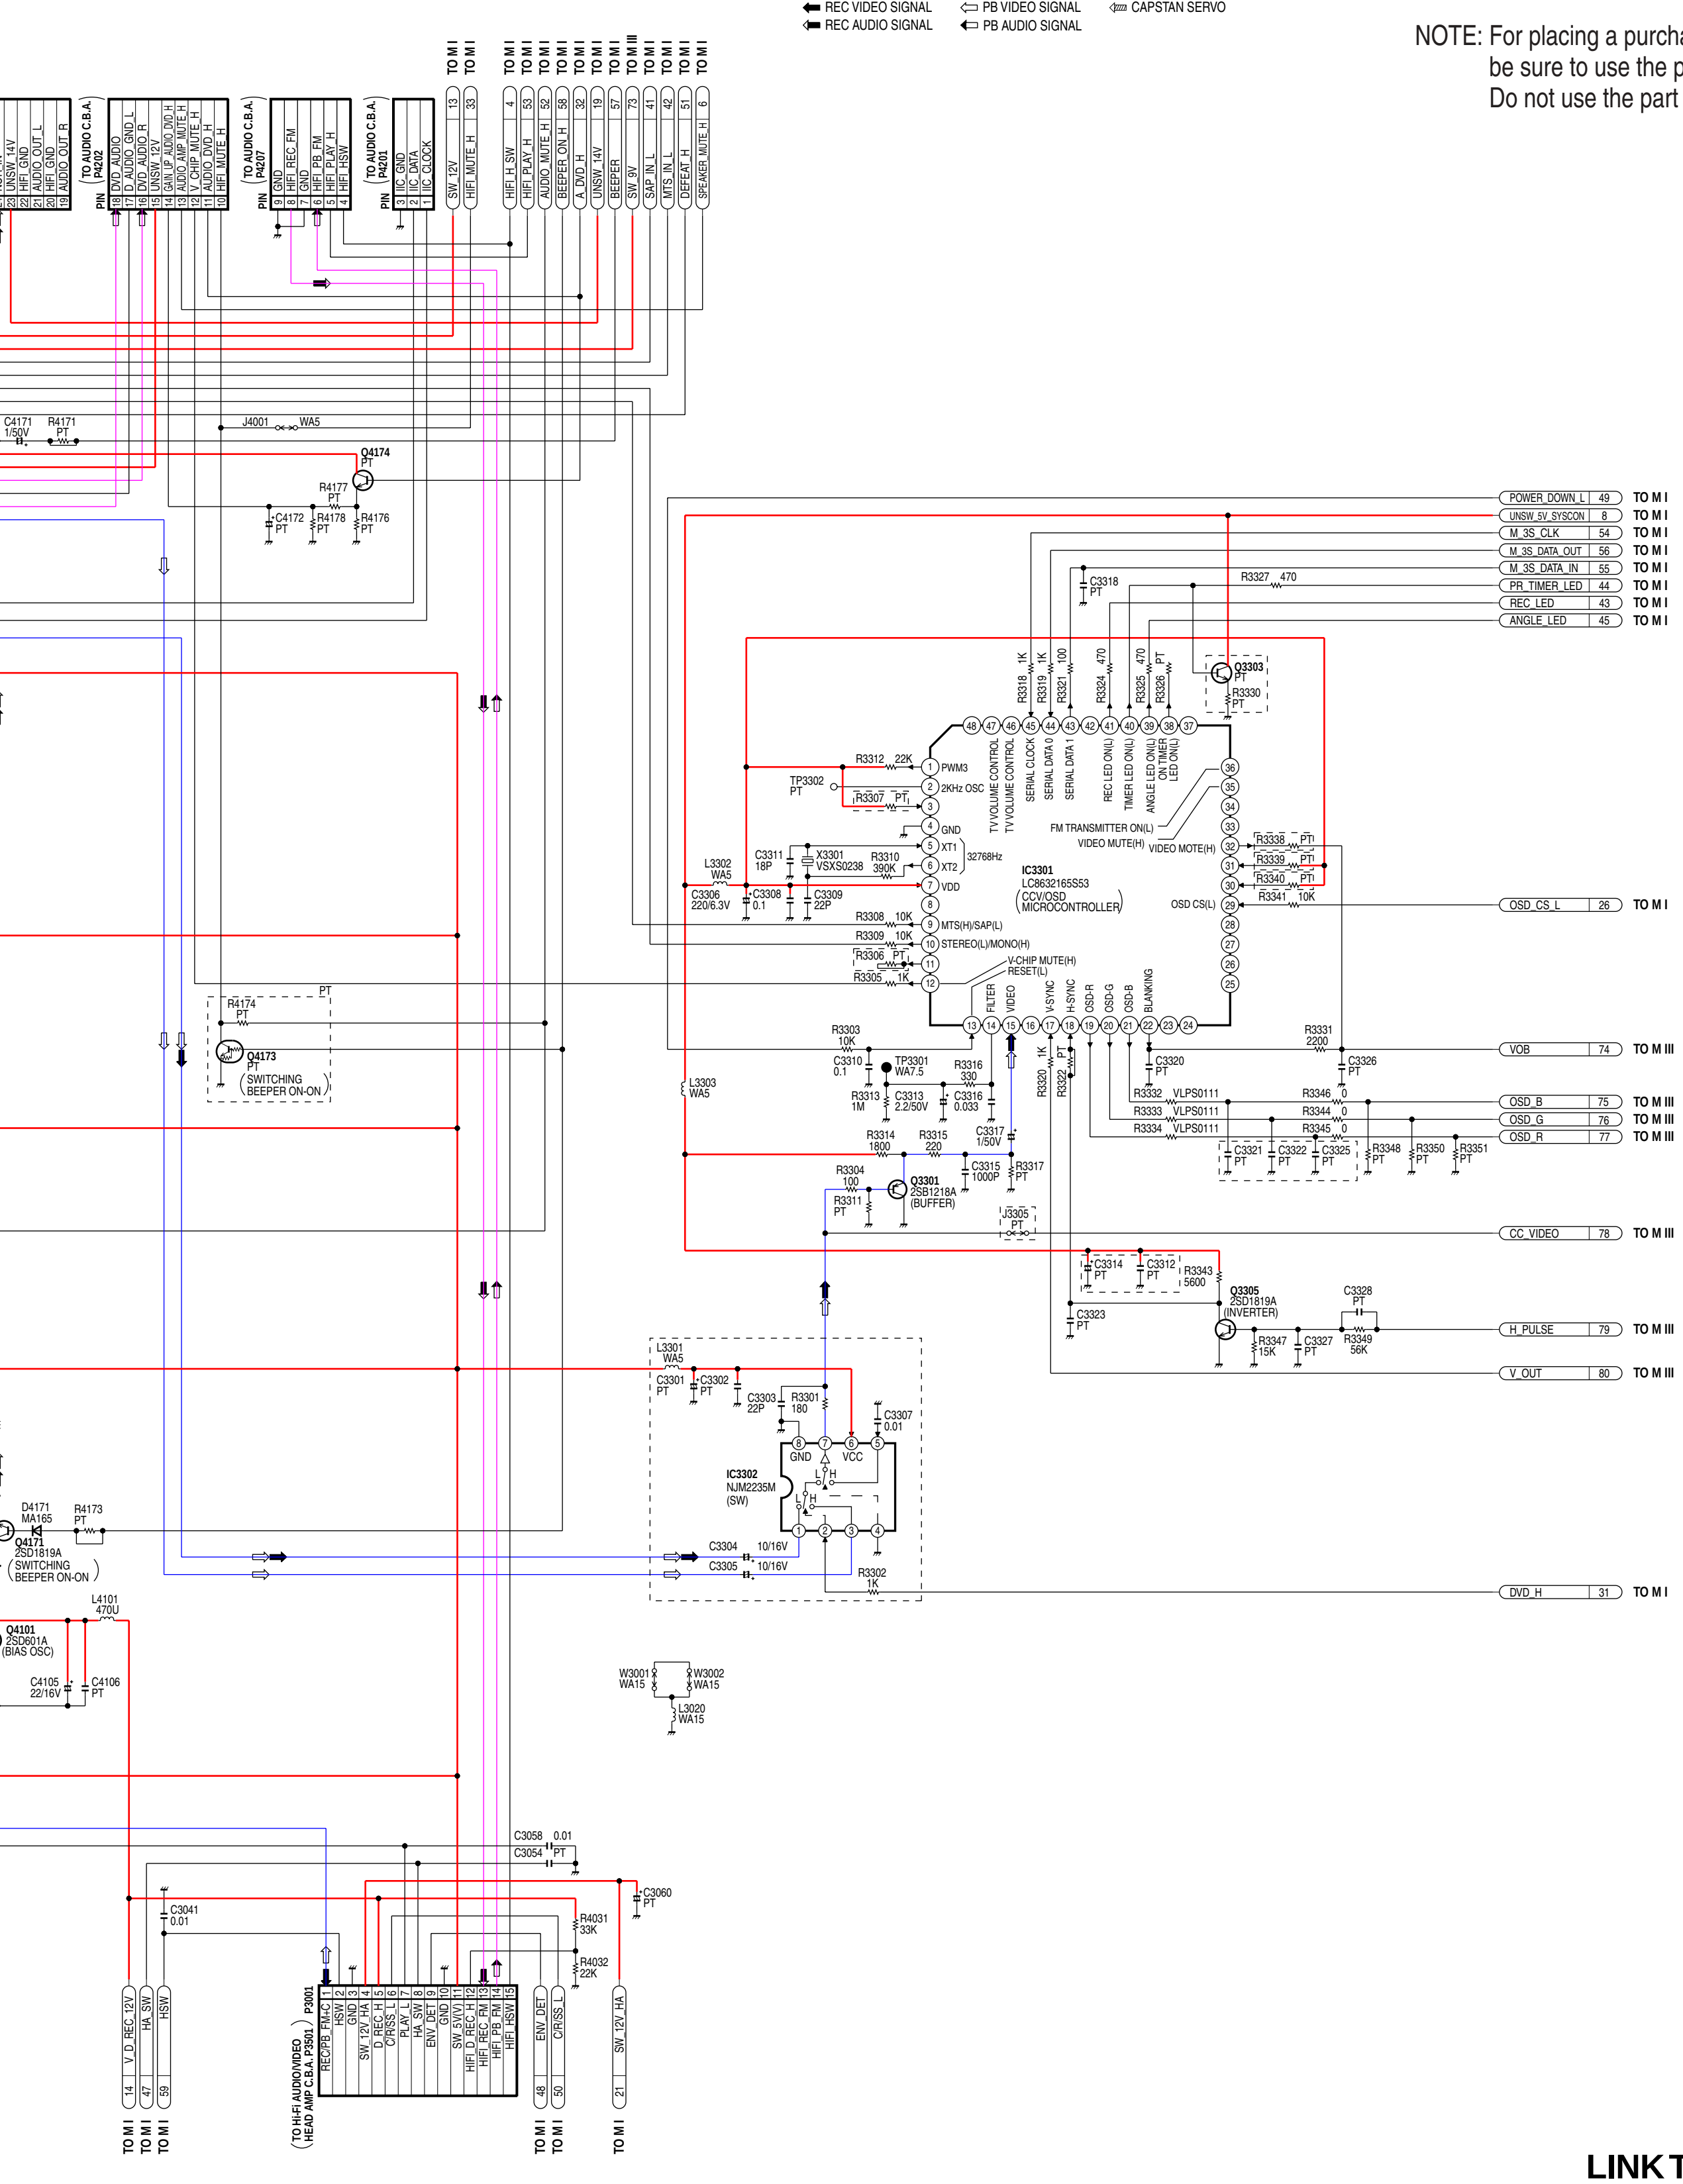

REC VIDEO SIGNAL
REC AUDIO SIGNAL
PB VIDEO SIGNAL
PB AUDIO SIGNAL
CAPSTAN SERVO
TO AUDIO C.B.A. P4202
TO AUDIO C.B.A. P4207
TO AUDIO C.B.A. P4201
UNSW_14V
HIFI_GND
AUDIO_OUT_L
HIFI_GND
AUDIO_OUT_R
DVD_AUDIO
D_AUDIO_GND_L
DVD_AUDIO_R
UNSW_12V
GAIN_UP_AUDIO_DVD_H
AUDIO_AMP_MUTE_H
V_CHIP_MUTE_H
AUDIO_DVD_H
HIFI_MUTE_H
GND
HIFI_REC_FM
GND
HIFI_PB_FM
HIFI_PLAY_H
HIFI_HSW
IIC_GND
IIC_DATA
IIC_CLOCK
SW_12V
HIFI_MUTE_H
HIFI_H_SW
HIFI_PLAY_H
AUDIO_MUTE_H
BEEPER_ON_H
A_DVD_H
UNSW_14V
BEEPER
SW_9V
SAP_IN_L
MTS_IN_L
DEFEAT_H
SPEAKER_MUTE_H
TO M I
TO M III
C4171 1/50V
R4171 PT
J4001 WA5
Q4174 PT
R4177 PT
C4172 PT
R4178 PT
R4176 PT
R4174 PT
Q4173 PT (SWITCHING BEEPER ON-ON)
D4171 MA165
R4173 PT
Q4171 2SD1819A (SWITCHING BEEPER ON-ON)
L4101 470U
Q4101 2SD601A (BIAS OSC)
C4105 22/16V
C4106 PT
POWER_DOWN_L 49
UNSW_5V_SYSCON 8
M_3S_CLK 54
M_3S_DATA_OUT 56
M_3S_DATA_IN 55
PR_TIMER_LED 44
REC_LED 43
ANGLE_LED 45
C3318 PT
R3327 470
Q3303 PT
R3330 PT
R3318 1K
R3319 1K
R3321 100
R3324 470
R3325 470
R3326 PT
TV VOLUME CONTROL
TV VOLUME CONTROL
SERIAL CLOCK
SERIAL DATA 0
SERIAL DATA 1
REC LED ON(L)
TIMER LED ON(L)
ANGLE LED ON(L) ON TIMER LED ON(L)
FM TRANSMITTER ON(L)
VIDEO MUTE(H)
VIDEO MOTE(H)
R3312 22K
PWM3
TP3302 PT
2KHz OSC
R3307 PT
GND
XT1
XT2
32768Hz
C3311 18P
X3301 VSXS0238
R3310 390K
L3302 WA5
VDD
C3306 220/6.3V
C3308 0.1
C3309 22P
IC3301 LC863216SS3 (CCV/OSD MICROCONTROLLER)
OSD CS(L)
R3308 10K
MTS(H)/SAP(L)
R3309 10K
STEREO(L)/MONO(H)
R3306 PT
R3305 1K
V-CHIP MUTE(H)
RESET(L)
R3338 PT
R3339 PT
R3340 PT
R3341 10K
OSD_CS_L 26
FILTER
VIDEO
V-SYNC
H-SYNC
OSD-R
OSD-G
OSD-B
BLANKING
R3303 10K
C3310 0.1
TP3301 WA7.5
R3316 330
R3313 1M
C3313 2.2/50V
C3316 0.033
L3303 WA5
R3320 1K
R3322 PT
C3320 PT
R3331 2200
C3326 PT
VOB 74
R3332 VLPS0111
R3333 VLPS0111
R3334 VLPS0111
R3346 0
R3344 0
R3345 0
OSD_B 75
OSD_G 76
OSD_R 77
C3321 PT
C3322 PT
C3325 PT
R3348 PT
R3350 PT
R3351 PT
R3314 1800
R3315 220
C3317 1/50V
R3304 100
Q3301 2SB1218A (BUFFER)
C3315 1000P
R3317 PT
R3311 PT
J3305 PT
CC_VIDEO 78
C3314 PT
C3312 PT
R3343 5600
Q3305 2SD1819A (INVERTER)
C3328 PT
C3323 PT
R3347 15K
C3327 PT
R3349 56K
H_PULSE 79
V_OUT 80
L3301 WA5
C3301 PT
C3302 PT
C3303 22P
R3301 180
C3307 0.01
GND
VCC
IC3302 NJM2235M (SW)
C3304 10/16V
C3305 10/16V
R3302 1K
DVD_H 31
W3001 WA15
W3002 WA15
L3020 WA15
C3058 0.01
C3054 PT
C3060 PT
C3041 0.01
R4031 33K
R4032 22K
V_D_REC_12V 14
HA_SW 47
HSW 59
TO HI-FI AUDIO/VIDEO HEAD AMP C.B.A. P3501 P3001
REC/PB_FM-C
HSW
GND
SW_12V_HA
D_REC_H
CRSS_L
PLAY_L
HA_SW
ENV_DET
GND
SW_5V(V)
HIFI_D_REC_H
HIFI_REC_FM
HIFI_PB_FM
HIFI_HSW
ENV_DET 48
CRSS_L 50
SW_12V_HA 21

LINK TO VOLTAGE CHART

LSJB2021
PV-DM2792/PV-DM2792-K
MAIN II SCHEMATIC DIAGRAM

MAIN III (TV Y/C PROCESS) SCHEMATIC DIAGRAM

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN ⚠ HAV
SPECIAL CHARACTERISTICS IMPORTANT FOR SA
WHEN REPLACING ANY OF THESE COMPONENTS
USE ONLY THE SPECIFIED PARTS.

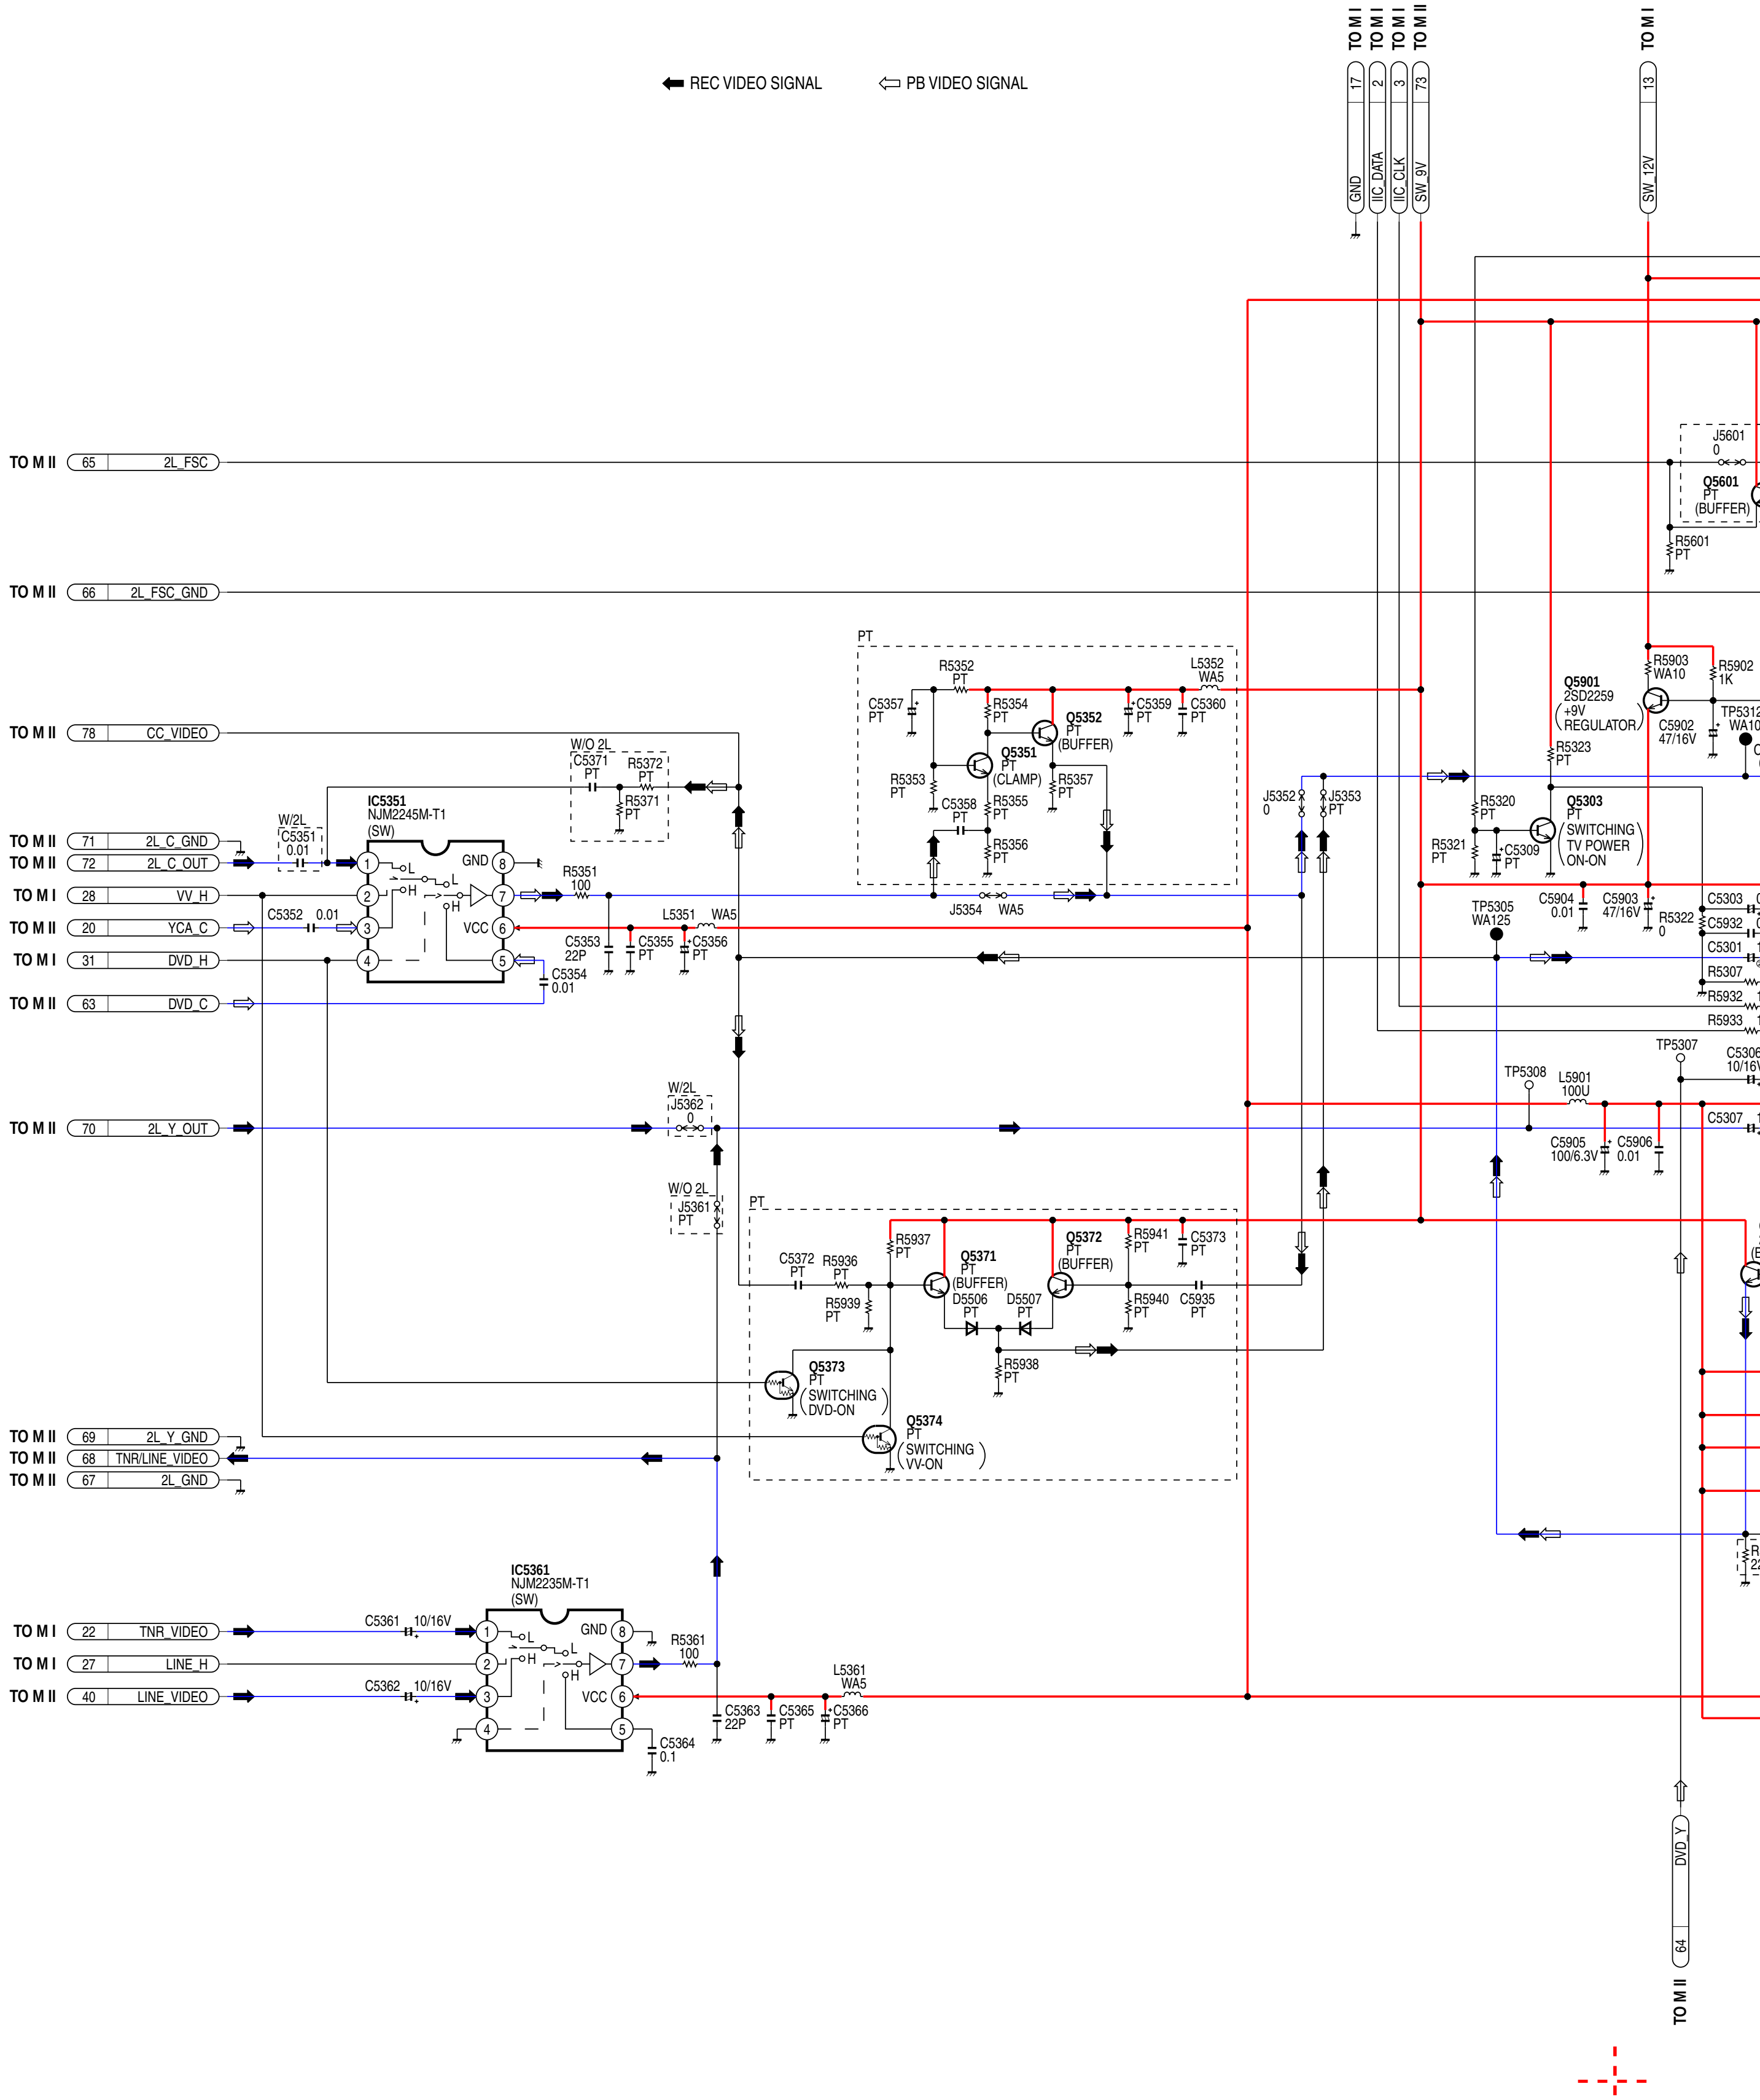

REC VIDEO SIGNAL
PB VIDEO SIGNAL
TO M I 17 GND
TO M I 2 IIC_DATA
TO M I 3 IIC_CLK
TO M II 73 SW_9V
TO M I 13 SW_12V
TO M II 65 2L_FSC
TO M II 66 2L_FSC_GND
TO M II 78 CC_VIDEO
TO M II 71 2L_C_GND
TO M II 72 2L_C_OUT
TO M I 28 VV_H
TO M II 20 YCA_C
TO M I 31 DVD_H
TO M II 63 DVD_C
TO M II 70 2L_Y_OUT
TO M II 69 2L_Y_GND
TO M II 68 TNR/LINE_VIDEO
TO M II 67 2L_GND
TO M I 22 TNR_VIDEO
TO M I 27 LINE_H
TO M I 40 LINE_VIDEO
TO M II 64 DVD_Y
IC5351 NJM2245M-T1 (SW)
GND VCC L H
W/2L C5351 0.01
C5352 0.01
W/O 2L C5371 PT
R5372 PT
R5371 PT
R5351 100
L5351 WA5
C5353 22P
C5355 PT
C5356 PT
C5354 0.01
PT
R5352 PT
L5352 WA5
C5357 PT
R5354 PT
Q5352 PT (BUFFER)
C5359 PT
C5360 PT
Q5351 PT (CLAMP)
R5353 PT
C5358 PT
R5355 PT
R5357 PT
R5356 PT
J5354 WA5
J5352 0
J5353 PT
W/2L J5362 0
W/O 2L J5361 PT
C5372 PT
R5936 PT
R5937 PT
Q5371 PT (BUFFER)
Q5372 PT (BUFFER)
R5941 PT
C5373 PT
R5939 PT
D5506 PT
D5507 PT
R5940 PT
C5935 PT
R5938 PT
Q5373 PT (SWITCHING DVD-ON)
Q5374 PT (SWITCHING VV-ON)
IC5361 NJM2235M-T1 (SW)
C5361 10/16V
C5362 10/16V
R5361 100
L5361 WA5
C5363 22P
C5365 PT
C5366 PT
C5364 0.1
J5601 0
Q5601 PT (BUFFER)
R5601 PT
R5903 WA10
R5902 1K
Q5901 2SD2259 +9V REGULATOR
C5902 47/16V
TP5312 WA10
R5323 PT
R5320 PT
Q5303 PT (SWITCHING TV POWER ON-ON)
R5321 PT
C5309 PT
TP5305 WA125
C5904 0.01
C5903 47/16V
R5322 0
C5303
C5932
C5301
R5307
R5932
R5933
TP5307
C5306 10/16V
TP5308
L5901 100U
C5905 100/6.3V
C5906 0.01
C5307

FETY NOTICE:
DENTIFIED BY THE SIGN ⚠ HAVE
CTERISTICS IMPORTANT FOR SAFETY.
NG ANY OF THESE COMPONENTS,
SPECIFIED PARTS.

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

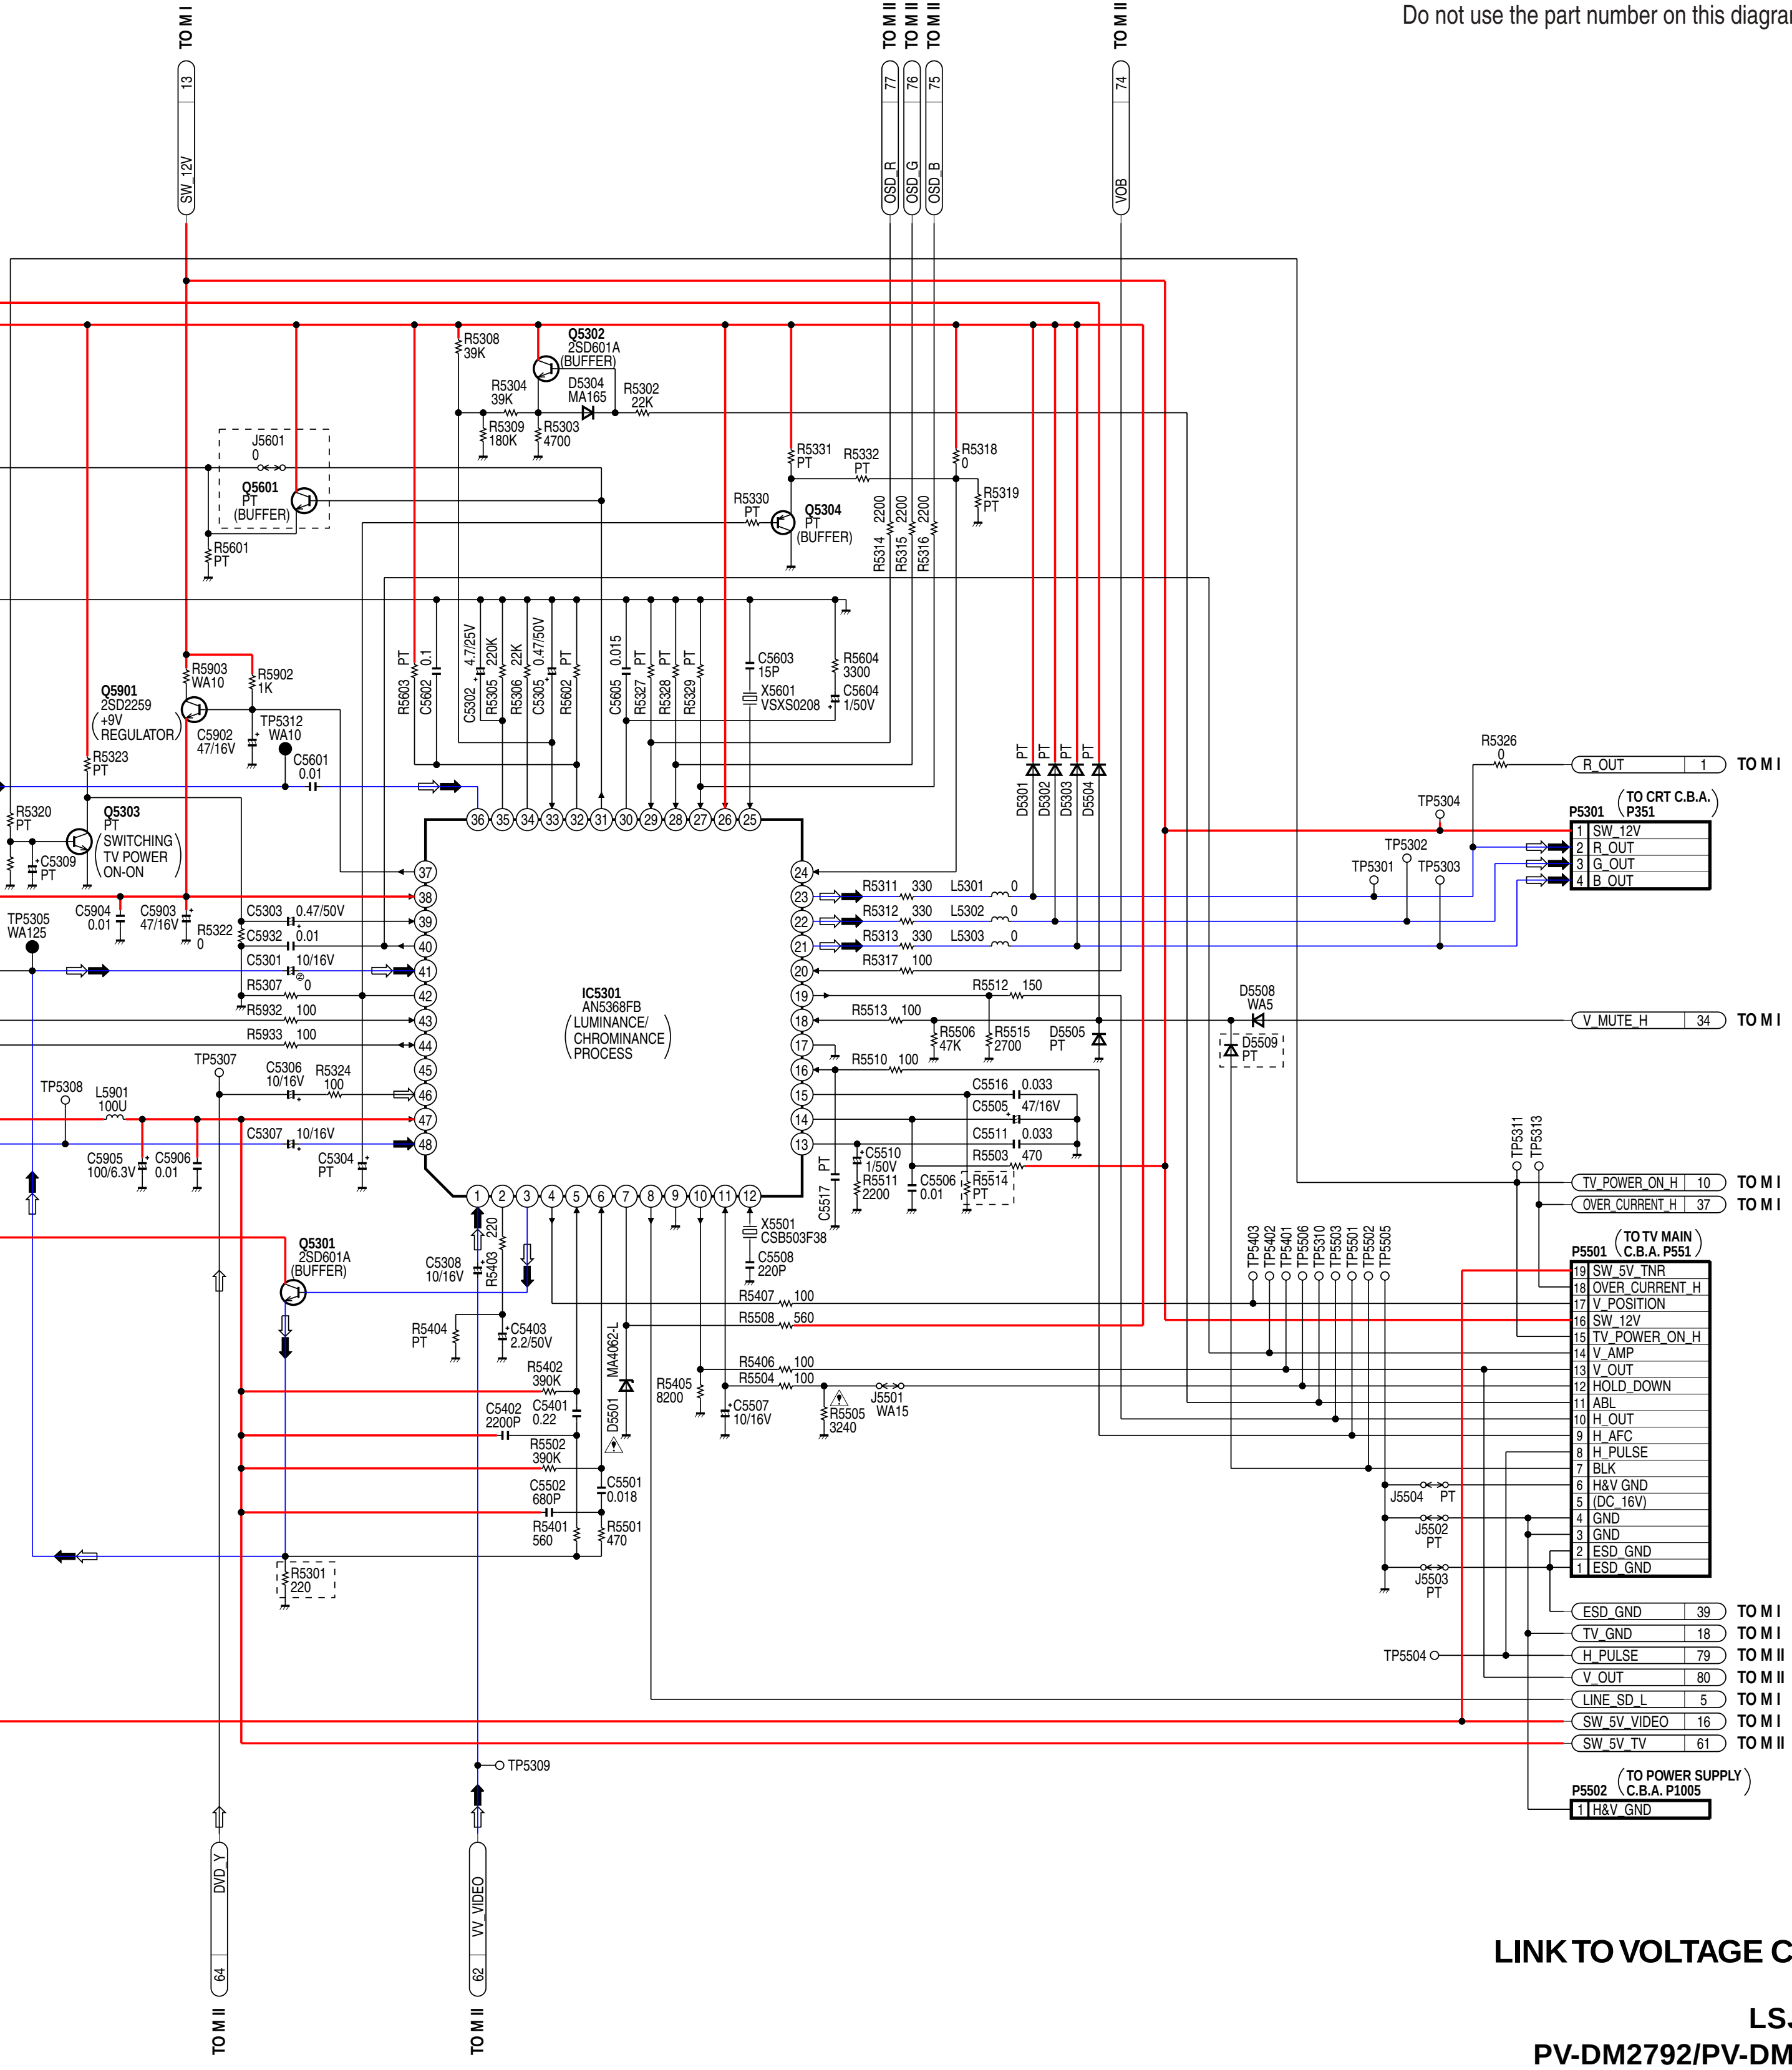
TO M I
SW_12V 13
TO M II
OSD_R 77
OSD_G 76
OSD_B 75
VOB 74
Q5302 2SD601A (BUFFER)
D5304 MA165
R5308 39K
R5304 39K
R5302 22K
R5309 180K
R5303 4700
J5601 0
Q5601 PT (BUFFER)
R5601 PT
R5331 PT
R5332 PT
R5318 0
R5319 PT
R5330 PT
Q5304 PT (BUFFER)
R5314 2200
R5315 2200
R5316 2200
Q5901 2SD2259 (+9V REGULATOR)
R5903 WA10
R5902 1K
TP5312 WA10
C5902 47/16V
C5601 0.01
R5323 PT
R5320 PT
Q5303 PT (SWITCHING TV POWER ON-ON)
C5309 PT
TP5305 WA125
C5904 0.01
C5903 47/16V
R5322 0
R5603 PT
C5602 0.1
C5302 4.7/25V
R5305 220K
R5306 22K
C5305 0.47/50V
R5602 PT
C5605 0.015
R5327 PT
R5328 PT
R5329 PT
C5603 15P
X5601 VSXS0208
R5604 3300
C5604 1/50V
D5301 PT
D5302 PT
D5303 PT
D5504 PT
IC5301 AN5368FB (LUMINANCE/ CHROMINANCE PROCESS)
C5303 0.47/50V
C5932 0.01
C5301 10/16V
R5307 0
R5932 100
R5933 100
TP5307
C5306 10/16V
R5324 100
TP5308
L5901 100U
C5307 10/16V
C5304 PT
C5905 100/6.3V
C5906 0.01
R5311 330 L5301 0
R5312 330 L5302 0
R5313 330 L5303 0
R5317 100
R5512 150
R5513 100
R5506 47K
R5515 2700
D5505 PT
R5510 100
C5516 0.033
C5505 47/16V
C5511 0.033
R5503 470
C5510 1/50V
R5511 2200
C5506 0.01
R5514 PT
C5517 PT
X5501 CSB503F38
C5508 220P
R5407 100
R5508 560
R5406 100
R5504 100
R5405 8200
C5507 10/16V
R5505 3240
J5501 WA15
D5501 MA4062-L
Q5301 2SD601A (BUFFER)
C5308 10/16V
R5403 220
R5404 PT
C5403 2.2/50V
R5402 390K
C5402 2200P
C5401 0.22
R5502 390K
C5502 680P
C5501 0.018
R5401 560
R5501 470
R5301 220
TP5309
R5326 0
R_OUT 1 TO M I
TP5304
TP5302
TP5301
TP5303
P5301 (TO CRT C.B.A. P351)
1 SW_12V
2 R_OUT
3 G_OUT
4 B_OUT
D5508 WA5
D5509 PT
V_MUTE_H 34 TO M I
TP5311
TP5313
TV_POWER_ON_H 10 TO M I
OVER_CURRENT_H 37 TO M I
TP5403 TP5402 TP5401 TP5506 TP5310 TP5503 TP5501 TP5502 TP5505
P5501 (TO TV MAIN C.B.A. P551)
19 SW_5V_TNR
18 OVER_CURRENT_H
17 V_POSITION
16 SW_12V
15 TV_POWER_ON_H
14 V_AMP
13 V_OUT
12 HOLD_DOWN
11 ABL
10 H_OUT
9 H_AFC
8 H_PULSE
7 BLK
6 H&V GND
5 (DC_16V)
4 GND
3 GND
2 ESD_GND
1 ESD_GND
J5504 PT
J5502 PT
J5503 PT
TP5504
ESD_GND 39 TO M I
TV_GND 18 TO M I
H_PULSE 79 TO M II
V_OUT 80 TO M II
LINE_SD_L 5 TO M I
SW_5V_VIDEO 16 TO M I
SW_5V_TV 61 TO M II
P5502 (TO POWER SUPPLY C.B.A. P1005)
1 H&V_GND
DVD_Y 64 TO M II
VV_VIDEO 62 TO M II

LINK TO VOLTAGE CHART

LSJB2021
PV-DM2792/PV-DM2792-K
MAIN III SCHEMATIC DIAGRAM

MAIN IV (POWER SUPPLY) SCHEMATIC DIAGRAM

CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,
REPLACE ONLY WITH THE SAME TYPE 1.6A 125/250V FUSE.
ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES
D'T INCENDIE N'I UTILISERQUE DES FUSIBLE DE MÉME
TYPE 1.6A 125/250V

1.6A 125/250V

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN ⚠ HAVE
SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY.
WHEN REPLACING ANY OF THESE COMPONENTS,
USE ONLY THE SPECIFIED PARTS.

HOT CIRCUIT. BE CAREFUL AND USE AN ISOLATION TRANSFORMER WHEN SERVICING.

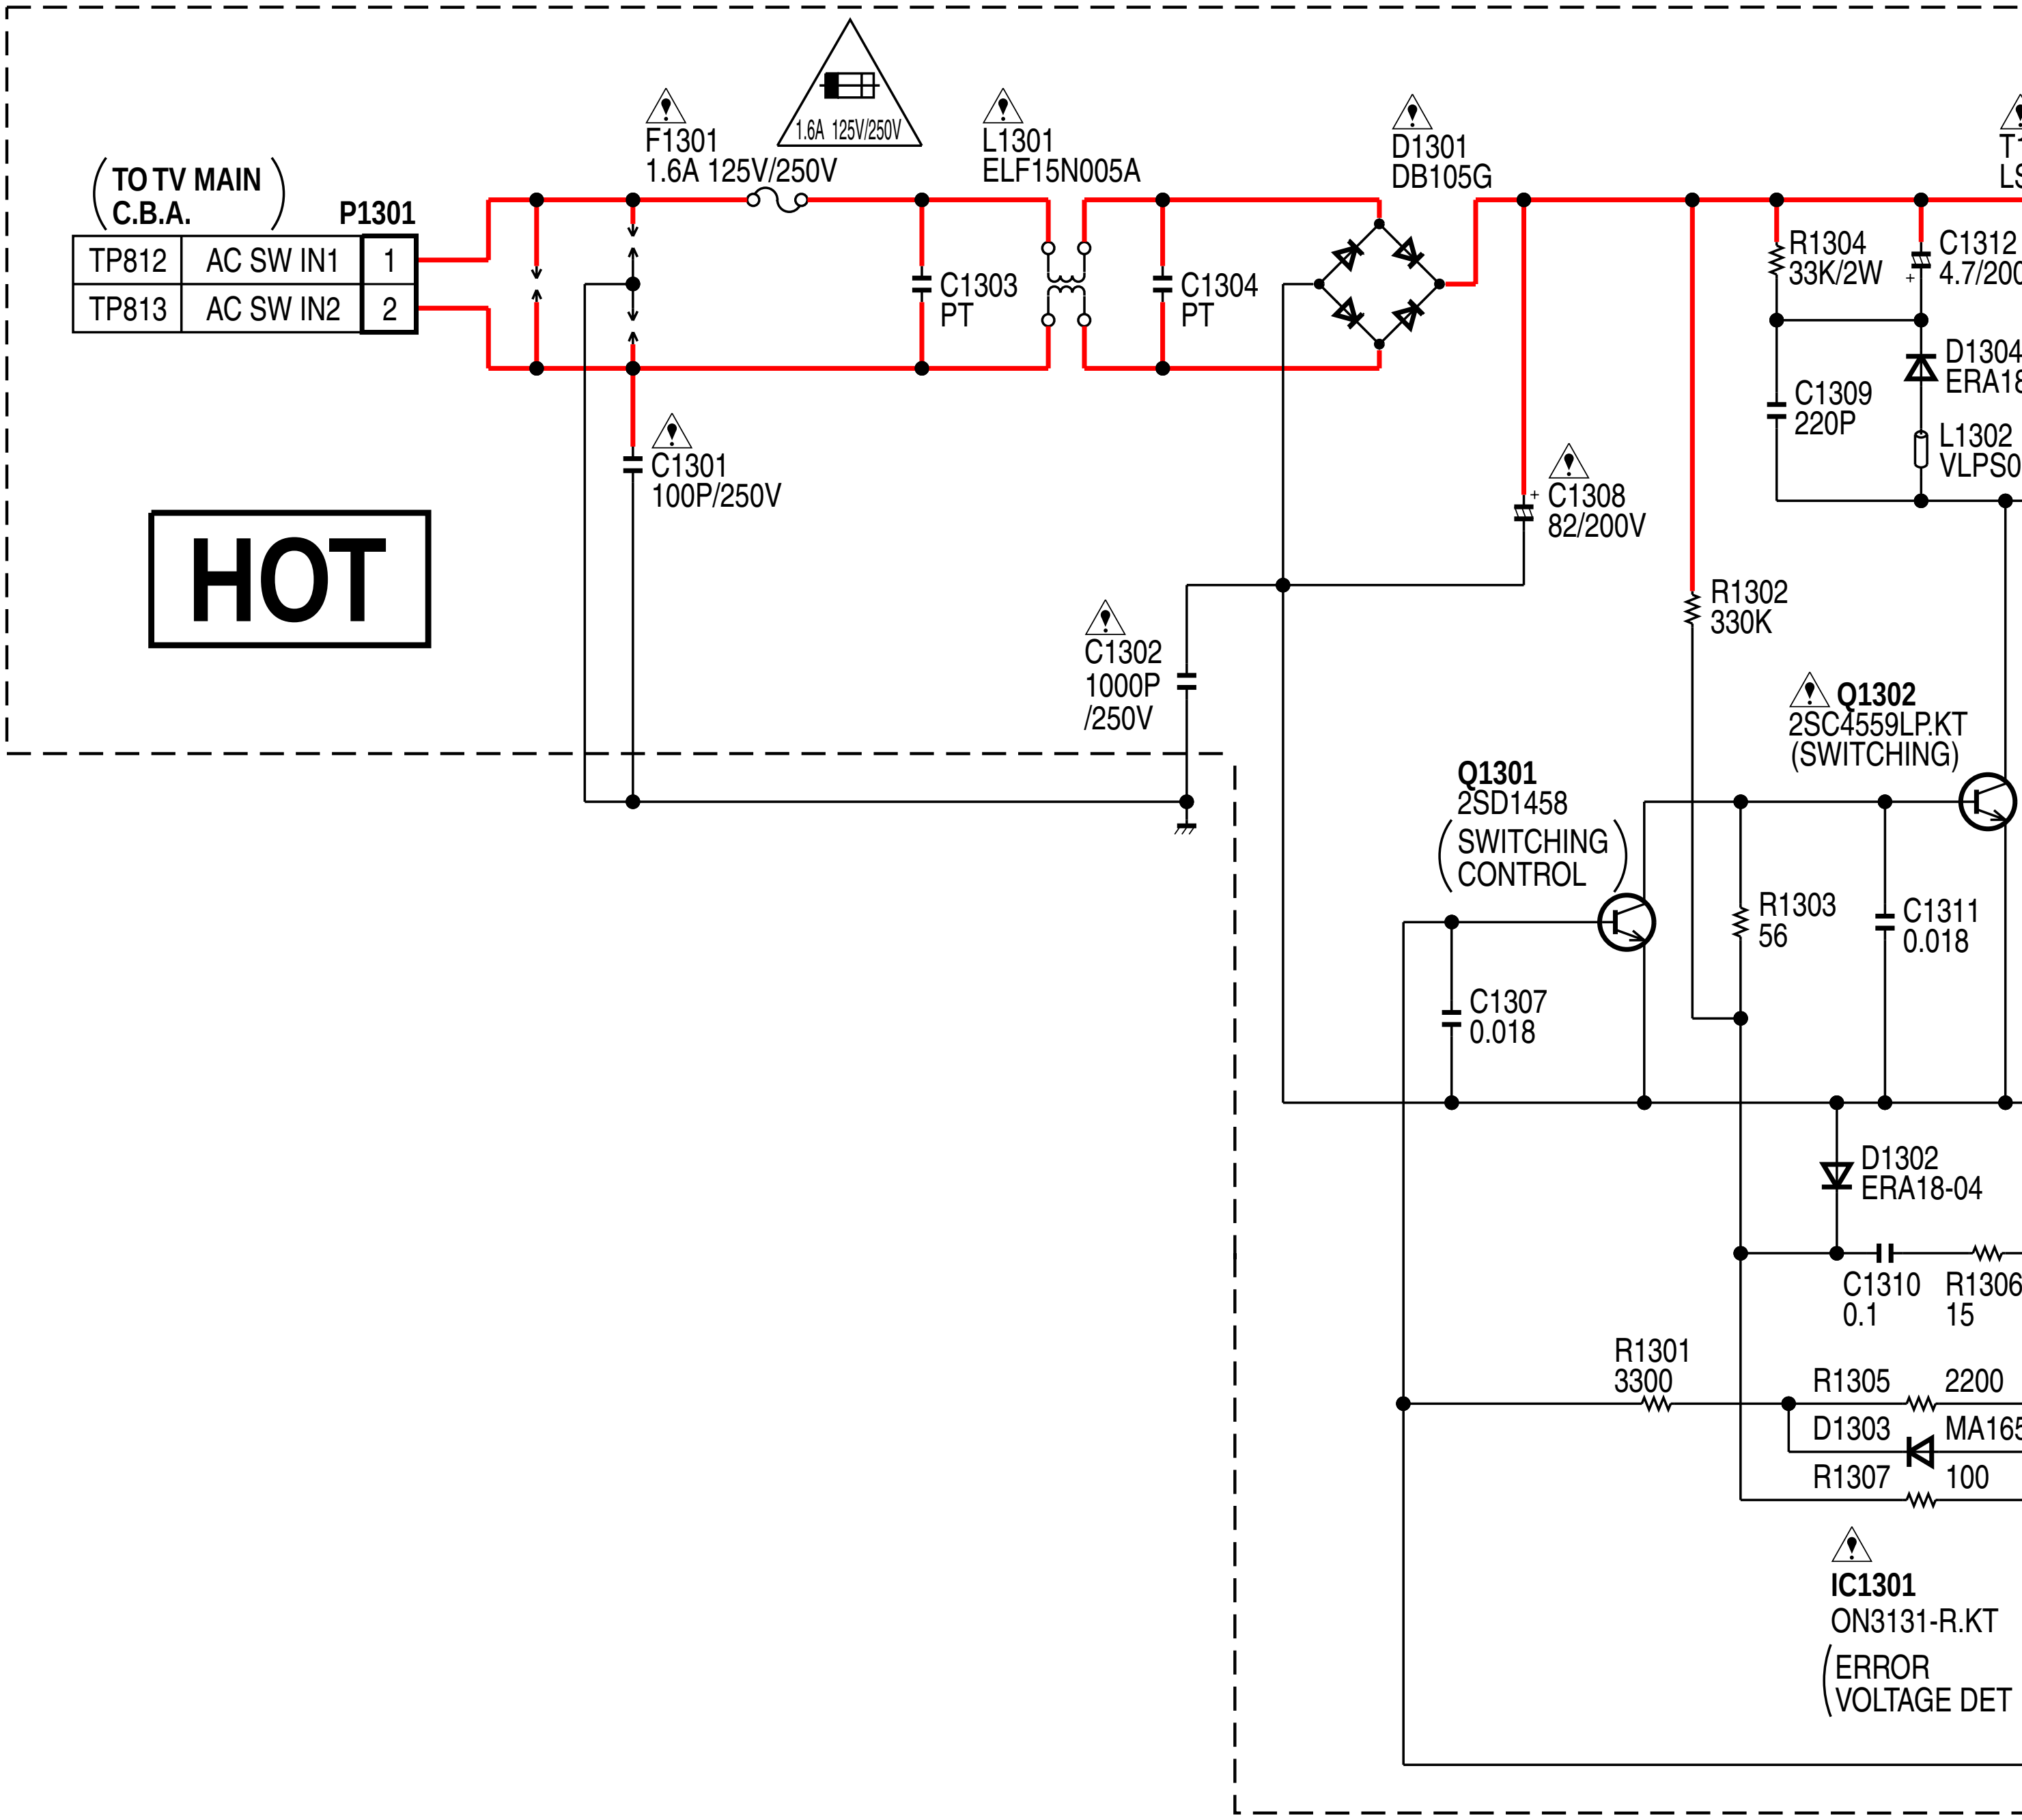
TO TV MAIN C.B.A.
P1301
TP812
AC SW IN1
1
TP813
AC SW IN2
2
HOT
F1301
1.6A 125V/250V
1.6A 125V/250V
L1301
ELF15N005A
D1301
DB105G
C1303
PT
C1304
PT
C1301
100P/250V
C1302
1000P
/250V
C1308
82/200V
R1304
33K/2W
C1312
4.7/200
D1304
ERA18
C1309
220P
L1302
VLPS0
R1302
330K
Q1302
2SC4559LP.KT
(SWITCHING)
Q1301
2SD1458
(SWITCHING CONTROL)
R1303
56
C1311
0.018
C1307
0.018
D1302
ERA18-04
C1310
0.1
R1306
15
R1301
3300
R1305
2200
D1303
MA165
R1307
100
IC1301
ON3131-R.KT
(ERROR VOLTAGE DET

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

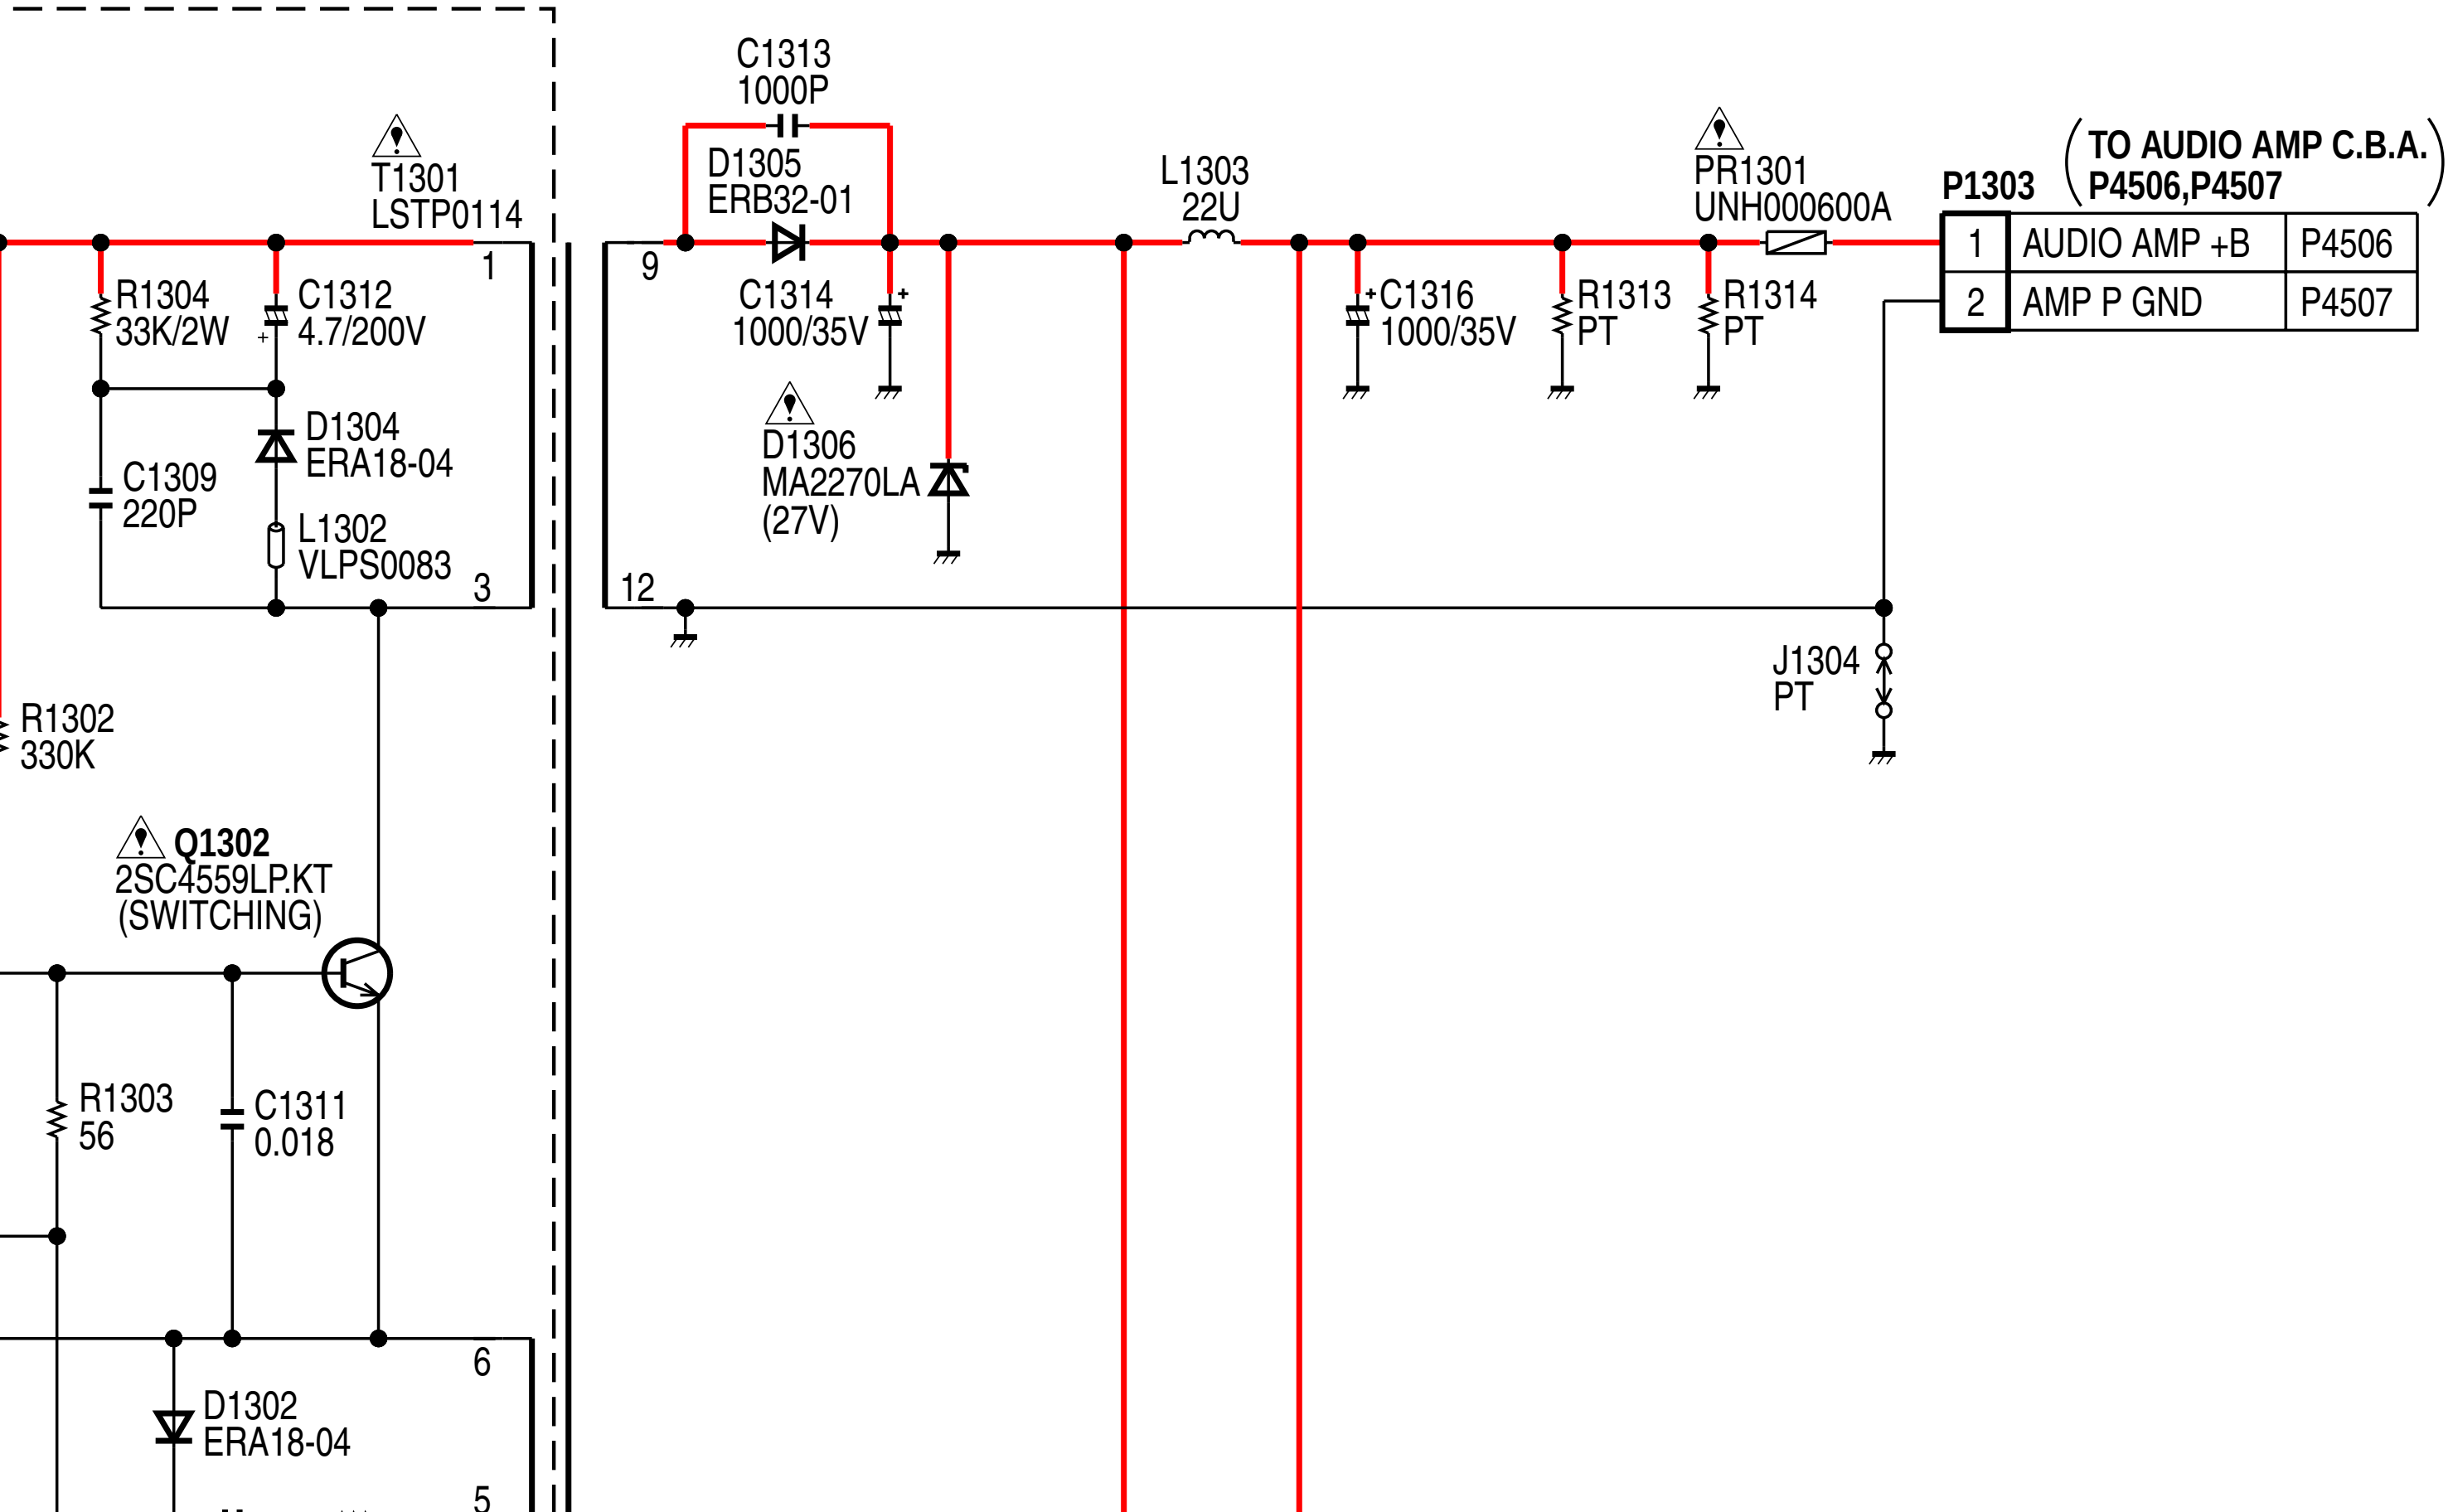
C1313
1000P
D1305
ERB32-01
T1301
LSTP0114
L1303
22U
PR1301
UNH000600A
P1303
TO AUDIO AMP C.B.A.
P4506,P4507
1 AUDIO AMP +B P4506
2 AMP P GND P4507
1
9
R1304
33K/2W
C1312
4.7/200V
C1314
1000/35V
C1316
1000/35V
R1313
PT
R1314
PT
D1304
ERA18-04
C1309
220P
D1306
MA2270LA
(27V)
L1302
VLPS0083
3
12
J1304
PT
R1302
330K
Q1302
2SC4559LP.KT
(SWITCHING)
R1303
56
C1311
0.018
6
D1302
ERA18-04
5

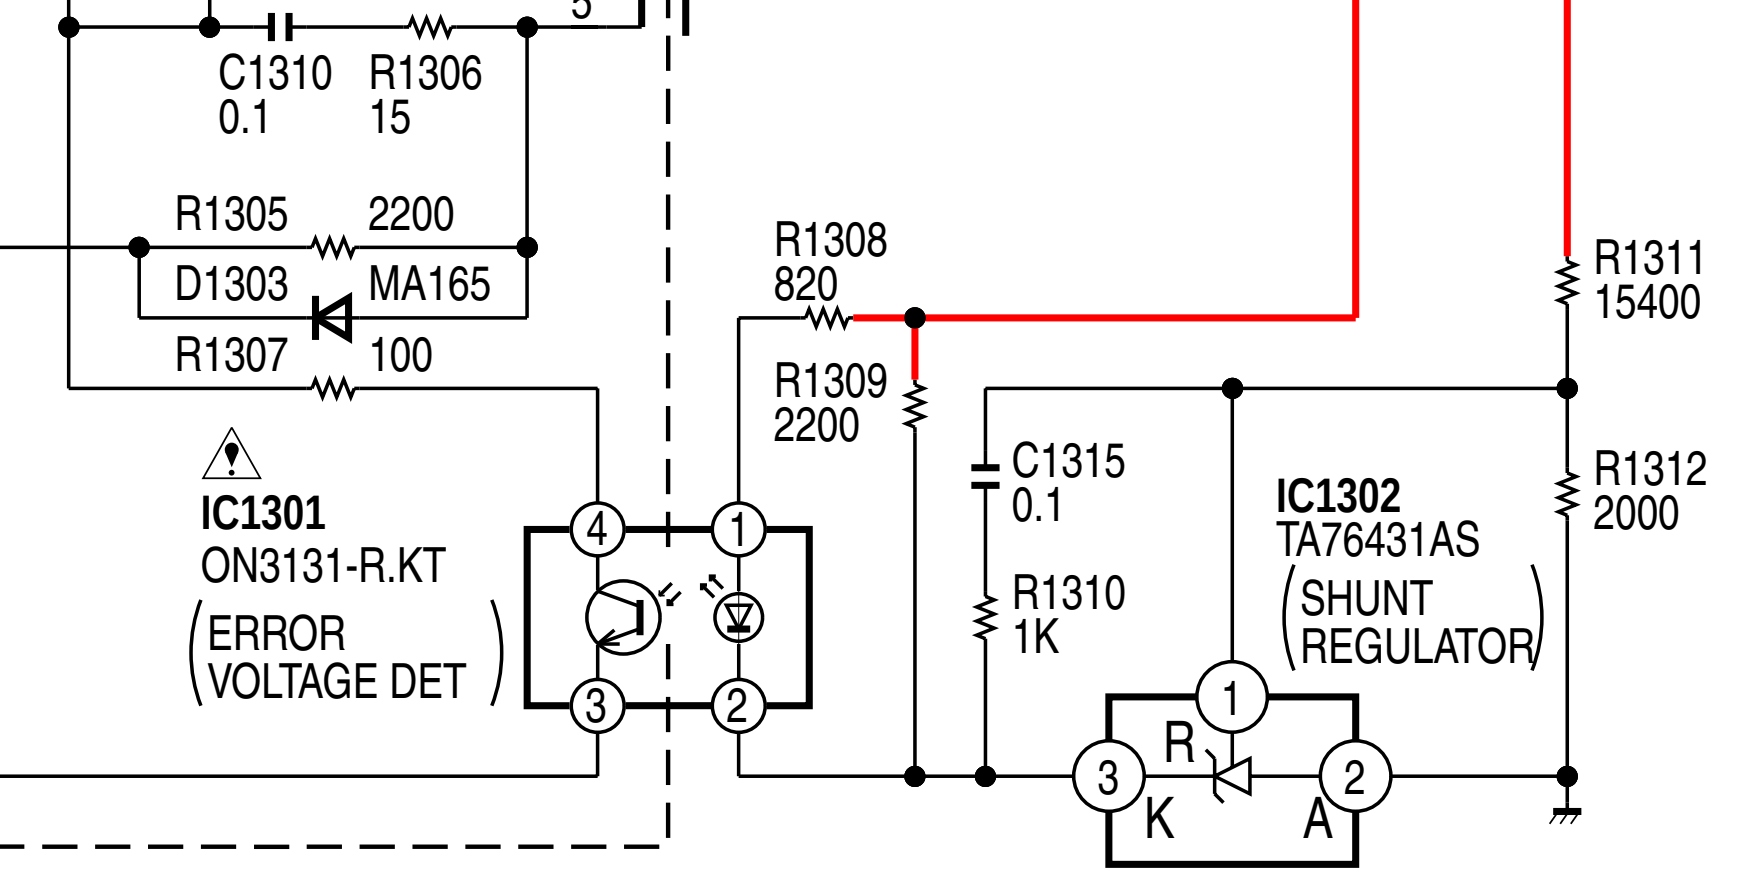
C1310
0.1
R1306
15
R1305
2200
D1303
MA165
R1307
100
R1308
820
R1309
2200
R1311
15400
C1315
0.1
R1310
1K
R1312
2000
IC1301
ON3131-R.KT
(ERROR VOLTAGE DET)
4
1
3
2
IC1302
TA76431AS
(SHUNT REGULATOR)
R
K
A
1
3
2

IC1302 SHUNT REGULATOR
IC- DETAIL BLOCK DIAGRAM

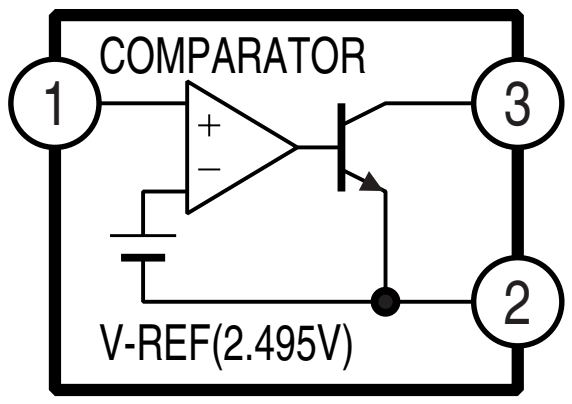
COMPARATOR
1
3
2
+
−
V-REF(2.495V)

LINK TO VOLTAGE CHART

8.3. AUDIO SCHEMATIC DIAGRAMS

AUDIO I SCHEMATIC DIAGRAM

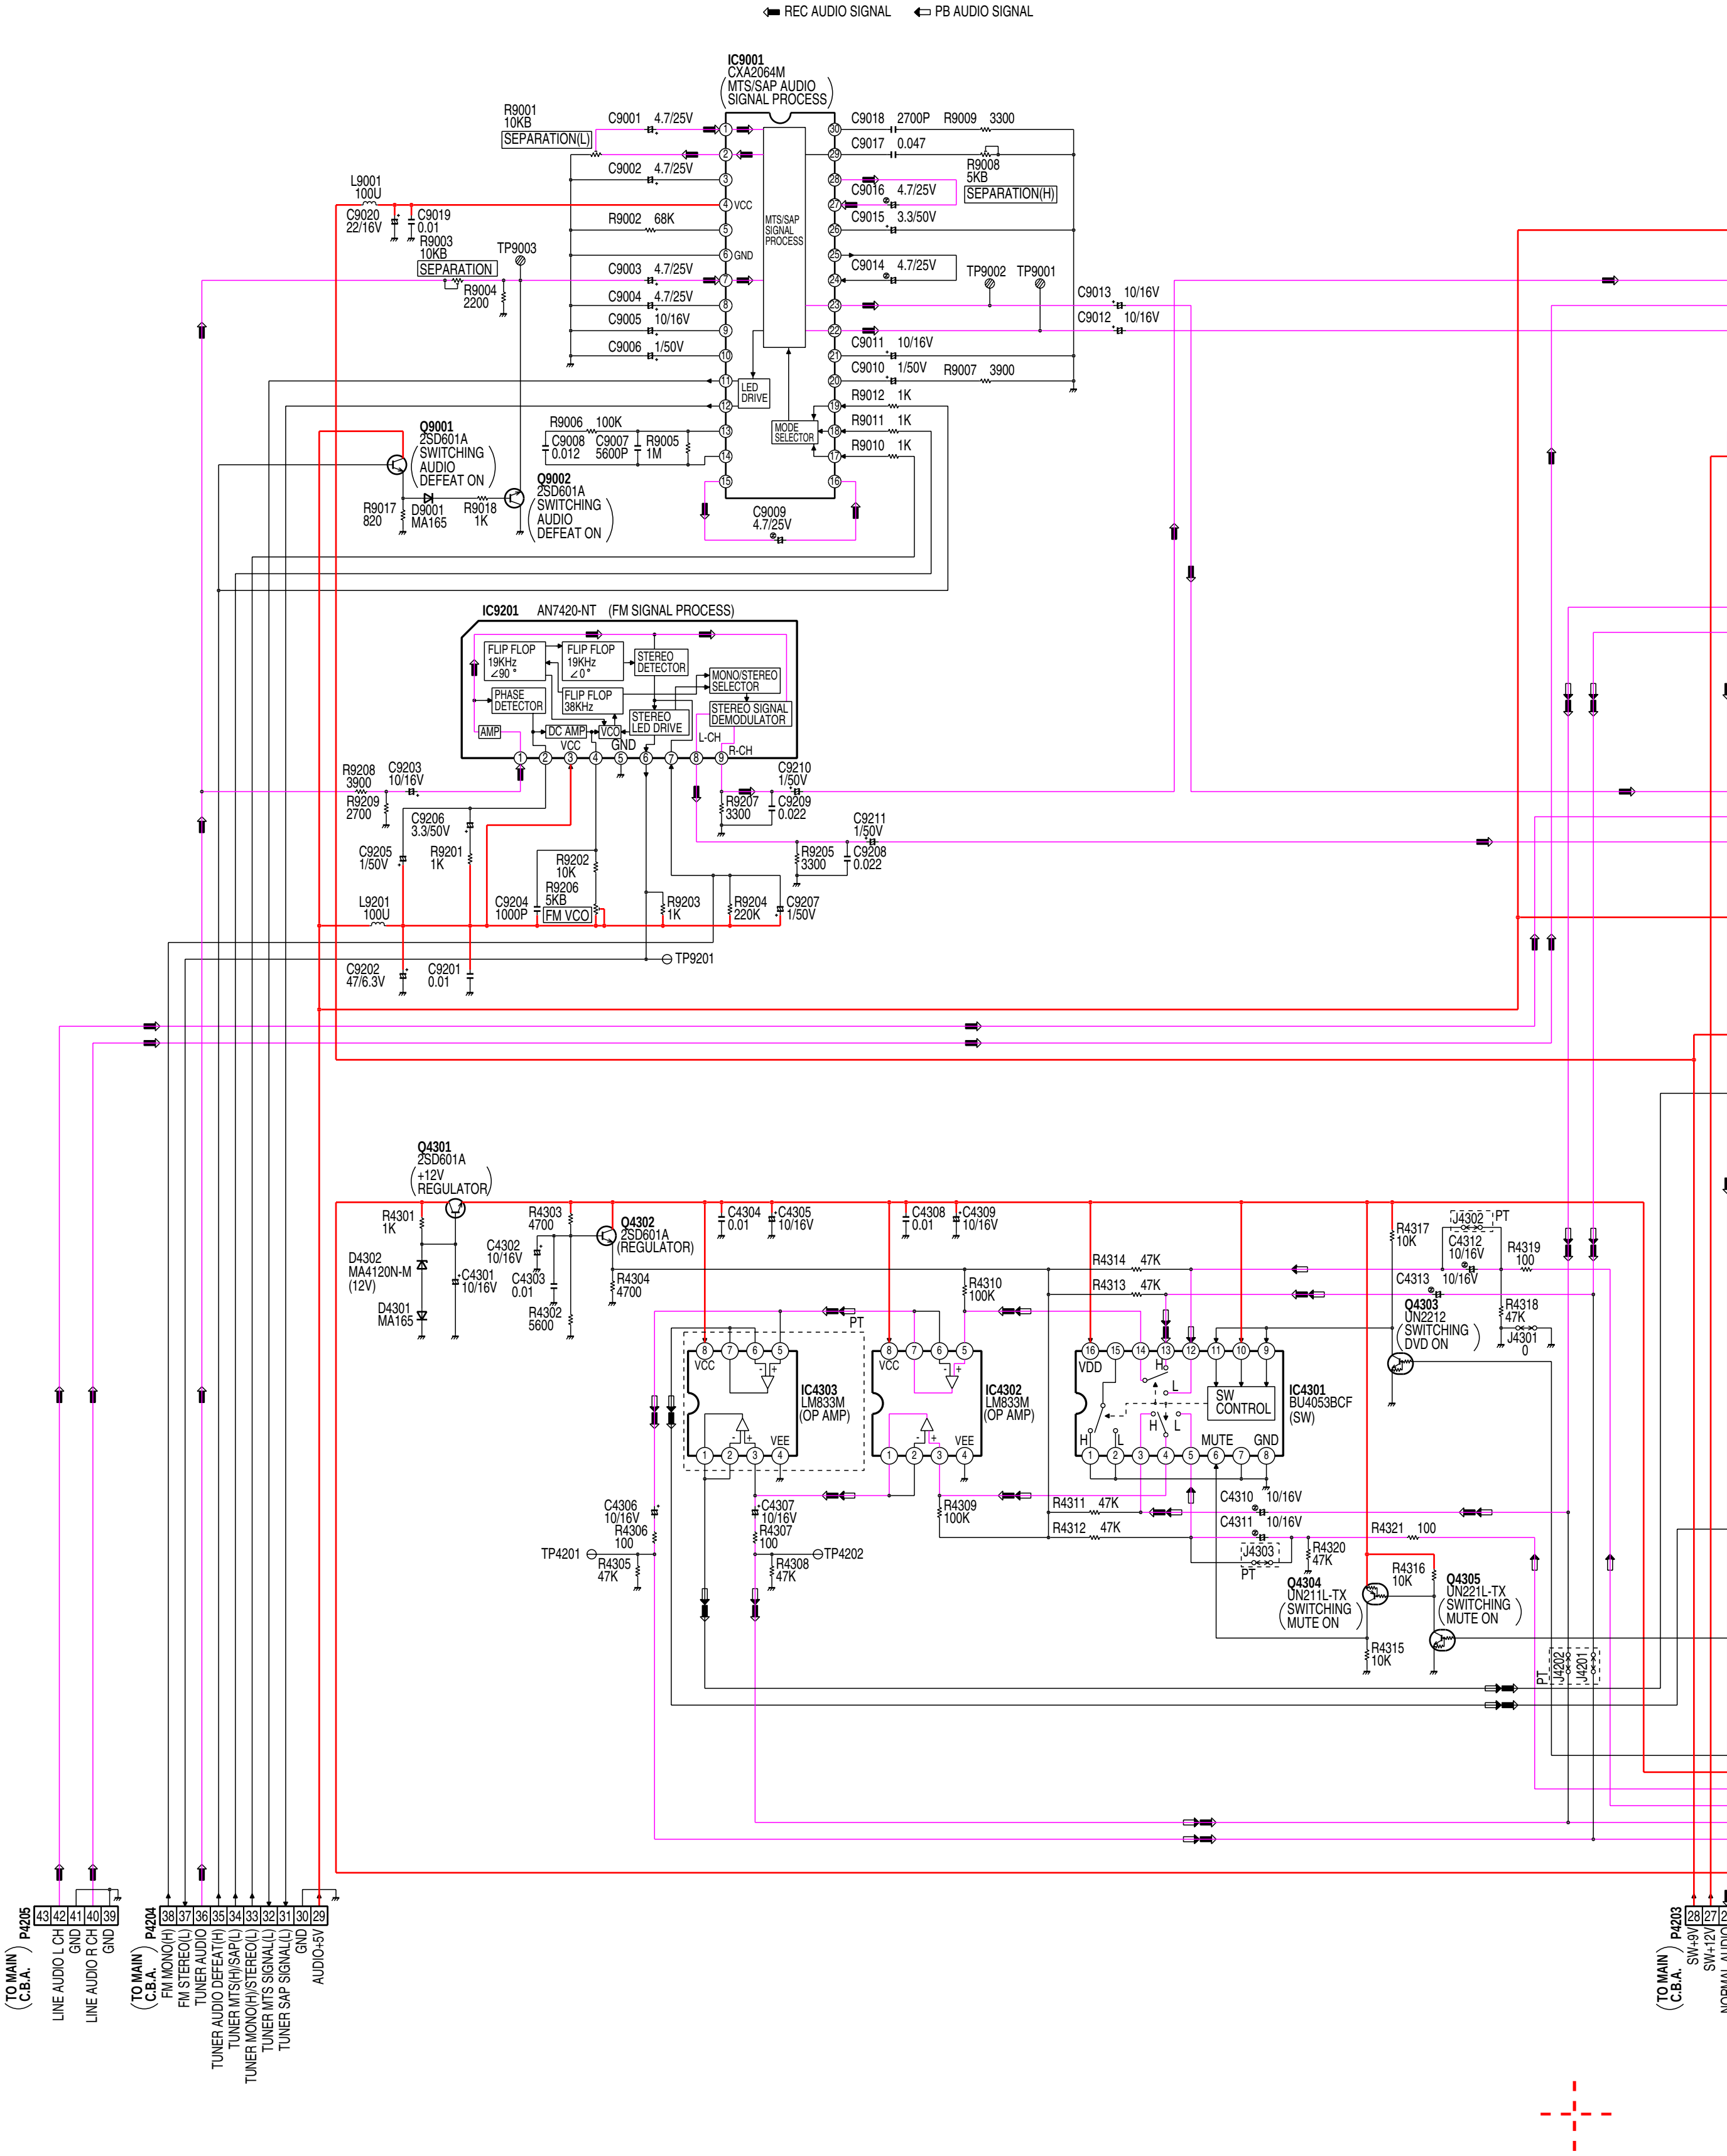

REC AUDIO SIGNAL
PB AUDIO SIGNAL
IC9001
CXA2064M
(MTS/SAP AUDIO SIGNAL PROCESS)
MTS/SAP SIGNAL PROCESS
LED DRIVE
MODE SELECTOR
VCC
GND
R9001 10KB
SEPARATION(L)
C9001 4.7/25V
C9002 4.7/25V
R9002 68K
C9003 4.7/25V
C9004 4.7/25V
C9005 10/16V
C9006 1/50V
L9001 100U
C9020 22/16V
C9019 0.01
R9003 10KB
SEPARATION
TP9003
R9004 2200
C9018 2700P
R9009 3300
C9017 0.047
R9008 5KB
SEPARATION(H)
C9016 4.7/25V
C9015 3.3/50V
C9014 4.7/25V
TP9002
TP9001
C9013 10/16V
C9012 10/16V
C9011 10/16V
C9010 1/50V
R9007 3900
R9012 1K
R9011 1K
R9010 1K
R9006 100K
C9008 0.012
C9007 5600P
R9005 1M
C9009 4.7/25V
Q9001
2SD601A
SWITCHING
(AUDIO DEFEAT ON)
Q9002
2SD601A
SWITCHING
(AUDIO DEFEAT ON)
R9017 820
D9001 MA165
R9018 1K
IC9201 AN7420-NT (FM SIGNAL PROCESS)
FLIP FLOP 19KHz ∠90°
FLIP FLOP 19KHz ∠0°
STEREO DETECTOR
MONO/STEREO SELECTOR
PHASE DETECTOR
FLIP FLOP 38KHz
STEREO LED DRIVE
STEREO SIGNAL DEMODULATOR
AMP
DC AMP
VCO
VCC
GND
L-CH
R-CH
R9208 3900
C9203 10/16V
R9209 2700
C9206 3.3/50V
C9205 1/50V
R9201 1K
R9202 10K
R9206 5KB
FM VCO
C9204 1000P
L9201 100U
R9203 1K
R9204 220K
C9207 1/50V
C9210 1/50V
R9207 3300
C9209 0.022
C9211 1/50V
R9205 3300
C9208 0.022
TP9201
C9202 47/6.3V
C9201 0.01
Q4301
2SD601A
(+12V REGULATOR)
R4301 1K
D4302
MA4120N-M
(12V)
D4301 MA165
C4301 10/16V
C4302 10/16V
C4303 0.01
R4302 5600
R4303 4700
Q4302
2SD601A
(REGULATOR)
R4304 4700
C4304 0.01
C4305 10/16V
C4308 0.01
C4309 10/16V
PT
IC4303
LM833M
(OP AMP)
IC4302
LM833M
(OP AMP)
VCC
VEE
R4310 100K
R4314 47K
R4313 47K
IC4301
BU4053BCF
(SW)
VDD
SW CONTROL
MUTE
GND
H
L
C4306 10/16V
R4306 100
TP4201
R4305 47K
C4307 10/16V
R4307 100
R4308 47K
TP4202
R4309 100K
R4311 47K
R4312 47K
C4310 10/16V
C4311 10/16V
J4303
PT
R4320 47K
Q4304
UN211L-TX
(SWITCHING MUTE ON)
R4317 10K
J4302
PT
C4312 10/16V
R4319 100
C4313 10/16V
Q4303
UN2212
(SWITCHING DVD ON)
R4318 47K
J4301 0
R4321 100
R4316 10K
Q4305
UN221L-TX
(SWITCHING MUTE ON)
R4315 10K
PT
J4202
J4201
P4205
43 42 41 40 39
LINE AUDIO L CH
GND
LINE AUDIO R CH
GND
(TO MAIN C.B.A.)
P4204
38 37 36 35 34 33 32 31 30 29
FM MONO(H)
FM STEREO(L)
TUNER AUDIO
TUNER AUDIO DEFEAT(H)
TUNER MTS(H)/SAP(L)
TUNER MONO(H)/STEREO(L)
TUNER MTS SIGNAL(L)
TUNER SAP SIGNAL(L)
GND
AUDIO+5V
(TO MAIN C.B.A.)
P4203
28 27
SW+9V
SW+12V

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts, be sure to use the part number listed in the parts list. Do not use the part number on this diagram.

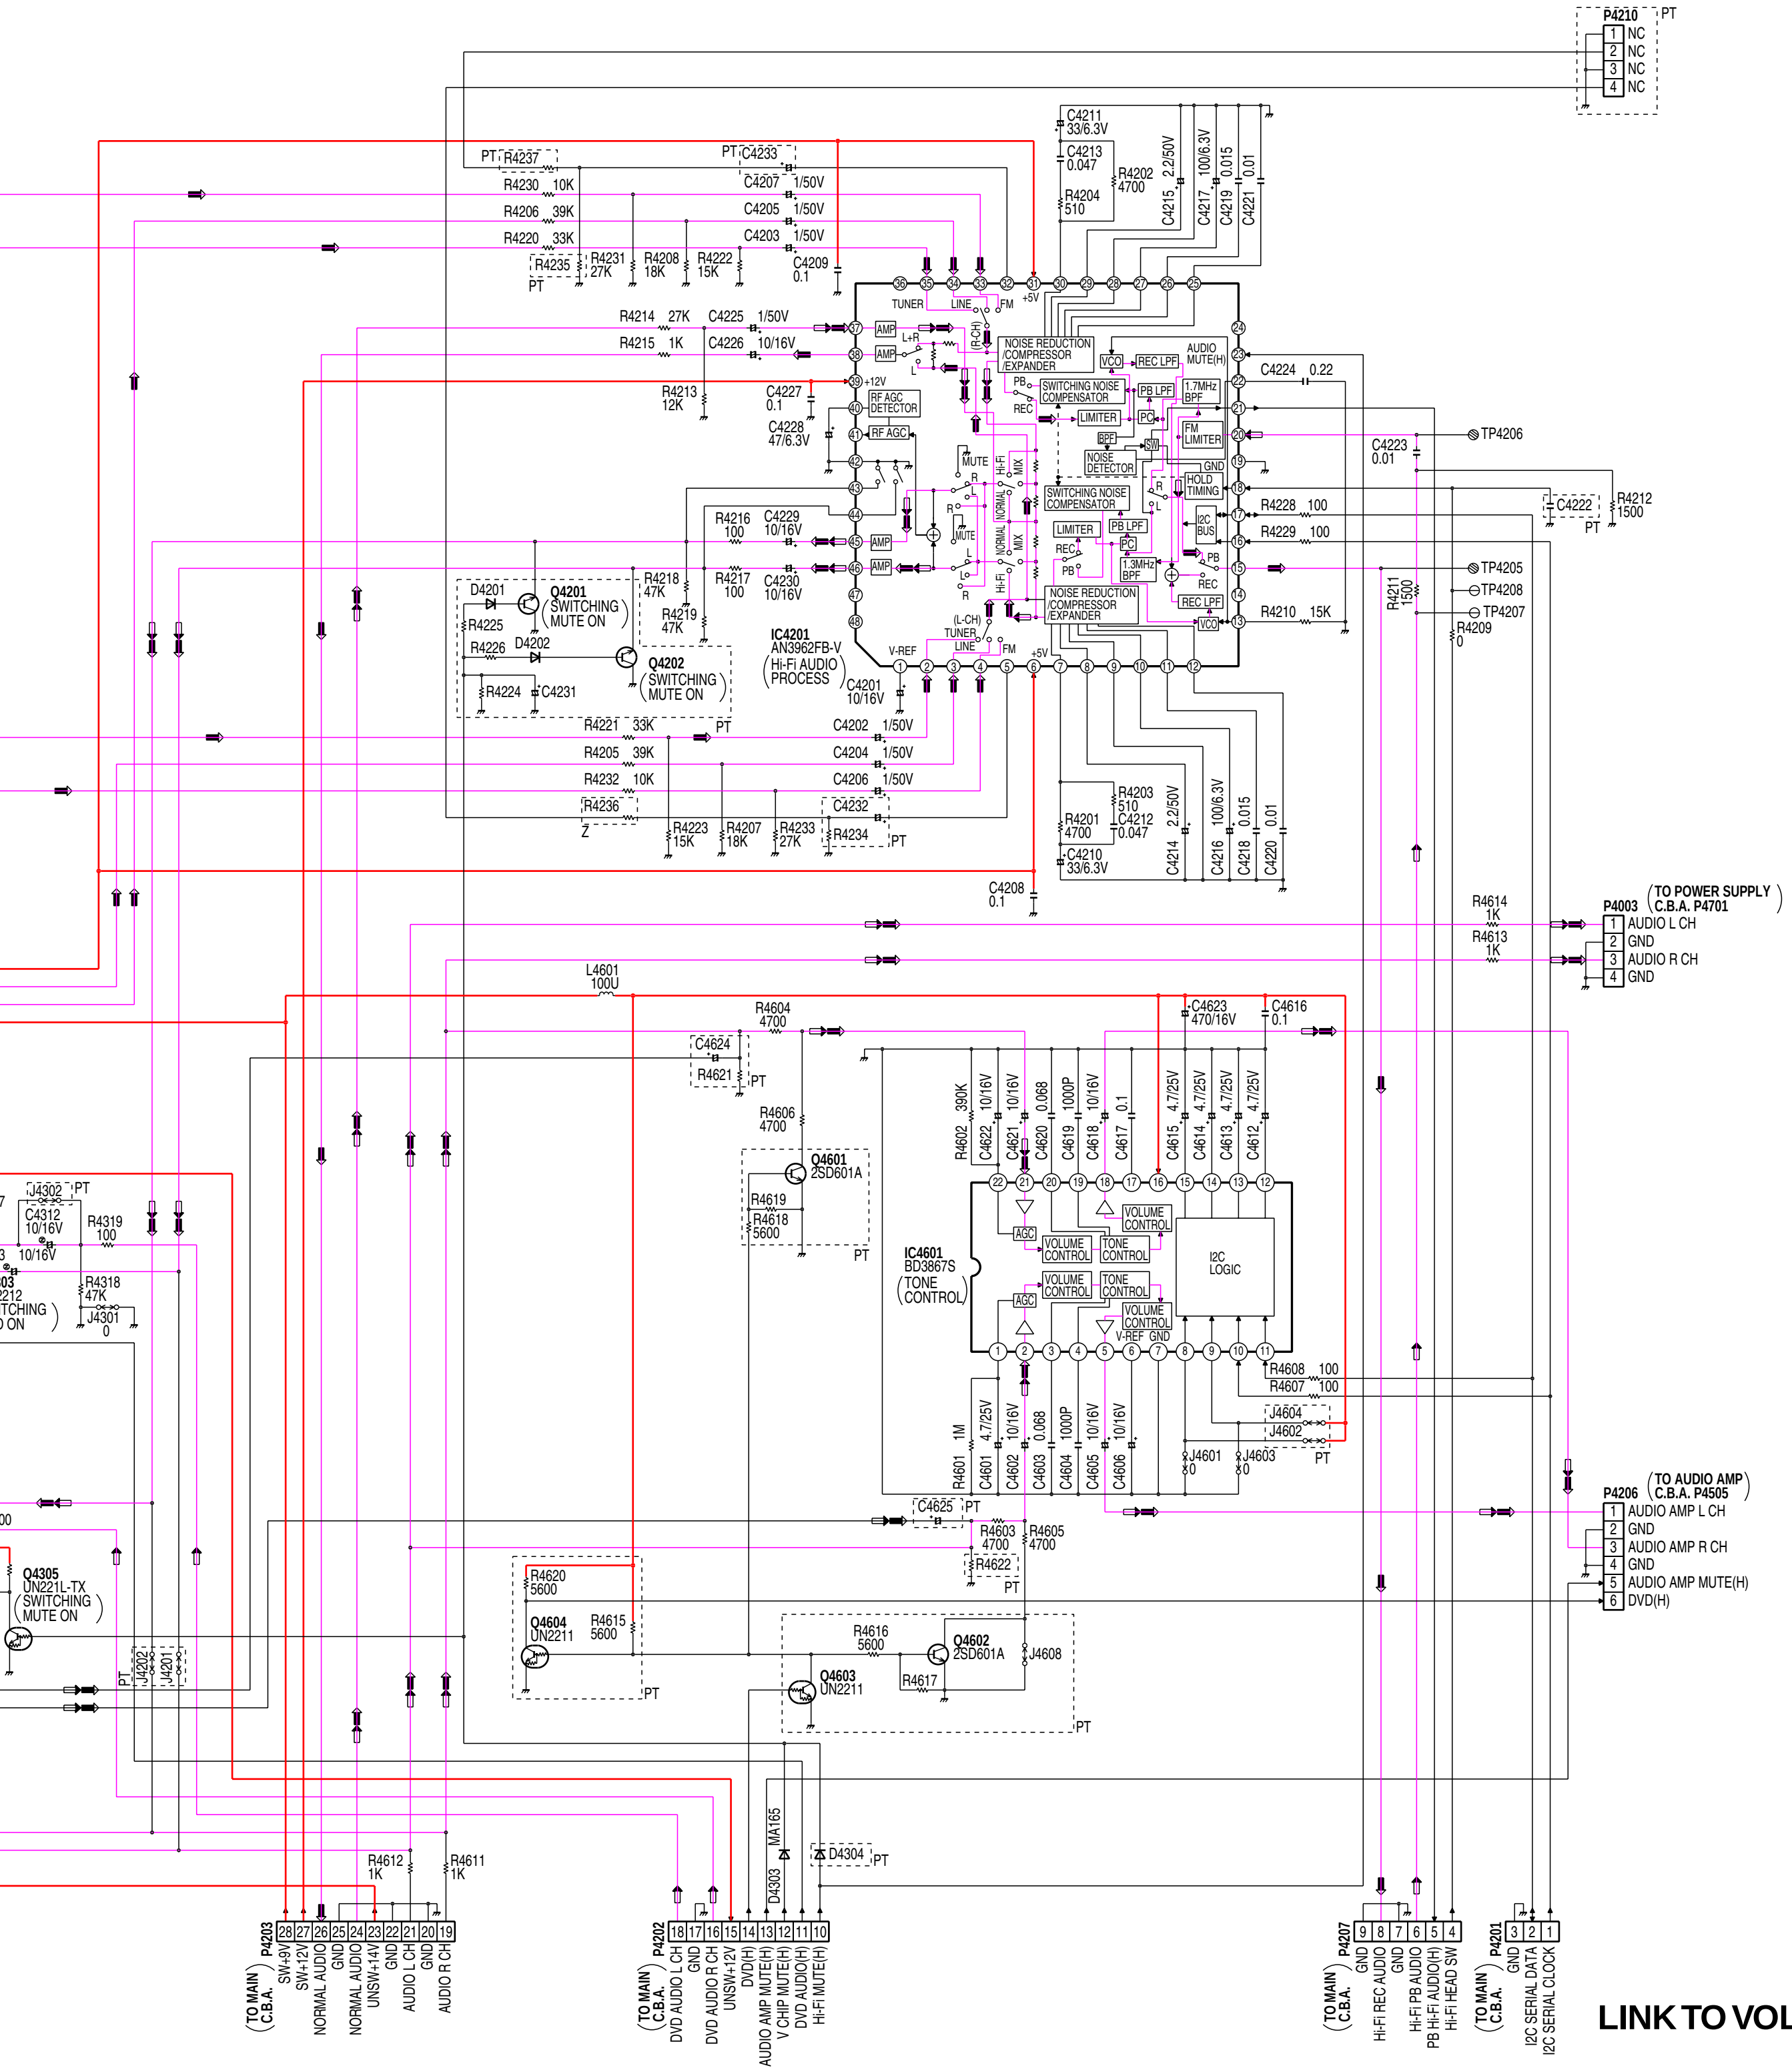
P4210 PT
1 NC
2 NC
3 NC
4 NC
IC4201
AN3962FB-V
(Hi-Fi AUDIO PROCESS)
NOISE REDUCTION COMPRESSOR EXPANDER
SWITCHING NOISE COMPENSATOR
LIMITER
NOISE DETECTOR
RF AGC DETECTOR
RF AGC
AUDIO MUTE(H)
REC LPF
PB LPF
1.7MHz BPF
1.3MHz BPF
FM LIMITER
HOLD TIMING
I2C BUS
VCO
TUNER
LINE
FM
+5V
+12V
V-REF
Q4201 SWITCHING MUTE ON
Q4202 SWITCHING MUTE ON
D4201
D4202
TP4205
TP4206
TP4207
TP4208
C4222 PT
R4212 1500
R4211 1500
R4209 0
IC4601
BD3867S
(TONE CONTROL)
VOLUME CONTROL
TONE CONTROL
AGC
I2C LOGIC
V-REF
GND
Q4601 2SD601A
Q4602 2SD601A
Q4603 UN2211
Q4604 UN2211
Q4305 UN221L-TX SWITCHING MUTE ON
L4601 100U
P4003 (TO POWER SUPPLY C.B.A. P4701)
1 AUDIO L CH
2 GND
3 AUDIO R CH
4 GND
P4206 (TO AUDIO AMP C.B.A. P4505)
1 AUDIO AMP L CH
2 GND
3 AUDIO AMP R CH
4 GND
5 AUDIO AMP MUTE(H)
6 DVD(H)
P4203 (TO MAIN C.B.A.)
28 SW+9V
27 SW+12V
26 NORMAL AUDIO
25 GND
24 NORMAL AUDIO
23 UNSW+14V
22 GND
21 AUDIO L CH
20 GND
19 AUDIO R CH
P4202 (TO MAIN C.B.A.)
18 DVD AUDIO L CH
17 GND
16 DVD AUDIO R CH
15 UNSW+12V
14 DVD(H)
13 AUDIO AMP MUTE(H)
12 V CHIP MUTE(H)
11 DVD AUDIO(H)
10 Hi-Fi MUTE(H)
P4207 (TO MAIN C.B.A.)
9 GND
8 Hi-Fi REC AUDIO
7 GND
6 Hi-Fi PB AUDIO
5 PB Hi-Fi AUDIO(H)
4 Hi-Fi HEAD SW
P4201 (TO MAIN C.B.A.)
3 GND
2 I2C SERIAL DATA
1 I2C SERIAL CLOCK
D4303 MA165
D4304 PT
R4611 1K
R4612 1K
R4613 1K
R4614 1K

LINK TO VOLTAGE CHART

VJPS4038
PV-DM2792/PV-DM2792-K
AUDIO I SCHEMATIC DIAGRAM

AUDIO II SCHEMATIC DIAGRAM

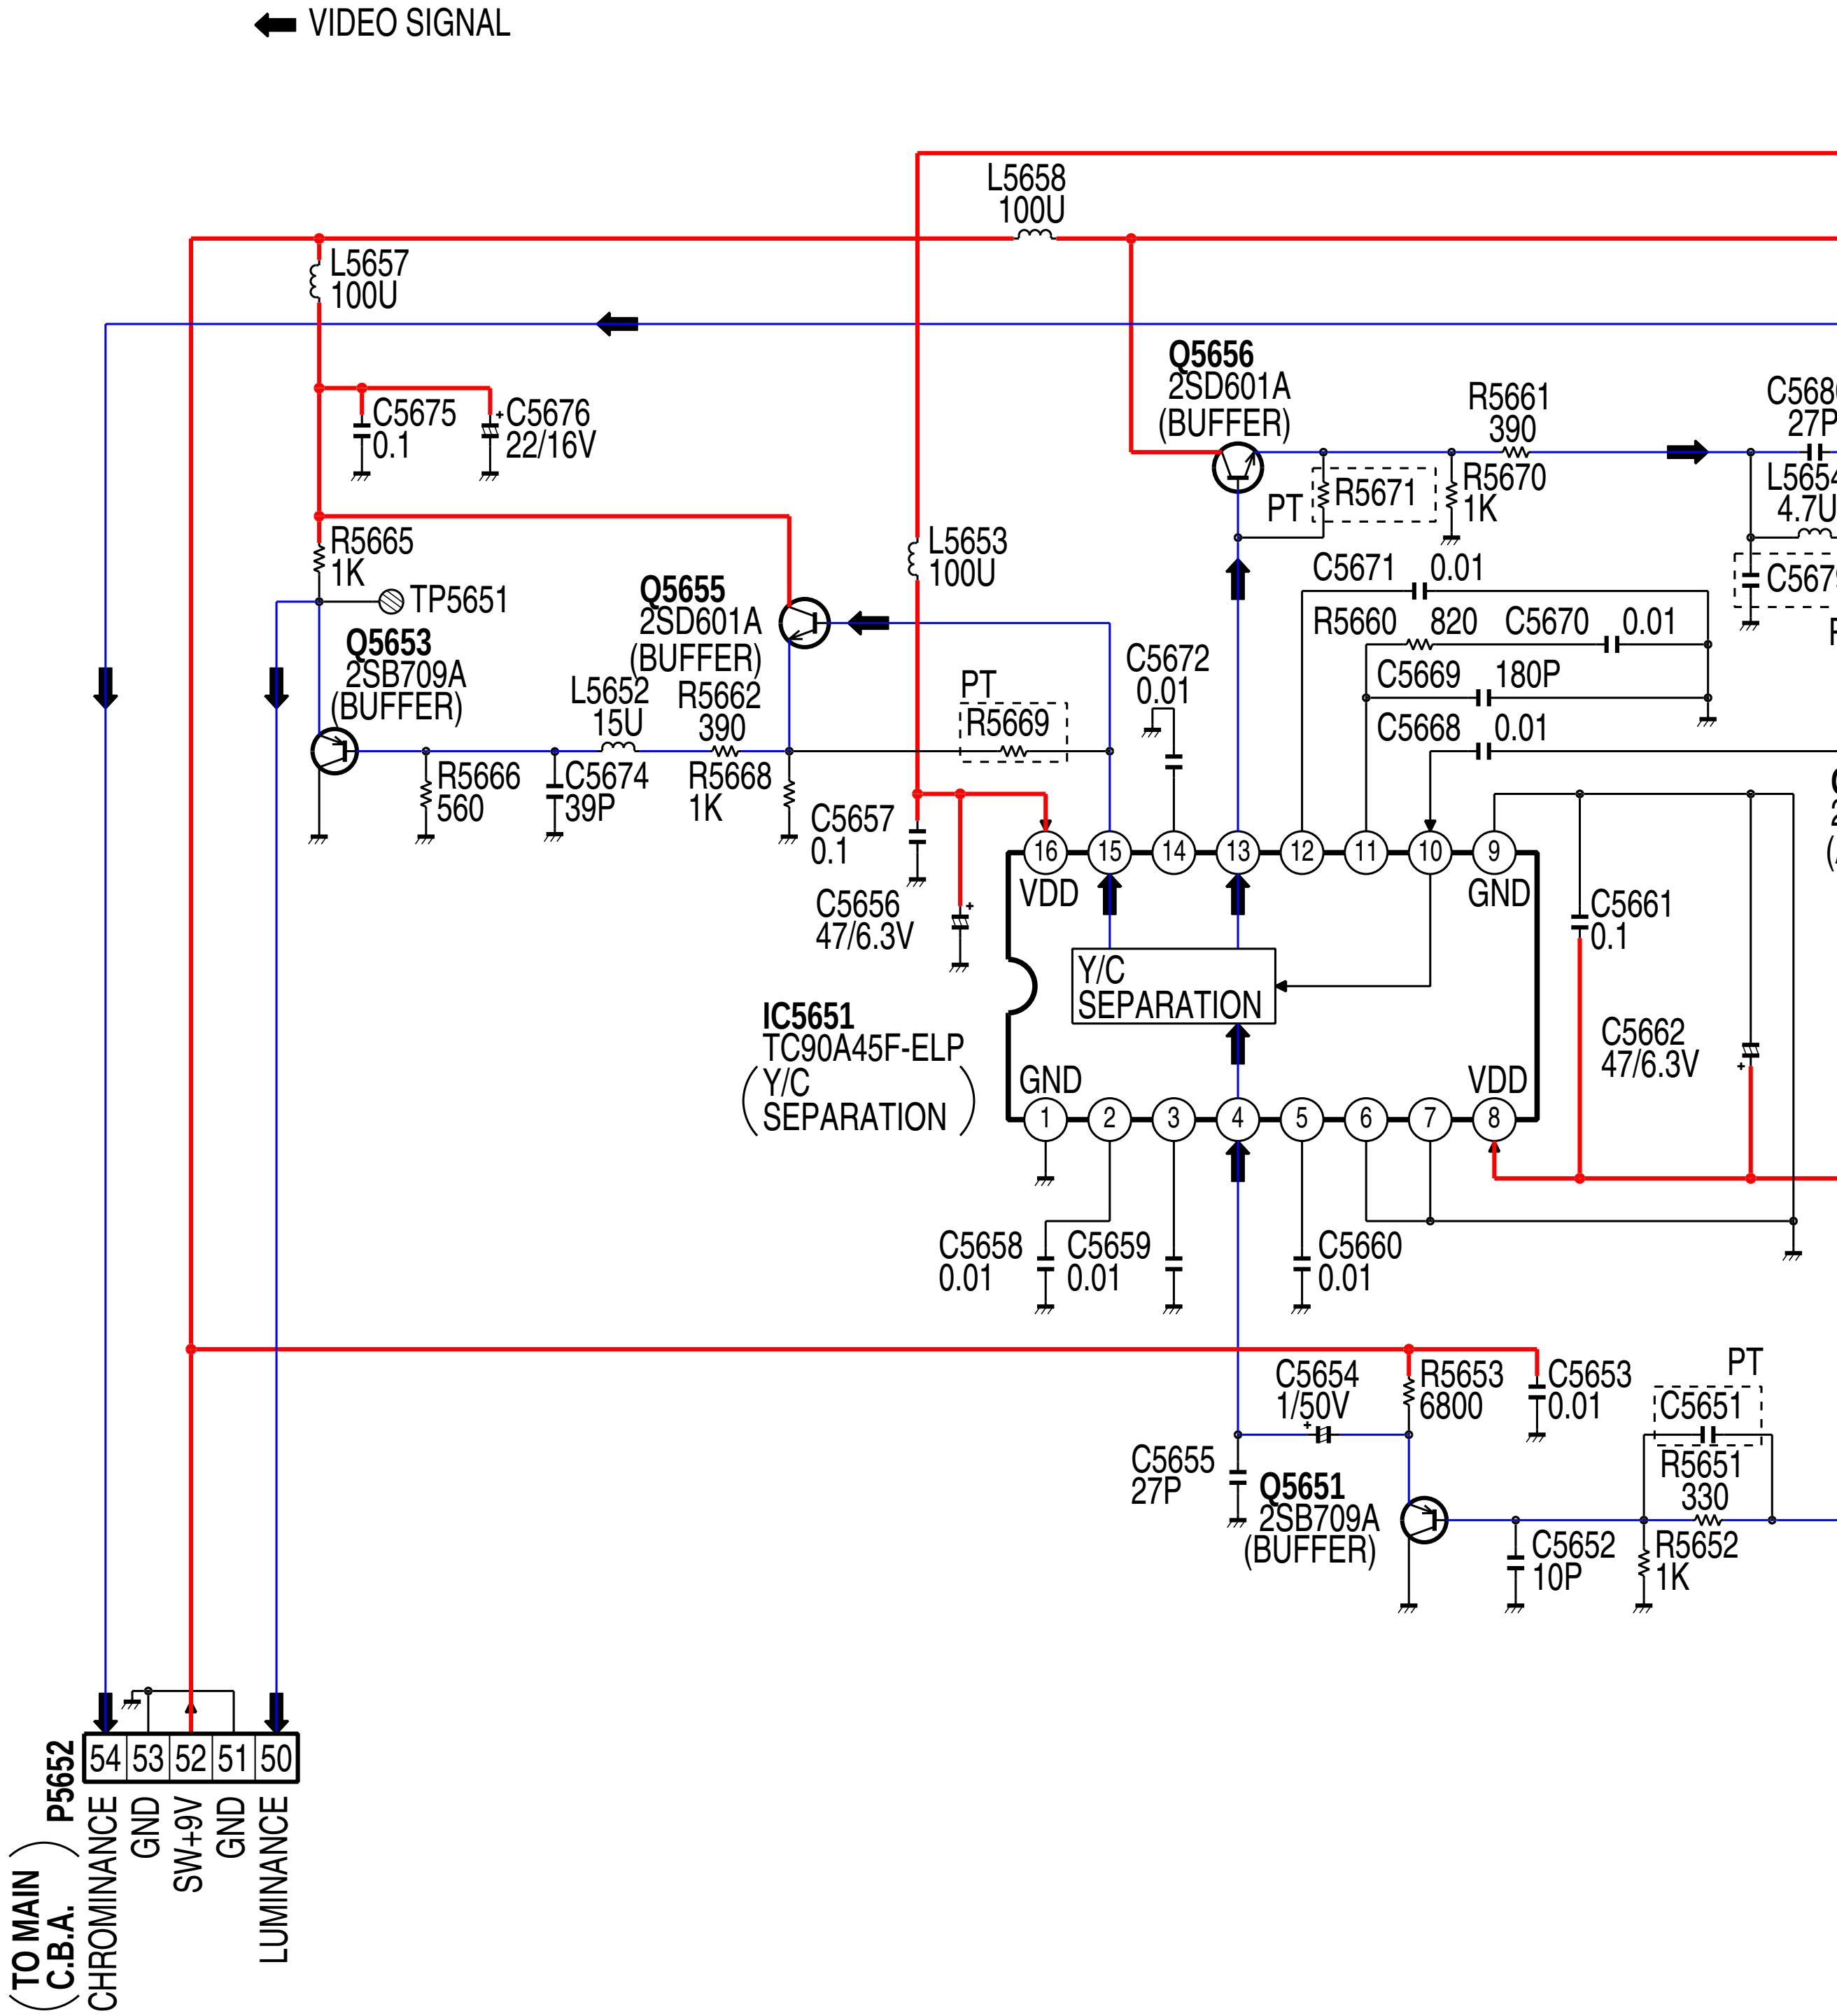
VIDEO SIGNAL
L5658
100U
L5657
100U
Q5656
2SD601A
(BUFFER)
R5661
390
C568
27P
C5675
0.1
C5676
22/16V
PT
R5671
R5670
1K
L565
4.7U
R5665
1K
L5653
100U
C5671
0.01
C567
TP5651
Q5655
2SD601A
(BUFFER)
R5660
820
C5670
0.01
Q5653
2SB709A
(BUFFER)
C5669
180P
L5652
15U
R5662
390
PT
R5669
C5672
0.01
C5668
0.01
R5666
560
C5674
39P
R5668
1K
C5657
0.1
16
15
14
13
12
11
10
9
VDD
GND
C5661
0.1
C5656
47/6.3V
Y/C
SEPARATION
IC5651
TC90A45F-ELP
(Y/C
SEPARATION)
C5662
47/6.3V
GND
VDD
1
2
3
4
5
6
7
8
C5658
0.01
C5659
0.01
C5660
0.01
C5654
1/50V
R5653
6800
C5653
0.01
PT
C5651
R5651
330
C5655
27P
Q5651
2SB709A
(BUFFER)
C5652
10P
R5652
1K
54
53
52
51
50
P5652
(TO MAIN
C.B.A.)
CHROMINANCE
GND
SW+9V
GND
LUMINANCE

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts, be sure to use the part number listed in the parts list. Do not use the part number on this diagram.

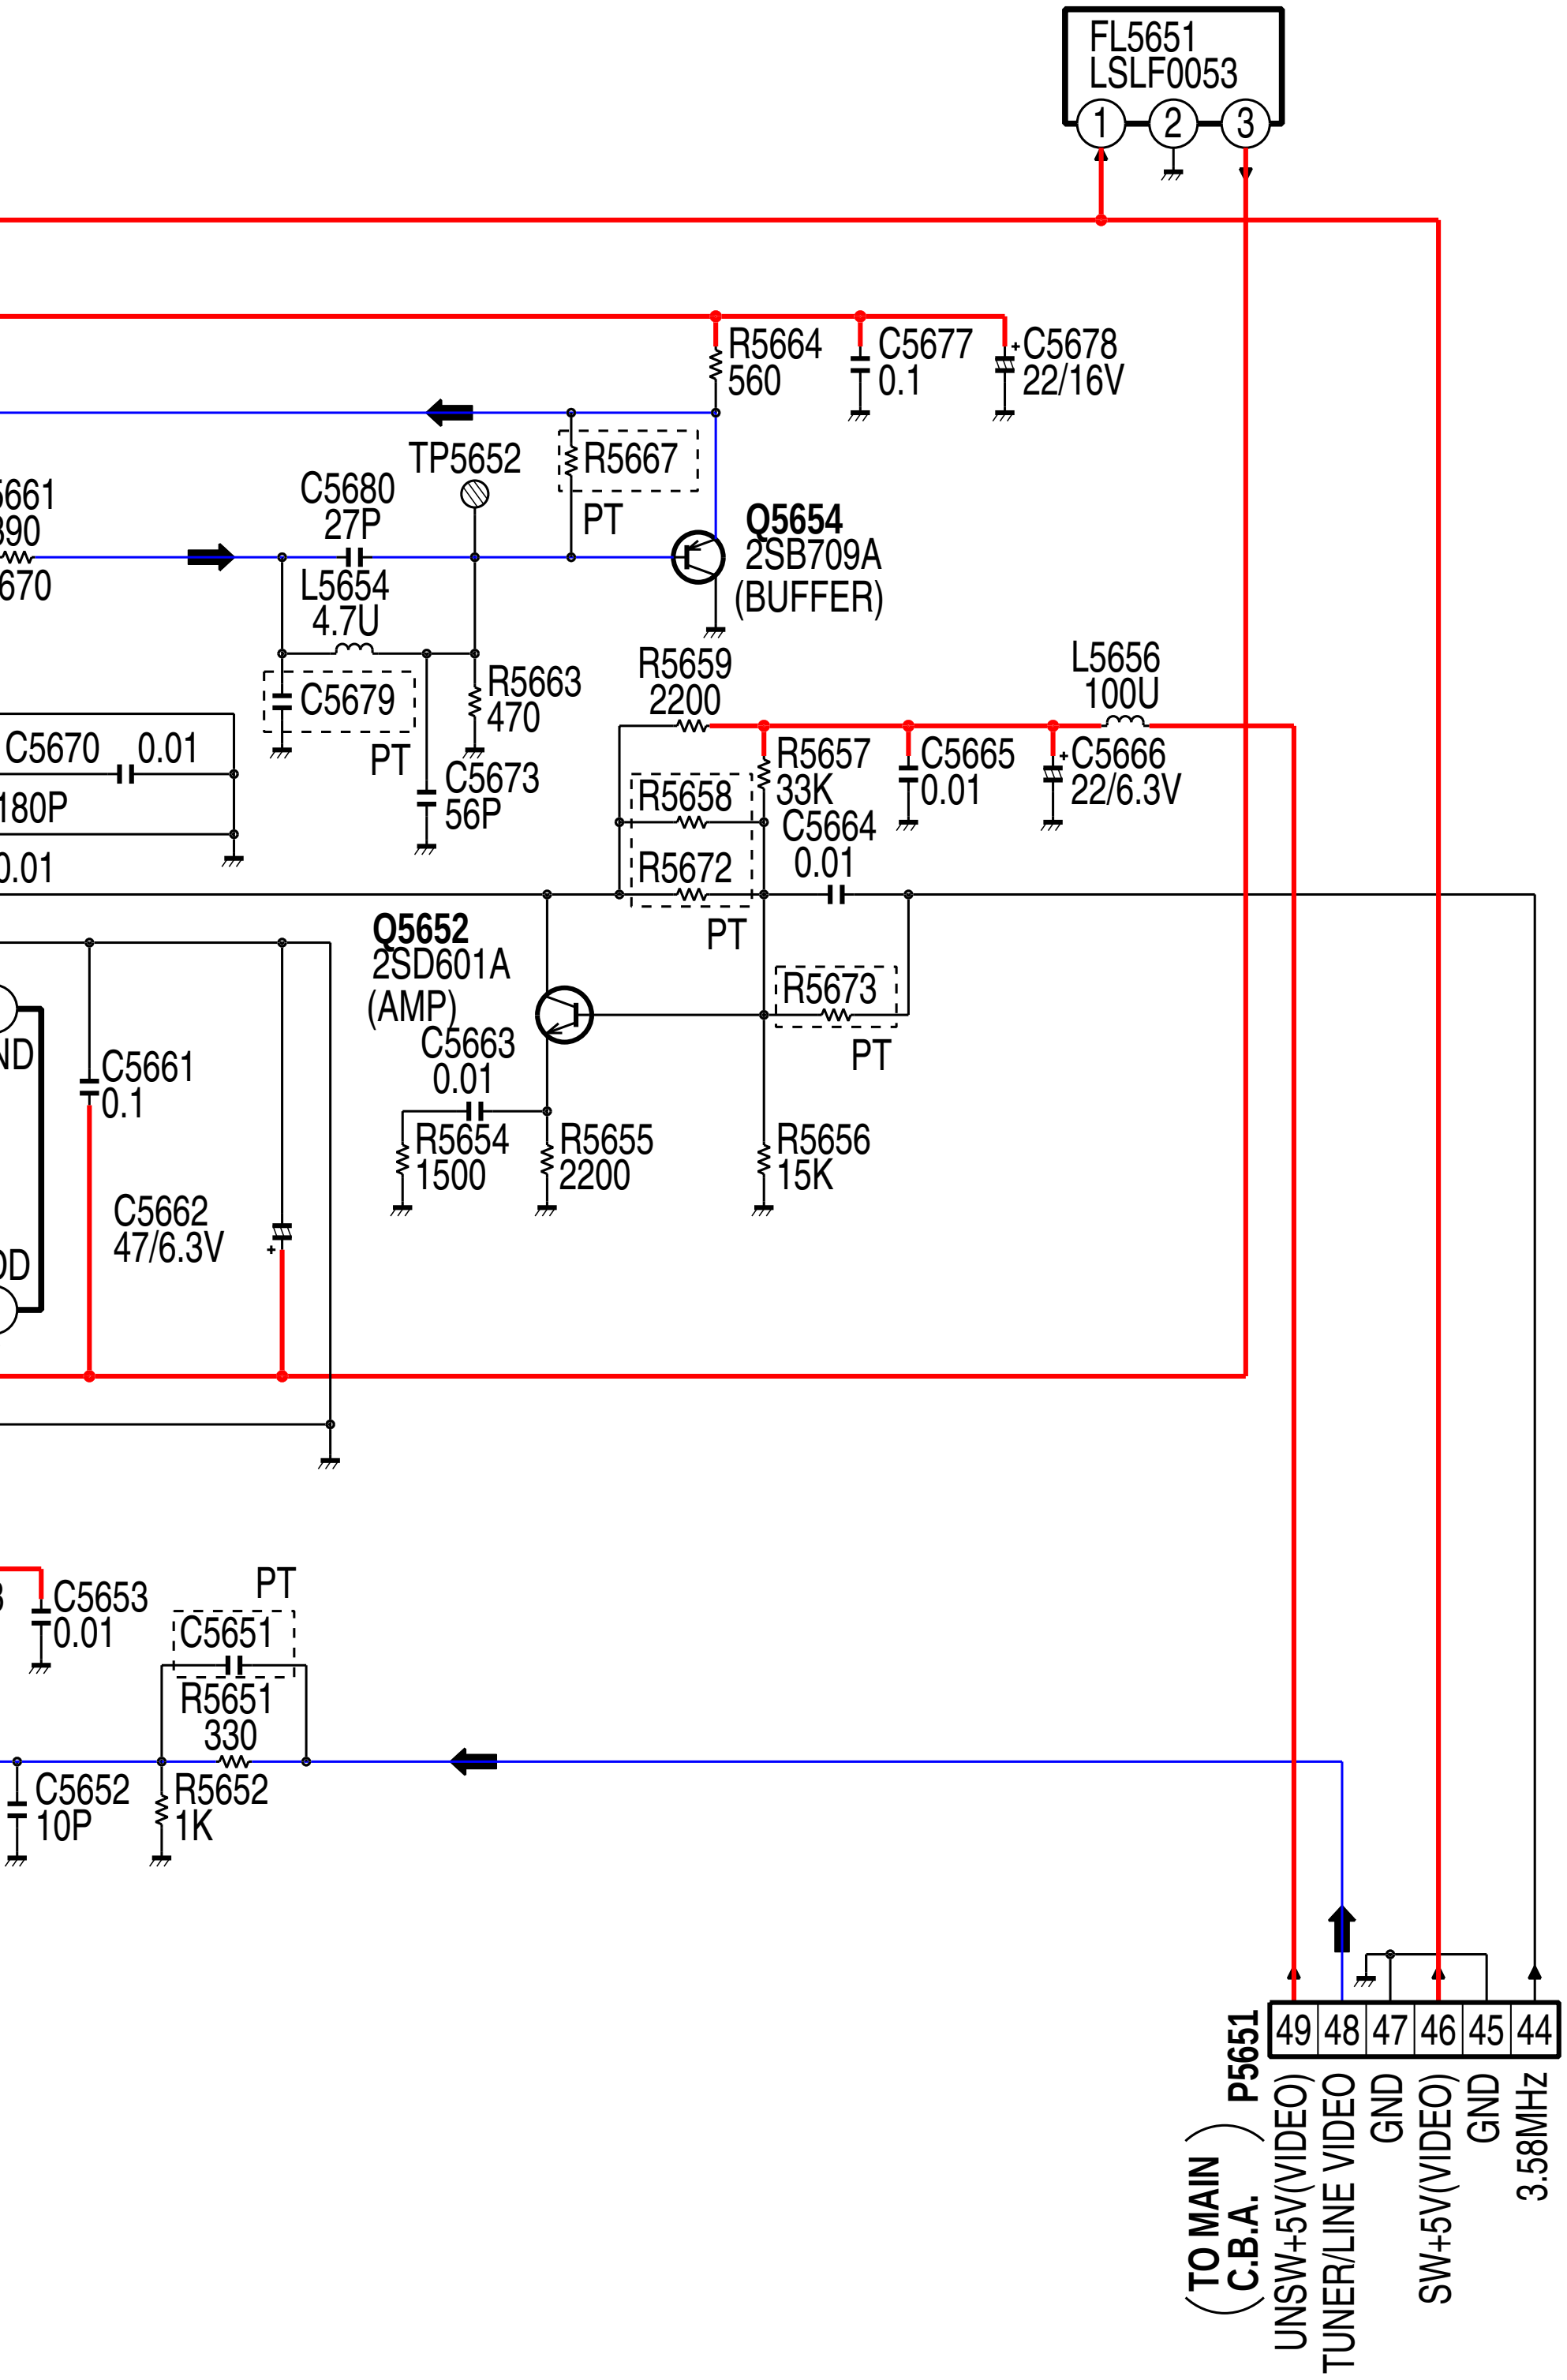

FL5651
LSLF0053
1
2
3
R5664
560
C5677
0.1
C5678
22/16V
TP5652
R5667
PT
C5680
27P
Q5654
2SB709A
(BUFFER)
661
390
670
L5654
4.7U
C5679
PT
R5663
470
R5659
2200
L5656
100U
C5670
0.01
180P
0.01
C5673
56P
R5657
33K
C5665
0.01
C5666
22/6.3V
R5658
C5664
0.01
R5672
PT
Q5652
2SD601A
(AMP)
C5663
0.01
R5673
PT
ND
C5661
0.1
R5654
1500
R5655
2200
R5656
15K
C5662
47/6.3V
OD
C5653
0.01
PT
C5651
R5651
330
C5652
10P
R5652
1K
49
48
47
46
45
44
P5651
(TO MAIN C.B.A.)
UNSW+5V(VIDEO)
TUNER/LINE VIDEO
GND
SW+5V(VIDEO)
GND
3.58MHz

LINK TO VOLTAGE CHART

8.4. AUDIO AMP SCHEMATIC DIAGRAM

AUDIO AMP SCHEMATIC DIAGRAM

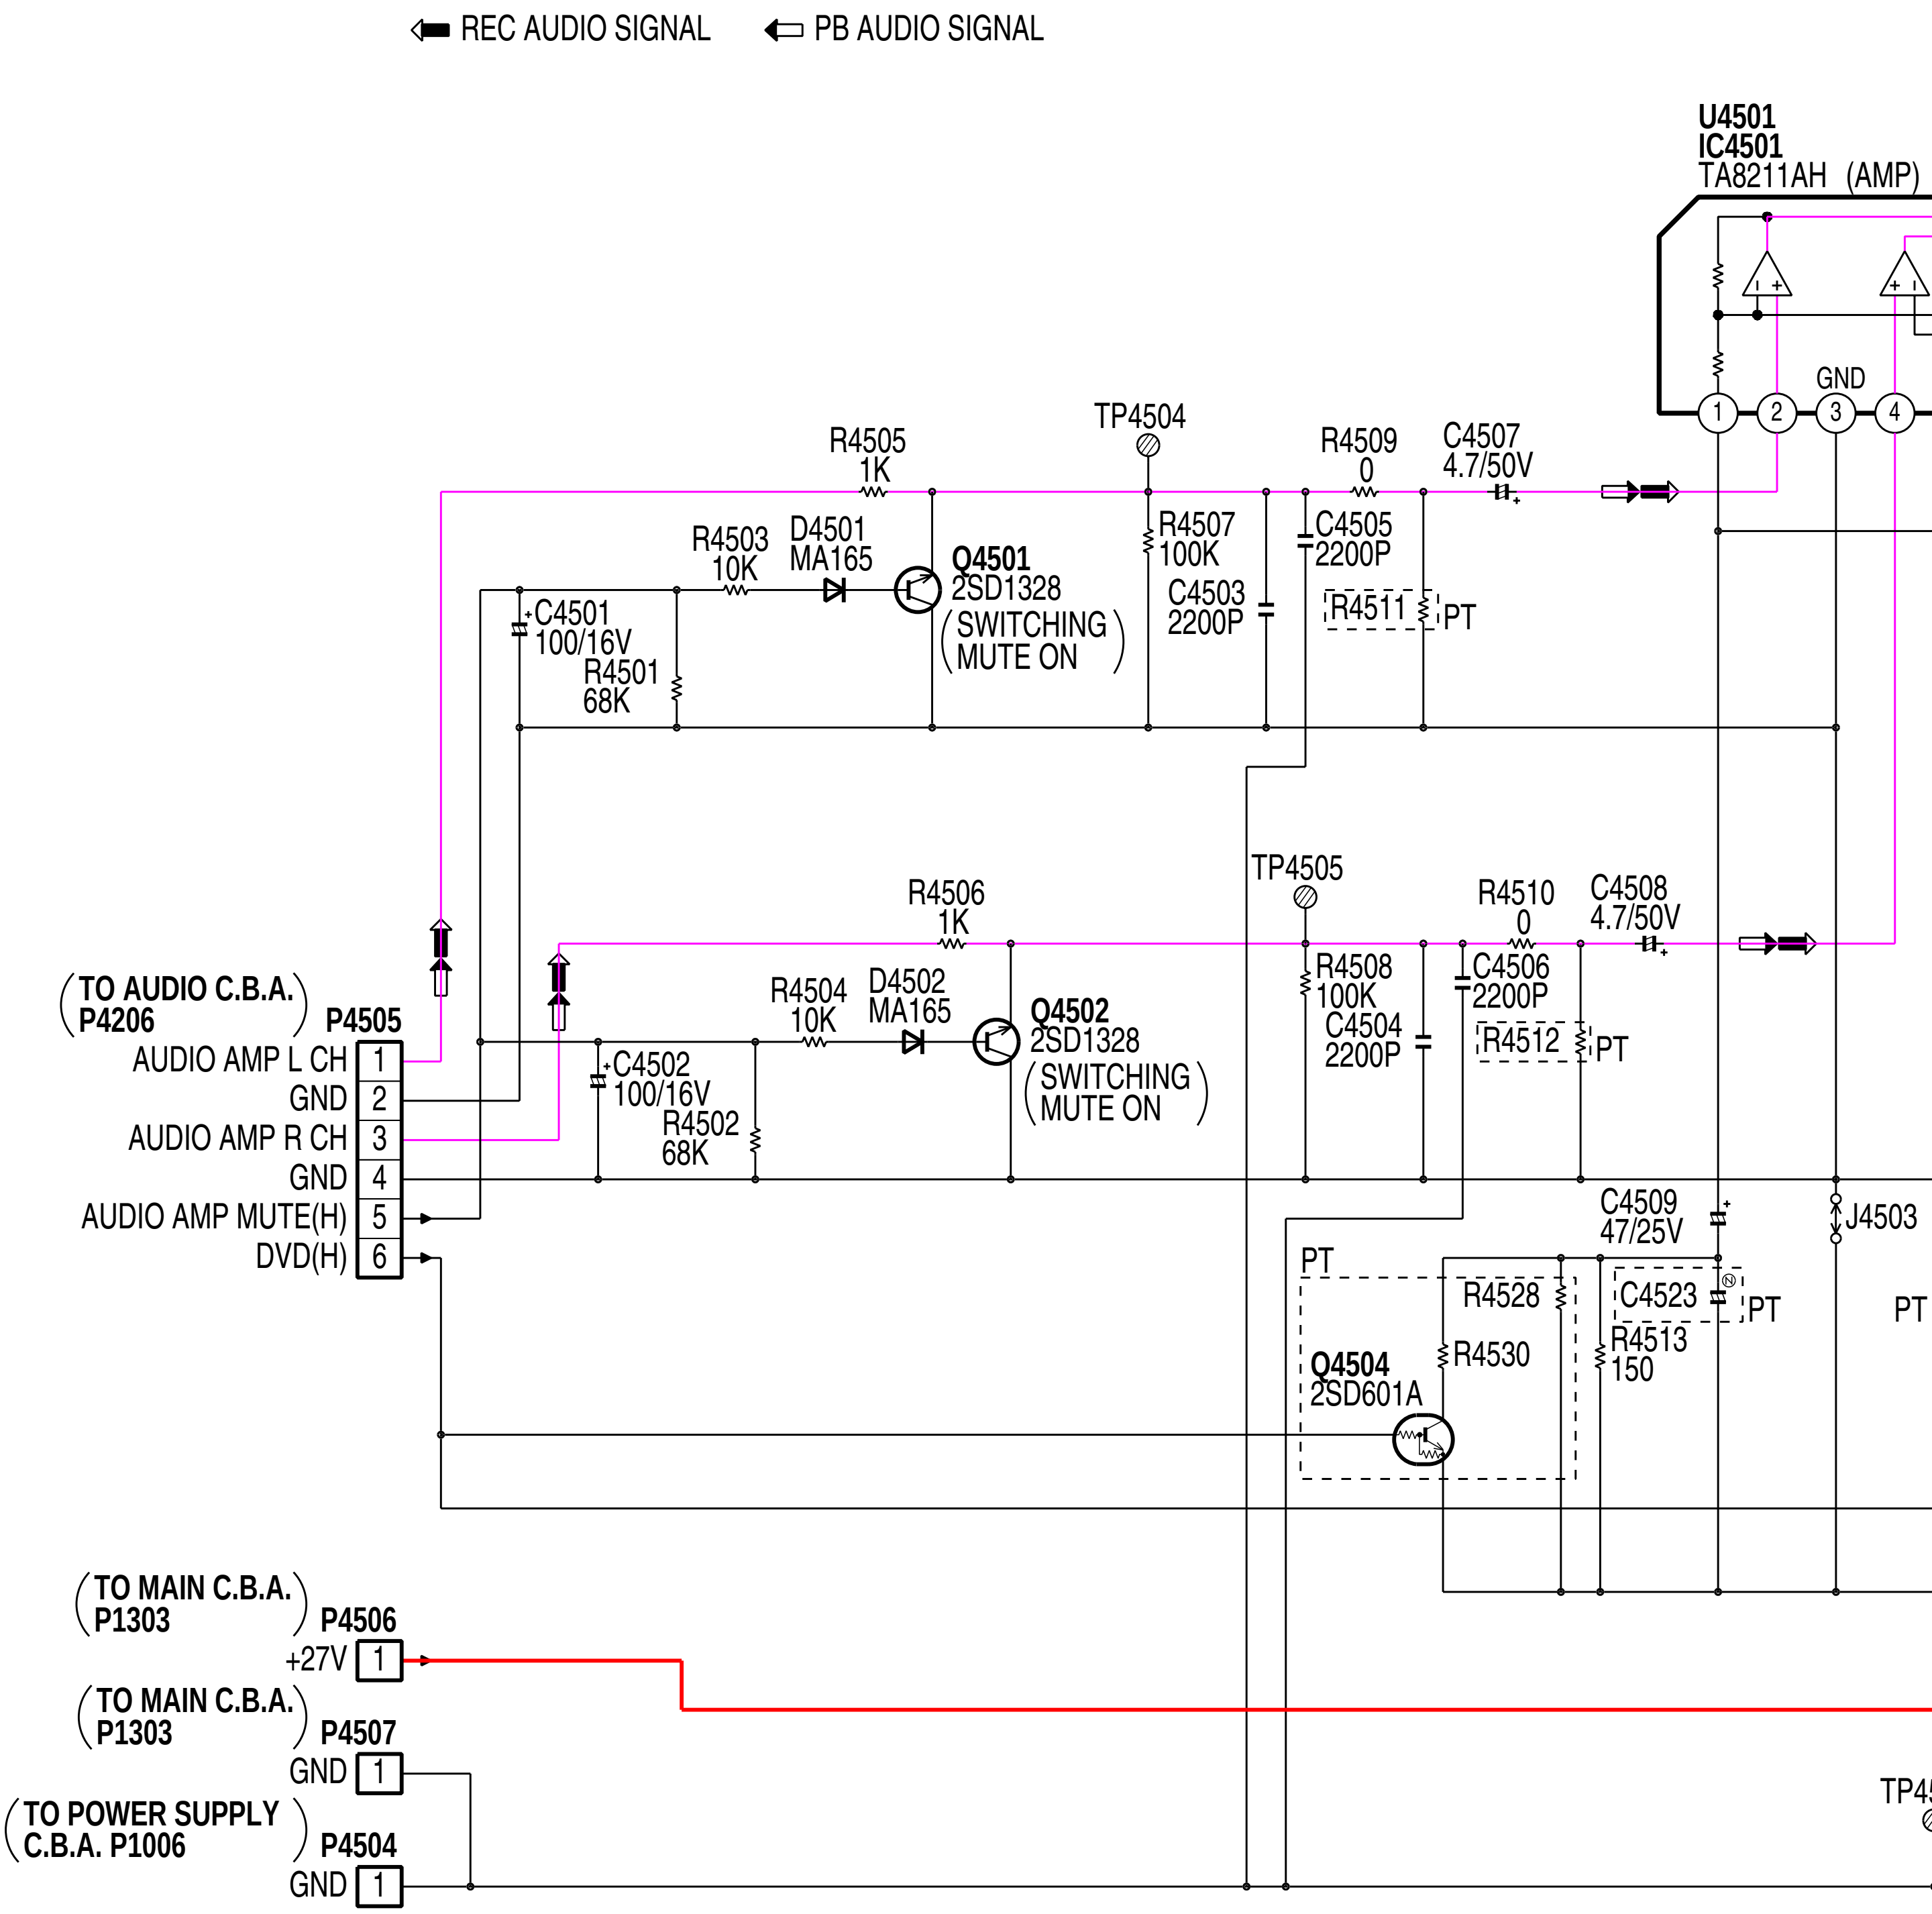
REC AUDIO SIGNAL
PB AUDIO SIGNAL
U4501
IC4501
TA8211AH (AMP)
GND
1
2
3
4
R4505
1K
TP4504
R4509
0
C4507
4.7/50V
R4503
10K
D4501
MA165
Q4501
2SD1328
(SWITCHING MUTE ON)
R4507
100K
C4505
2200P
C4503
2200P
R4511
PT
C4501
100/16V
R4501
68K
TP4505
R4506
1K
R4510
0
C4508
4.7/50V
R4504
10K
D4502
MA165
Q4502
2SD1328
(SWITCHING MUTE ON)
R4508
100K
C4506
2200P
C4504
2200P
R4512
PT
C4502
100/16V
R4502
68K
(TO AUDIO C.B.A. P4206)
P4505
AUDIO AMP L CH 1
GND 2
AUDIO AMP R CH 3
GND 4
AUDIO AMP MUTE(H) 5
DVD(H) 6
C4509
47/25V
J4503
PT
R4528
C4523
PT
PT
R4530
R4513
150
Q4504
2SD601A
(TO MAIN C.B.A. P1303)
P4506
+27V 1
(TO MAIN C.B.A. P1303)
P4507
GND 1
(TO POWER SUPPLY C.B.A. P1006)
P4504
GND 1
TP45

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts, be sure to use the part number listed in the parts list. Do not use the part number on this diagram.

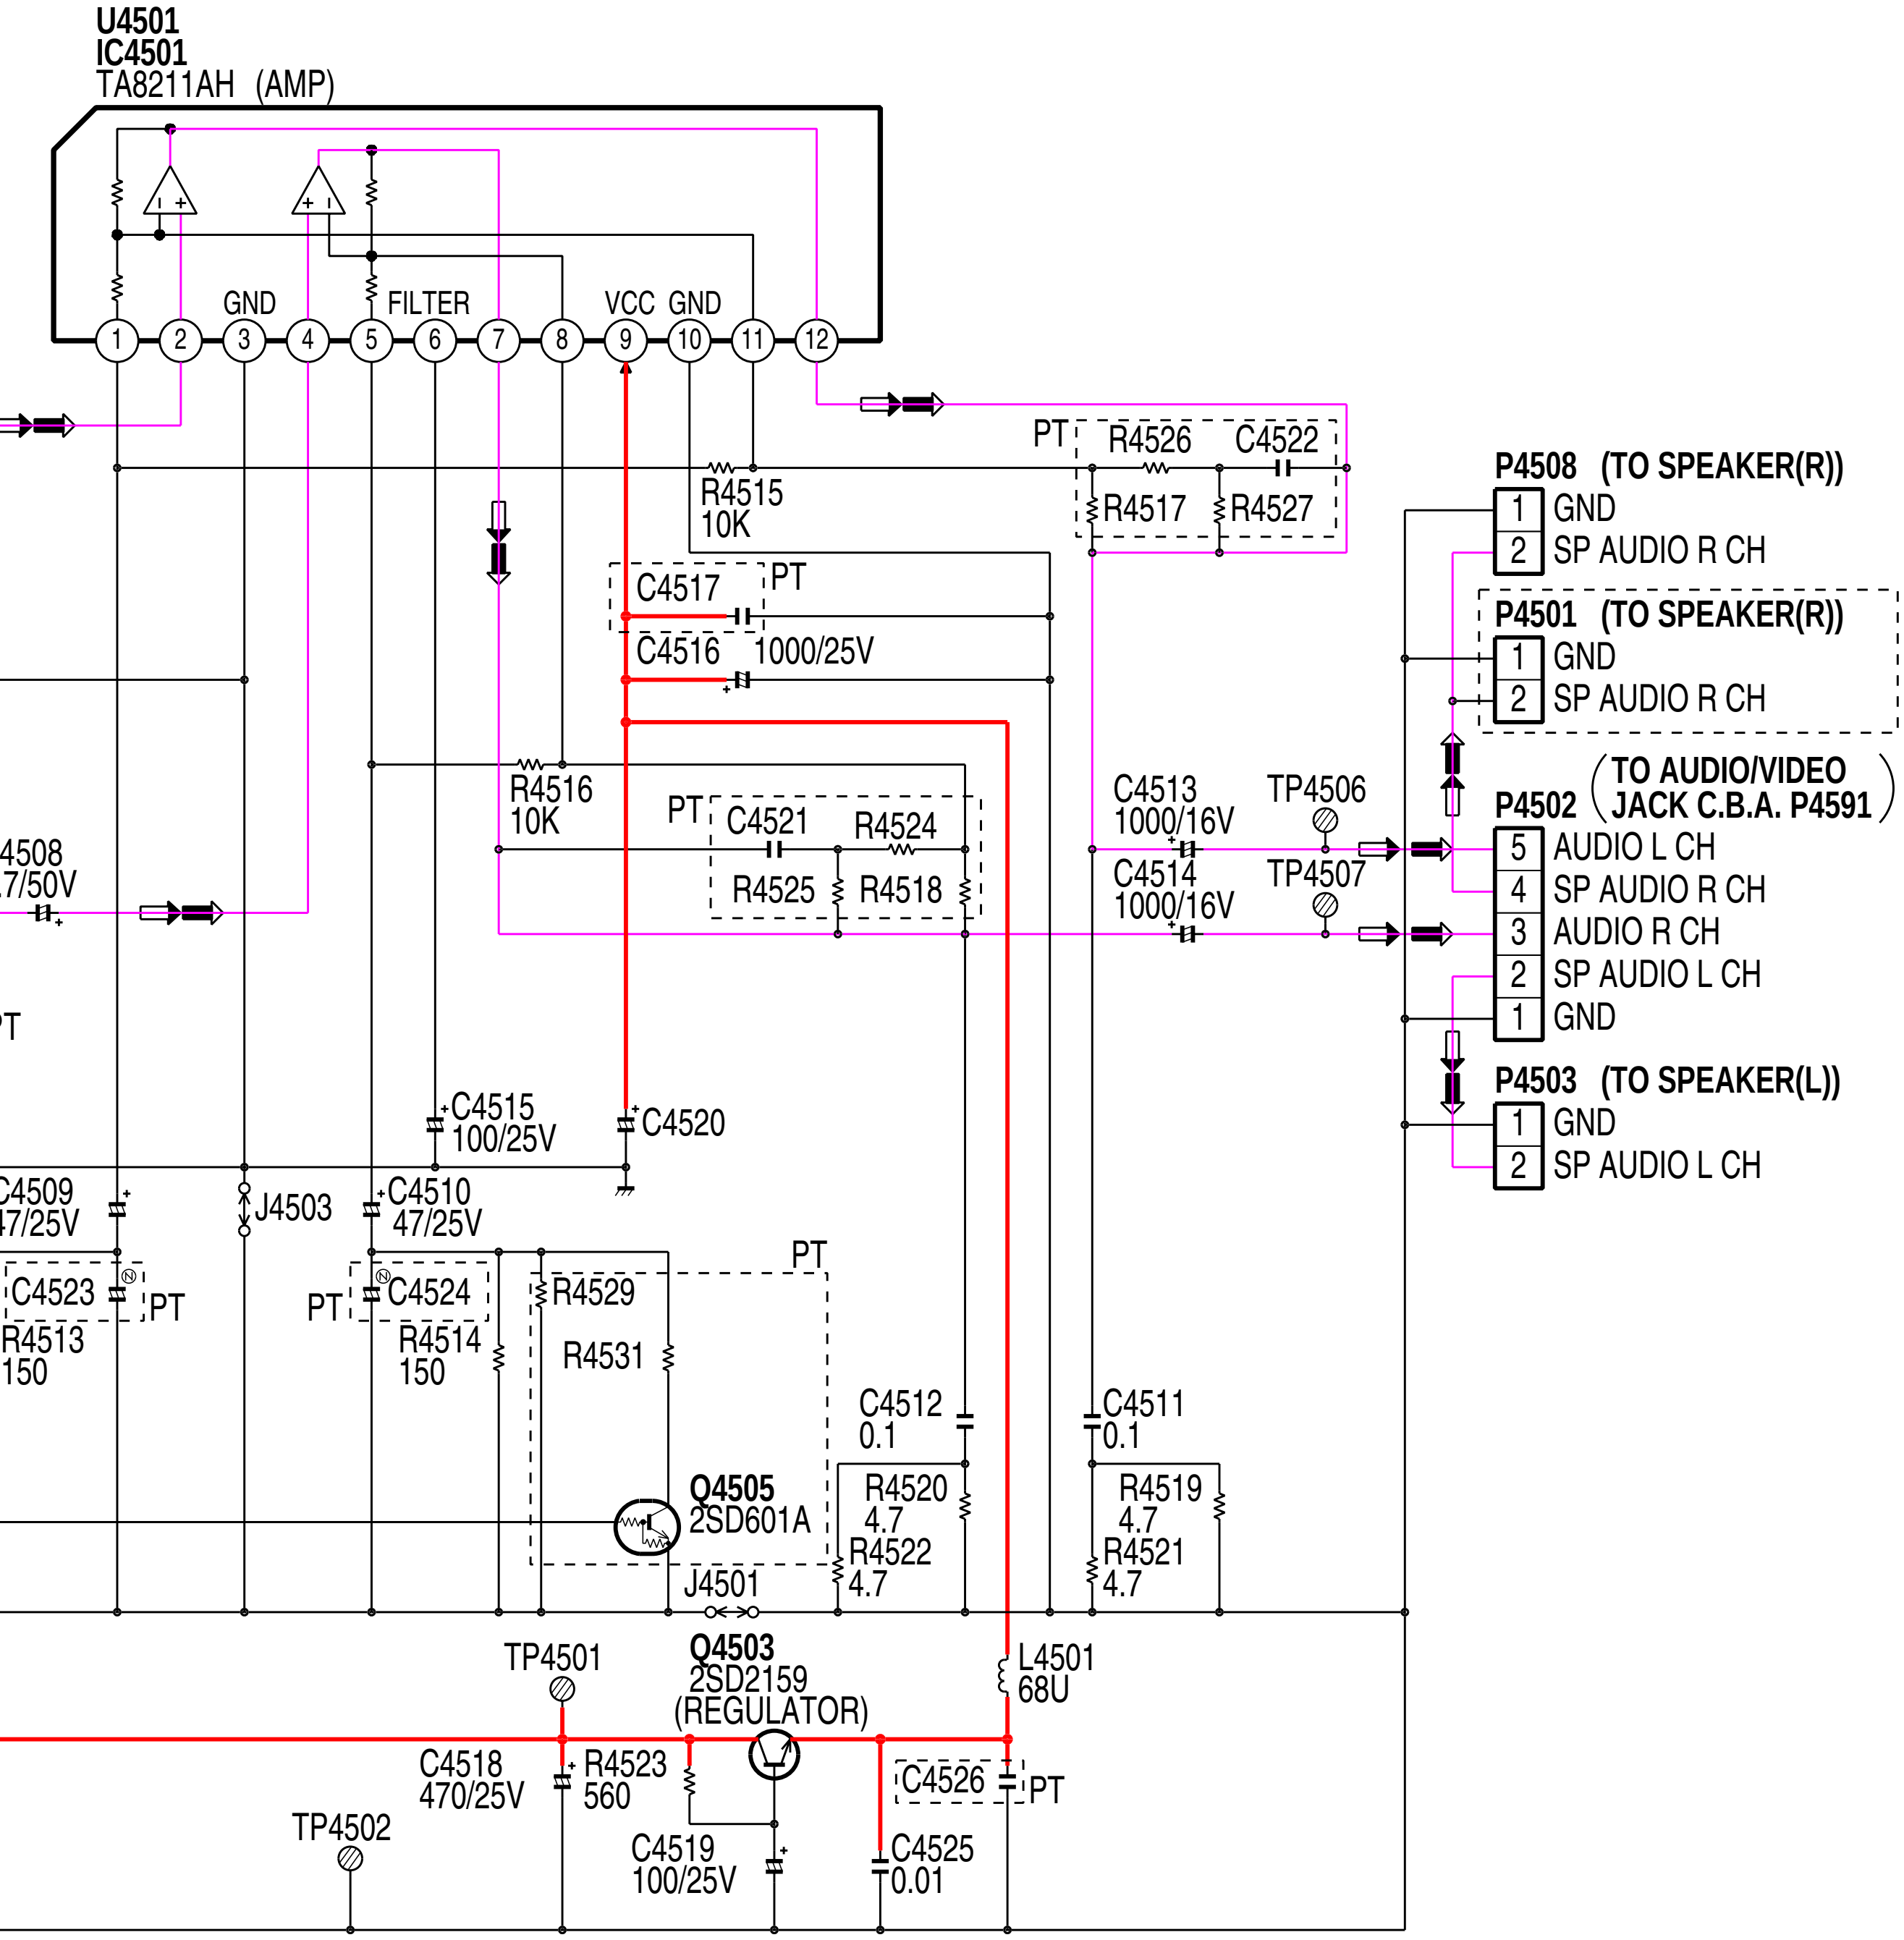
U4501
IC4501
TA8211AH (AMP)
GND
FILTER
VCC
GND
1
2
3
4
5
6
7
8
9
10
11
12
PT
R4526
C4522
R4517
R4527
R4515
10K
C4517
PT
C4516
1000/25V
R4516
10K
PT
C4521
R4524
R4525
R4518
4508
7/50V
PT
C4513
1000/16V
C4514
1000/16V
TP4506
TP4507
P4508 **(TO SPEAKER(R))**
1 GND
2 SP AUDIO R CH
P4501 **(TO SPEAKER(R))**
PT
1 GND
2 SP AUDIO R CH
P4502
TO AUDIO/VIDEO JACK C.B.A. P4591
5 AUDIO L CH
4 SP AUDIO R CH
3 AUDIO R CH
2 SP AUDIO L CH
1 GND
P4503 **(TO SPEAKER(L))**
1 GND
2 SP AUDIO L CH
C4515
100/25V
C4520
C4509
47/25V
J4503
C4510
47/25V
C4523
PT
R4513
150
PT
C4524
R4514
150
R4529
R4531
PT
C4512
0.1
C4511
0.1
Q4505
2SD601A
R4520
4.7
R4522
4.7
R4519
4.7
R4521
4.7
J4501
TP4501
Q4503
2SD2159
(REGULATOR)
L4501
68U
C4518
470/25V
R4523
560
C4526
PT
TP4502
C4519
100/25V
C4525
0.01

LINK TO VOLTAGE CHART

VJPS4039
PV-DM2792/PV-DM2792-K
AUDIO AMP SCHEMATIC DIAGRAM

8.5. POWER SUPPLY SCHEMATIC DIAGRAM

POWER SUPPLY SCHEMATIC DIAGRAM

CAUTION: FOR CONTINUED PROTECTION AGAI
REPLACE ONLY WITH THE SAME TYP
ATTENTION: POUR UNE PROTECTION
D' INCENDIE N' UTILISERQUE DES FU
TYPE 3A 125V/250V

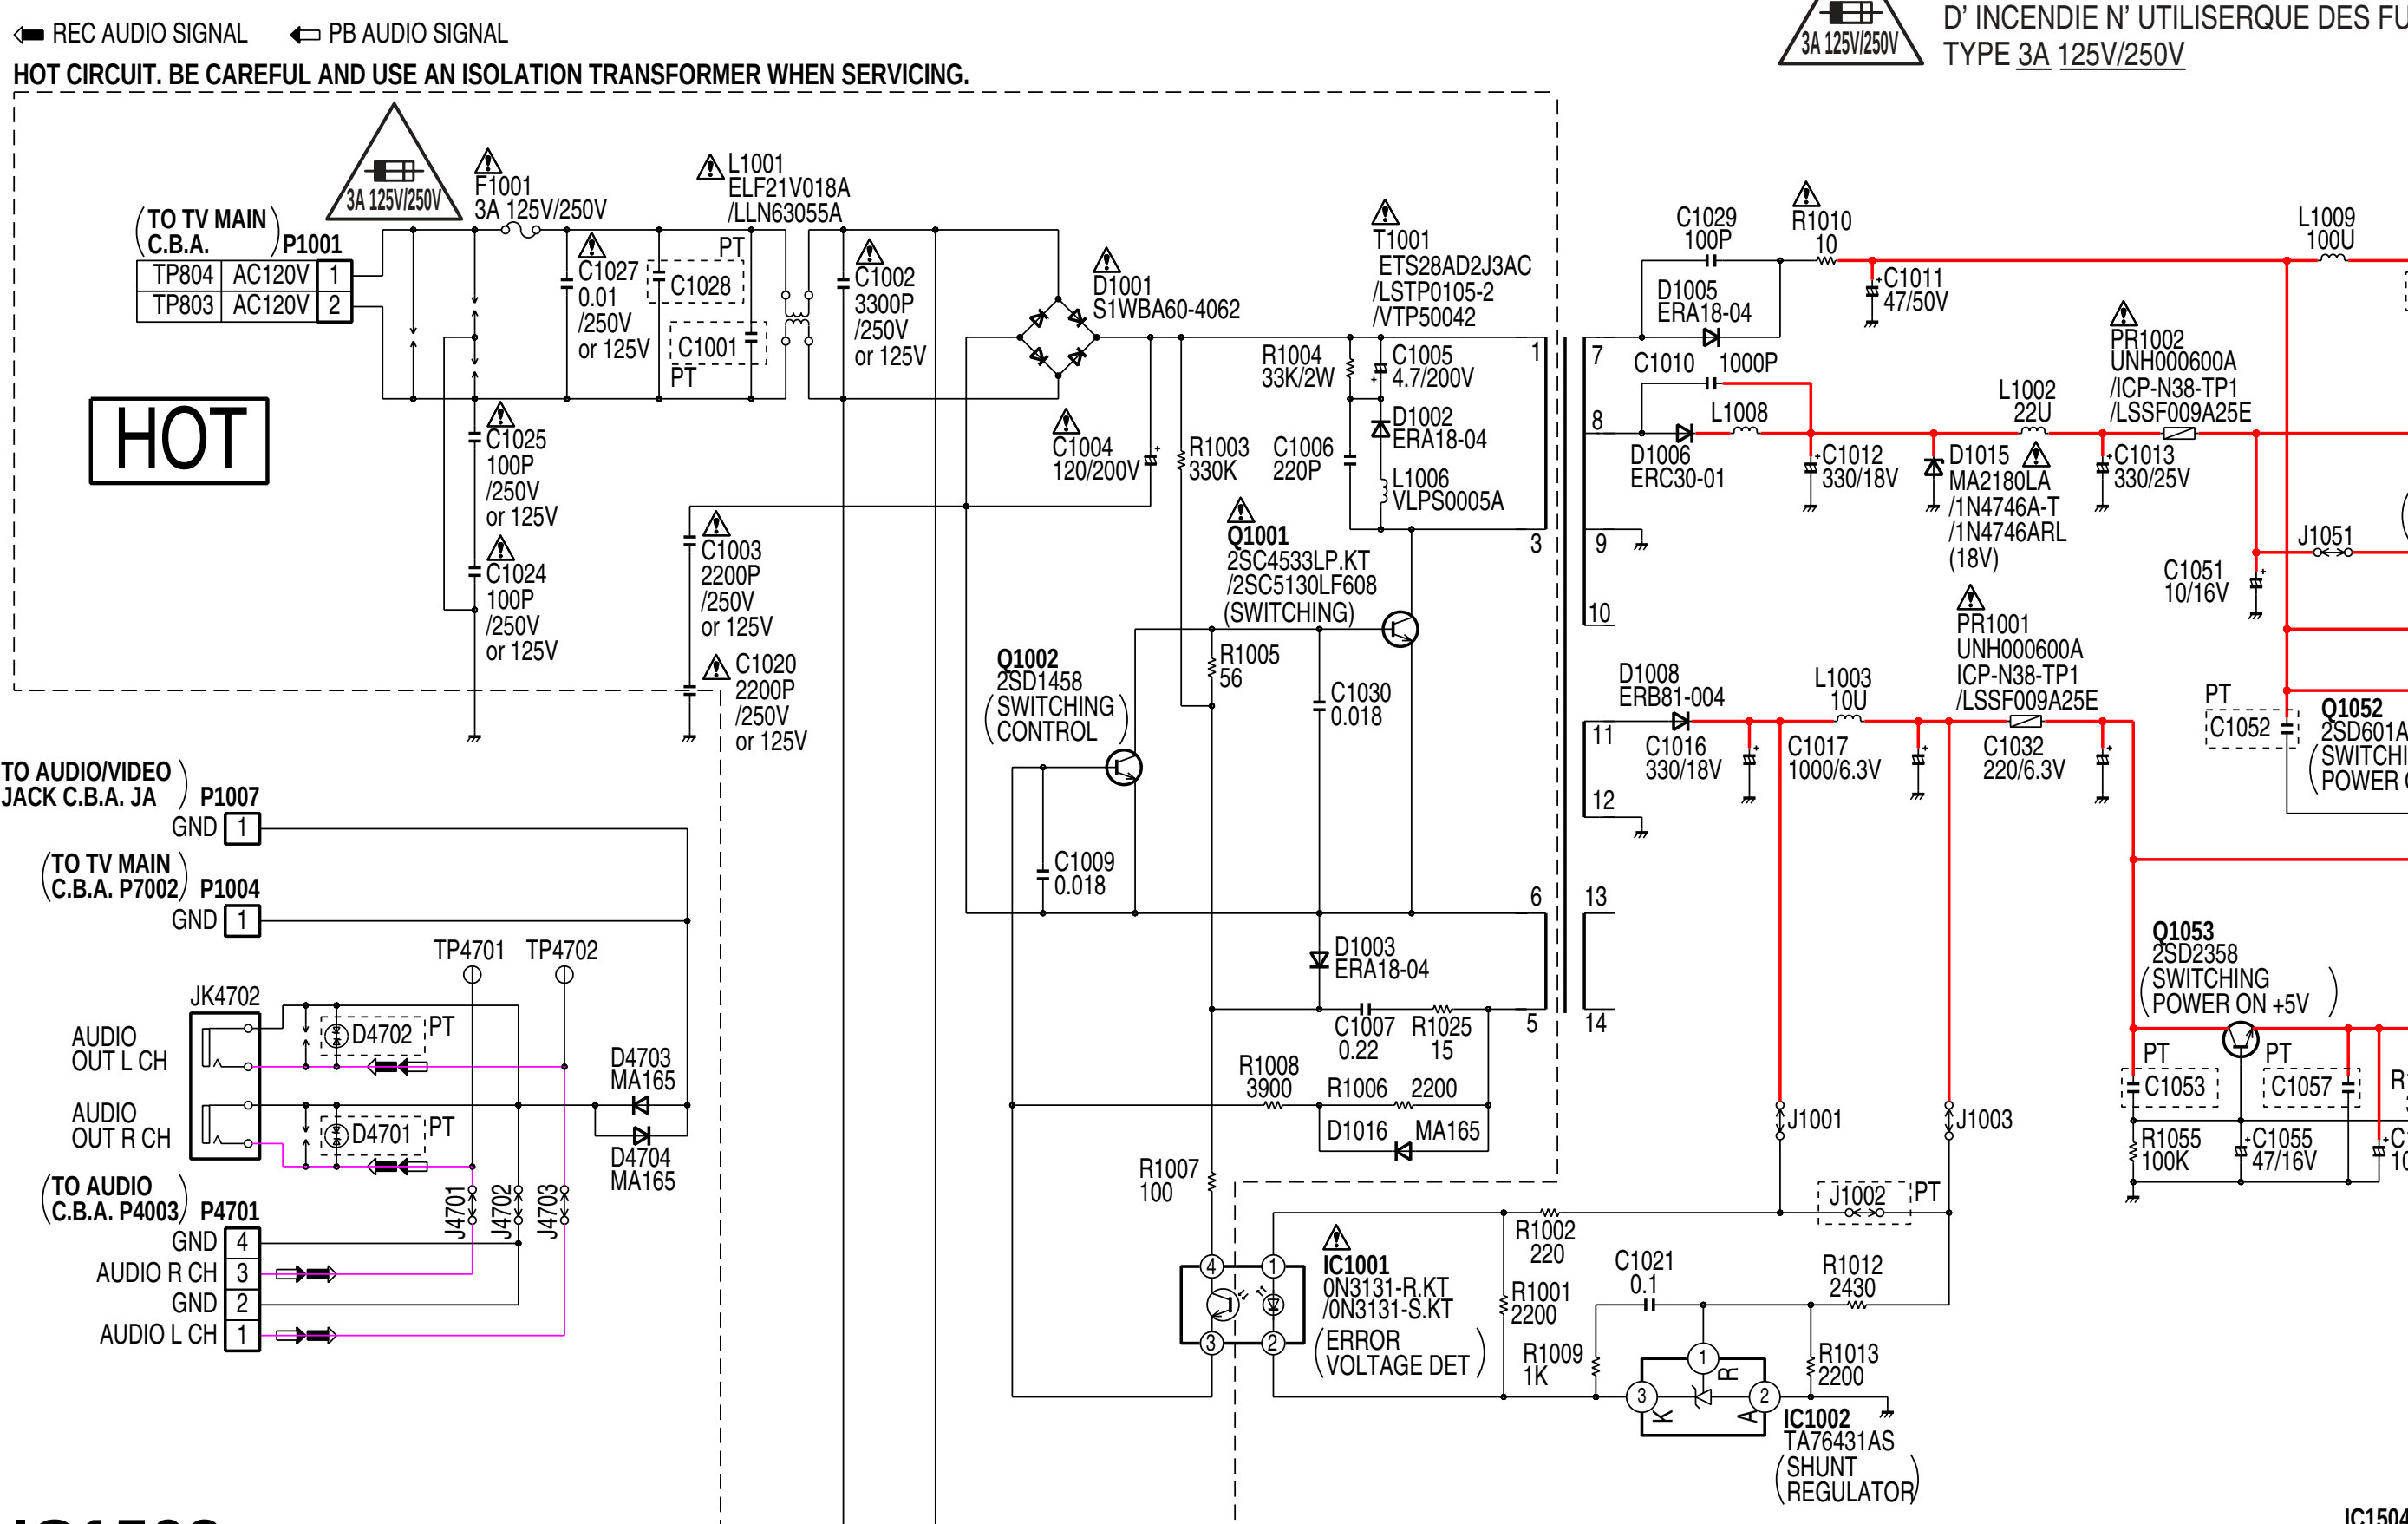

REC AUDIO SIGNAL
PB AUDIO SIGNAL
HOT CIRCUIT. BE CAREFUL AND USE AN ISOLATION TRANSFORMER WHEN SERVICING.
HOT
3A 125V/250V
TO TV MAIN C.B.A.
P1001
TP804 AC120V 1
TP803 AC120V 2
F1001 3A 125V/250V
L1001 ELF21V018A /LLN63055A
C1027 0.01 /250V or 125V
C1028
C1001
PT
C1002 3300P /250V or 125V
D1001 S1WBA60-4062
C1025 100P /250V or 125V
C1024 100P /250V or 125V
C1003 2200P /250V or 125V
C1020 2200P /250V or 125V
C1004 120/200V
R1003 330K
C1006 220P
R1004 33K/2W
C1005 4.7/200V
D1002 ERA18-04
L1006 VLPS0005A
T1001 ETS28AD2J3AC /LSTP0105-2 /VTP50042
Q1001 2SC4533LP.KT /2SC5130LF608 (SWITCHING)
Q1002 2SD1458 (SWITCHING CONTROL)
R1005 56
C1030 0.018
C1009 0.018
D1003 ERA18-04
C1007 0.22
R1025 15
R1008 3900
R1006 2200
D1016 MA165
R1007 100
TO AUDIO/VIDEO JACK C.B.A. JA
P1007
GND 1
TO TV MAIN C.B.A. P7002
P1004
GND 1
TP4701
TP4702
JK4702
AUDIO OUT L CH
AUDIO OUT R CH
D4702
D4701
D4703 MA165
D4704 MA165
TO AUDIO C.B.A. P4003
P4701
GND 4
AUDIO R CH 3
GND 2
AUDIO L CH 1
J4701
J4702
J4703
C1029 100P
R1010 10
C1011 47/50V
D1005 ERA18-04
C1010 1000P
L1008
D1006 ERC30-01
C1012 330/18V
D1015 MA2180LA /1N4746A-T /1N4746ARL (18V)
L1002 22U
PR1002 UNH000600A /ICP-N38-TP1 /LSSF009A25E
C1013 330/25V
L1009 100U
J1051
C1051 10/16V
D1008 ERB81-004
L1003 10U
PR1001 UNH000600A /ICP-N38-TP1 /LSSF009A25E
C1016 330/18V
C1017 1000/6.3V
C1032 220/6.3V
C1052
Q1052 2SD601A (SWITCHI POWER
Q1053 2SD2358 (SWITCHING POWER ON +5V)
C1053
C1057
R1055 100K
C1055 47/16V
J1001
J1003
J1002
IC1001 0N3131-R.KT /0N3131-S.KT (ERROR VOLTAGE DET)
R1002 220
R1001 2200
R1009 1K
C1021 0.1
R1012 2430
R1013 2200
IC1002 TA76431AS (SHUNT REGULATOR)

IC1002,IC1503 SHUNT REGULATOR IC- DETAIL BLOCK DIAGRAM

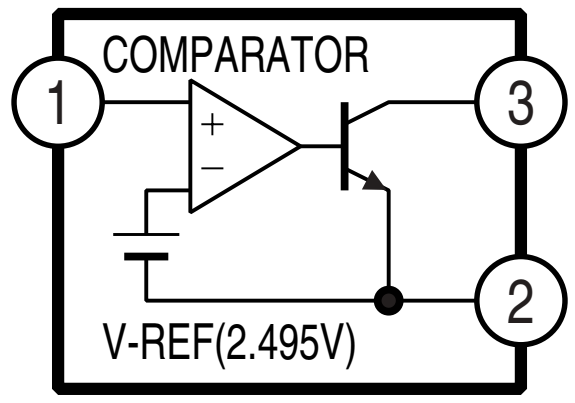

COMPARATOR
1
2
3
+
−
V-REF(2.495V)

IC1501 SWITCHING CONTROL IC- DETAIL BLOCK DIAGRAM

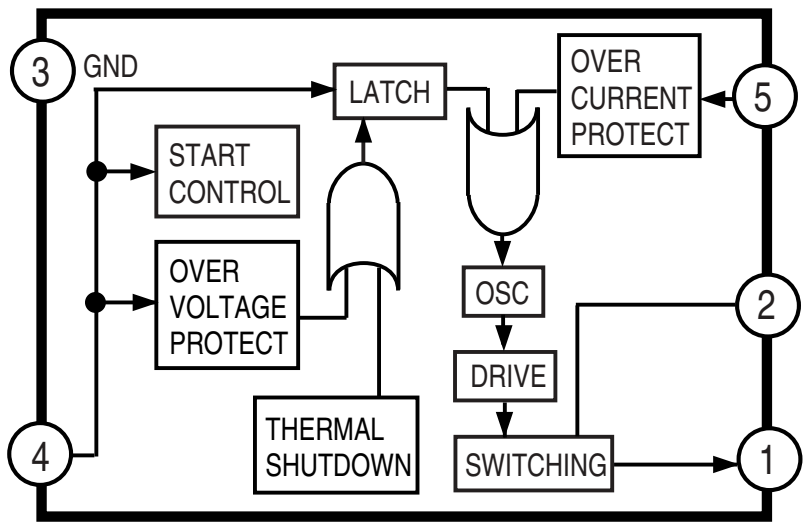

3 GND
LATCH
OVER CURRENT PROTECT
5
START CONTROL
OVER VOLTAGE PROTECT
OSC
2
DRIVE
THERMAL SHUTDOWN
SWITCHING
4
1

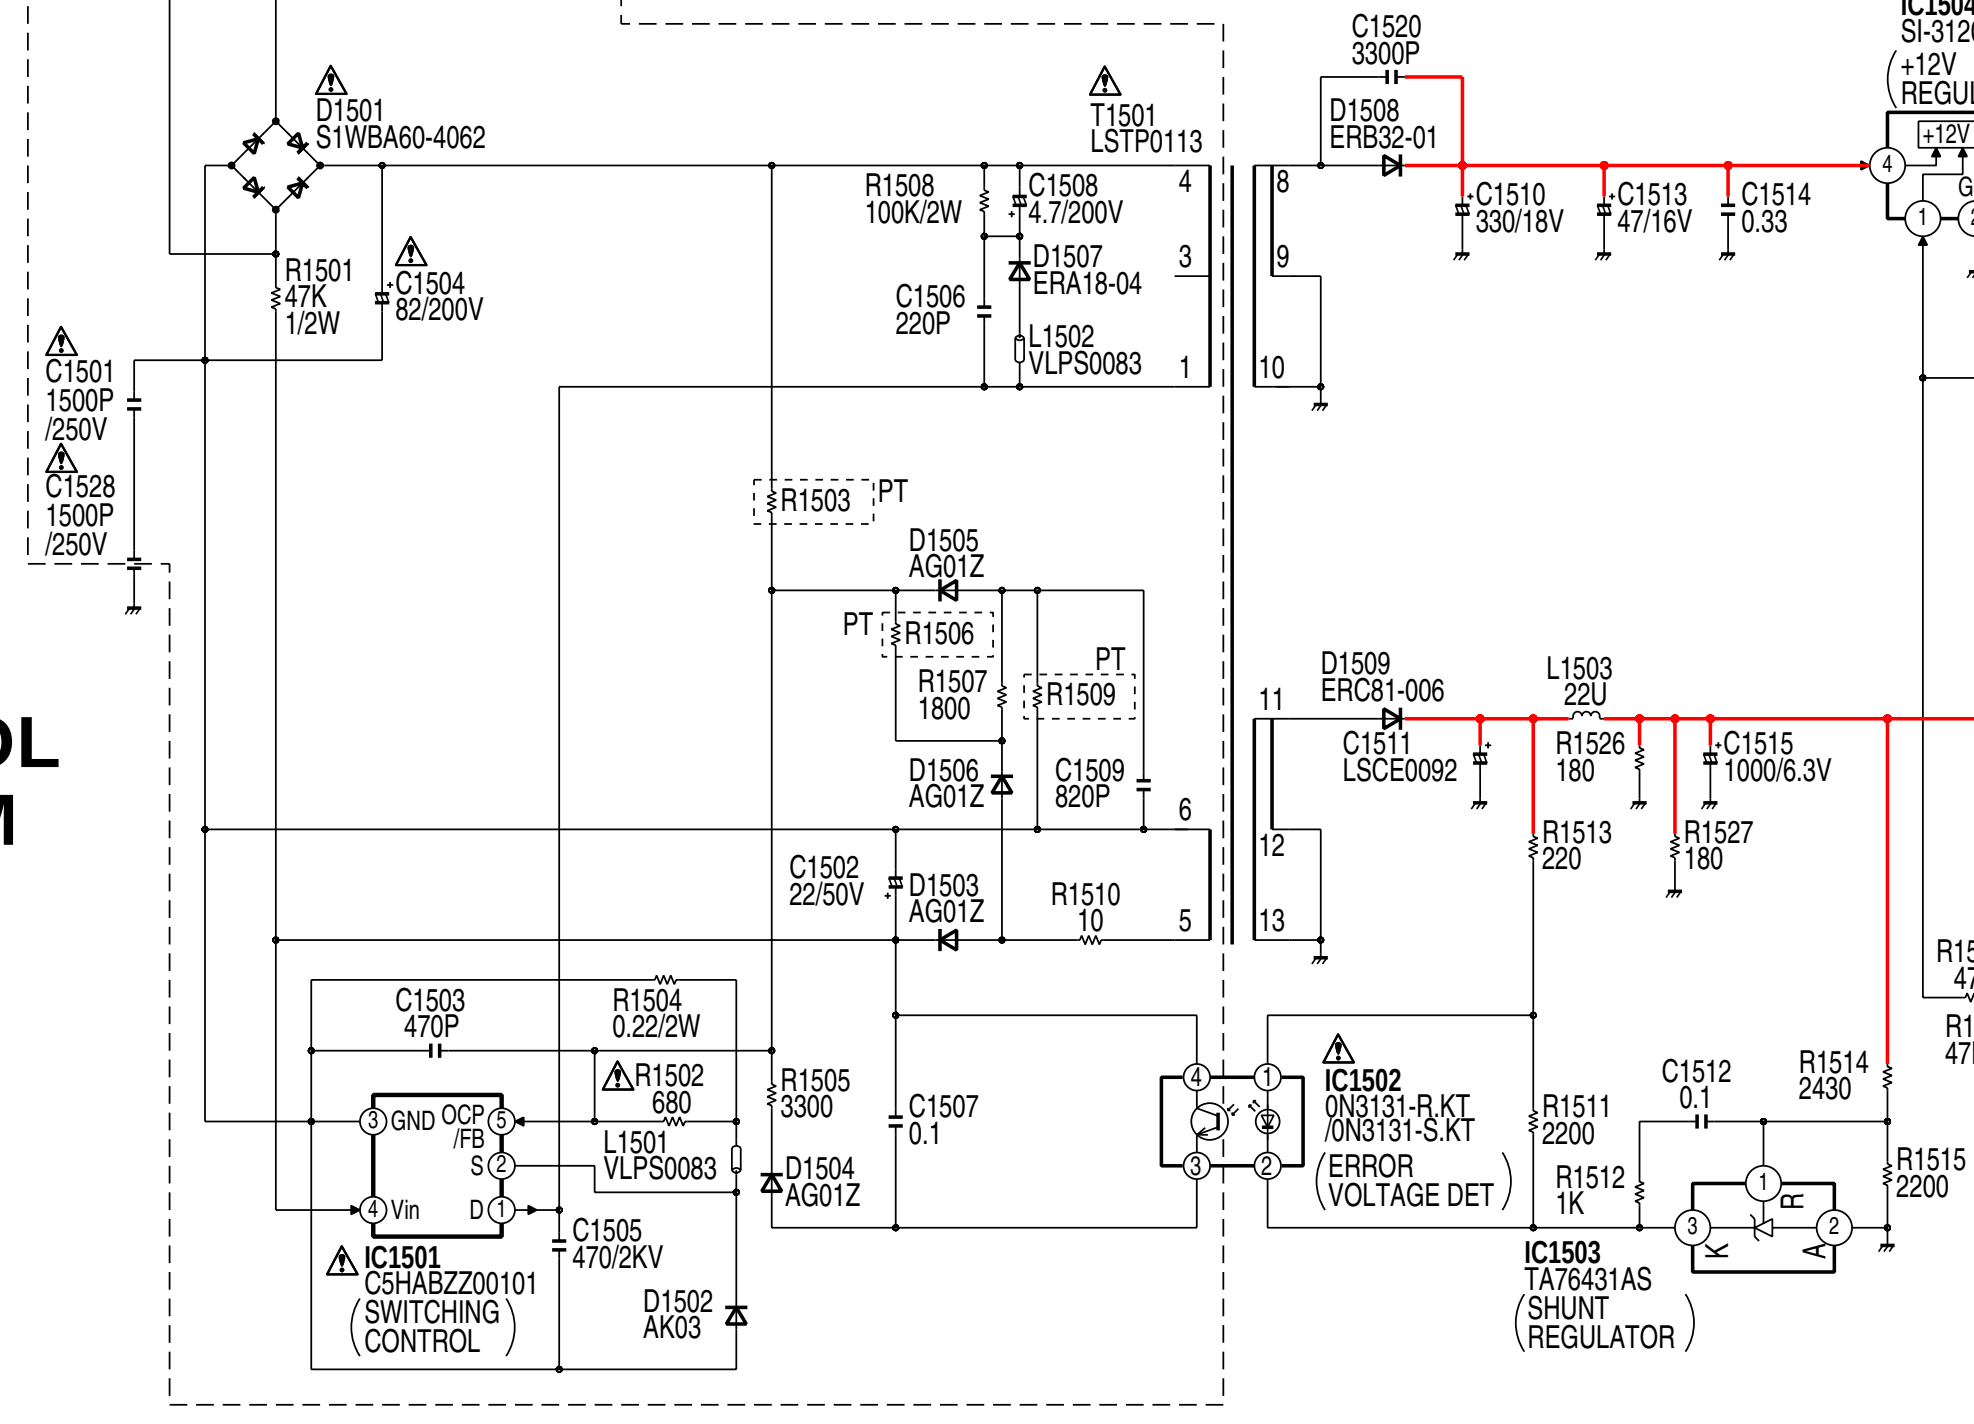

D1501 S1WBA60-4062
T1501 LSTP0113
R1501 47K 1/2W
C1504 82/200V
C1501 1500P /250V
C1528 1500P /250V
R1508 100K/2W
C1508 4.7/200V
D1507 ERA18-04
C1506 220P
L1502 VLPS0083
R1503
PT
D1505 AG01Z
R1506
R1507 1800
R1509
D1506 AG01Z
C1509 820P
C1502 22/50V
D1503 AG01Z
R1510 10
C1503 470P
R1504 0.22/2W
R1502 680
R1505 3300
C1507 0.1
L1501 VLPS0083
D1504 AG01Z
C1505 470/2KV
D1502 AK03
IC1501 C5HABZZ00101 (SWITCHING CONTROL)
GND OCP/FB S D Vin
C1520 3300P
D1508 ERB32-01
C1510 330/18V
C1513 47/16V
C1514 0.33
IC1504 SI-312 (+12V REGU
D1509 ERC81-006
L1503 22U
C1511 LSCE0092
R1526 180
C1515 1000/6.3V
R1513 220
R1527 180
IC1502 0N3131-R.KT /0N3131-S.KT (ERROR VOLTAGE DET)
R1511 2200
R1512 1K
C1512 0.1
R1514 2430
R1515 2200
IC1503 TA76431AS (SHUNT REGULATOR)

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

R CONTINUED PROTECTION AGAINST FIRE HAZARD,
PLACE ONLY WITH THE SAME TYPE 3A 125V/250V FUSE.
ENTION: POUR UNE PROTECTION CONTINUE LES RISQUES
NCENDIE N' UTILISERQUE DES FUSIBLE DE MÉME
E 3A 125V/250V

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN ⚠ HAVE
SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY.
WHEN REPLACING ANY OF THESE COMPONENTS,
USE ONLY THE SPECIFIED PARTS.

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

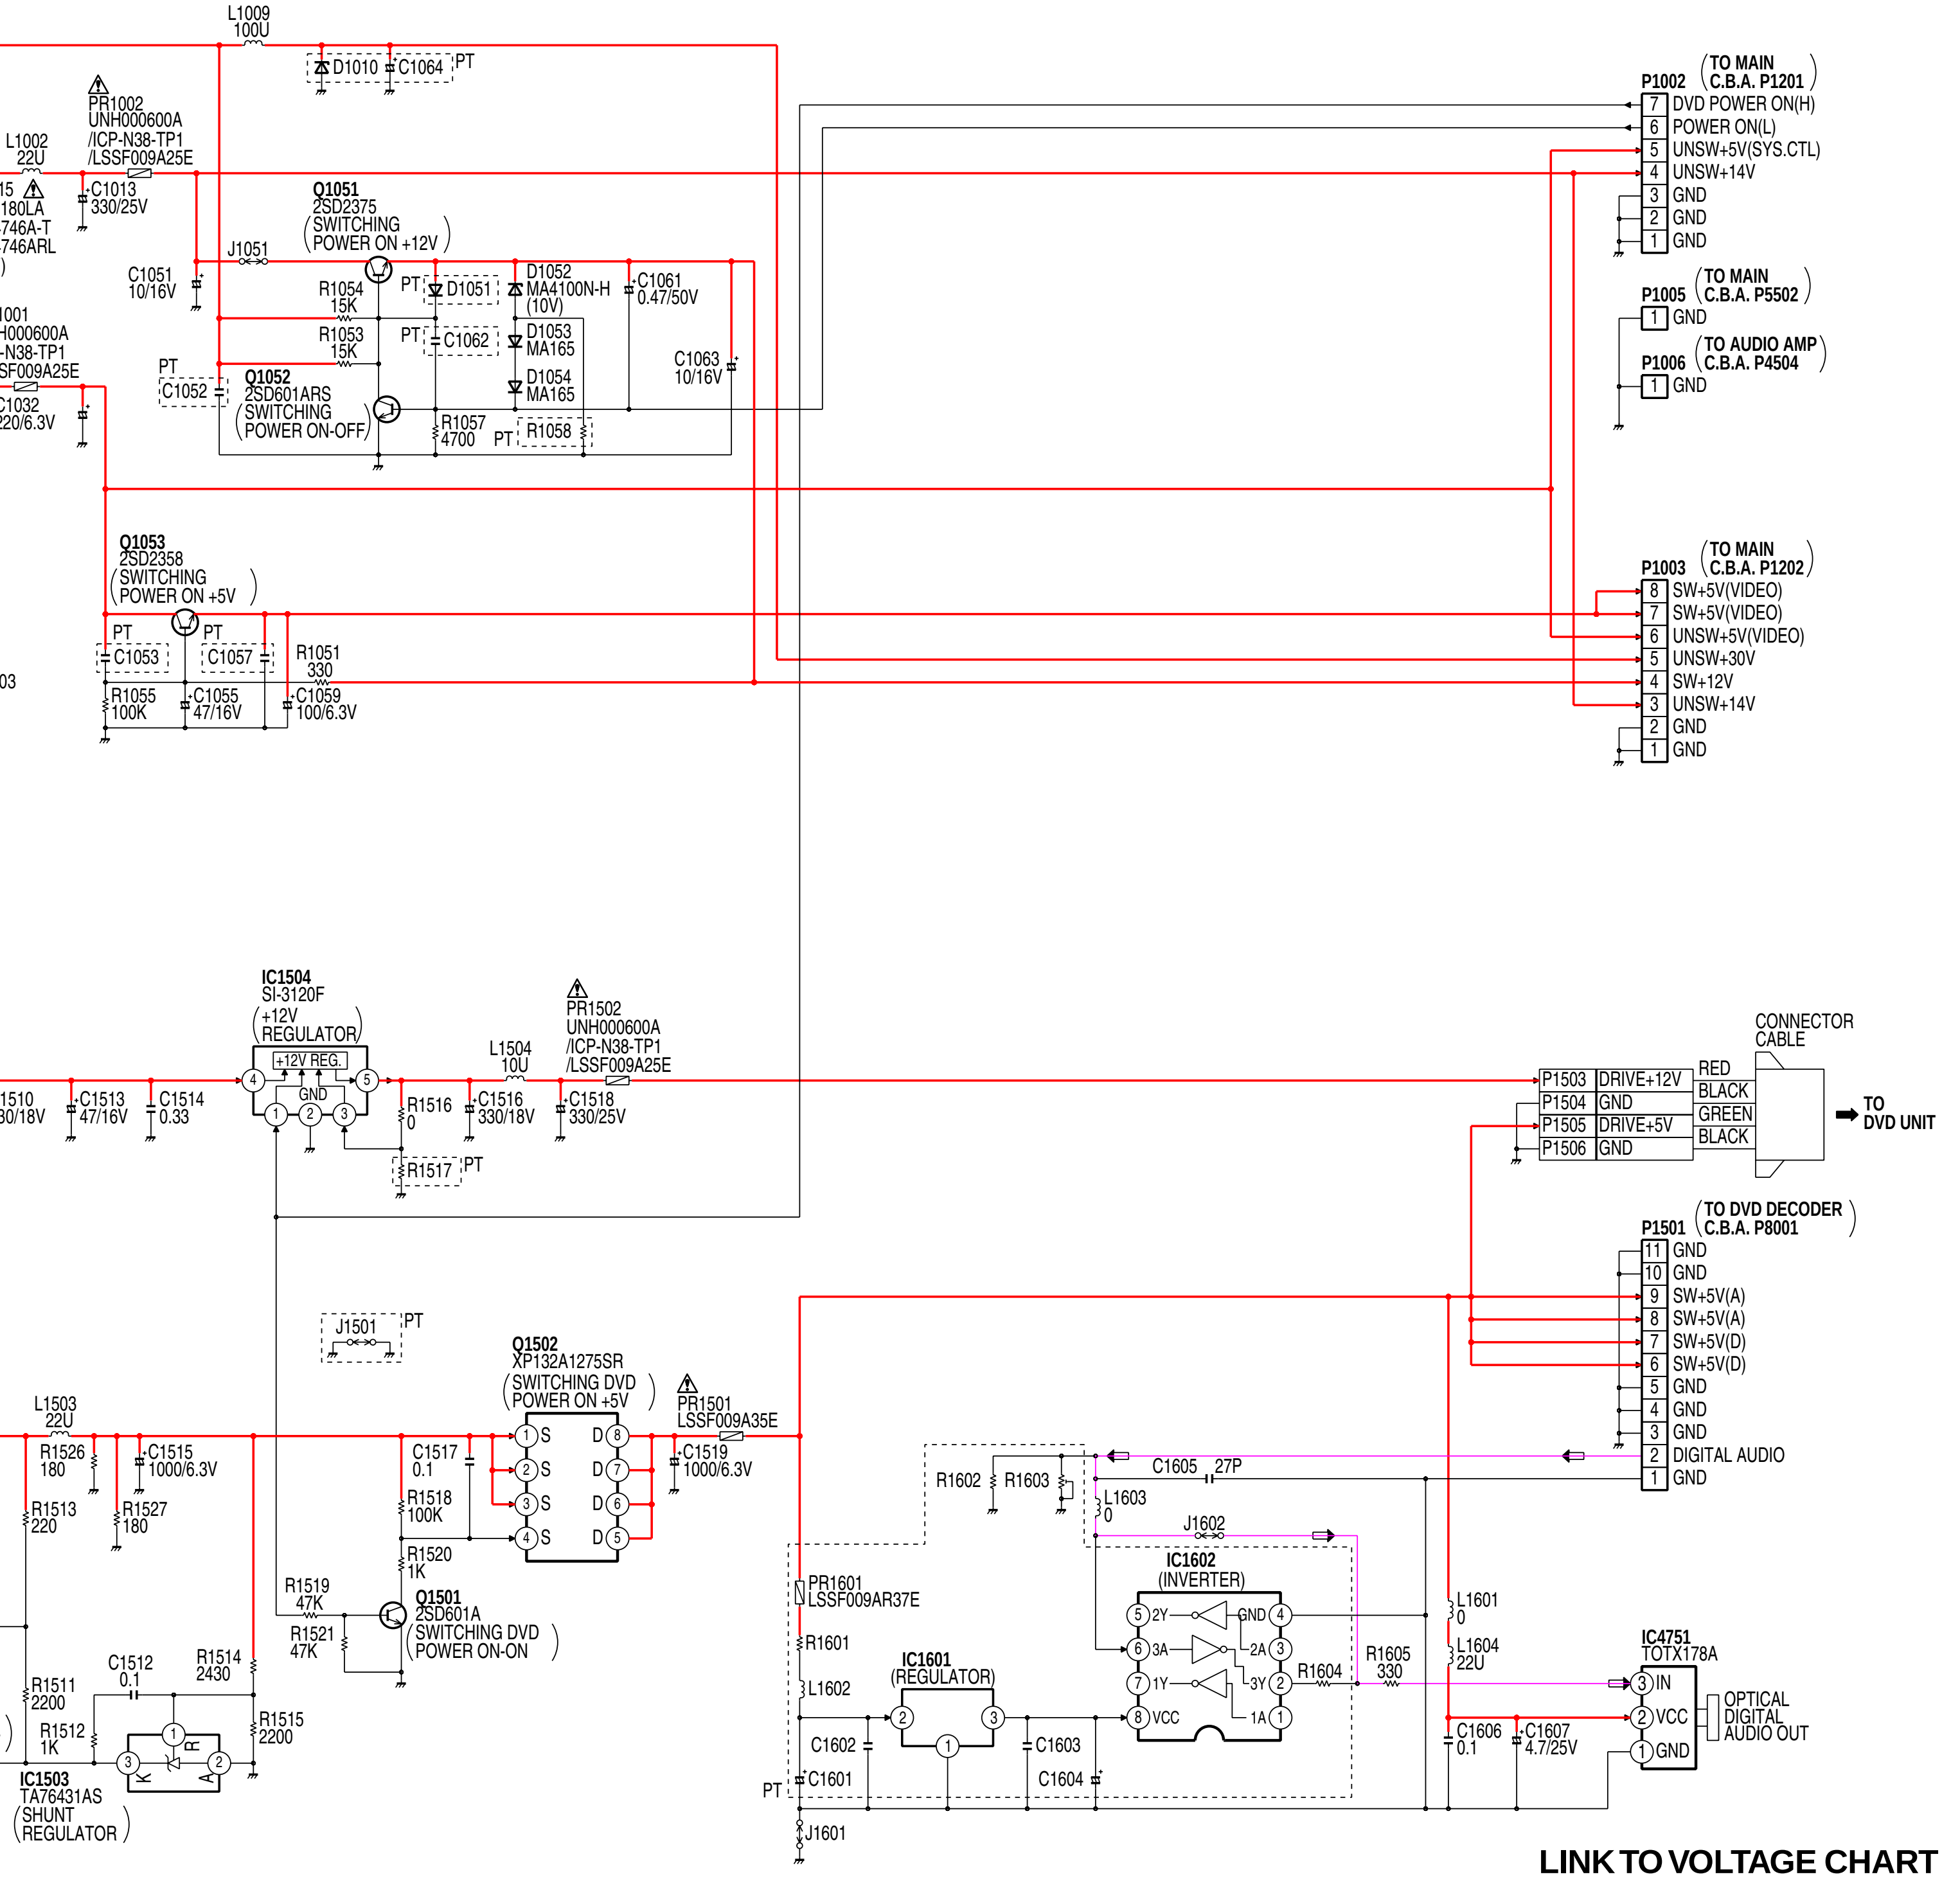
L1009 100U
D1010
C1064
PT
PR1002 UNH000600A /ICP-N38-TP1 /LSSF009A25E
L1002 22U
C1013 330/25V
15 180LA 746A-T 746ARL
Q1051 2SD2375 (SWITCHING POWER ON +12V)
J1051
C1051 10/16V
R1054 15K
R1053 15K
D1051
C1062
D1052 MA4100N-H (10V)
D1053 MA165
D1054 MA165
C1061 0.47/50V
C1063 10/16V
001 H000600A -N38-TP1 SF009A25E
C1032 220/6.3V
C1052
Q1052 2SD601ARS (SWITCHING POWER ON-OFF)
R1057 4700
R1058
P1002 (TO MAIN C.B.A. P1201)
7 DVD POWER ON(H)
6 POWER ON(L)
5 UNSW+5V(SYS.CTL)
4 UNSW+14V
3 GND
2 GND
1 GND
P1005 (TO MAIN C.B.A. P5502)
1 GND
P1006 (TO AUDIO AMP C.B.A. P4504)
1 GND
Q1053 2SD2358 (SWITCHING POWER ON +5V)
C1053
C1057
R1051 330
R1055 100K
C1055 47/16V
C1059 100/6.3V
03
P1003 (TO MAIN C.B.A. P1202)
8 SW+5V(VIDEO)
7 SW+5V(VIDEO)
6 UNSW+5V(VIDEO)
5 UNSW+30V
4 SW+12V
3 UNSW+14V
2 GND
1 GND
IC1504 SI-3120F (+12V REGULATOR)
+12V REG.
GND
PR1502 UNH000600A /ICP-N38-TP1 /LSSF009A25E
L1504 10U
1510 330/18V
C1513 47/16V
C1514 0.33
R1516 0
C1516 330/18V
C1518 330/25V
R1517
CONNECTOR CABLE
P1503 DRIVE+12V RED
P1504 GND BLACK
P1505 DRIVE+5V GREEN
P1506 GND BLACK
TO DVD UNIT
P1501 (TO DVD DECODER C.B.A. P8001)
11 GND
10 GND
9 SW+5V(A)
8 SW+5V(A)
7 SW+5V(D)
6 SW+5V(D)
5 GND
4 GND
3 GND
2 DIGITAL AUDIO
1 GND
J1501
Q1502 XP132A1275SR (SWITCHING DVD POWER ON +5V)
PR1501 LSSF009A35E
L1503 22U
R1526 180
C1515 1000/6.3V
C1517 0.1
C1519 1000/6.3V
R1513 220
R1527 180
R1518 100K
R1520 1K
R1519 47K
R1521 47K
Q1501 2SD601A (SWITCHING DVD POWER ON-ONE)
R1511 2200
C1512 0.1
R1514 2430
R1512 1K
R1515 2200
IC1503 TA76431AS (SHUNT REGULATOR)
R1602
R1603
C1605 27P
L1603 0
J1602
IC1602 (INVERTER)
2Y GND 2A 3A 1Y 3Y 1A VCC
PR1601 LSSF009AR37E
R1601
L1602
IC1601 (REGULATOR)
C1602
C1603
C1601
C1604
J1601
R1604
R1605 330
L1601 0
L1604 22U
IC4751 TOTX178A
IN VCC GND
OPTICAL DIGITAL AUDIO OUT
C1606 0.1
C1607 4.7/25V

LINK TO VOLTAGE CHART

VJPS1029
PV-DM2792/PV-DM2792-K
POWER SUPPLY SCHEMATIC DIAGRAM

8.6. TV MAIN SCHEMATIC DIAGRAMS

TV MAIN SCHEMATIC DIAGRAM

4A 125/250V

CAUTION: FOR CONTINUED PROTECTION A
REPLACE ONLY WITH THE SAME
ATTENTION: POUR UNE PROTEC
D' INCENDIE N' UTILISERQUE DES
TYPE 4A 125/250V

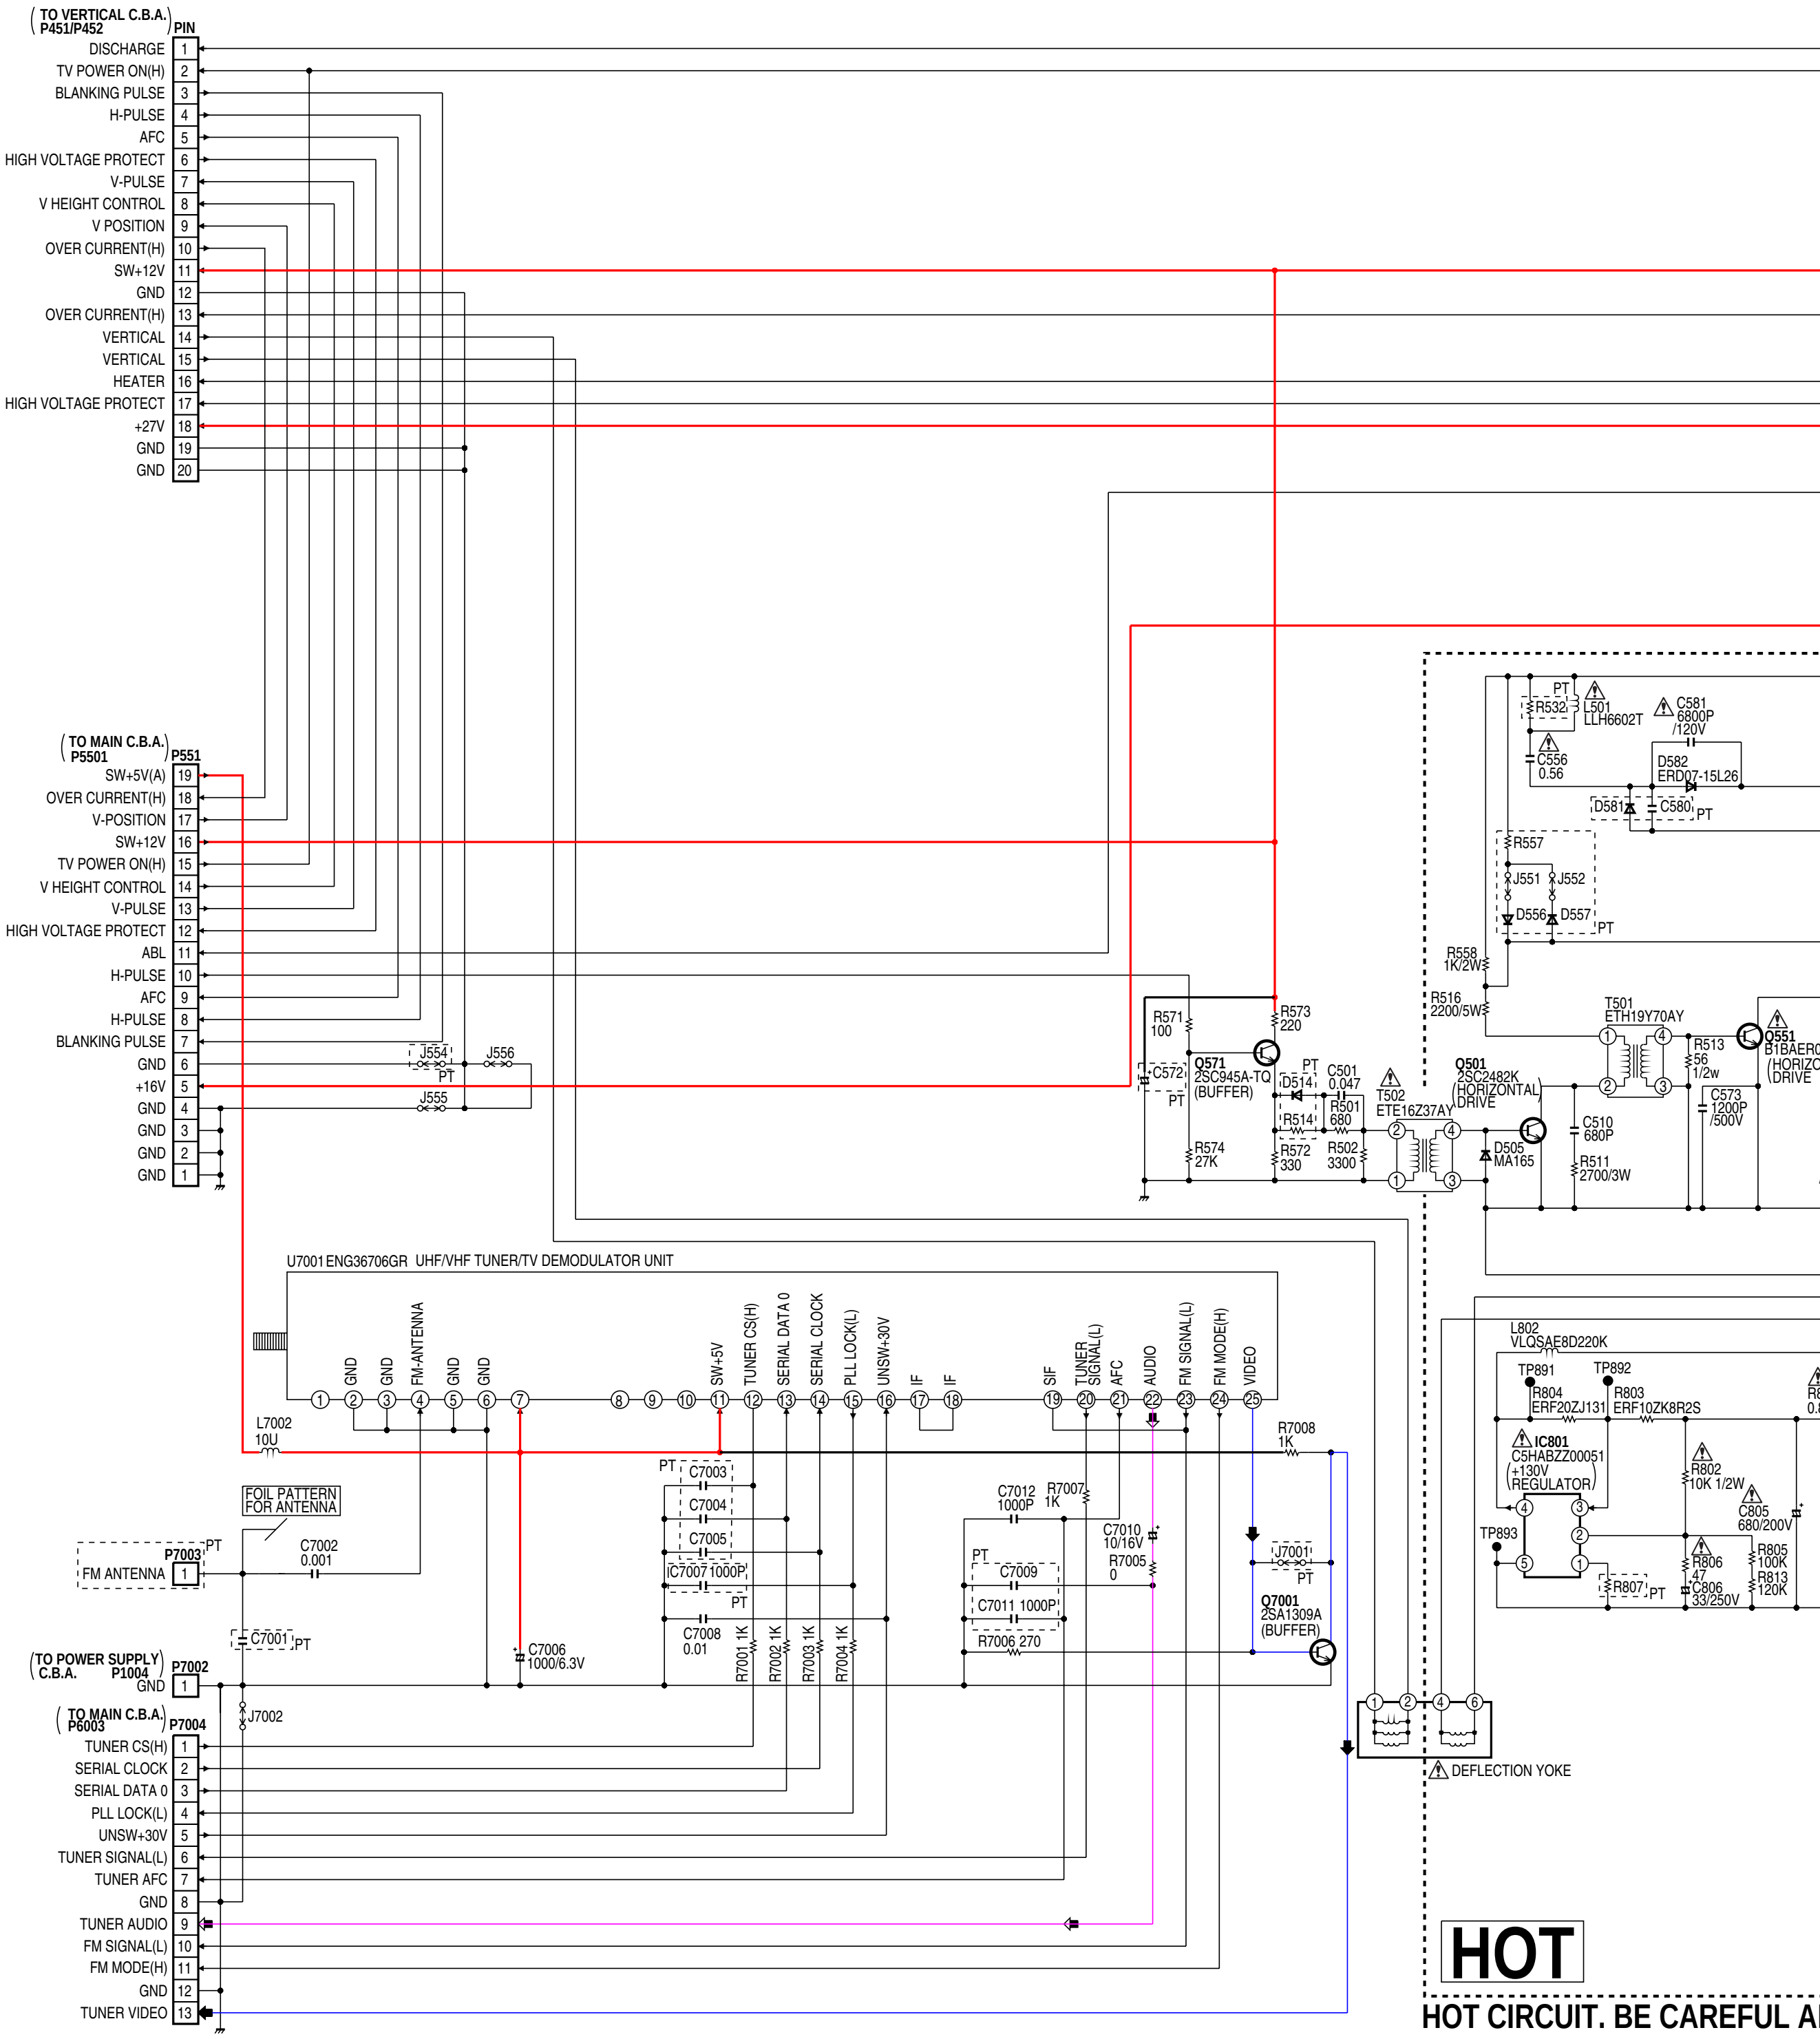

TO VERTICAL C.B.A. P451/P452
PIN
DISCHARGE 1
TV POWER ON(H) 2
BLANKING PULSE 3
H-PULSE 4
AFC 5
HIGH VOLTAGE PROTECT 6
V-PULSE 7
V HEIGHT CONTROL 8
V POSITION 9
OVER CURRENT(H) 10
SW+12V 11
GND 12
OVER CURRENT(H) 13
VERTICAL 14
VERTICAL 15
HEATER 16
HIGH VOLTAGE PROTECT 17
+27V 18
GND 19
GND 20
TO MAIN C.B.A. P5501
P551
SW+5V(A) 19
OVER CURRENT(H) 18
V-POSITION 17
SW+12V 16
TV POWER ON(H) 15
V HEIGHT CONTROL 14
V-PULSE 13
HIGH VOLTAGE PROTECT 12
ABL 11
H-PULSE 10
AFC 9
H-PULSE 8
BLANKING PULSE 7
GND 6
+16V 5
GND 4
GND 3
GND 2
GND 1
J554
PT
J556
J555
U7001 ENG36706GR UHF/VHF TUNER/TV DEMODULATOR UNIT
GND
GND
FM-ANTENNA
GND
GND
SW+5V
TUNER CS(H)
SERIAL DATA 0
SERIAL CLOCK
PLL LOCK(L)
UNSW+30V
IF
IF
SIF
TUNER SIGNAL(L)
AFC
AUDIO
FM SIGNAL(L)
FM MODE(H)
VIDEO
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25
L7002 10U
FOIL PATTERN FOR ANTENNA
P7003
PT
FM ANTENNA 1
C7002 0.001
C7001
PT
C7006 1000/6.3V
PT
C7003
C7004
C7005
IC7007 1000P
PT
C7008 0.01
R7001 1K
R7002 1K
R7003 1K
R7004 1K
C7012 1000P
R7007 1K
PT
C7009
C7011 1000P
R7006 270
C7010 10/16V
R7005 0
R7008 1K
J7001
PT
Q7001 2SA1309A (BUFFER)
TO POWER SUPPLY C.B.A. P1004
P7002
GND 1
TO MAIN C.B.A. P6003
P7004
J7002
TUNER CS(H) 1
SERIAL CLOCK 2
SERIAL DATA 0 3
PLL LOCK(L) 4
UNSW+30V 5
TUNER SIGNAL(L) 6
TUNER AFC 7
GND 8
TUNER AUDIO 9
FM SIGNAL(L) 10
FM MODE(H) 11
GND 12
TUNER VIDEO 13
PT
R532
L501 LLH6602T
C581 6800P /120V
C556 0.56
D582 ERD07-15L26
D581
C580
PT
R557
J551
J552
D556
D557
PT
R558 1K/2W
R516 2200/5W
R571 100
R573 220
Q571 2SC945A-TQ (BUFFER)
C572
PT
PT
D514
C501 0.047
R514
R501 680
R574 27K
R572 330
R502 3300
T502 ETE16Z37AY
Q501 2SC2482K (HORIZONTAL DRIVE
D505 MA165
C510 680P
R511 2700/3W
T501 ETH19Y70AY
R513 56 1/2W
C573 1200P /500V
Q551 B1BAERC (HORIZC DRIVE
L802 VLQSAE8D220K
TP891
TP892
R804 ERF20ZJ131
R803 ERF10ZK8R2S
IC801 C5HABZZ00051 +130V REGULATOR
R802 10K 1/2W
C805 680/200V
TP893
R806 47
R805 100K
R813 120K
R807
PT
C806 33/250V
DEFLECTION YOKE
HOT
HOT CIRCUIT. BE CAREFUL A

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,
REPLACE ONLY WITH THE SAME TYPE 4A 125/250V FUSE.
ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES
D' INCENDIE N' UTILISERQUE DES FUSIBLE DE MÉME
TYPE 4A 125/250V

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN ⚠ HAVE
SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY.
WHEN REPLACING ANY OF THESE COMPONENTS,
USE ONLY THE SPECIFIED PARTS.

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

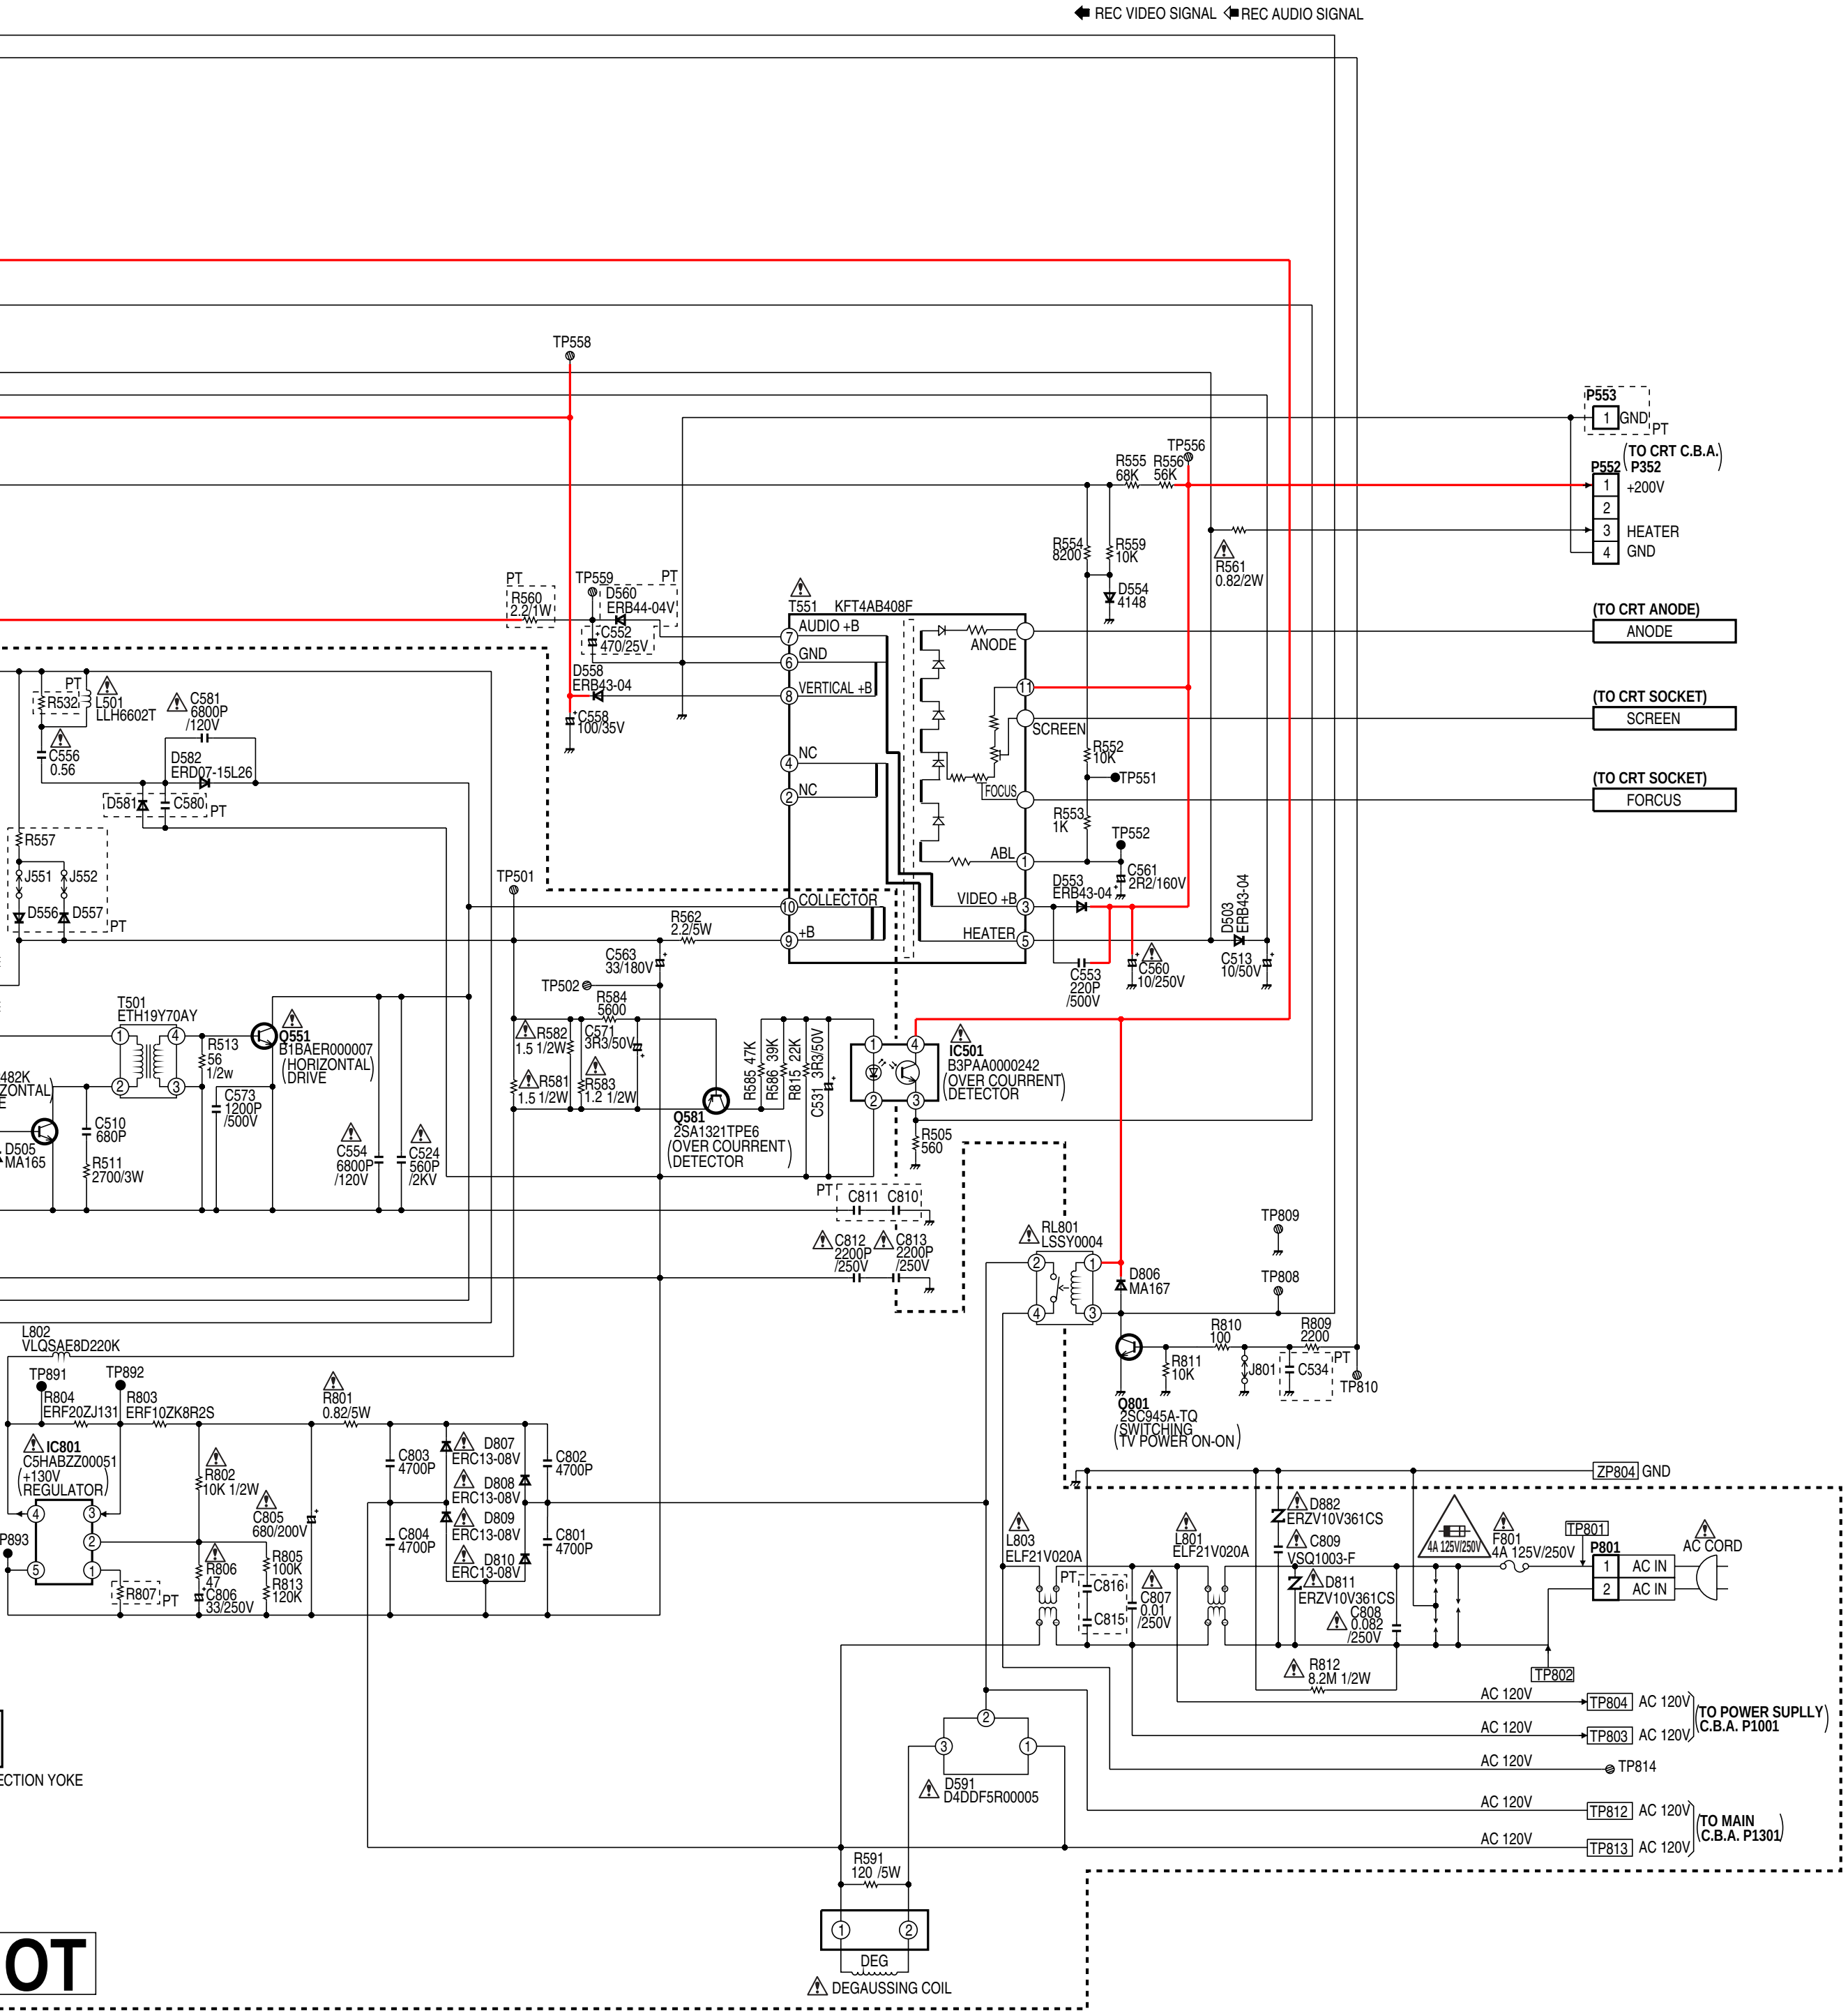

REC VIDEO SIGNAL
REC AUDIO SIGNAL
TP558
P553
1 GND
PT
(TO CRT C.B.A.)
P552 P352
1 +200V
2
3 HEATER
4 GND
TP556
R555 68K
R556 56K
R554 8200
R559 10K
D554 4148
R561 0.82/2W
(TO CRT ANODE)
ANODE
(TO CRT SOCKET)
SCREEN
(TO CRT SOCKET)
FORCUS
T551 KFT4AB408F
AUDIO +B
GND
VERTICAL +B
NC
NC
COLLECTOR
+B
ANODE
SCREEN
FOCUS
ABL
VIDEO +B
HEATER
R552 10K
TP551
R553 1K
TP552
D553 ERB43-04
C561 2R2/160V
C553 220P /500V
C560 10/250V
D503 ERB43-04
C513 10/50V
R560 2.2/1W
TP559
D560 ERB44-04V
C552 470/25V
D558 ERB43-04
C558 100/35V
R532
L501 LLH6602T
C581 6800P /120V
C556 0.56
D582 ERD07-15L26
D581
C580
R557
J551
J552
D556
D557
TP501
R562 2.2/5W
C563 33/180V
TP502
R584 5600
R582 1.5 1/2W
C571 3R3/50V
R581 1.5 1/2W
R583 1.2 1/2W
Q581 2SA1321TPE6 (OVER COURRENT DETECTOR)
R585 47K
R586 39K
R815 22K
C531 3R3/50V
IC501 B3PAA0000242 (OVER COURRENT DETECTOR)
R505 560
T501 ETH19Y70AY
R513 56 1/2w
Q551 B1BAER000007 (HORIZONTAL DRIVE)
C573 1200P /500V
C510 680P
R511 2700/3W
D505 MA165
C554 6800P /120V
C524 560P /2KV
C811
C810
C812 2200P /250V
C813 2200P /250V
RL801 LSSY0004
D806 MA167
TP809
TP808
R810 100
R809 2200
R811 10K
J801
C534
TP810
Q801 2SC945A-TQ (SWITCHING TV POWER ON-ON)
L802 VLQSAE8D220K
TP891
TP892
R804 ERF20ZJ131
R803 ERF10ZK8R2S
R801 0.82/5W
IC801 C5HABZZ00051 (+130V REGULATOR)
R802 10K 1/2W
C805 680/200V
R806 47
R805 100K
R813 120K
R807
C806 33/250V
C803 4700P
C804 4700P
D807 ERC13-08V
D808 ERC13-08V
D809 ERC13-08V
D810 ERC13-08V
C802 4700P
C801 4700P
ZP804 GND
L803 ELF21V020A
C816
C815
C807 0.01 /250V
L801 ELF21V020A
D882 ERZV10V361CS
C809 VSQ1003-F
D811 ERZV10V361CS
C808 0.082 /250V
R812 8.2M 1/2W
4A 125V/250V
F801 4A 125V/250V
TP801
P801
1 AC IN
2 AC IN
AC CORD
TP802
AC 120V
TP804 AC 120V
TP803 AC 120V
(TO POWER SUPLLY C.B.A. P1001)
TP814
TP812 AC 120V
TP813 AC 120V
(TO MAIN C.B.A. P1301)
D591 D4DDF5R00005
R591 120 /5W
DEG
DEGAUSSING COIL
482K
ZONTAL
P893
ECTION YOKE

OT

CIRCUIT. BE CAREFUL AND USE AN ISOLATION TRANSFORMER WHEN SERVICING.

LINK TO VOLTAGE CHART

LRP61012
PV-DM2792/PV-DM2792-K
TV MAIN SCHEMATIC DIAGRAM

8.7. CRT SCHEMATIC DIAGRAM

CRT SCHEMATIC DIAGRAM

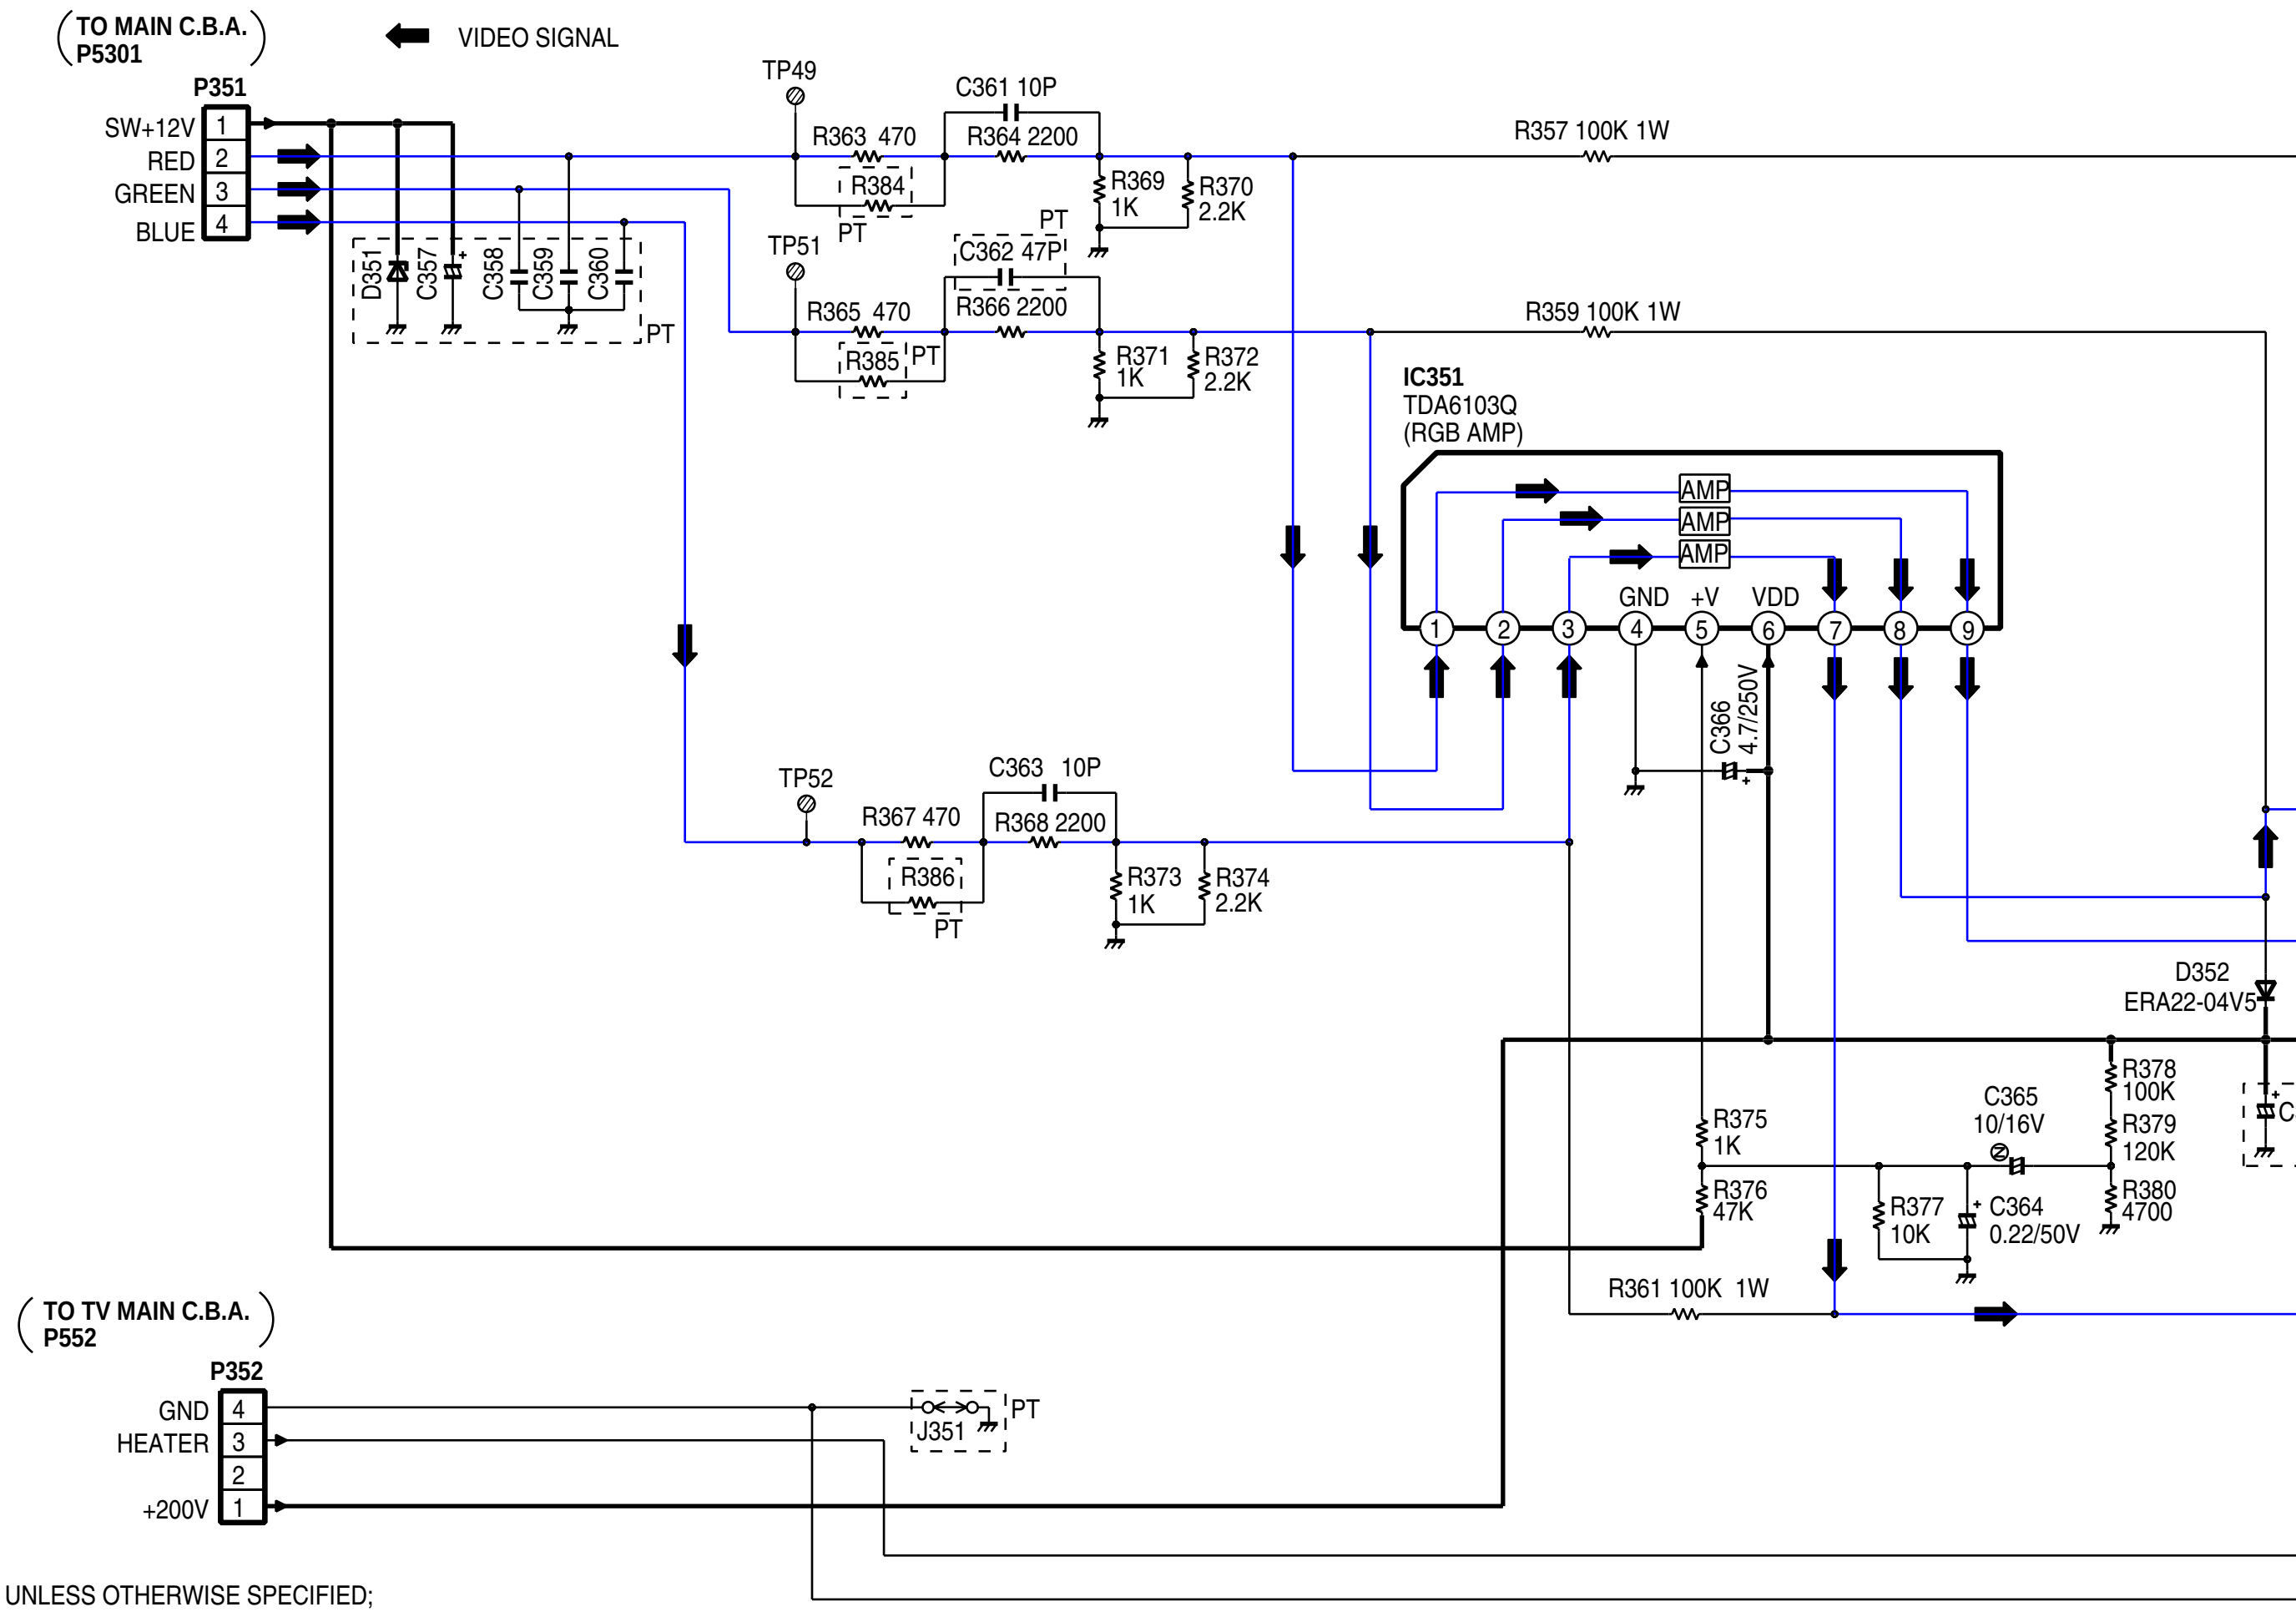
TO MAIN C.B.A.
P5301
VIDEO SIGNAL
P351
SW+12V 1
RED 2
GREEN 3
BLUE 4
D351
C357
C358
C359
C360
PT
TP49
C361 10P
R363 470
R364 2200
R384
PT
R369 1K
R370 2.2K
R357 100K 1W
TP51
C362 47P
R365 470
R366 2200
R385
R371 1K
R372 2.2K
R359 100K 1W
IC351
TDA6103Q
(RGB AMP)
AMP
AMP
AMP
GND
+V
VDD
1
2
3
4
5
6
7
8
9
C366
4.7/250V
TP52
C363 10P
R367 470
R368 2200
R386
R373 1K
R374 2.2K
D352
ERA22-04V5
R378 100K
C365 10/16V
R379 120K
R375 1K
R376 47K
R377 10K
C364 0.22/50V
R380 4700
R361 100K 1W
TO TV MAIN C.B.A.
P552
P352
GND 4
HEATER 3
2
+200V 1
J351

UNLESS OTHERWISE SPECIFIED;
WATTAGE OF RESISTORS IS 1/10W.

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN ⚠ HAVE
SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY.
WHEN REPLACING ANY OF THESE COMPONENTS,
USE ONLY THE SPECIFIED PARTS.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

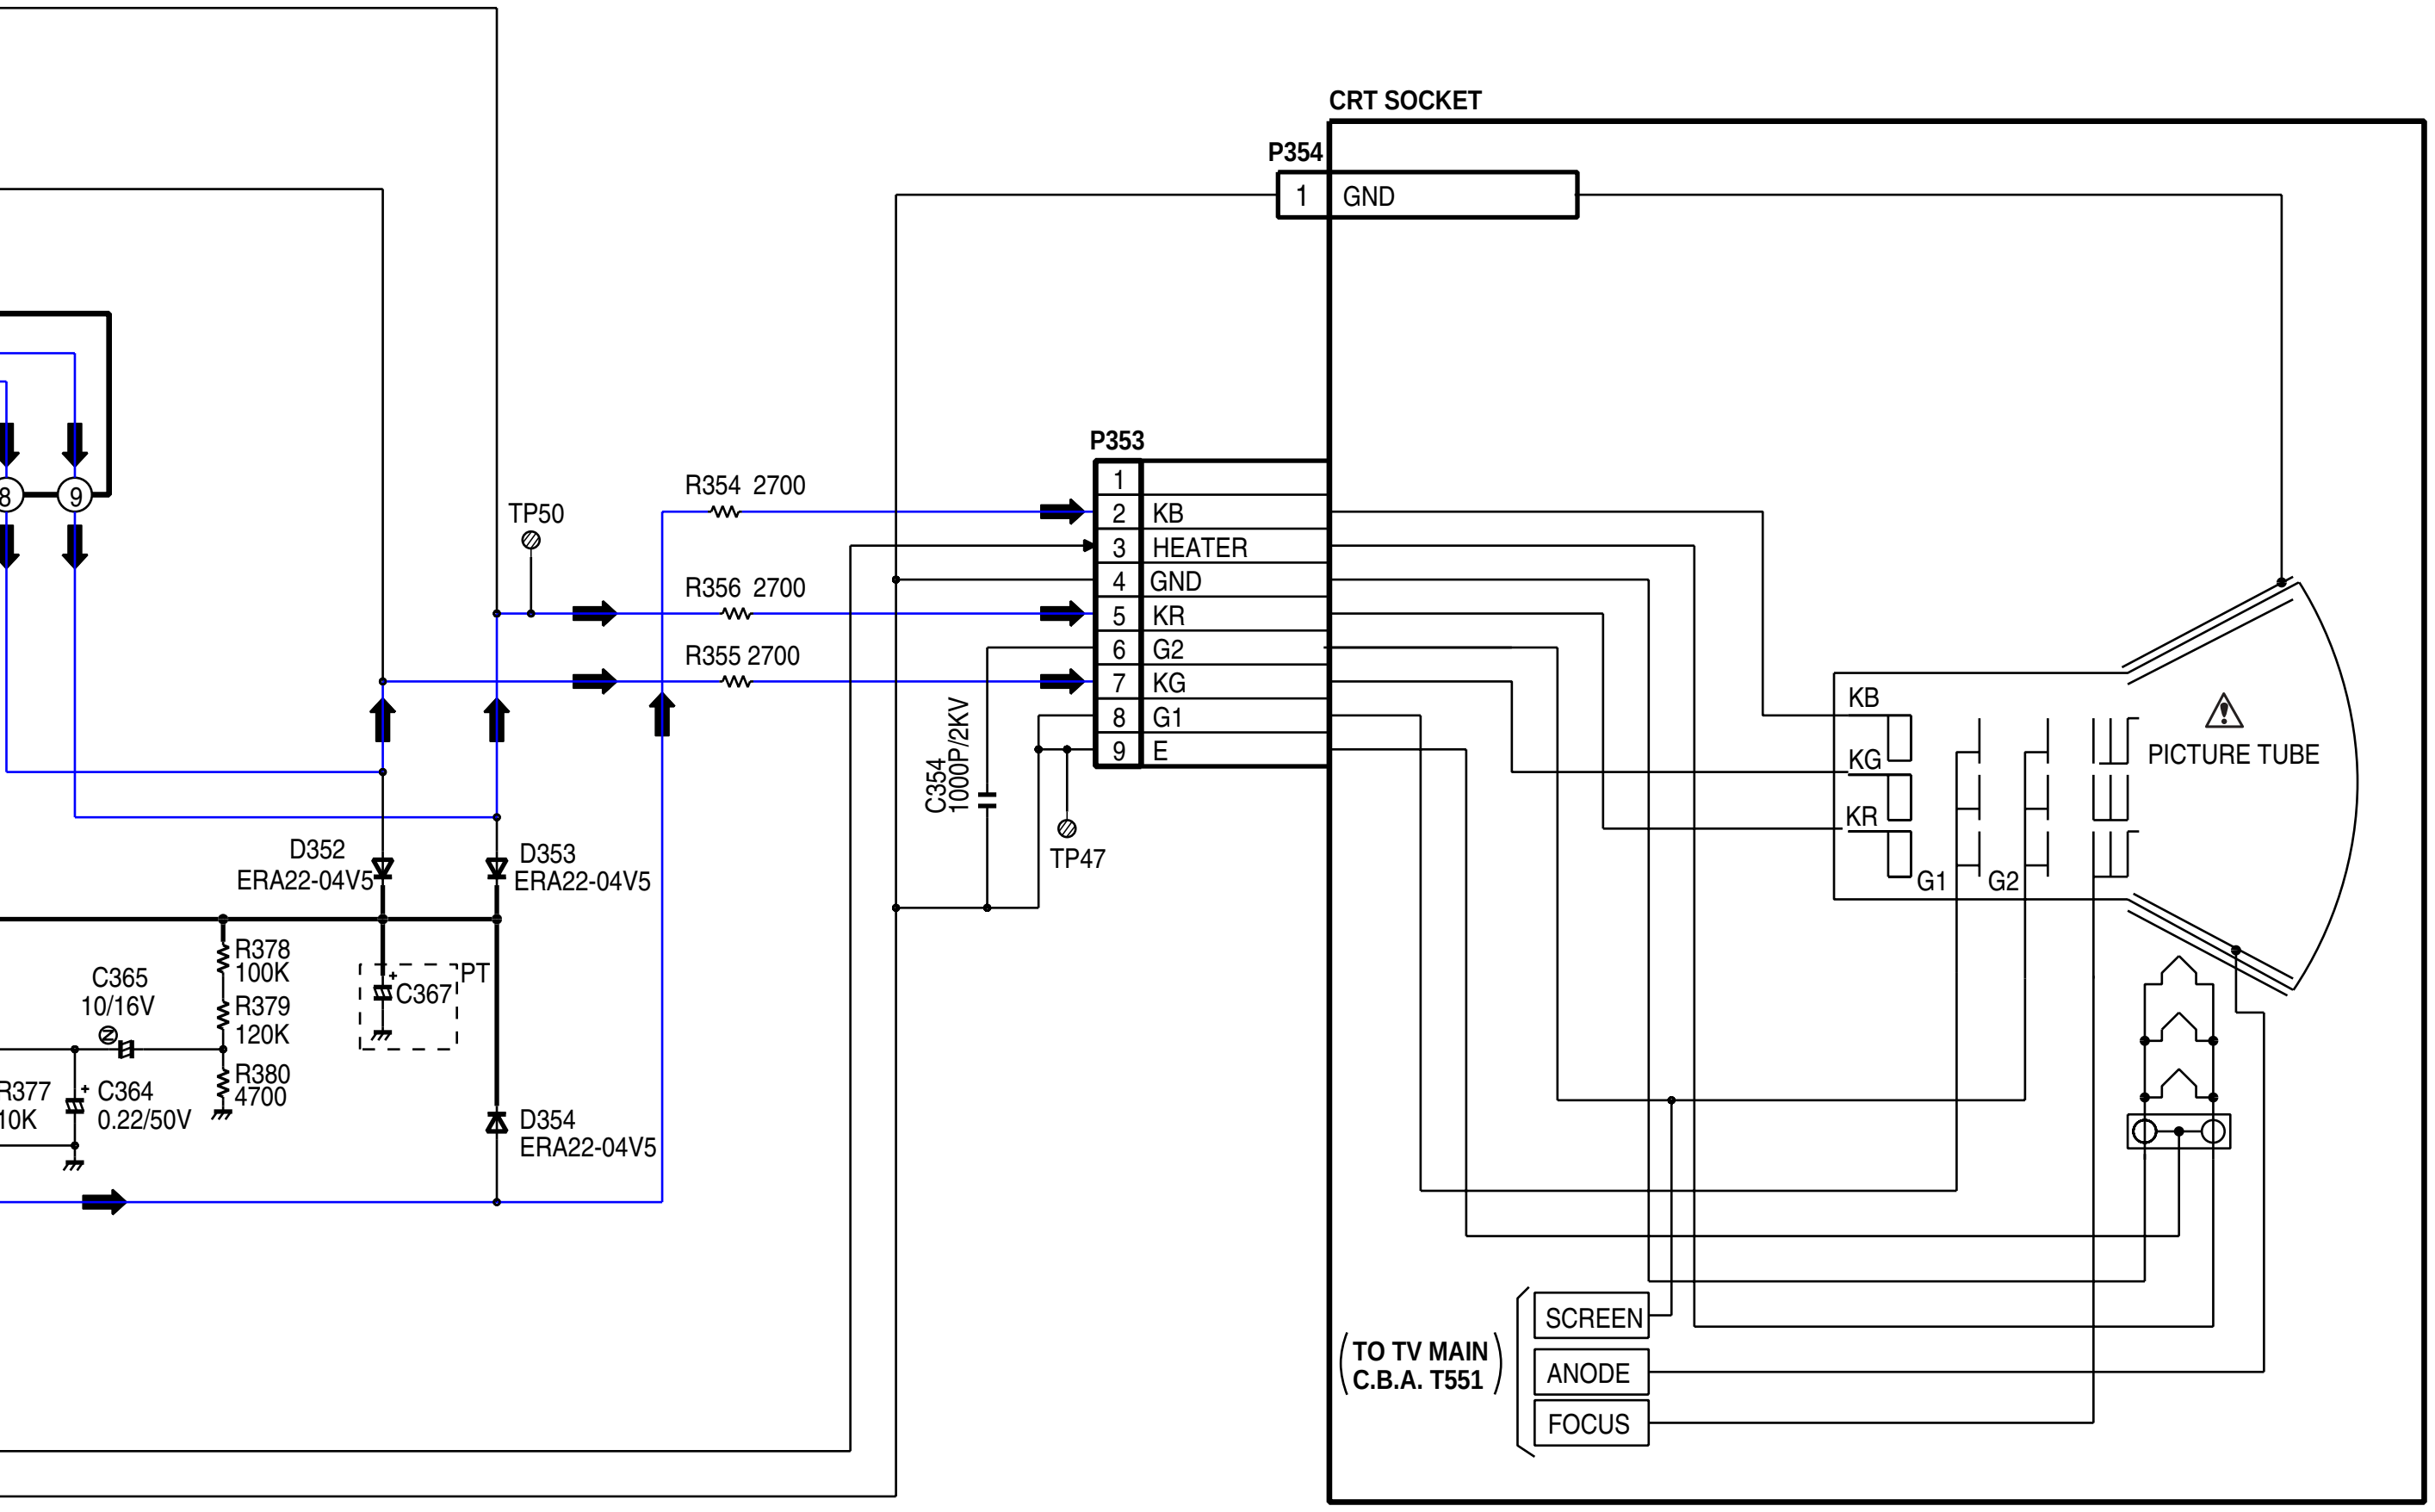
CRT SOCKET
P354
1 GND
P353
1
2 KB
3 HEATER
4 GND
5 KR
6 G2
7 KG
8 G1
9 E
8
9
TP50
R354 2700
R356 2700
R355 2700
C354
1000P/2KV
TP47
D352
ERA22-04V5
D353
ERA22-04V5
C365
10/16V
R378
100K
R379
120K
R380
4700
C367
PT
R377
10K
C364
0.22/50V
D354
ERA22-04V5
KB
KG
KR
G1
G2
⚠
PICTURE TUBE
TO TV MAIN
C.B.A. T551
SCREEN
ANODE
FOCUS

LINK TO VOLTAGE CHART

LRP63013
PV-DM2792/PV-DM2792-K
CRT SCHEMATIC DIAGRAM

8.8. VERTICAL SCHEMATIC DIAGRAM

VERTICAL SCHEMATIC DIAGRAM

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN ⚠ HAV
SPECIAL CHARACTERISTICS IMPORTANT FOR SA
WHEN REPLACING ANY OF THESE COMPONENTS
USE ONLY THE SPECIFIED PARTS.

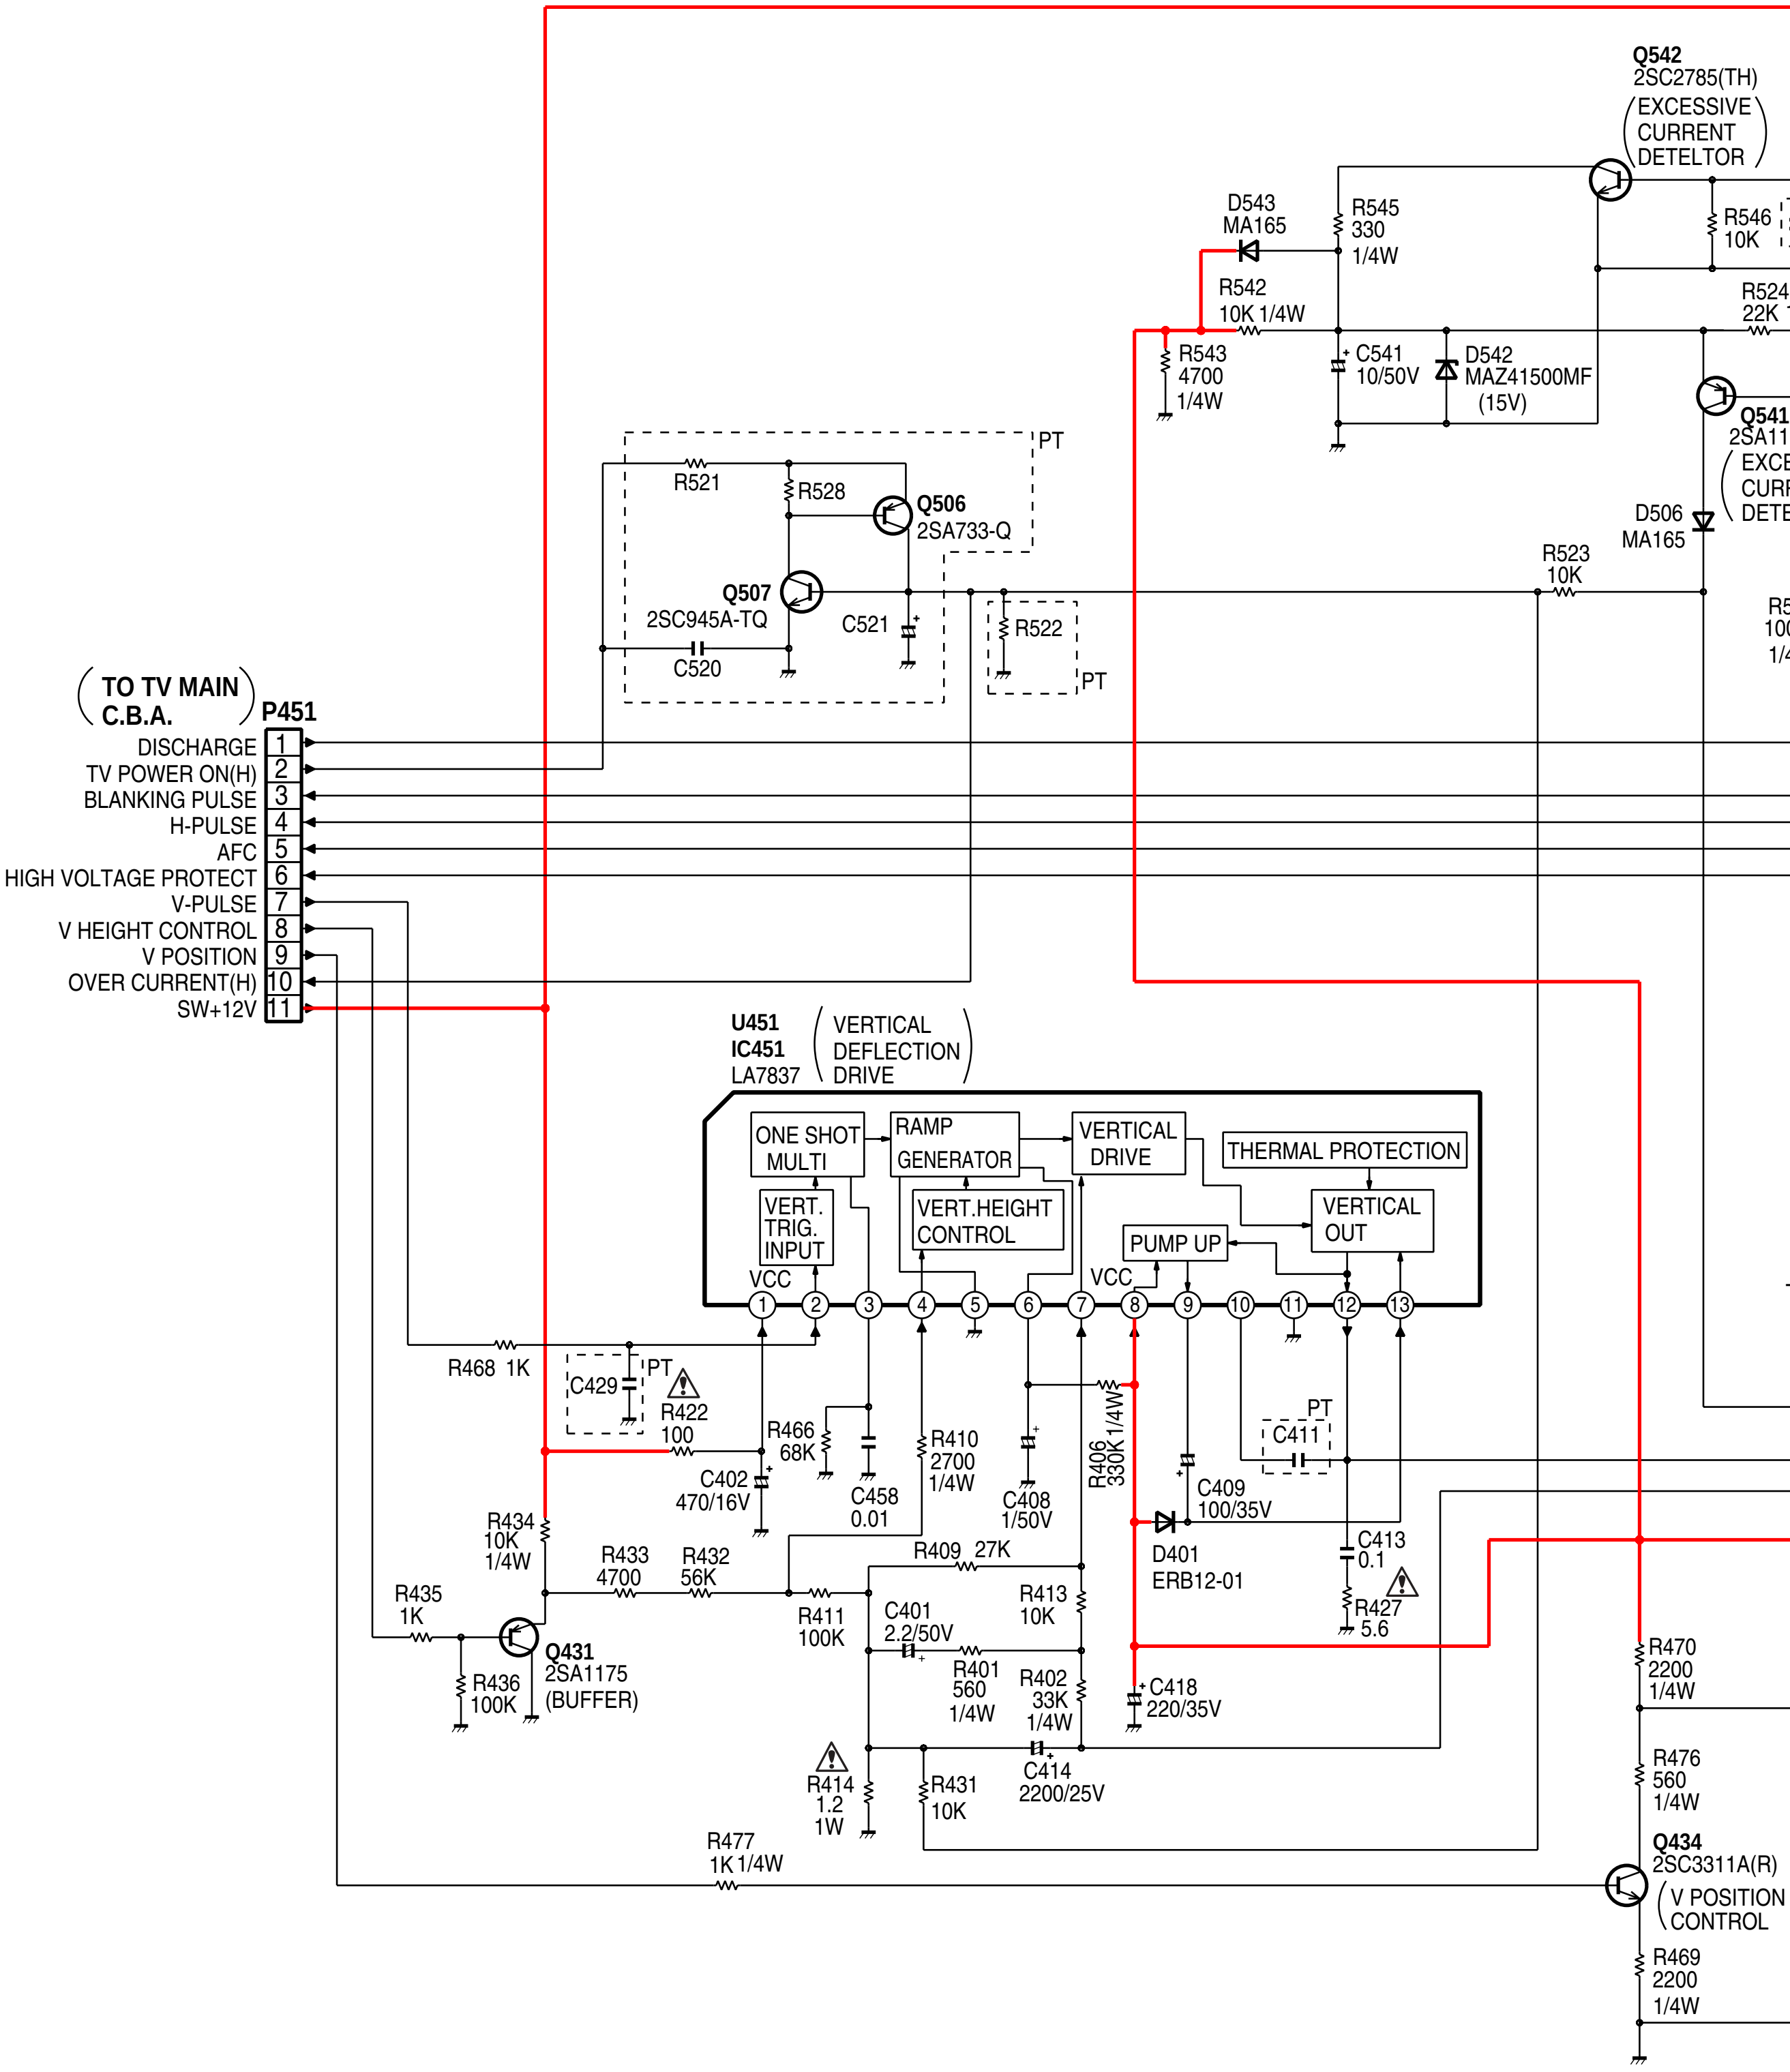
Q542
2SC2785(TH)
EXCESSIVE CURRENT DETELTOR
D543 MA165
R545 330 1/4W
R546 10K
R524 22K
R542 10K 1/4W
R543 4700 1/4W
C541 10/50V
D542 MAZ41500MF (15V)
Q541 2SA11
EXCE CURR DETE
D506 MA165
R523 10K
PT
R521
R528
Q506 2SA733-Q
Q507 2SC945A-TQ
C521
C520
R522
PT
TO TV MAIN C.B.A.
P451
DISCHARGE 1
TV POWER ON(H) 2
BLANKING PULSE 3
H-PULSE 4
AFC 5
HIGH VOLTAGE PROTECT 6
V-PULSE 7
V HEIGHT CONTROL 8
V POSITION 9
OVER CURRENT(H) 10
SW+12V 11
U451 IC451 LA7837
VERTICAL DEFLECTION DRIVE
ONE SHOT MULTI
RAMP GENERATOR
VERTICAL DRIVE
THERMAL PROTECTION
VERT. TRIG. INPUT
VERT.HEIGHT CONTROL
PUMP UP
VERTICAL OUT
VCC
VCC
1 2 3 4 5 6 7 8 9 10 11 12 13
R468 1K
C429
PT
R422 100
R466 68K
C402 470/16V
C458 0.01
R410 2700 1/4W
C408 1/50V
R406 330K 1/4W
C409 100/35V
PT
C411
D401 ERB12-01
C413 0.1
R427 5.6
R434 10K 1/4W
R433 4700
R432 56K
R409 27K
R435 1K
R411 100K
C401 2.2/50V
R413 10K
Q431 2SA1175 (BUFFER)
R436 100K
R401 560 1/4W
R402 33K 1/4W
C418 220/35V
C414 2200/25V
R414 1.2 1W
R431 10K
R477 1K 1/4W
R470 2200 1/4W
R476 560 1/4W
Q434 2SC3311A(R)
V POSITION CONTROL
R469 2200 1/4W
R5 100 1/4

ETY NOTICE:
DENTIFIED BY THE SIGN ⚠ HAVE
CTERISTICS IMPORTANT FOR SAFETY.
IG ANY OF THESE COMPONENTS,
SPECIFIED PARTS.

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

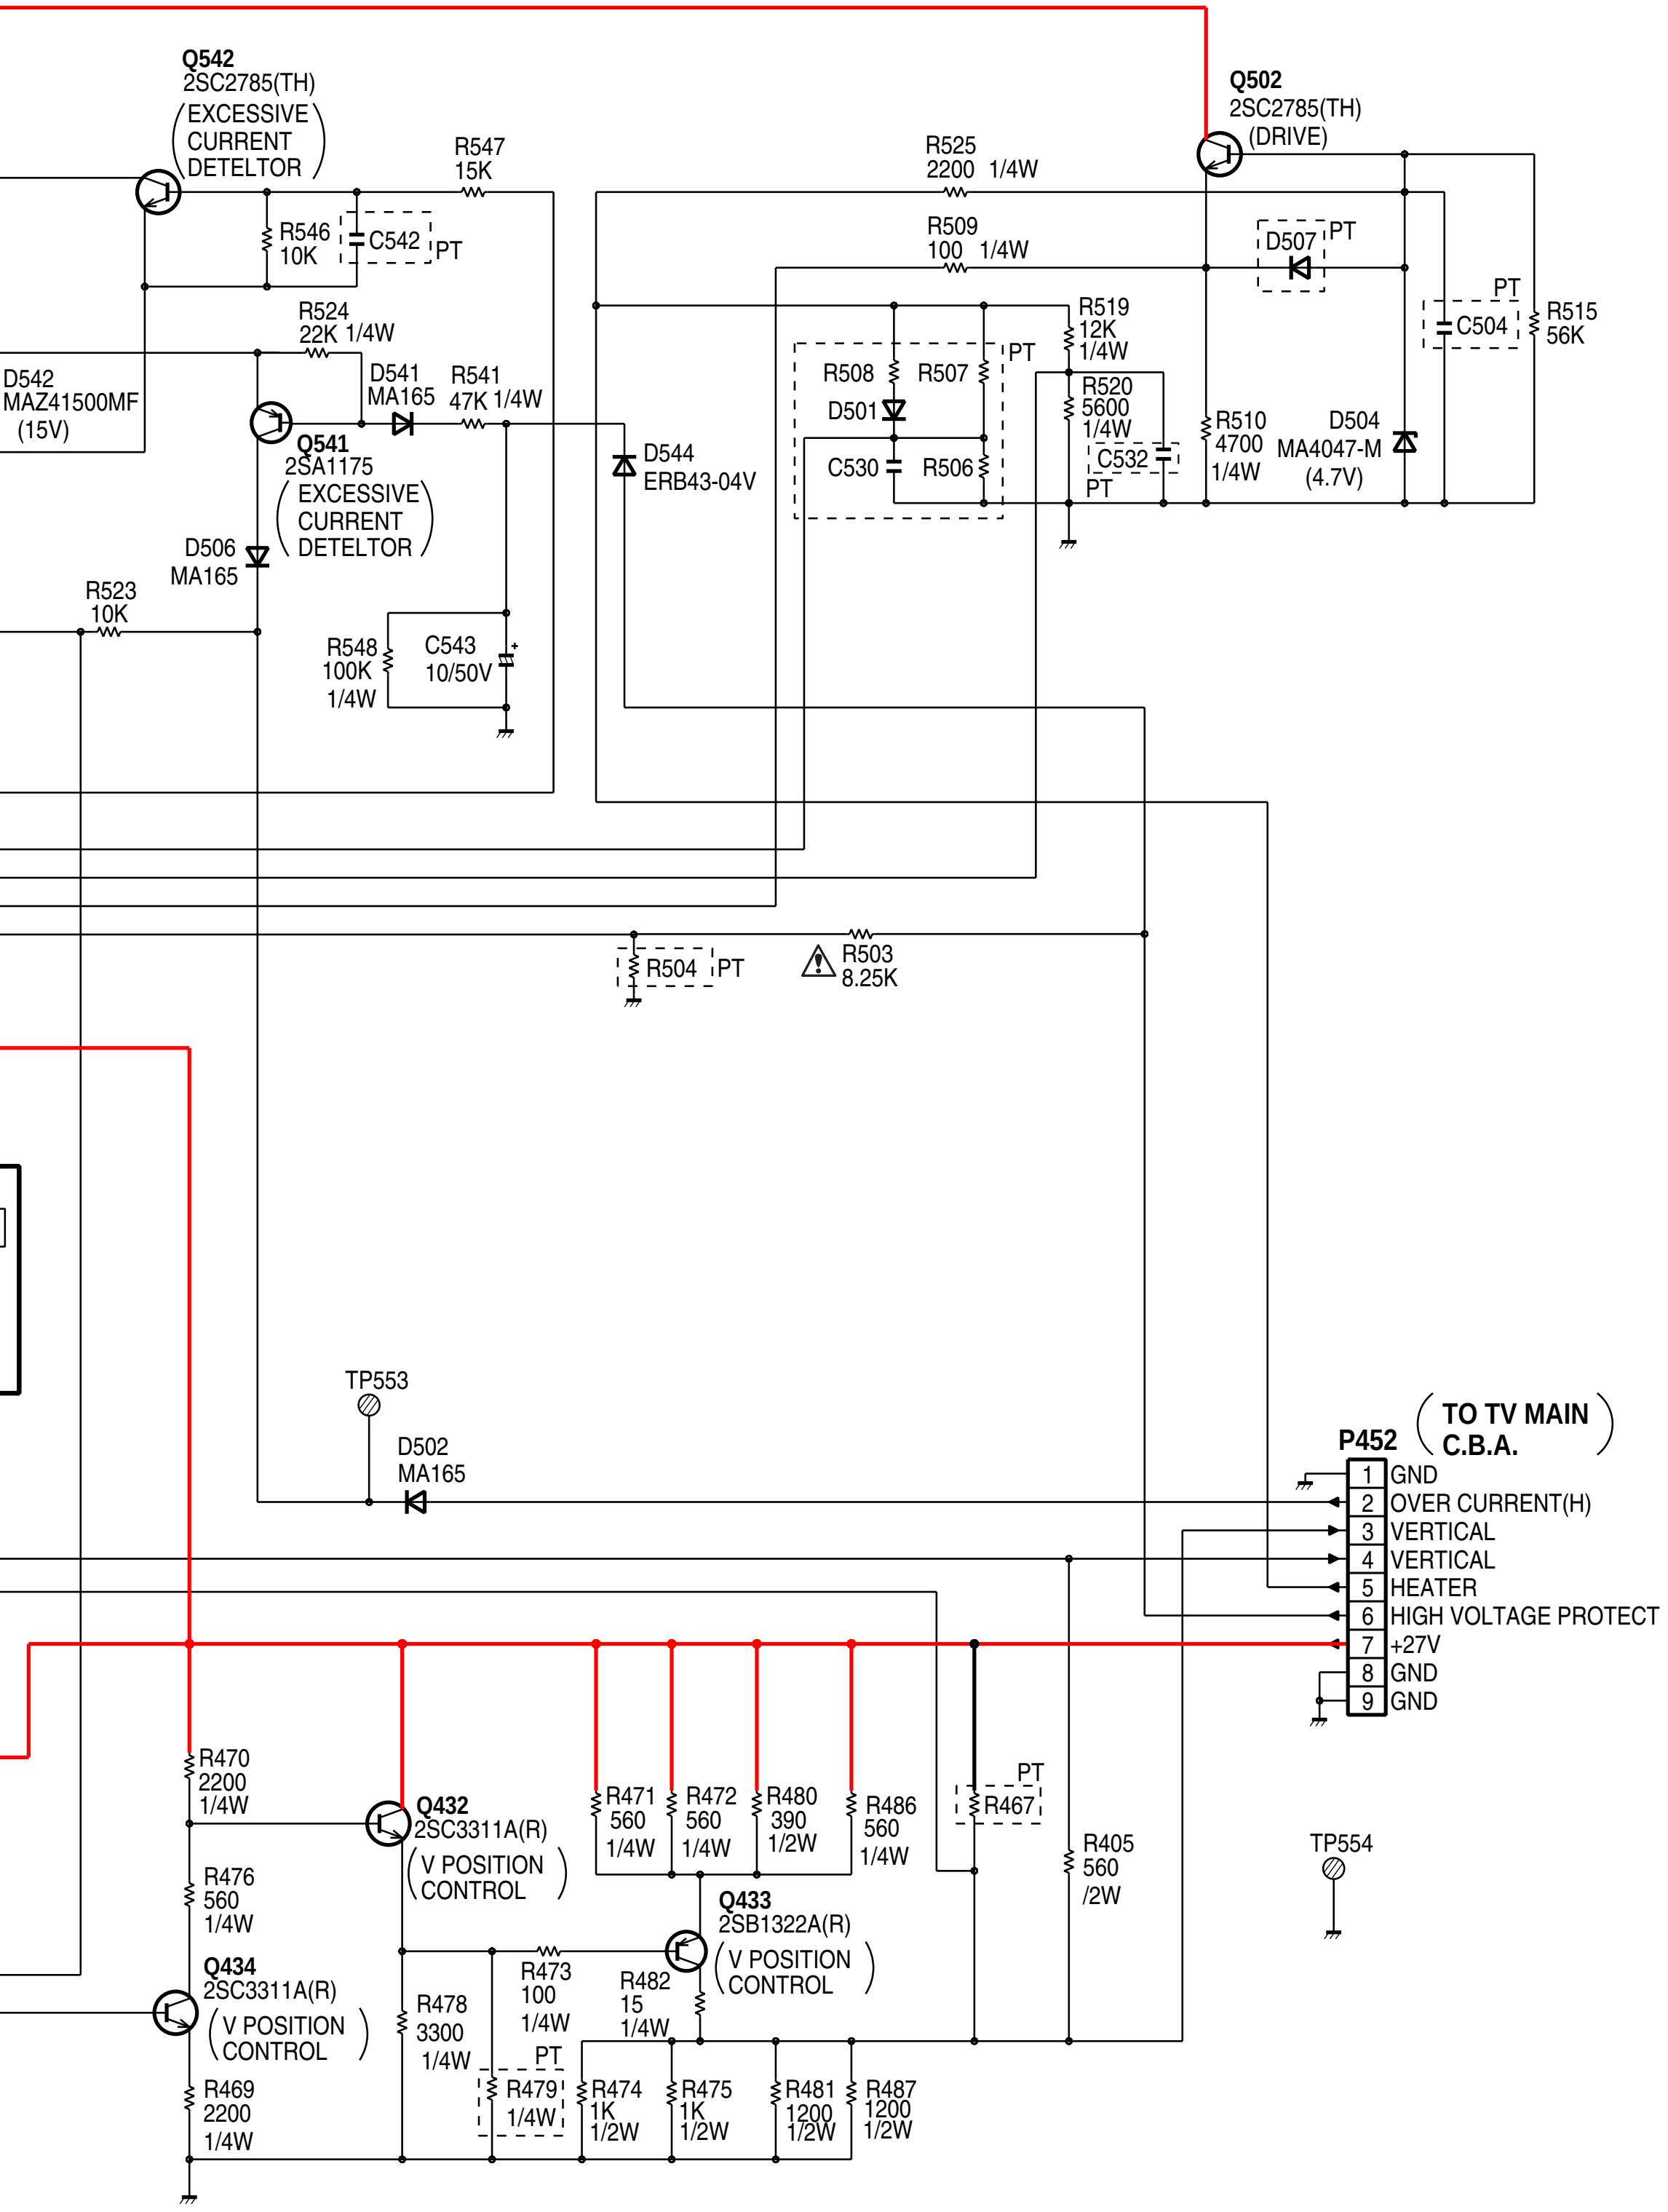
Q542
2SC2785(TH)
EXCESSIVE CURRENT DETELTOR
R547 15K
R546 10K
C542 PT
R524 22K 1/4W
D542 MAZ41500MF (15V)
D541 MA165
R541 47K 1/4W
Q541 2SA1175
EXCESSIVE CURRENT DETELTOR
D506 MA165
R523 10K
R548 100K 1/4W
C543 10/50V
D544 ERB43-04V
R525 2200 1/4W
R509 100 1/4W
R508
R507
PT
D501
C530
R506
R519 12K 1/4W
R520 5600 1/4W
C532 PT
Q502 2SC2785(TH) (DRIVE)
D507 PT
R510 4700 1/4W
D504 MA4047-M (4.7V)
PT
C504
R515 56K
R504 PT
R503 8.25K
TP553
D502 MA165
P452
TO TV MAIN C.B.A.
1 GND
2 OVER CURRENT(H)
3 VERTICAL
4 VERTICAL
5 HEATER
6 HIGH VOLTAGE PROTECT
7 +27V
8 GND
9 GND
R470 2200 1/4W
Q432 2SC3311A(R)
V POSITION CONTROL
R471 560 1/4W
R472 560 1/4W
R480 390 1/2W
R486 560 1/4W
PT
R467
R405 560 /2W
TP554
R476 560 1/4W
Q434 2SC3311A(R)
V POSITION CONTROL
Q433 2SB1322A(R)
V POSITION CONTROL
R478 3300 1/4W
R473 100 1/4W
R482 15 1/4W
PT
R479 1/4W
R474 1K 1/2W
R475 1K 1/2W
R481 1200 1/2W
R487 1200 1/2W
R469 2200 1/4W

LINK TO VOLTAGE CHART

LRP63019
PV-DM2792/PV-DM2792-K
VERTICAL SCHEMATIC DIAGRAM

8.9. OPERATION SCHEMATIC DIAGRAM

OPERATION SCHEMATIC DIAGRAM

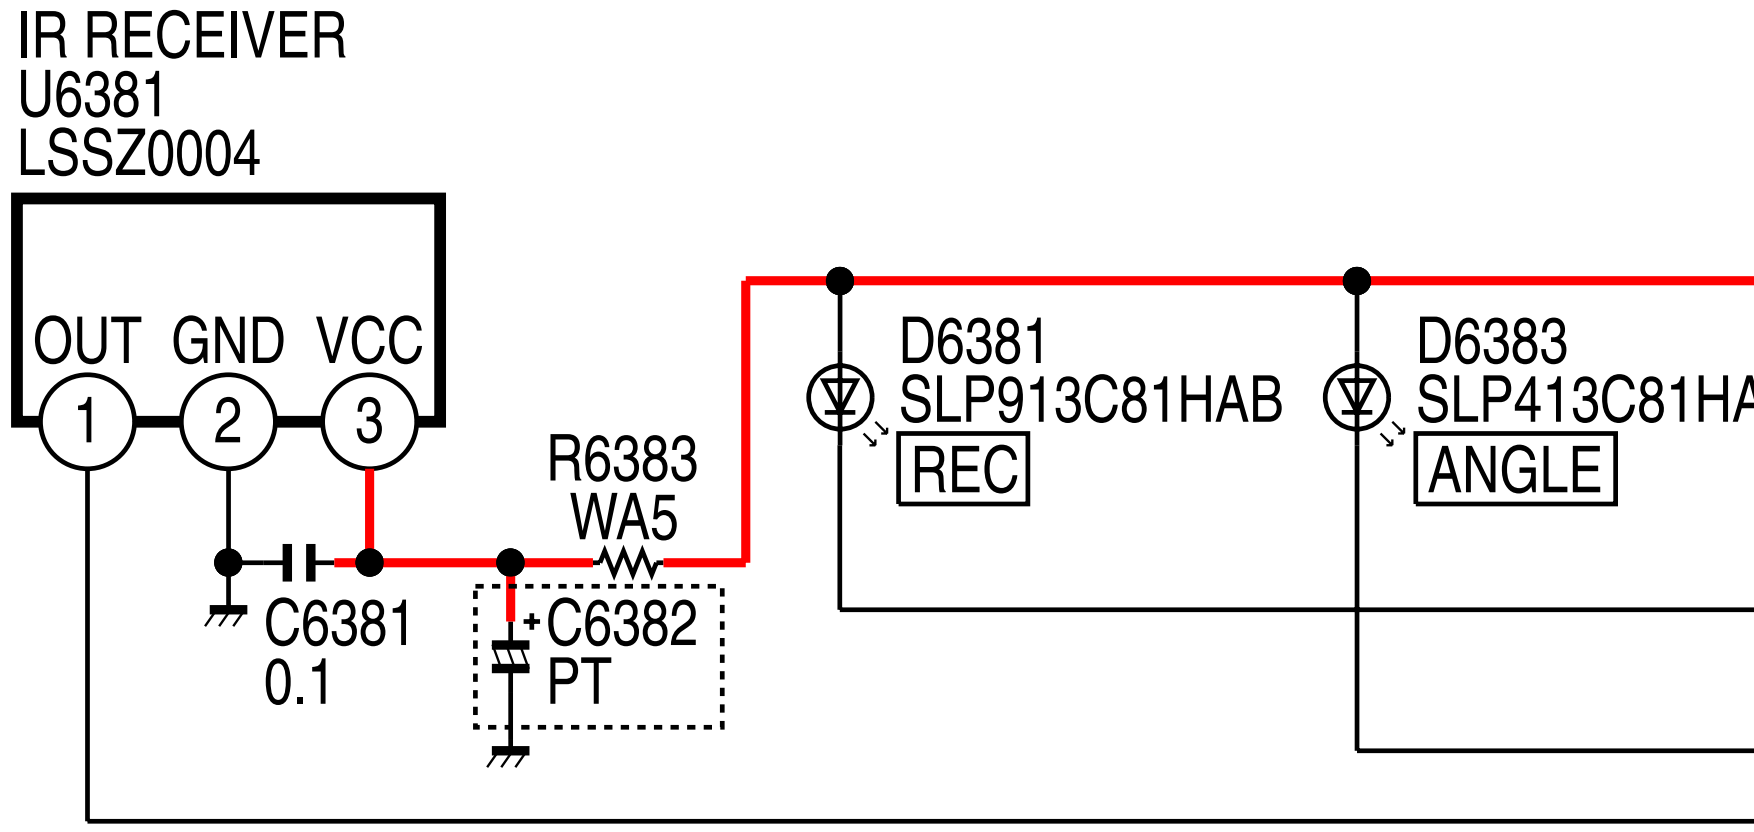
IR RECEIVER
U6381
LSSZ0004
OUT
GND
VCC
1
2
3
C6381
0.1
C6382
PT
R6383
WA5
D6381
SLP913C81HAB
REC
D6383
SLP413C81HA
ANGLE

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

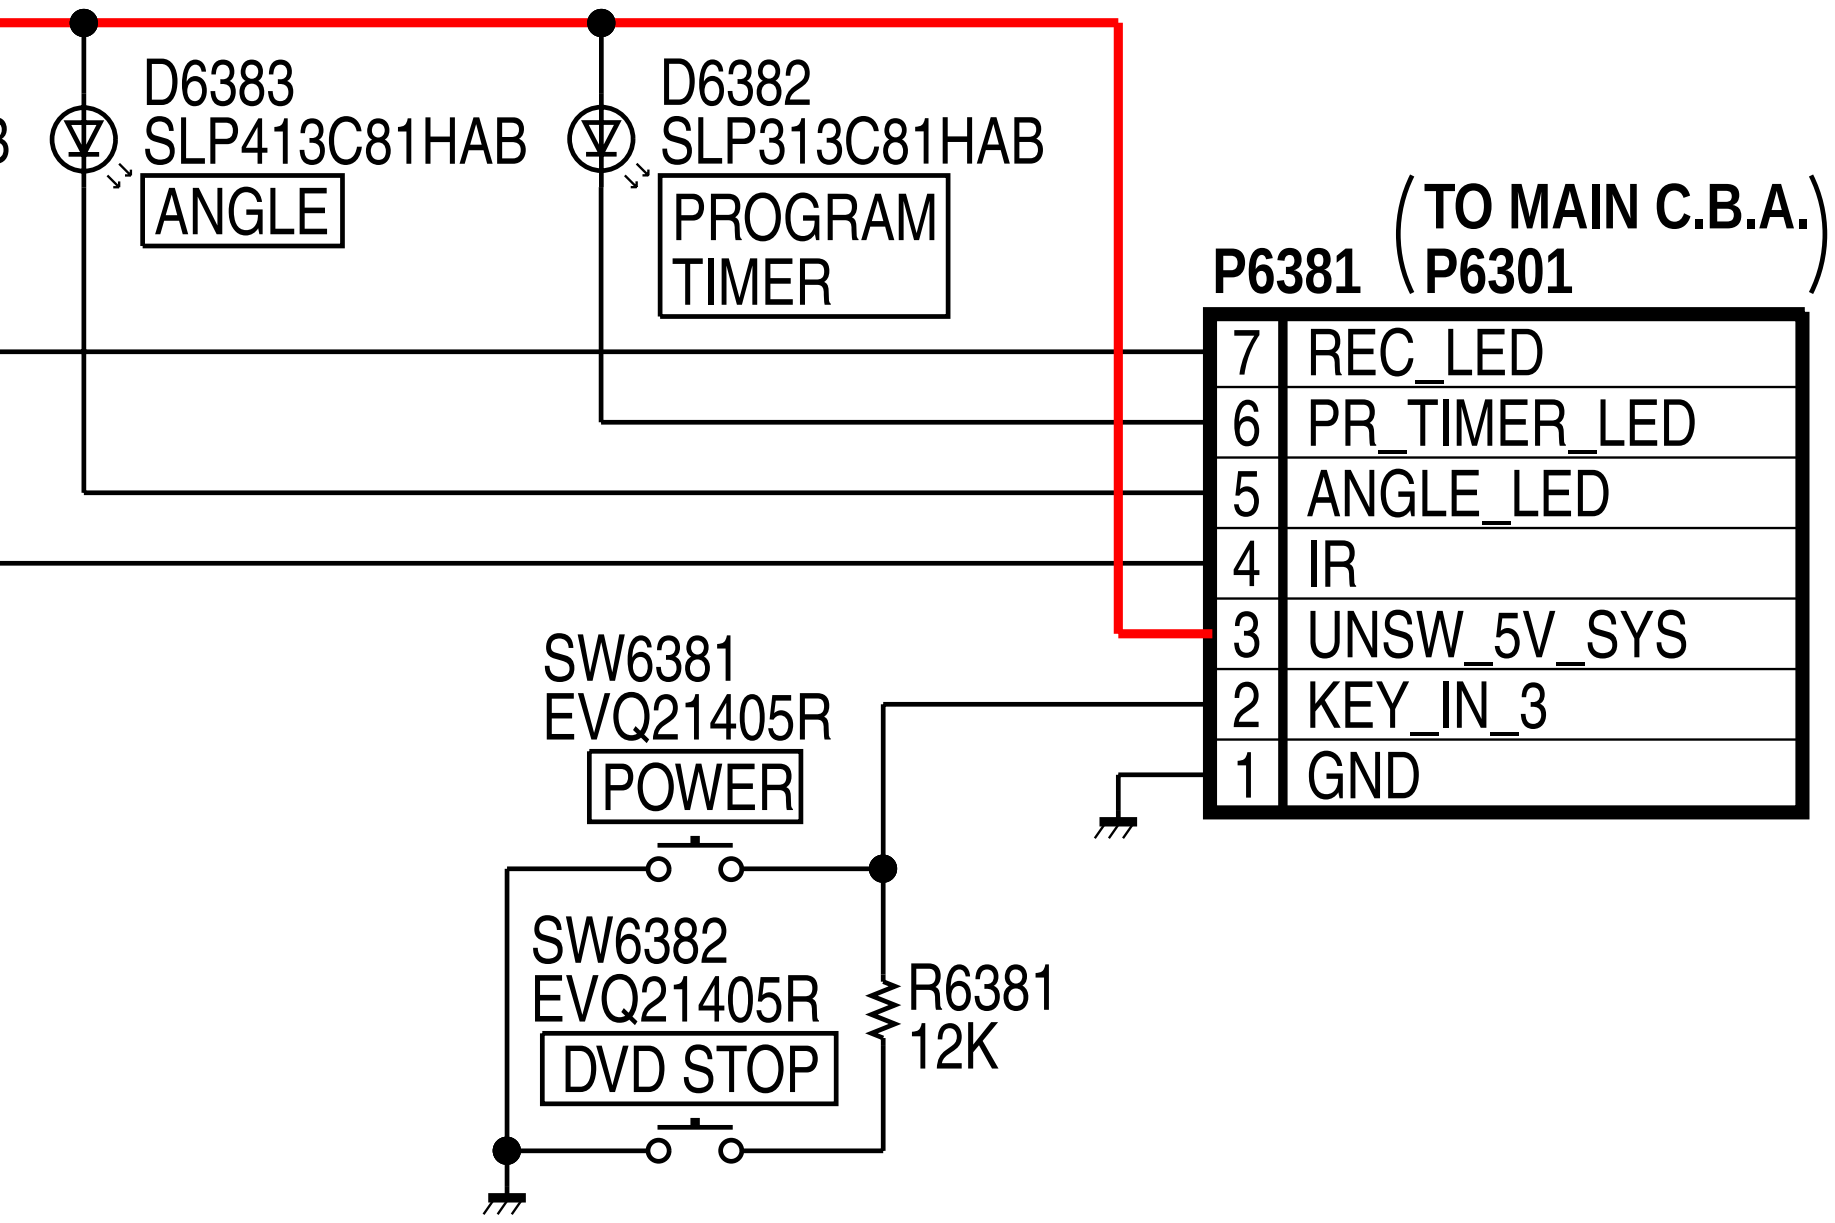
D6383
SLP413C81HAB
ANGLE
D6382
SLP313C81HAB
PROGRAM TIMER
TO MAIN C.B.A.
P6381
P6301
7 REC_LED
6 PR_TIMER_LED
5 ANGLE_LED
4 IR
3 UNSW_5V_SYS
2 KEY_IN_3
1 GND
SW6381
EVQ21405R
POWER
SW6382
EVQ21405R
DVD STOP
R6381
12K

LSJB2022
PV-DM2792/PV-DM2792-K
OPERATION SCHEMATIC DIAGRAM

8.10. AUDIO/VIDEO JACK SCHEMATIC DIAGRAM

AUDIO / VIDEO JACK SCHEMATIC DIAGRAM

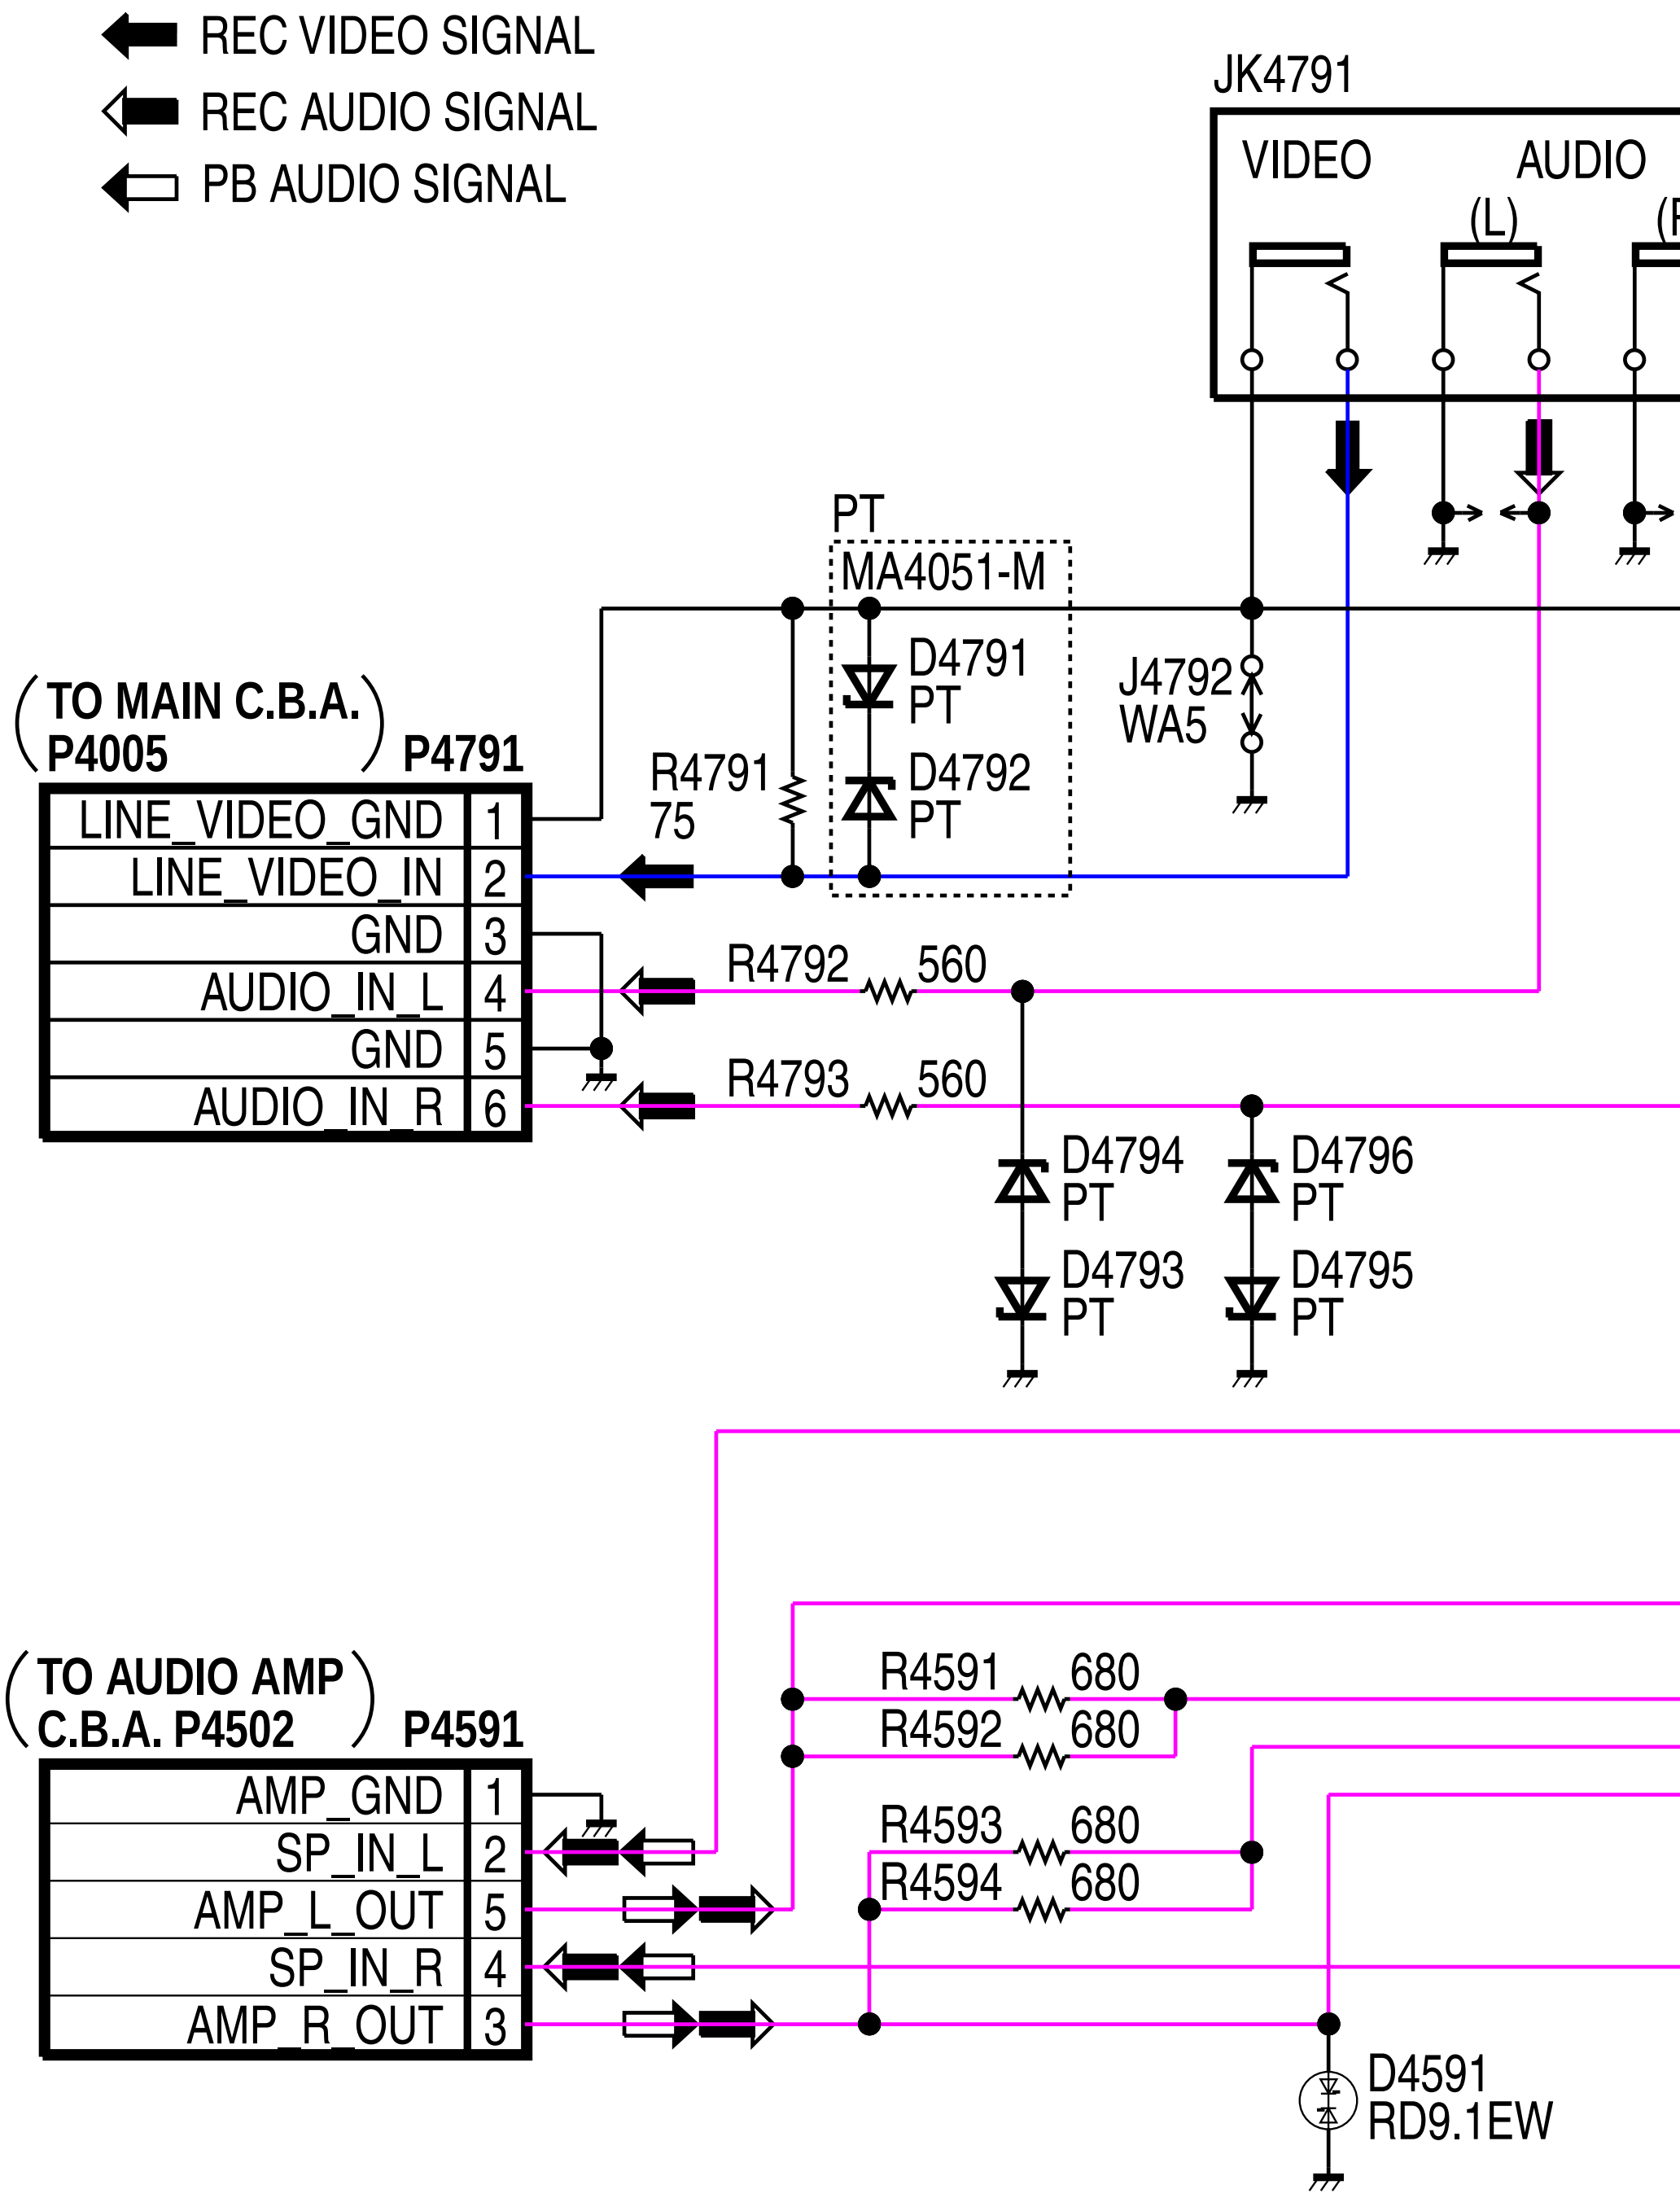
REC VIDEO SIGNAL
REC AUDIO SIGNAL
PB AUDIO SIGNAL
JK4791
VIDEO
AUDIO
(L)
PT
MA4051-M
D4791
PT
D4792
PT
J4792
WA5
R4791
75
TO MAIN C.B.A.
P4005
P4791
LINE_VIDEO_GND 1
LINE_VIDEO_IN 2
GND 3
AUDIO_IN_L 4
GND 5
AUDIO_IN_R 6
R4792
560
R4793
560
D4794
PT
D4793
PT
D4796
PT
D4795
PT
TO AUDIO AMP
C.B.A. P4502
P4591
AMP_GND 1
SP_IN_L 2
AMP_L_OUT 5
SP_IN_R 4
AMP_R_OUT 3
R4591
680
R4592
680
R4593
680
R4594
680
D4591
RD9.1EW

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

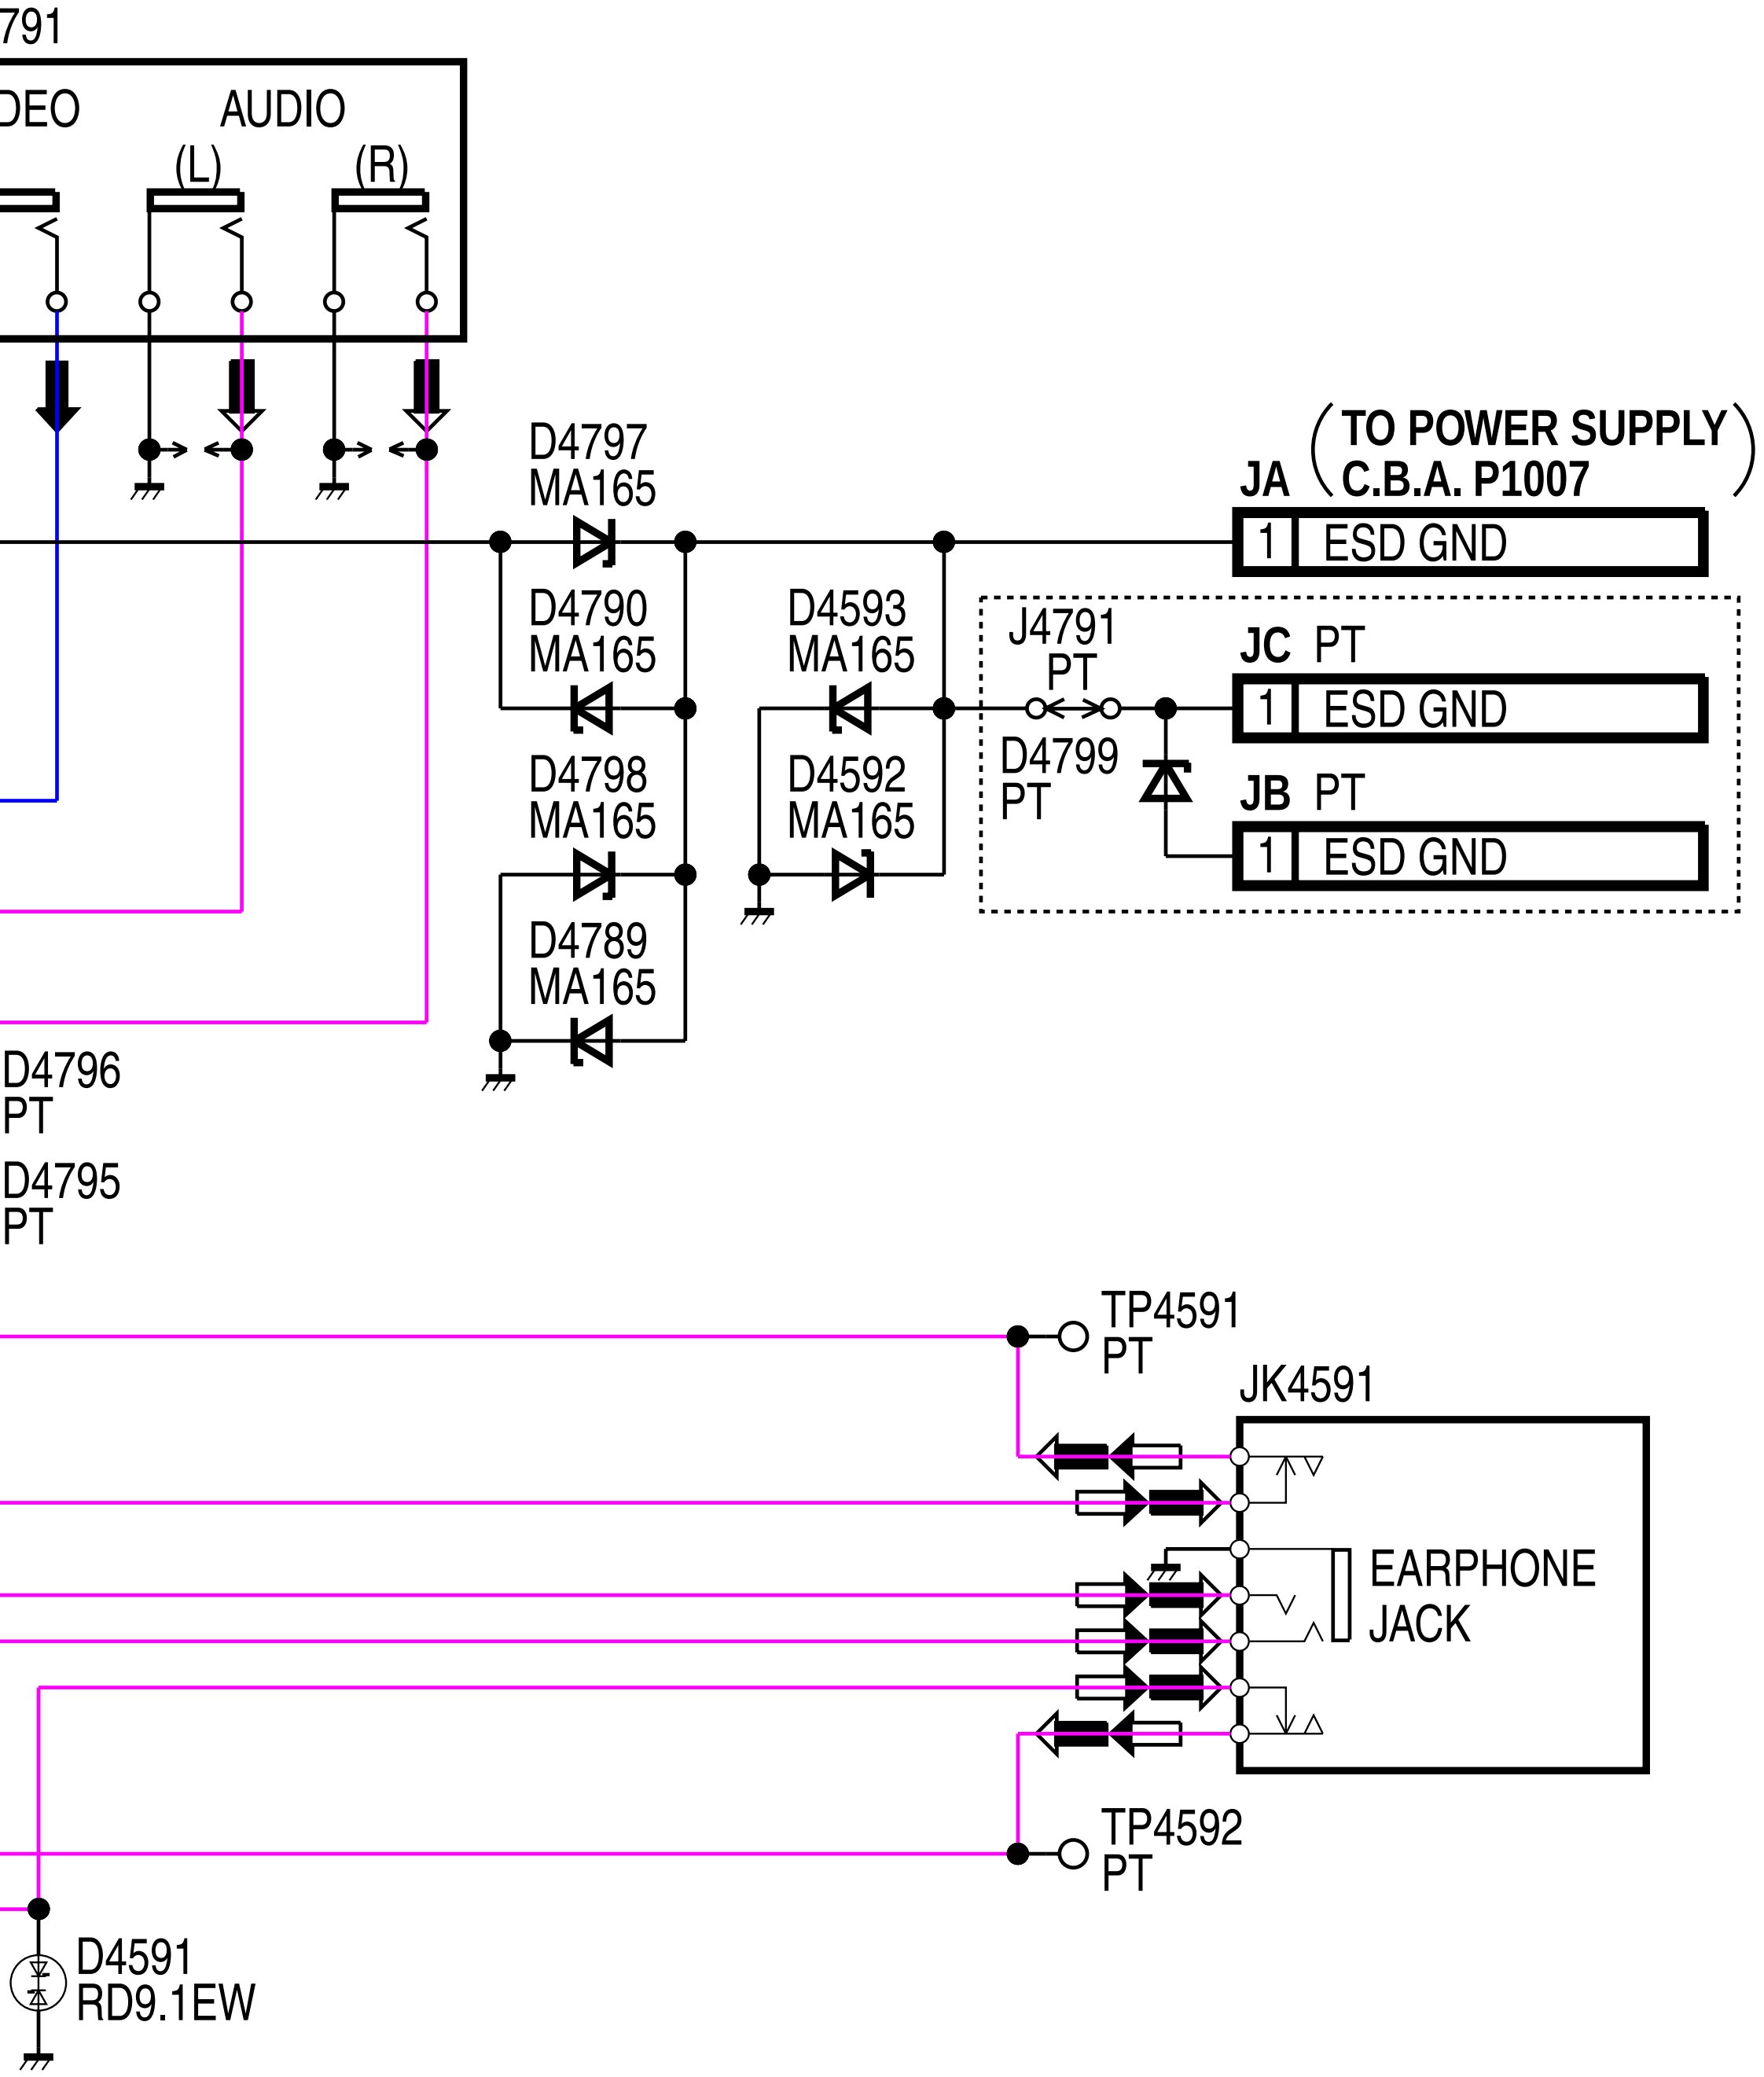
791
DEO
AUDIO
(L)
(R)
D4797
MA165
D4790
MA165
D4798
MA165
D4789
MA165
D4593
MA165
D4592
MA165
JA
TO POWER SUPPLY
C.B.A. P1007
1 ESD GND
J4791
PT
D4799
PT
JC PT
1 ESD GND
JB PT
1 ESD GND
D4796
PT
D4795
PT
TP4591
PT
JK4591
EARPHONE
JACK
TP4592
PT
D4591
RD9.1EW

LINK TO VOLTAGE CHART

LSJP2023
PV-DM2792/PV-DM2792-K
AUDIO / VIDEO JACK SCHEMATIC DIAGRAM

8.11. Hi-Fi AUDIO/VIDEO HEAD AMP SCHEMATIC DIAGRAM

Hi-Fi AUDIO/VIDEO HEAD AMP SCHEMATIC DIAGRAM

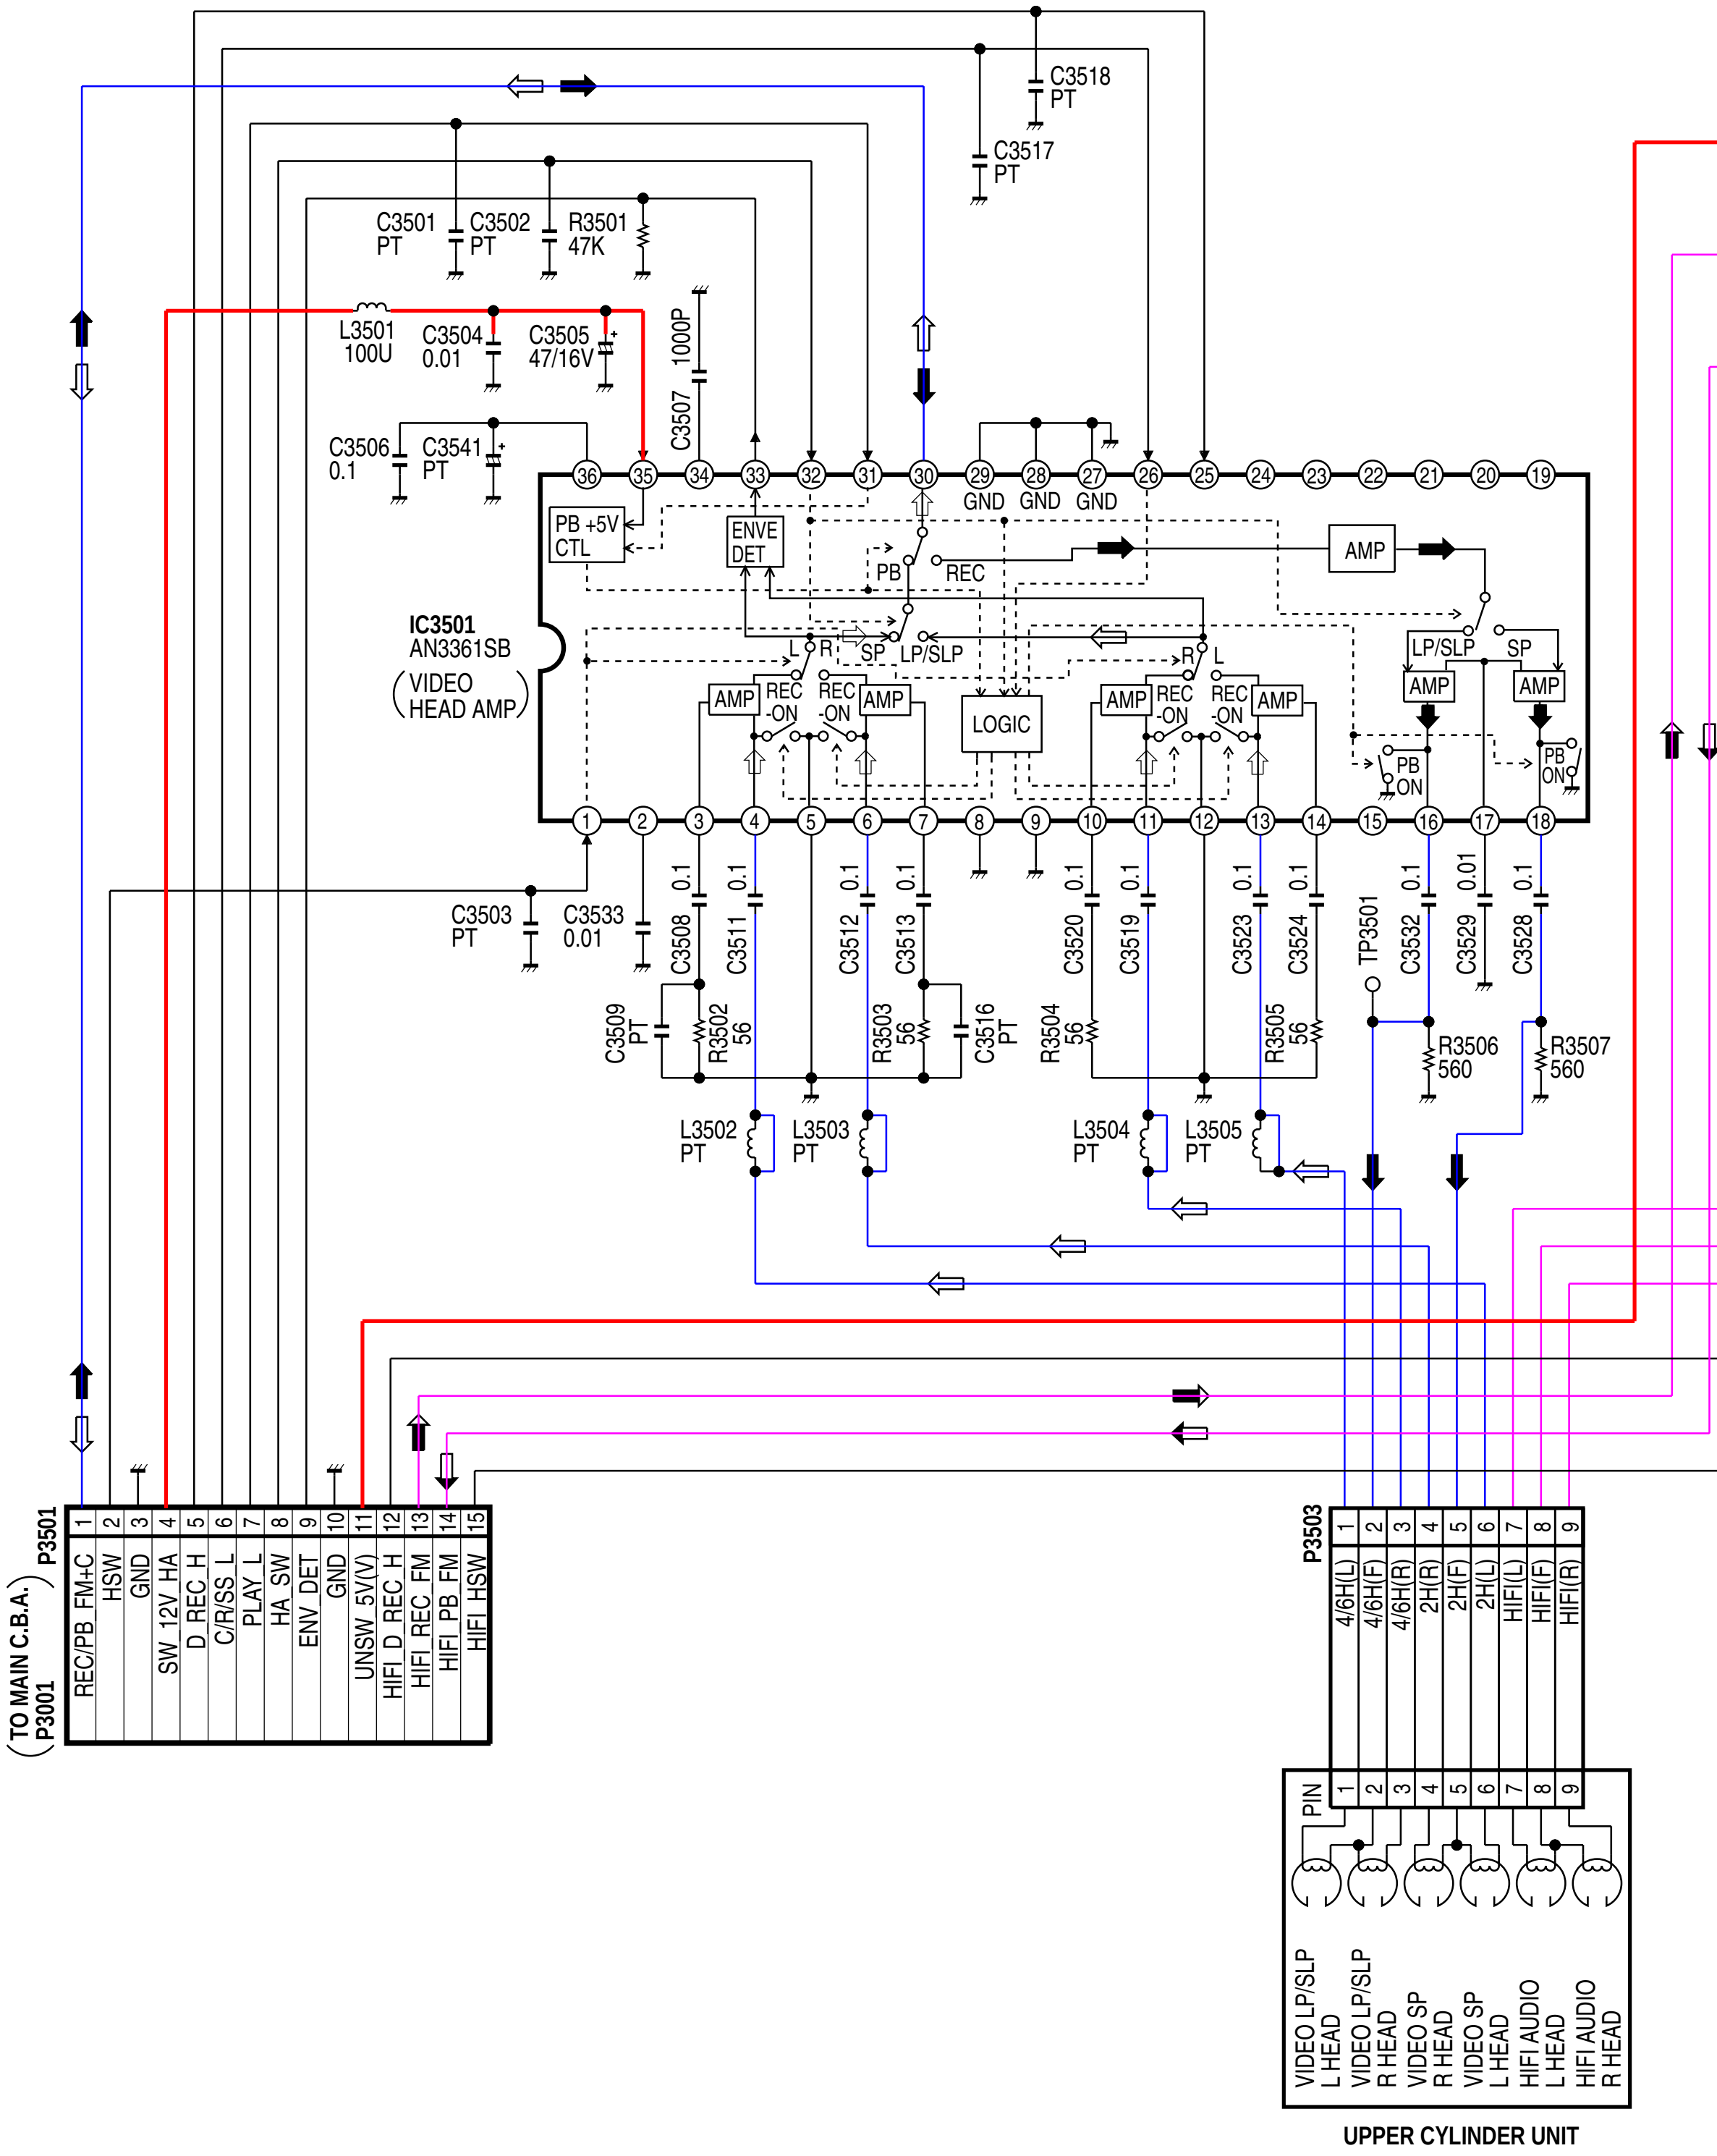

C3518
PT
C3517
PT
C3501
PT
C3502
PT
R3501
47K
L3501
100U
C3504
0.01
C3505
47/16V
C3507
1000P
C3506
0.1
C3541
PT
PB +5V
CTL
ENVE
DET
PB
REC
AMP
GND
GND
GND
IC3501
AN3361SB
(VIDEO
HEAD AMP)
L
R
SP
LP/SLP
R
L
LP/SLP
SP
AMP
REC
-ON
LOGIC
PB
ON
C3503
PT
C3533
0.01
C3508
C3511
C3512
C3513
C3520
C3519
C3523
C3524
TP3501
C3532
C3529
C3528
0.1
0.01
C3509
PT
R3502
56
R3503
56
C3516
PT
R3504
56
R3505
56
R3506
560
R3507
560
L3502
PT
L3503
PT
L3504
PT
L3505
PT
(TO MAIN C.B.A.
P3001)
P3501
1 REC/PB_FM+C
2 HSW
3 GND
4 SW_12V_HA
5 D_REC_H
6 C/R/SS_L
7 PLAY_L
8 HA_SW
9 ENV_DET
10 GND
11 UNSW_5V(V)
12 HIFI_D_REC_H
13 HIFI_REC_FM
14 HIFI_PB_FM
15 HIFI_HSW
P3503
1 4/6H(L)
2 4/6H(F)
3 4/6H(R)
4 2H(F)
5 2H(L)
6 HIFI(L)
7 HIFI(F)
8 HIFI(R)
9
PIN
VIDEO LP/SLP L HEAD
VIDEO LP/SLP R HEAD
VIDEO SP R HEAD
VIDEO SP L HEAD
HIFI AUDIO L HEAD
HIFI AUDIO R HEAD
UPPER CYLINDER UNIT

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

⬅	REC VIDEO SIGNAL	⇦	PB VIDEO SIGNAL
⬅	REC AUDIO SIGNAL	⬅	PB AUDIO SIGNAL

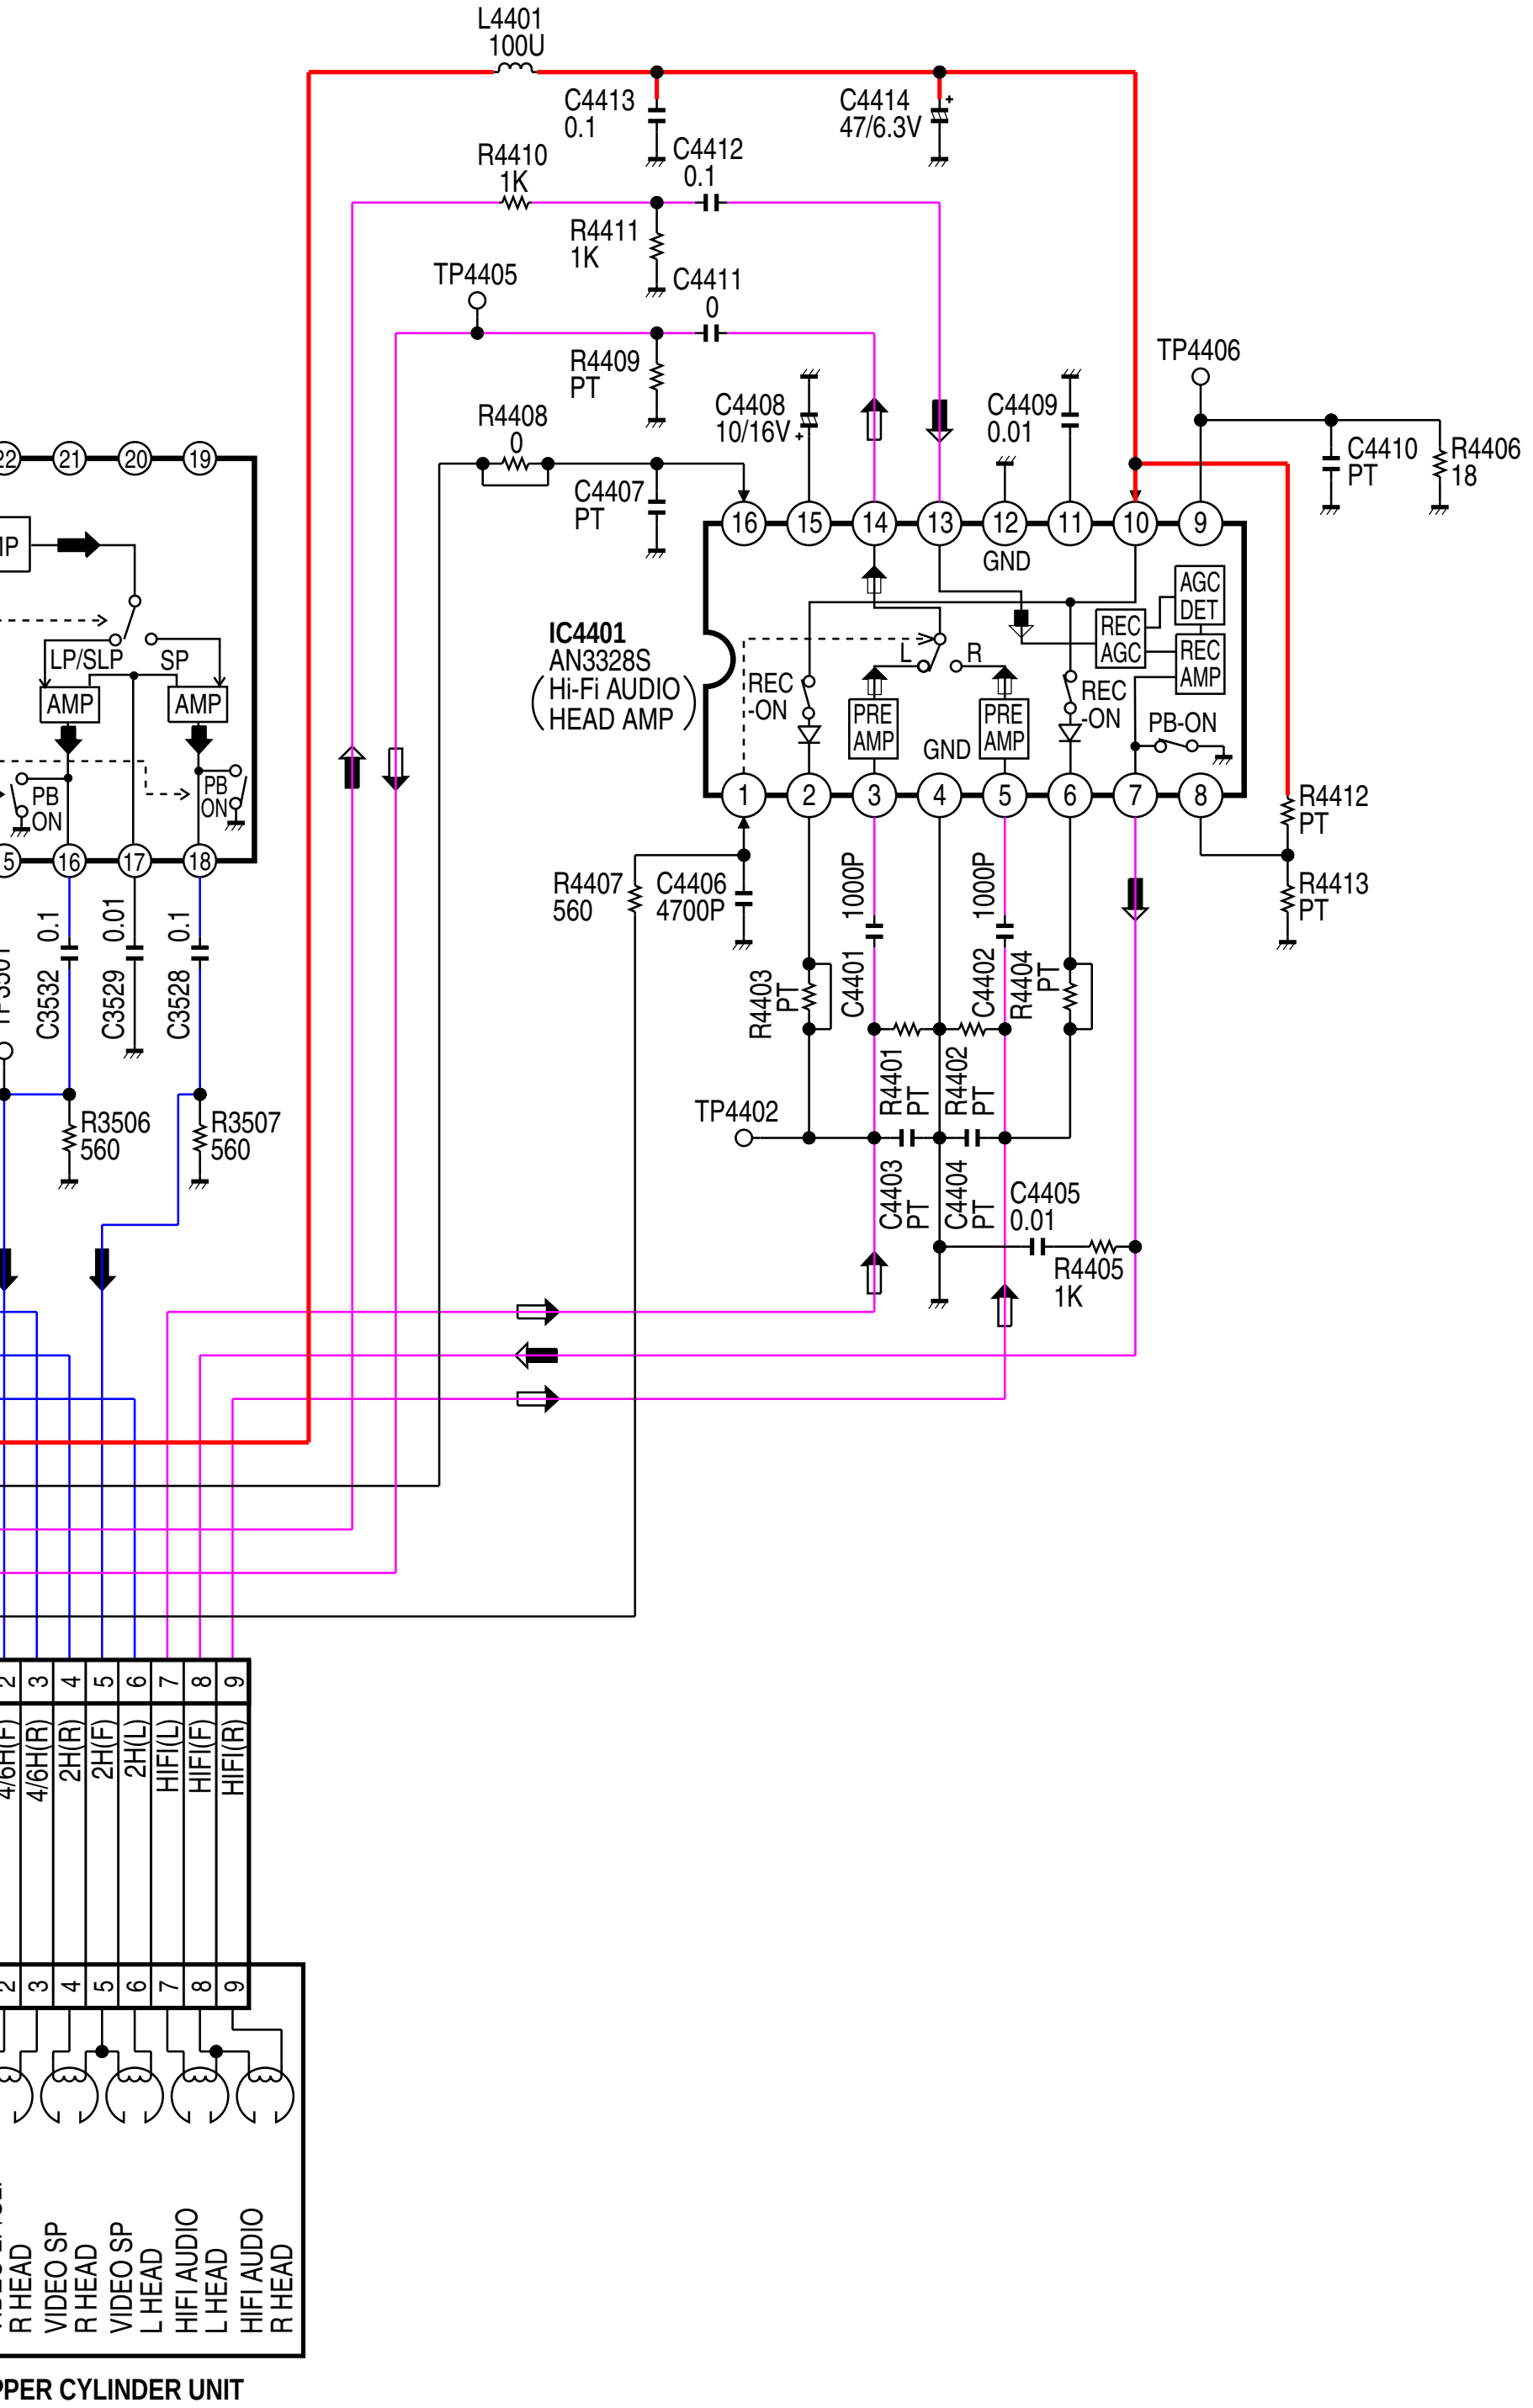
L4401
100U
C4413
0.1
C4414
47/6.3V
R4410
1K
C4412
0.1
R4411
1K
C4411
0
TP4405
R4409
PT
R4408
0
C4407
PT
C4408
10/16V
C4409
0.01
TP4406
C4410
PT
R4406
18
IC4401
AN3328S
(Hi-Fi AUDIO
HEAD AMP)
GND
AGC DET
REC AGC
REC AMP
REC -ON
PRE AMP
REC -ON
PB-ON
L
R
R4412
PT
R4413
PT
R4407
560
C4406
4700P
R4403
PT
C4401
1000P
C4402
1000P
R4404
PT
R4401
PT
R4402
PT
TP4402
C4403
PT
C4404
PT
C4405
0.01
R4405
1K
LP/SLP
SP
AMP
AMP
PB ON
PB ON
C3532
0.1
C3529
0.01
C3528
0.1
R3506
560
R3507
560
4/6H(F)
4/6H(R)
2H(R)
2H(F)
2H(L)
HIFI(L)
HIFI(F)
HIFI(R)
R HEAD
VIDEO SP
R HEAD
VIDEO SP
L HEAD
HIFI AUDIO
L HEAD
HIFI AUDIO
R HEAD
PER CYLINDER UNIT

LINK TO VOLTAGE CHART

LSJP2010
PV-DM2792/PV-DM2792-K
Hi-Fi AUDIO/VIDEO HEAD AMP SCHEMATIC DIAGRAM

8.12. DVD DECODER SCHEMATIC DIAGRAMS

DVD DECODER I SCHEMATIC DIAGRAM

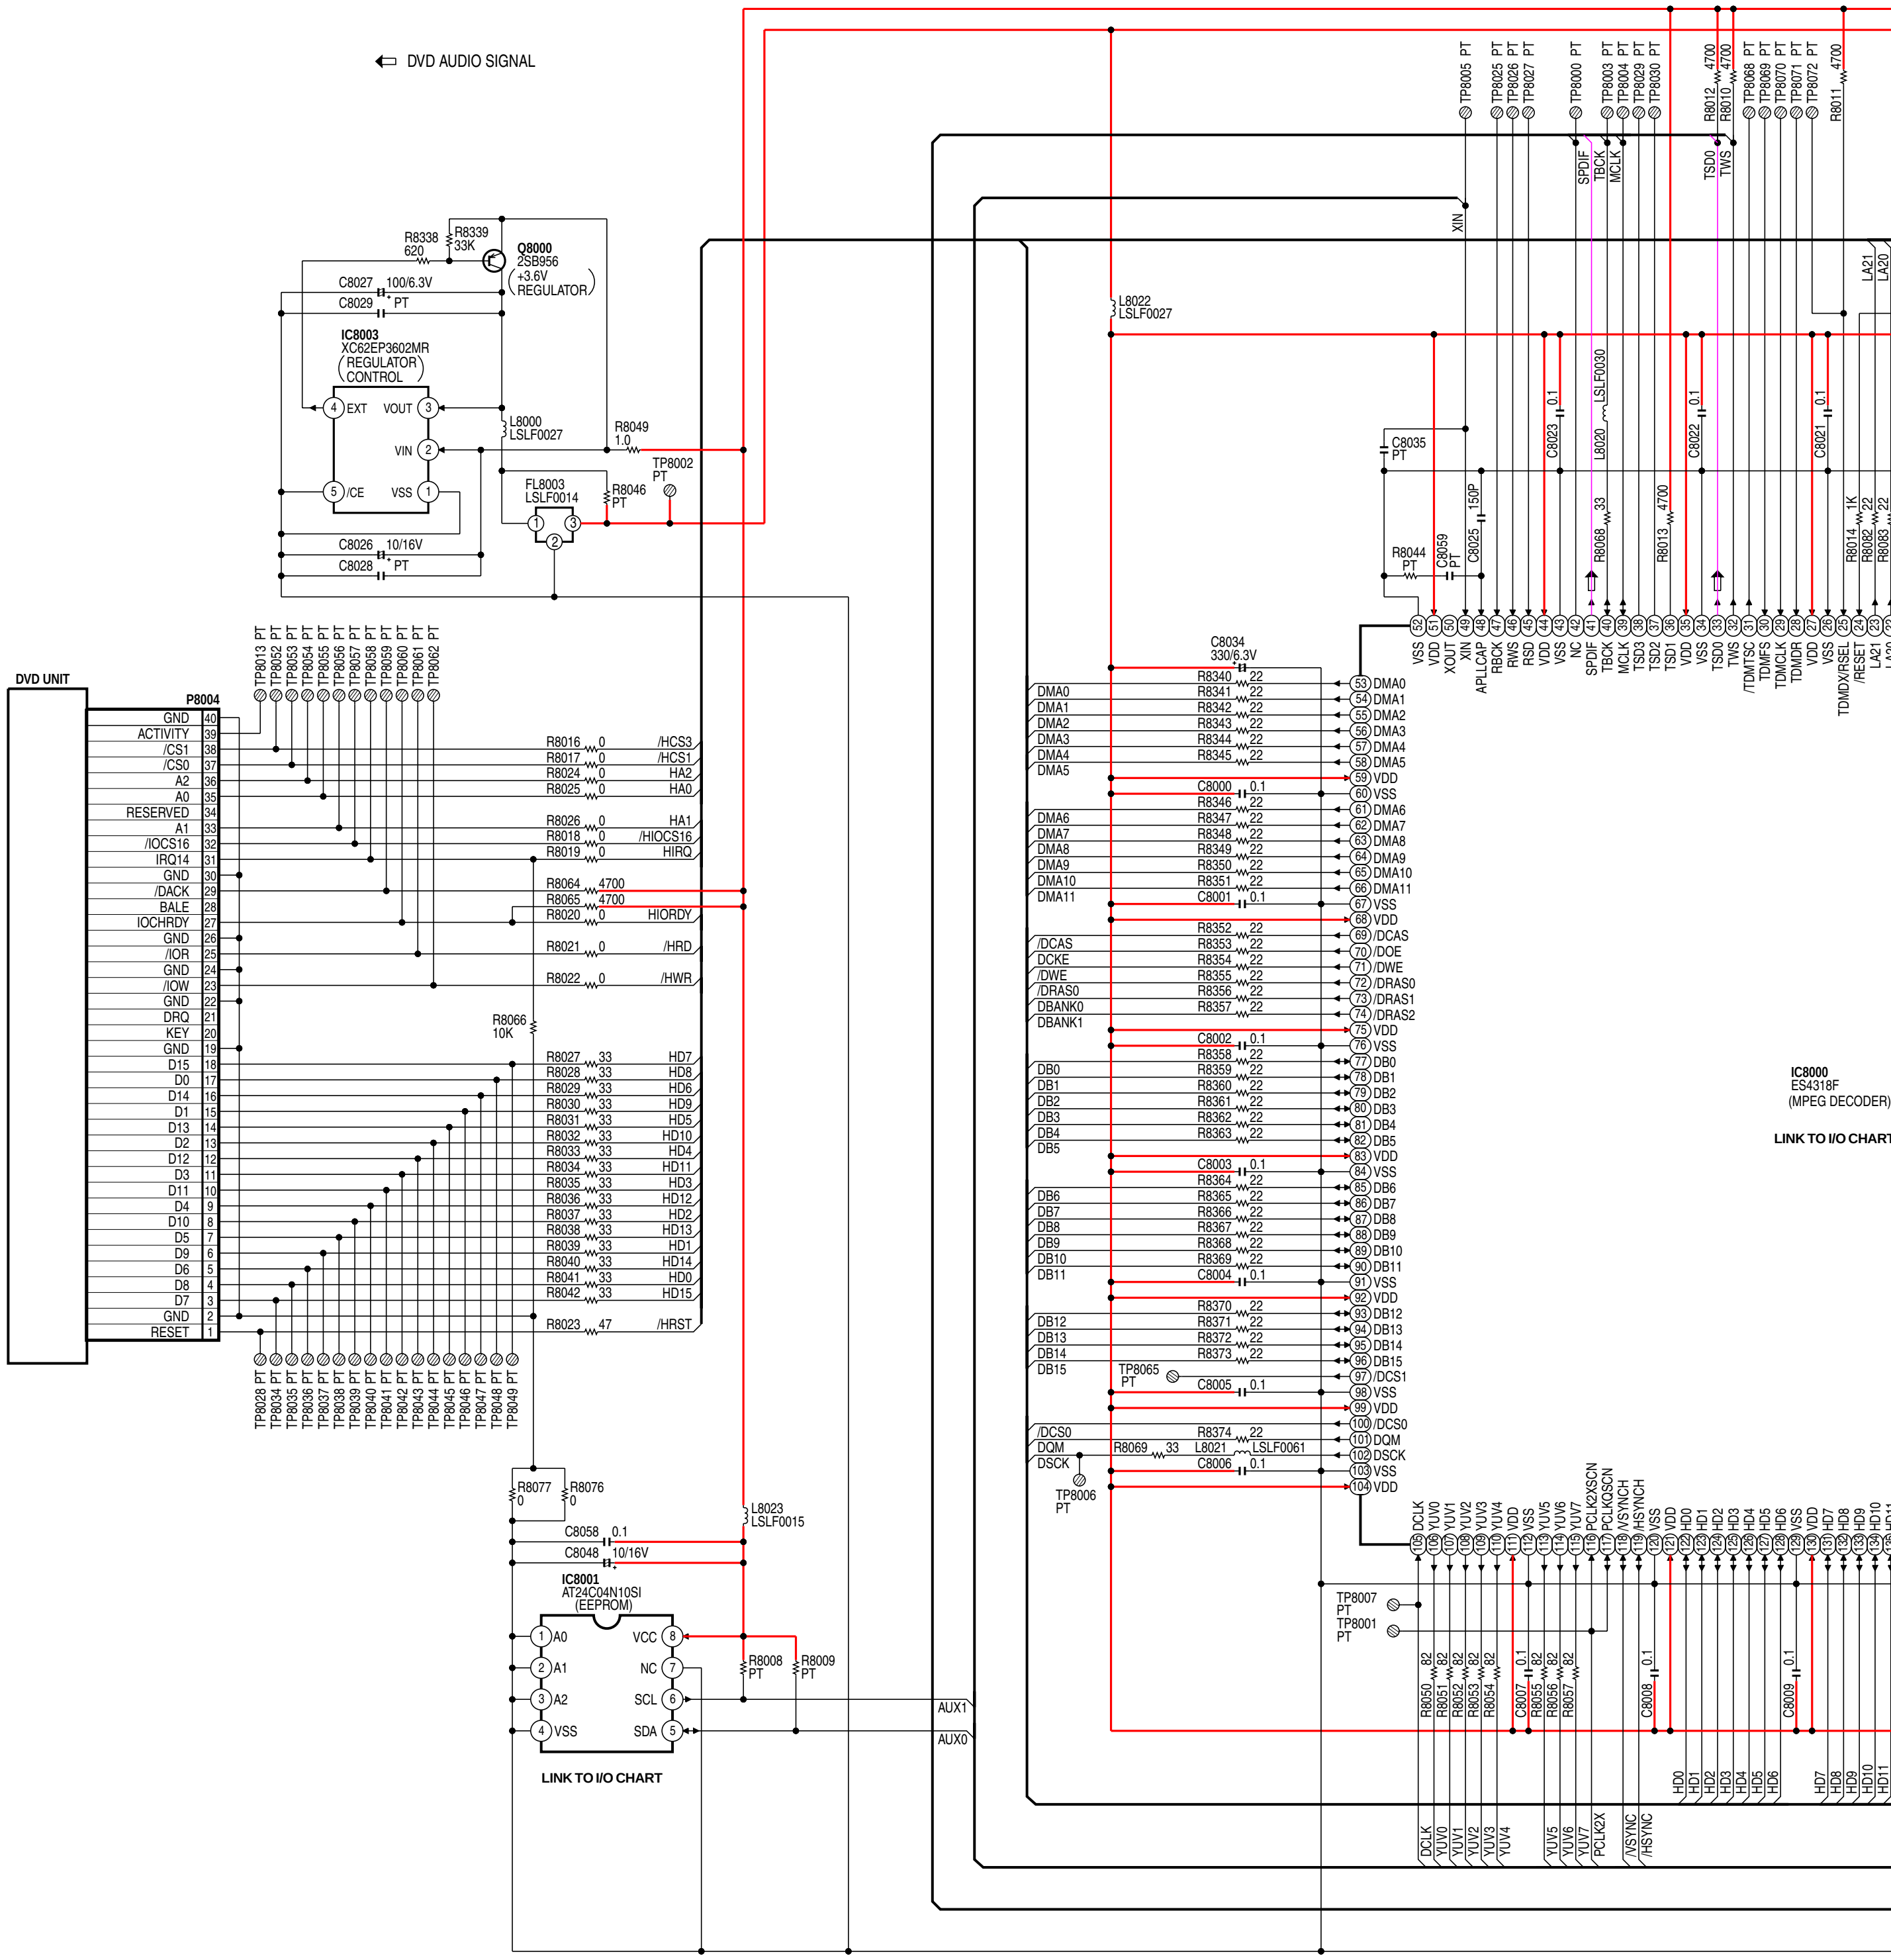
DVD AUDIO SIGNAL
R8338 620
R8339 33K
Q8000 2SB956 (+3.6V REGULATOR)
C8027 100/6.3V
C8029 PT
IC8003 XC62EP3602MR (REGULATOR CONTROL)
EXT
VOUT
VIN
/CE
VSS
L8000 LSLF0027
R8049 1.0
TP8002 PT
FL8003 LSLF0014
R8046 PT
C8026 10/16V
C8028 PT
DVD UNIT
P8004
GND
ACTIVITY
/CS1
/CS0
A2
A0
RESERVED
A1
/IOCS16
IRQ14
/DACK
BALE
IOCHRDY
/IOR
/IOW
DRQ
KEY
D15
D0
D14
D1
D13
D2
D12
D3
D11
D4
D10
D5
D9
D6
D8
D7
RESET
R8016 0 /HCS3
R8017 0 /HCS1
R8024 0 HA2
R8025 0 HA0
R8026 0 HA1
R8018 0 /HIOCS16
R8019 0 HIRQ
R8064 4700
R8065 4700
R8020 0 HIORDY
R8021 0 /HRD
R8022 0 /HWR
R8066 10K
R8023 47 /HRST
R8077 0
R8076 0
C8058 0.1
C8048 10/16V
L8023 LSLF0015
IC8001 AT24C04N10SI (EEPROM)
A0
A1
A2
VSS
VCC
NC
SCL
SDA
R8008 PT
R8009 PT
AUX1
AUX0
LINK TO I/O CHART
L8022 LSLF0027
C8034 330/6.3V
DMA0
DMA1
DMA2
DMA3
DMA4
DMA5
DMA6
DMA7
DMA8
DMA9
DMA10
DMA11
/DCAS
DCKE
/DWE
/DRAS0
DBANK0
DBANK1
DB0
DB1
DB2
DB3
DB4
DB5
DB6
DB7
DB8
DB9
DB10
DB11
DB12
DB13
DB14
DB15
/DCS0
DQM
DSCK
TP8065 PT
TP8006 PT
R8069 33
L8021 LSLF0061
TP8007 PT
TP8001 PT
IC8000 ES4318F (MPEG DECODER)
LINK TO I/O CHART
XIN
SPDIF
TBCK
MCLK
TSD0
TWS
LA21
LA20
C8035 PT
R8044 PT
C8059 PT
C8025 150P
C8023 0.1
L8020 LSLF0030
R8068 33
R8013 4700
C8022 0.1
C8021 0.1
R8014 1K
R8012 4700
R8010 4700
R8011 4700
VSS
VDD
XOUT
APLLCAP
RBCK
RWS
RSD
NC
TSD3
TSD2
TSD1
/TDMTSC
TDMFS
TDMCLK
TDMDR
TDMDX/RSEL
/RESET
DCLK
YUV0
YUV1
YUV2
YUV3
YUV4
YUV5
YUV6
YUV7
PCLK2X
/VSYNC
/HSYNC
HD0
HD1
HD2
HD3
HD4
HD5
HD6
HD7
HD8
HD9
HD10
HD11
R8050 82
C8007 0.1
C8008 0.1
C8009 0.1

LINK TO VOLTAGE CHART

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts, be sure to use the part number listed in the parts list. Do not use the part number on this diagram.

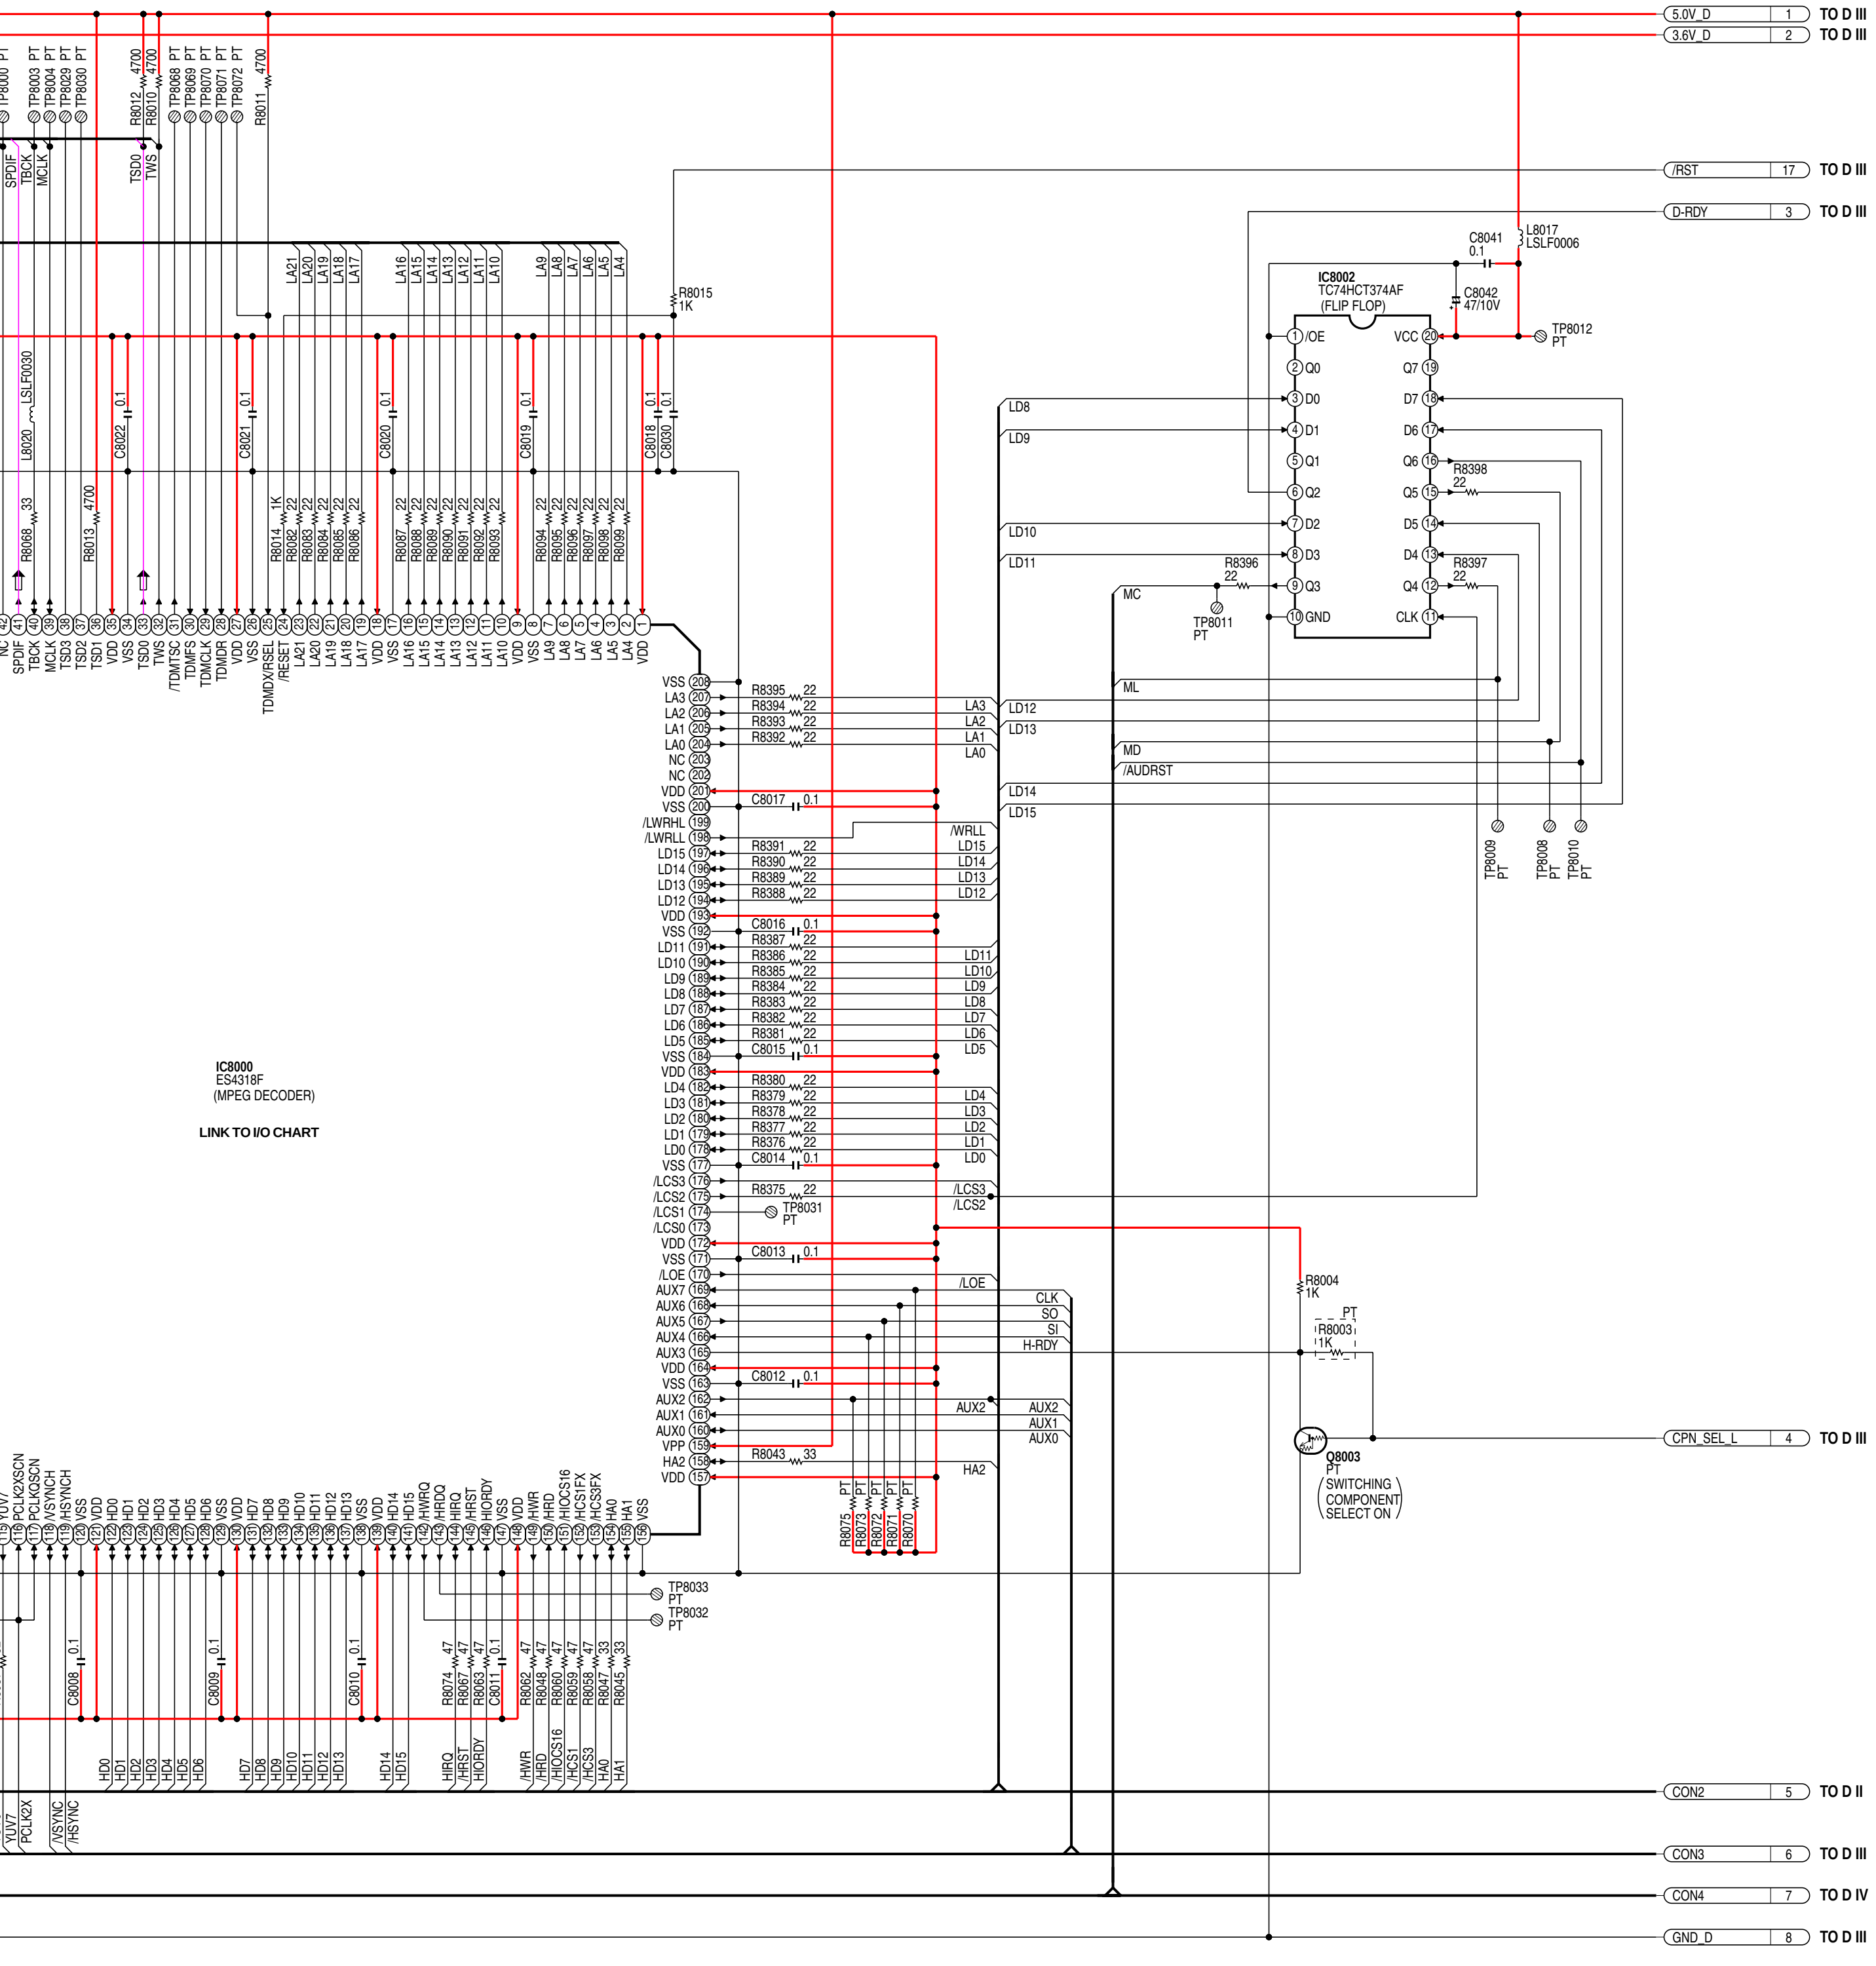
IC8000
ES4318F
(MPEG DECODER)
LINK TO I/O CHART
IC8002
TC74HCT374AF
(FLIP FLOP)
Q8003
PT
SWITCHING
COMPONENT
SELECT ON
5.0V_D 1 TO D III
3.6V_D 2 TO D III
/RST 17 TO D III
D-RDY 3 TO D III
CPN_SEL_L 4 TO D III
CON2 5 TO D II
CON3 6 TO D III
CON4 7 TO D IV
GND_D 8 TO D III
C8041 0.1
L8017 LSLF0006
C8042 47/10V
TP8012 PT
R8015 1K
R8396 22
R8397 22
R8398 22
TP8011 PT
TP8009 PT
TP8008 PT
TP8010 PT
R8004 1K
R8003 1K
PT
TP8031 PT
TP8032 PT
TP8033 PT
L8020 LSLF0030
R8068 33
R8013 4700
R8012 4700
R8010 4700
R8011 4700
C8022 0.1
C8021 0.1
C8020 0.1
C8019 0.1
C8018 0.1
C8030 0.1
C8017 0.1
C8016 0.1
C8015 0.1
C8014 0.1
C8013 0.1
C8012 0.1
C8008 0.1
C8009 0.1
C8010 0.1
C8011 0.1
R8043 33
R8375 22
R8075 R8073 R8072 R8071 R8070 PT
/OE Q0 D0 D1 Q1 Q2 D2 D3 Q3 GND
VCC Q7 D7 D6 Q6 Q5 D5 D4 Q4 CLK
LD8 LD9 LD10 LD11 LD12 LD13 LD14 LD15
MC ML MD /AUDRST
CLK SO SI H-RDY
AUX2 AUX1 AUX0 HA2
/LCS3 /LCS2 /LOE /WRLL
SPDIF TBCK MCLK TSD0 TWS
YUV7 PCLK2X /VSYNC /HSYNC

LSJB2007
PV-DM2792/PV-DM2792-K
DVD DECODER I SCHEMATIC DIAGRAM

DVD DECODER II SCHEMATIC DIAGRAM

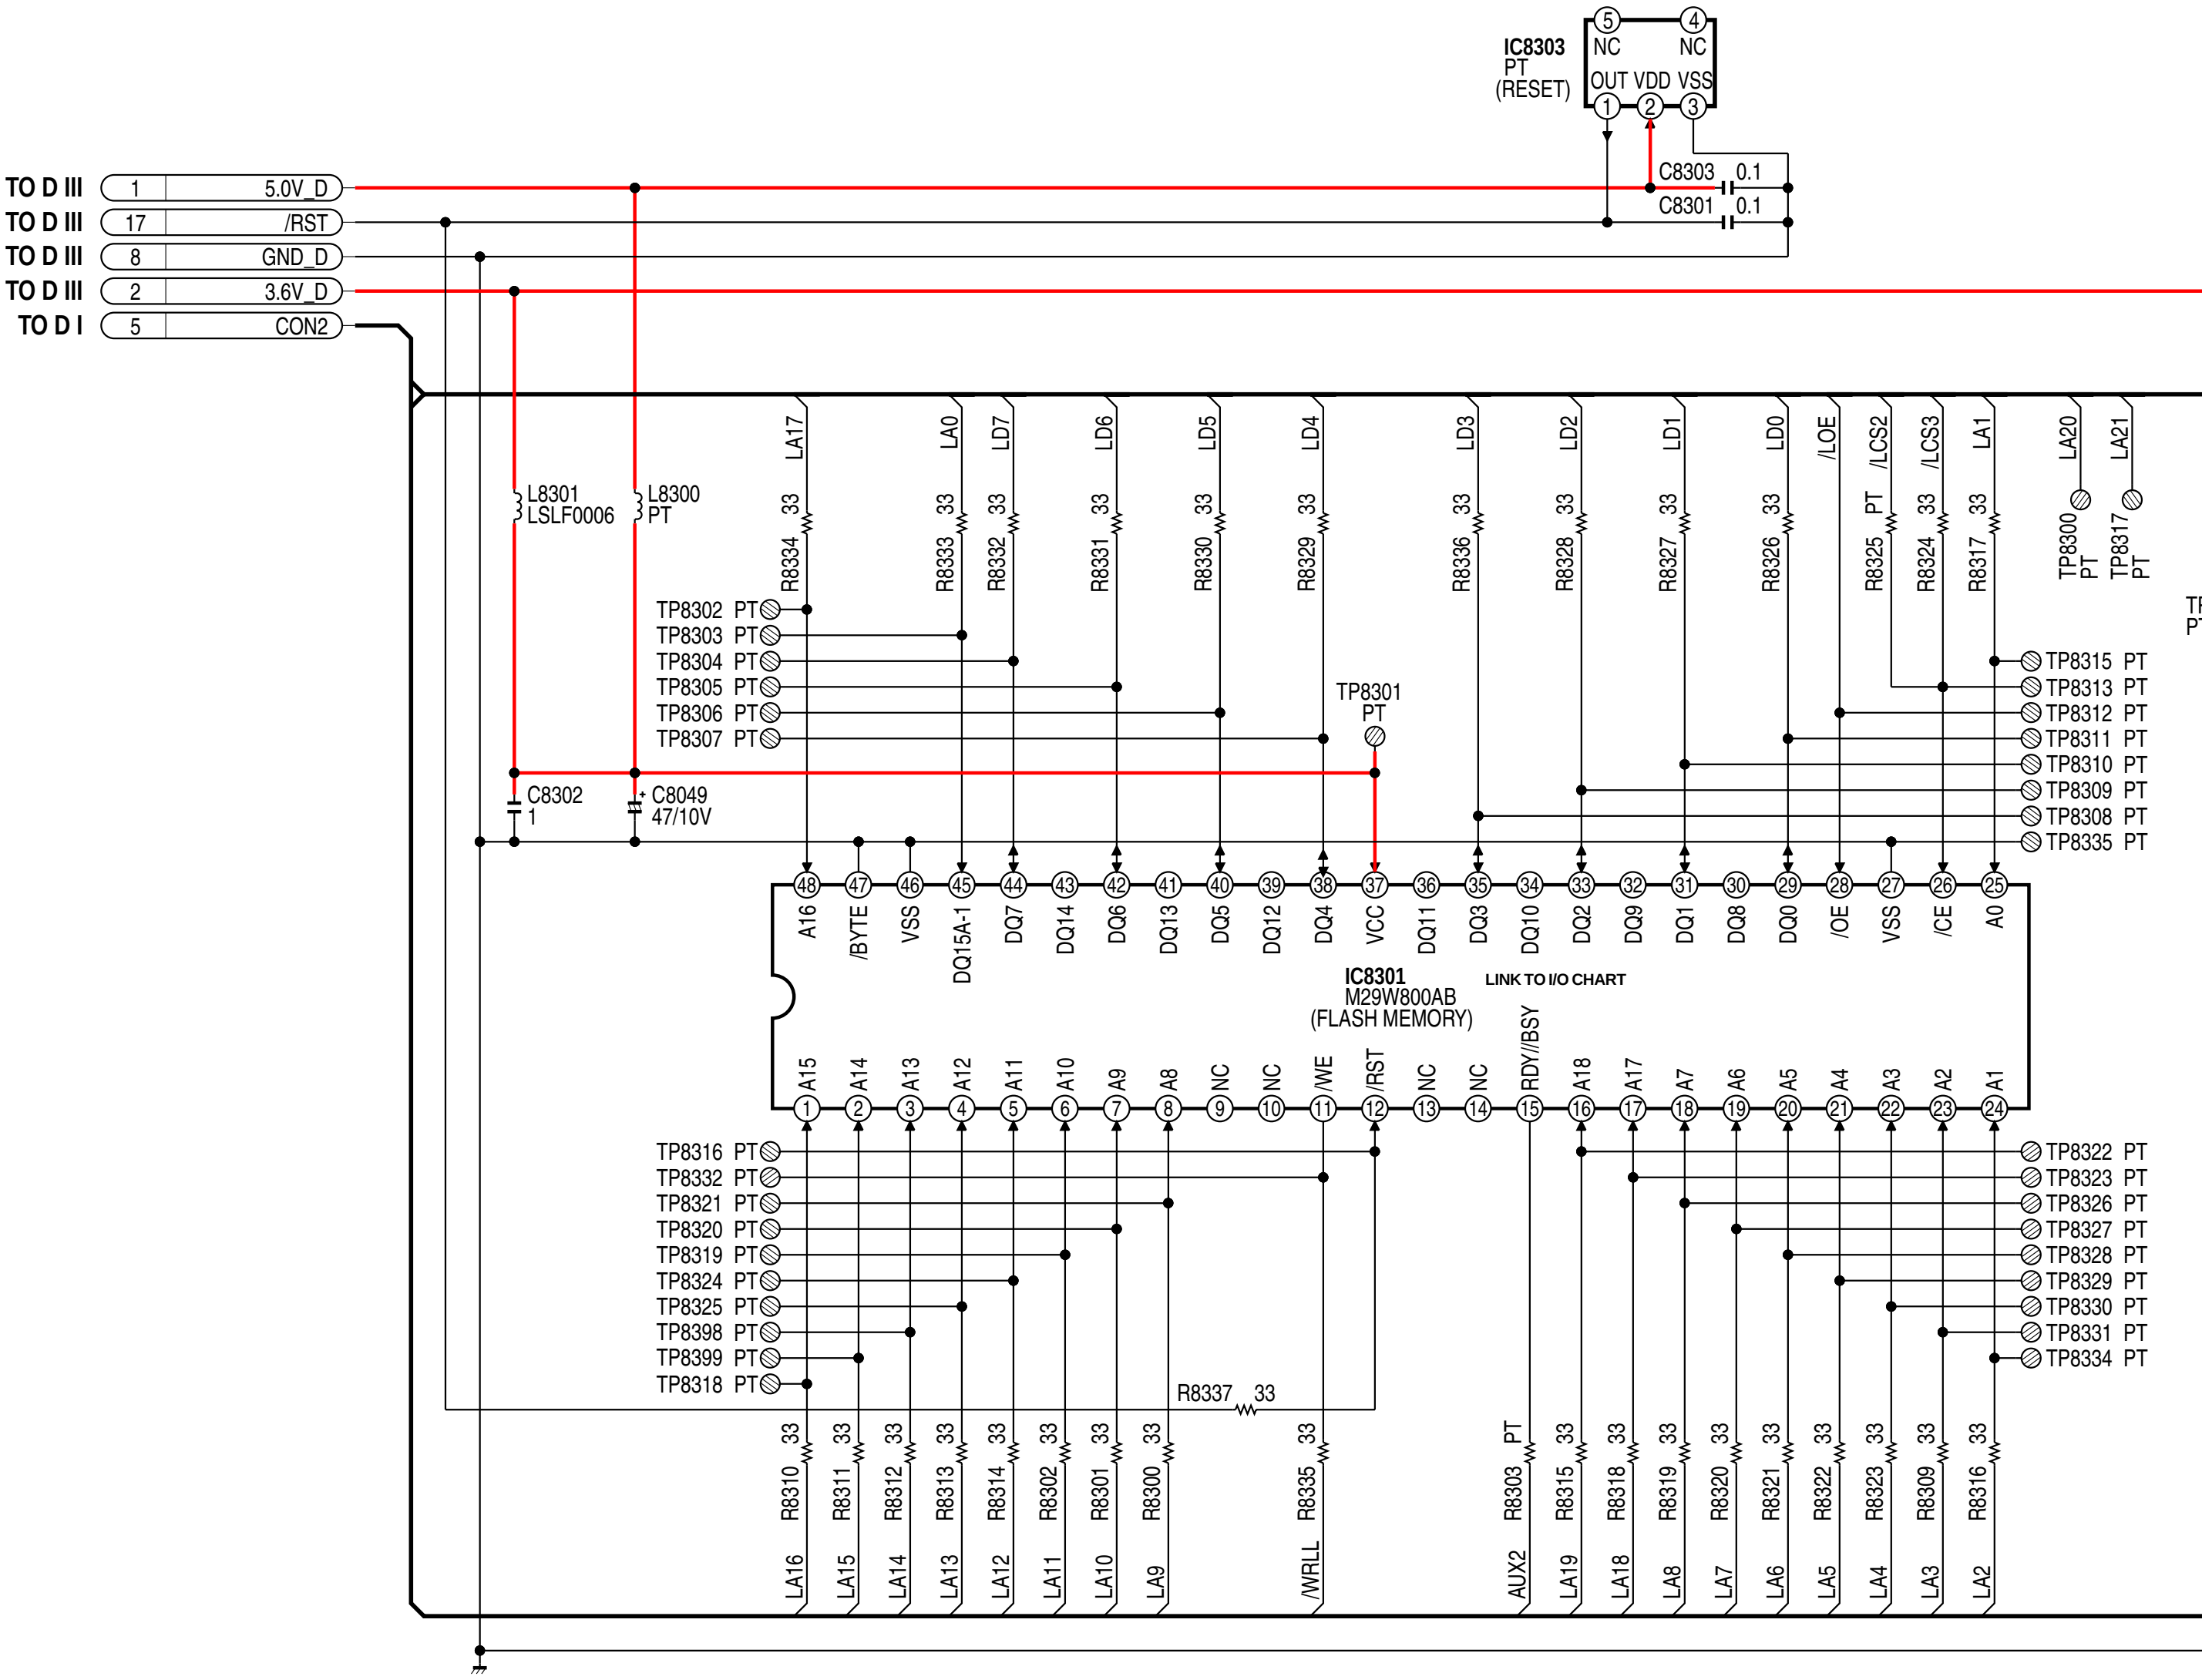
IC8303
PT
(RESET)
NC
NC
OUT VDD VSS
C8303 0.1
C8301 0.1
TO D III 1 5.0V_D
TO D III 17 /RST
TO D III 8 GND_D
TO D III 2 3.6V_D
TO D I 5 CON2
L8301
LSLF0006
L8300
PT
C8302
1
C8049
47/10V
LA17
LA0
LD7
LD6
LD5
LD4
LD3
LD2
LD1
LD0
/LOE
/LCS2
/LCS3
LA1
LA20
LA21
R8334 33
R8333 33
R8332 33
R8331 33
R8330 33
R8329 33
R8336 33
R8328 33
R8327 33
R8326 33
R8325 PT
R8324 33
R8317 33
TP8300
PT
TP8317
PT
TP8302 PT
TP8303 PT
TP8304 PT
TP8305 PT
TP8306 PT
TP8307 PT
TP8301
PT
TP8315 PT
TP8313 PT
TP8312 PT
TP8311 PT
TP8310 PT
TP8309 PT
TP8308 PT
TP8335 PT
A16
/BYTE
VSS
DQ15A-1
DQ7
DQ14
DQ6
DQ13
DQ5
DQ12
DQ4
VCC
DQ11
DQ3
DQ10
DQ2
DQ9
DQ1
DQ8
DQ0
/OE
VSS
/CE
A0
IC8301
M29W800AB
(FLASH MEMORY)
LINK TO I/O CHART
A15
A14
A13
A12
A11
A10
A9
A8
NC
NC
/WE
/RST
NC
NC
RDY//BSY
A18
A17
A7
A6
A5
A4
A3
A2
A1
TP8316 PT
TP8332 PT
TP8321 PT
TP8320 PT
TP8319 PT
TP8324 PT
TP8325 PT
TP8398 PT
TP8399 PT
TP8318 PT
TP8322 PT
TP8323 PT
TP8326 PT
TP8327 PT
TP8328 PT
TP8329 PT
TP8330 PT
TP8331 PT
TP8334 PT
R8337 33
R8310 33
R8311 33
R8312 33
R8313 33
R8314 33
R8302 33
R8301 33
R8300 33
R8335 33
R8303 PT
R8315 33
R8318 33
R8319 33
R8320 33
R8321 33
R8322 33
R8323 33
R8309 33
R8316 33
LA16
LA15
LA14
LA13
LA12
LA11
LA10
LA9
/WRLL
AUX2
LA19
LA18
LA8
LA7
LA6
LA5
LA4
LA3
LA2

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

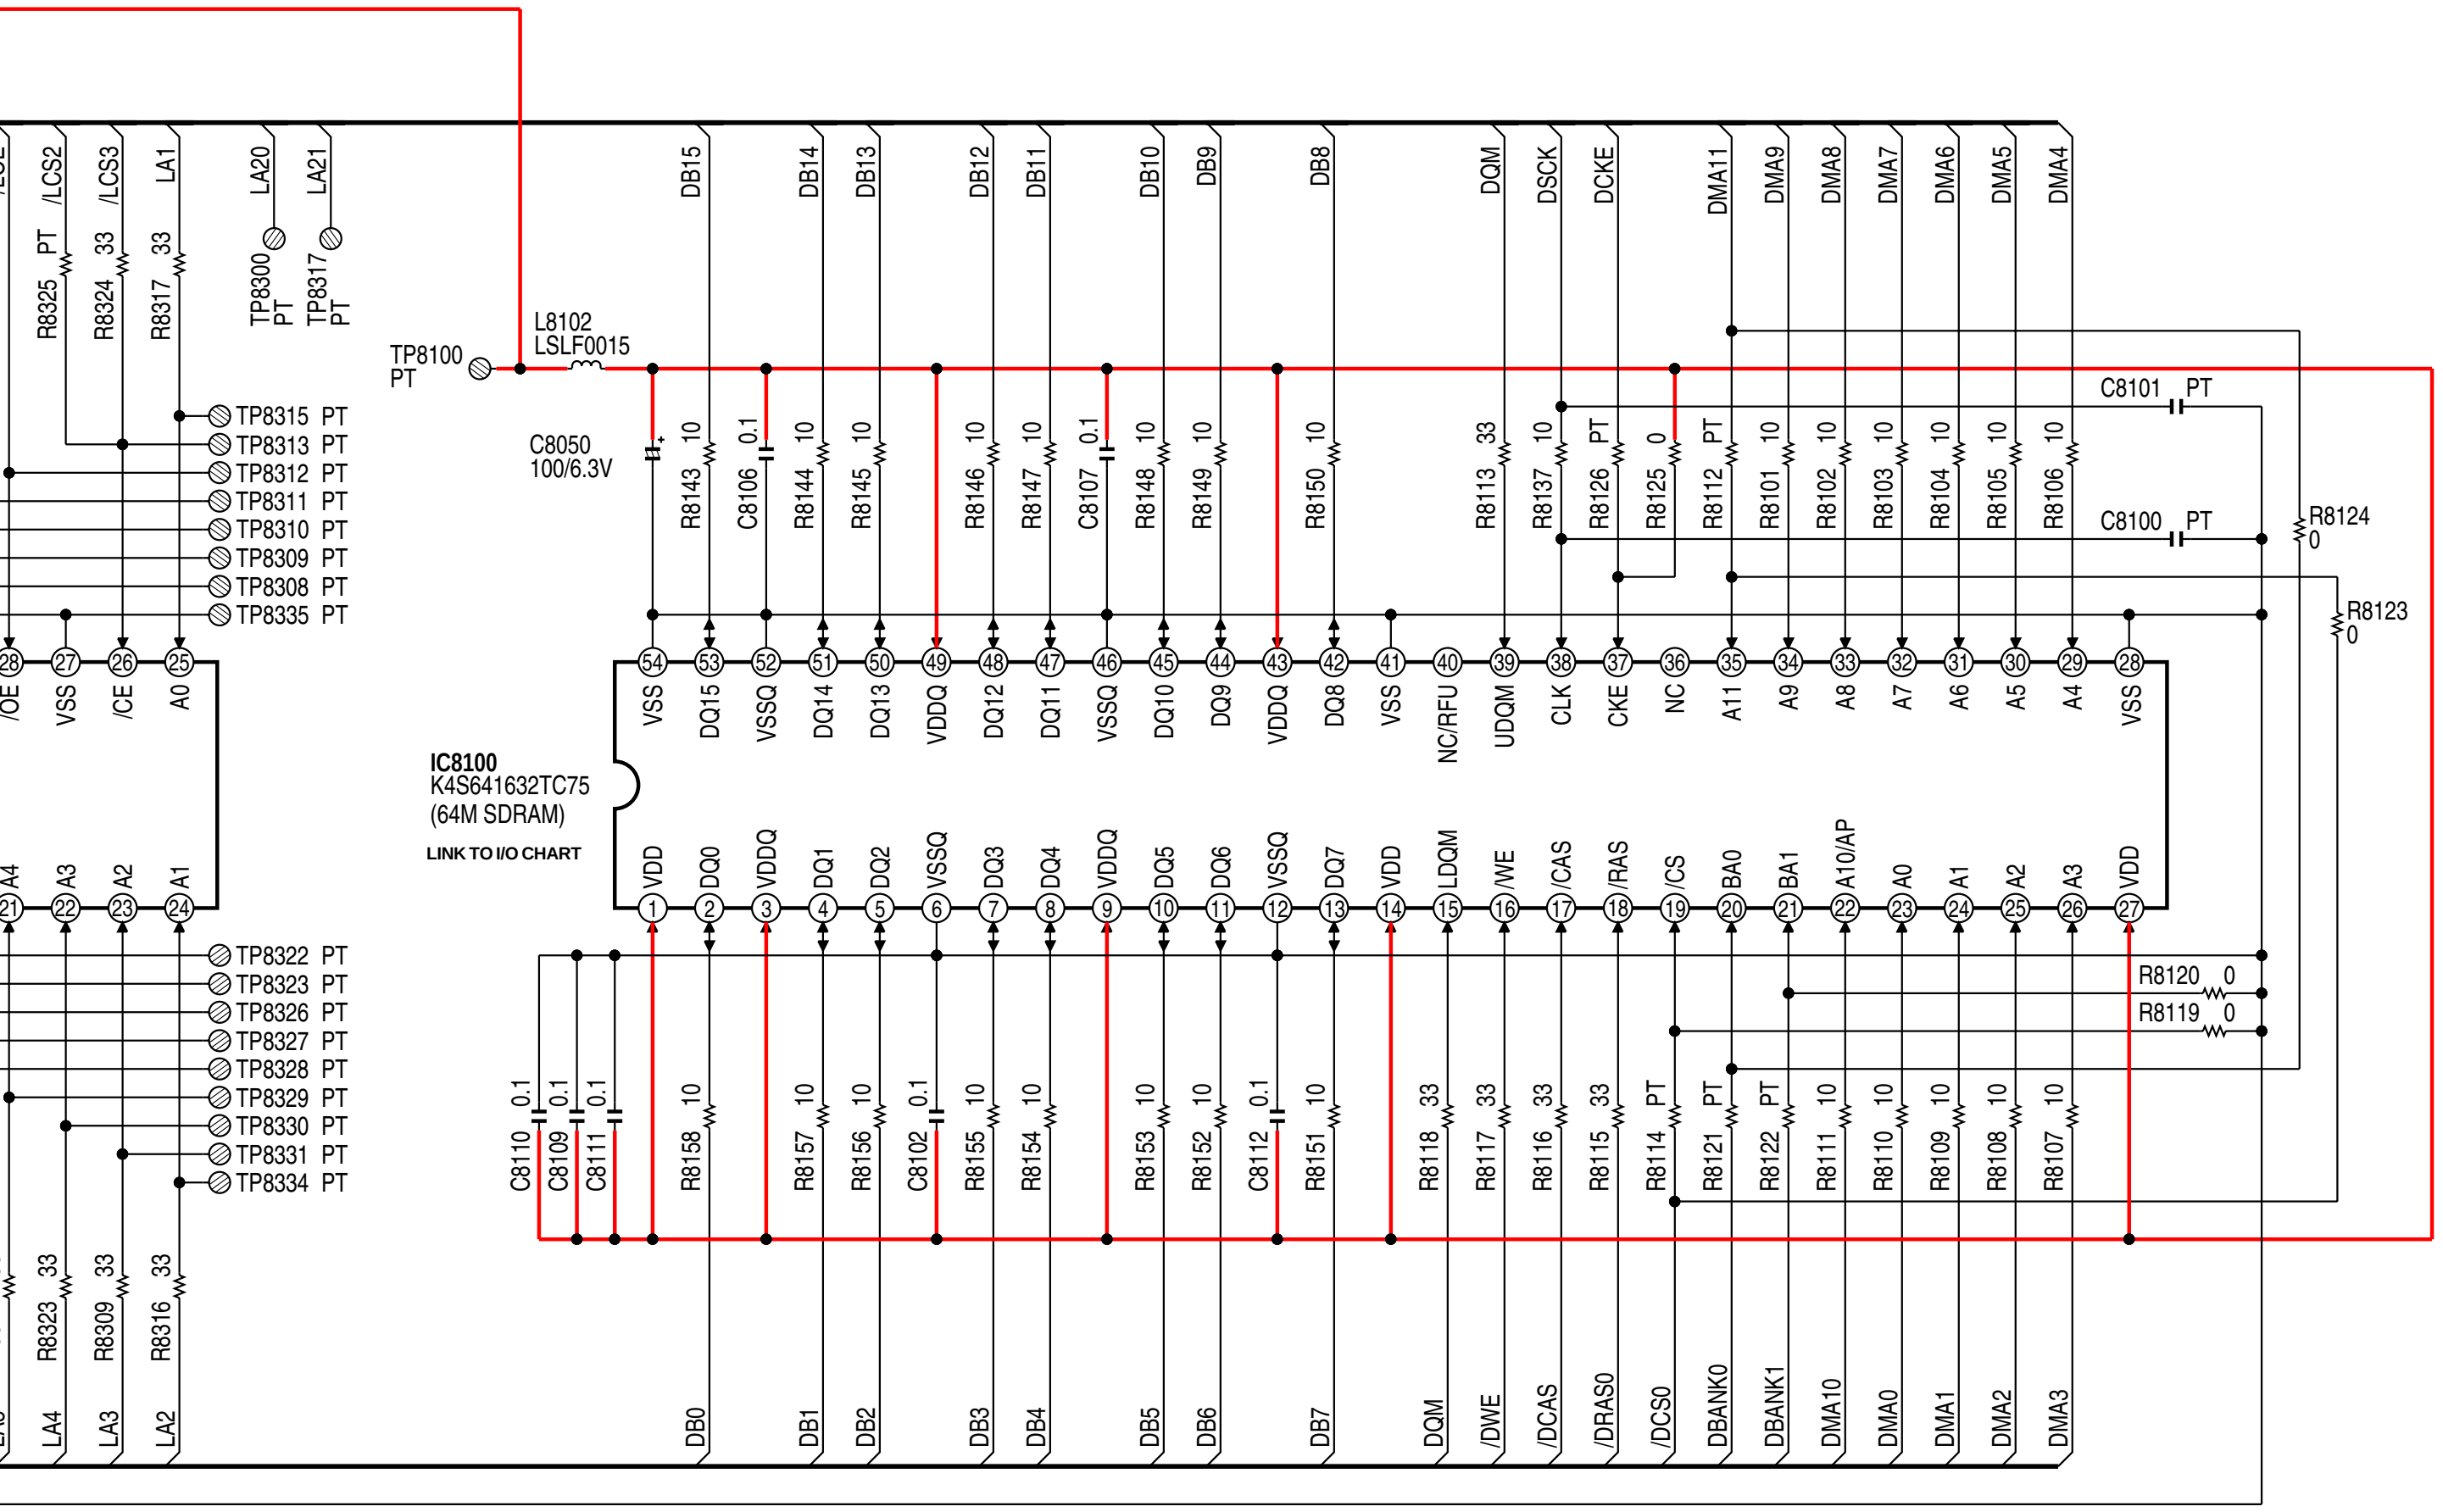

IC8100
K4S641632TC75
(64M SDRAM)
LINK TO I/O CHART
L8102
LSLF0015
TP8100
PT
C8050
100/6.3V
C8101 PT
C8100 PT
R8124
0
R8123
0
R8120 0
R8119 0
/LCS2
/LCS3
LA1
LA20
LA21
R8325 PT
R8324 33
R8317 33
TP8300 PT
TP8317 PT
TP8315 PT
TP8313 PT
TP8312 PT
TP8311 PT
TP8310 PT
TP8309 PT
TP8308 PT
TP8335 PT
TP8322 PT
TP8323 PT
TP8326 PT
TP8327 PT
TP8328 PT
TP8329 PT
TP8330 PT
TP8331 PT
TP8334 PT
R8323 33
R8309 33
R8316 33
LA4
LA3
LA2
/OE
VSS
/CE
A0
A4
A3
A2
A1
DB15
DB14
DB13
DB12
DB11
DB10
DB9
DB8
DQM
DSCK
DCKE
DMA11
DMA9
DMA8
DMA7
DMA6
DMA5
DMA4
R8143 10
C8106 0.1
R8144 10
R8145 10
R8146 10
R8147 10
C8107 0.1
R8148 10
R8149 10
R8150 10
R8113 33
R8137 10
R8126 PT
R8125 0
R8112 PT
R8101 10
R8102 10
R8103 10
R8104 10
R8105 10
R8106 10
VSS
DQ15
VSSQ
DQ14
DQ13
VDDQ
DQ12
DQ11
VSSQ
DQ10
DQ9
VDDQ
DQ8
VSS
NC/RFU
UDQM
CLK
CKE
NC
A11
A9
A8
A7
A6
A5
A4
VSS
VDD
DQ0
VDDQ
DQ1
DQ2
VSSQ
DQ3
DQ4
VDDQ
DQ5
DQ6
VSSQ
DQ7
VDD
LDQM
/WE
/CAS
/RAS
/CS
BA0
BA1
A10/AP
A0
A1
A2
A3
VDD
C8110 0.1
C8109 0.1
C8111 0.1
R8158 10
R8157 10
R8156 10
C8102 0.1
R8155 10
R8154 10
R8153 10
R8152 10
C8112 0.1
R8151 10
R8118 33
R8117 33
R8116 33
R8115 33
R8114 PT
R8121 PT
R8122 PT
R8111 10
R8110 10
R8109 10
R8108 10
R8107 10
DB0
DB1
DB2
DB3
DB4
DB5
DB6
DB7
DQM
/DWE
/DCAS
/DRAS0
/DCS0
DBANK0
DBANK1
DMA10
DMA0
DMA1
DMA2
DMA3

LINK TO VOLTAGE CHART

LSJB2007
PV-DM2792/PV-DM2792-K
DVD DECODER II SCHEMATIC DIAGRAM

DVD DECODER III SCHEMATIC DIAGRAM

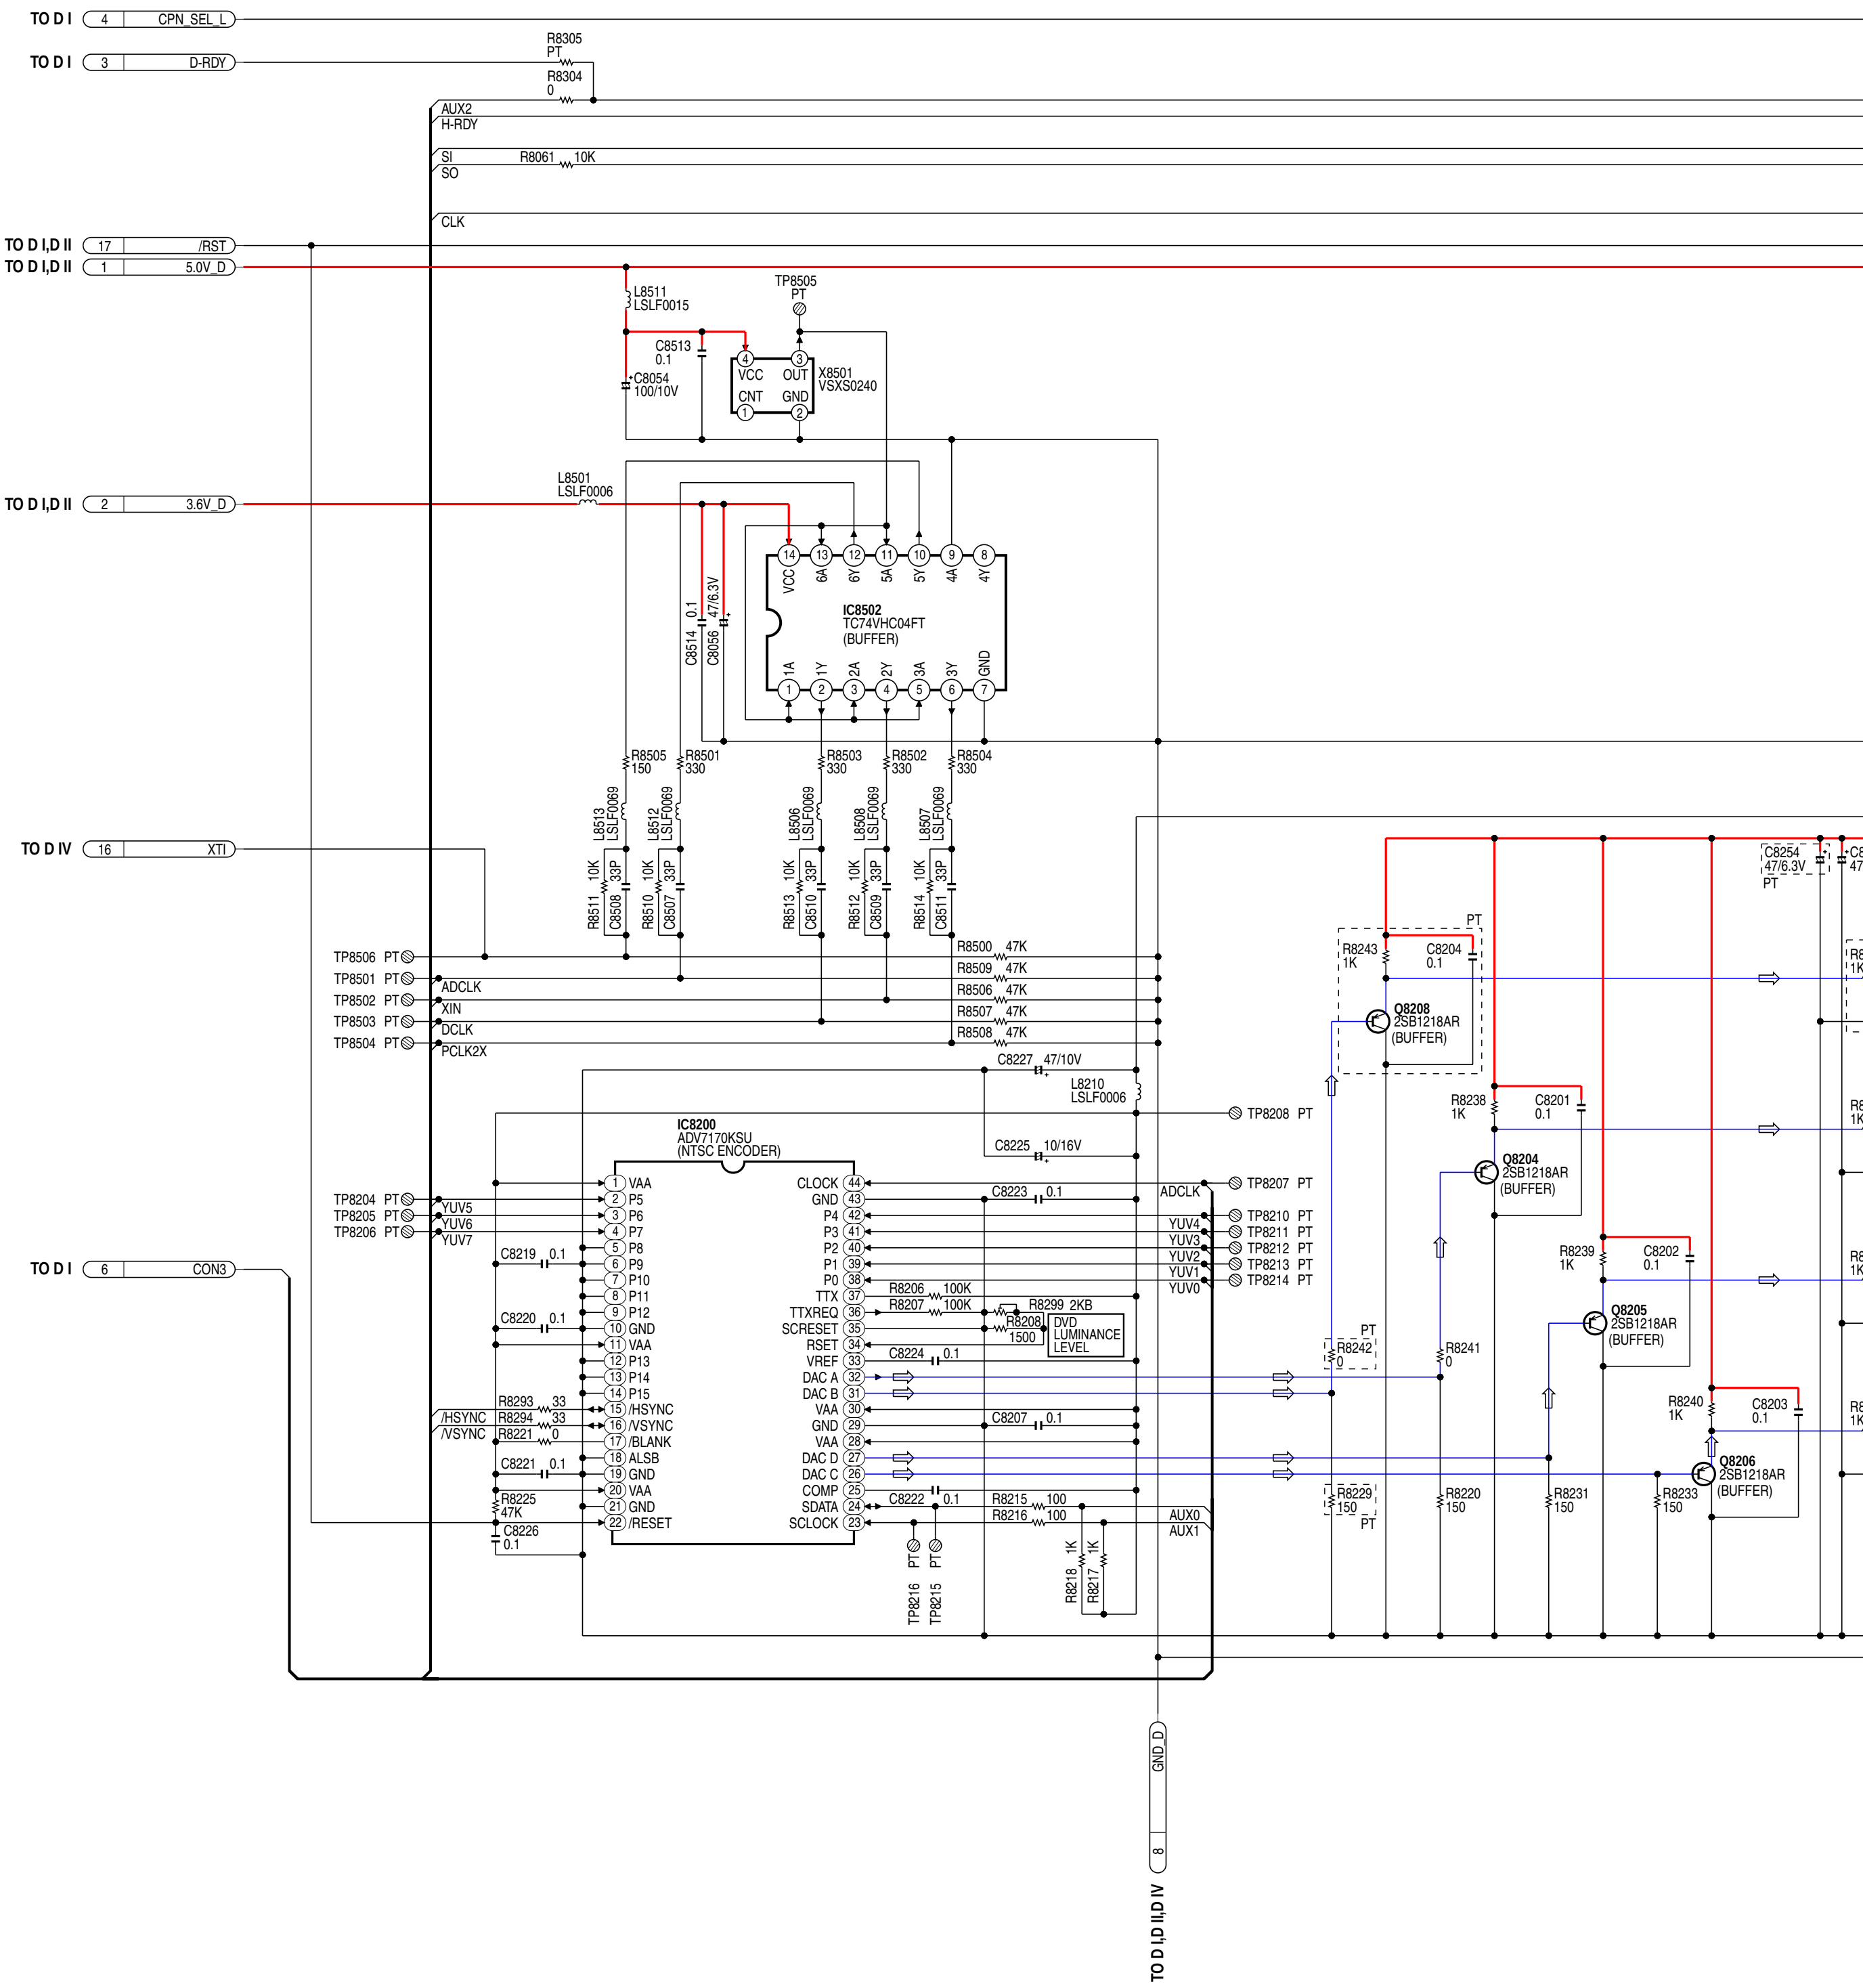
TO D I 4 CPN_SEL_L
TO D I 3 D-RDY
R8305 PT
R8304 0
AUX2
H-RDY
SI
SO
R8061 10K
CLK
TO D I,D II 17 /RST
TO D I,D II 1 5.0V_D
L8511 LSLF0015
TP8505 PT
C8513 0.1
C8054 100/10V
VCC OUT
CNT GND
X8501 VSXS0240
L8501 LSLF0006
TO D I,D II 2 3.6V_D
C8514 0.1
C8056 47/6.3V
IC8502 TC74VHC04FT (BUFFER)
VCC 6A 6Y 5A 5Y 4A 4Y
1A 1Y 2A 2Y 3A 3Y GND
R8505 150
R8501 330
R8503 330
R8502 330
R8504 330
L8513 LSLF0069
L8512 LSLF0069
L8506 LSLF0069
L8508 LSLF0069
L8507 LSLF0069
TO D IV 16 XTI
R8511 10K
C8508 33P
R8510 10K
C8507 33P
R8513 10K
C8510 33P
R8512 10K
C8509 33P
R8514 10K
C8511 33P
TP8506 PT
TP8501 PT
TP8502 PT
TP8503 PT
TP8504 PT
ADCLK
XIN
DCLK
PCLK2X
R8500 47K
R8509 47K
R8506 47K
R8507 47K
R8508 47K
C8227 47/10V
L8210 LSLF0006
TP8208 PT
IC8200 ADV7170KSU (NTSC ENCODER)
C8225 10/16V
TP8204 PT
TP8205 PT
TP8206 PT
YUV5
YUV6
YUV7
TO D I 6 CON3
C8219 0.1
C8220 0.1
1 VAA
2 P5
3 P6
4 P7
5 P8
6 P9
7 P10
8 P11
9 P12
10 GND
11 VAA
12 P13
13 P14
14 P15
15 /HSYNC
16 /VSYNC
17 /BLANK
18 ALSB
19 GND
20 VAA
21 GND
22 /RESET
CLOCK 44
GND 43
P4 42
P3 41
P2 40
P1 39
P0 38
TTX 37
TTXREQ 36
SCRESET 35
RSET 34
VREF 33
DAC A 32
DAC B 31
VAA 30
GND 29
VAA 28
DAC D 27
DAC C 26
COMP 25
SDATA 24
SCLOCK 23
C8223 0.1
ADCLK
TP8207 PT
YUV4
YUV3
YUV2
YUV1
YUV0
TP8210 PT
TP8211 PT
TP8212 PT
TP8213 PT
TP8214 PT
R8206 100K
R8207 100K
R8299 2KB
R8208 1500
DVD LUMINANCE LEVEL
C8224 0.1
R8293 33
R8294 33
R8221 0
/HSYNC
/VSYNC
C8221 0.1
R8225 47K
C8226 0.1
C8207 0.1
C8222 0.1
R8215 100
R8216 100
AUX0
AUX1
TP8216 PT
TP8215 PT
R8218 1K
R8217 1K
GND_D 8
TO D I,D II,D IV
C8254 47/6.3V PT
PT
R8243 1K
C8204 0.1
Q8208 2SB1218AR (BUFFER)
R8238 1K
C8201 0.1
Q8204 2SB1218AR (BUFFER)
R8239 1K
C8202 0.1
Q8205 2SB1218AR (BUFFER)
PT
R8242 0
R8241 0
R8240 1K
C8203 0.1
Q8206 2SB1218AR (BUFFER)
R8229 150 PT
R8220 150
R8231 150
R8233 150

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

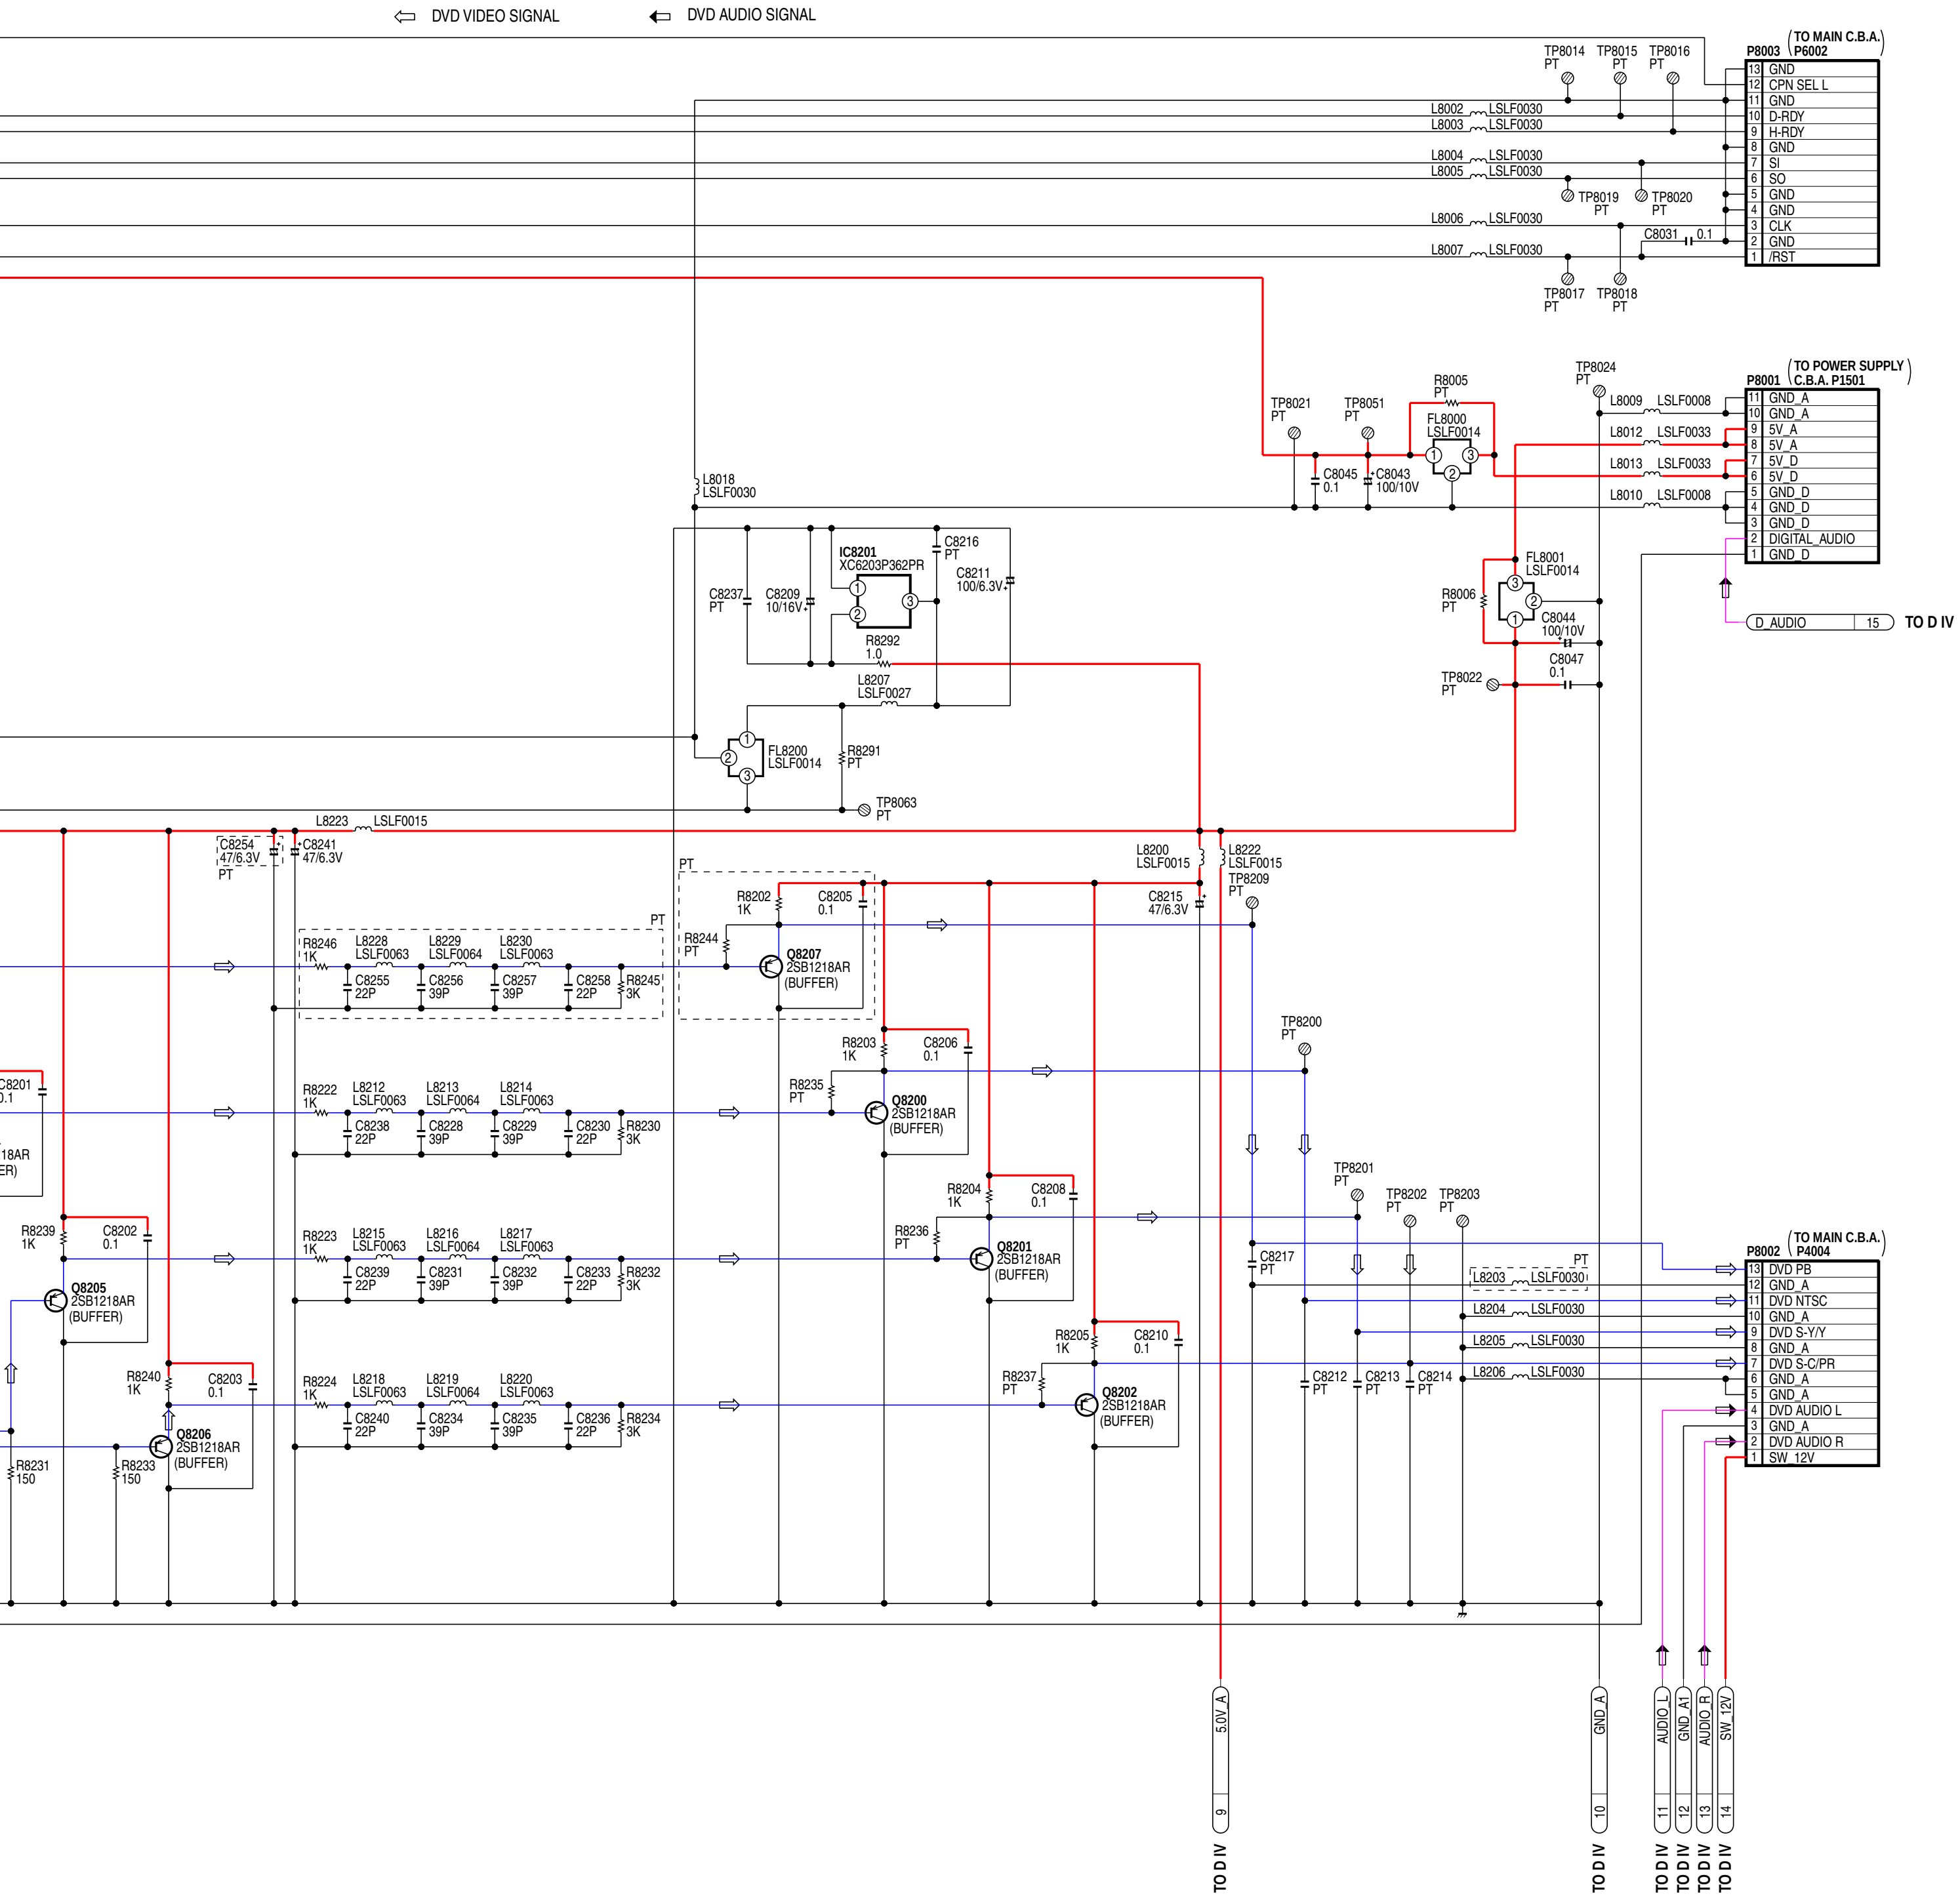

DVD VIDEO SIGNAL
DVD AUDIO SIGNAL
TO MAIN C.B.A. P6002
P8003
13 GND
12 CPN SEL L
11 GND
10 D-RDY
9 H-RDY
8 GND
7 SI
6 SO
5 GND
4 GND
3 CLK
2 GND
1 /RST
TP8014 PT
TP8015 PT
TP8016 PT
L8002 LSLF0030
L8003 LSLF0030
L8004 LSLF0030
L8005 LSLF0030
L8006 LSLF0030
L8007 LSLF0030
TP8019 PT
TP8020 PT
C8031 0.1
TP8017 PT
TP8018 PT
TO POWER SUPPLY C.B.A. P1501
P8001
11 GND_A
10 GND_A
9 5V_A
8 5V_A
7 5V_D
6 5V_D
5 GND_D
4 GND_D
3 GND_D
2 DIGITAL_AUDIO
1 GND_D
TP8024 PT
L8009 LSLF0008
L8012 LSLF0033
L8013 LSLF0033
L8010 LSLF0008
R8005 PT
FL8000 LSLF0014
TP8021 PT
TP8051 PT
C8045 0.1
C8043 100/10V
L8018 LSLF0030
FL8001 LSLF0014
R8006 PT
C8044 100/10V
C8047 0.1
TP8022 PT
D_AUDIO 15 TO D IV
IC8201 XC6203P362PR
C8216 PT
C8211 100/6.3V
C8237 PT
C8209 10/16V
R8292 1.0
L8207 LSLF0027
FL8200 LSLF0014
R8291 PT
TP8063 PT
L8223 LSLF0015
C8254 47/6.3V PT
C8241 47/6.3V
L8200 LSLF0015
L8222 LSLF0015
TP8209 PT
C8215 47/6.3V
PT
R8202 1K
C8205 0.1
R8244 PT
Q8207 2SB1218AR (BUFFER)
R8246 1K
L8228 LSLF0063
L8229 LSLF0064
L8230 LSLF0063
C8255 22P
C8256 39P
C8257 39P
C8258 22P
R8245 3K
TP8200 PT
R8203 1K
C8206 0.1
R8235 PT
Q8200 2SB1218AR (BUFFER)
C8201 0.1
18AR ER)
R8222 1K
L8212 LSLF0063
L8213 LSLF0064
L8214 LSLF0063
C8238 22P
C8228 39P
C8229 39P
C8230 22P
R8230 3K
R8204 1K
C8208 0.1
R8236 PT
Q8201 2SB1218AR (BUFFER)
TP8201 PT
TP8202 PT
TP8203 PT
R8239 1K
C8202 0.1
Q8205 2SB1218AR (BUFFER)
R8223 1K
L8215 LSLF0063
L8216 LSLF0064
L8217 LSLF0063
C8239 22P
C8231 39P
C8232 39P
C8233 22P
R8232 3K
C8217 PT
R8205 1K
C8210 0.1
R8237 PT
Q8202 2SB1218AR (BUFFER)
R8240 1K
C8203 0.1
Q8206 2SB1218AR (BUFFER)
R8224 1K
L8218 LSLF0063
L8219 LSLF0064
L8220 LSLF0063
C8240 22P
C8234 39P
C8235 39P
C8236 22P
R8234 3K
C8212 PT
C8213 PT
C8214 PT
R8231 150
R8233 150
TO MAIN C.B.A. P4004
P8002
PT
L8203 LSLF0030
L8204 LSLF0030
L8205 LSLF0030
L8206 LSLF0030
13 DVD PB
12 GND_A
11 DVD NTSC
10 GND_A
9 DVD S-Y/Y
8 GND_A
7 DVD S-C/PR
6 GND_A
5 GND_A
4 DVD AUDIO L
3 GND_A
2 DVD AUDIO R
1 SW_12V
5.0V_A 9 TO D IV
GND_A 10 TO D IV
AUDIO_L 11 TO D IV
GND_A1 12 TO D IV
AUDIO_R 13 TO D IV
SW_12V 14 TO D IV

LINK TO VOLTAGE CHART

LSJB2007
PV-DM2792/PV-DM2792-K
DVD DECODER III SCHEMATIC DIAGRAM

DVD DECODER IV SCHEMATIC DIAGRAM

I/O CHART OF IC8403

Pin No.	I/O	Signal Name	Description
1	I	XTI	27MHz clock
2	O	SCKO	System clock
3	I	VCP	+5.0V
4	-	NC	(Not used)
5	-	MCKO	(Not used)
6	I	ML	Mode control latch
7	I	MC	Mode control clock
8	I	MD	Mode control data
9	I	RSTB	Audio DAC reset : low
10	-	ZERO	(Not used)
11	O	V OUT R	Audio R-CH
12	-	GNDA	Ground
13	I	VCA	+5.0V
14	O	V OUT L	Audio L-CH
15	-	CAP	Audio common
16	I	BCKIN	Audio bit clock
17	I	DIN	Audio serial data
18	I	LRCIN	Audio left/right clock
19	-	NC	(Not used)
20	-	RSV	(Not used)
21	I	VDD	+5.0V
22	-	GNDD	Ground
23	-	GNDP	Ground
24	-	XTO	(Not used)

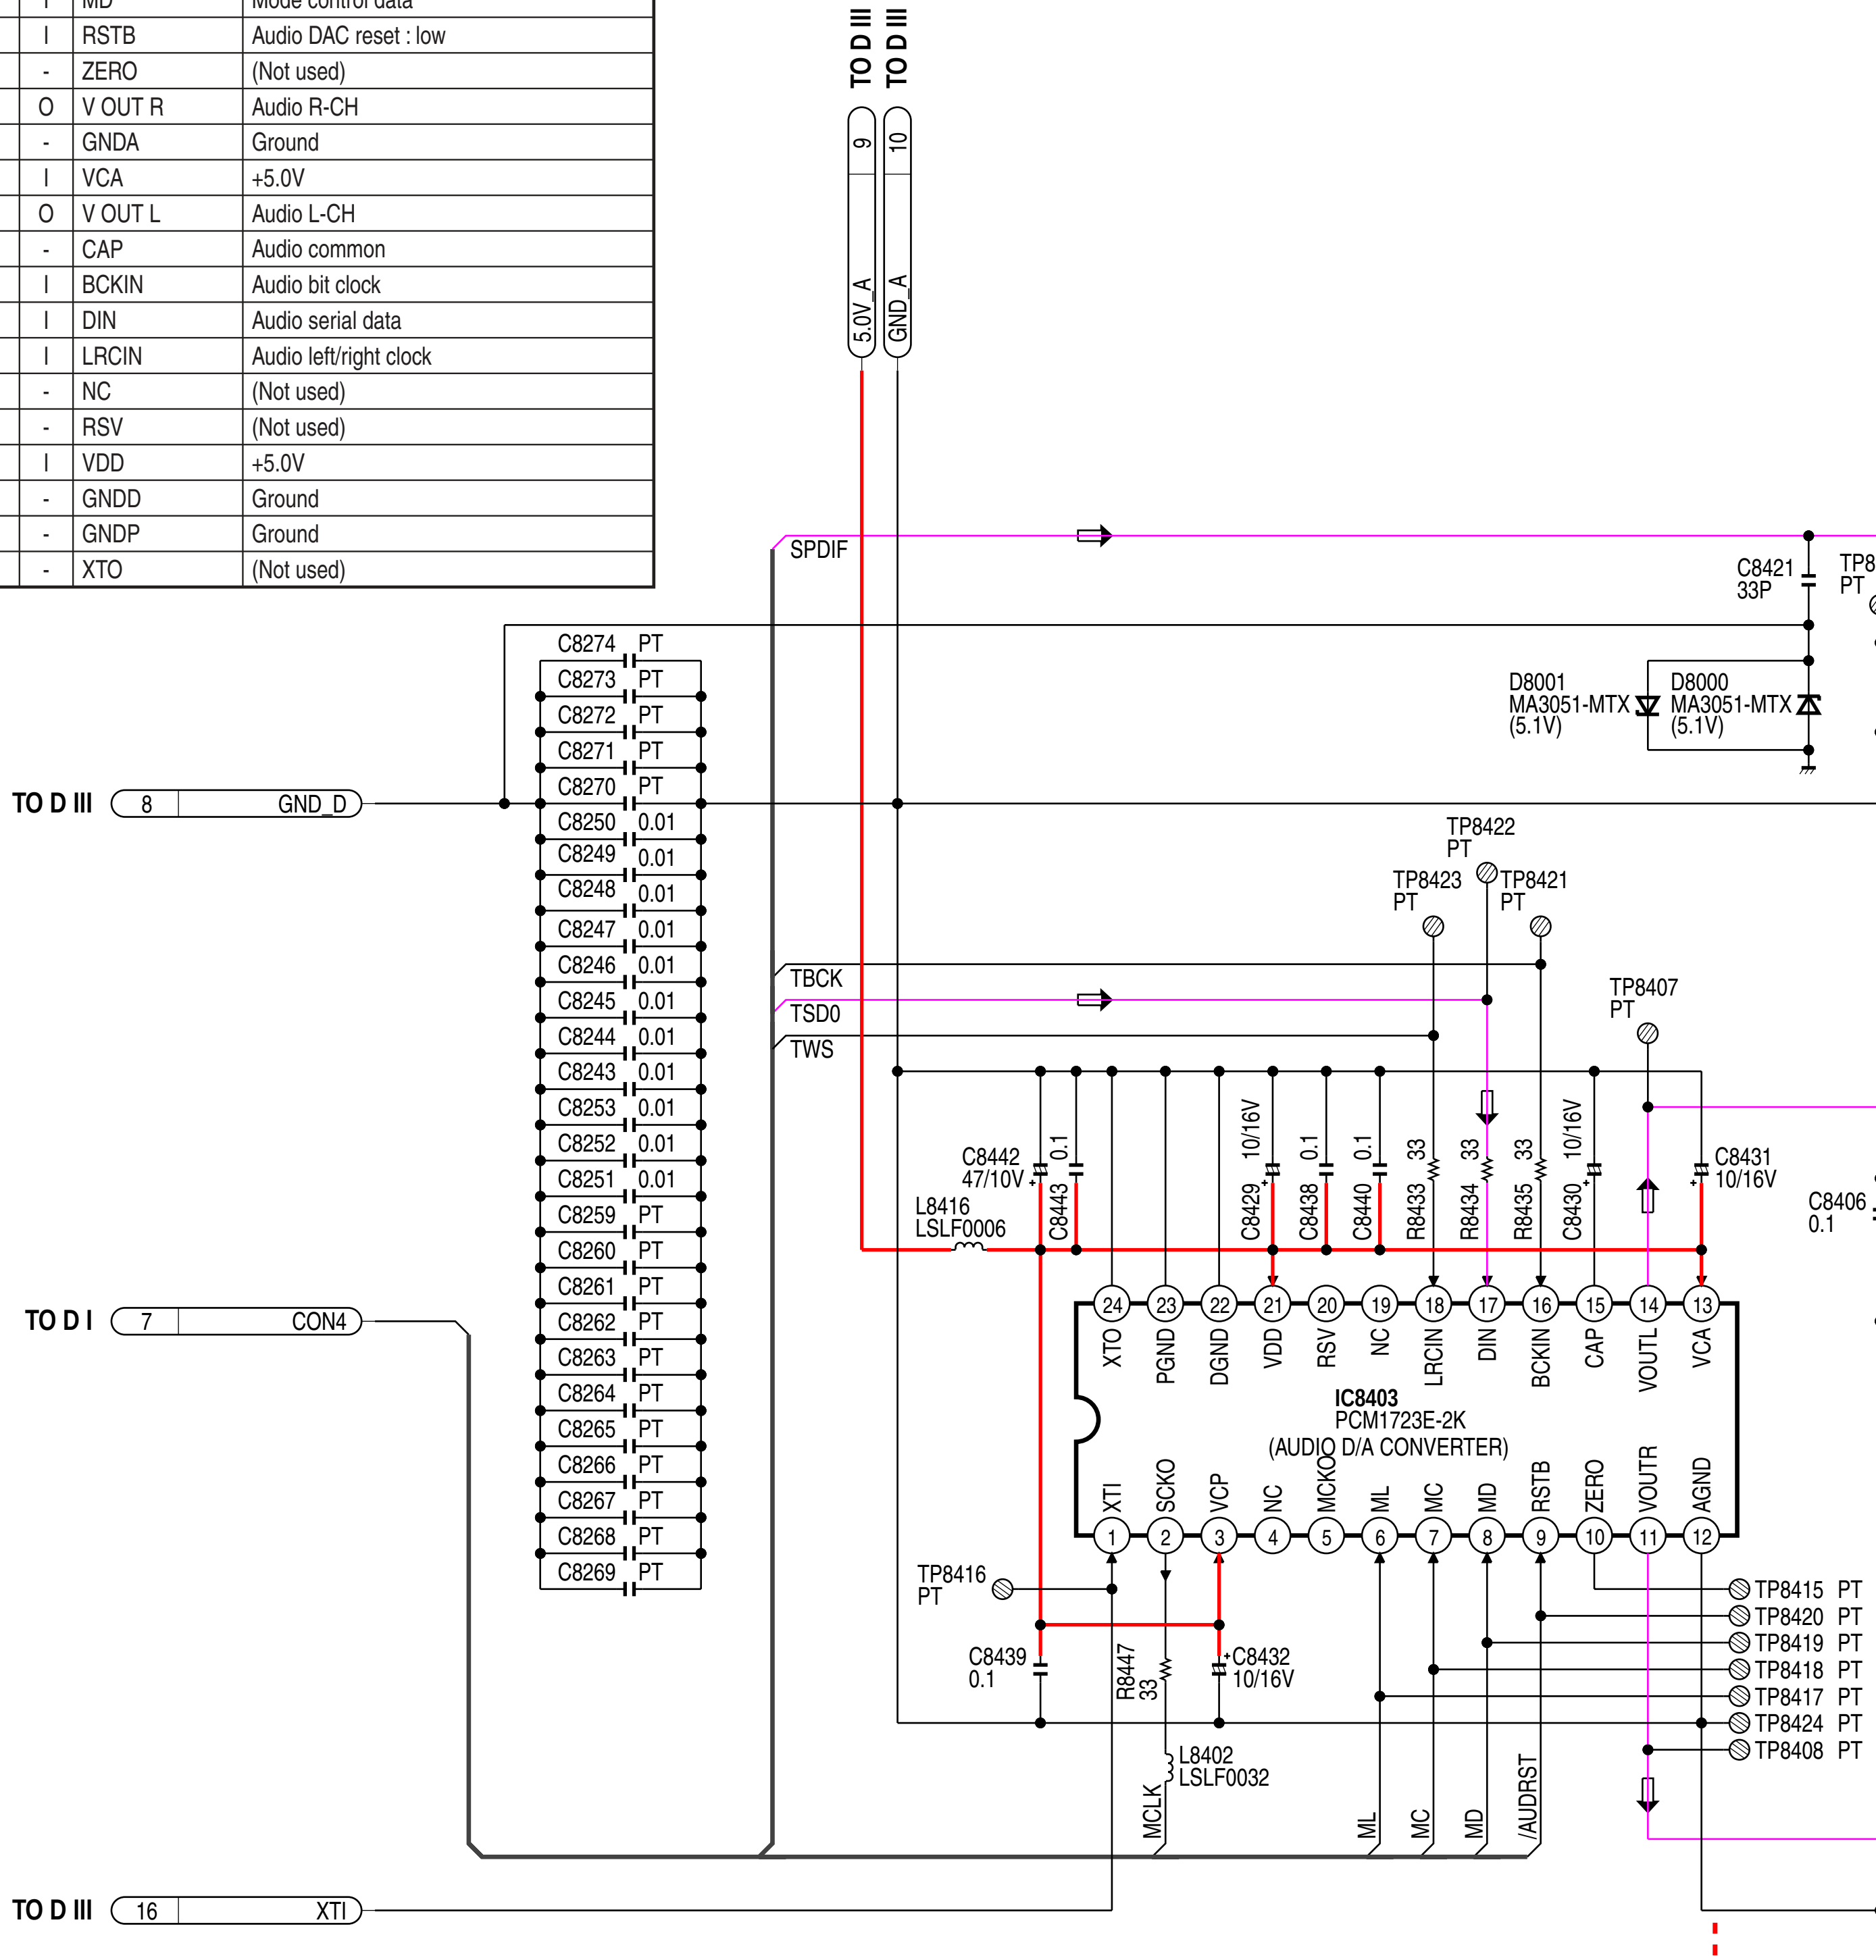

TO D III
TO D III
9
5.0V_A
10
GND_A
SPDIF
C8421 33P
TP8 PT
D8001 MA3051-MTX (5.1V)
D8000 MA3051-MTX (5.1V)
TO D III 8 GND_D
C8274 PT
C8273 PT
C8272 PT
C8271 PT
C8270 PT
C8250 0.01
C8249 0.01
C8248 0.01
C8247 0.01
C8246 0.01
C8245 0.01
C8244 0.01
C8243 0.01
C8253 0.01
C8252 0.01
C8251 0.01
C8259 PT
C8260 PT
C8261 PT
C8262 PT
C8263 PT
C8264 PT
C8265 PT
C8266 PT
C8267 PT
C8268 PT
C8269 PT
TO D I 7 CON4
TO D III 16 XTI
TP8422 PT
TP8423 PT
TP8421 PT
TBCK
TSD0
TWS
TP8407 PT
C8442 47/10V
C8443 0.1
L8416 LSLF0006
C8429 10/16V
C8438 0.1
C8440 0.1
R8433 33
R8434 33
R8435 33
C8430 10/16V
C8431 10/16V
C8406 0.1
XTO
PGND
DGND
VDD
RSV
NC
LRCIN
DIN
BCKIN
CAP
VOUTL
VCA
IC8403
PCM1723E-2K
(AUDIO D/A CONVERTER)
XTI
SCKO
VCP
NC
MCKO
ML
MC
MD
RSTB
ZERO
VOUTR
AGND
TP8416 PT
C8439 0.1
R8447 33
C8432 10/16V
L8402 LSLF0032
MCLK
ML
MC
MD
/AUDRST
TP8415 PT
TP8420 PT
TP8419 PT
TP8418 PT
TP8417 PT
TP8424 PT
TP8408 PT

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

⇦ DVD AUDIO SIGNAL

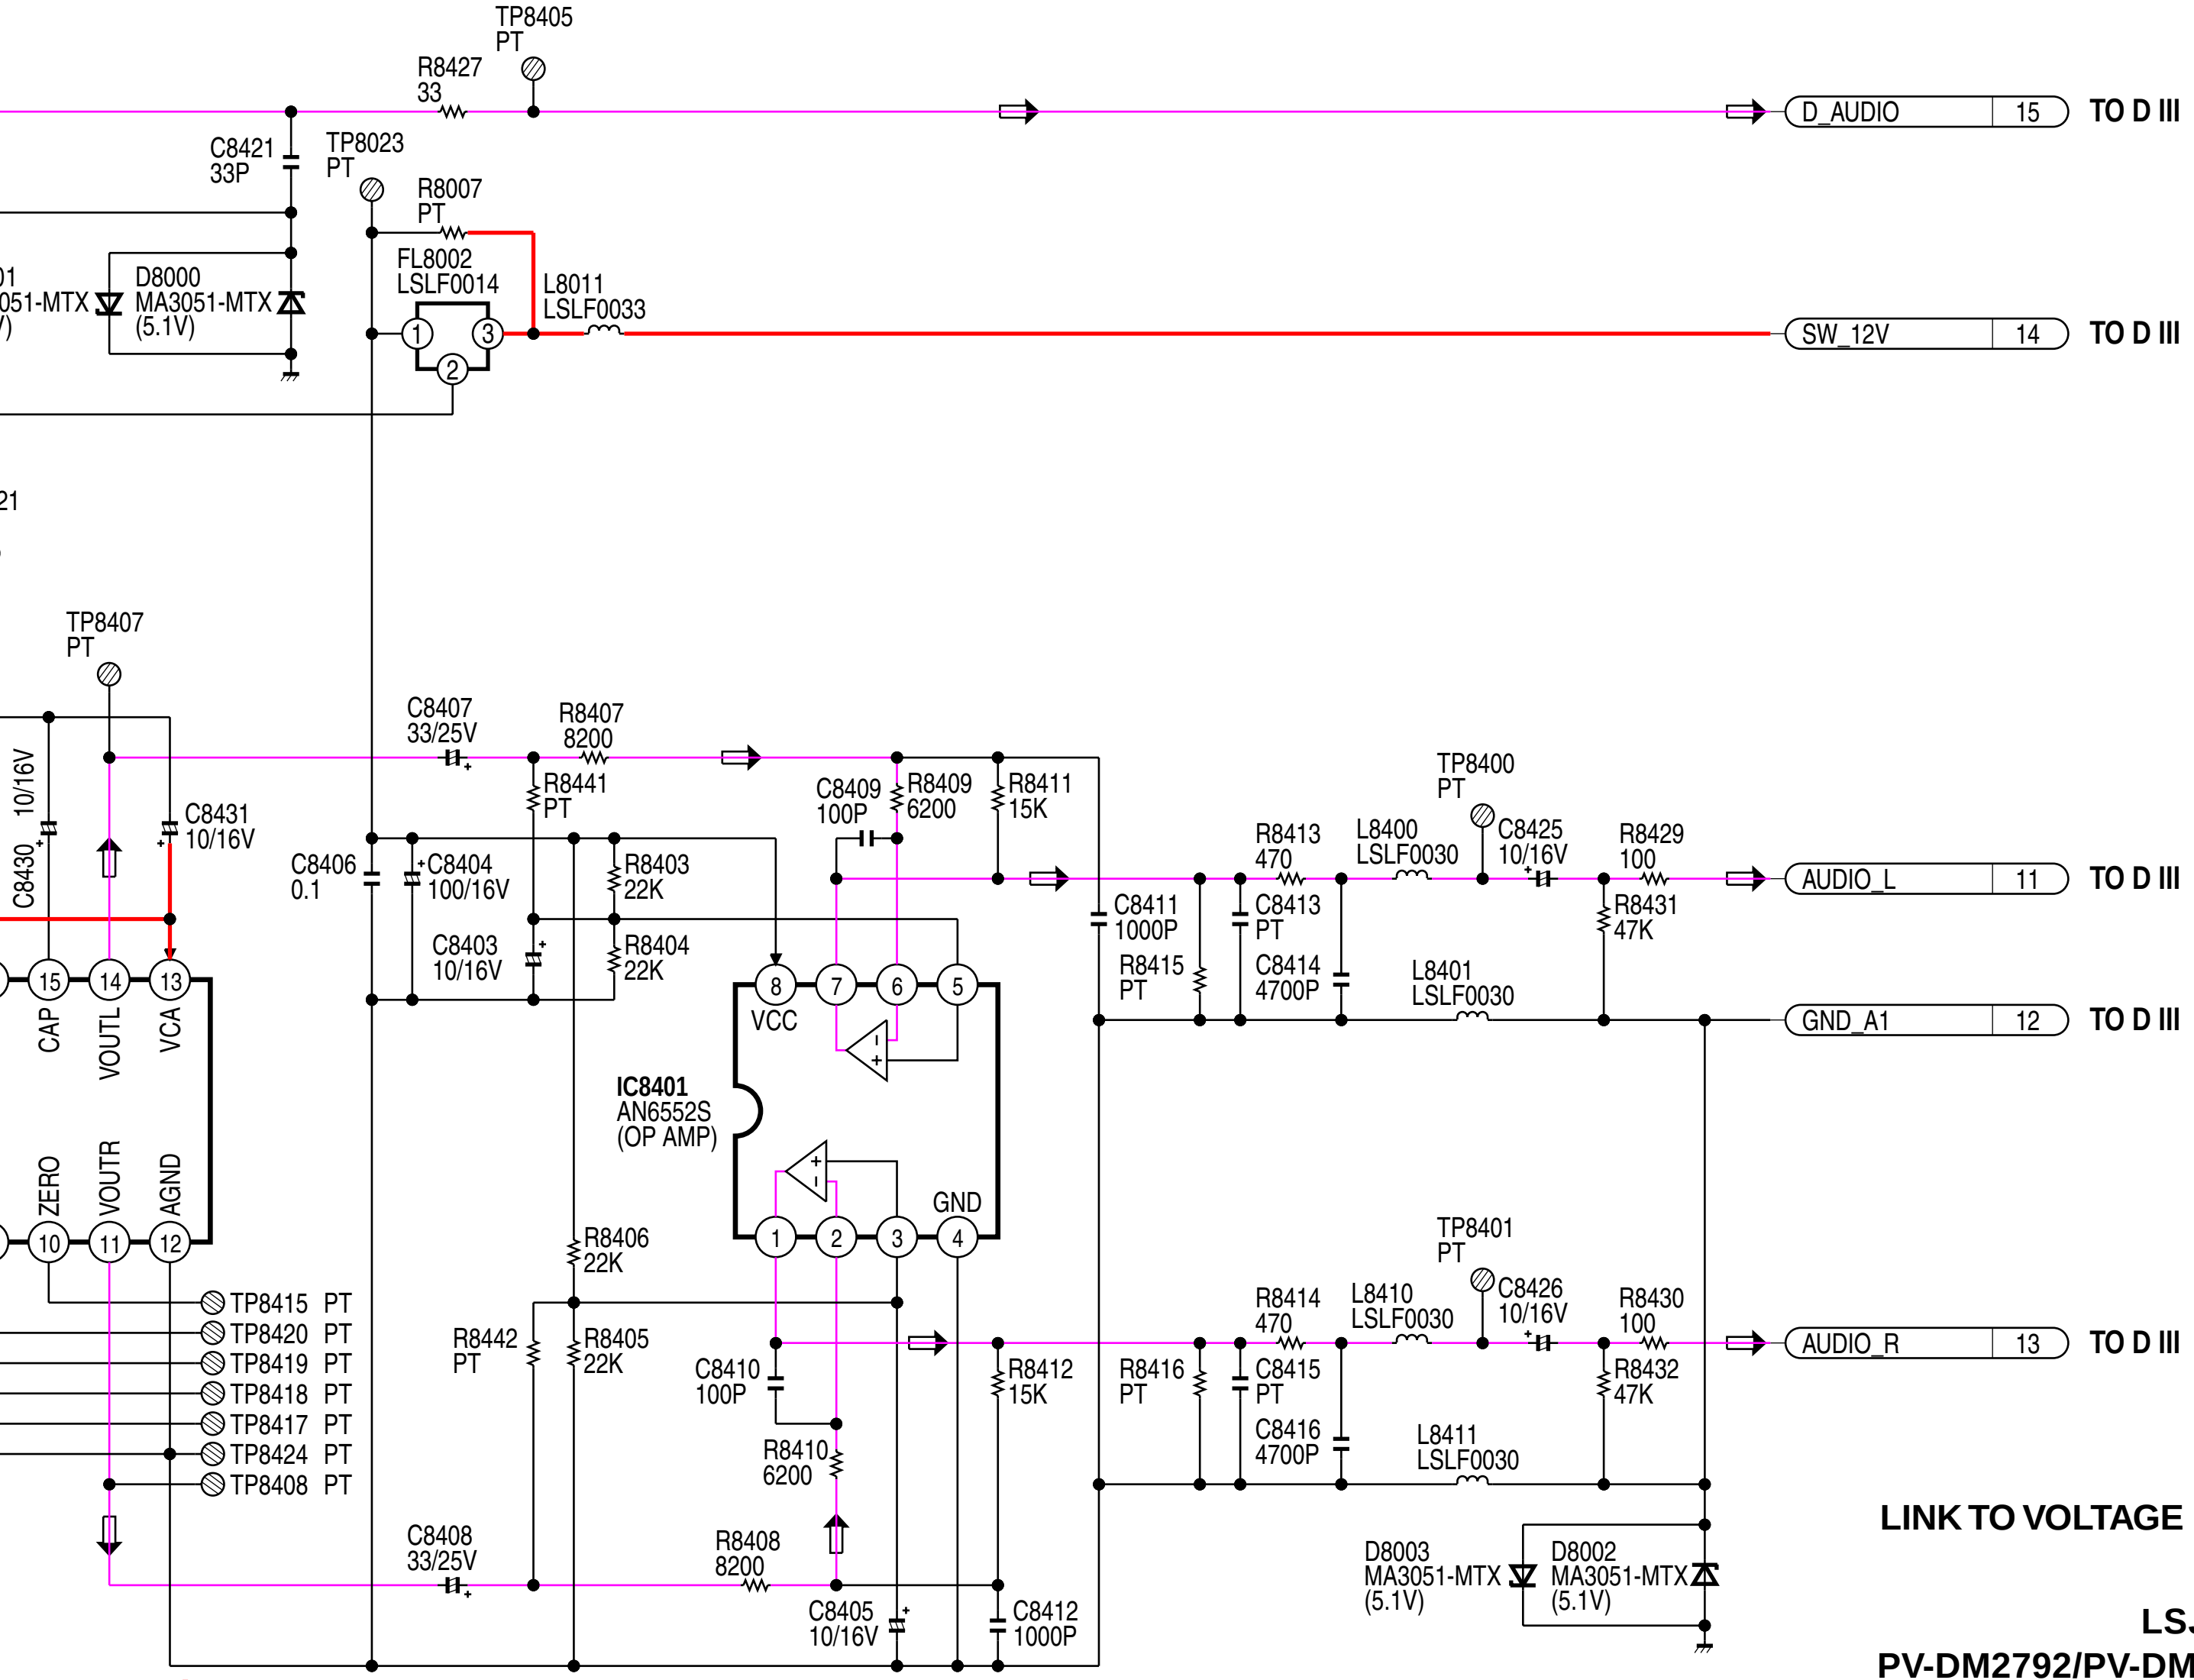
TP8405 PT
R8427 33
D_AUDIO 15 TO D III
C8421 33P
TP8023 PT
R8007 PT
D8000 MA3051-MTX (5.1V)
FL8002 LSLF0014
L8011 LSLF0033
SW_12V 14 TO D III
TP8407 PT
C8430 10/16V
C8431 10/16V
CAP
VOUTL
VCA
ZERO
VOUTR
AGND
C8407 33/25V
R8407 8200
R8441 PT
C8406 0.1
C8404 100/16V
R8403 22K
C8403 10/16V
R8404 22K
C8409 100P
R8409 6200
R8411 15K
VCC
IC8401 AN6552S (OP AMP)
GND
C8411 1000P
R8415 PT
R8413 470
C8413 PT
C8414 4700P
L8400 LSLF0030
TP8400 PT
C8425 10/16V
R8429 100
R8431 47K
L8401 LSLF0030
AUDIO_L 11 TO D III
GND_A1 12 TO D III
R8406 22K
R8442 PT
R8405 22K
C8410 100P
R8410 6200
R8412 15K
R8416 PT
R8414 470
C8415 PT
C8416 4700P
L8410 LSLF0030
TP8401 PT
C8426 10/16V
R8430 100
R8432 47K
L8411 LSLF0030
AUDIO_R 13 TO D III
TP8415 PT
TP8420 PT
TP8419 PT
TP8418 PT
TP8417 PT
TP8424 PT
TP8408 PT
C8408 33/25V
R8408 8200
C8405 10/16V
C8412 1000P
D8003 MA3051-MTX (5.1V)
D8002 MA3051-MTX (5.1V)

LINK TO VOLTAGE CHART

LSJB2007
PV-DM2792/PV-DM2792-K
DVD DECODER IV SCHEMATIC DIAGRAM

8.13. INTERCONNECTION SCHEMATIC DIAGRAM

INTERCONNECTION SCHEMATIC DIAGRAM

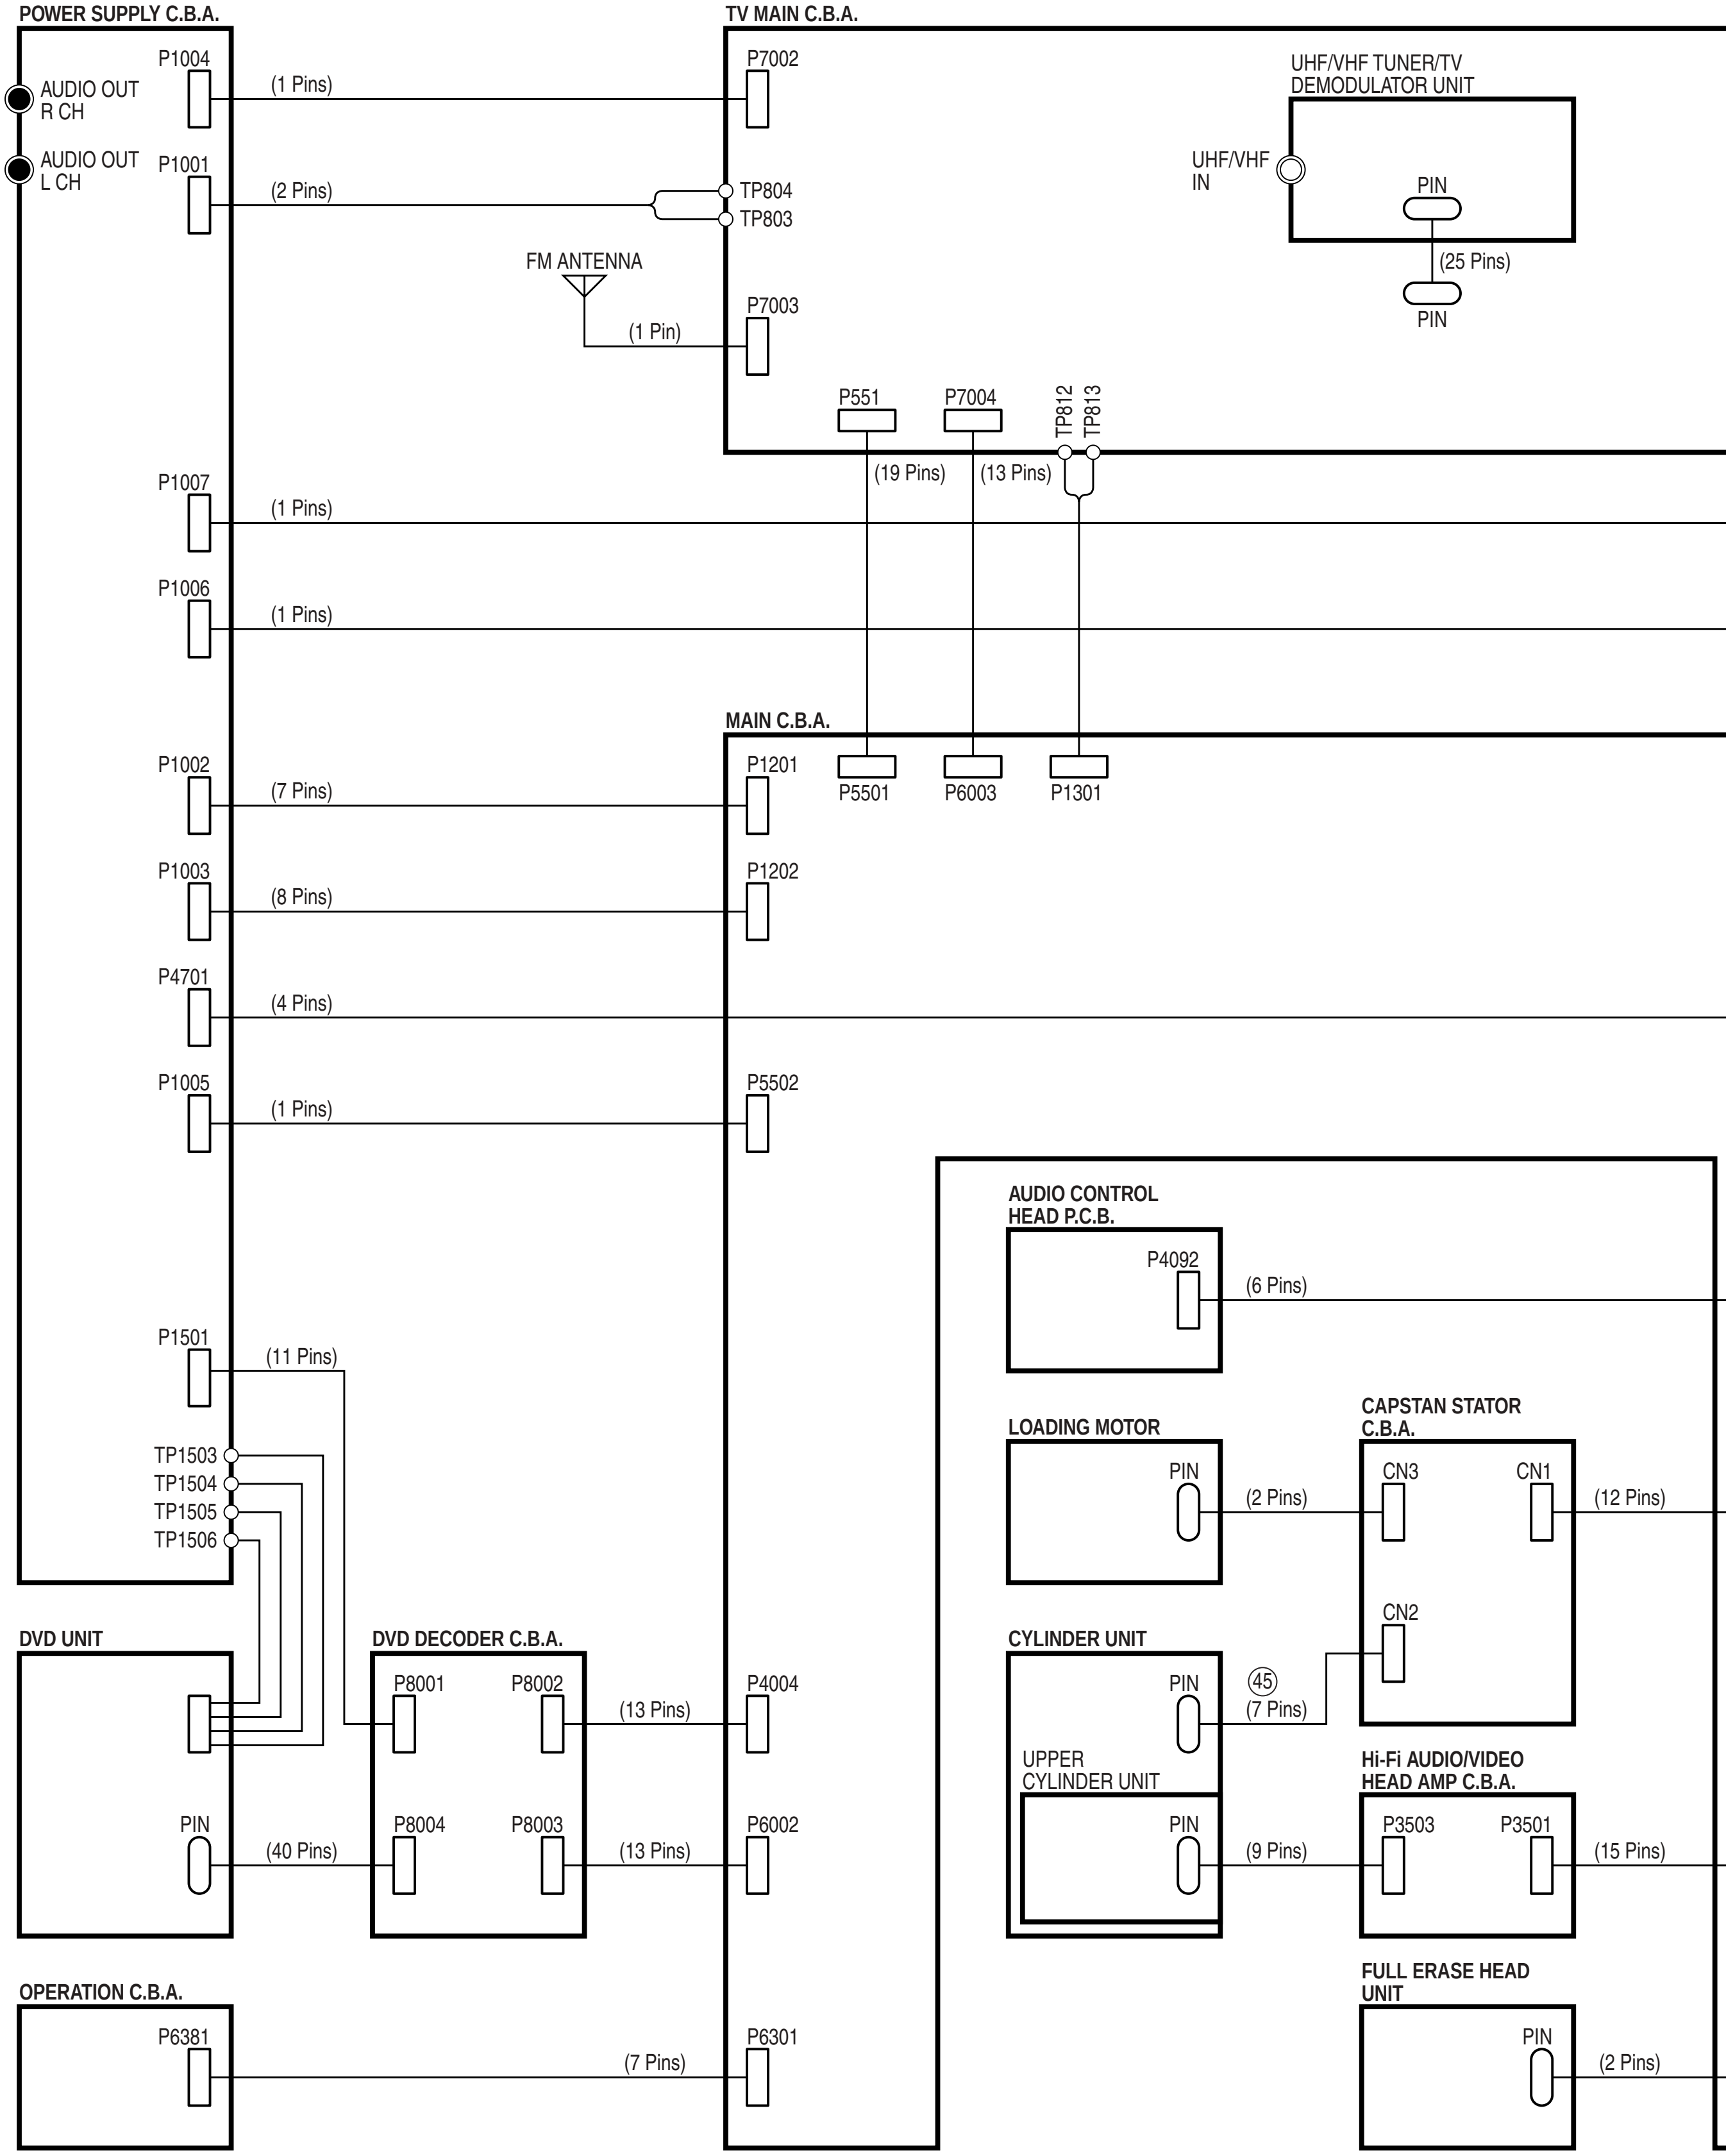
POWER SUPPLY C.B.A.
AUDIO OUT R CH
AUDIO OUT L CH
P1004
(1 Pins)
P1001
(2 Pins)
TV MAIN C.B.A.
P7002
TP804
TP803
UHF/VHF TUNER/TV DEMODULATOR UNIT
UHF/VHF IN
PIN
(25 Pins)
PIN
FM ANTENNA
(1 Pin)
P7003
P551
P7004
TP812
TP813
(19 Pins)
(13 Pins)
P1007
(1 Pins)
P1006
(1 Pins)
MAIN C.B.A.
P1002
(7 Pins)
P1201
P5501
P6003
P1301
P1003
(8 Pins)
P1202
P4701
(4 Pins)
P1005
(1 Pins)
P5502
AUDIO CONTROL HEAD P.C.B.
P4092
(6 Pins)
P1501
(11 Pins)
LOADING MOTOR
PIN
(2 Pins)
CAPSTAN STATOR C.B.A.
CN3
CN1
(12 Pins)
TP1503
TP1504
TP1505
TP1506
CN2
DVD UNIT
DVD DECODER C.B.A.
CYLINDER UNIT
P8001
P8002
(13 Pins)
P4004
PIN
㊺
(7 Pins)
UPPER CYLINDER UNIT
Hi-Fi AUDIO/VIDEO HEAD AMP C.B.A.
PIN
(40 Pins)
P8004
P8003
(13 Pins)
P6002
PIN
(9 Pins)
P3503
P3501
(15 Pins)
OPERATION C.B.A.
FULL ERASE HEAD UNIT
P6381
(7 Pins)
P6301
PIN
(2 Pins)

NOTE:
PARTS ENCLOSED IN DASHED LINES MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

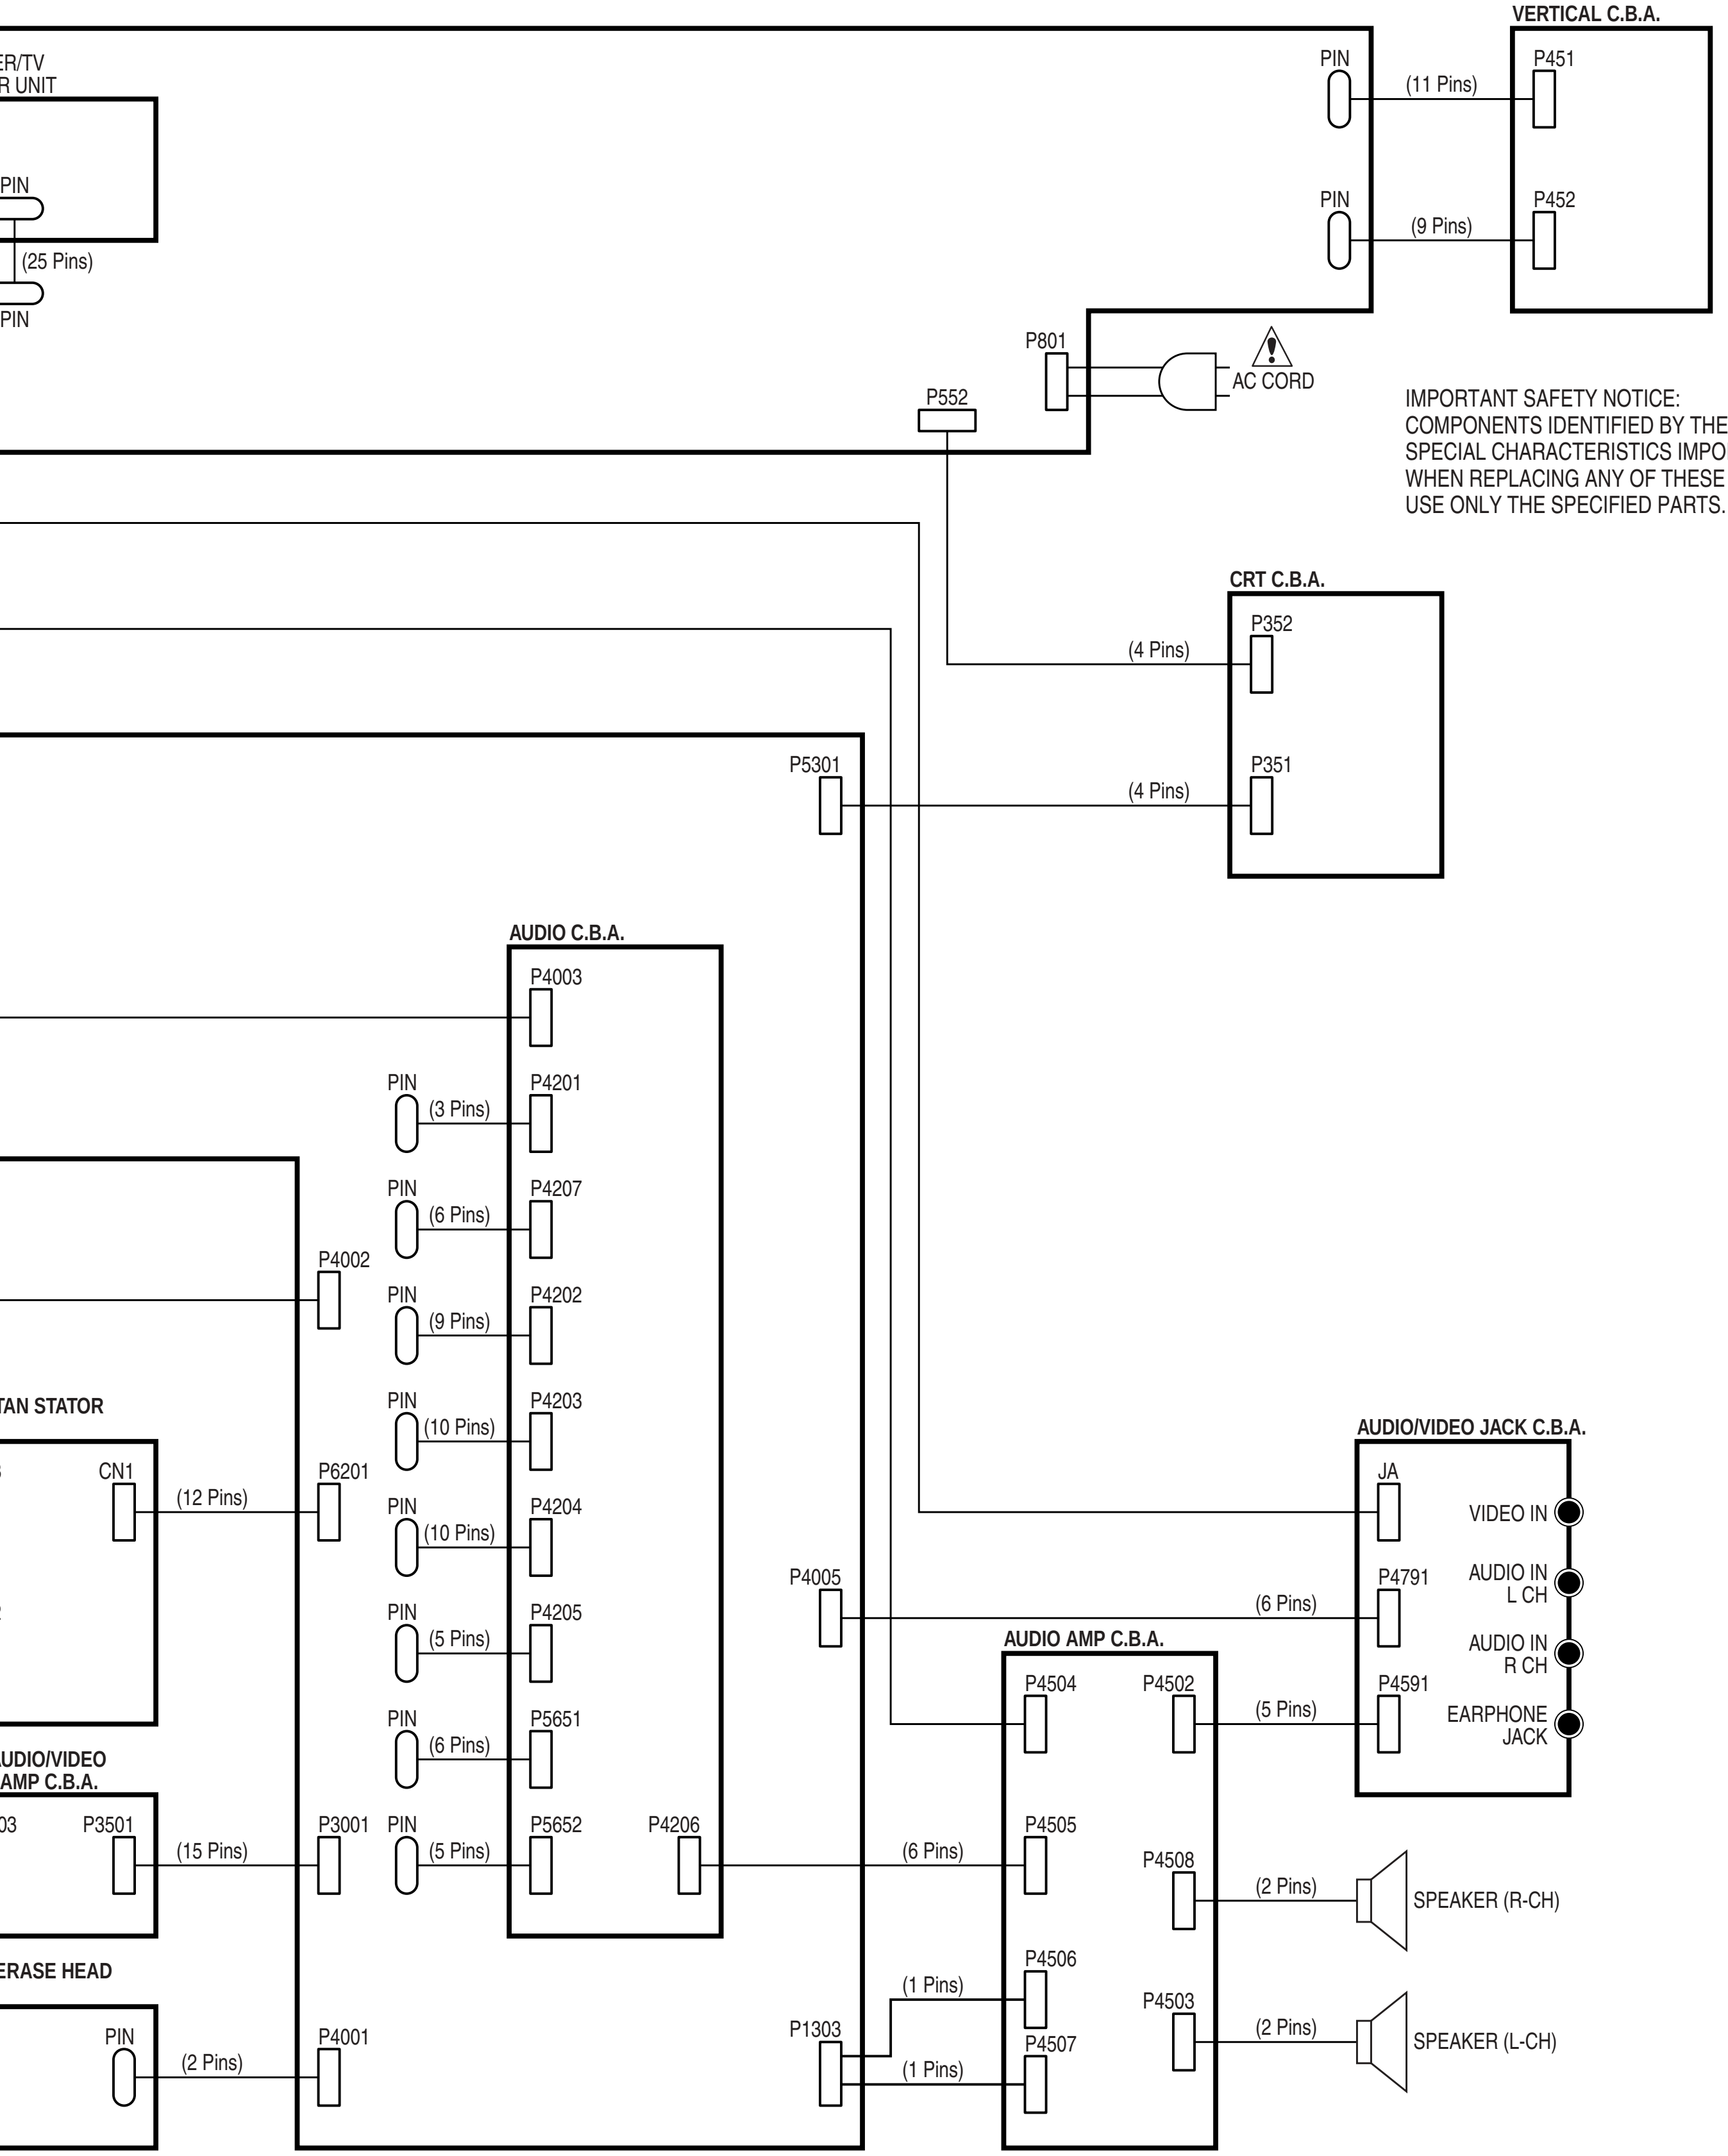
VERTICAL C.B.A.
PIN
(11 Pins)
P451
PIN
(9 Pins)
P452
ER/TV
R UNIT
PIN
(25 Pins)
PIN
P801
AC CORD
P552
CRT C.B.A.
P352
(4 Pins)
P5301
(4 Pins)
P351
AUDIO C.B.A.
P4003
PIN
(3 Pins)
P4201
PIN
(6 Pins)
P4207
P4002
PIN
(9 Pins)
P4202
TAN STATOR
PIN
(10 Pins)
P4203
CN1
(12 Pins)
P6201
PIN
(10 Pins)
P4204
P4005
PIN
(5 Pins)
P4205
PIN
(6 Pins)
P5651
UDIO/VIDEO
AMP C.B.A.
03
P3501
(15 Pins)
P3001
PIN
(5 Pins)
P5652
P4206
(6 Pins)
ERASE HEAD
PIN
(2 Pins)
P4001
P1303
(1 Pins)
(1 Pins)
AUDIO/VIDEO JACK C.B.A.
JA
VIDEO IN
(6 Pins)
P4791
AUDIO IN
L CH
AUDIO AMP C.B.A.
AUDIO IN
R CH
P4504
P4502
(5 Pins)
P4591
EARPHONE
JACK
P4505
P4508
(2 Pins)
SPEAKER (R-CH)
P4506
P4507
P4503
(2 Pins)
SPEAKER (L-CH)

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN ⚠ HAVE
SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY.
WHEN REPLACING ANY OF THESE COMPONENTS,
USE ONLY THE SPECIFIED PARTS.

PV-DM2792/PV-DM2792-K
INTERCONNECTION SCHEMATIC DIAGRAM

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

MAIN C.B.A. (POWER SUPPLY/VIDEO/AUDIO SECTION)

MODE PIN NO.	STOP
IC1301	
1	0.1
2	0.1
3	0.5
4	0.5
IC1302	
1	0.1
2	0
3	2.1
IC3001	
1	0.1
2	0
3	2.1
4	5.0
5	2.7
6	---
7	5.1
8	5.2
9	2.2
10	2.8
11	0.8
12	2.8
13	0.3
14	0.4
15	1.0
16	3.1
17	2.3
18	0.3
19	0.3
20	3.1
21	5.0
22	2.0
23	0.3
24	0.3
25	0.3
26	0.3
27	0.3
28	0
29	0.2
30	0.2
31	2.0
32	2.4
33	0.2
34	0.2
35	---
36	0.2
37	0.2
38	4.5
39	0.3
40	0.2
41	0.2
42	0
43	3.4
44	2.6
45	2.6
46	2.6
47	5.0
48	---
49	0.1
50	---
51	5.0
52	2.6
53	2.5
54	---
55	---
56	4.4
57	2.6
58	2.6
59	2.6
60	2.6
61	2.5
62	0
63	0
64	---
65	2.5
66	2.6
67	2.6
68	5.0
69	2.6
70	0.2
71	---
72	2.6
73	2.6
74	0
75	0.1
76	3.4
77	0
78	2.1
79	3.0
80	2.1
81	2.5
82	2.8
83	2.6
84	2.5
IC3201	
1	3.1
2	5.0
3	0
4	3.0
5	2.9
6	-2.8
7	2.1
8	2.9
IC3301	
1	0.2
2	0.2
3	0.2
4	0
5	0.2
6	0.2
7	5.0
8	---
9	0.2
10	0.3
11	0.3
12	0.3
13	0.4
14	0.4
15	0.4
16	---
17	0.4
18	0.4
19	0.4
20	0.4
21	0.4
22	0
23	---
24	---
25	---
26	---
27	---
28	---
29	0.2
30	0.2
31	0.2
32	0.3
33	---
34	---
35	---
36	---
37	---
38	5.2
39	0.2
40	0.2
41	0.2
42	---
43	5.0
44	0.3
45	0.3
46	---
47	---
48	---
IC3302	
1	2.5
2	0
3	2.7
4	0
5	3.4
6	5.0
7	1.7
8	0
IC5301	
1	2.8
2	2.9
3	3.7
4	0.3
5	2.0
6	2.1
7	6.1
8	0.4
9	0
10	3.9
11	5.2
12	2.4
13	4.3
14	6.2
15	4.4
16	0.7
17	0
18	0.1
19	1.8
20	0
21	3.7
22	3.6
23	3.6
24	9.2
25	3.6
26	9.2
27	0.1
28	0.1
29	0.1
30	5.9
31	6.3
32	3.6
33	7.3
34	8.3
35	5.2
36	4.3
37	9.7
38	9.2
39	0.4
40	2.4
41	2.4
42	0.1
43	0.1
44	0.1
45	---
46	0.1
47	0.1
48	2.7
IC5351	
1	0
2	0
3	3.4
4	0
5	3.4
6	5.0
7	1.4
8	0
IC5361	
1	2.5
2	5.0
3	2.5
4	0
5	2.3
6	5.0
7	1.0
8	0
Q1301	
E	0
C	0.3
B	0.5
Q1302	
E	0
C	160.8
B	0.3
Q3001	
E	1.7
C	0
B	1.0
Q3002	
E	2.9
C	5.0
B	3.5
Q3004	
E	1.7
C	0
B	1.1
Q3301	
E	2.3
C	0
B	1.7
Q3305	
E	0
C	0.2
B	0
Q4001	
E	5.0
C	0
B	4.3
Q4002	
E	0
C	0
B	0.8
Q4003	
E	0
C	0
B	0.8
Q4101	
E	0
C	0.6
B	0.5
Q4171	
E	0
C	0
B	0
Q5301	
E	3.1
C	9.0
B	3.7
Q5302	
E	7.5
C	9.0
B	8.1
Q5901	
E	9.0
C	12.0
B	9.8
TP3001	1.7
TP3002	2.8
TP3003	3.4
TP3004	2.0
TP3005	
TP3006	2.6
TP3007	2.8
TP3008	2.4
TP3009	8.6
TP3010	3.0
TP3011	2.7
TP3012	0
TP3212	2.9
TP3301	3.5
TP3302	5.2
TP4002	0
TP4003	0
TP5301	2.9
TP5302	3.0
TP5303	3.0
TP5304	12.2
TP5305	3.1
TP5307	3.1
TP5308	2.4
TP5310	0.4
TP5311	3.6
TP5312	11.5
TP5313	0.1
TP5401	3.9
TP5402	2.3
TP5403	5.1
TP5501	0.8
TP5502	0.1
TP5503	2.1
TP5504	0
TP5505	0
TP5506	5.2

VOLTAGE CHART
PV-DM2792/PV-DM2792-K

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

MAIN C.B.A. (SYSTEM CONTROL/SERVO SECTION)

MODE / PIN NO.	REC	PLAY
IC6001		
1	5.2	5.2
2	5.2	5.2
3	0.2	5.1
4	5.0	5.1
5	4.9	5.1
6	0.1	5.1
7	0	5.1
8	5.2	5.1
9	0.4	0.2
10	0	0.1
11	2.3	2.3
12	2.4	2.4
13	0.1	0.1
14	5.0	4.8
15	5.0	4.9
16	4.9	4.9
17	5.2	5.2
18	4.9	5.2
19	0.5	0.4
20	0.1	0.1
21	5.1	5.1
22	0.3	0.3
23	2.6	2.6
24	0	0
25	5.2	5.2
26	0.1	2.6
27	0.1	2.6
28	0.1	0.1
29	5.1	0
30	0.6	5.1
31	0	0.1
32	0.1	0.5
33	2.7	2.7
34	2.5	2.6
35	0	0.1
36	5.0	5.0
37	2.5	5.1
38	2.4	5.1
39	0	0
40	0.3	0
41	0.1	0.3
42	0.1	0.1
43	4.4	0.1
44	4.8	0.1
45	2.3	0.1
46	5.1	5.1
47	0	0.1
48	0	0
49	0.1	0.1
50	2.8	2.8
51	5.0	5.0
52	4.4	4.4
53	5.2	5.1
54	0	0
55	0.1	5.1
56	5.1	5.1
57	4.8	---
58	-0.3	0.2
59	0.1	0
60	2.6	0.2
61	-0.7	0.2
62	0	-0.8
63	0.1	0.2
64	0.1	0.2
65	1.4	1.4
66	4.7	4.8
67	2.4	2.4
68	0	0
69	2.6	0.2
70	2.6	3.1
71	0	0
72	0.2	2.6
73	5.0	5.0
74	0.2	2.6
75	0.4	---
76	2.6	2.6
77	0.1	0.3
78	2.5	2.5
79	0.1	0
80	5.1	5.1
81	5.2	5.1
82	2.5	0.1
83	0.1	0.1
84	0.1	0.1
85	5.2	5.2
86	5.2	5.2
87	5.2	5.2
88	5.2	5.2
89	5.2	5.2
90	0.2	0.1
91	0.2	0.1
92	0	0.1
93	0.1	0.1
94	0.1	0.1
95	0.3	0
96	5.1	5.1
97	0.5	0
98	2.6	2.6
99	5.0	0.1
100	0.1	0.1
IC6002		
1	2.3	2.4
2	0	0
3	0	0
4	---	---
IC6003		
1	1.2	1.3
2	2.3	2.4
3	0	0
4	0	3.6
IC6004		
1	0	0
2	0	0
3	0	0
4	0	0
5	5.2	5.2
6	5.1	5.1
7	0	0
8	5.0	5.0
IC6005		
1	5.1	5.2
2	5.0	5.0
3	0	0
4	0	0
5	5.0	5.0
6	0	0
Q6001		
E	12.2	12.2
C	11.9	0.6
B	11.3	12.3
Q6002		
E	4.4	0
C	11.3	12.2
B	5.0	0
Q6003		
E	0	0
C	0.1	0.2
B	0.6	0.6
Q6004		
E	5.0	5.1
C	5.0	5.1
B	4.3	4.4
Q6005		
E	5.1	5.2
C	5.0	5.1
B	4.3	4.3
Q6006		
E	0	0
C	5.0	0
B	0	0
Q6009		
E	0	0
C	5.0	5.0
Q6010		
E	0	0
C	4.8	5.1
TP6001	5.0	5.0
TP6002	4.2	4.9
TP6003	3.5	3.0
TP6004	---	5.1
TP6005	3.5	3.3
TP6006	0	0
TP6008	0.1	0.1
TP6009	5.2	5.2
TP6013	2.6	2.6
TP6021	0.1	0.1
TP6022	3.8	3.7
TP6023	0.1	0.1
TP6099	5.0	5.0
TP6101	0.3	0.3
TP6103	5.2	5.1
TP6104	5.2	5.1
TP6105	5.2	5.2
TP6106	5.2	5.2
TP6107	0	0
TP6202	2.5	2.5
TP6203	2.6	2.6
TP6204	1.2	1.2
TP6205	2.6	2.6
TP6206	3.0	2.5
TP6207	2.6	2.5
TP6208	2.6	2.7
TP6209	2.4	2.4

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

POWER SUPPLY C.B.A.

MODE PIN NO.	STOP
IC1001	
1	5.2
2	4.2
3	0.6
4	0.1
IC1002	
1	0
2	0
3	4.2
IC1501	
1	177.2
2	0
3	0
4	13.4
5	0
IC1502	
1	5.1
2	4.0
3	2.3
4	13.3
IC1503	
1	2.6
2	0
3	4.0
IC1504	
1	0
2	0.1
3	1.6
4	12.0
5	12.0
Q1001	
E	0
C	162.2
B	0.3
Q1002	
E	0
C	0.3
B	0.6
Q1051	
E	12.0
C	14.0
B	12.7
Q1052	
E	0
C	0.1
B	0
Q1053	
E	5.2
C	5.3
B	5.9
Q1501	
E	0
C	0
B	0

MODE PIN NO.	STOP
Q1502	
1	5.0
2	5.0
3	5.0
4	0
5	5.0
6	5.0
7	5.0
8	5.0
TP4701	0
TP4702	0

AUDIO C.B.A.

MODE PIN NO.	STOP
IC4201	
1	2.6
2	2.5
3	2.5
4	2.5
5	2.5
6	5.1
7	2.6
8	1.6
9	0
10	2.6
11	2.6
12	2.6
13	2.3
14	---
15	0
16	0
17	0
18	0
19	0
20	0
21	0
22	0
23	0
24	---
25	2.6
26	2.6
27	2.6
28	0
29	1.6
30	0
31	5.2
32	0
33	0
34	0
35	2.5
36	---
37	2.5
38	2.6
39	12.2
40	0
41	---
42	0
43	0
44	0
45	6.1
46	6.1
47	---
48	---
IC4301	
1	0
2	0
3	0
4	0
5	0

MODE PIN NO.	STOP
6	0
7	0
8	0
9	0
10	12.3
11	0
12	15.0
13	16.0
14	0
15	---
16	12.3
IC4302	
1	0
2	0
3	0
4	0
5	0
6	0
7	0
8	12.3
IC4601	
1	0.1
2	4.5
3	4.5
4	4.5
5	4.5
6	4.5
7	0
8	0
9	0
10	5.2
11	5.2
12	0.4
13	0.4
14	2.0
15	2.0
16	9.0
17	4.5
18	4.5
19	4.5
20	4.5
21	4.5
22	0
IC5651	
1	0
2	0.1
3	2.9
4	2.5
5	1.4
6	0
7	0
8	5.2
9	0
10	2.5
11	2.3

MODE PIN NO.	STOP
12	3.5
13	4.0
14	1.7
15	3.6
16	5.1
IC9001	
1	3.8
2	4.1
3	2.9
4	9.1
5	1.4
6	0
7	3.4
8	4.5
9	1.3
10	3.5
11	4.6
12	4.6
13	4.2
14	4.2
15	4.0
16	4.2
17	0
18	0.7
19	4.2
20	4.1
21	1.8
22	4.2
23	4.2
24	4.2
25	4.2
26	1.8
27	4.2
28	4.1
29	4.2
30	4.1
IC9201	
1	2.9
2	3.6
3	5.1
4	4.4
5	0
6	5.1
7	4.4
8	3.0
9	3.1
Q4301	
E	12.0
C	14.0
B	12.7
Q4302	
E	5.9
C	12.0
B	6.5

MODE PIN NO.	STOP
Q4303	
E	0
C	0
B	0.1
Q4304	
E	12.0
C	0
B	12.0
Q4305	
E	0
C	12.0
B	0
Q5651	
E	1.8
C	0
B	1.3
Q5652	
E	1.1
C	4.2
B	1.7
Q5653	
E	2.4
C	0
B	1.8
Q5654	
E	2.5
C	0
B	1.9
Q5655	
E	3.0
C	9.1
B	4.0
Q5656	
E	3.3
C	9.1
B	4.0
Q9001	
E	0.6
C	5.2
B	1.2
Q9002	
E	1.3
C	0.6
B	0.6
TP4201	0
TP4202	0
TP4205	0
TP4206	0
TP4207	0
TP4208	0
TP5651	2.4
TP5652	0
TP9001	0
TP9002	0

MODE PIN NO.	STOP
TP9003	0
TP9201	0.6

AUDIO AMP C.B.A.

MODE PIN NO.	STOP
IC4501	
1	2.1
2	2.3
3	0
4	2.3
5	2.1
6	7.1
7	10.4
8	2.3
9	21.0
10	0
11	2.3
12	10.1
Q4501	
E	0
C	0
B	0.1
Q4502	
E	0
C	0
B	0.1
Q4503	
E	21.0
C	27.0
B	21.6
TP4501	27.0
TP4502	0
TP4504	0
TP4505	0
TP4506	9.6
TP4507	6.9

TV MAIN C.B.A.

MODE PIN NO.	STOP
IC501	
1	0
2	0
3	0
4	12.2
IC801	
1	0
2	122.4
3	125.7
4	121.3
5	0
Q501	
E	0
C	82.7
B	0
Q551	
E	0
C	393.4
B	0
Q571	
E	1.7
C	10.6
B	2.1
Q581	
E	121.3
C	0
B	120.5
Q801	
E	0
C	0
B	0.8
Q7001	
E	2.1
C	0
B	1.5
TP501	120.9
TP502	0
TP551	-14.3
TP552	-15.7
TP556	202.6
TP558	24.2
TP559	16.0
TP801	120.0
TP802	120.0
TP803	120.0
TP804	120.0
TP808	0
TP809	0
TP810	0
TP812	120.0
TP813	120.0
TP814	120.0
TP891	121.3

MODE PIN NO.	STOP
TP892	125.7
TP893	0

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

CRT C.B.A.

MODE / PIN NO.	STOP
IC351	
1	2.1
2	2.1
3	2.1
4	0
5	2.2
6	214.4
7	180.6
8	181.7
9	180.6
TP46	0
TP47	-3.0
TP48	0
TP49	0
TP50	162.8

VERTICAL C.B.A.

MODE / PIN NO.	STOP
IC451	
1	11.6
2	3.8
3	5.8
4	6.1
5	0
6	6.0
7	5.5
8	27.0
9	24.5
10	1.8
11	0
12	13.7
13	25.1
Q431	
E	2.9
C	0
B	2.2
Q432	
E	18.6
C	27.0
B	19.2
Q433	
E	19.1
C	14.3
B	18.5
Q434	
E	5.4
C	17.8
B	5.6
Q502	
E	0.7
C	12.2
B	0.2
Q541	
E	18.0
C	4.7
B	0
Q542	
E	0
C	18.0
B	0
TP553	0
TP554	0

AUDIO/VIDEO JACK C.B.A.

MODE / PIN NO.	STOP
TP4591	5.9
TP4592	3.7

DVD DECODER C.B.A.

MODE / PIN NO.	STOP
IC8000	
1	3.6
2	1.5
3	1.3
4	1.2
5	1.4
6	1.2
7	1.4
8	0
9	3.6
10	1.9
11	1.3
12	0.3
13	0.2
14	1.2
15	1.7
16	1.7
17	0
18	3.6
19	1.0
20	0.2
21	1.2
22	0
23	0
24	3.6
25	0.1
26	0
27	3.6
28	2.8
29	2.6
30	2.7
31	0.1
32	0.1
33	1.9
34	0
35	3.6
36	0.4
37	0.4
38	0.4
39	0.4
40	0.4
41	0.4
42	0.4
43	0
44	3.6
45	0.4
46	0.4
47	0.4
48	0.3
49	0.5
50	---
51	3.6
52	0
53	0.5
54	0.5
55	0.5
56	0.5
57	0.5
58	0.5
59	3.6
60	0
61	0.5
62	0.5
63	0.5
64	0.5
65	0.4
66	0.4
67	0
68	3.6
69	0.5
70	0.5
71	0.5
72	0.5
73	0.5
74	0.5
75	3.6
76	0
77	0.4
78	0.4
79	0.4
80	0.4
81	0.4
82	0.4
83	3.6
84	0
85	0.4
86	0.4
87	0.4
88	0.4
89	0.4
90	0.4
91	0
92	3.6
93	0.3
94	0.3
95	0.3
96	0.3
97	0.4
98	0
99	3.6
100	0.4
101	0.4
102	0.4
103	0
104	3.6
105	0.4
106	0.4
107	0.4
108	0.4
109	0.4
110	0.4
111	3.6
112	0
113	0.4
114	0.3
115	0.3
116	0.5
117	0.4
118	0.3
119	0.3
120	0
121	3.6
122	0.4
123	0.4
124	0.4
125	0.4
126	0.4
127	0.4
128	0.4
129	0
130	3.6
131	0.4
132	0.8
133	0.4
134	0.4
135	0.4
136	0.4
137	0.4
138	0
139	3.6
140	0.4
141	0.4
142	0.3
143	0.3
144	0.2
145	0.3
146	0.5
147	0
148	3.6
149	0.4
150	0.4
151	0.4
152	0.8
153	0.3
154	0.4
155	0.4
156	0
157	3.6
158	0.4
159	5.0
160	0.4
161	0.4
162	0.4
163	0
164	3.6
165	0.4
166	1.2
167	0.4
168	1.1
169	0.4
170	0.3
171	0
172	3.6
173	---
174	0.3
175	0.3
176	0
177	0
178	0.4
179	0.4
180	0.4
181	0.4
182	0.4
183	3.6
184	0
185	0.4
186	0.4
187	0.4
188	0.4
189	0.4
190	0.4
191	0.4
192	0
193	3.6
194	0.4
195	0.4
196	0.4
197	0.4
198	0.3
199	---
200	0
201	3.6
202	---
203	---
204	0.3
205	0.3
206	0.4
207	0.4
208	0
IC8001	
1	0
2	0
3	0
4	0
5	0.4
6	0.4
7	0
8	5.0
IC8002	
1	0
2	0.4
3	0.4
4	0.4
5	0.3
6	0.3
7	0.4
8	0.4
9	0.3
10	0
11	0.3
12	0.3
13	0.4
14	0.4
15	0.3
16	0.3
17	0.4
18	0.4
19	---
20	5.0
IC8003	
1	0
2	3.6
3	0.5
4	0.5
5	0
IC8100	
1	3.6
2	0.7
3	3.6
4	0.6
5	0.9
6	0
7	1.0
8	1.2
9	3.6
10	0.9
11	0.9
12	0
13	1.2
14	3.6
15	0
16	3.5
17	3.5
18	3.5
19	0
20	0.1
21	0
22	0.1
23	1.3
24	1.2
25	1.0
26	1.9
27	3.6
28	0
29	0.1
30	1.6
31	1.5
32	1.0
33	1.0
34	0.2
35	3.2
36	---
37	3.6
38	1.5
39	0
40	---
41	0
42	0.8
43	3.6
44	0.8
45	0.9
46	0
47	0.5
48	0.5
49	3.6
50	0.8
51	0.9
52	0
53	1.3
54	0
IC8200	
1	0.4
2	0.3
3	0.3
4	0.3
5	0
6	0
7	0
8	0
9	0
10	0
11	0.4
12	0
13	0
14	0
15	0.3
16	0.3
17	0.4
18	0
19	0
20	0.4
21	0
22	0.1
23	0.4
24	0.4
25	0.2
26	0
27	0
28	0.4
29	0
30	0.4
31	0
32	0.3
33	0.1
34	0
35	0
36	0.3
37	0.3
38	0.3
39	0.3
40	0.3
41	0.3
42	0.4
43	0
44	0.4
IC8201	
1	0
2	5.1
3	3.7
IC8301	
1	2.2
2	2.5
3	0.1
4	0.6
5	0.1
6	0.6
7	0.6
8	0.6
9	---
10	---
11	0.6
12	0.1
13	---
14	---
15	0.4
16	0.6
17	0.1
18	0.1
19	0.1
20	0
21	0
22	0
23	0
24	0.1
25	0.9
26	3.6
27	0
28	3.6
29	0.9
30	---
31	0.8
32	---
33	1.0
34	---
35	0.9
38	0.3
39	0.3
40	0.3
41	0.3
42	0.4
43	0
44	0.4
IC8201	
1	0.6
2	0
3	0.5
4	0.5
5	0.4
IC8301	
1	0.5
2	0.5
3	0.5
4	0.4
5	0.5
6	0.5
7	0.4
8	0.5
9	0.5
10	0.5
11	0.5
12	0.5
13	0.4
14	0.5
15	0.5
16	0.5
17	0.5
18	0.4
19	0.5
20	0.4
21	0.4
22	0.4
23	0.4
24	0
25	0.4
26	0.4
27	0.3
28	0.1
29	0.4
30	0.3
31	0.5
32	0.3
IC8303	
1	0.1
2	0.5
3	0
4	---
5	---
IC8401	
1	6.1
2	6.1

VOLTAGE CHART
PV-DM2792/PV-DM2792-K

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

MODE PIN NO.	STOP
36	---
37	3.6
38	0.9
39	---
40	0.2
41	---
42	0.9
43	---
44	0
45	0
46	0
47	0
48	0
IC8401	
1	6.1
2	6.1
3	6.1
4	0
5	6.1
6	6.1
7	6.1
8	12.2
IC8403	
1	0.4
2	0.4
3	5.0
4	---
5	---
6	0.3
7	0.3
8	0.3
9	0.3
10	0.3
11	0.1
12	0
13	5.0
14	0
15	0.3
16	0.4
17	0.4
18	0.4
19	---
20	---
21	5.0
22	0
23	0
24	0
IC8502	
1	0
2	0.3
3	0.5
4	0
5	0.3
6	0.5
7	0

MODE PIN NO.	STOP
8	---
9	0
10	0
11	0.4
12	0.3
13	0
14	3.6
Q8000	
E	0.7
C	0.7
B	0.5
Q8003	
E	0
C	0
B	4.0
Q8200	
E	0.1
C	0
B	0.5
Q8201	
E	0.3
C	0
B	0.2
Q8202	
E	0.3
C	0
B	0.5
Q8204	
E	0
C	0
B	0.1
Q8205	
E	0.1
C	0
B	0.4
Q8206	
E	0
C	0
B	0
Q8207	
E	1.9
C	0
B	0.6
Q8208	
E	1.6
C	0
B	0.9
TP8000	0.4
TP8001	0.1
TP8002	3.6
TP8003	0.4
TP8004	0.4
TP8005	0.3

MODE PIN NO.	STOP
TP8006	0.5
TP8007	0.1
TP8008	0.2
TP8009	0.3
TP8010	0.2
TP8011	0.2
TP8012	5.0
TP8013	0.7
TP8014	0
TP8015	0.4
TP8016	0
TP8017	0
TP8018	0.4
TP8019	4.4
TP8020	0.4
TP8021	0
TP8022	5.0
TP8023	0.1
TP8024	0
TP8025	0.2
TP8026	0.4
TP8027	0.1
TP8028	0
TP8029	0
TP8030	0.4
TP8031	0.3
TP8032	0.3
TP8033	0.3
TP8034	0.4
TP8035	0.4
TP8036	0.4
TP8037	0.1
TP8038	0
TP8039	0.1
TP8040	0.4
TP8041	0.4
TP8042	0.4
TP8043	0
TP8044	0.4
TP8045	0
TP8046	0.1
TP8047	0
TP8048	0
TP8049	0
TP8051	5.0
TP8052	0.4
TP8053	0.1
TP8054	0.1
TP8055	0.3
TP8056	0.1
TP8057	0.1
TP8058	0.1
TP8059	0.1
TP8060	0.1
TP8061	0.1

MODE PIN NO.	STOP
TP8062	0.4
TP8063	0.4
TP8065	0.1
TP8068	0.5
TP8069	0
TP8070	0.1
TP8071	0.1
TP8072	0.1
TP8100	3.6
TP8200	0.6
TP8201	0
TP8202	0.5
TP8203	0
TP8204	0.1
TP8205	0.4
TP8206	0.1
TP8207	0.1
TP8208	0.1
TP8209	0
TP8210	0.4
TP8211	0.4
TP8212	0.4
TP8213	0.4
TP8214	0.1
TP8215	0.1
TP8216	0.1
TP8300	0
TP8301	3.6
TP8302	0.4
TP8303	0.3
TP8304	0.4
TP8305	0.4
TP8306	0.4
TP8307	0.4
TP8308	0.4
TP8309	0.4
TP8310	0.4
TP8311	0.1
TP8312	0.3
TP8313	0.3
TP8315	0.1
TP8316	0
TP8317	0
TP8318	0.1
TP8319	0
TP8320	0
TP8321	0.5
TP8322	0
TP8323	0.5
TP8324	0.5
TP8325	0.1
TP8326	0
TP8327	0.1
TP8328	0
TP8329	0.4

MODE PIN NO.	STOP
TP8330	0.1
TP8331	0.1
TP8332	0
TP8334	0
TP8335	0
TP8398	0.5
TP8399	0.5
TP8400	0.1
TP8401	0.1
TP8405	0
TP8407	0
TP8408	0.1
TP8415	0.3
TP8416	0.2
TP8417	0
TP8418	0
TP8419	0
TP8420	0
TP8421	0.4
TP8422	0.4
TP8423	0
TP8424	0
TP8501	0.3
TP8502	0.1
TP8503	0.1
TP8504	0.4
TP8505	0.1
TP8506	0.3

Hi-Fi AUDIO/VIDEO HEAD AMP C.B.A.

MODE PIN NO.	STOP
IC3501	
1	0
2	0
3	0.5
4	0
5	0
6	0
7	0.5
8	0
9	0
10	0.5
11	0
12	0
13	0.1
14	0.1
15	---
16	2.4
17	2.4
18	0
19	---
20	---
21	---
22	---
23	---
24	---
25	0.2
26	5.1
27	0
28	0
29	0
30	2.5
31	5.2
32	4.9
33	0.2
34	0.1
35	11.9
36	0.1
IC4401	
1	0
2	4.0
3	0.6
4	0
5	4.0
6	4.0
7	1.0
8	0.7
9	2.6
10	5.1
11	0
12	0
13	3.9
14	3.9
15	0.1
16	13.0

VOLTAGE CHART
PV-DM2792/PV-DM2792-K

POWER SUPPLY BLOCK DIAGRAM

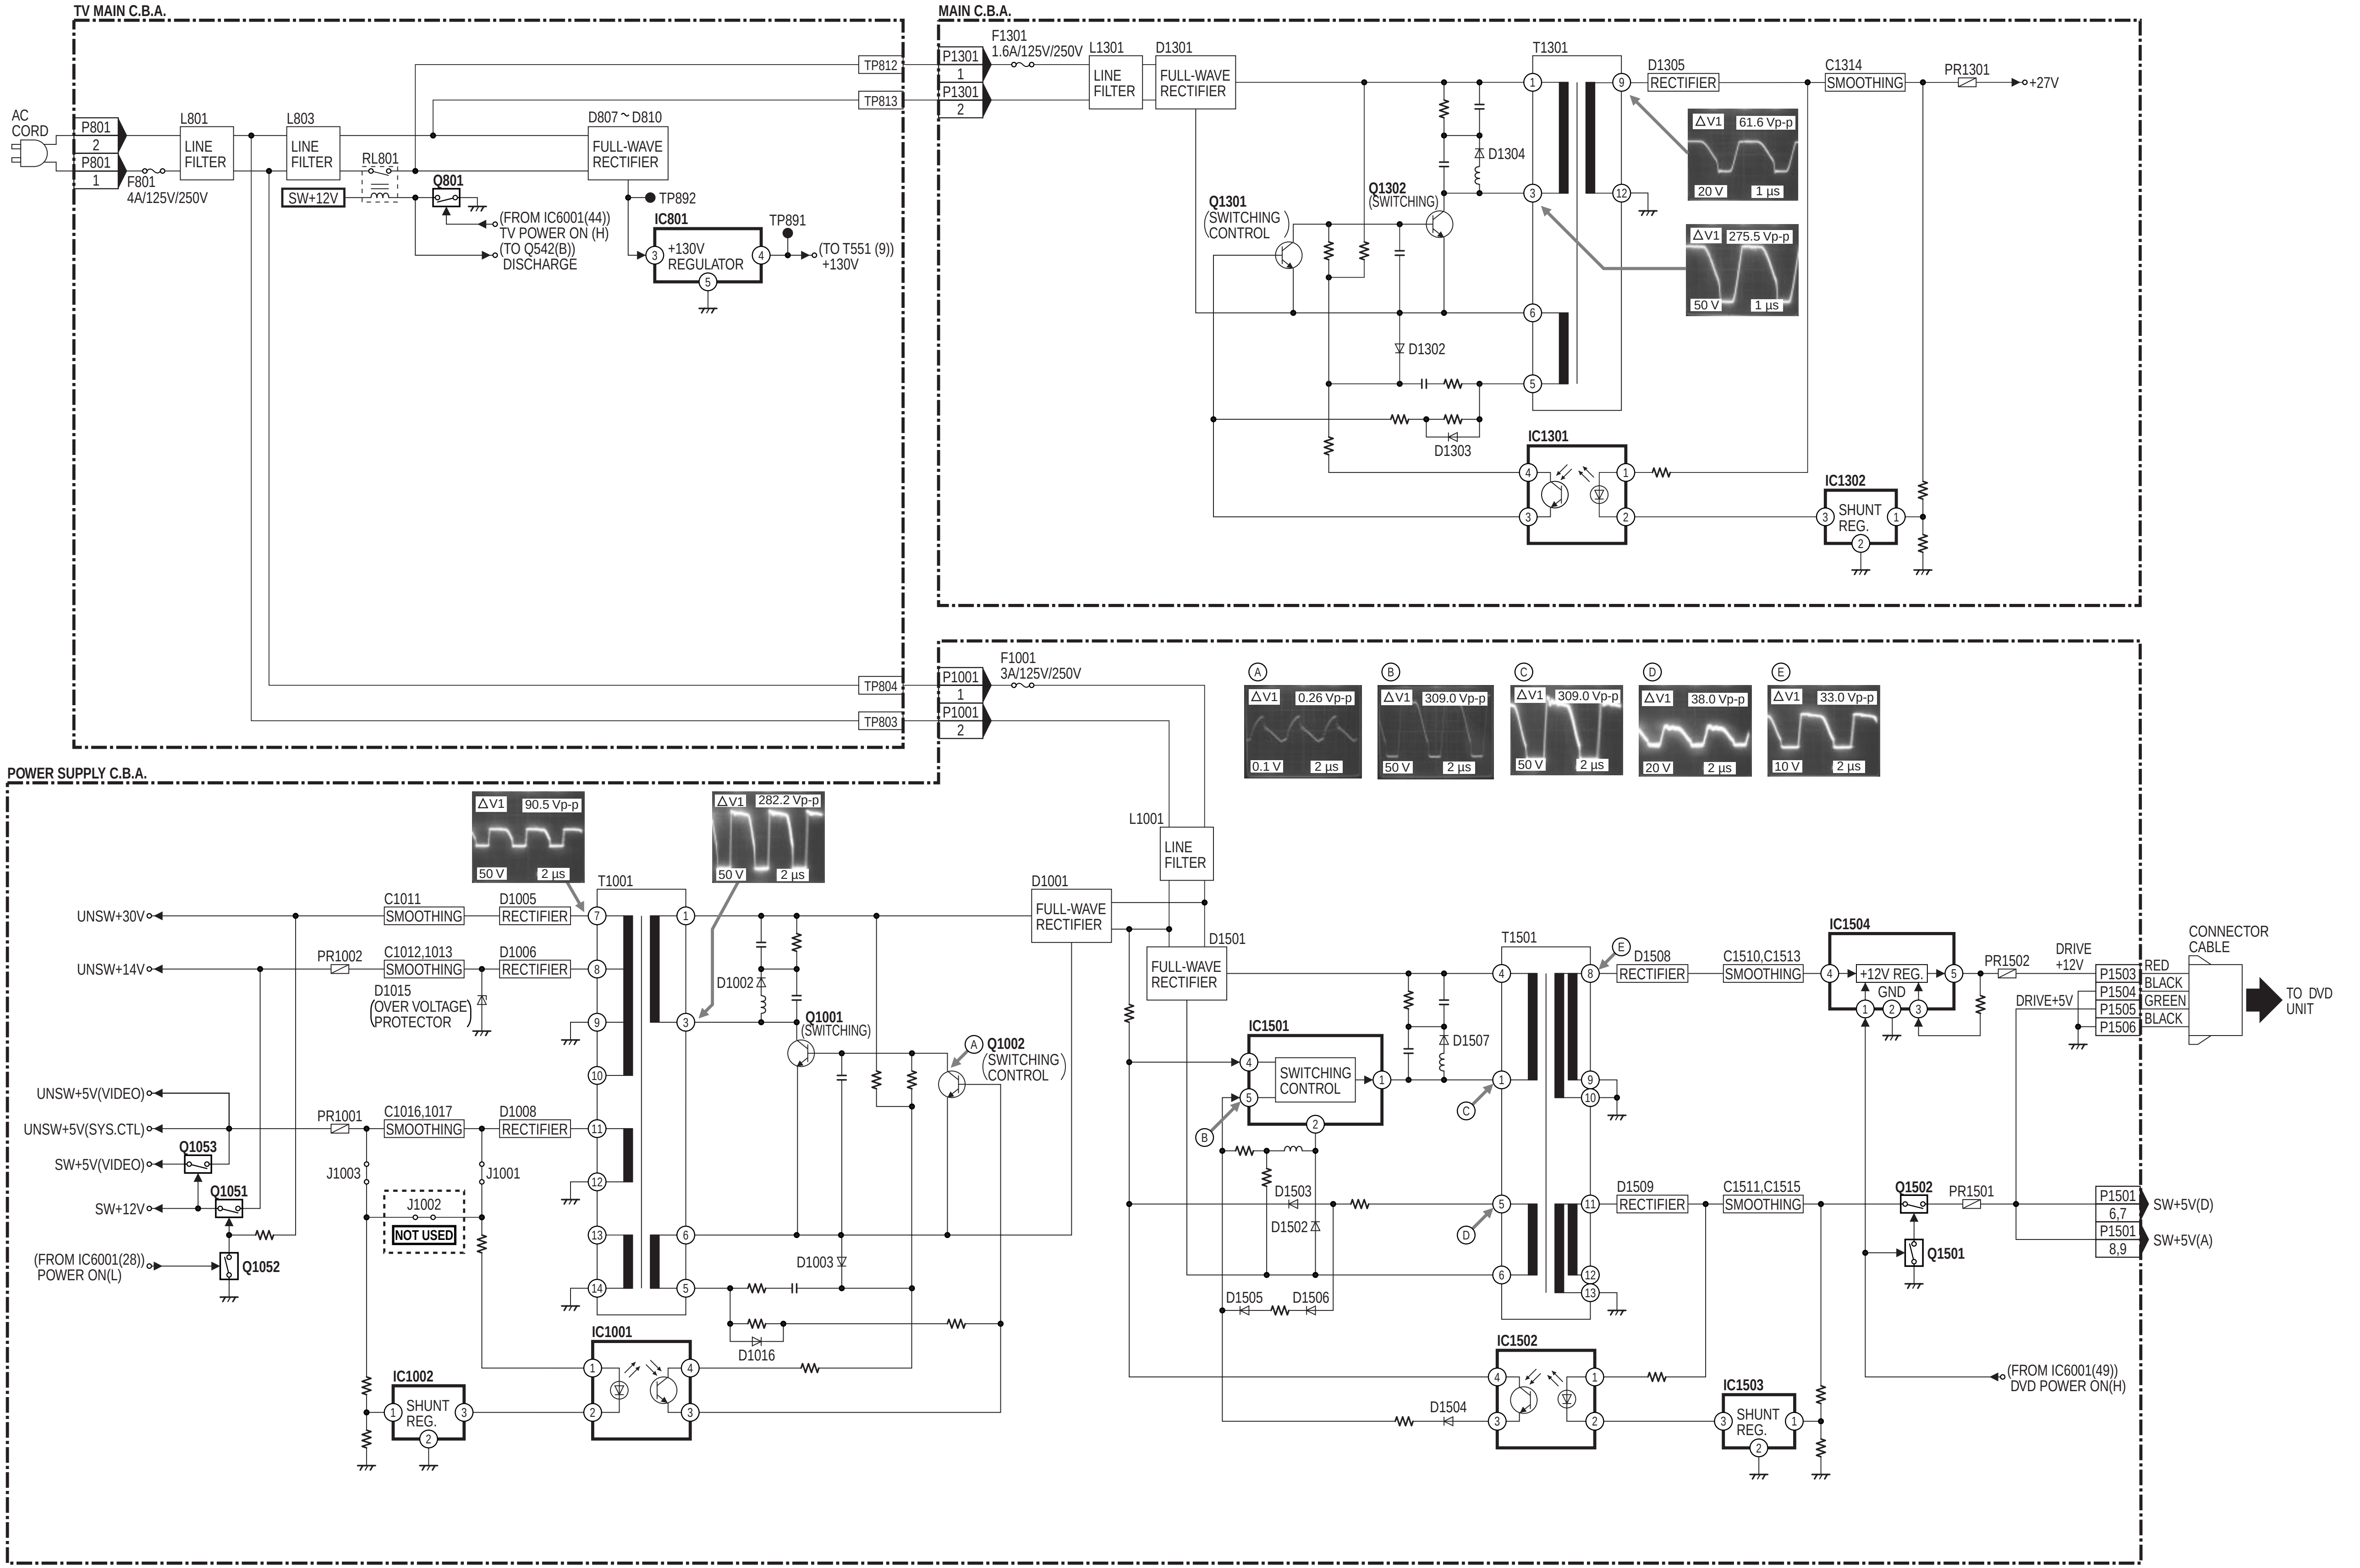
TV MAIN C.B.A.
MAIN C.B.A.
POWER SUPPLY C.B.A.
AC CORD
P801
2
P801
1
F801
4A/125V/250V
L801
LINE FILTER
L803
LINE FILTER
RL801
SW+12V
Q801
(FROM IC6001(44))
TV POWER ON (H)
(TO Q542(B))
DISCHARGE
D807 ~ D810
FULL-WAVE RECTIFIER
TP892
IC801
+130V REGULATOR
TP891
(TO T551 (9))
+130V
TP812
TP813
TP804
TP803
P1301
1
P1301
2
F1301
1.6A/125V/250V
L1301
LINE FILTER
D1301
FULL-WAVE RECTIFIER
T1301
D1305
RECTIFIER
C1314
SMOOTHING
PR1301
+27V
ΔV1 61.6 Vp-p
20 V 1 µs
ΔV1 275.5 Vp-p
50 V 1 µs
D1304
Q1301
(SWITCHING CONTROL)
Q1302
(SWITCHING)
D1302
D1303
IC1301
IC1302
SHUNT REG.
P1001
1
P1001
2
F1001
3A/125V/250V
Ⓐ ΔV1 0.26 Vp-p 0.1 V 2 µs
Ⓑ ΔV1 309.0 Vp-p 50 V 2 µs
Ⓒ ΔV1 309.0 Vp-p 50 V 2 µs
Ⓓ ΔV1 38.0 Vp-p 20 V 2 µs
Ⓔ ΔV1 33.0 Vp-p 10 V 2 µs
ΔV1 90.5 Vp-p
50 V 2 µs
ΔV1 282.2 Vp-p
50 V 2 µs
L1001
LINE FILTER
D1001
FULL-WAVE RECTIFIER
T1001
UNSW+30V
C1011
SMOOTHING
D1005
RECTIFIER
UNSW+14V
PR1002
C1012,1013
SMOOTHING
D1006
RECTIFIER
D1015
(OVER VOLTAGE PROTECTOR)
D1002
Q1001
(SWITCHING)
Ⓐ Q1002
(SWITCHING CONTROL)
UNSW+5V(VIDEO)
UNSW+5V(SYS.CTL)
SW+5V(VIDEO)
SW+12V
Q1053
Q1051
Q1052
(FROM IC6001(28))
POWER ON(L)
PR1001
C1016,1017
SMOOTHING
D1008
RECTIFIER
J1003
J1001
J1002
NOT USED
D1003
D1016
IC1001
IC1002
SHUNT REG.
D1501
FULL-WAVE RECTIFIER
T1501
IC1501
SWITCHING CONTROL
D1507
D1503
D1502
D1505
D1506
D1508
RECTIFIER
C1510,C1513
SMOOTHING
IC1504
+12V REG.
GND
PR1502
DRIVE +12V
DRIVE+5V
P1503
P1504
P1505
P1506
RED
BLACK
GREEN
BLACK
CONNECTOR CABLE
TO DVD UNIT
D1509
RECTIFIER
C1511,C1515
SMOOTHING
Q1502
PR1501
Q1501
P1501
6,7
P1501
8,9
SW+5V(D)
SW+5V(A)
IC1502
D1504
IC1503
SHUNT REG.
(FROM IC6001(49))
DVD POWER ON(H)

PV-DM2792/PV-DM2792-K POWER SUPPLY BLOCK DIAGRAM

VIDEO SIGNAL PATH BLOCK DIAGRAM

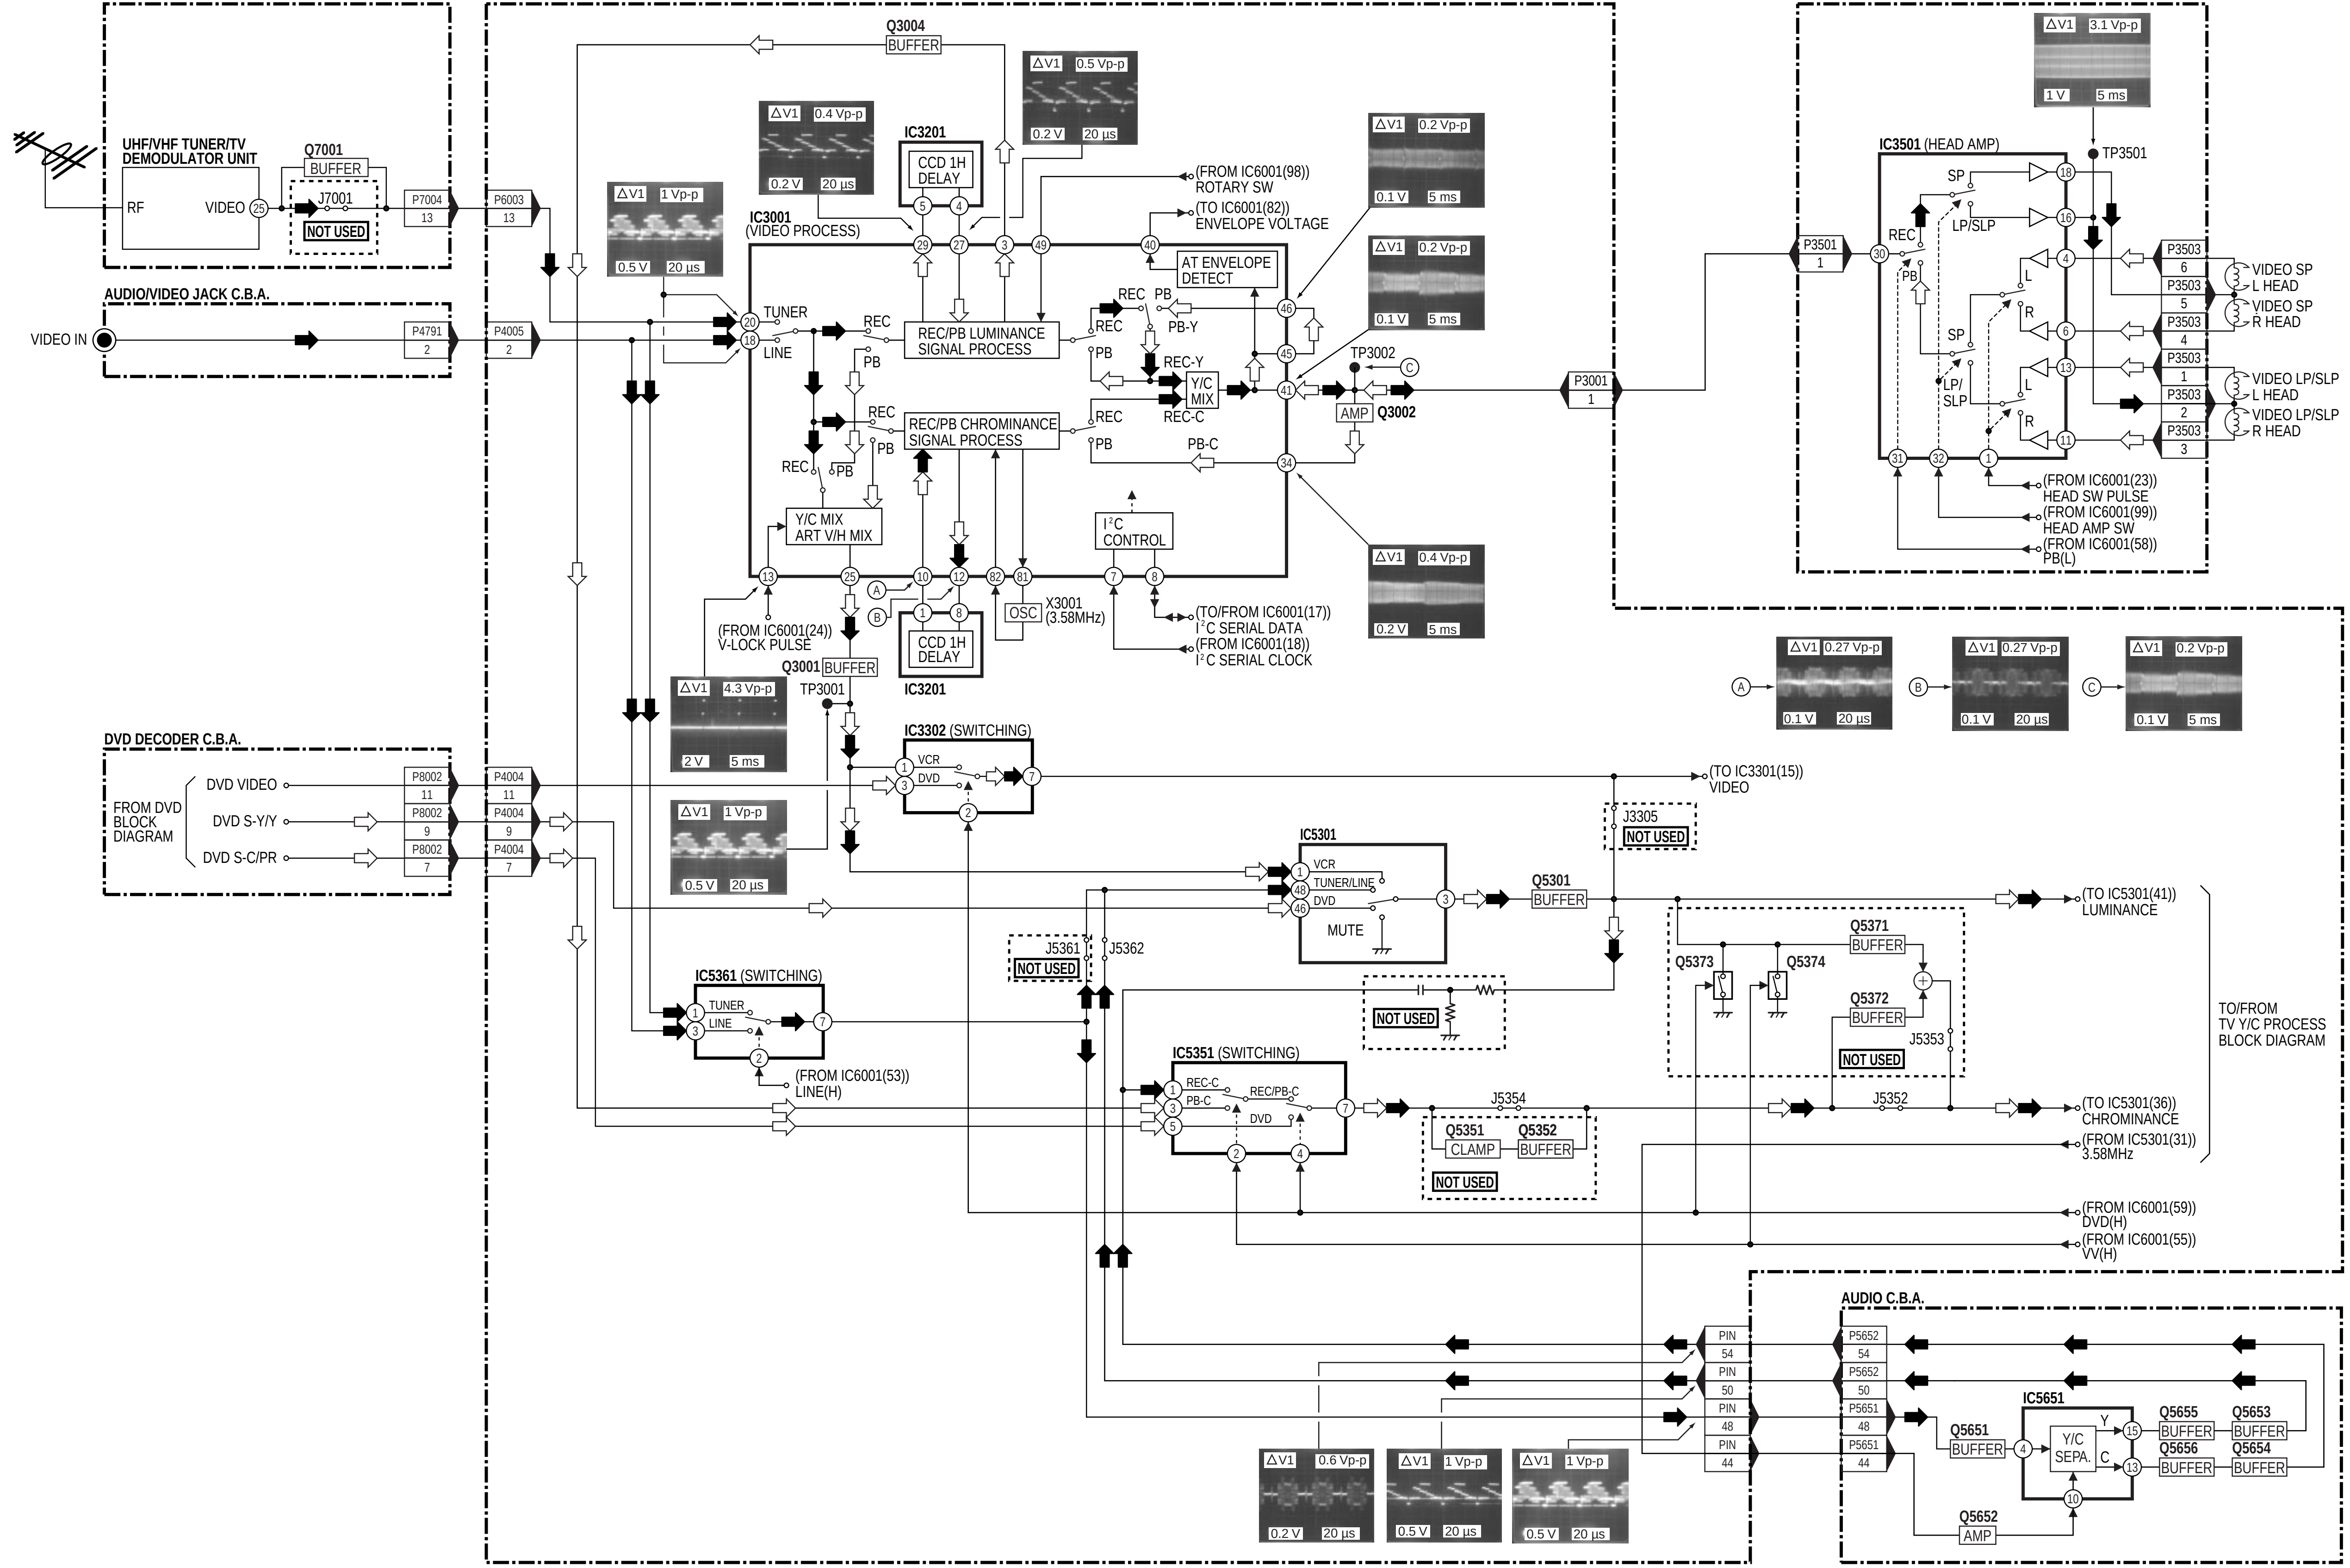
REC VIDEO SIGNAL
PB VIDEO SIGNAL
TV MAIN C.B.A.
UHF/VHF TUNER/TV DEMODULATOR UNIT
RF
VIDEO
Q7001
BUFFER
J7001
NOT USED
P7004
13
AUDIO/VIDEO JACK C.B.A.
VIDEO IN
P4791
2
DVD DECODER C.B.A.
FROM DVD BLOCK DIAGRAM
DVD VIDEO
DVD S-Y/Y
DVD S-C/PR
P8002
11
9
7
MAIN C.B.A.
P6003
13
P4005
2
P4004
11
9
7
Q3004
BUFFER
IC3201
CCD 1H DELAY
IC3001 (VIDEO PROCESS)
TUNER
LINE
REC
PB
REC/PB LUMINANCE SIGNAL PROCESS
REC/PB CHROMINANCE SIGNAL PROCESS
Y/C MIX ART V/H MIX
AT ENVELOPE DETECT
Y/C MIX
REC-Y
PB-Y
REC-C
PB-C
I²C CONTROL
(FROM IC6001(98)) ROTARY SW
(TO IC6001(82)) ENVELOPE VOLTAGE
(TO/FROM IC6001(17)) I²C SERIAL DATA
(FROM IC6001(18)) I²C SERIAL CLOCK
X3001 (3.58MHz)
OSC
(FROM IC6001(24)) V-LOCK PULSE
Q3001 BUFFER
TP3001
TP3002
AMP Q3002
P3001
1
IC3302 (SWITCHING)
VCR
DVD
(TO IC3301(15)) VIDEO
J3305
NOT USED
IC5301
VCR
TUNER/LINE
DVD
MUTE
Q5301
BUFFER
(TO IC5301(41)) LUMINANCE
J5361
NOT USED
J5362
IC5361 (SWITCHING)
TUNER
LINE
(FROM IC6001(53)) LINE(H)
IC5351 (SWITCHING)
REC-C
PB-C
REC/PB-C
DVD
J5354
Q5351 CLAMP
Q5352 BUFFER
NOT USED
Q5371 BUFFER
Q5373
Q5374
Q5372 BUFFER
J5353
J5352
(TO IC5301(36)) CHROMINANCE
(FROM IC5301(31)) 3.58MHz
TO/FROM TV Y/C PROCESS BLOCK DIAGRAM
(FROM IC6001(59)) DVD(H)
(FROM IC6001(55)) VV(H)
HEAD AMP C.B.A.
IC3501 (HEAD AMP)
TP3501
P3501
1
SP
LP/SLP
REC
PB
L
R
P3503
6
5
4
1
2
3
VIDEO SP L HEAD
VIDEO SP R HEAD
VIDEO LP/SLP L HEAD
VIDEO LP/SLP R HEAD
(FROM IC6001(23)) HEAD SW PULSE
(FROM IC6001(99)) HEAD AMP SW
(FROM IC6001(58)) PB(L)
AUDIO C.B.A.
PIN
54
50
48
44
P5652
54
50
P5651
48
44
IC5651
Y/C SEPA.
Y
C
Q5651 BUFFER
Q5652 AMP
Q5655 BUFFER
Q5653 BUFFER
Q5656 BUFFER
Q5654 BUFFER
ΔV1 0.4 Vp-p 0.2 V 20 µs
ΔV1 0.5 Vp-p 0.2 V 20 µs
ΔV1 1 Vp-p 0.5 V 20 µs
ΔV1 0.2 Vp-p 0.1 V 5 ms
ΔV1 0.2 Vp-p 0.1 V 5 ms
ΔV1 0.4 Vp-p 0.2 V 5 ms
ΔV1 3.1 Vp-p 1 V 5 ms
ΔV1 4.3 Vp-p 2 V 5 ms
ΔV1 1 Vp-p 0.5 V 20 µs
A ΔV1 0.27 Vp-p 0.1 V 20 µs
B ΔV1 0.27 Vp-p 0.1 V 20 µs
C ΔV1 0.2 Vp-p 0.1 V 5 ms
ΔV1 0.6 Vp-p 0.2 V 20 µs
ΔV1 1 Vp-p 0.5 V 20 µs
ΔV1 1 Vp-p 0.5 V 20 µs

PV-DM2792/PV-DM2792-K VIDEO SIGNAL PATH BLOCK DIAGRAM

AUDIO SIGNAL PATH BLOCK DIAGRAM

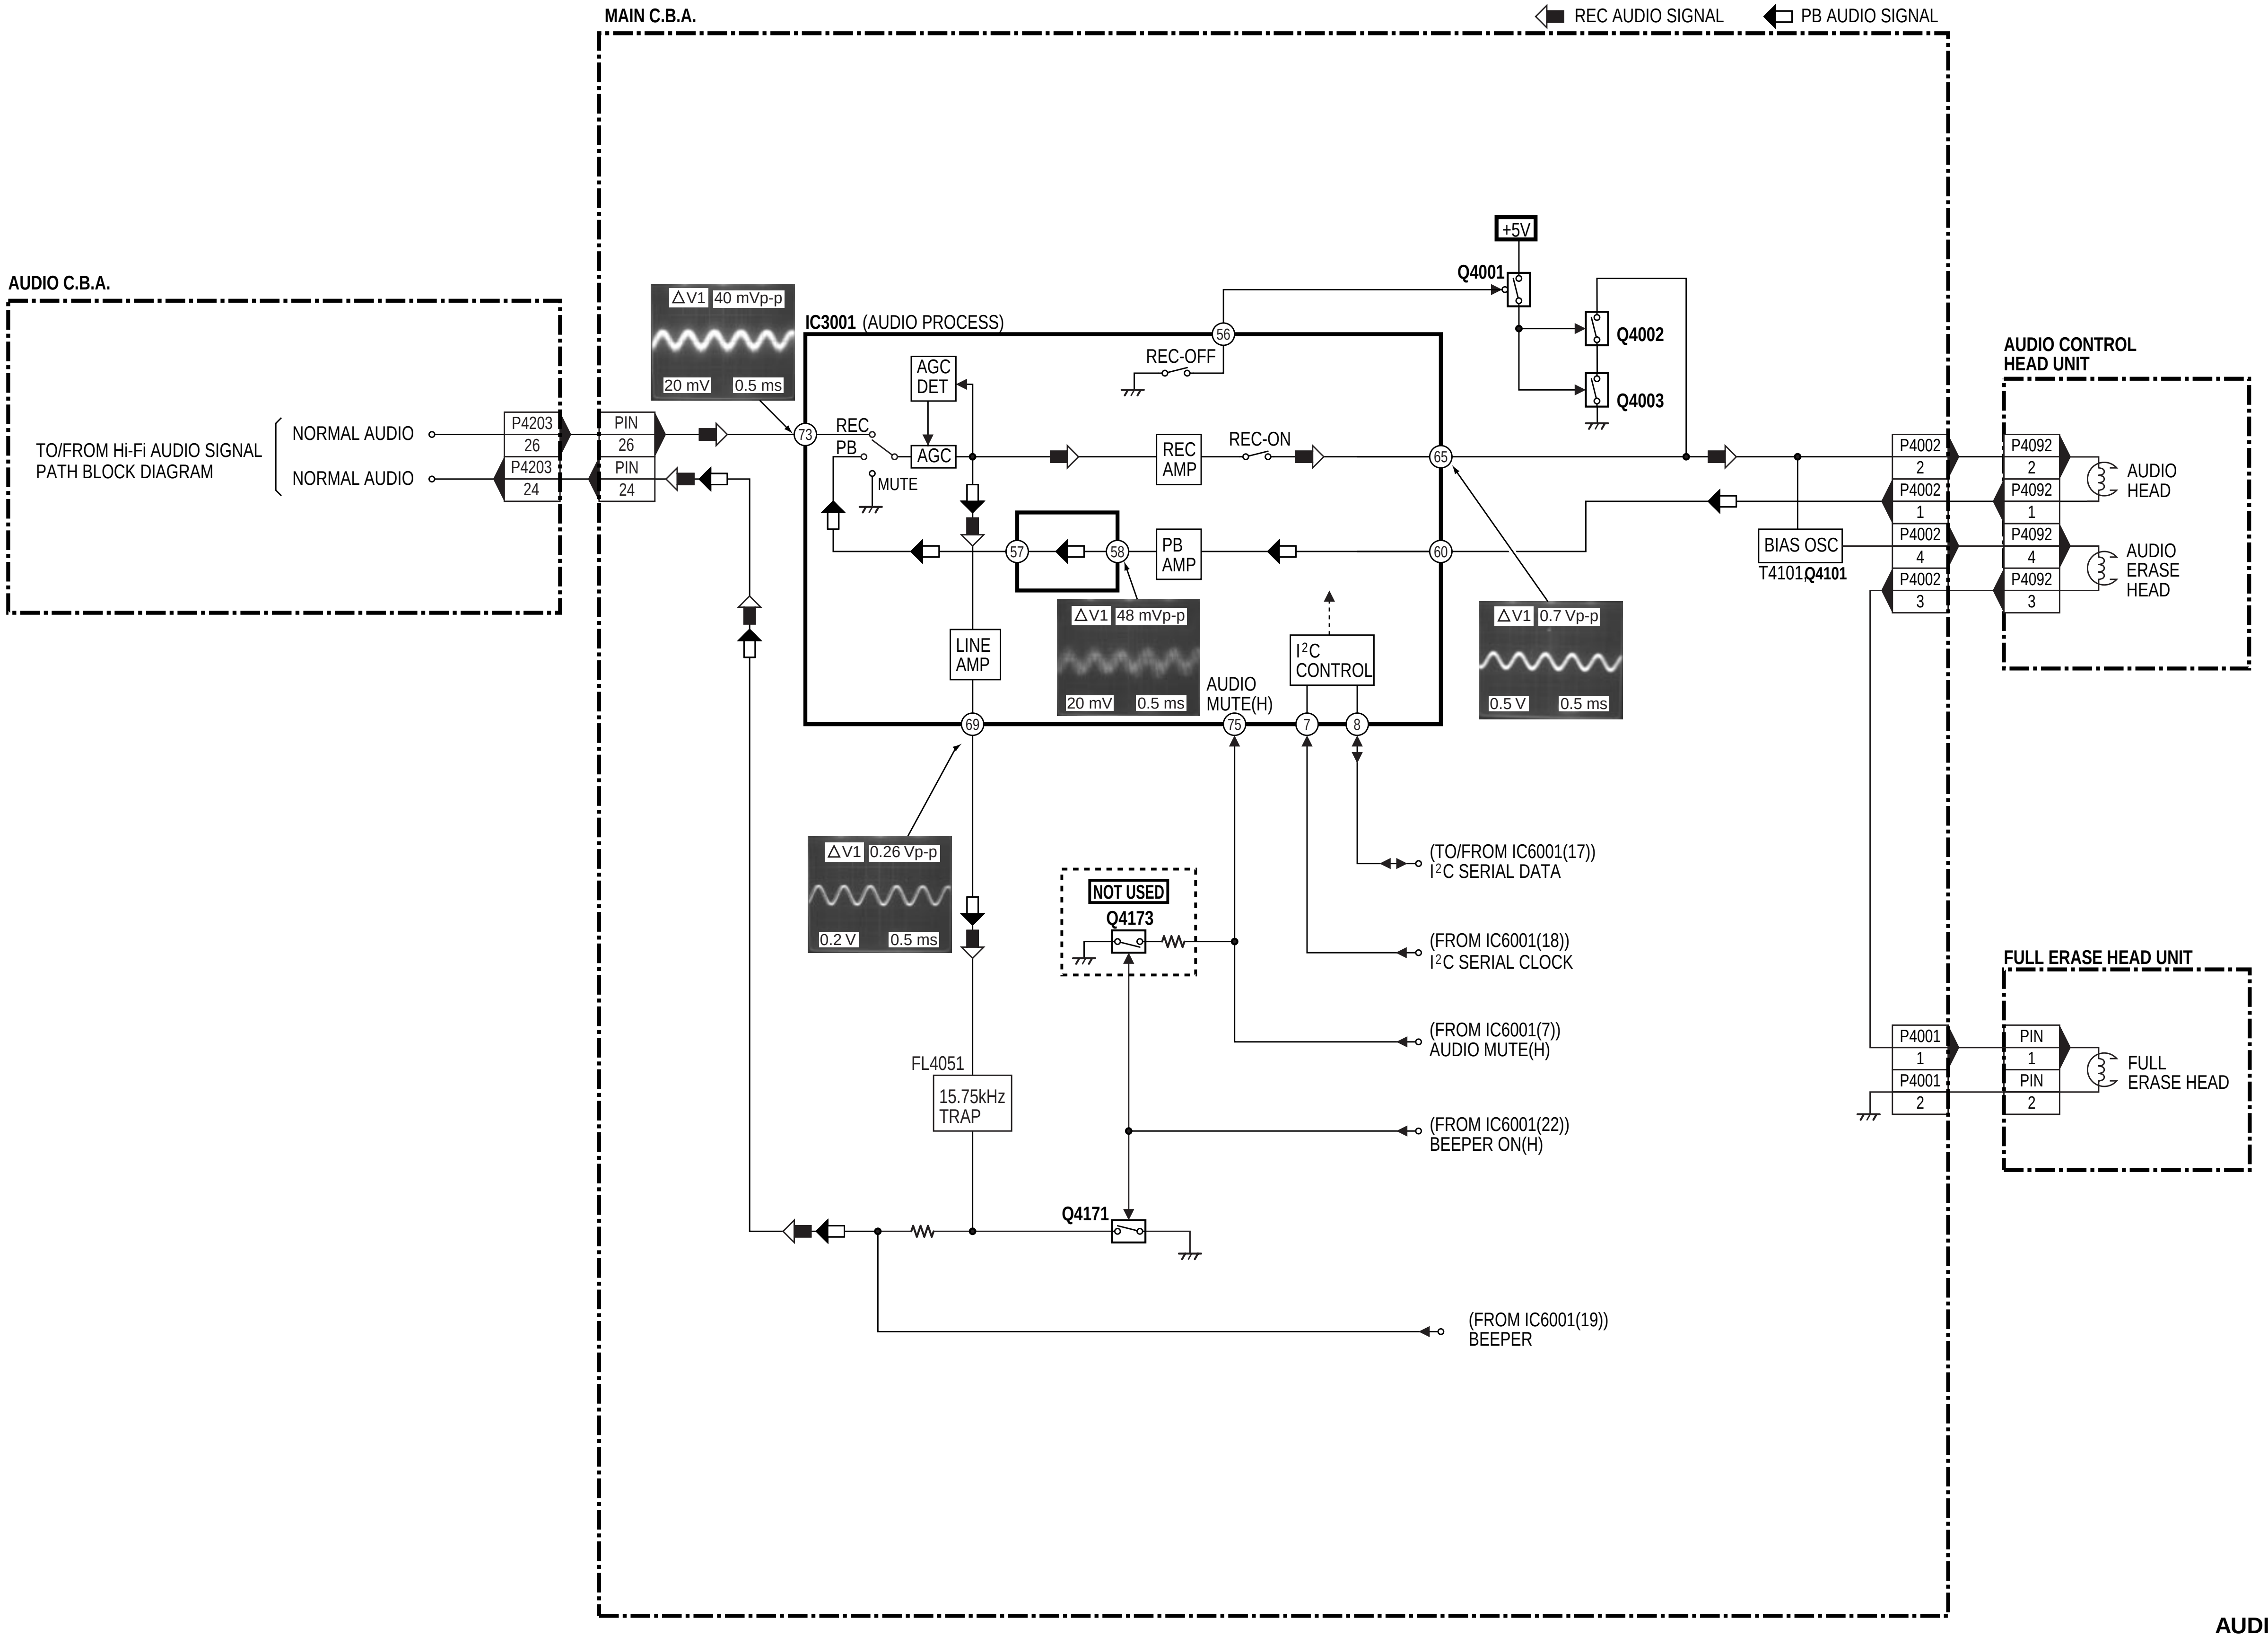
MAIN C.B.A.
REC AUDIO SIGNAL
PB AUDIO SIGNAL
AUDIO C.B.A.
TO/FROM Hi-Fi AUDIO SIGNAL PATH BLOCK DIAGRAM
NORMAL AUDIO
NORMAL AUDIO
P4203
26
P4203
24
PIN
26
PIN
24
ΔV1 40 mVp-p
20 mV 0.5 ms
IC3001 (AUDIO PROCESS)
73
REC
PB
MUTE
AGC DET
AGC
REC-OFF
56
REC AMP
REC-ON
65
57
58
PB AMP
60
LINE AMP
ΔV1 48 mVp-p
20 mV 0.5 ms
AUDIO MUTE(H)
I²C CONTROL
69
75
7
8
ΔV1 0.7 Vp-p
0.5 V 0.5 ms
+5V
Q4001
Q4002
Q4003
BIAS OSC
T4101
Q4101
AUDIO CONTROL HEAD UNIT
P4002
2
P4002
1
P4002
4
P4002
3
P4092
2
P4092
1
P4092
4
P4092
3
AUDIO HEAD
AUDIO ERASE HEAD
ΔV1 0.26 Vp-p
0.2 V 0.5 ms
NOT USED
Q4173
(TO/FROM IC6001(17)) I²C SERIAL DATA
(FROM IC6001(18)) I²C SERIAL CLOCK
(FROM IC6001(7)) AUDIO MUTE(H)
(FROM IC6001(22)) BEEPER ON(H)
FL4051
15.75kHz TRAP
Q4171
(FROM IC6001(19)) BEEPER
FULL ERASE HEAD UNIT
P4001
1
P4001
2
PIN
1
PIN
2
FULL ERASE HEAD

TV STEREO SIGNAL PATH BLOCK DIAGRAM

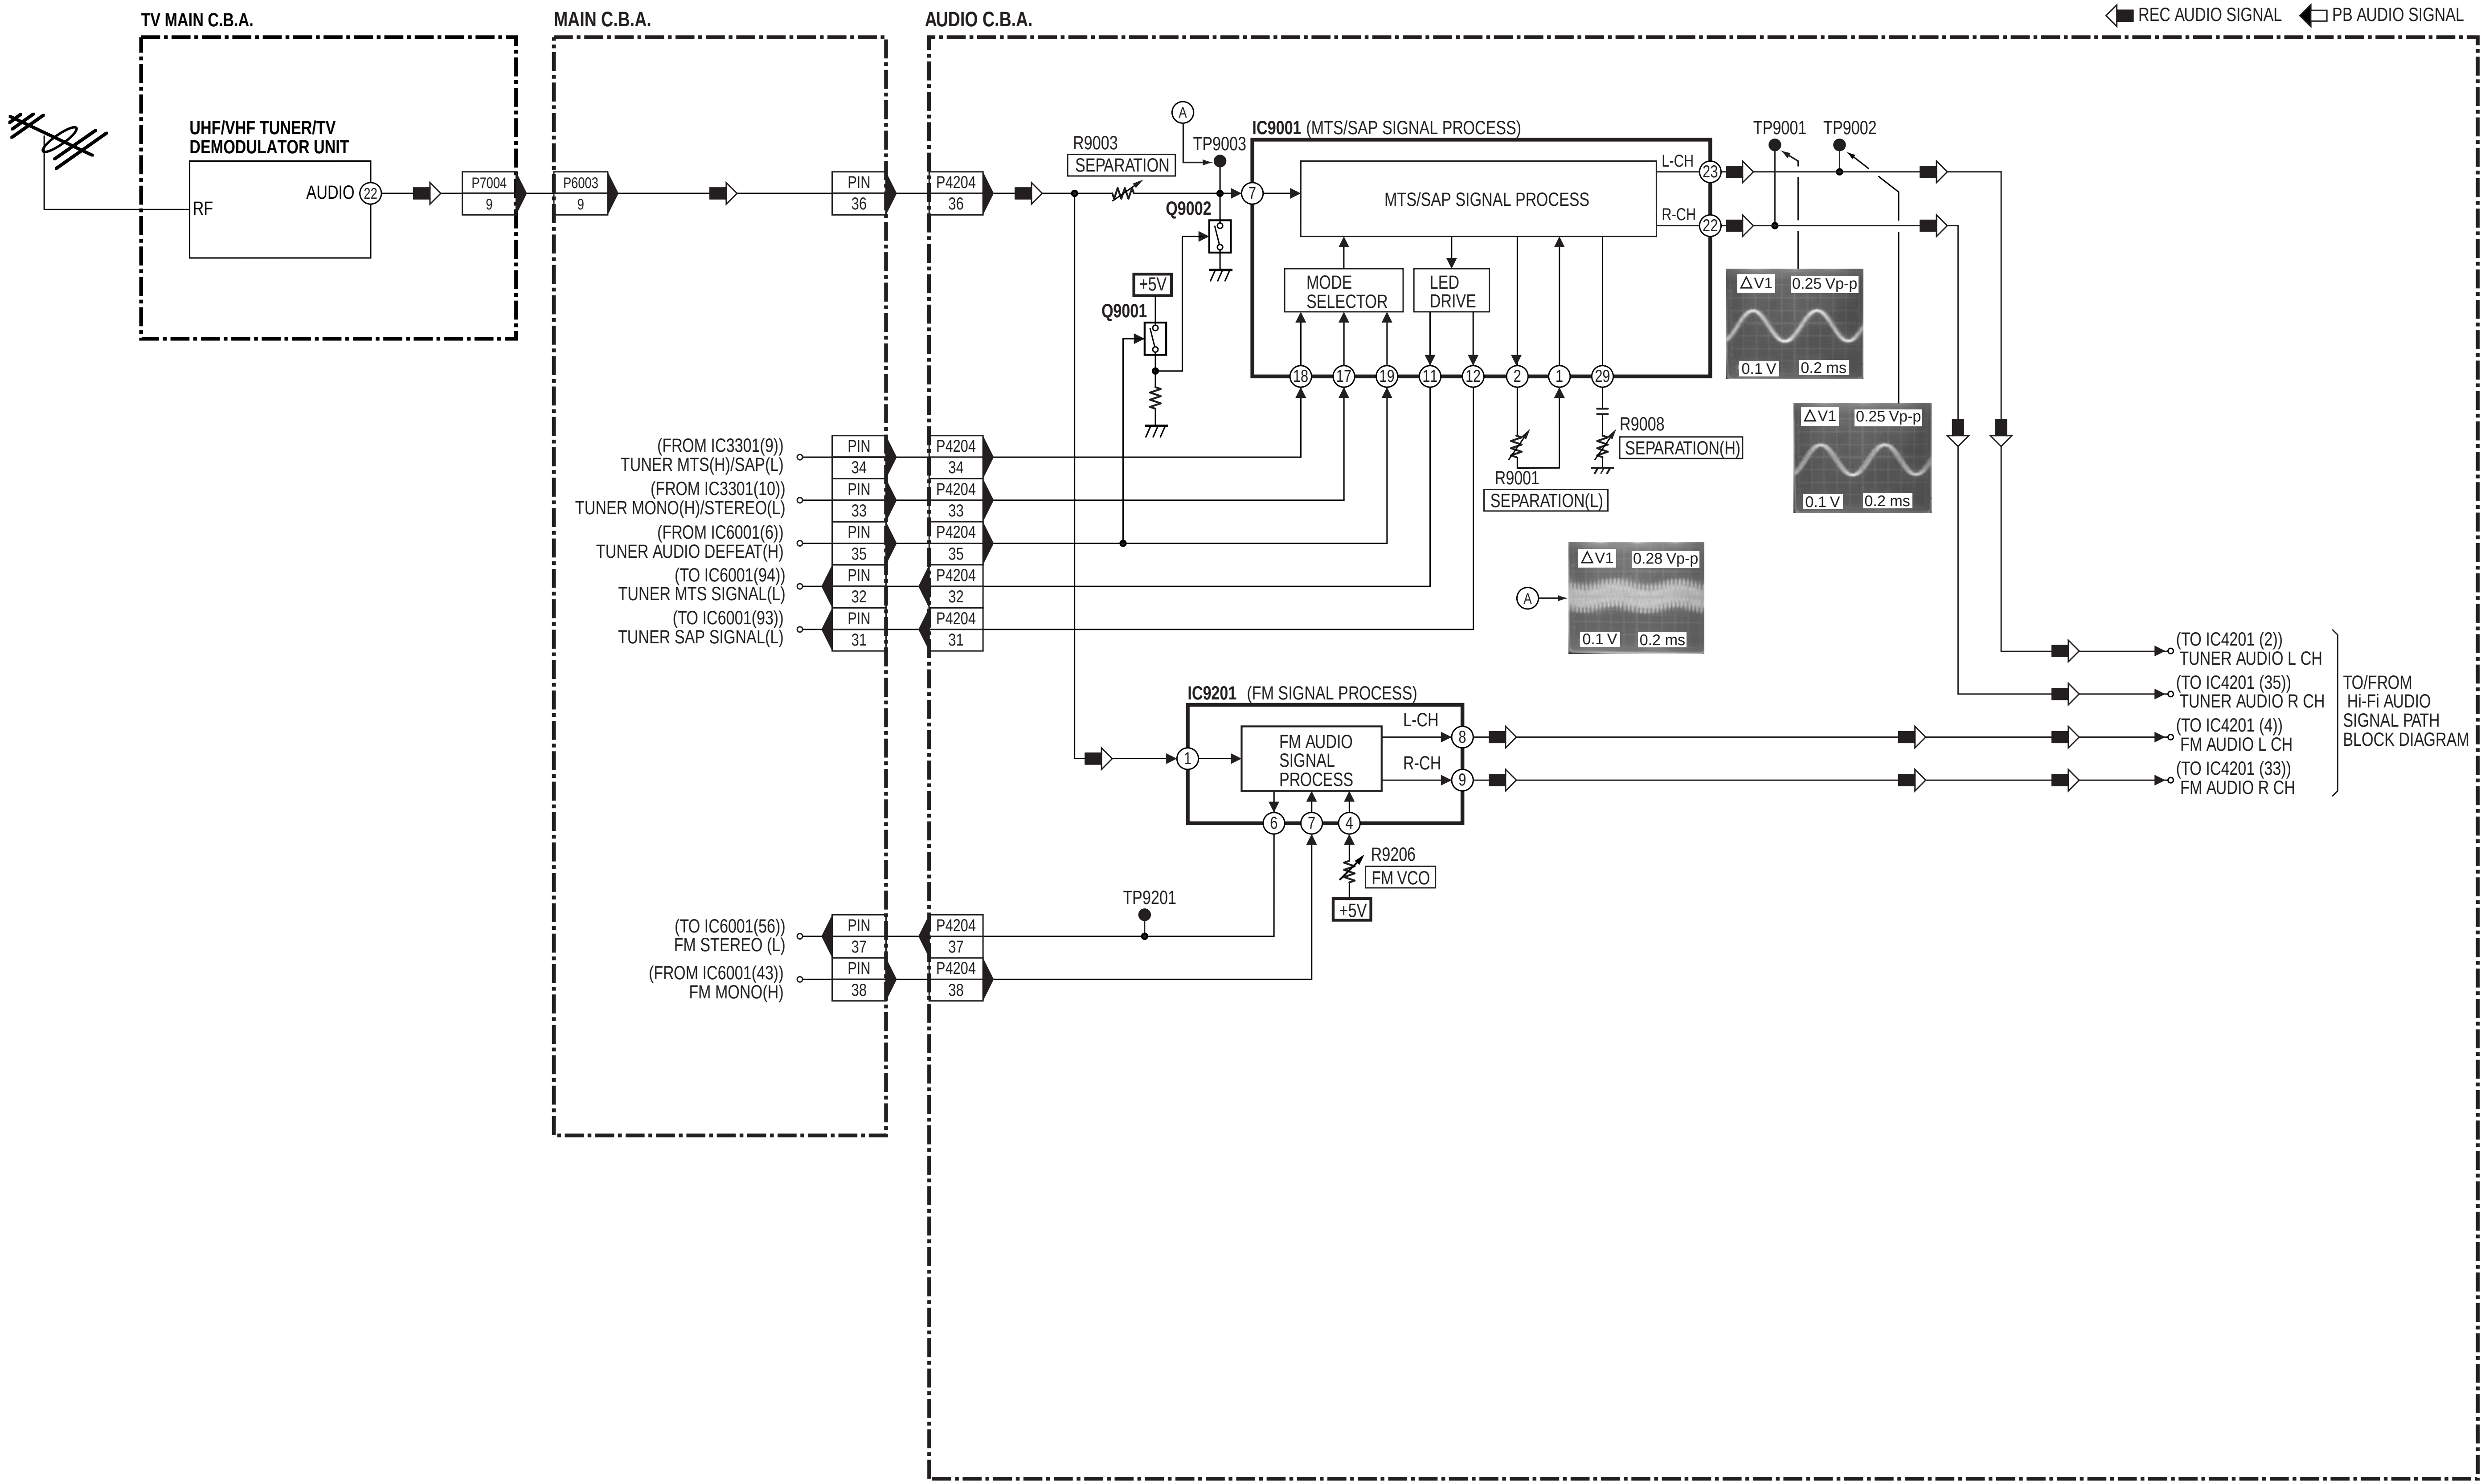
REC AUDIO SIGNAL
PB AUDIO SIGNAL
TV MAIN C.B.A.
MAIN C.B.A.
AUDIO C.B.A.
UHF/VHF TUNER/TV DEMODULATOR UNIT
RF
AUDIO 22
P7004 9
P6003 9
PIN 36
P4204 36
R9003
SEPARATION
A
TP9003
Q9002
Q9001
+5V
IC9001 (MTS/SAP SIGNAL PROCESS)
MTS/SAP SIGNAL PROCESS
L-CH
R-CH
MODE SELECTOR
LED DRIVE
TP9001
TP9002
ΔV1 0.25 Vp-p
0.1 V 0.2 ms
ΔV1 0.25 Vp-p
0.1 V 0.2 ms
R9008
SEPARATION(H)
R9001
SEPARATION(L)
ΔV1 0.28 Vp-p
0.1 V 0.2 ms
(FROM IC3301(9)) TUNER MTS(H)/SAP(L)
PIN 34
P4204 34
(FROM IC3301(10)) TUNER MONO(H)/STEREO(L)
PIN 33
P4204 33
(FROM IC6001(6)) TUNER AUDIO DEFEAT(H)
PIN 35
P4204 35
(TO IC6001(94)) TUNER MTS SIGNAL(L)
PIN 32
P4204 32
(TO IC6001(93)) TUNER SAP SIGNAL(L)
PIN 31
P4204 31
IC9201 (FM SIGNAL PROCESS)
FM AUDIO SIGNAL PROCESS
L-CH
R-CH
R9206
FM VCO
+5V
TP9201
(TO IC6001(56)) FM STEREO (L)
PIN 37
P4204 37
(FROM IC6001(43)) FM MONO(H)
PIN 38
P4204 38
(TO IC4201 (2)) TUNER AUDIO L CH
(TO IC4201 (35)) TUNER AUDIO R CH
(TO IC4201 (4)) FM AUDIO L CH
(TO IC4201 (33)) FM AUDIO R CH
TO/FROM Hi-Fi AUDIO SIGNAL PATH BLOCK DIAGRAM

Hi-Fi AUDIO SIGNAL PATH BLOCK DIAGRAM

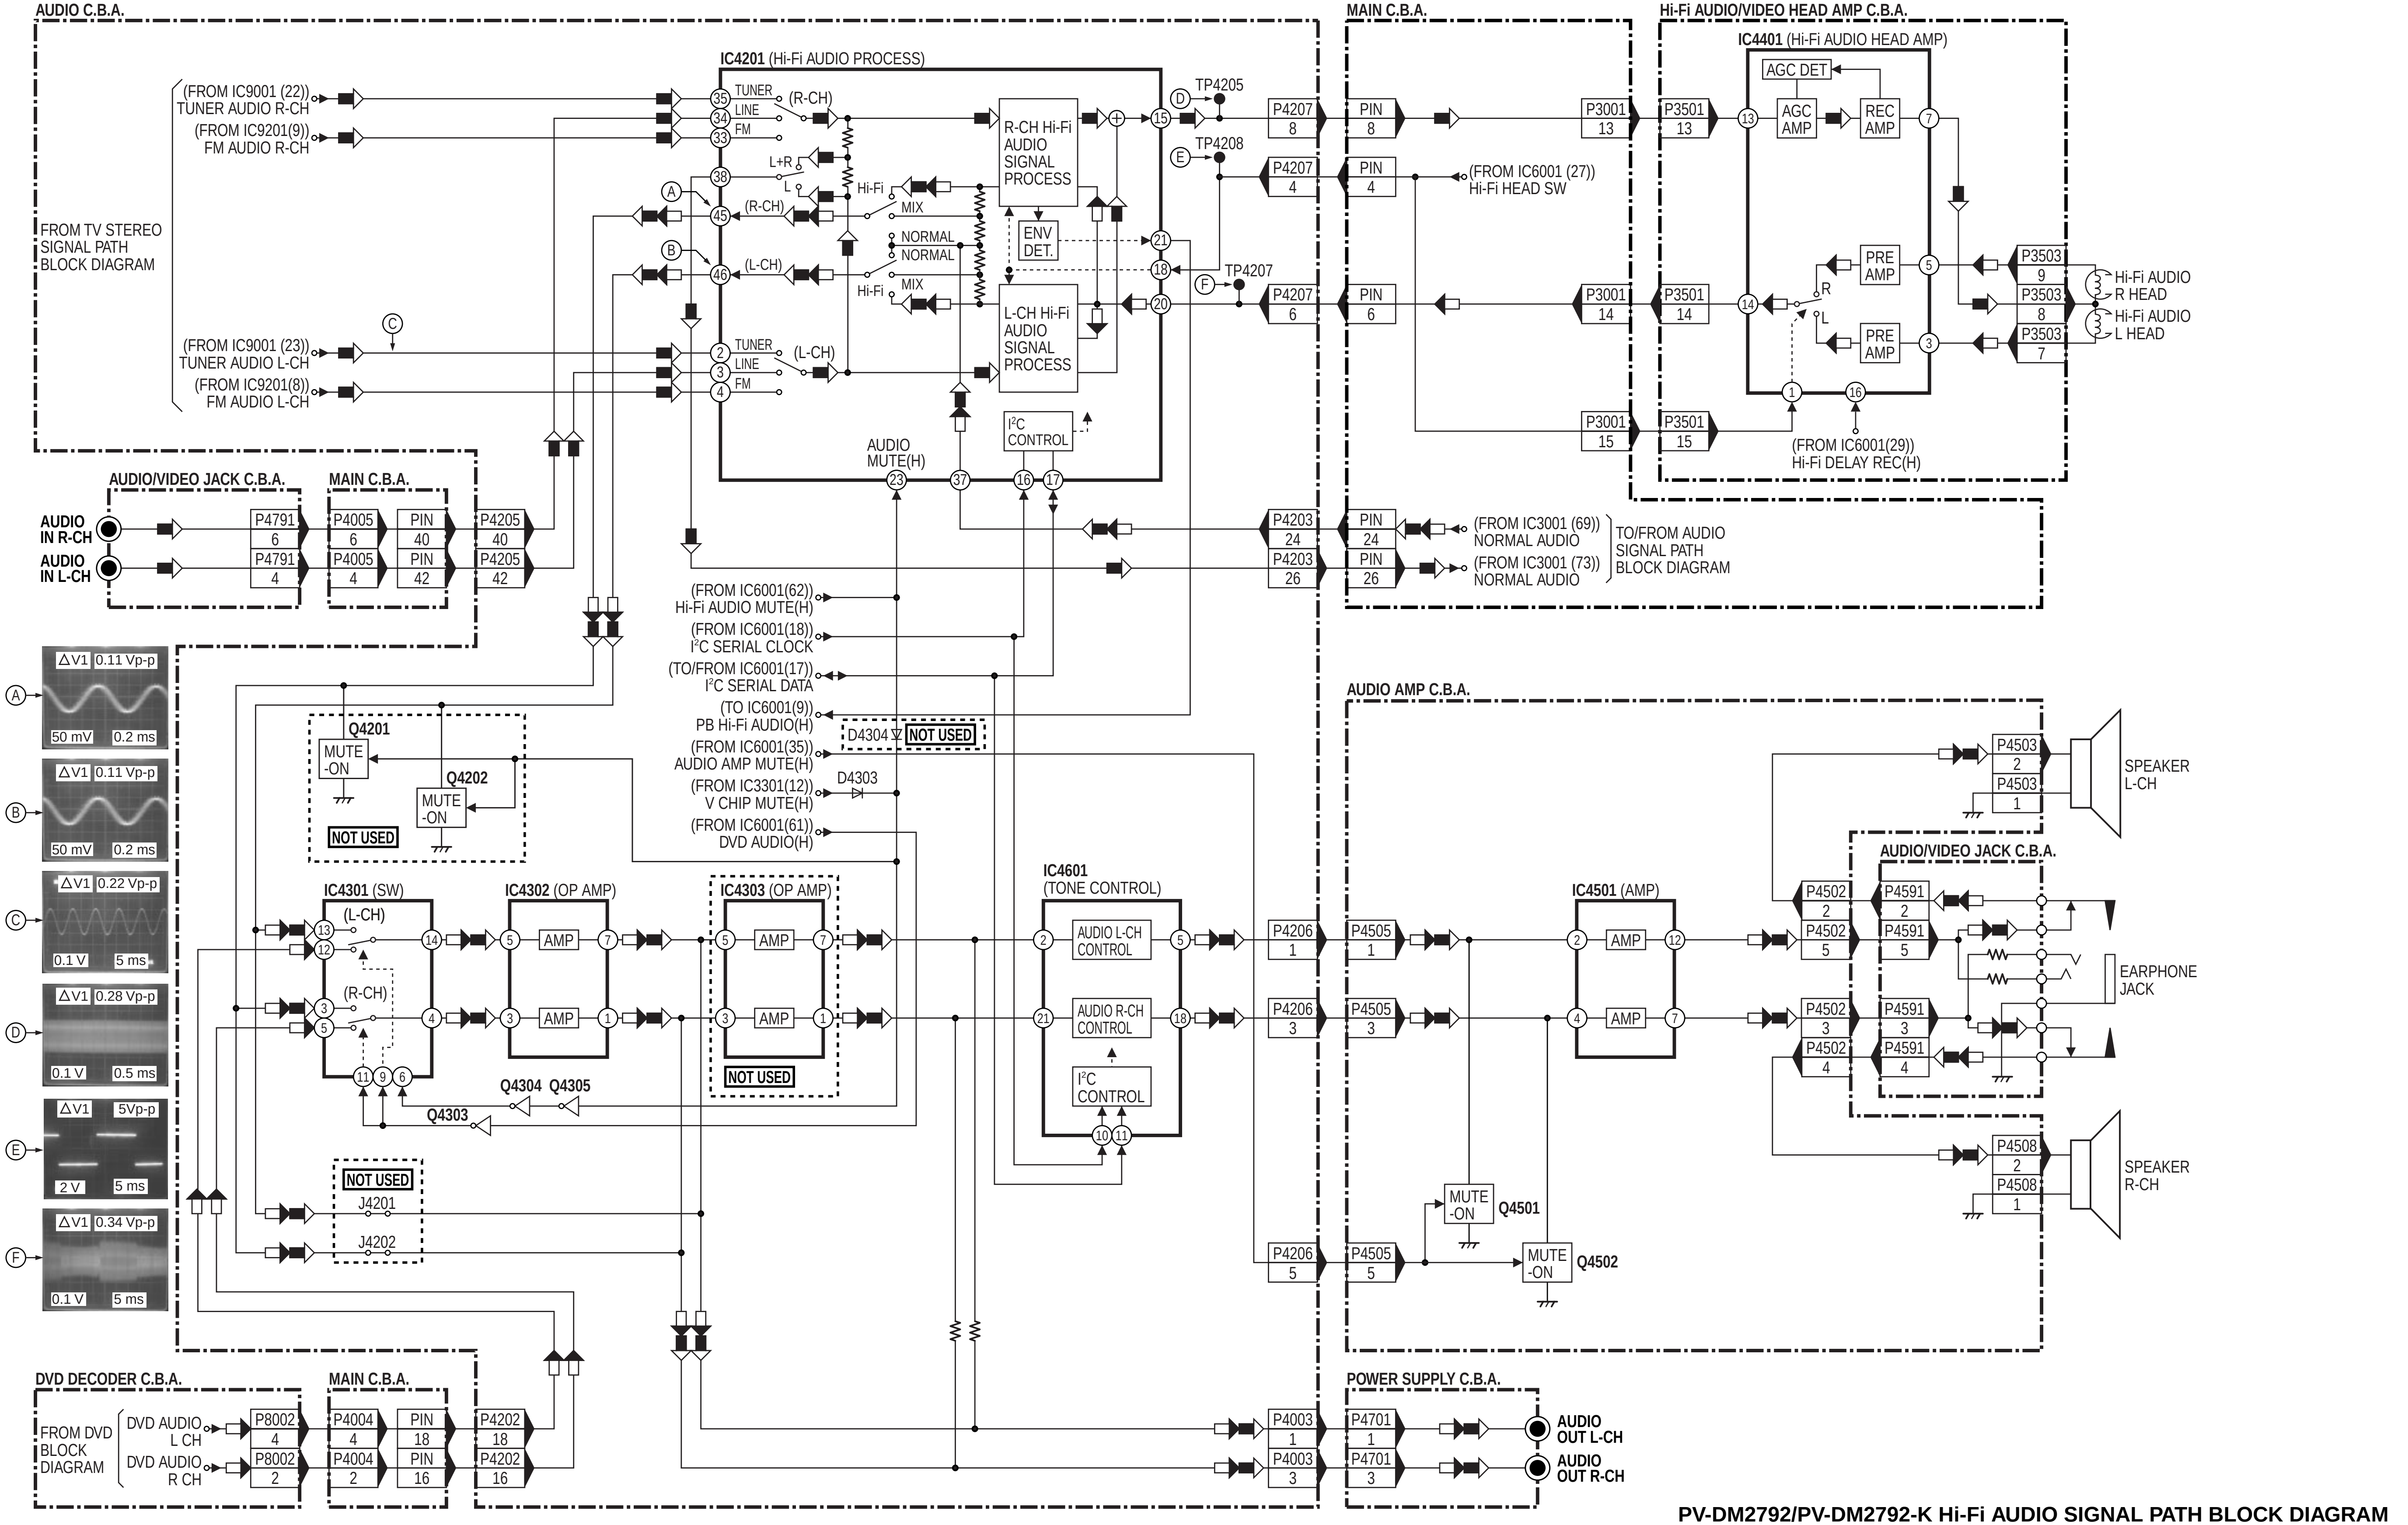

AUDIO C.B.A.
IC4201 (Hi-Fi AUDIO PROCESS)
(FROM IC9001 (22)) TUNER AUDIO R-CH
(FROM IC9201(9)) FM AUDIO R-CH
FROM TV STEREO SIGNAL PATH BLOCK DIAGRAM
(FROM IC9001 (23)) TUNER AUDIO L-CH
(FROM IC9201(8)) FM AUDIO L-CH
TUNER
LINE
FM
(R-CH)
(L-CH)
L+R
L
Hi-Fi
MIX
NORMAL
R-CH Hi-Fi AUDIO SIGNAL PROCESS
L-CH Hi-Fi AUDIO SIGNAL PROCESS
ENV DET.
I²C CONTROL
AUDIO MUTE(H)
TP4205
TP4208
TP4207
P4207
P4203
MAIN C.B.A.
PIN
(FROM IC6001 (27)) Hi-Fi HEAD SW
P3001
(FROM IC3001 (69)) NORMAL AUDIO
(FROM IC3001 (73)) NORMAL AUDIO
TO/FROM AUDIO SIGNAL PATH BLOCK DIAGRAM
Hi-Fi AUDIO/VIDEO HEAD AMP C.B.A.
IC4401 (Hi-Fi AUDIO HEAD AMP)
AGC DET
AGC AMP
REC AMP
PRE AMP
P3501
P3503
Hi-Fi AUDIO R HEAD
Hi-Fi AUDIO L HEAD
(FROM IC6001(29)) Hi-Fi DELAY REC(H)
AUDIO/VIDEO JACK C.B.A.
AUDIO IN R-CH
AUDIO IN L-CH
P4791
P4005
P4205
(FROM IC6001(62)) Hi-Fi AUDIO MUTE(H)
(FROM IC6001(18)) I²C SERIAL CLOCK
(TO/FROM IC6001(17)) I²C SERIAL DATA
(TO IC6001(9)) PB Hi-Fi AUDIO(H)
(FROM IC6001(35)) AUDIO AMP MUTE(H)
(FROM IC3301(12)) V CHIP MUTE(H)
(FROM IC6001(61)) DVD AUDIO(H)
D4304 NOT USED
D4303
Q4201
Q4202
MUTE -ON
NOT USED
IC4301 (SW)
IC4302 (OP AMP)
IC4303 (OP AMP)
AMP
Q4304 Q4305
Q4303
J4201
J4202
IC4601 (TONE CONTROL)
AUDIO L-CH CONTROL
AUDIO R-CH CONTROL
I²C CONTROL
P4206
AUDIO AMP C.B.A.
P4505
IC4501 (AMP)
Q4501
Q4502
P4502
P4591
P4503
P4508
SPEAKER L-CH
SPEAKER R-CH
EARPHONE JACK
DVD DECODER C.B.A.
FROM DVD BLOCK DIAGRAM
DVD AUDIO L CH
DVD AUDIO R CH
P8002
P4004
P4202
P4003
POWER SUPPLY C.B.A.
P4701
AUDIO OUT L-CH
AUDIO OUT R-CH
A ΔV1 0.11 Vp-p 50 mV 0.2 ms
B ΔV1 0.11 Vp-p 50 mV 0.2 ms
C ΔV1 0.22 Vp-p 0.1 V 5 ms
D ΔV1 0.28 Vp-p 0.1 V 0.5 ms
E ΔV1 5Vp-p 2 V 5 ms
F ΔV1 0.34 Vp-p 0.1 V 5 ms

PV-DM2792/PV-DM2792-K Hi-Fi AUDIO SIGNAL PATH BLOCK DIAGRAM

SYSTEM CONTROL BLOCK DIAGRAM

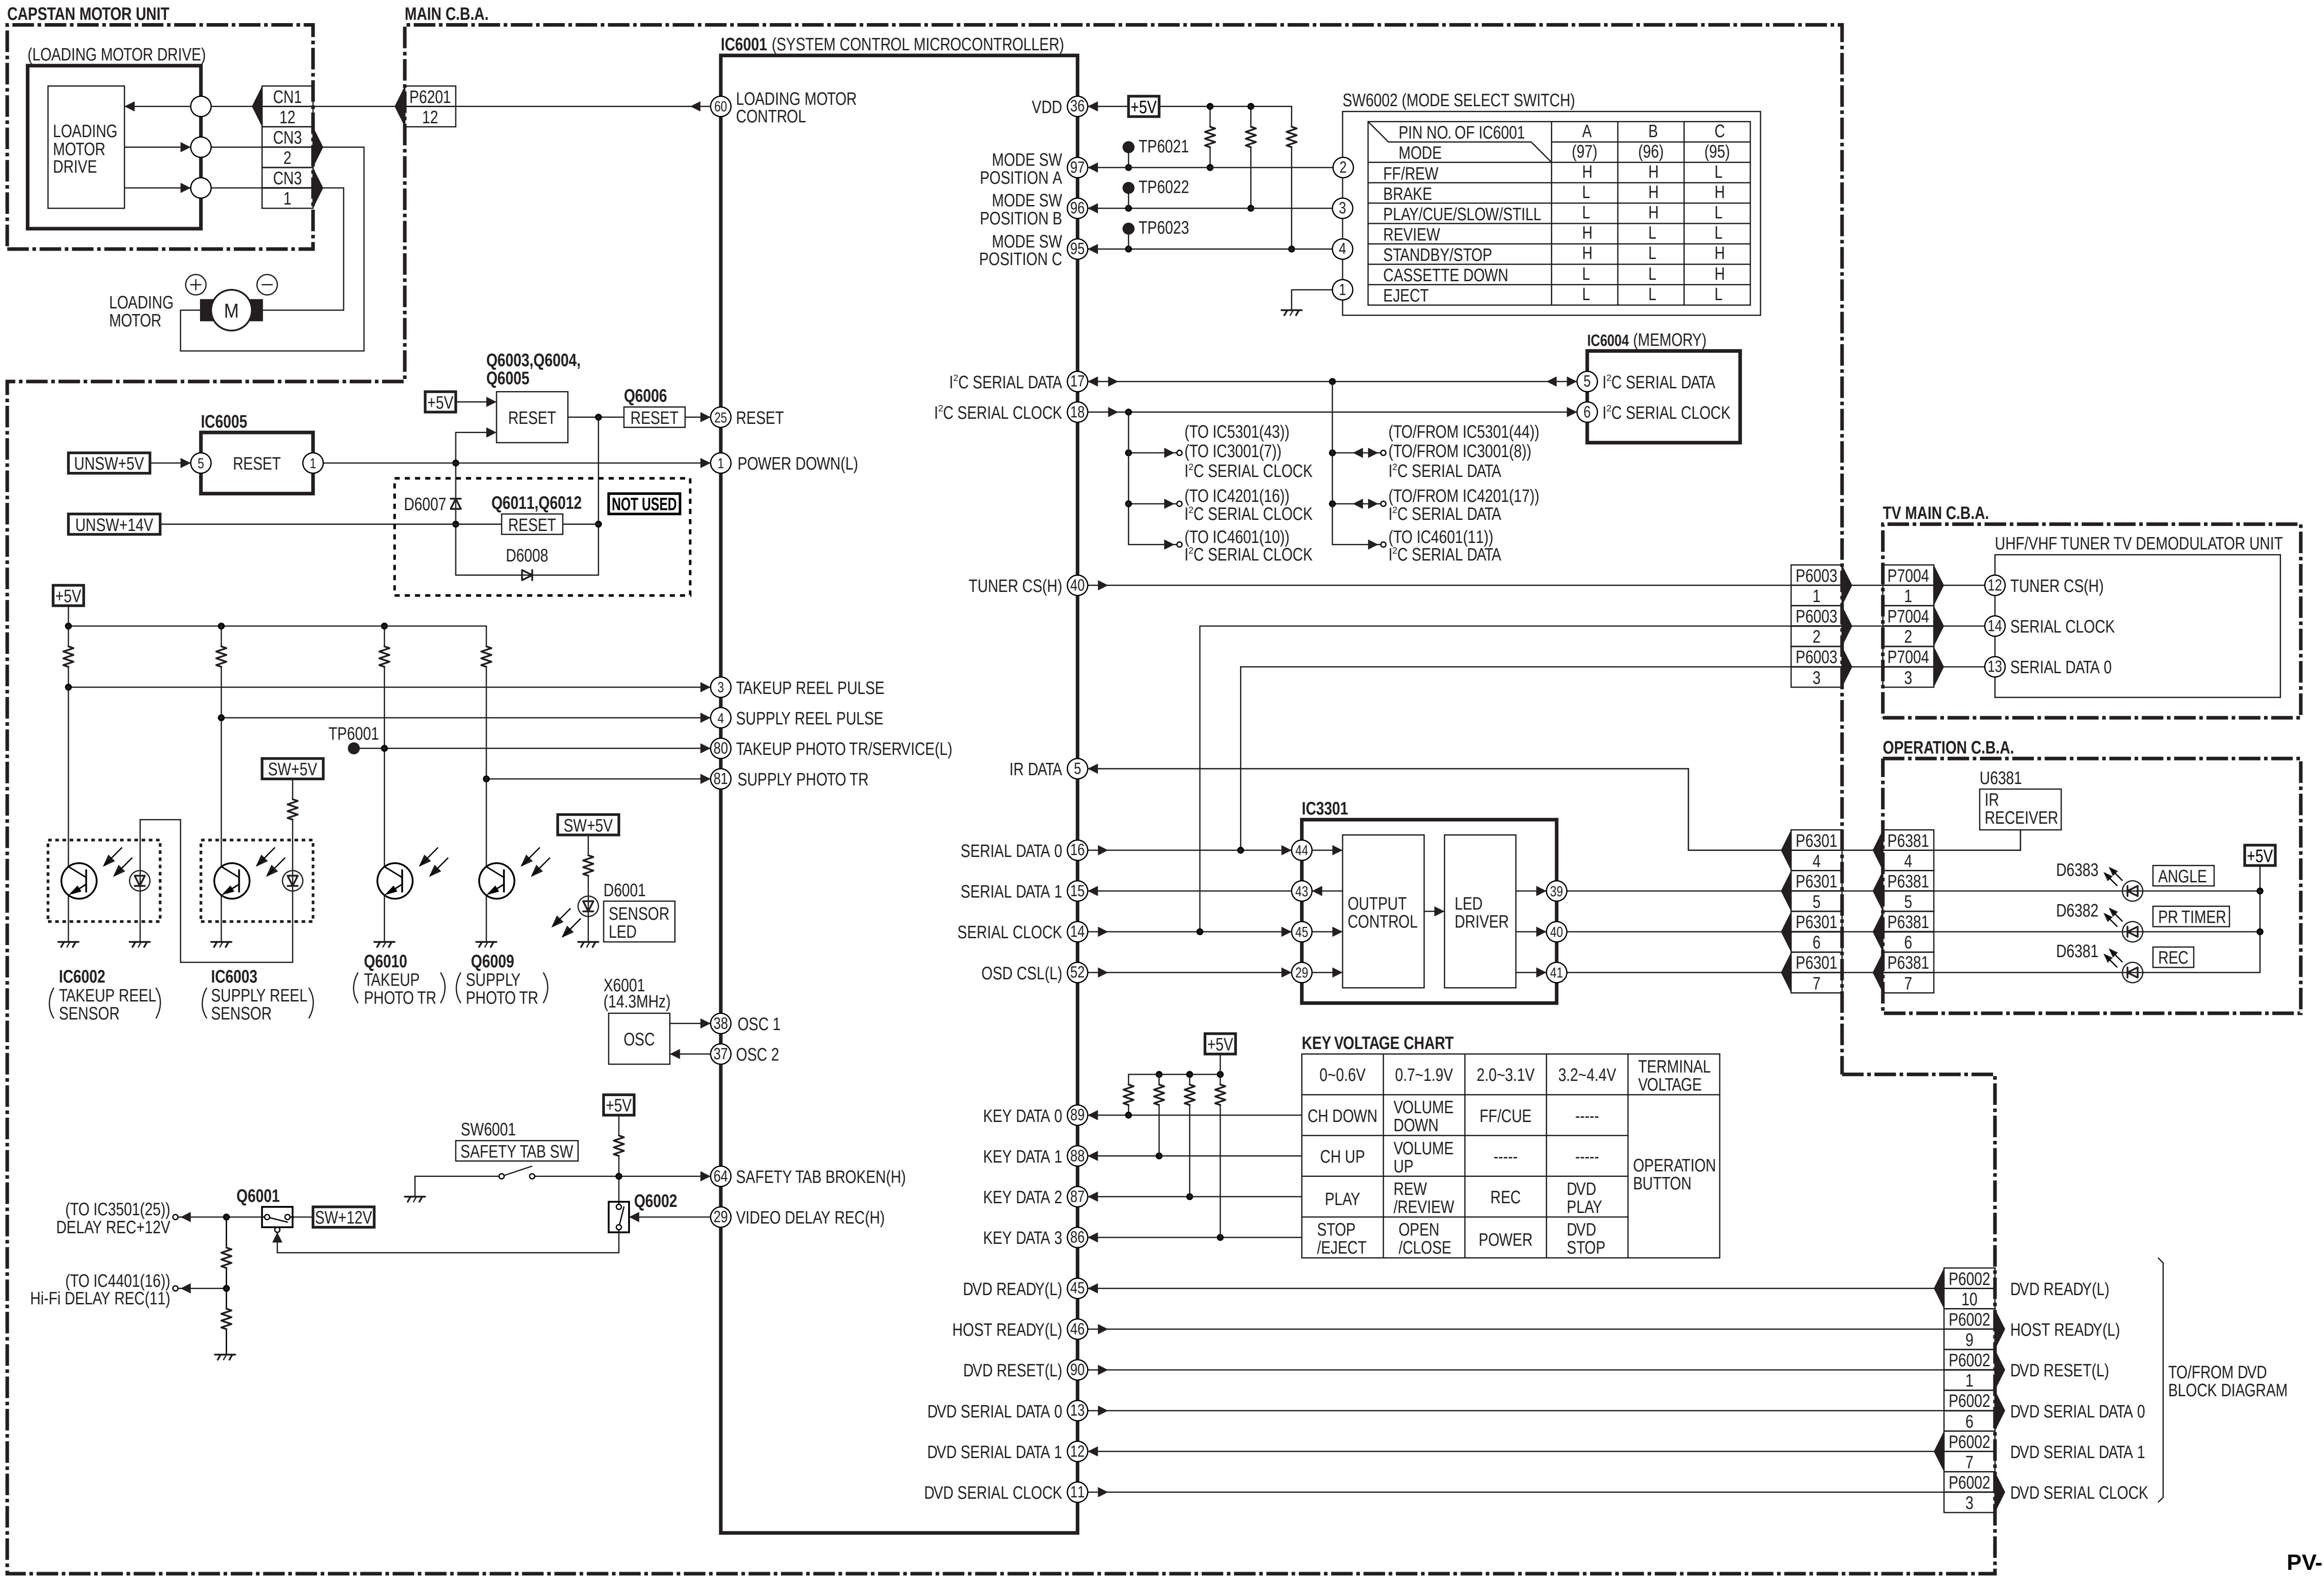
CAPSTAN MOTOR UNIT
(LOADING MOTOR DRIVE)
LOADING MOTOR DRIVE
CN1 12
CN3 2
CN3 1
LOADING MOTOR
M
MAIN C.B.A.
P6201 12
IC6001 (SYSTEM CONTROL MICROCONTROLLER)
LOADING MOTOR CONTROL 60
VDD 36
+5V
TP6021
TP6022
TP6023
MODE SW POSITION A 97
MODE SW POSITION B 96
MODE SW POSITION C 95
SW6002 (MODE SELECT SWITCH)
IC6004 (MEMORY)
I²C SERIAL DATA 17
I²C SERIAL CLOCK 18
5 I²C SERIAL DATA
6 I²C SERIAL CLOCK
(TO IC5301(43))
(TO IC3001(7))
I²C SERIAL CLOCK
(TO IC4201(16))
I²C SERIAL CLOCK
(TO IC4601(10))
I²C SERIAL CLOCK
(TO/FROM IC5301(44))
(TO/FROM IC3001(8))
I²C SERIAL DATA
(TO/FROM IC4201(17))
I²C SERIAL DATA
(TO IC4601(11))
I²C SERIAL DATA
Q6003,Q6004, Q6005
RESET
Q6006
RESET
25 RESET
IC6005
UNSW+5V
RESET
1 POWER DOWN(L)
UNSW+14V
D6007
Q6011,Q6012
RESET
NOT USED
D6008
TV MAIN C.B.A.
UHF/VHF TUNER TV DEMODULATOR UNIT
TUNER CS(H) 40
P6003 1
P6003 2
P6003 3
P7004 1
P7004 2
P7004 3
12 TUNER CS(H)
14 SERIAL CLOCK
13 SERIAL DATA 0
+5V
3 TAKEUP REEL PULSE
4 SUPPLY REEL PULSE
TP6001
80 TAKEUP PHOTO TR/SERVICE(L)
81 SUPPLY PHOTO TR
SW+5V
IR DATA 5
OPERATION C.B.A.
U6381
IR RECEIVER
IC3301
OUTPUT CONTROL
LED DRIVER
SERIAL DATA 0 16
SERIAL DATA 1 15
SERIAL CLOCK 14
OSD CSL(L) 52
P6301 4
P6301 5
P6301 6
P6301 7
P6381 4
P6381 5
P6381 6
P6381 7
D6383
ANGLE
D6382
PR TIMER
D6381
REC
D6001
SENSOR LED
IC6002 (TAKEUP REEL SENSOR)
IC6003 (SUPPLY REEL SENSOR)
Q6010 (TAKEUP PHOTO TR)
Q6009 (SUPPLY PHOTO TR)
X6001 (14.3MHz)
OSC
38 OSC 1
37 OSC 2
KEY DATA 0 89
KEY DATA 1 88
KEY DATA 2 87
KEY DATA 3 86
SW6001
SAFETY TAB SW
64 SAFETY TAB BROKEN(H)
Q6001
SW+12V
Q6002
29 VIDEO DELAY REC(H)
(TO IC3501(25)) DELAY REC+12V
(TO IC4401(16)) Hi-Fi DELAY REC(11)
DVD READY(L) 45
HOST READY(L) 46
DVD RESET(L) 90
DVD SERIAL DATA 0 13
DVD SERIAL DATA 1 12
DVD SERIAL CLOCK 11
P6002 10
P6002 9
P6002 1
P6002 6
P6002 7
P6002 3
DVD READY(L)
HOST READY(L)
DVD RESET(L)
DVD SERIAL DATA 0
DVD SERIAL DATA 1
DVD SERIAL CLOCK
TO/FROM DVD BLOCK DIAGRAM

SW6002 (MODE SELECT SWITCH)

PIN NO. OF IC6001 / MODE	A (97)	B (96)	C (95)
FF/REW	H	H	L
BRAKE	L	H	H
PLAY/CUE/SLOW/STILL	L	H	L
REVIEW	H	L	L
STANDBY/STOP	H	L	H
CASSETTE DOWN	L	L	H
EJECT	L	L	L

KEY VOLTAGE CHART

0~0.6V	0.7~1.9V	2.0~3.1V	3.2~4.4V	TERMINAL VOLTAGE
CH DOWN	VOLUME DOWN	FF/CUE	-----	OPERATION BUTTON
CH UP	VOLUME UP	-----	-----	
PLAY	REW /REVIEW	REC	DVD PLAY	
STOP /EJECT	OPEN /CLOSE	POWER	DVD STOP	

SERVO BLOCK DIAGRAM

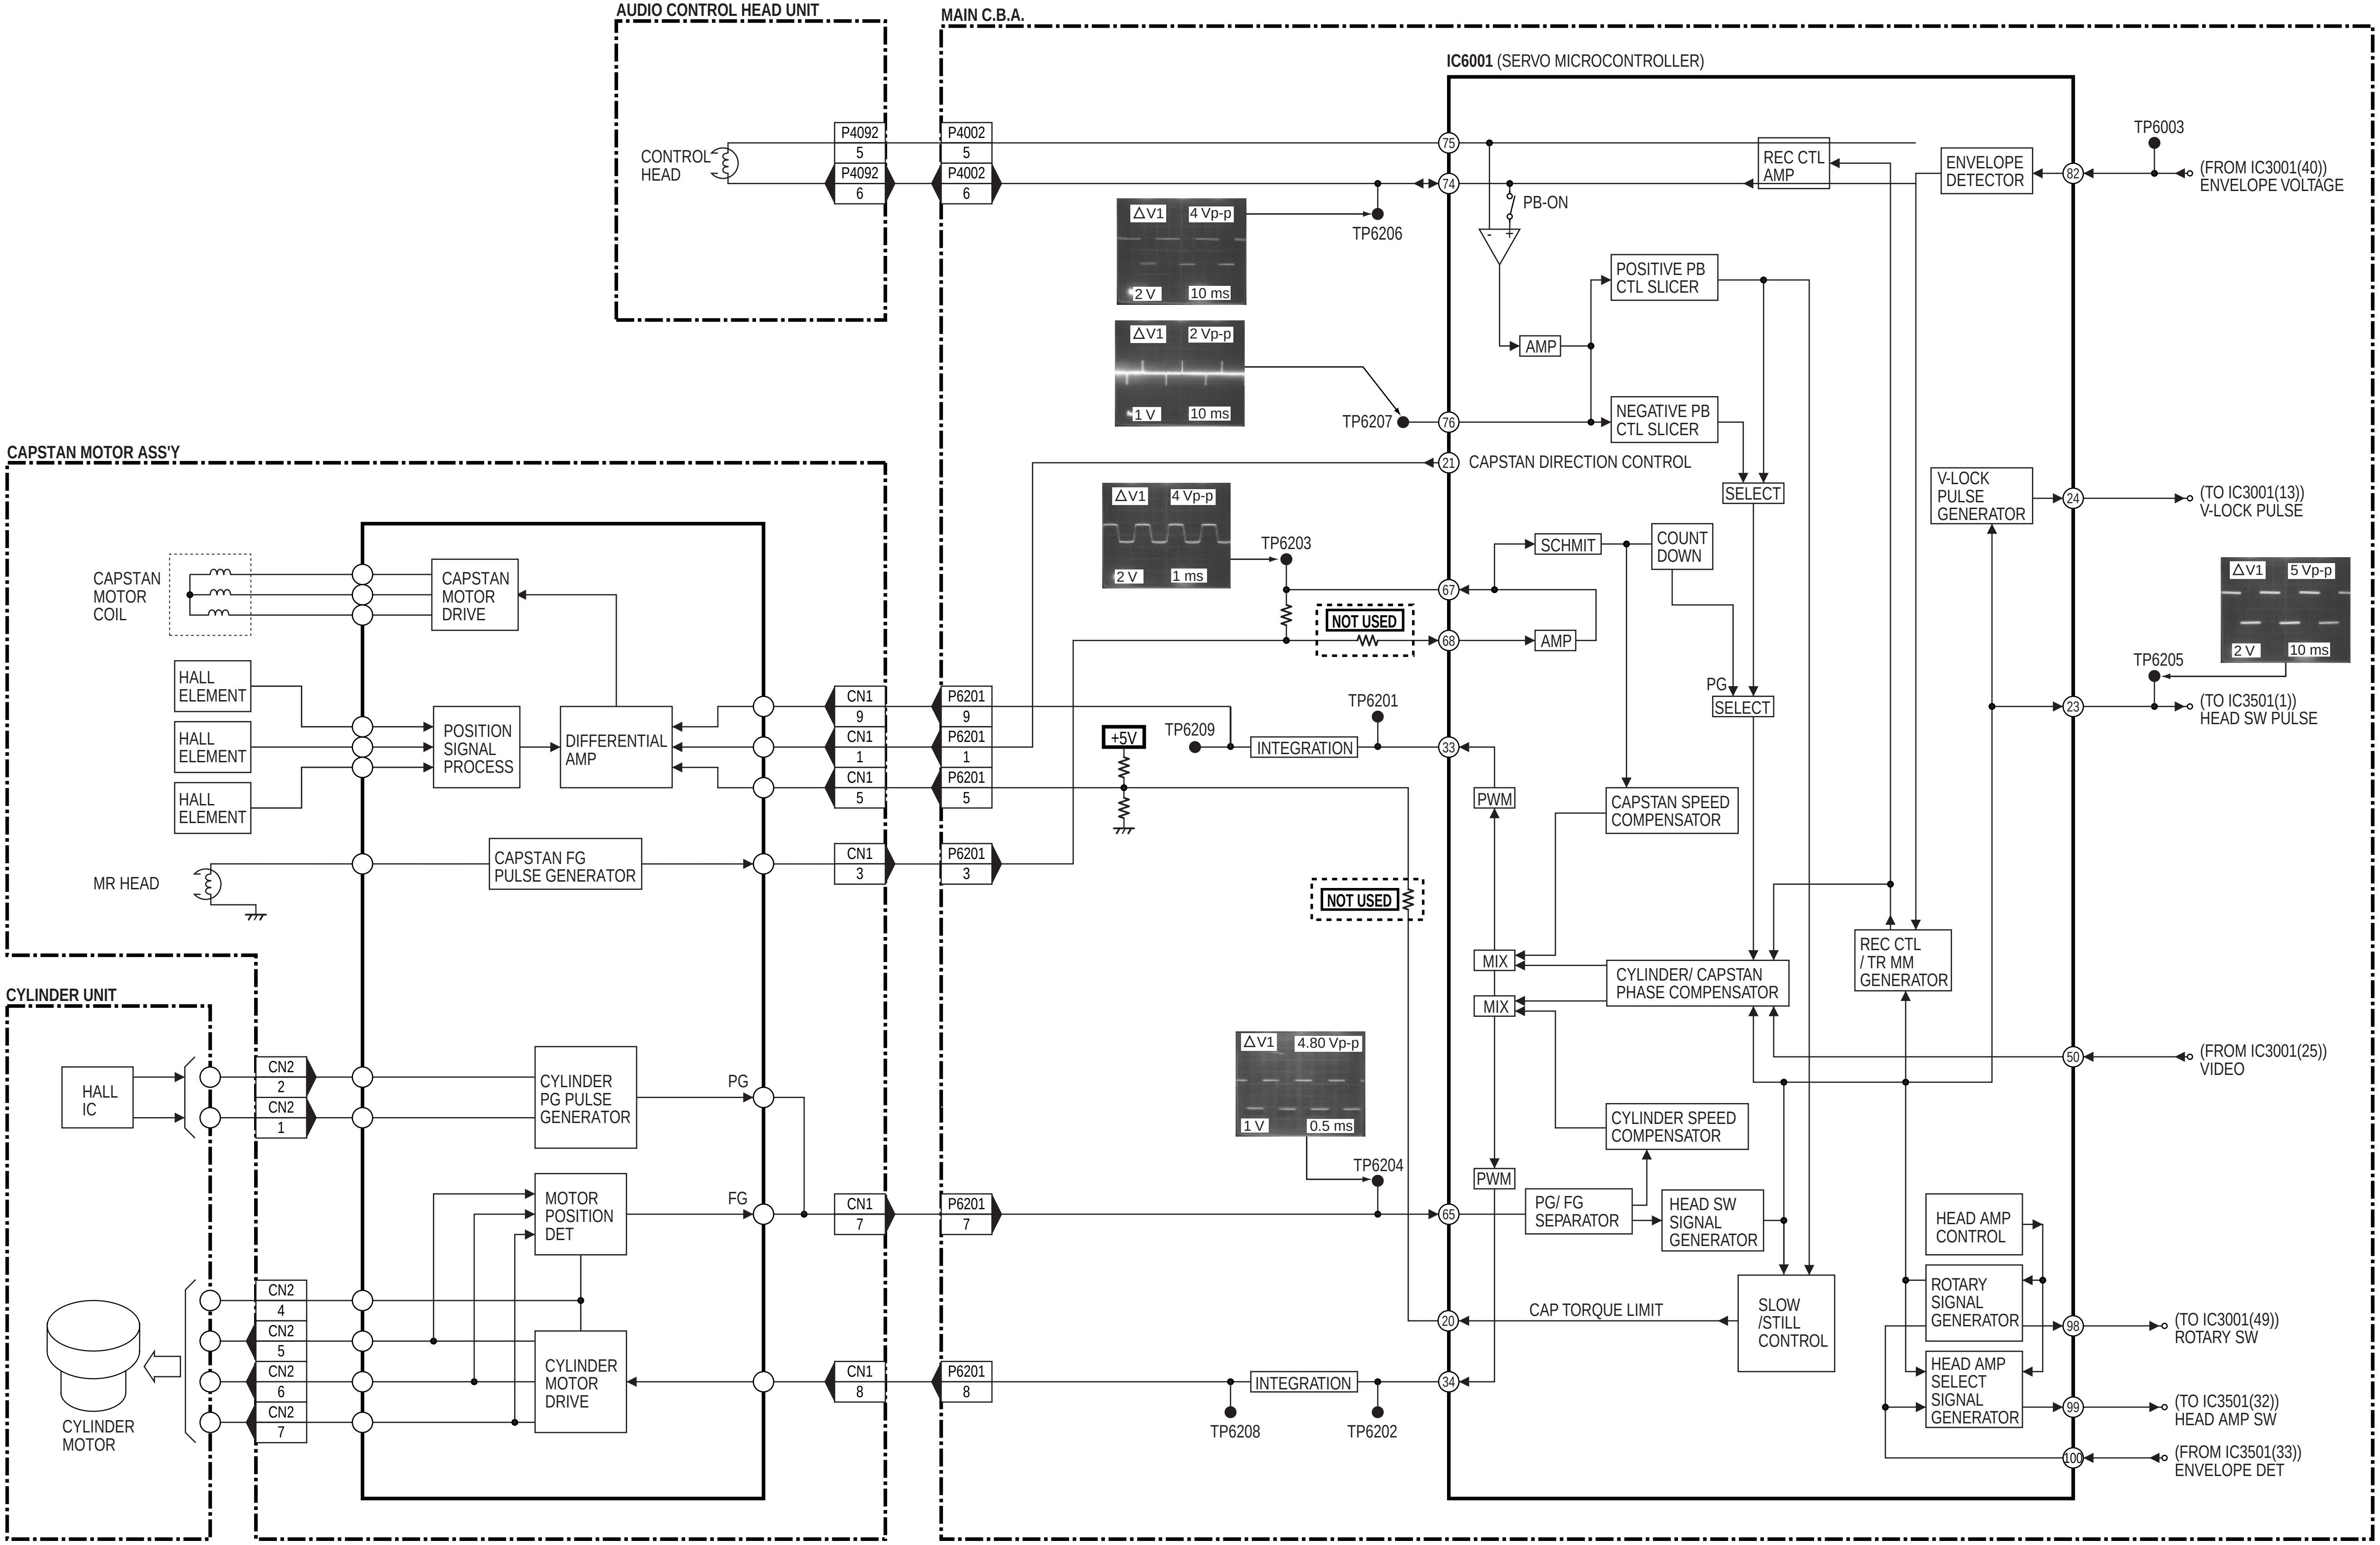
AUDIO CONTROL HEAD UNIT
CONTROL HEAD
P4092 5
P4092 6
MAIN C.B.A.
P4002 5
P4002 6
IC6001 (SERVO MICROCONTROLLER)
ΔV1 4 Vp-p 2 V 10 ms
TP6206
ΔV1 2 Vp-p 1 V 10 ms
TP6207
ΔV1 4 Vp-p 2 V 1 ms
TP6203
NOT USED
ΔV1 5 Vp-p 2 V 10 ms
TP6205
TP6003
REC CTL AMP
PB-ON
ENVELOPE DETECTOR
(FROM IC3001(40)) ENVELOPE VOLTAGE
AMP
POSITIVE PB CTL SLICER
NEGATIVE PB CTL SLICER
CAPSTAN DIRECTION CONTROL
SELECT
V-LOCK PULSE GENERATOR
(TO IC3001(13)) V-LOCK PULSE
SCHMIT
COUNT DOWN
AMP
PG
SELECT
(TO IC3501(1)) HEAD SW PULSE
CAPSTAN MOTOR ASS'Y
CAPSTAN MOTOR COIL
CAPSTAN MOTOR DRIVE
HALL ELEMENT
HALL ELEMENT
HALL ELEMENT
POSITION SIGNAL PROCESS
DIFFERENTIAL AMP
CN1 9
CN1 1
CN1 5
P6201 9
P6201 1
P6201 5
+5V
TP6209
TP6201
INTEGRATION
PWM
CAPSTAN SPEED COMPENSATOR
MR HEAD
CAPSTAN FG PULSE GENERATOR
CN1 3
P6201 3
NOT USED
MIX
MIX
CYLINDER/ CAPSTAN PHASE COMPENSATOR
REC CTL / TR MM GENERATOR
CYLINDER UNIT
HALL IC
CN2 2
CN2 1
CYLINDER PG PULSE GENERATOR
PG
ΔV1 4.80 Vp-p 1 V 0.5 ms
(FROM IC3001(25)) VIDEO
CYLINDER SPEED COMPENSATOR
TP6204
MOTOR POSITION DET
FG
CN1 7
P6201 7
PWM
PG/ FG SEPARATOR
HEAD SW SIGNAL GENERATOR
HEAD AMP CONTROL
ROTARY SIGNAL GENERATOR
SLOW /STILL CONTROL
CAP TORQUE LIMIT
(TO IC3001(49)) ROTARY SW
CN2 4
CN2 5
CN2 6
CN2 7
CYLINDER MOTOR DRIVE
CYLINDER MOTOR
CN1 8
P6201 8
INTEGRATION
TP6208
TP6202
HEAD AMP SELECT SIGNAL GENERATOR
(TO IC3501(32)) HEAD AMP SW
(FROM IC3501(33)) ENVELOPE DET
75
74
76
21
67
68
33
65
20
34
82
24
23
50
98
99
100

PV-DM2792/PV-DM2792-K SERVO BLOCK DIAGRAM

TV Y/C PROCESS BLOCK DIAGRAM

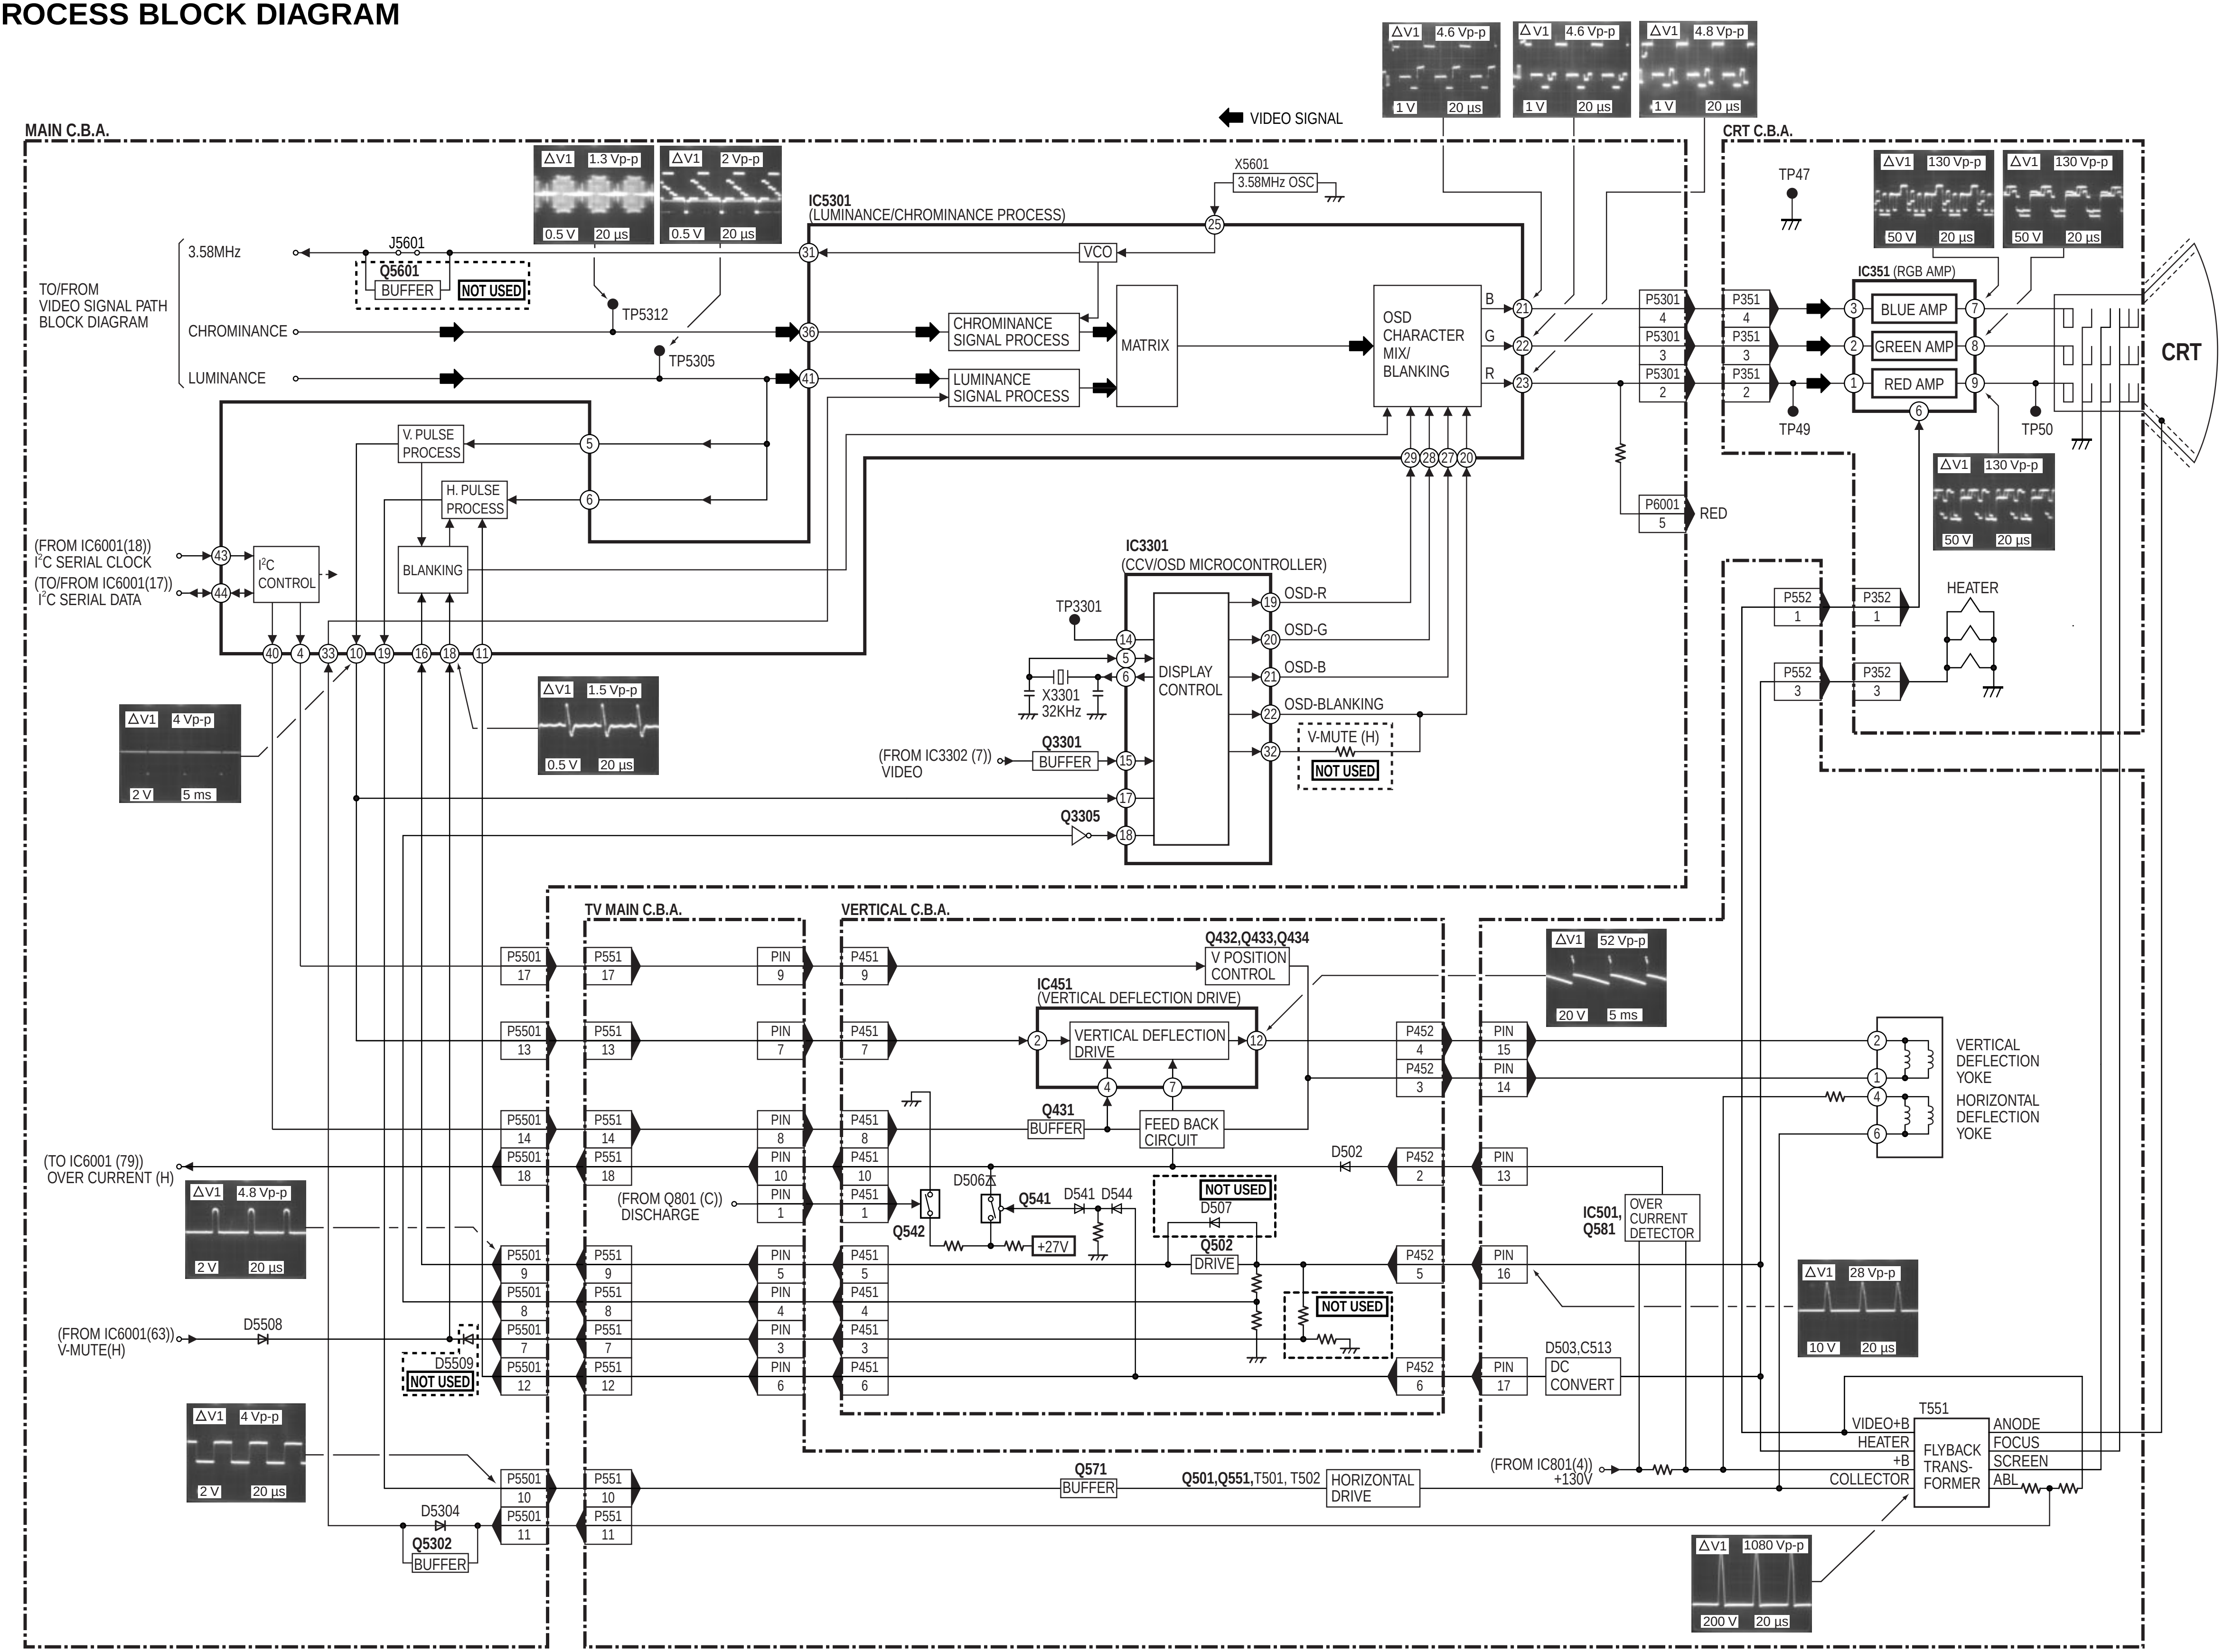

VIDEO SIGNAL
MAIN C.B.A.
CRT C.B.A.
TV MAIN C.B.A.
VERTICAL C.B.A.
IC5301
(LUMINANCE/CHROMINANCE PROCESS)
X5601
3.58MHz OSC
VCO
3.58MHz
J5601
Q5601
BUFFER
NOT USED
TO/FROM
VIDEO SIGNAL PATH
BLOCK DIAGRAM
CHROMINANCE
LUMINANCE
TP5312
TP5305
CHROMINANCE SIGNAL PROCESS
LUMINANCE SIGNAL PROCESS
MATRIX
OSD CHARACTER MIX/ BLANKING
B
G
R
V. PULSE PROCESS
H. PULSE PROCESS
BLANKING
I²C CONTROL
(FROM IC6001(18))
I²C SERIAL CLOCK
(TO/FROM IC6001(17))
I²C SERIAL DATA
IC3301
(CCV/OSD MICROCONTROLLER)
TP3301
DISPLAY CONTROL
X3301
32KHz
OSD-R
OSD-G
OSD-B
OSD-BLANKING
V-MUTE (H)
NOT USED
(FROM IC3302 (7))
VIDEO
Q3301
BUFFER
Q3305
P5301
P351
P6001
RED
TP47
TP49
TP50
IC351 (RGB AMP)
BLUE AMP
GREEN AMP
RED AMP
CRT
HEATER
P552
P352
ΔV1 1.3 Vp-p 0.5 V 20 µs
ΔV1 2 Vp-p 0.5 V 20 µs
ΔV1 4.6 Vp-p 1 V 20 µs
ΔV1 4.6 Vp-p 1 V 20 µs
ΔV1 4.8 Vp-p 1 V 20 µs
ΔV1 130 Vp-p 50 V 20 µs
ΔV1 130 Vp-p 50 V 20 µs
ΔV1 130 Vp-p 50 V 20 µs
ΔV1 4 Vp-p 2 V 5 ms
ΔV1 1.5 Vp-p 0.5 V 20 µs
ΔV1 52 Vp-p 20 V 5 ms
ΔV1 4.8 Vp-p 2 V 20 µs
ΔV1 28 Vp-p 10 V 20 µs
ΔV1 4 Vp-p 2 V 20 µs
ΔV1 1080 Vp-p 200 V 20 µs
P5501
P551
PIN
P451
P452
Q432,Q433,Q434
V POSITION CONTROL
IC451
(VERTICAL DEFLECTION DRIVE)
VERTICAL DEFLECTION DRIVE
Q431
BUFFER
FEED BACK CIRCUIT
(TO IC6001 (79))
OVER CURRENT (H)
(FROM Q801 (C))
DISCHARGE
D506
Q541
D541
D544
Q542
+27V
D507
D502
Q502
DRIVE
IC501,
Q581
OVER CURRENT DETECTOR
(FROM IC6001(63))
V-MUTE(H)
D5508
D5509
D503,C513
DC CONVERT
VERTICAL DEFLECTION YOKE
HORIZONTAL DEFLECTION YOKE
T551
VIDEO+B
HEATER
+B
COLLECTOR
FLYBACK TRANS-FORMER
ANODE
FOCUS
SCREEN
ABL
(FROM IC801(4))
+130V
Q571
BUFFER
Q501,Q551,T501, T502
HORIZONTAL DRIVE
D5304
Q5302
BUFFER

DVD BLOCK DIAGRAM

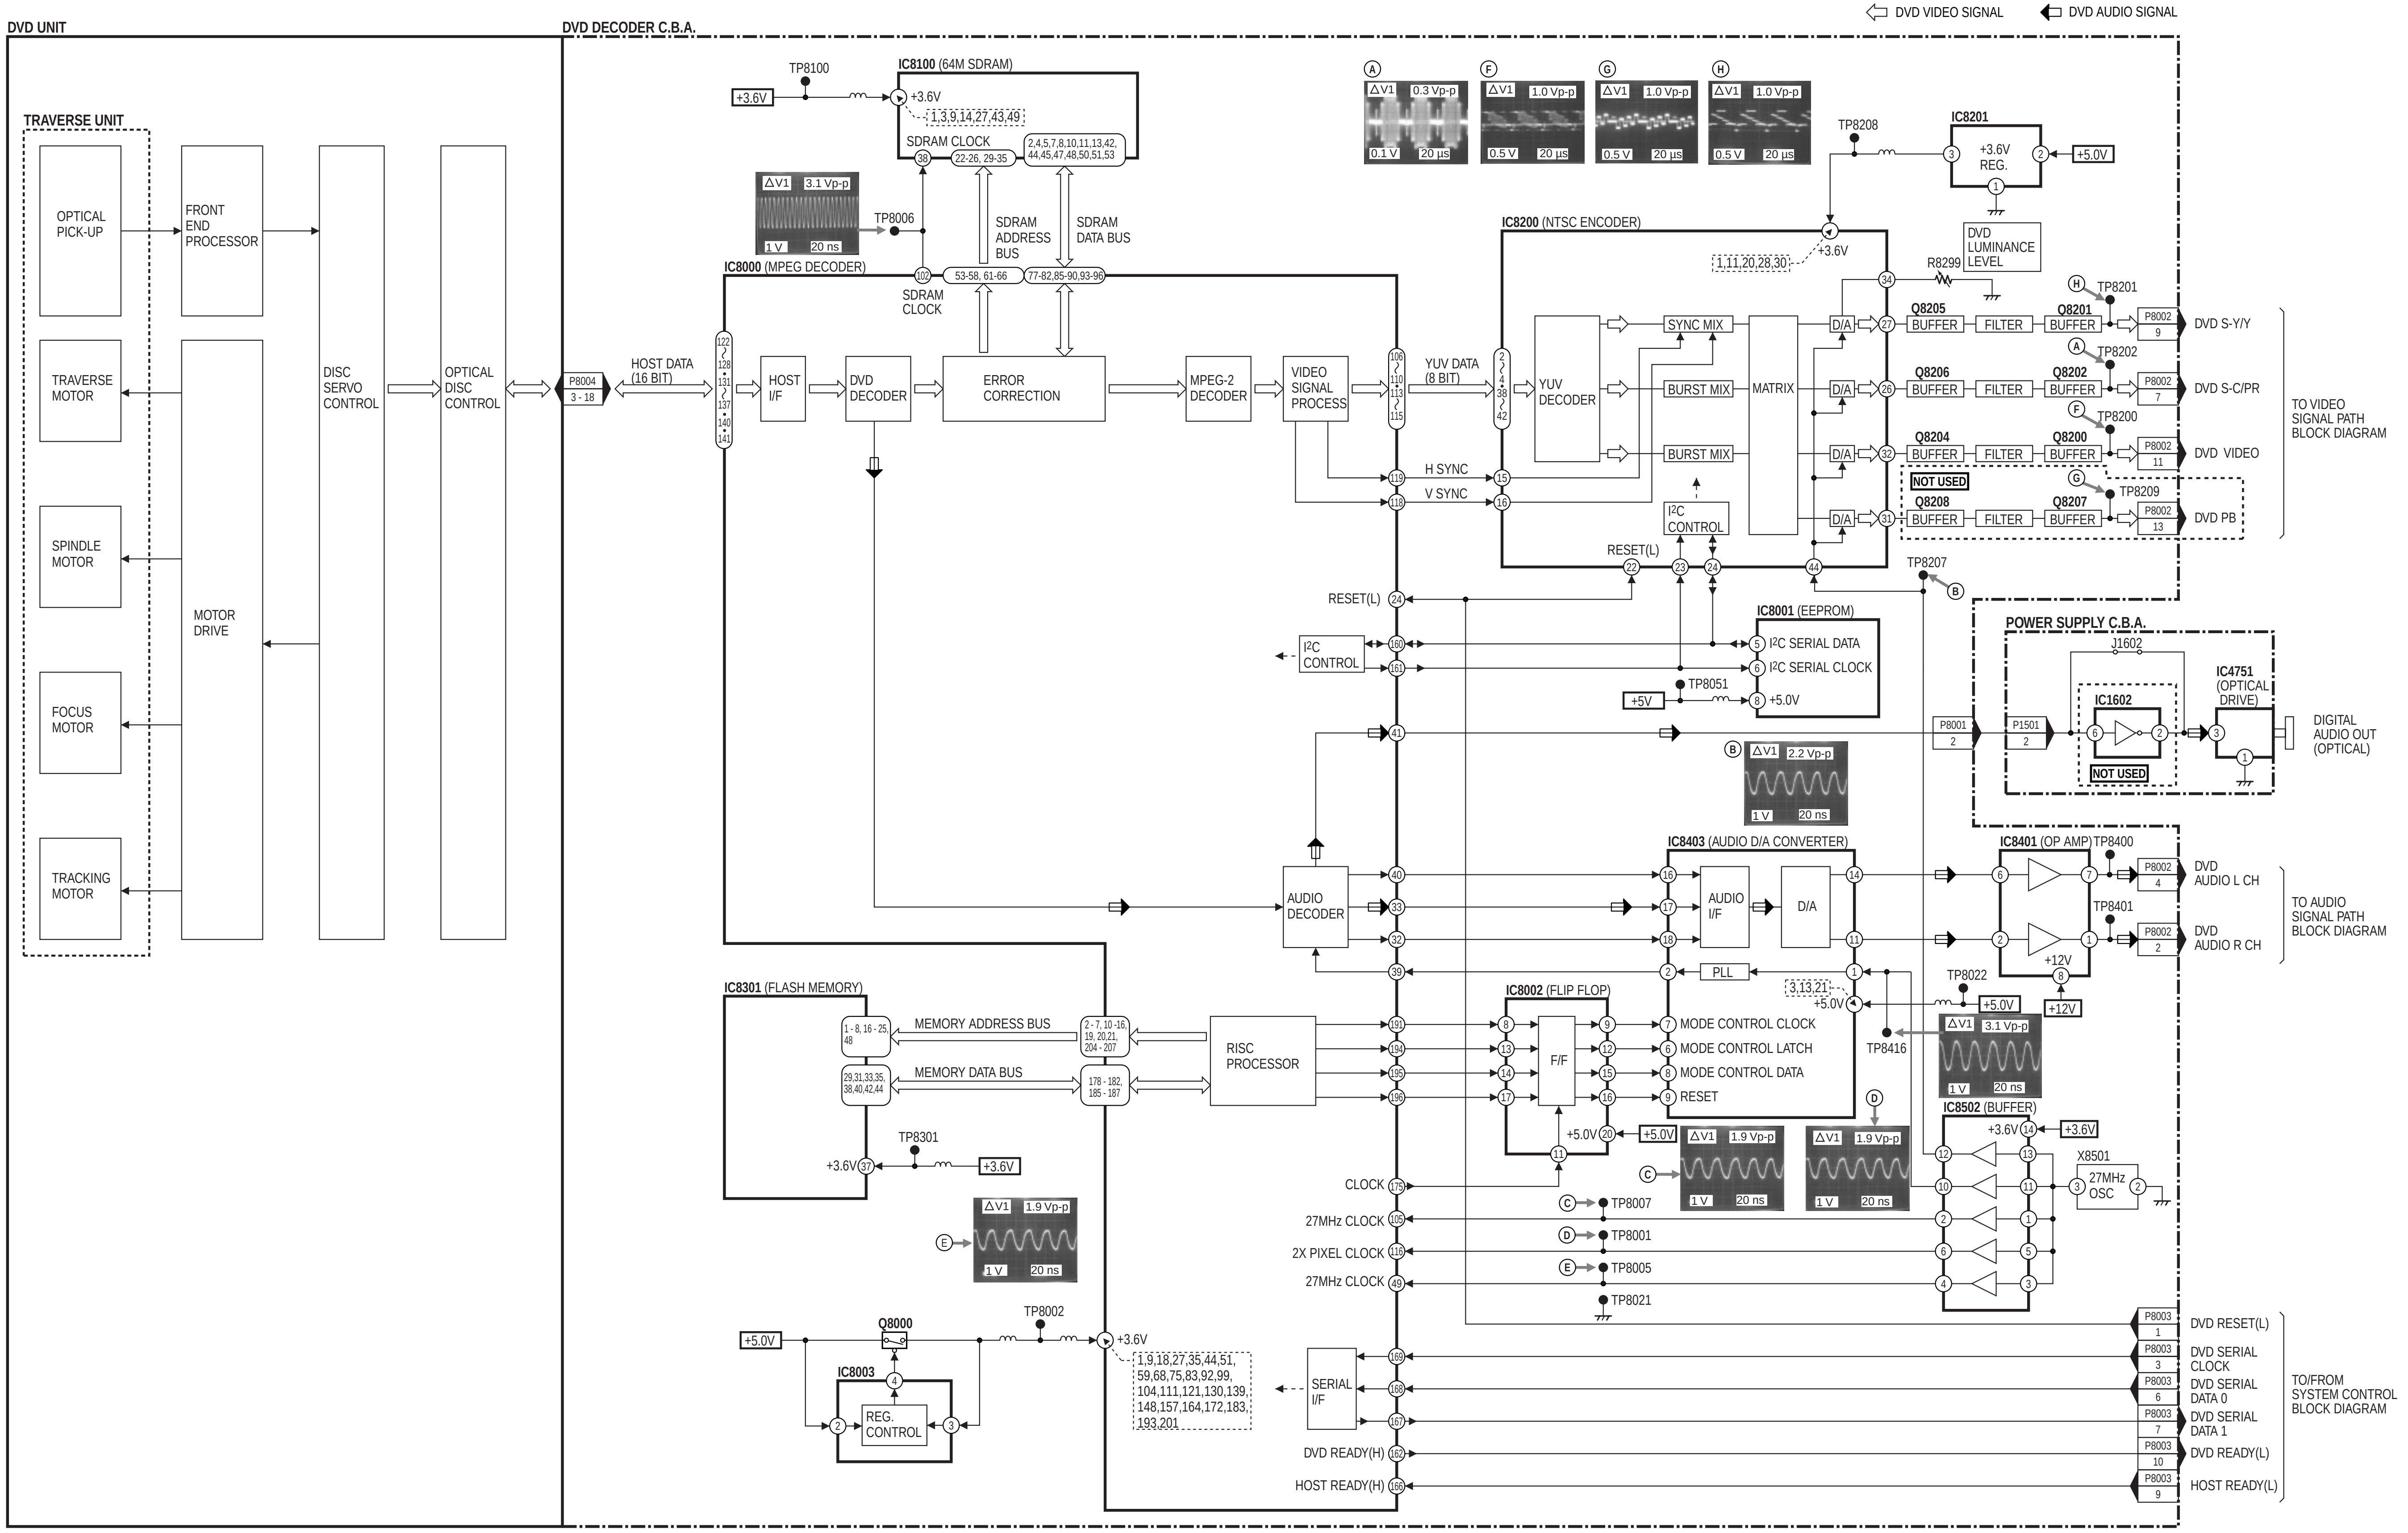
DVD VIDEO SIGNAL
DVD AUDIO SIGNAL
DVD UNIT
DVD DECODER C.B.A.
TRAVERSE UNIT
OPTICAL PICK-UP
FRONT END PROCESSOR
DISC SERVO CONTROL
OPTICAL DISC CONTROL
TRAVERSE MOTOR
SPINDLE MOTOR
MOTOR DRIVE
FOCUS MOTOR
TRACKING MOTOR
P8004
3 - 18
HOST DATA (16 BIT)
IC8100 (64M SDRAM)
TP8100
+3.6V
1,3,9,14,27,43,49
SDRAM CLOCK
22-26, 29-35
2,4,5,7,8,10,11,13,42, 44,45,47,48,50,51,53
SDRAM ADDRESS BUS
SDRAM DATA BUS
TP8006
ΔV1 3.1 Vp-p
1 V 20 ns
IC8000 (MPEG DECODER)
SDRAM CLOCK
53-58, 61-66
77-82,85-90,93-96
HOST I/F
DVD DECODER
ERROR CORRECTION
MPEG-2 DECODER
VIDEO SIGNAL PROCESS
YUV DATA (8 BIT)
H SYNC
V SYNC
A ΔV1 0.3 Vp-p 0.1 V 20 µs
F ΔV1 1.0 Vp-p 0.5 V 20 µs
G ΔV1 1.0 Vp-p 0.5 V 20 µs
H ΔV1 1.0 Vp-p 0.5 V 20 µs
TP8208
IC8201
+3.6V REG.
+5.0V
IC8200 (NTSC ENCODER)
1,11,20,28,30
+3.6V
DVD LUMINANCE LEVEL
R8299
YUV DECODER
SYNC MIX
BURST MIX
BURST MIX
MATRIX
I2C CONTROL
D/A
Q8205 BUFFER FILTER Q8201 BUFFER
Q8206 BUFFER FILTER Q8202 BUFFER
Q8204 BUFFER FILTER Q8200 BUFFER
NOT USED
Q8208 BUFFER FILTER Q8207 BUFFER
TP8201
TP8202
TP8200
TP8209
P8002 9 DVD S-Y/Y
P8002 7 DVD S-C/PR
P8002 11 DVD VIDEO
P8002 13 DVD PB
TO VIDEO SIGNAL PATH BLOCK DIAGRAM
RESET(L)
TP8207
RESET(L)
I2C CONTROL
IC8001 (EEPROM)
I2C SERIAL DATA
I2C SERIAL CLOCK
TP8051
+5V
+5.0V
POWER SUPPLY C.B.A.
J1602
IC4751 (OPTICAL DRIVE)
IC1602
NOT USED
P8001 2
P1501 2
DIGITAL AUDIO OUT (OPTICAL)
B ΔV1 2.2 Vp-p 1 V 20 ns
AUDIO DECODER
IC8403 (AUDIO D/A CONVERTER)
AUDIO I/F
D/A
PLL
IC8401 (OP AMP)
TP8400
TP8401
+12V
P8002 4 DVD AUDIO L CH
P8002 2 DVD AUDIO R CH
TO AUDIO SIGNAL PATH BLOCK DIAGRAM
IC8301 (FLASH MEMORY)
1 - 8, 16 - 25, 48
MEMORY ADDRESS BUS
2 - 7, 10 -16, 19, 20,21, 204 - 207
29,31,33,35, 38,40,42,44
MEMORY DATA BUS
178 - 182, 185 - 187
RISC PROCESSOR
TP8301
+3.6V
IC8002 (FLIP FLOP)
F/F
+5.0V
MODE CONTROL CLOCK
MODE CONTROL LATCH
MODE CONTROL DATA
RESET
3,13,21
+5.0V
TP8022
TP8416
ΔV1 3.1 Vp-p 1 V 20 ns
IC8502 (BUFFER)
+3.6V
X8501
27MHz OSC
C ΔV1 1.9 Vp-p 1 V 20 ns
D ΔV1 1.9 Vp-p 1 V 20 ns
E ΔV1 1.9 Vp-p 1 V 20 ns
CLOCK
27MHz CLOCK
2X PIXEL CLOCK
27MHz CLOCK
TP8007
TP8001
TP8005
TP8021
TP8002
Q8000
IC8003
REG. CONTROL
+5.0V
+3.6V
1,9,18,27,35,44,51, 59,68,75,83,92,99, 104,111,121,130,139, 148,157,164,172,183, 193,201
SERIAL I/F
DVD READY(H)
HOST READY(H)
P8003 1 DVD RESET(L)
P8003 3 DVD SERIAL CLOCK
P8003 6 DVD SERIAL DATA 0
P8003 7 DVD SERIAL DATA 1
P8003 10 DVD READY(L)
P8003 9 HOST READY(L)
TO/FROM SYSTEM CONTROL BLOCK DIAGRAM

PV-DM2792/PV-DM2792-K DVD BLOCK DIAGRAM

Troubleshooting Hints

How to confirm which of DVD circuit or other circuits is defective.

1) Confirm DVD operation and VCR operation

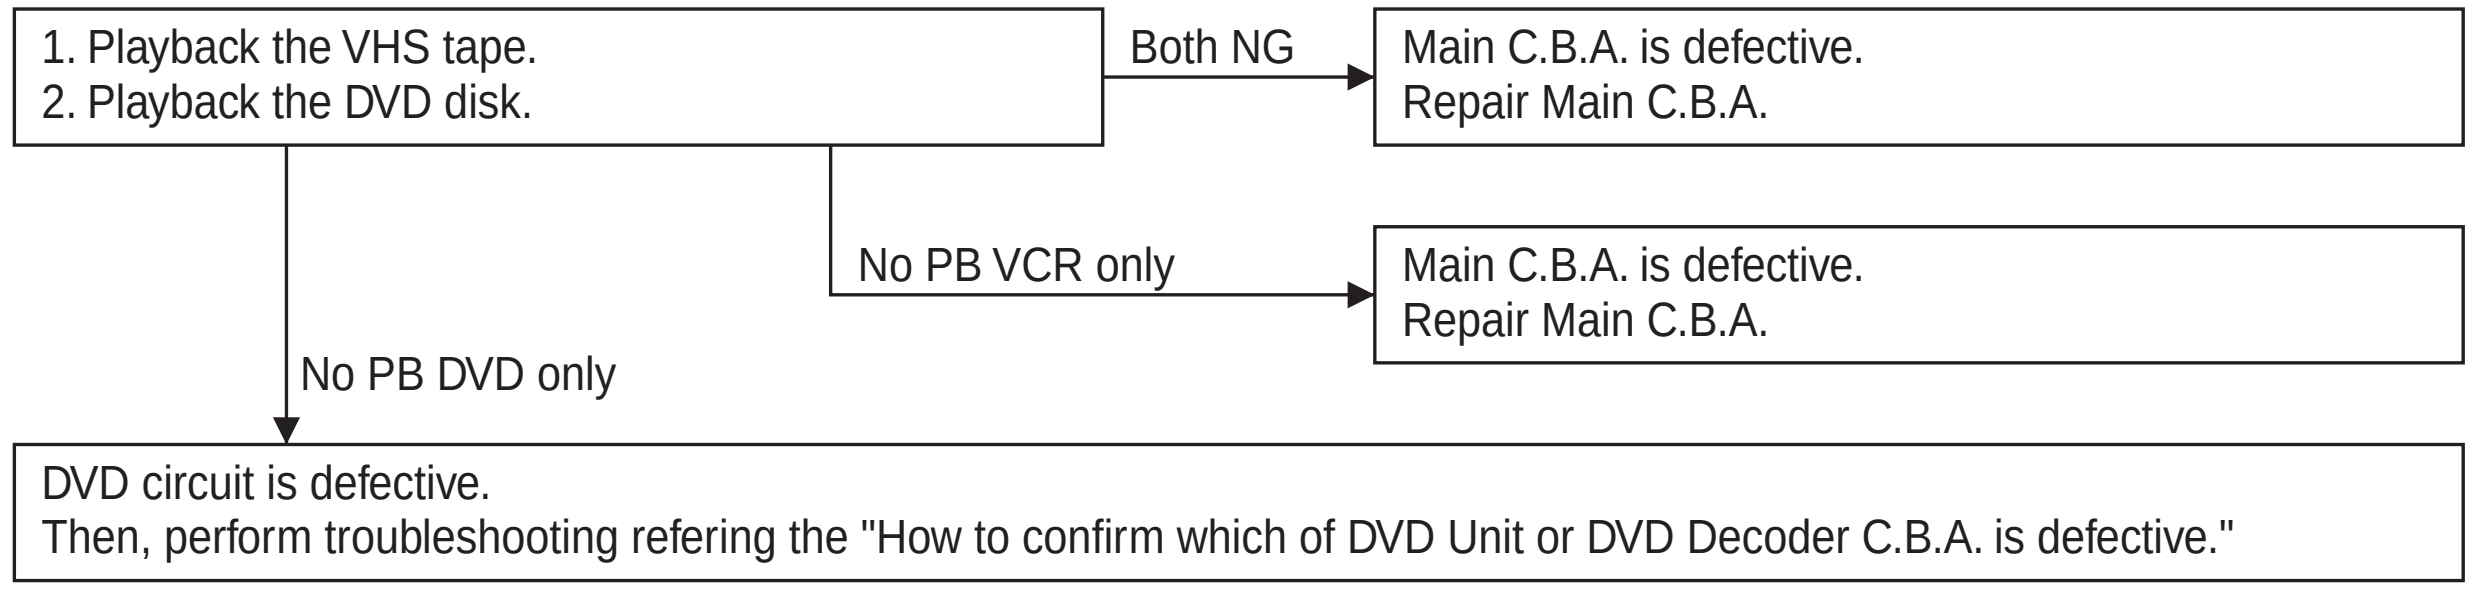
1. Playback the VHS tape.
2. Playback the DVD disk.
Both NG
Main C.B.A. is defective.
Repair Main C.B.A.
No PB VCR only
Main C.B.A. is defective.
Repair Main C.B.A.
No PB DVD only
DVD circuit is defective.
Then, perform troubleshooting refering the "How to confirm which of DVD Unit or DVD Decoder C.B.A. is defective."

How to confirm which of DVD Unit or DVD Decoder C.B.A. is defective.

NOTE:
Host communication may not be done correctly between IC6001 on the Main C.B.A. and IC8000 on the DVD Decoder C.B.A. when there is a problem on the DVD Decoder C.B.A.
In that case, the unit is automatically switched to VCR mode after approx. 30 seconds even in DVD mode becouse the DVD Decoder C.B.A. is shut down. (Check the VCR mode indicator and DVD mode indicator on the Multi Function Display.)
Check the voltage during 30 seconds which the unit can be remained in DVD mode.

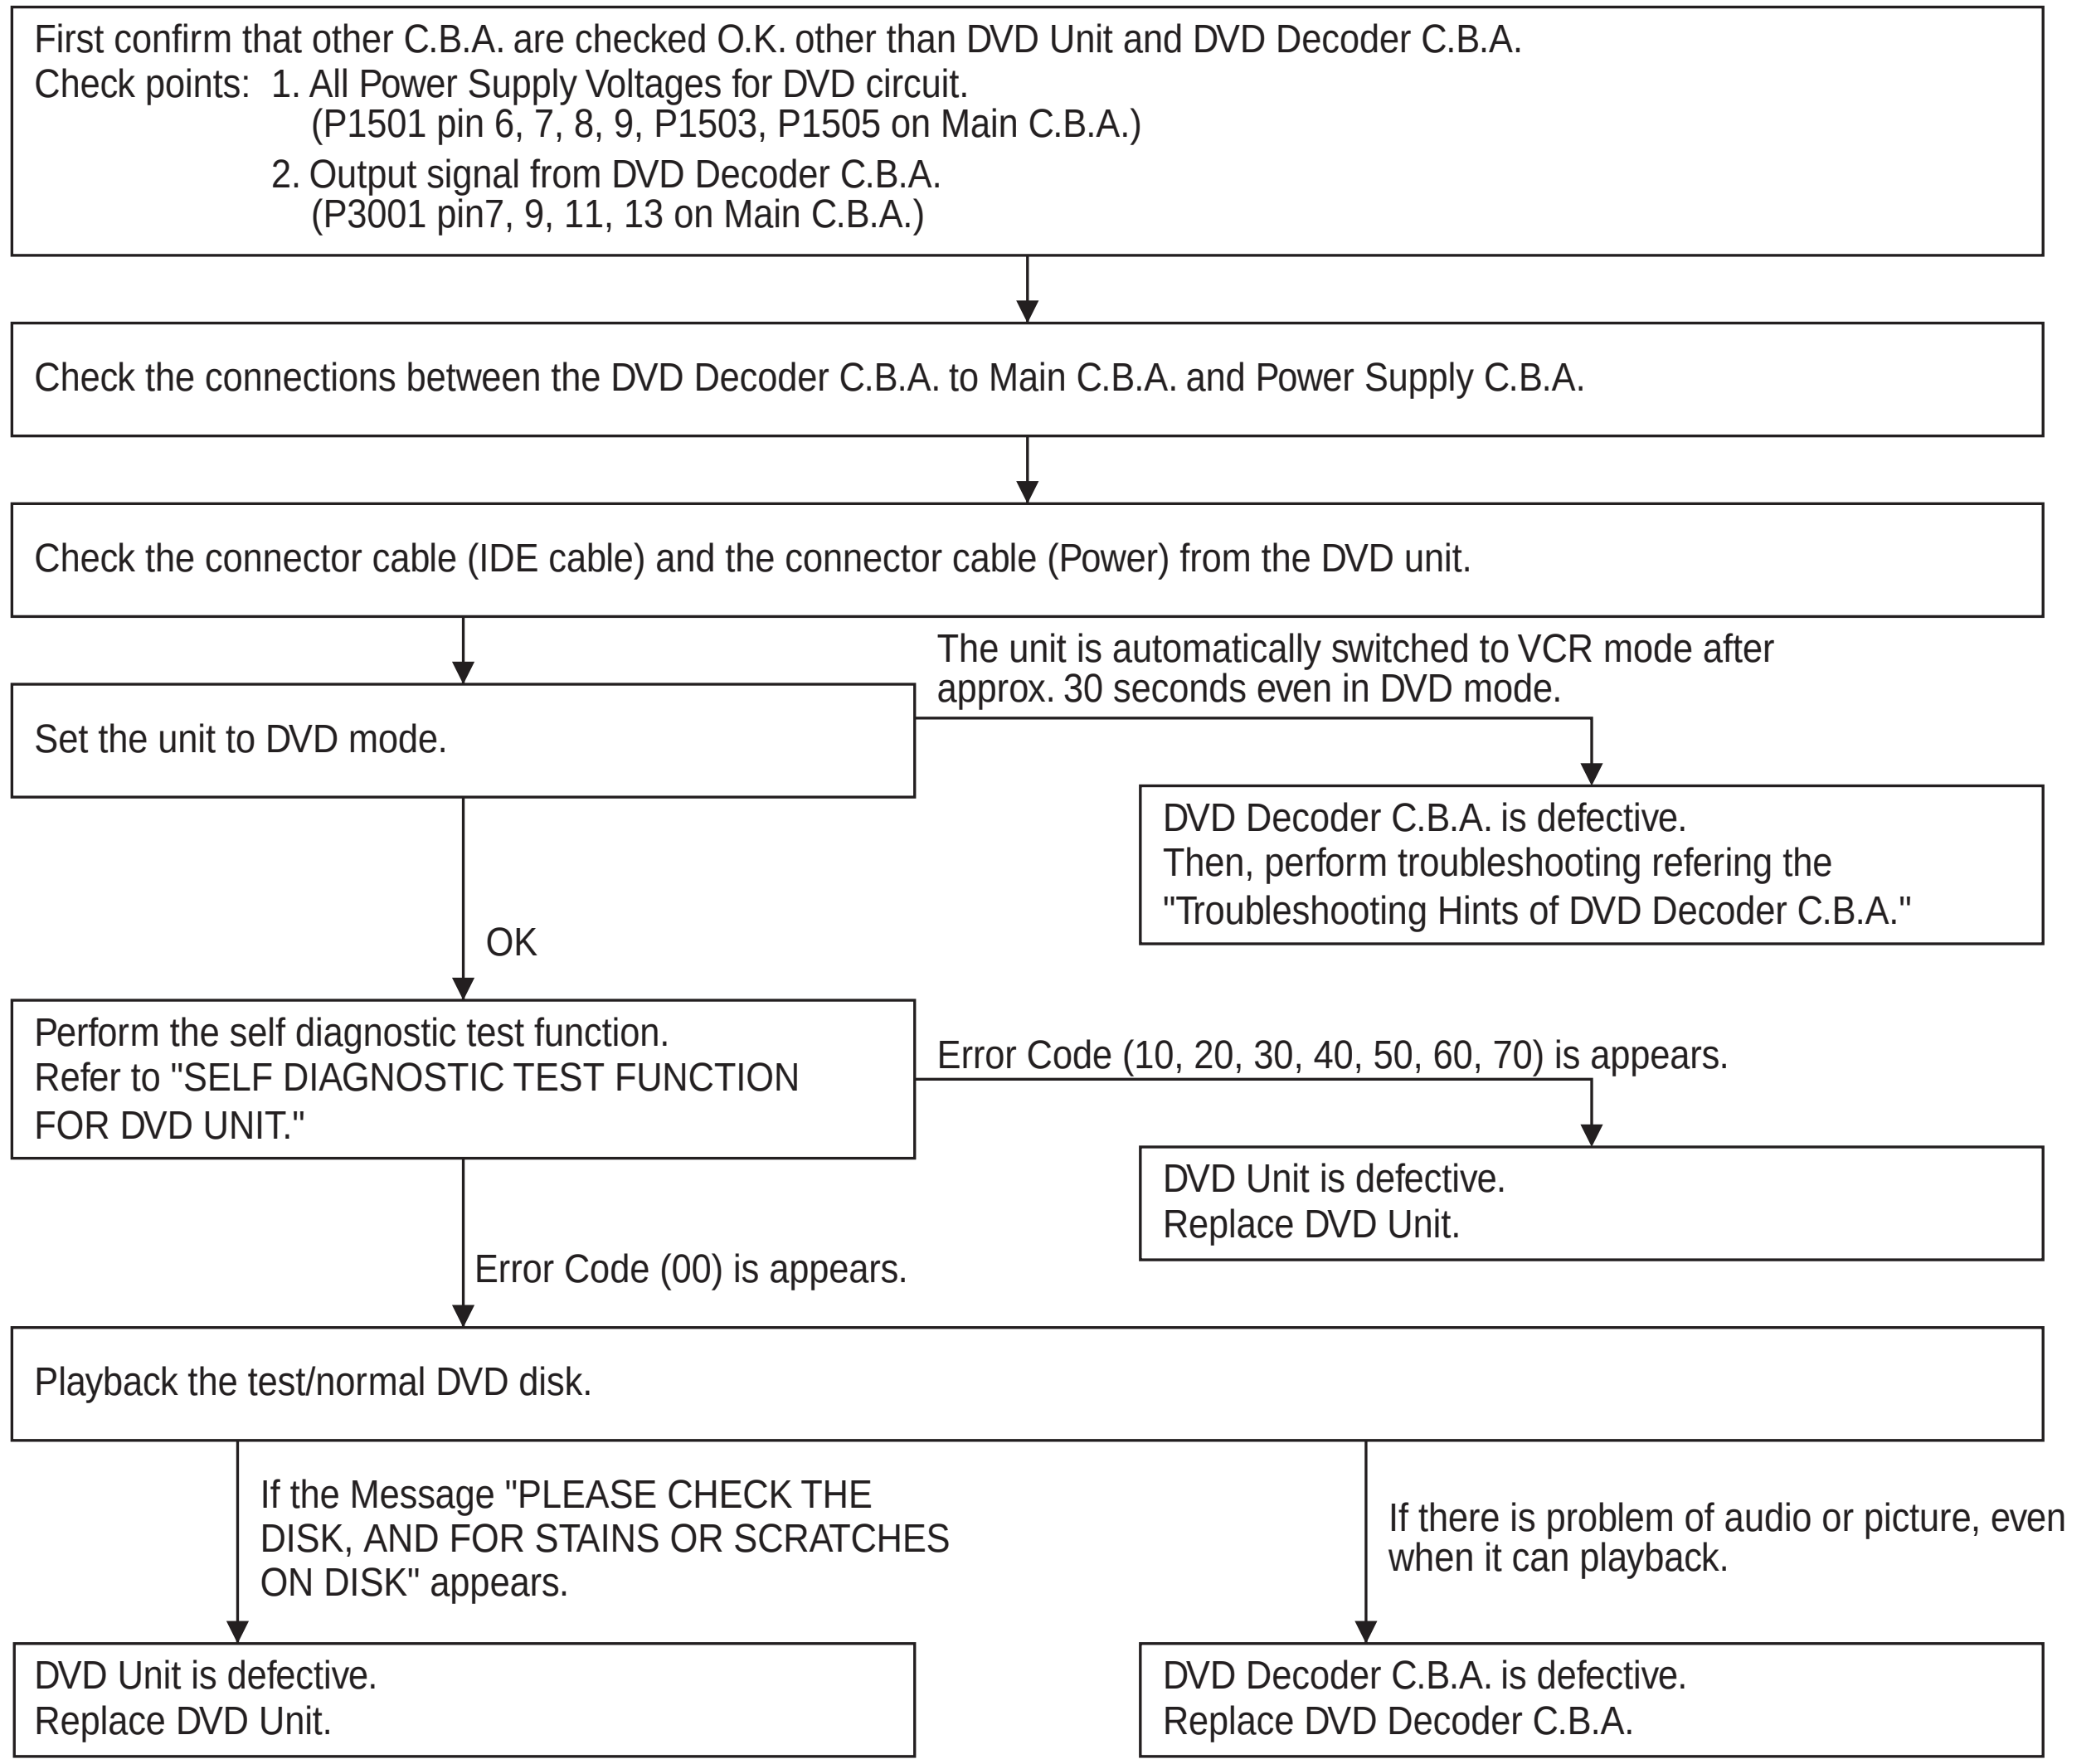
First confirm that other C.B.A. are checked O.K. other than DVD Unit and DVD Decoder C.B.A.
Check points: 1. All Power Supply Voltages for DVD circuit.
(P1501 pin 6, 7, 8, 9, P1503, P1505 on Main C.B.A.)
2. Output signal from DVD Decoder C.B.A.
(P3001 pin7, 9, 11, 13 on Main C.B.A.)
Check the connections between the DVD Decoder C.B.A. to Main C.B.A. and Power Supply C.B.A.
Check the connector cable (IDE cable) and the connector cable (Power) from the DVD unit.
Set the unit to DVD mode.
The unit is automatically switched to VCR mode after approx. 30 seconds even in DVD mode.
DVD Decoder C.B.A. is defective.
Then, perform troubleshooting refering the "Troubleshooting Hints of DVD Decoder C.B.A."
OK
Perform the self diagnostic test function.
Refer to "SELF DIAGNOSTIC TEST FUNCTION FOR DVD UNIT."
Error Code (10, 20, 30, 40, 50, 60, 70) is appears.
DVD Unit is defective.
Replace DVD Unit.
Error Code (00) is appears.
Playback the test/normal DVD disk.
If the Message "PLEASE CHECK THE DISK, AND FOR STAINS OR SCRATCHES ON DISK" appears.
If there is problem of audio or picture, even when it can playback.
DVD Unit is defective.
Replace DVD Unit.
DVD Decoder C.B.A. is defective.
Replace DVD Decoder C.B.A.

Troubleshooting Hints of DVD Decoder C.B.A.

Cause: Decoder Problem

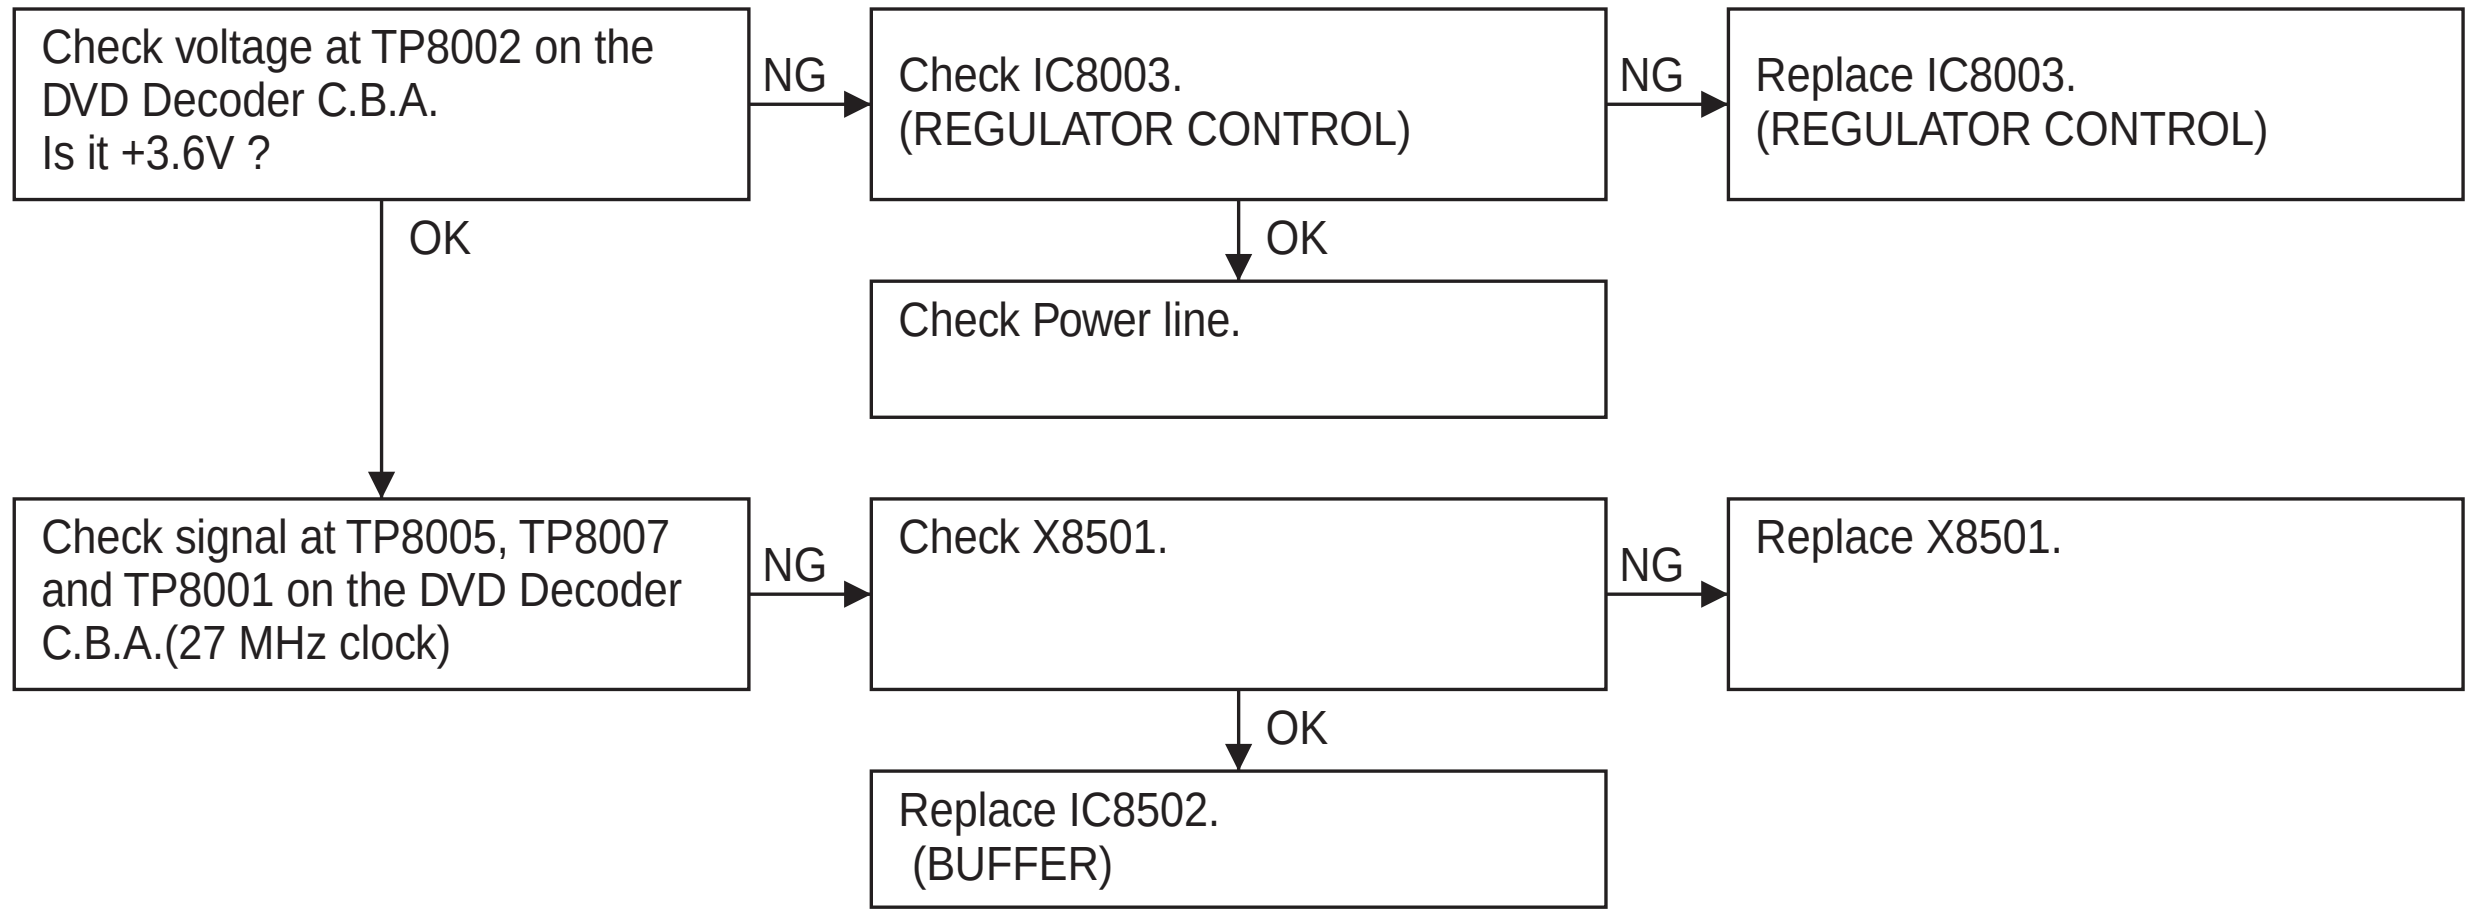
Check voltage at TP8002 on the DVD Decoder C.B.A.
Is it +3.6V ?
NG
Check IC8003.
(REGULATOR CONTROL)
NG
Replace IC8003.
(REGULATOR CONTROL)
OK
Check Power line.
OK
Check signal at TP8005, TP8007 and TP8001 on the DVD Decoder C.B.A.(27 MHz clock)
NG
Check X8501.
NG
Replace X8501.
OK
Replace IC8502.
(BUFFER)

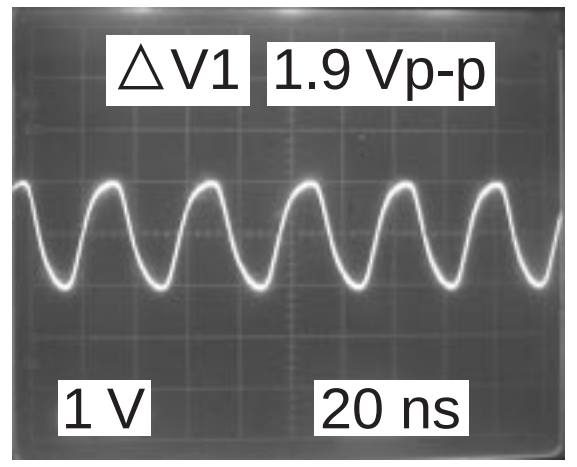

TP8005

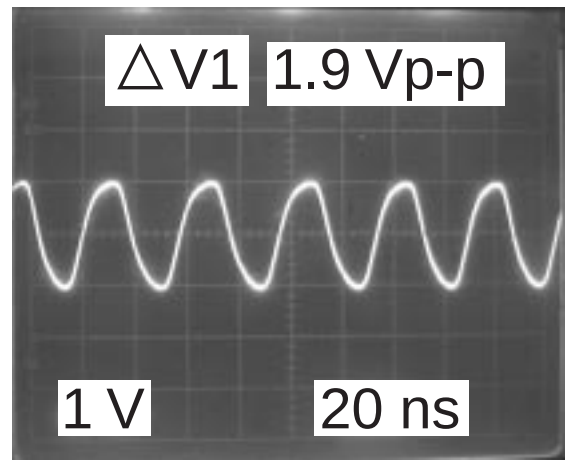

TP8007

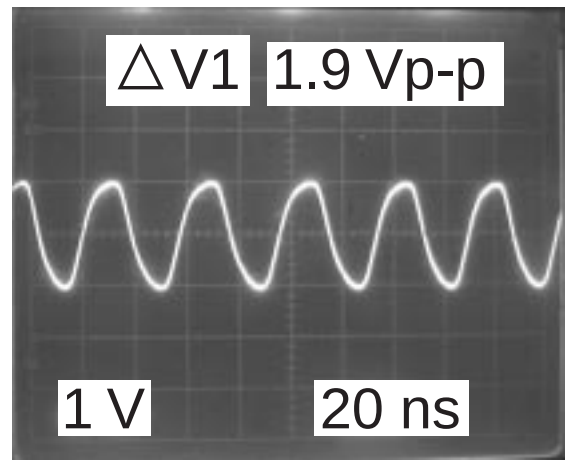

TP8001

Cause: SDRAM Problem

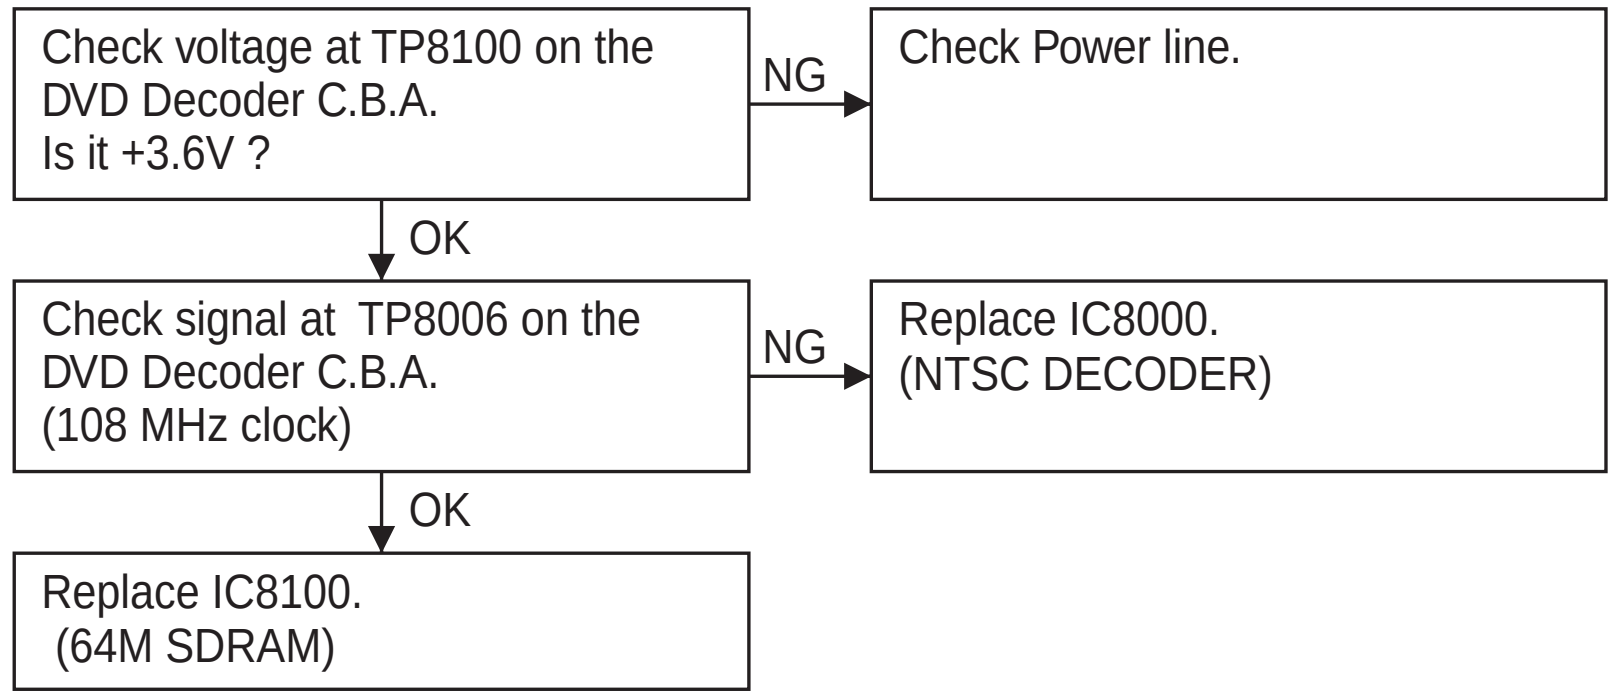
Check voltage at TP8100 on the DVD Decoder C.B.A.
Is it +3.6V ?
NG
Check Power line.
OK
Check signal at TP8006 on the DVD Decoder C.B.A.
(108 MHz clock)
NG
Replace IC8000.
(NTSC DECODER)
OK
Replace IC8100.
(64M SDRAM)

Cause: NTSC Encoder Problem

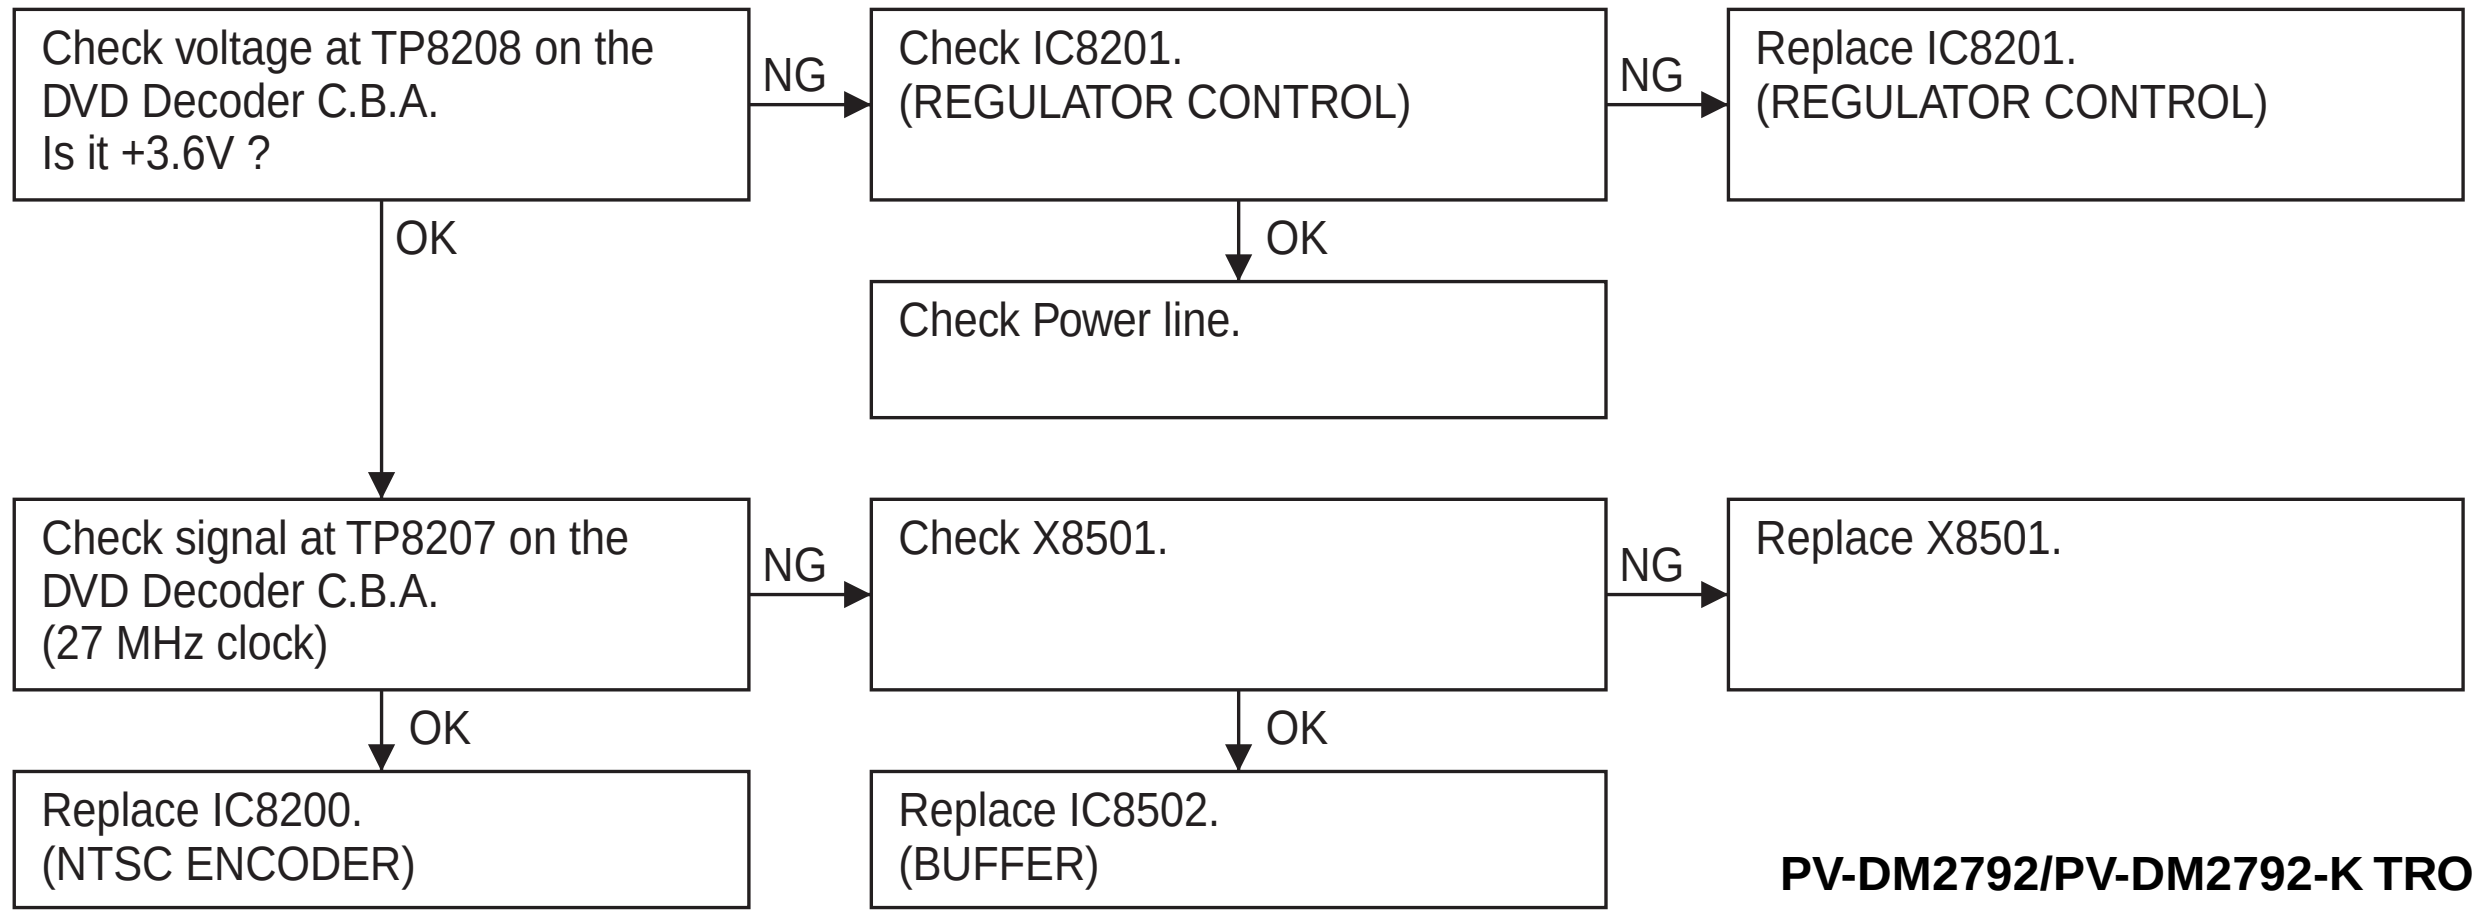
Check voltage at TP8208 on the DVD Decoder C.B.A.
Is it +3.6V ?
NG
Check IC8201.
(REGULATOR CONTROL)
NG
Replace IC8201.
(REGULATOR CONTROL)
OK
Check Power line.
OK
Check signal at TP8207 on the DVD Decoder C.B.A.
(27 MHz clock)
NG
Check X8501.
NG
Replace X8501.
OK
Replace IC8200.
(NTSC ENCODER)
OK
Replace IC8502.
(BUFFER)

Cause: Audio DAC Problem

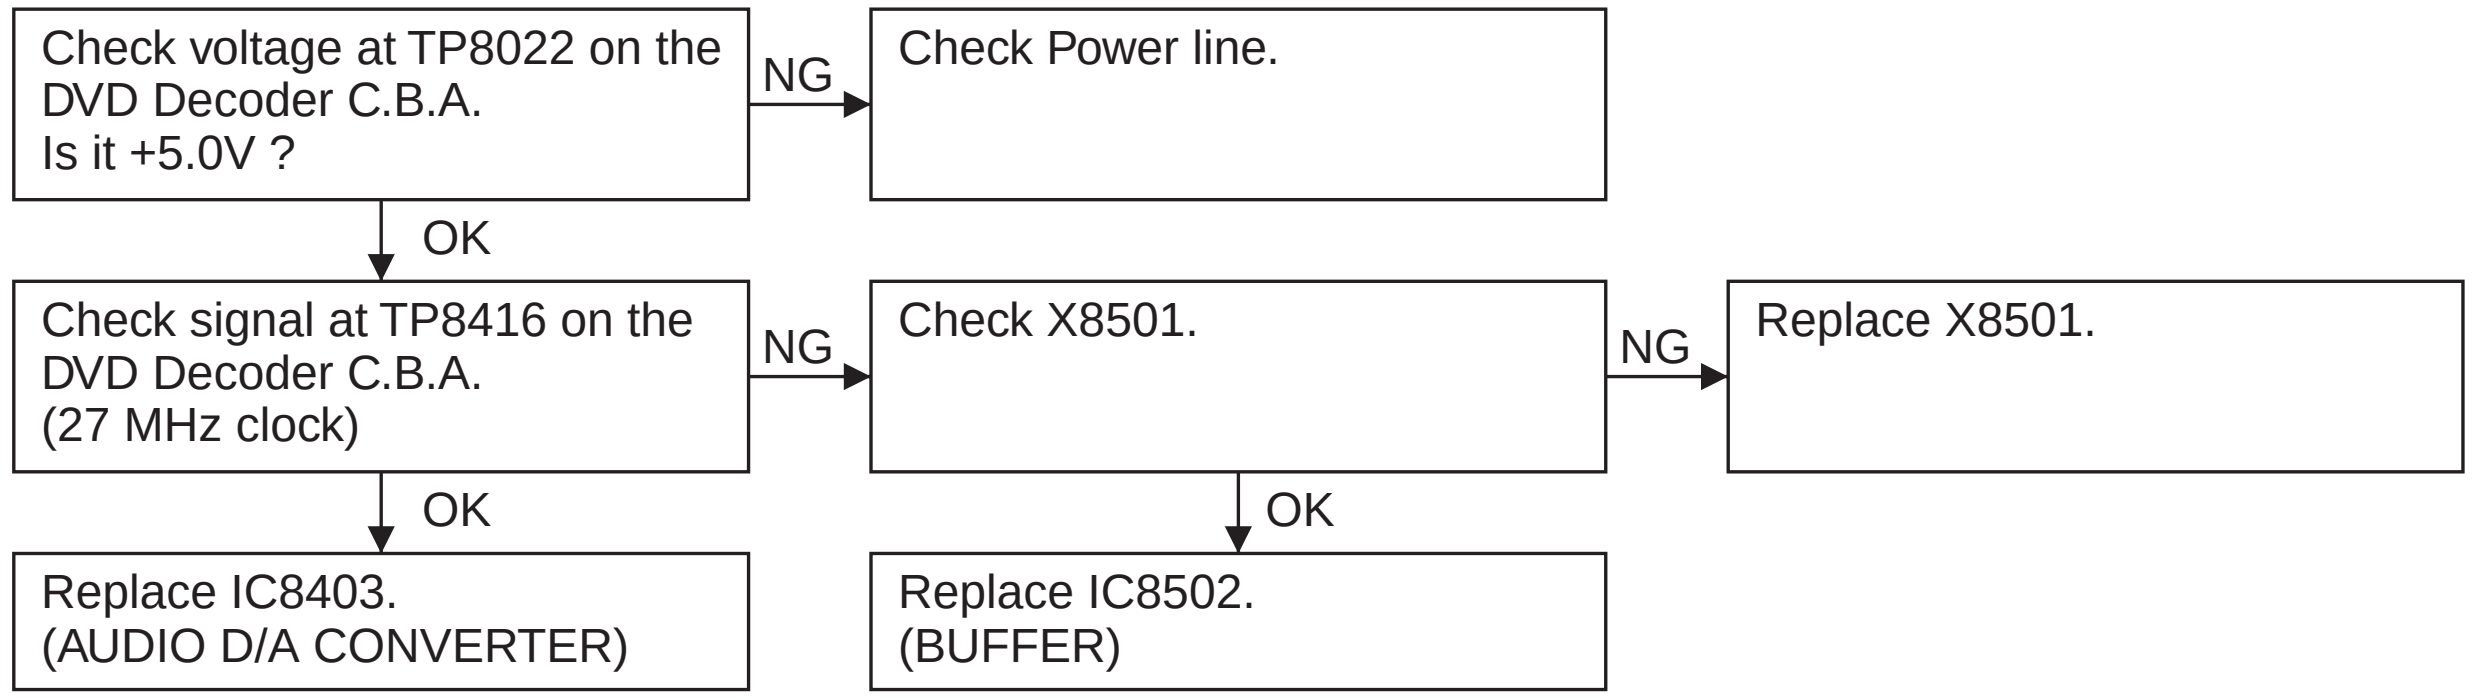
Check voltage at TP8022 on the DVD Decoder C.B.A. Is it +5.0V ?
NG
Check Power line.
OK
Check signal at TP8416 on the DVD Decoder C.B.A. (27 MHz clock)
NG
Check X8501.
NG
Replace X8501.
OK
Replace IC8403. (AUDIO D/A CONVERTER)
OK
Replace IC8502. (BUFFER)

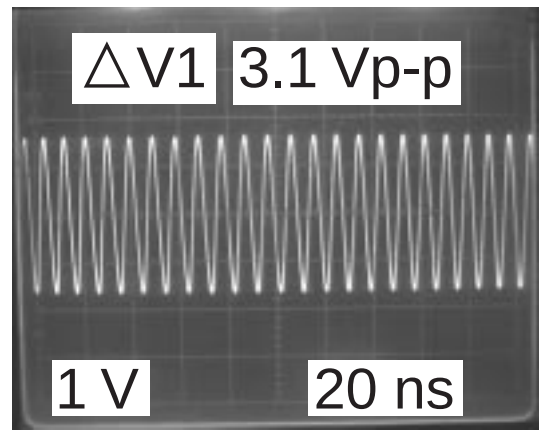

TP8006

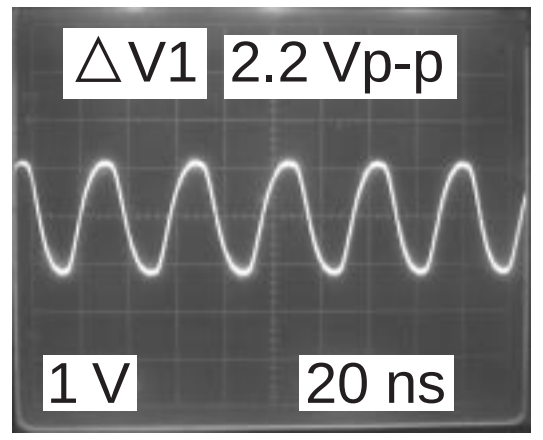

TP8207

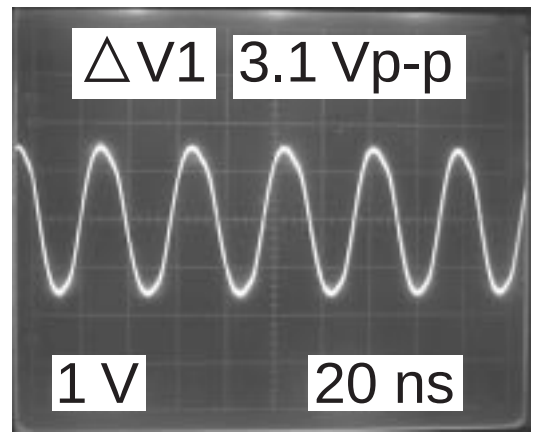

TP8416

Cause: EEPROM Problem

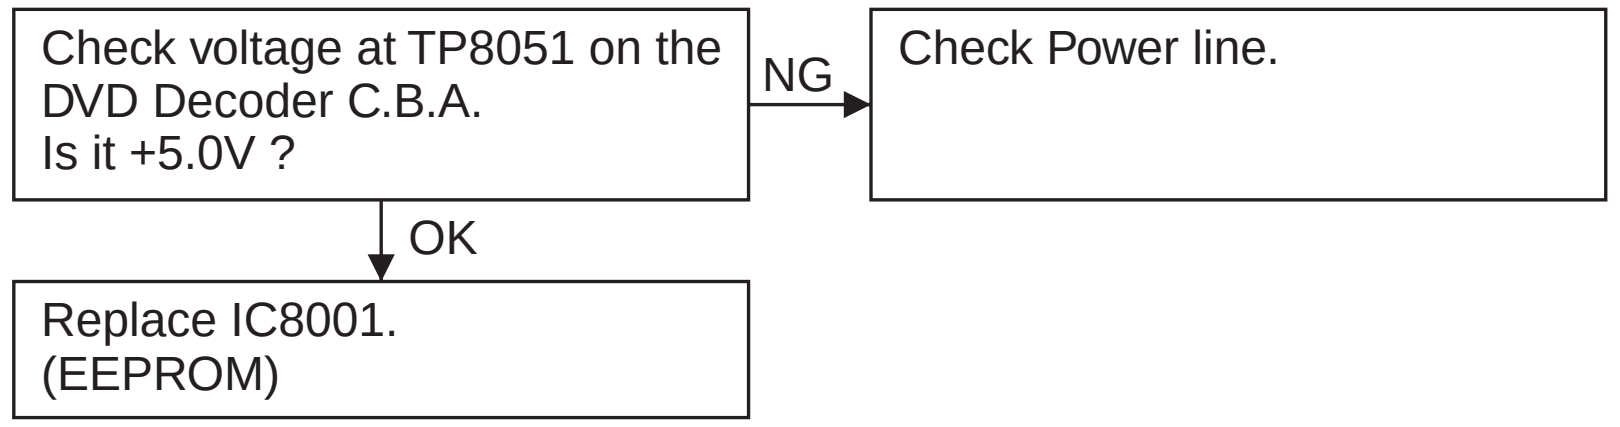
Check voltage at TP8051 on the DVD Decoder C.B.A. Is it +5.0V ?
NG
Check Power line.
OK
Replace IC8001. (EEPROM)

Cause: Flash ROM Problem

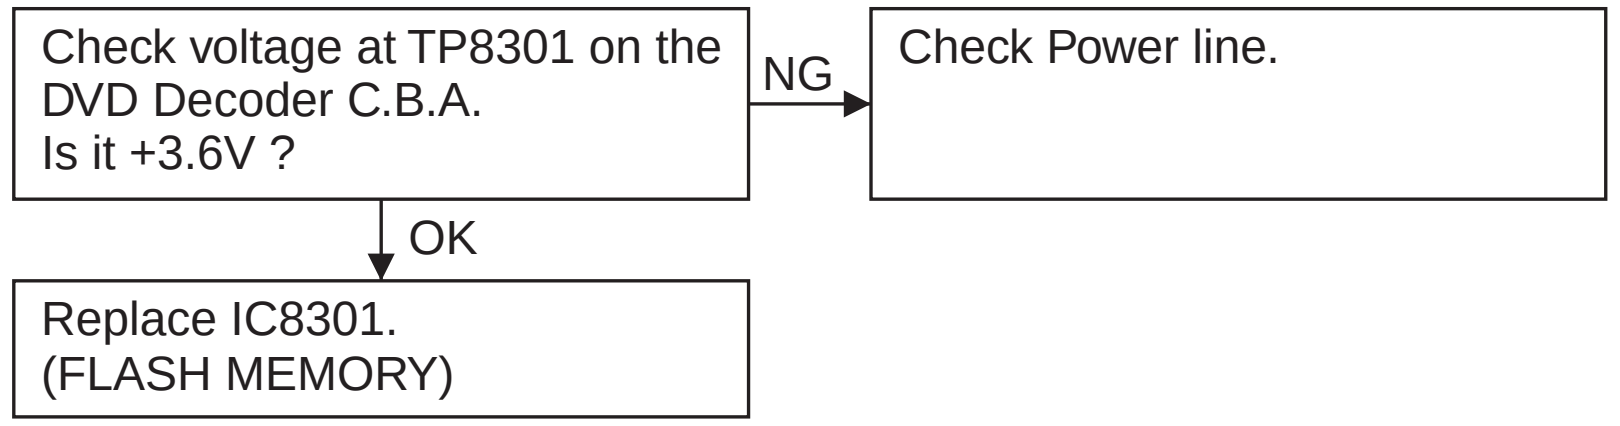
Check voltage at TP8301 on the DVD Decoder C.B.A. Is it +3.6V ?
NG
Check Power line.
OK
Replace IC8301. (FLASH MEMORY)

MAIN C.B.A. LSEP2021A

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH THE SAME TYPE 1.6A 125/250V FUSE.
ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES D'T INCENDIE N'I UTILISERQUE DES FUSIBLE DE MÉME TYPE 1.6A 125/250V

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN ⚠ HAVE SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY. WHEN REPLACING ANY OF THESE COMPONENTS, USE ONLY THE SPECIFIED PARTS.

NOTE:
CIRCUIT BOARD LAYOUT INCLUDES COMPONENTS WHICH ARE NOT USED. PLEASE REFER TO THE SCHEMATIC DIAGRAM AND PARTS LIST FOR PROPER PARTS CONTENT.

HOT CIRCUIT.BE CAREFUL AND USE AN ISOLATION TRANSFORMER WHEN SERVICING.

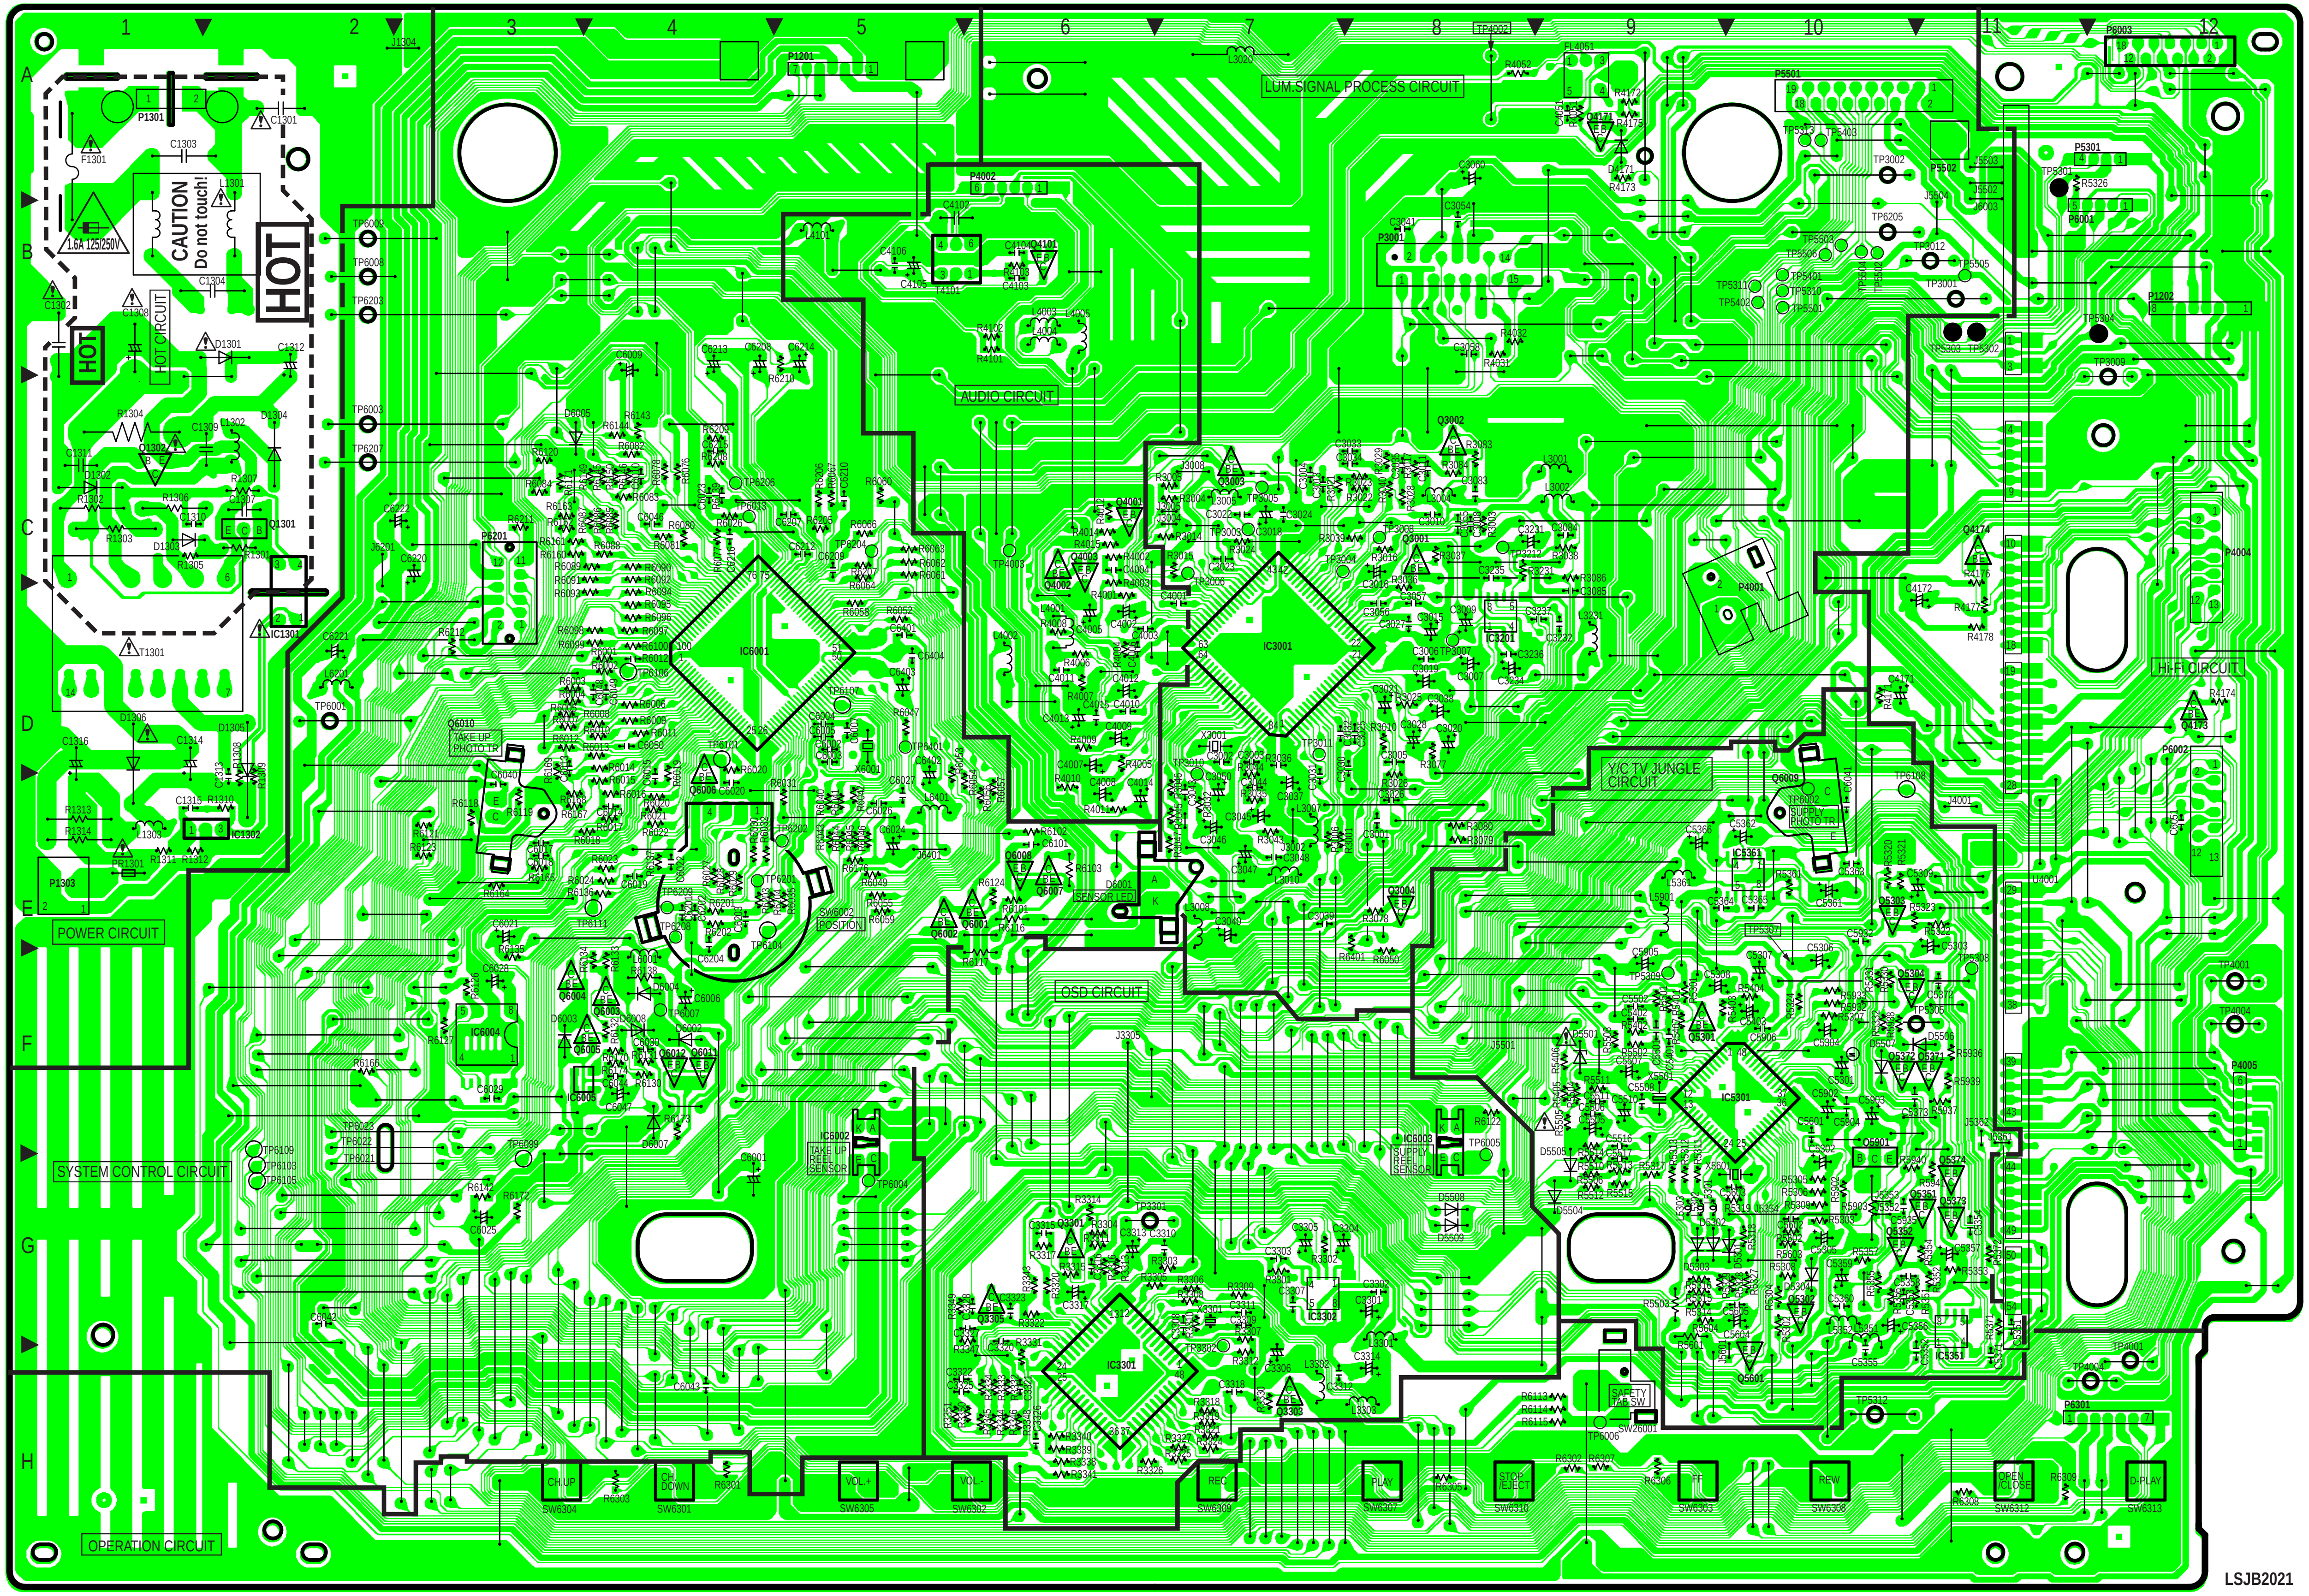
1
2
3
4
5
6
7
8
9
10
11
12
A
B
C
D
E
F
G
H
HOT
CAUTION Do not touch!
HOT CIRCUIT
1.6A 125/250V
F1301
P1301
T1301
IC1301
IC1302
POWER CIRCUIT
SYSTEM CONTROL CIRCUIT
OPERATION CIRCUIT
LUM.SIGNAL PROCESS CIRCUIT
AUDIO CIRCUIT
Y/C TV JUNGLE CIRCUIT
OSD CIRCUIT
Hi-Fi CIRCUIT
IC6001
IC3001
IC5301
IC3301
IC3302
IC6004
TAKE UP PHOTO TR
SUPPLY PHOTO TR
SENSOR LED
TAKE UP REEL SENSOR
SUPPLY REEL SENSOR
SAFETY TAB SW
CH UP
CH DOWN
VOL -
VOL +
REC
PLAY
STOP /EJECT
FF
REW
OPEN /CLOSE
D-PLAY
SW6304
SW6301
SW6305
SW6302
SW6309
SW6307
SW6310
SW6303
SW6308
SW6312
SW6313
LSJB2021

MAIN C.B.A. LSEP2021A
PV-DM2792/PV-DM2792-K

AUDIO C.B.A. VEPS4038A

NOTE:
CIRCUIT BOARD LAYOUT INCLUDES COMPONENTS WHICH ARE NOT USED.
PLEASE REFER TO THE SCHEMATIC DIAGRAM AND PARTS LIST FOR PROPER PARTS CONTENT.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

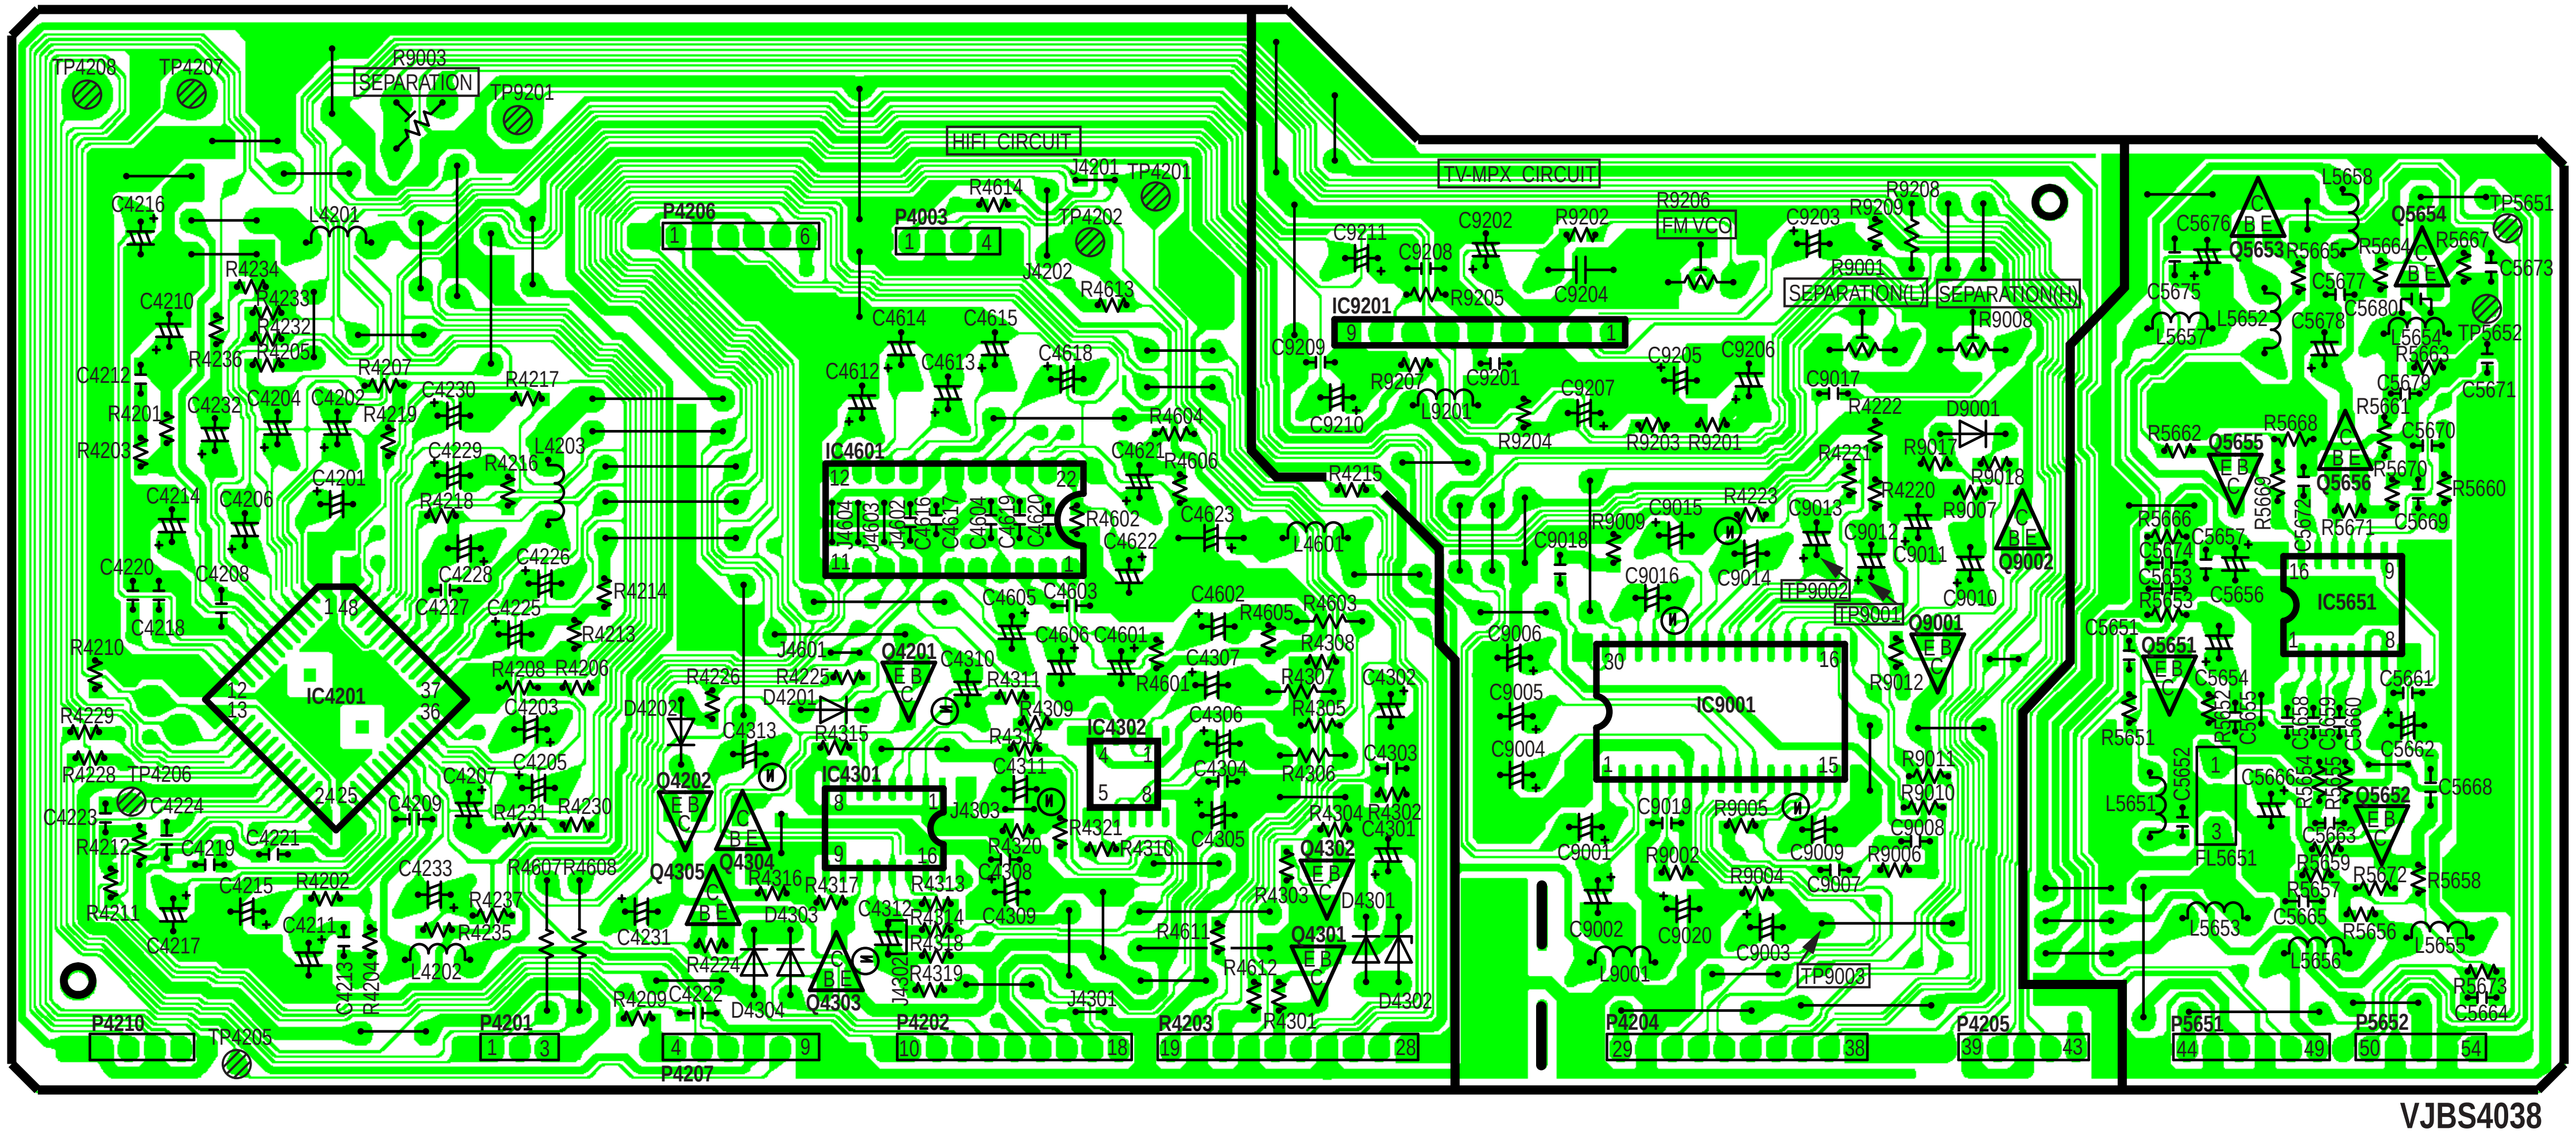
SEPARATION
HIFI CIRCUIT
TV-MPX CIRCUIT
FM VCO
SEPARATION(L)
SEPARATION(H)
IC4201
IC4601
IC4301
IC4302
IC9201
IC9001
IC5651
P4210
P4201
P4207
P4202
P4203
P4204
P4205
P5651
P5652
P4206
P4003
TP4208
TP4207
TP9201
TP4201
TP4202
TP4206
TP4205
TP9002
TP9001
TP9003
TP5651
TP5652
Q4201
Q4202
Q4302
Q4301
Q4303
Q4304
Q4305
Q9001
Q9002
Q5651
Q5652
Q5653
Q5654
Q5655
Q5656
FL5651
VJBS4038

TV MAIN C.B.A. LRP61012C

CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,
REPLACE ONLY WITH THE SAME TYPE 4A 125/250V FUSE.
ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES
D' INCENDIE N' UTILISERQUE DES FUSIBLE DE MÉME
TYPE 4A 125/250V

4A 125/250V

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN ⚠ HAVE
SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY.
WHEN REPLACING ANY OF THESE COMPONENTS,
USE ONLY THE SPECIFIED PARTS.

NOTE:
CIRCUIT BOARD LAYOUT INCLUDES COMPONENTS WHICH ARE NOT USED.
PLEASE REFER TO THE SCHEMATIC DIAGRAM AND PARTS LIST FOR PROPER PARTS CONTENT.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

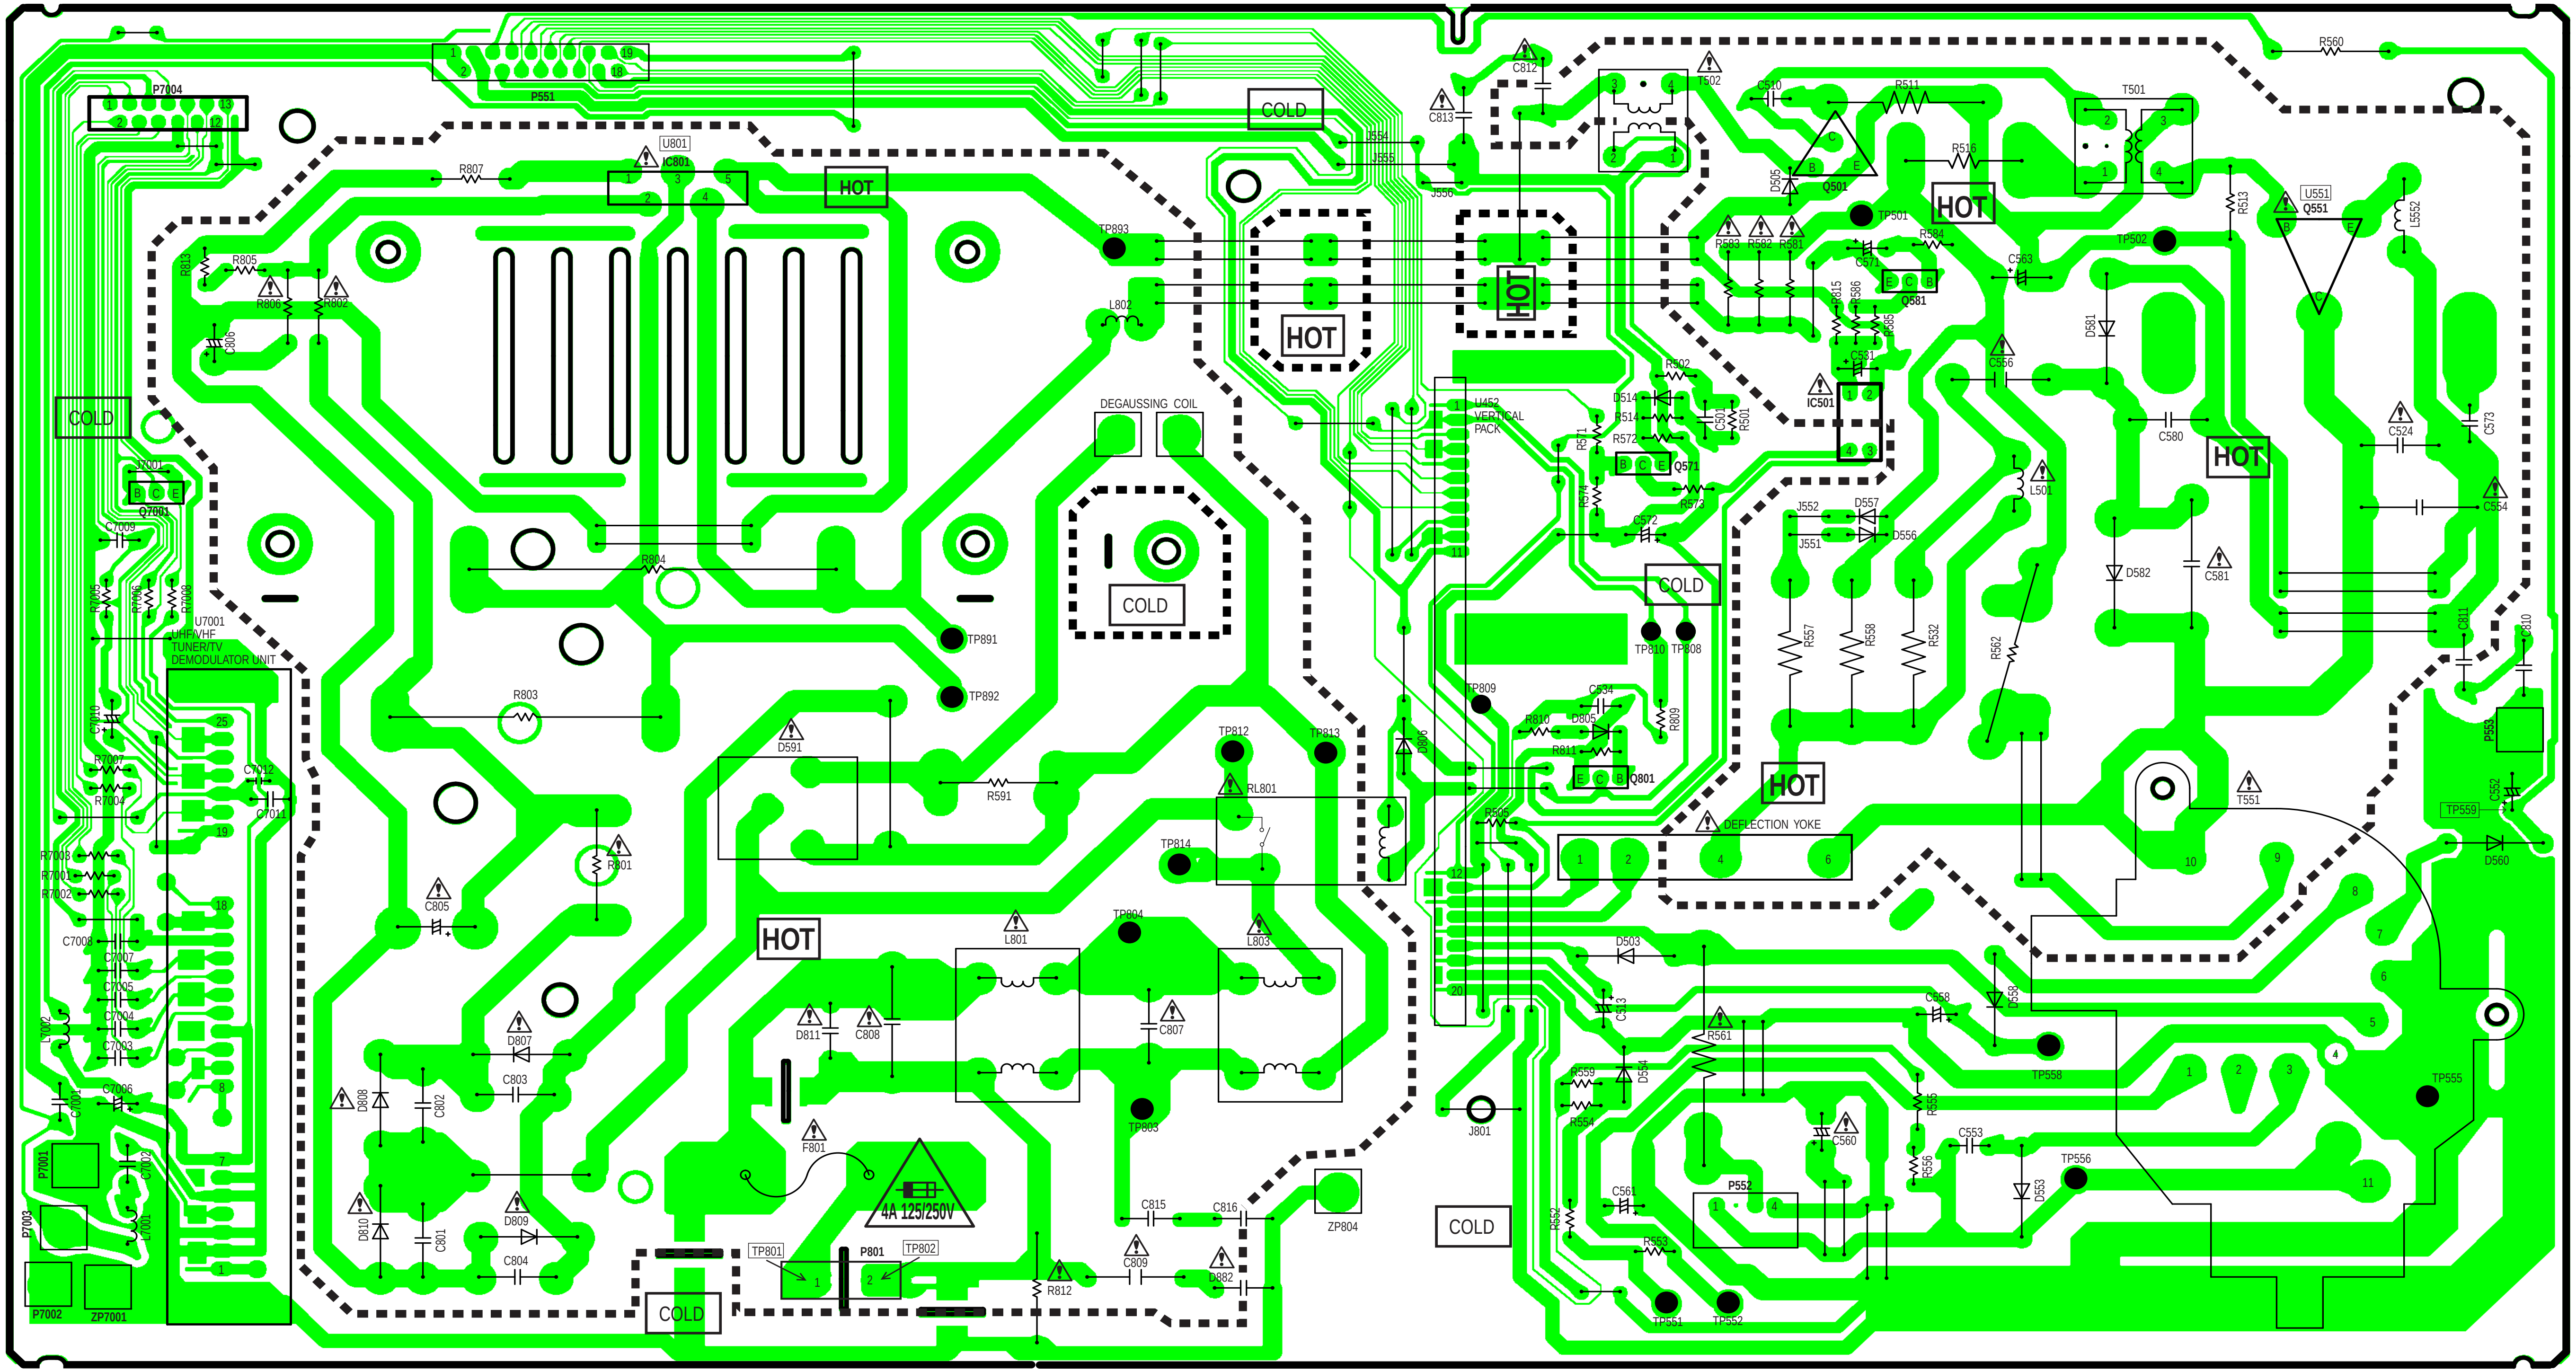
P7004
P551
COLD
HOT
U801
IC801
R807
R805
R813
R806
R802
C806
TP893
L802
J554
J555
J556
C812
C813
T502
C510
R511
T501
R516
D505
Q501
TP501
U551
Q551
L5552
R513
TP502
R583
R582
R581
R584
C571
Q581
C563
D581
R502
D514
R514
R572
C502
R501
R571
IC501
U452
VERTICAL
PACK
Q571
R574
R573
C572
J552
J551
D557
D556
L501
C556
C580
C524
C573
C554
D582
C581
R557
R558
R532
R562
C811
C810
TP810
TP808
TP809
C534
R810
D805
R809
R811
Q801
DEGAUSSING COIL
COLD
J7001
Q7001
C7009
R7005
R7006
R7008
U7001
UHF/VHF
TUNER/TV
DEMODULATOR UNIT
R804
TP891
TP892
R803
D591
R591
TP812
TP813
RL801
D806
R506
DEFLECTION YOKE
T551
C552
TP559
D560
P553
C7010
R7007
R7004
C7012
C7011
R7003
R7001
R7002
C7008
C7007
C7005
C7004
C7003
C7006
C7001
L7002
P7001
C7002
L7001
P7003
P7002
ZP7001
R801
C805
TP814
TP804
L801
L803
D811
C808
C807
D807
C803
D808
C802
F801
4A 125/250V
TP803
D810
C801
D809
C804
TP801
P801
TP802
C815
C816
C809
R812
D882
ZP804
J801
D503
C513
R561
D554
R559
R554
R555
C560
C558
D558
TP558
C553
R556
TP556
D553
C561
P552
R552
R553
TP551
TP552
TP555
R560

HOT CIRCUIT.BE CAREFUL AND USE AN ISOLATION TRANSFORMER WHEN SERVICING.

LRP61012

TV MAIN C.B.A. LRP61012C
PV-DM2792/PV-DM2792-K

POWER SUPPLY C.B.A.
VEPS1029B

CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH THE SAME TYPE 3A 125V/250V FUSE.
ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES D' INCENDIE N' UTILISERQUE DES FUSIBLE DE MÉME TYPE 3A 125V/250V

3A 125V/250V

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN ⚠ HAVE SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY.
WHEN REPLACING ANY OF THESE COMPONENTS, USE ONLY THE SPECIFIED PARTS.

NOTE:
CIRCUIT BOARD LAYOUT INCLUDES COMPONENTS WHICH ARE NOT USED.
PLEASE REFER TO THE SCHEMATIC DIAGRAM AND PARTS LIST FOR PROPER PARTS CONTENT.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

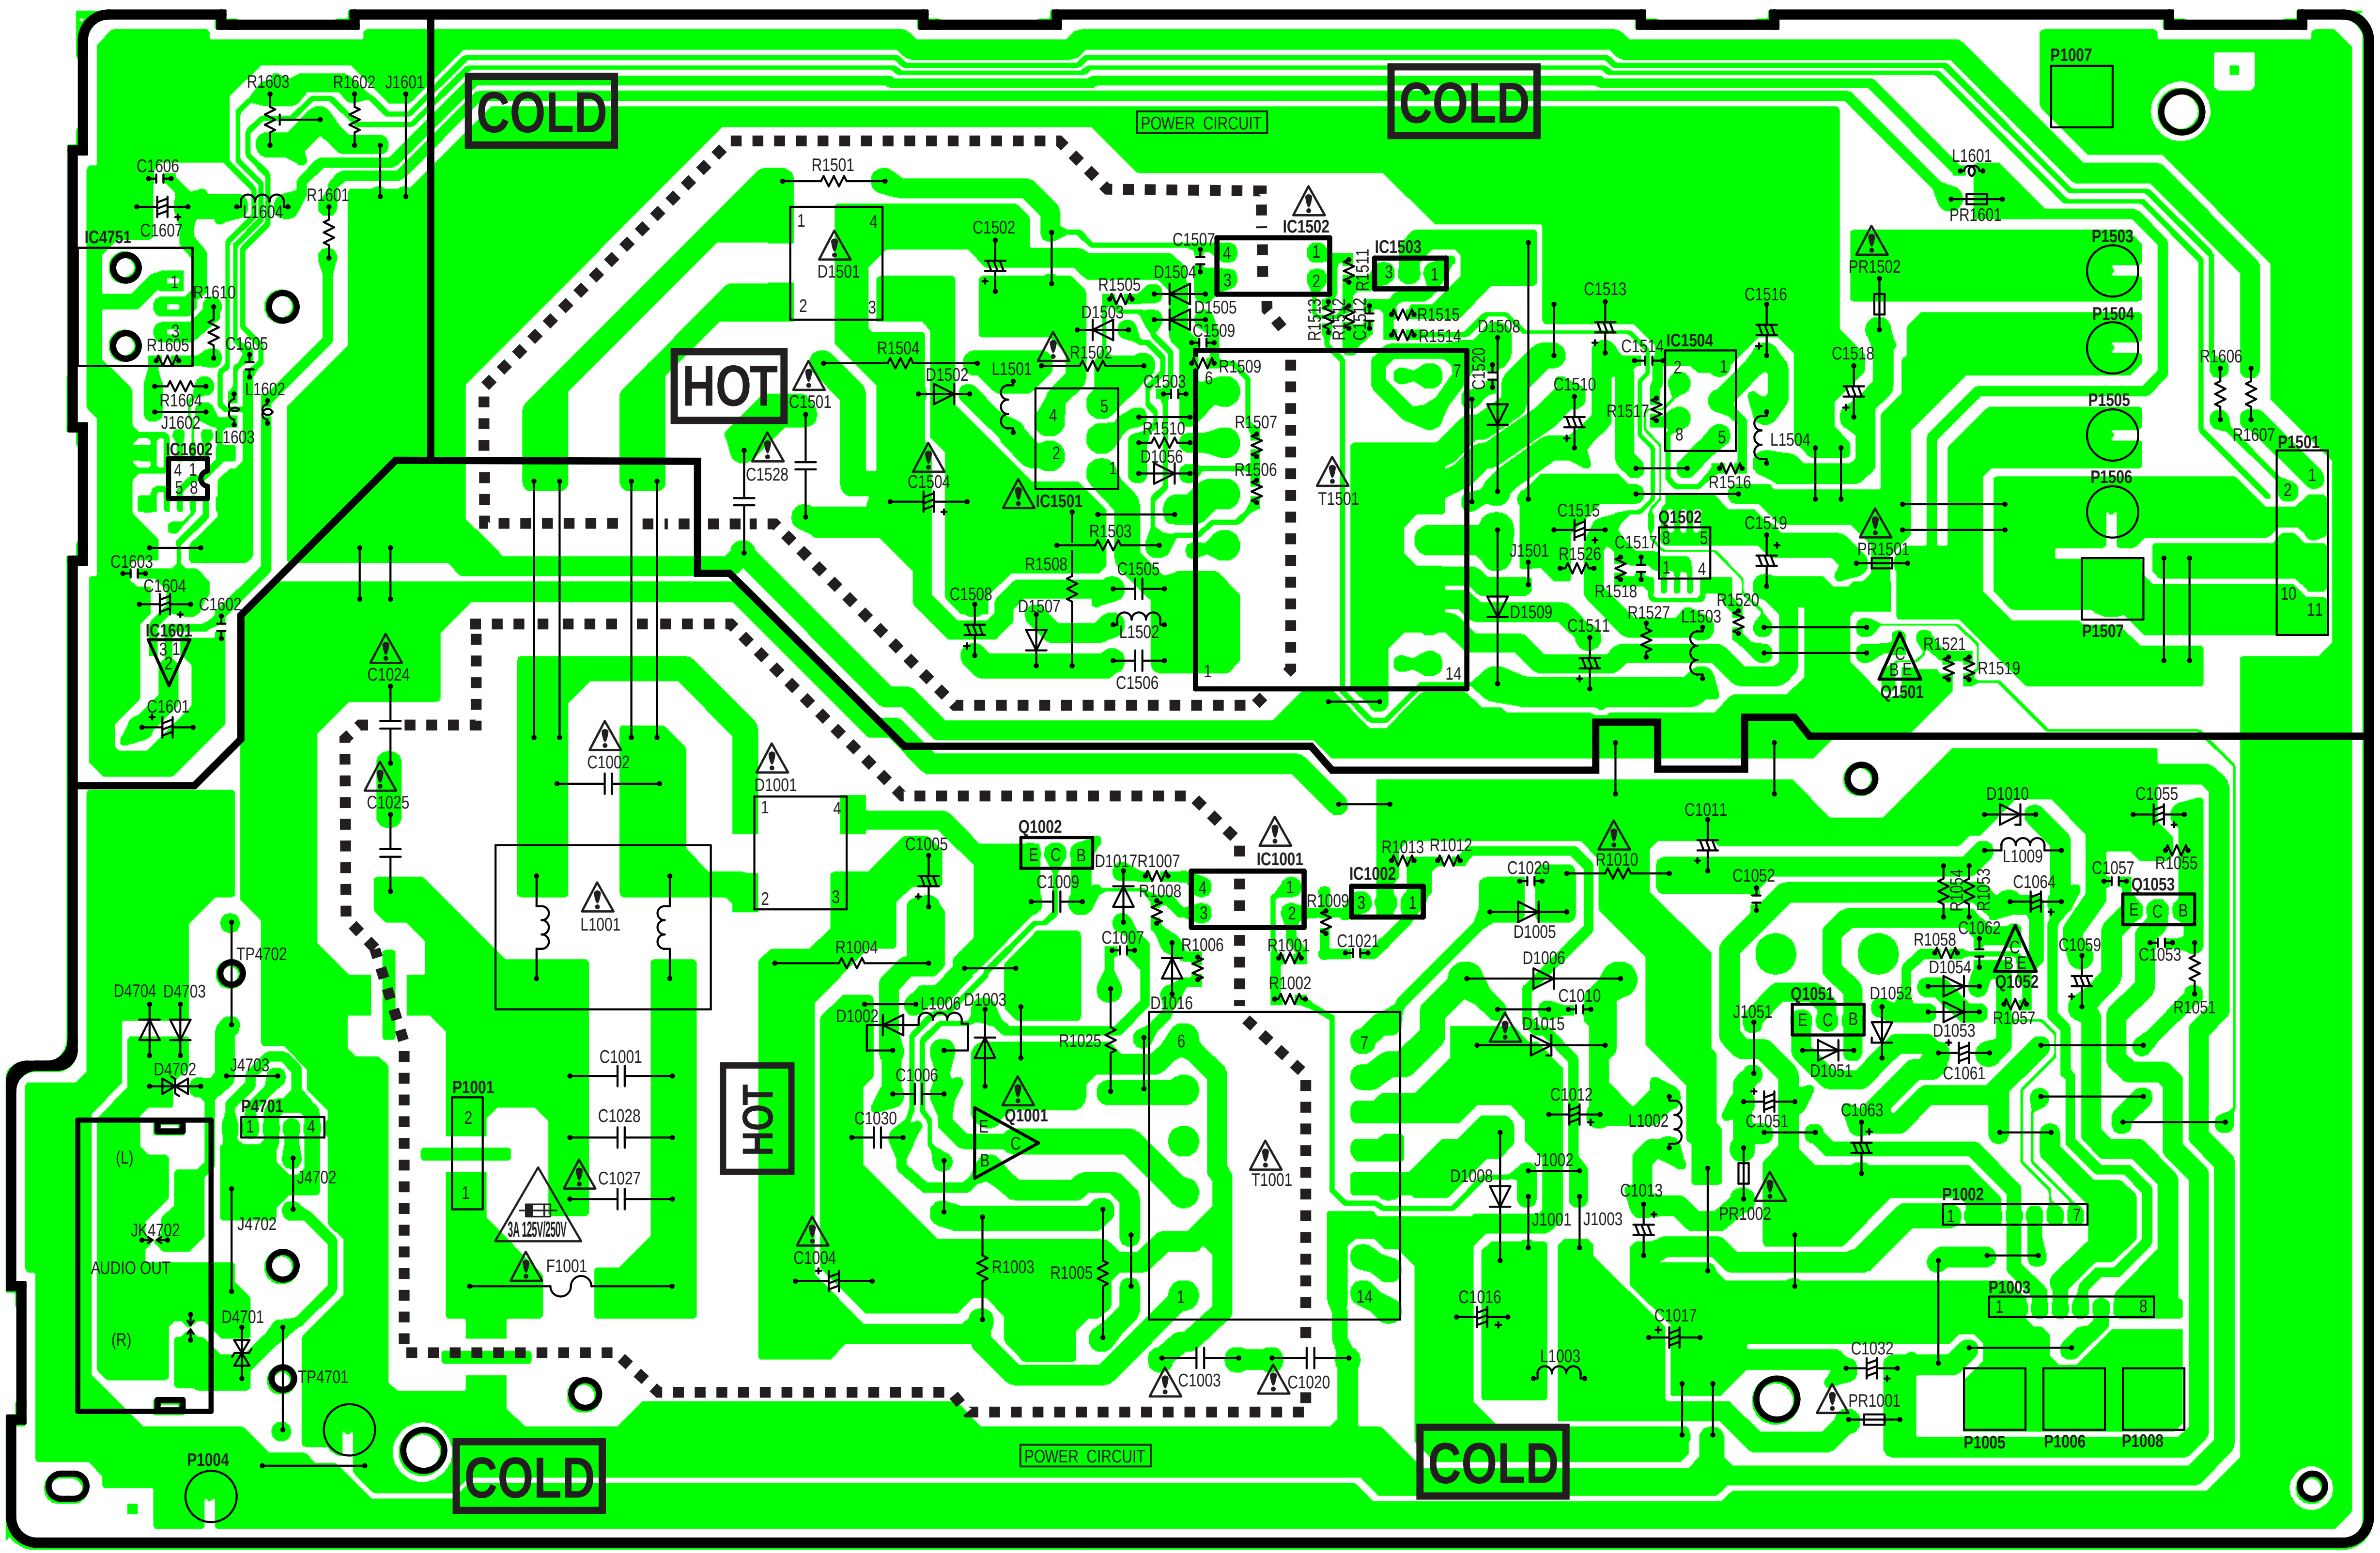
COLD
COLD
COLD
COLD
HOT
HOT
POWER CIRCUIT
POWER CIRCUIT
R1603
R1602
J1601
C1606
C1607
L1604
R1601
IC4751
R1610
R1605
C1605
R1604
J1602
L1602
L1603
C1602
C1603
C1604
C1602
IC1601
C1601
R1501
D1501
C1502
C1507
IC1502
IC1503
R1511
R1512
R1513
R1515
R1514
D1504
D1505
R1505
D1503
C1509
R1504
D1502
L1501
R1502
C1503
R1509
C1501
C1528
C1504
IC1501
R1510
D1506
R1507
R1506
T1501
R1503
R1508
C1505
C1508
D1507
L1502
C1506
D1508
C1520
C1513
C1514
IC1504
C1516
C1518
PR1502
C1510
R1517
L1504
R1516
C1515
Q1502
C1517
C1519
J1501
R1526
R1518
D1509
C1511
R1527
L1503
R1520
PR1501
R1521
R1519
Q1501
L1601
PR1601
P1007
P1503
P1504
P1505
P1506
R1606
R1607
P1501
P1507
C1024
C1025
C1002
D1001
L1001
C1005
Q1002
D1017
R1007
C1009
R1008
IC1001
IC1002
R1013
R1012
R1010
C1011
C1029
R1009
D1005
C1052
D1010
C1055
L1009
C1057
R1055
R1054
R1053
C1064
Q1053
C1062
R1058
D1054
Q1052
C1059
C1053
R1004
C1007
R1006
D1016
R1001
C1021
R1002
D1006
C1010
D1015
Q1051
D1052
D1053
R1057
J1051
D1051
C1061
R1051
D1002
L1006
D1003
R1025
C1006
C1030
Q1001
T1001
C1012
L1002
C1051
C1063
D1008
J1002
J1001
J1003
C1013
PR1002
P1002
P1003
C1001
C1028
C1027
P1001
F1001
3A 125V/250V
C1004
R1003
R1005
C1016
C1017
L1003
C1003
C1020
C1032
PR1001
P1005
P1006
P1008
TP4702
D4704
D4703
D4702
J4703
P4701
J4702
JK4702
AUDIO OUT
(L)
(R)
D4701
TP4701
P1004

HOT CIRCUIT.BE CAREFUL AND USE AN ISOLATION TRANSFORMER WHEN SERVICING.

VJBS1029

DVD DECODER C.B.A.
LSEP2007B

NOTE: MULTILAYER C.B.A.
THIS C.B.A. IS Multi-Layer C.B.A. THIS CIRCUIT BOARD SHOWS COMPONENT LAYOUT-PATTERN FOR COMPONENT SIDE AND FOIL SIDE. LAYOUT PATETRNS ARE SINGLE PATTERN FOR EACH SIDE THAT MAKE EASY TO SIGHT THE COMPONENT LAYOUT.

NOTE:
CIRCUIT BOARD LAYOUT INCLUDES COMPONENTS WHICH ARE NOT USED.
PLEASE REFER TO THE SCHEMATIC DIAGRAM AND PARTS LIST FOR PROPER PARTS CONTENT.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

(COMPONENT SIDE)

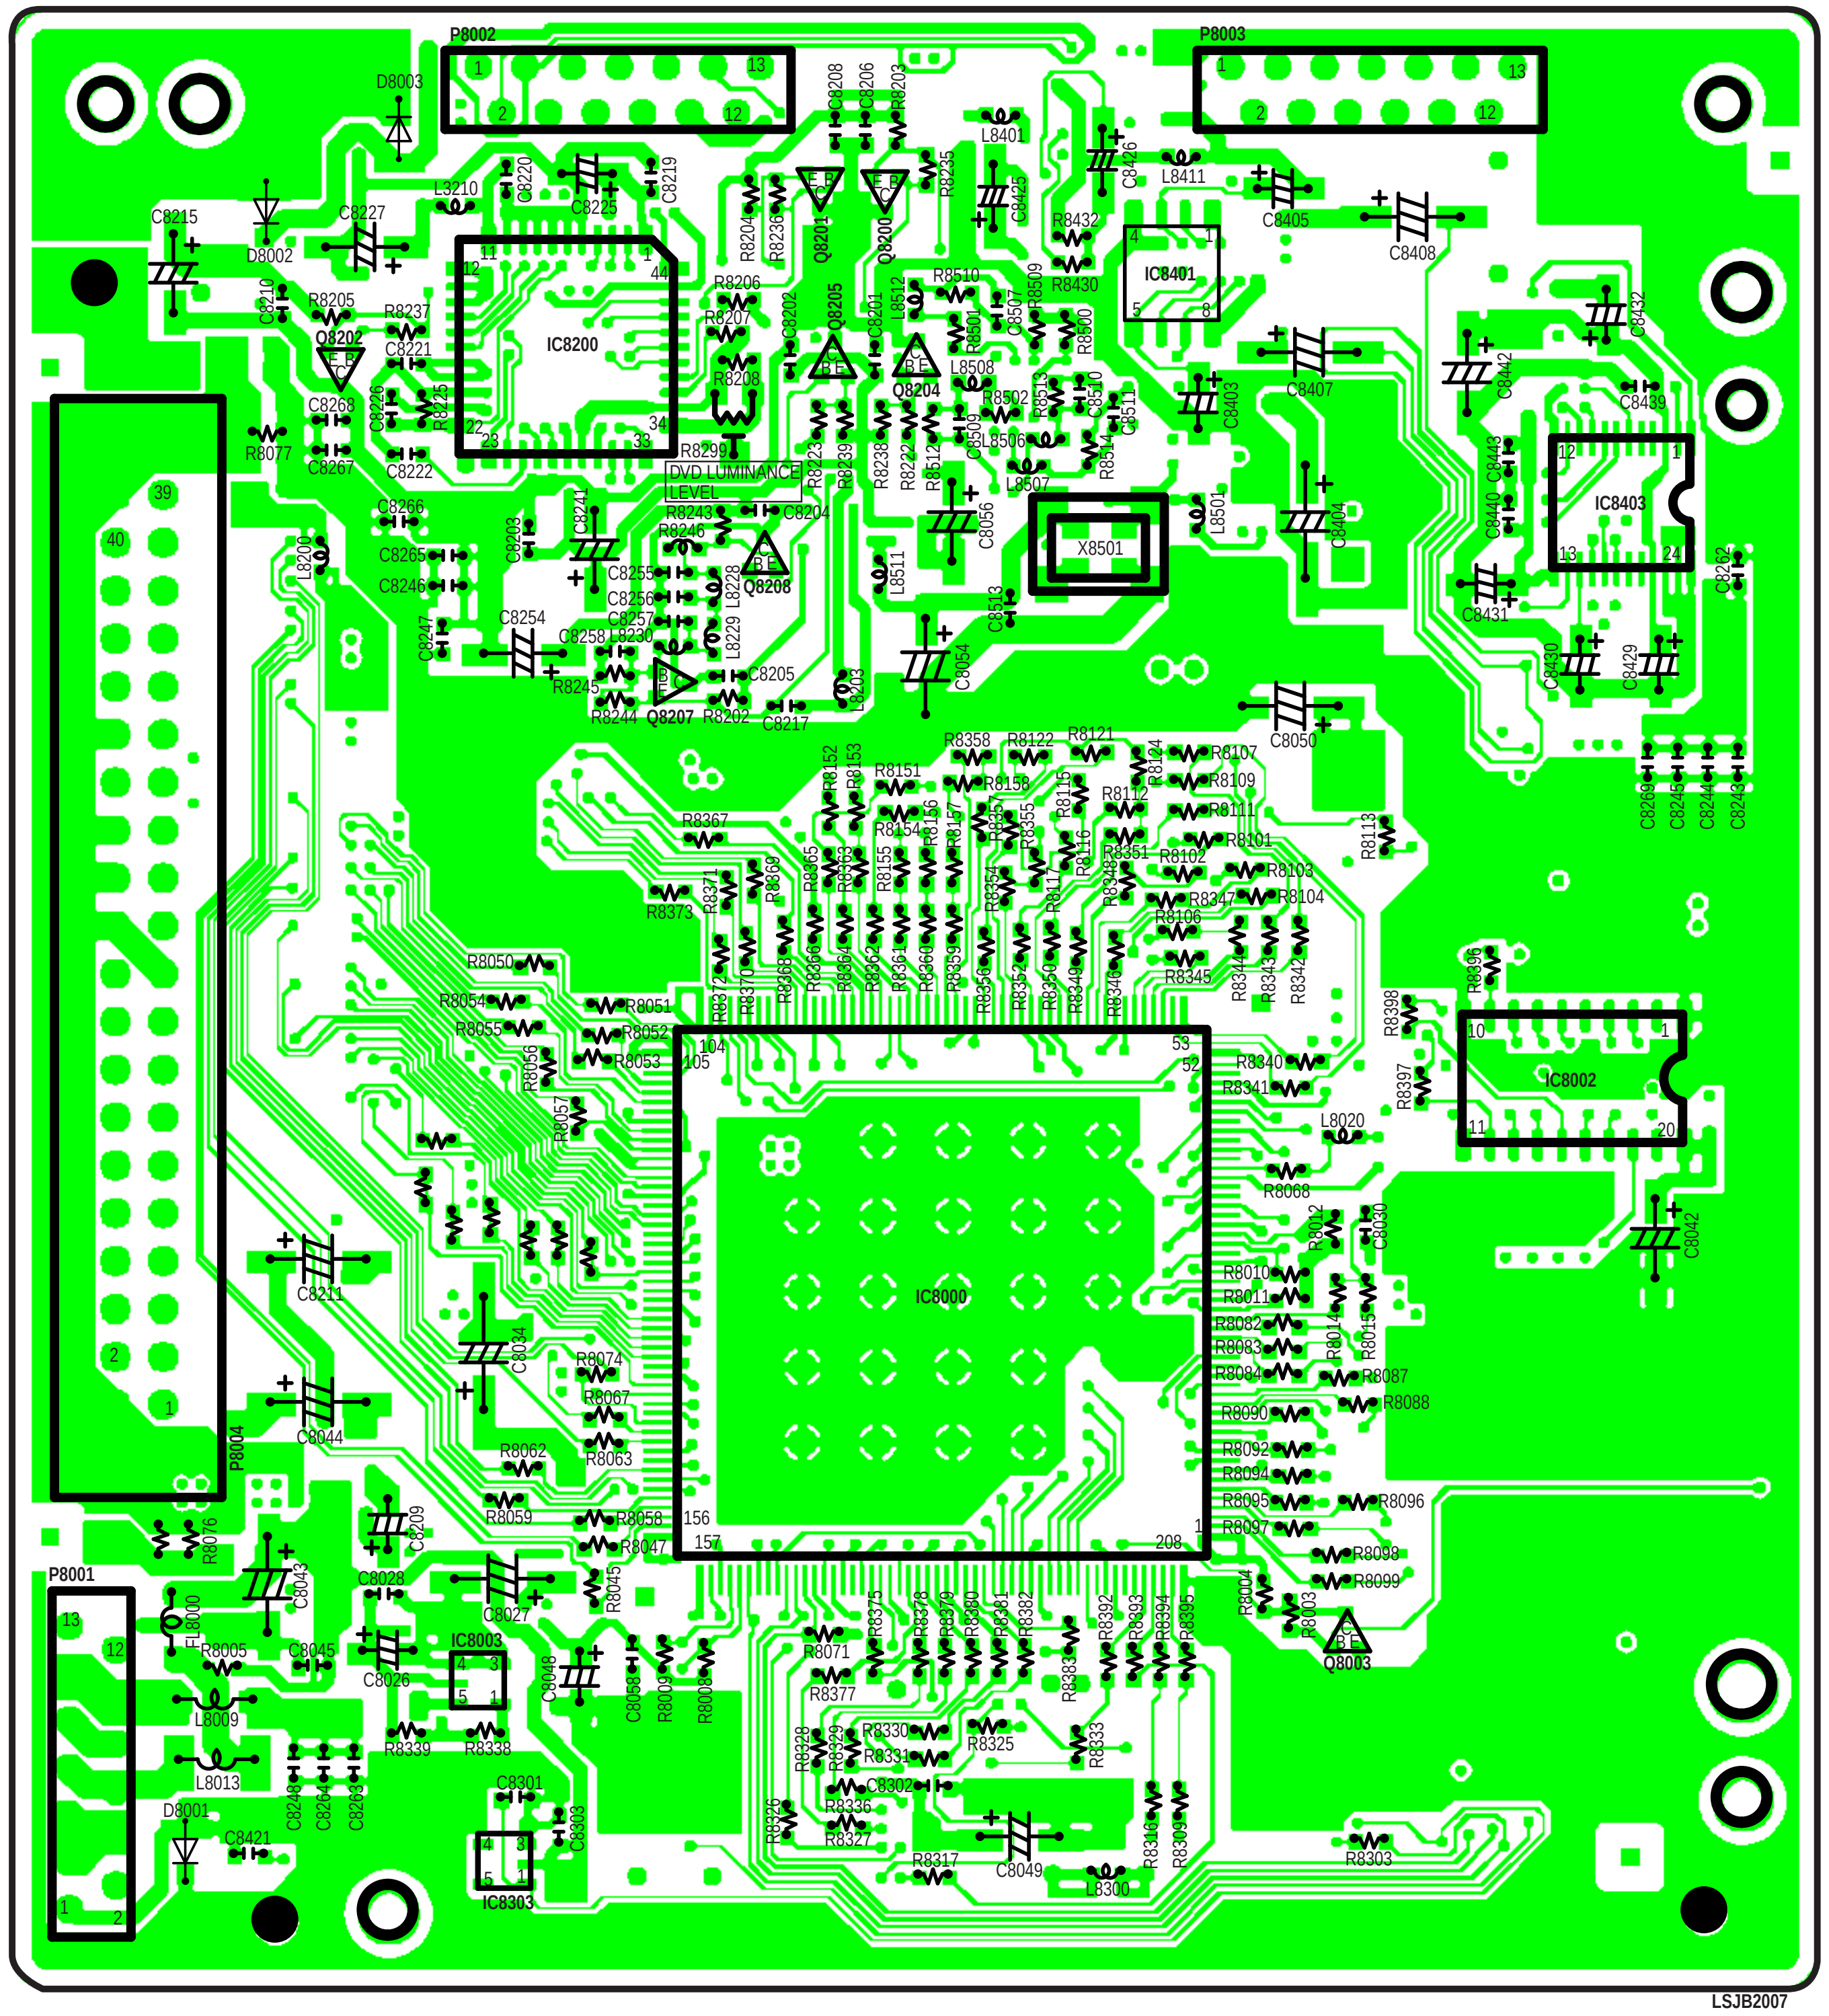
P8002
P8003
P8001
P8004
IC8200
IC8401
IC8403
IC8002
IC8000
IC8003
IC8303
X8501
DVD LUMINANCE LEVEL
Q8201
Q8202
Q8204
Q8205
Q8206
Q8207
Q8208
Q8003
D8001
D8002
D8003
L3210
L8401
L8411
L8501
L8020
L8300
L8009
L8013
L8201
C8215
C8227
C8407
C8408
C8050
C8042
C8271
C8034
C8044
C8049
LSJB2007

(FOIL SIDE)

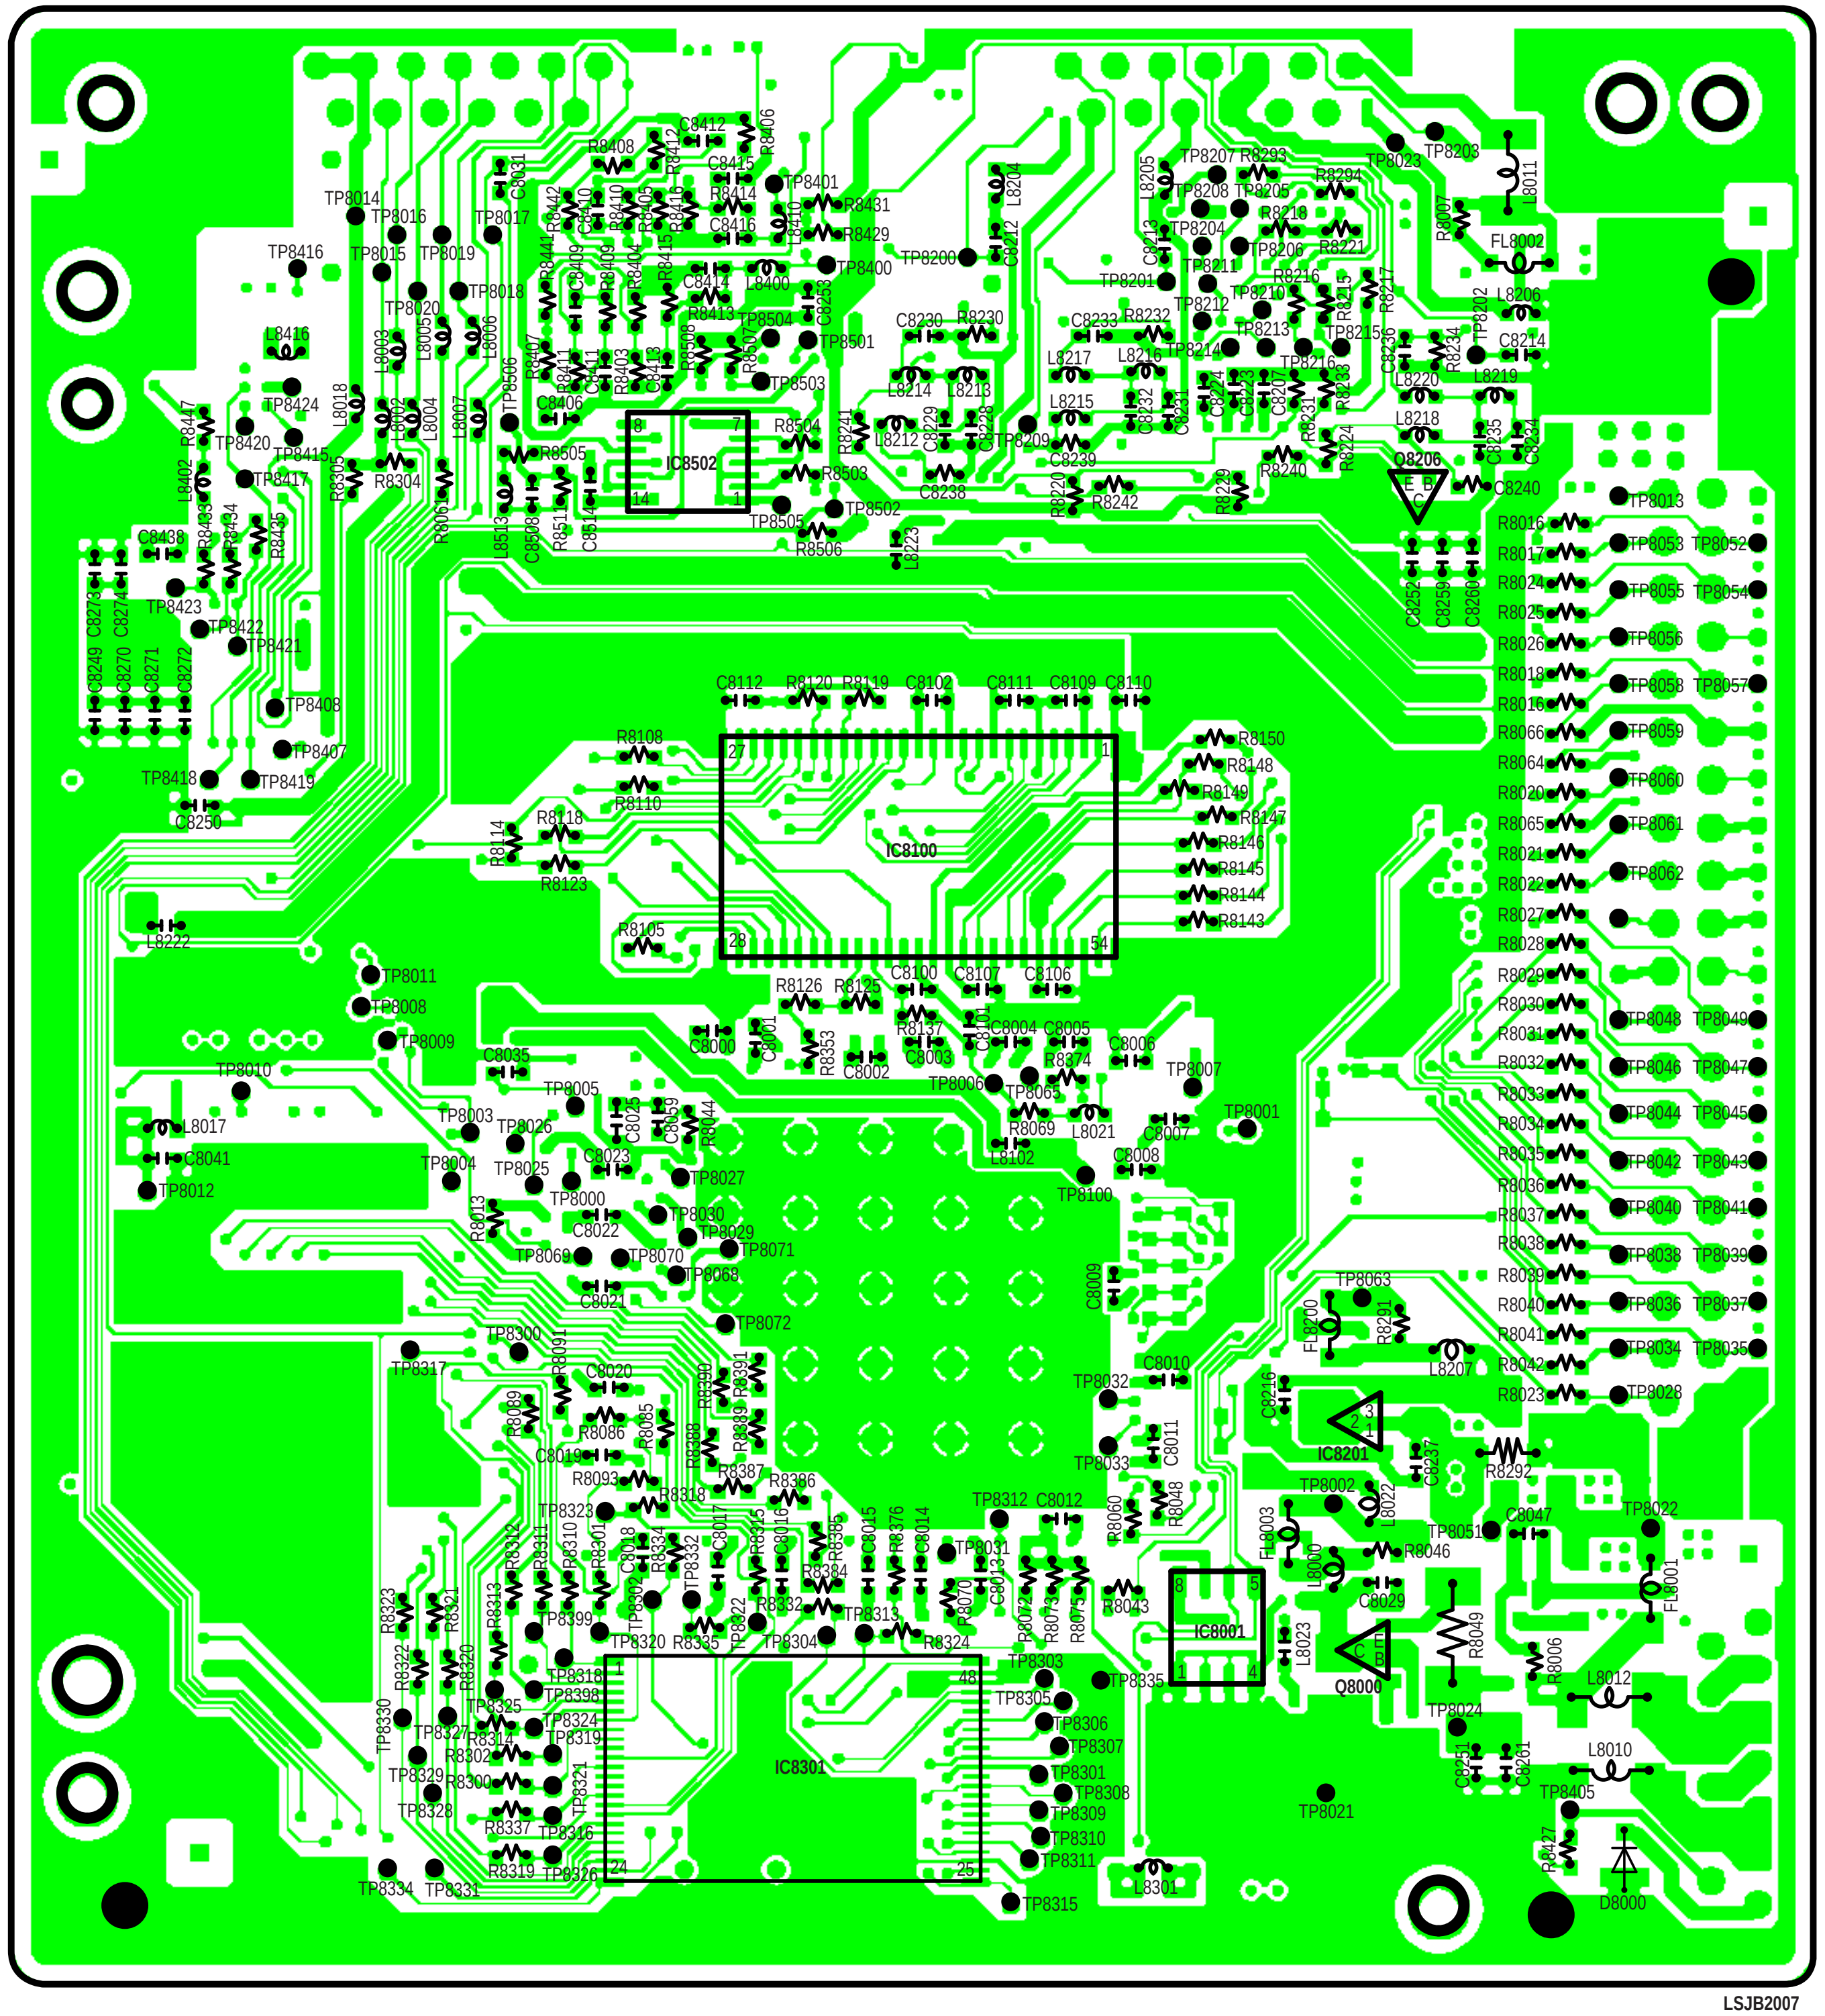
IC8100
IC8502
IC8201
IC8001
IC8301
Q8000
Q8206
FL8002
FL8000
FL8001
D8000
L8206
L8207
L8012
L8010
TP8013
TP8000
TP8001
TP8021
TP8315
LSJB2007

DVD DECODER C.B.A. LSEP2007B
PV-DM2792/PV-DM2792-K

Hi-Fi AUDIO/VIDEO HEAD AMP C.B.A. LSEP2010A

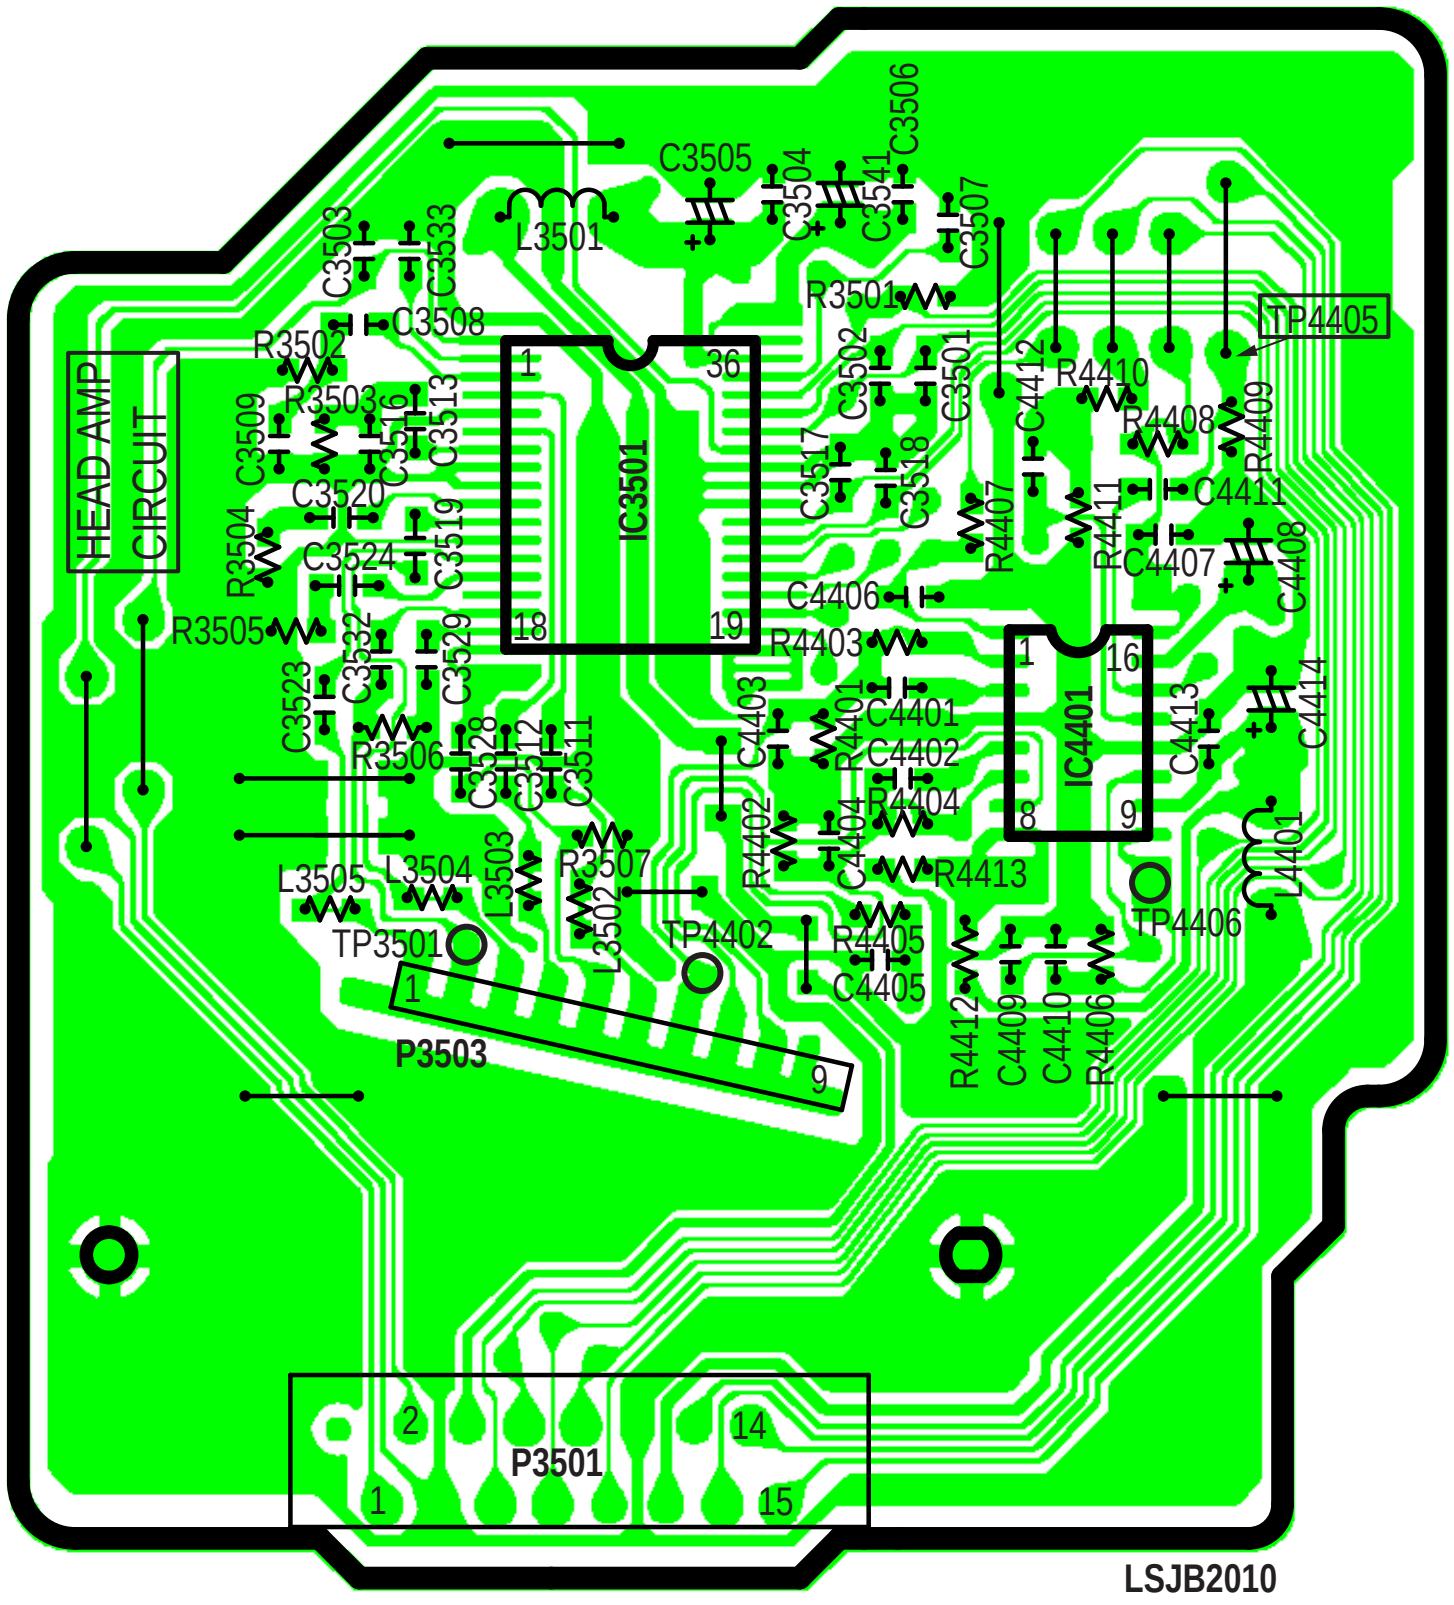

HEAD AMP
CIRCUIT
C3505
C3504
C3541
C3506
C3507
L3501
C3503
C3533
C3508
R3501
R3502
R3503
C3509
C3516
C3513
C3520
R3504
C3524
C3519
R3505
1
36
IC3501
18
19
C3502
C3501
C3517
C3518
R4407
C4412
R4410
R4408
R4409
TP4405
R4411
C4411
C4407
C4408
C4406
R4403
1
16
IC4401
8
9
C4413
C4414
C3523
C3532
C3529
R3506
C3528
C3512
C3511
C4403
R4401
C4401
C4402
R4404
R4402
C4404
R4413
L3505
L3504
L3503
R3507
L3502
TP3501
TP4402
R4405
C4405
TP4406
L4401
R4412
C4409
C4410
R4406
1
P3503
9
2
14
P3501
1
15
LSJB2010

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE:
CIRCUIT BOARD LAYOUT INCLUDES COMPONENTS WHICH ARE NOT USED.
PLEASE REFER TO THE SCHEMATIC DIAGRAM AND PARTS LIST FOR PROPER PARTS CONTENT.

VERTICAL C.B.A. LRP63019D

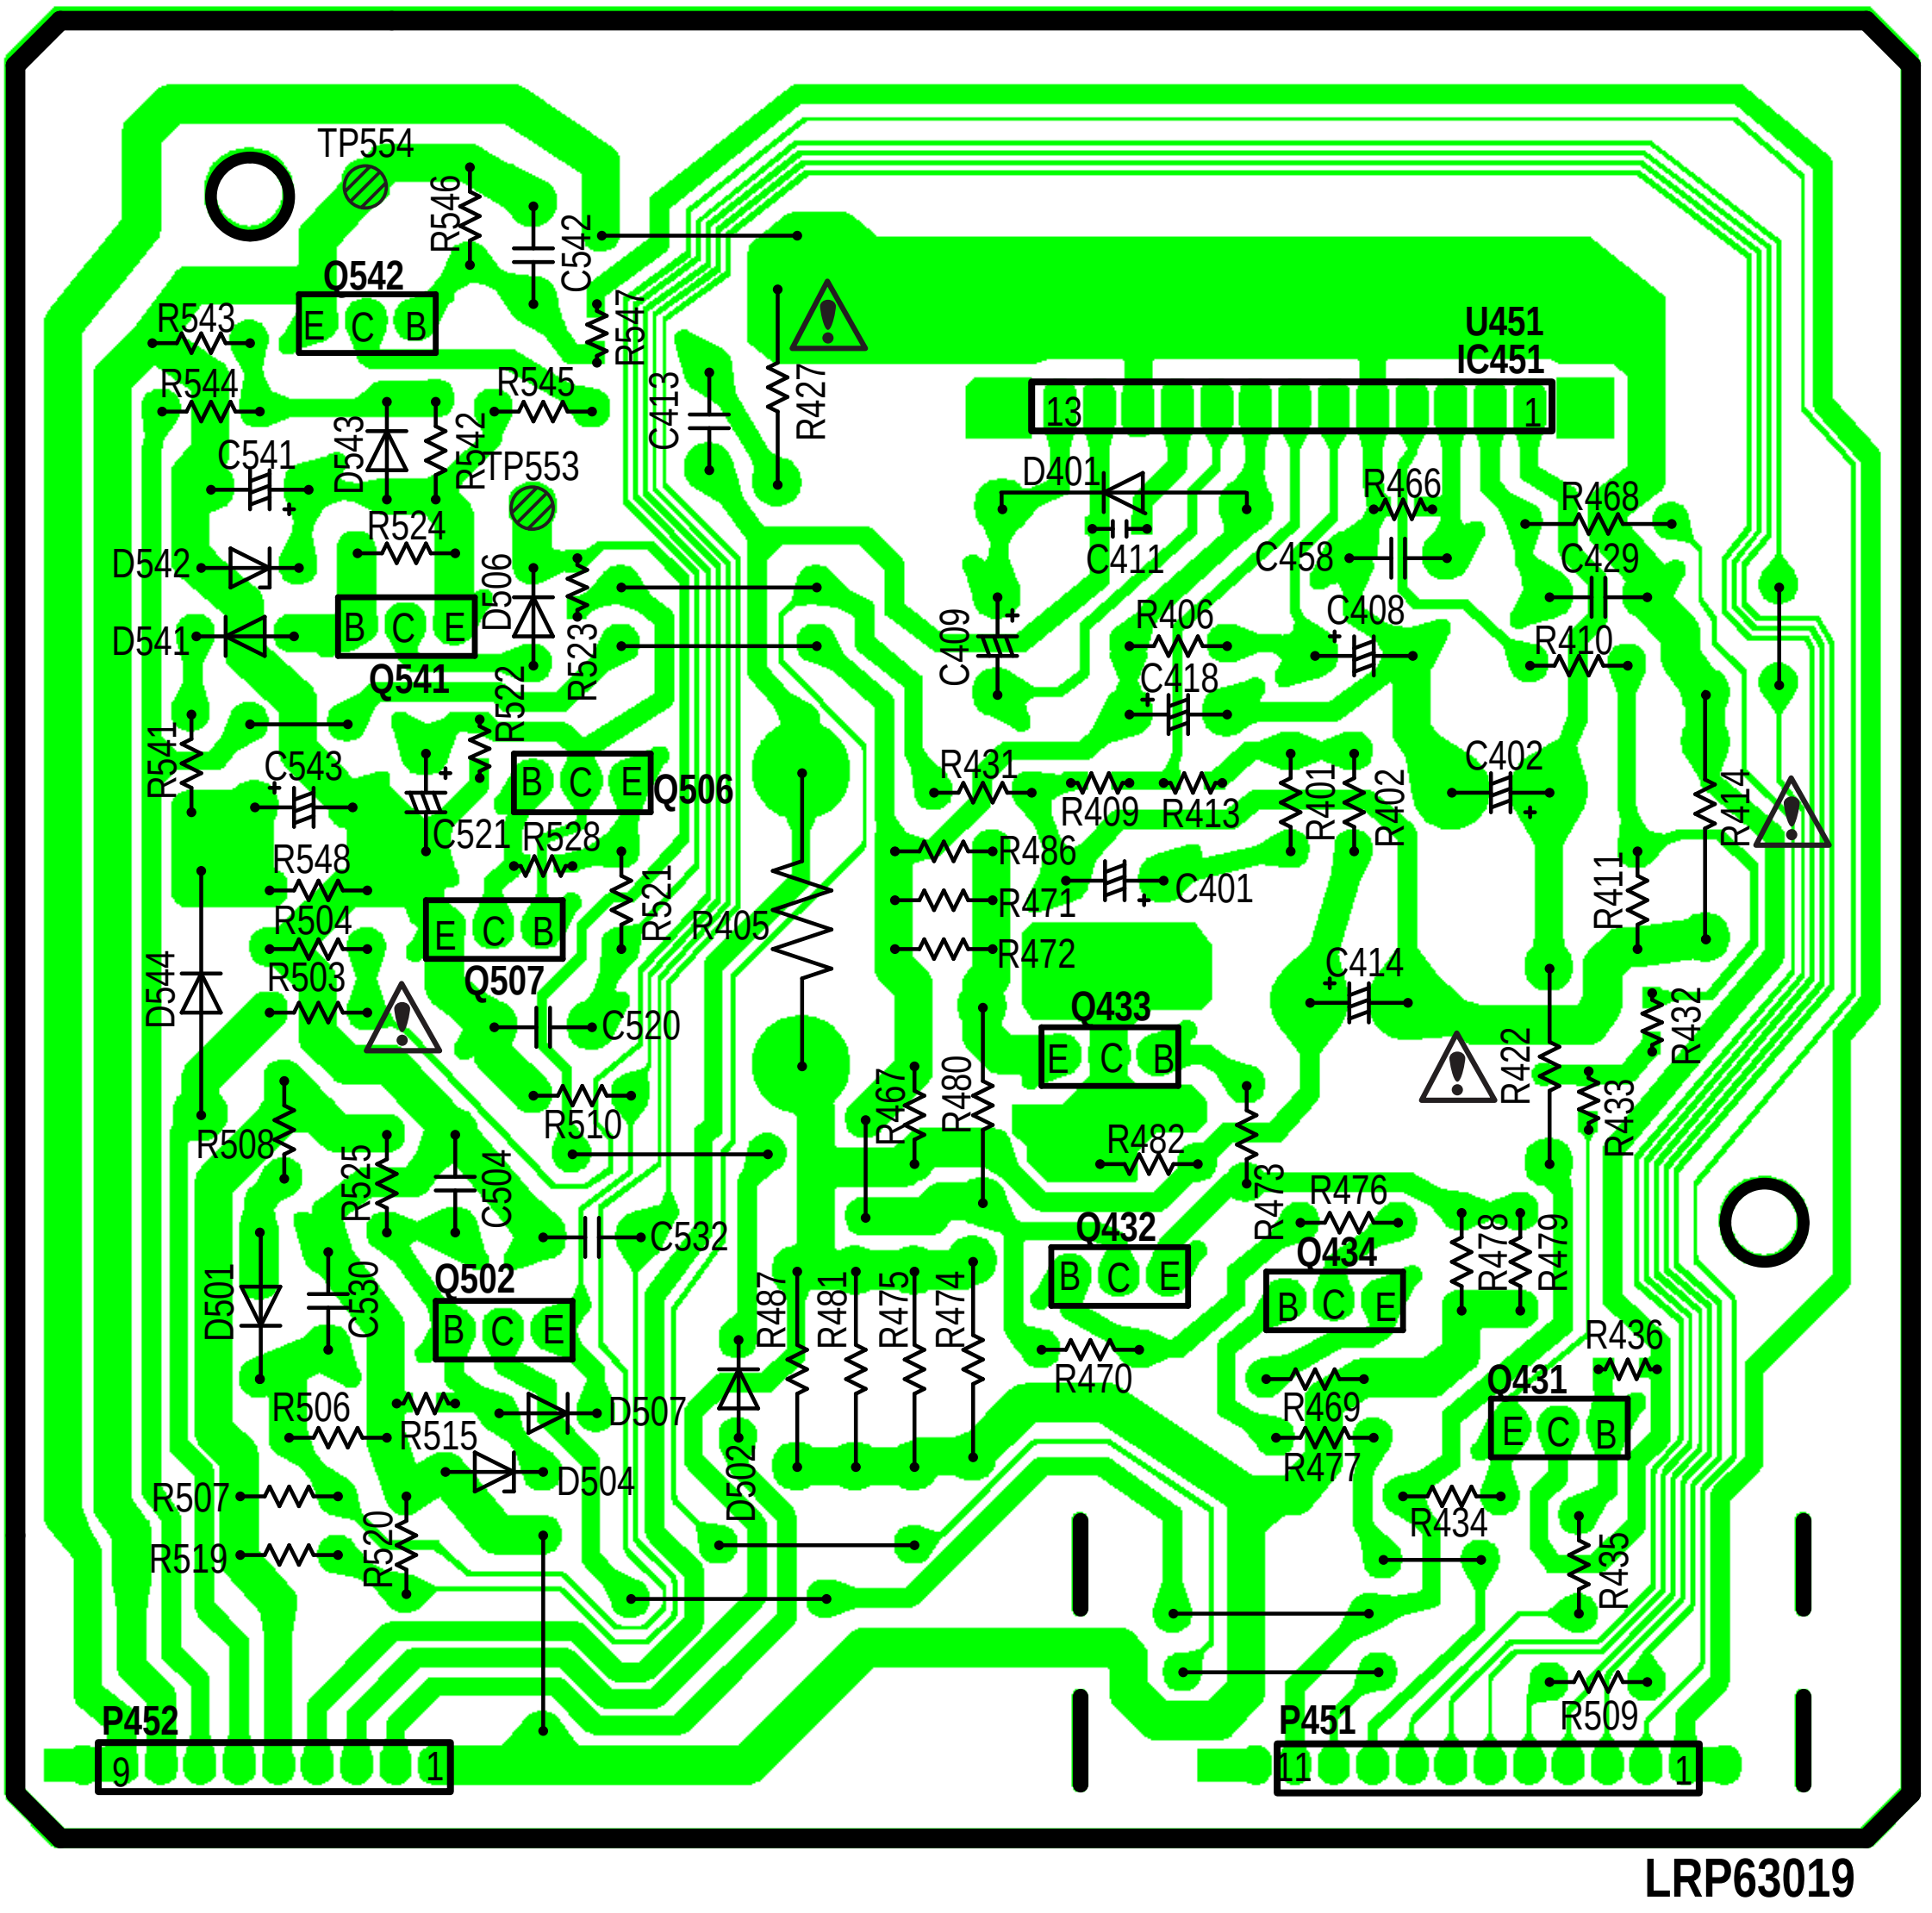
TP554
R546
C542
Q542
E C B
R543
R547
R427
U451
IC451
13
1
R544
R545
C413
D543
R542
C541
TP553
D401
R466
R468
R524
C411
C458
C429
D542
D506
R523
R406
C408
D541
B C E
Q541
C409
C418
R410
R522
R541
C543
C521
B C E
Q506
R431
R409
R413
R401
R402
C402
R414
R528
R548
R486
R521
R504
E C B
R471
C401
R411
Q507
R405
R472
R503
C414
D544
Q433
E C B
C520
R432
R422
R510
R467
R480
R433
R508
R482
R525
C504
R473
R476
C532
Q432
B C E
Q434
R478
R479
D501
C530
Q502
B C E
R487
R481
R475
R474
R436
R470
R506
D507
R469
Q431
E C B
R515
R477
D504
D502
R507
R434
R435
R519
R520
R509
P452
9
1
P451
11
1
LRP63019

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE:
CIRCUIT BOARD LAYOUT INCLUDES COMPONENTS WHICH ARE NOT USED.
PLEASE REFER TO THE SCHEMATIC DIAGRAM AND PARTS LIST FOR PROPER PARTS CONTENT.

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN ⚠ HAVE
SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY.
WHEN REPLACING ANY OF THESE COMPONENTS,
USE ONLY THE SPECIFIED PARTS.

CRT C.B.A. LRP63013C

CAUTION: WHEN SERVICING THIS C.B.A., AVOID TOUCHING HIGH VOLTAGE COMPONENTS.

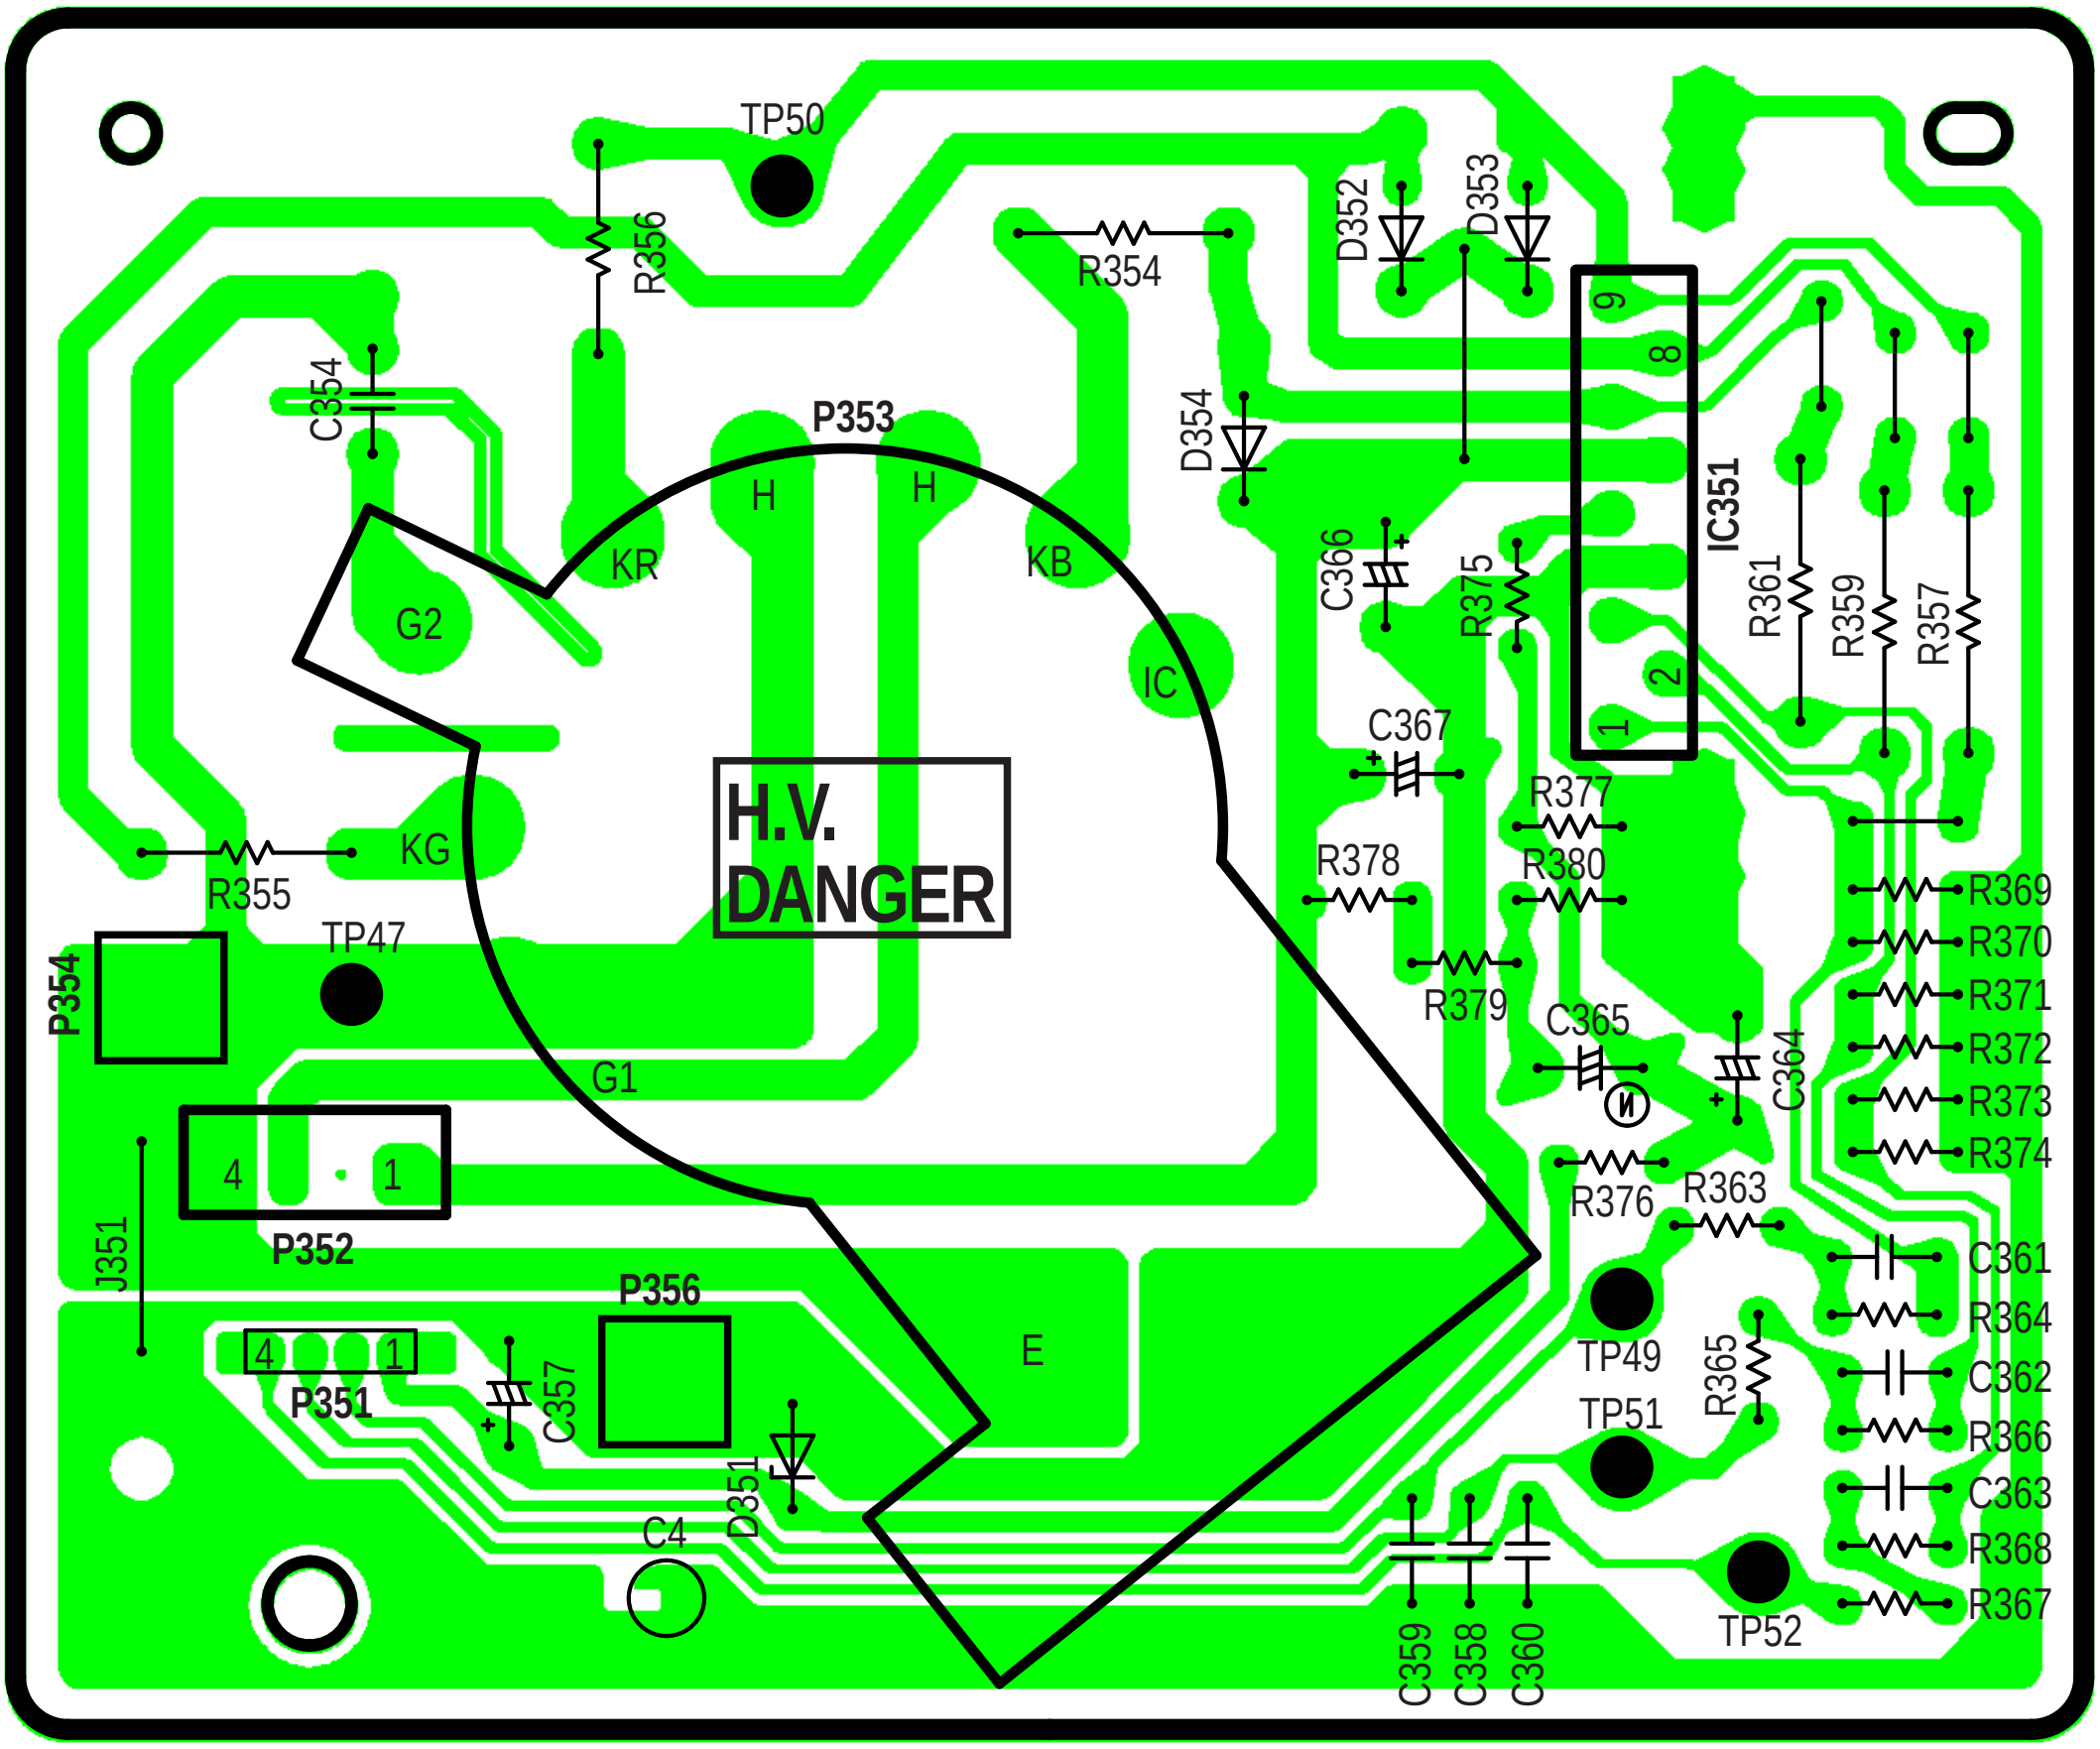
TP50
R356
R354
D352
D353
C354
P353
H
H
KR
KB
G2
D354
C366
R375
IC351
9
8
2
1
R361
R359
R357
IC
C367
R377
R378
R380
R355
KG
H.V.
DANGER
R369
R370
P354
TP47
R379
C365
C364
R371
R372
G1
R373
R374
4
1
R376
R363
J351
P352
C361
P356
R364
E
TP49
R365
C362
4
1
P351
C357
TP51
R366
D351
C363
C4
R368
C359
C358
C360
TP52
R367

LRP63013

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE:
CIRCUIT BOARD LAYOUT INCLUDES COMPONENTS WHICH ARE NOT USED.
PLEASE REFER TO THE SCHEMATIC DIAGRAM AND PARTS LIST FOR PROPER PARTS CONTENT.